


# ONKYO SERVICE MANUAL

## QUARTZ SYNTHESIZED TUNER AMPLIFIER MODEL TX-27

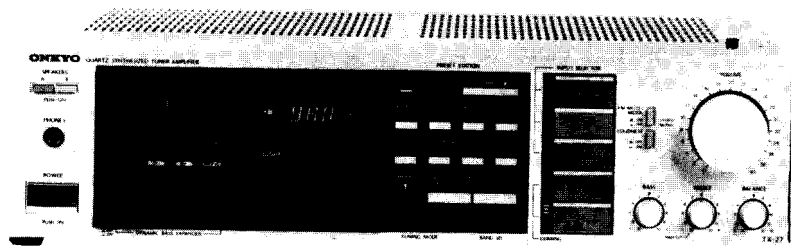

### Silver and black models

UD, UDN, BUD, BUDN	120V AC, 60Hz
UG, BUG	220V AC, 50Hz
UW, BUW	120 or 220V AC, 50/60Hz
UQA, UQB	240V AC, 50Hz

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

### TABLE OF CONTENTS

Specifications . . . . .	2
Service procedures . . . . .	3
Block diagram	
Amplifier section . . . . .	4
Power supply section . . . . .	5
Dynamic bass circuit . . . . .	5
Tuner section -120V- . . . . .	6
Tuner section -220V- . . . . .	7
Exploded view . . . . .	8
Parts list . . . . .	9
Circuit description . . . . .	10
Adjustment procedures . . . . .	15
Pcb view/list	
Tuner section . . . . .	17
Digital section . . . . .	21
Amplifier section . . . . .	25
Control section . . . . .	29
Schematic diagram	
Tuner section 120V model . . . . .	19
Tuner section G/W models . . . . .	23
Amp. section D/W models . . . . .	27
Amp. section 220V model . . . . .	31
Block diagram of IC . . . . .	33
Packing view . . . . .	34

**ONKYO**  
**AUDIO COMPONENTS**

# SPECIFICATIONS

## AMPLIFIER SECTION

Power Output:	40 watts per channel, min RMS, at 8 ohms, both channels driven, from 20Hz to 20kHz, with no more than 0.04% THD.
Musical Power Output:	2 × 85 watts at 4 ohms, 1kHz (DIN) 2 × 55 watts at 8 ohms, 1kHz (DIN)
Continuous Power Output:	2 × 55 watts at 4 ohms, 1kHz (DIN) 2 × 40 atwatts ato at 8 ohms, 1kHz (DIN)
Total Harmonic Distortion:	0.08% at rated power 0.08% at 1 watt output
IM Distortion:	0.08% at rated power 0.08% at 1 watt output
Damping Factor:	35 at 8 ohms
Frequency Response:	20 – 30,000 Hz ± 1 dB
RIAA Deviation:	20 – 20,000 Hz ± 0.8dB
Sensitivity and Impedance:	Phono: 2.5mV/50 kohms CD/Tape Play: 150mV/50 kohms Tape Rec: 150mV/3.5 kohms (phono)
Phono Overload:	180mV RMS at 1 kHz, 0.04% THD
Signal-to-Noise Ratio:	Phono: 85dB (at 10mV input, A weighted) 76dB (IHF A-202) CD/Tape: 95dB (A weighted) 80dB (IHF A-202)
Tone Controls:	Bass: ± 10dB at 100Hz Treble: ± 10dB at 10kHz
Loudness (–30dB):	+7 dB at 70 Hz, +5 dB at 10kHz
Subsonic:	–6 dB at 15 Hz

## TUNER SECTION

### FM:

	–G/W MODELS–	–D MODEL–
Tuning Range:	87.5 – 108.0 MHz (50kHz steps)	87.5 – 108.0 MHz (100kHz steps)
Usable Sensitivity:	Mono: 12.8dBf, 1.2μV, 75 ohms 1.0μV (S/N 26dB, 40kHz Devi.) 75 ohms DIN Stereo: 18.0dBf, 2.2μV, 75 ohms 23μV (S/N 46dB, 40kHz Devi.) 75 ohms DIN	Mono: 11.2dBf, 2.0μV Stereo: 17.2dBf, 4.0μV
50dB Quieting Sensitivity:	Mono: 18.0dBf, 2.2μV 75 ohms Stereo: 37.2dBf, 20μV, 75 ohms	Mono: 17.2dBf, 4.0μV Stereo: 37.2dBf, 40μV
Capture Ratio:	1.5dB	1.5dB
Image Rejection Ratio:	85dB	40dB
IF Rejection Ratio:	90dB	90dB
Signal-to-Noise ratio:	Mono: 71dB Stereo: 66dB	Mono: 71dB Stereo: 66dB
Selectivity:	50dB DIN (±300kHz, 40kHz dev.)	55dB
AM Suppression Ratio:	50dB	50dB
Harmonic Distortion:	Mono: 0.15% Stereo: 0.3%	Mono: 0.15% Stereo: 0.30%
Frequency Response:	30 – 15,000Hz ± 1.5dB	30 – 15,000Hz ± 1.5dB
Stereo Separation:	40dB at 1kHz 30dB at 100 – 10,000Hz	40dB at 1kHz 30dB at 100 – 10,000Hz
Tuning Level(Hi/Lo):	–	–
Muting Level:	17.2dBf, 2μV	17.2dBf, 4.0μV
Stereo Threshold:	17.2dBf, 2μV	17.2dBf, 4.0μV

### AM:

Tuning Range:	522 – 1611kHz (9kHz steps)	520 – 1710kHz (10kHz steps)
Usable Sensitivity:	30μV	30μV
Image Rejection Ratio:	40dB	40dB
IF Rejection Ratio:	40dB	40dB
Signal-to-Noise Ratio:	40dB	40dB
Harmonic Distortion:	0.8%	0.8%

## GENERAL

Semiconductors:	FETs: 7 TR: 37 ICs: 10 Diodes: 54 LEDs: 28	FETs: 7 TR: 33 ICs: 10 Diodes: 49 LEDs: 28
Dimensions (W×H×D):	435 × 112 × 343 mm 17-1/8" × 4-7/16" × 13-1/2"	435 × 112 × 343 mm 17-1/8" × 4-7/16" × 13-1/2"
Weight:	7.8 kg 17.2 lbs.	7.8 kg., 17.2 lbs.

Specifications and features are subject to change without notice.

# SERVICE PROCEDURES

## 1. Replacing the fuses

For continued protection against fire hazard, replace only with same type and same rating fuse.

D(120V)model

Circuit no.	Parts no.	Description
F501, F601	252059	4A (SS-2), Speaker
F901	252049	4A (ST-6), Primary

G (220V) and Q (240V) models

Circuit no.	Parts no.	Description
F501, F601	252076	3.15A-SE-EAK, Primary
F902	252074	2A-SE-EAK, Primary
F903, F904	252078	5A-SE-EAK, Secondary
F905	252070	1A-SE-EAK, Secondary

W(120 or 220V) model

Circuit no.	Parts no.	Description
F501, F601	252059	4A (SS-2), Speaker
F901	252049	4A (ST-6), Primary
F902	252074	2A-SE-EAK, Primary

## 2. Replacing the lamp

This unit uses the lamp listed below.

Circuit no.	Parts no.	Description
PL901	210064A	PL 6.3V, 250mA, Dial plate illumination

## 3. Safety—check out

(Only U.S.A. model)



After correcting the original service problem, perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and nickel screw on the back panel.

Specifications: 3.3Mohm±10% at 500V.

## 4. Removement of display pc board

- ①. Remove the five screws holding the top cover and chassis (side bracket:4 back panel: 1), and remove the top cover.
- ②. Remove the five screws holding the front panel and front bracket, and remove the front panel.
- ③. Remove the two screws holding the switch pc board and front bracket, and remove the switch pc board of U4.
- ④. Remove the four screws holding the holder and front bracket.
- ⑤. Remove the display pc board ass'y from the four nails of holder, and remove the holder.
- ⑥. Remove the two knobs (A805).
- ⑦. Remove the two screws holding the NAAF-2306 pc Board ass'y and center bracket, and remove the NAAF-2306.
- ⑧. Remove the two screws holding the switch of dynamic bass expander and front bracket, and remove the display pc board.

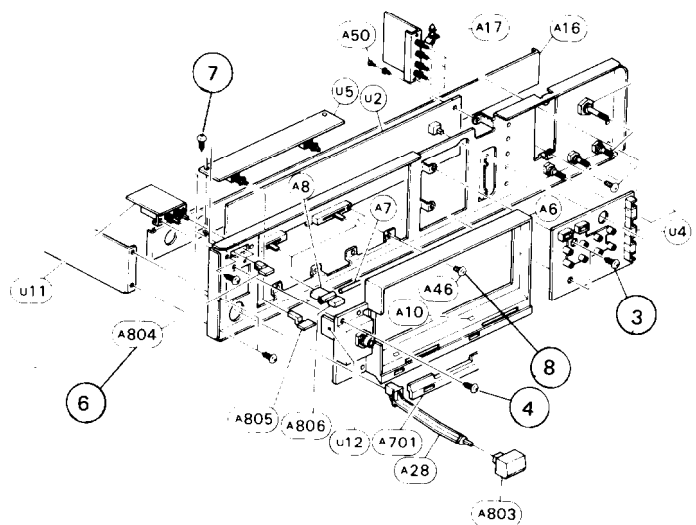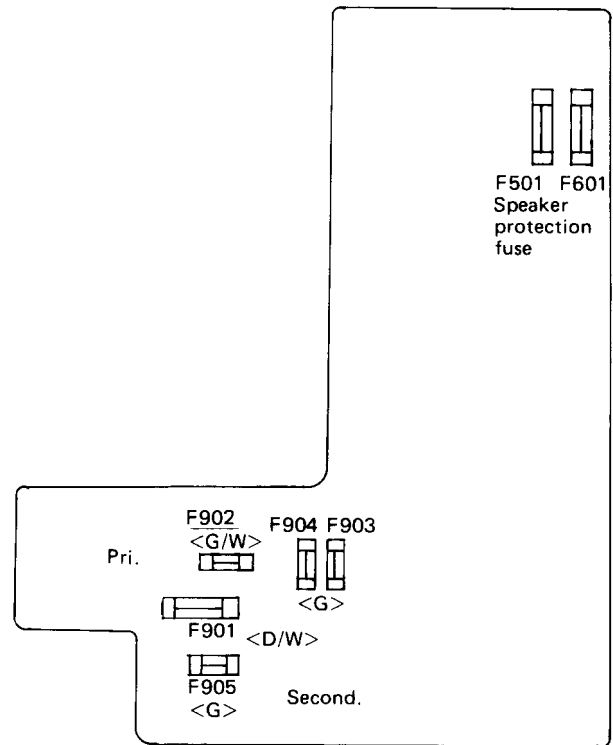

## 6. Change of De-emphasis/Band

W models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 50kHz (FM) and 9kHz (AM) at the factory, but may have to be reset to 100kHz and 10kHz depending on the area where the unit is used.

	De-emphasis	FM step	AM step
Europe:	50 $\mu$ sec	50kHz	9kHz
U.S.A.:	75 $\mu$ sec	100kHz	10kHz

## 7. Change of voltage

W models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.


This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.

## 8. Memory Preservation


This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory, the power switch must be turned on and off a few times each month to keep the back-up system operable. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and the location and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

# BLOCK DIAGRAM


## —AMPLIFIER SECTION—

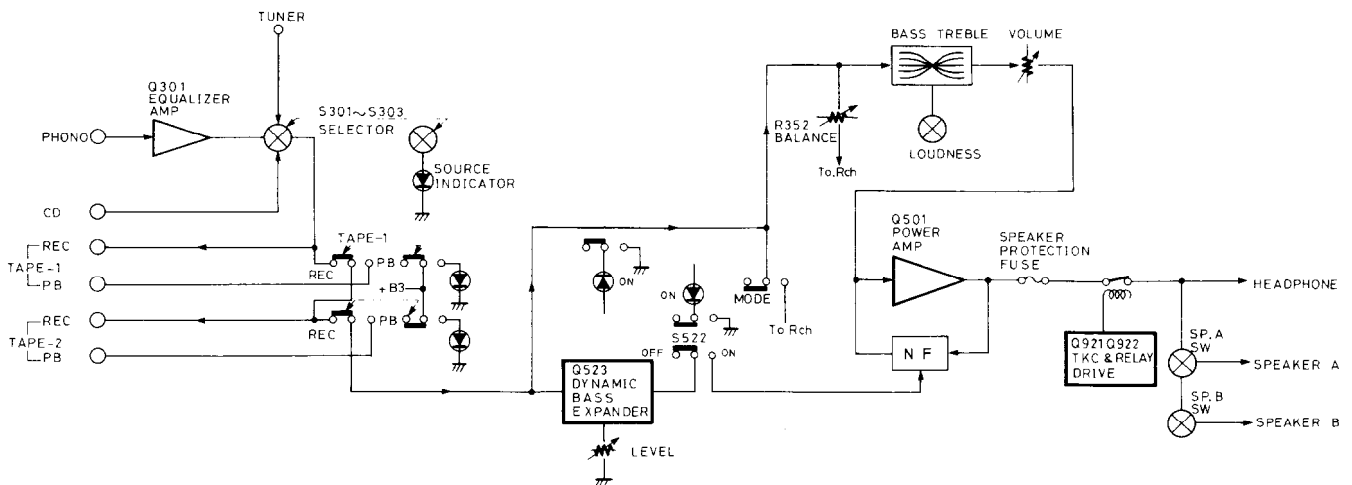


—POWER SUPPLY SECTION—  
—120V MODEL—

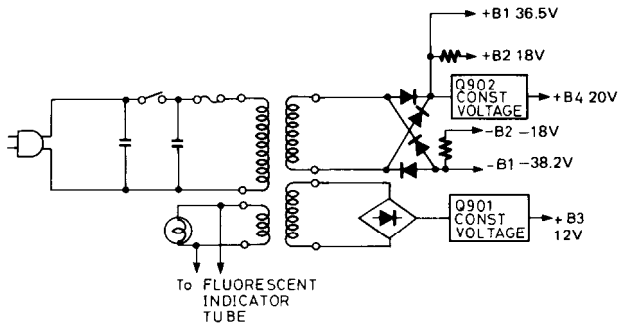

—220V MODEL—

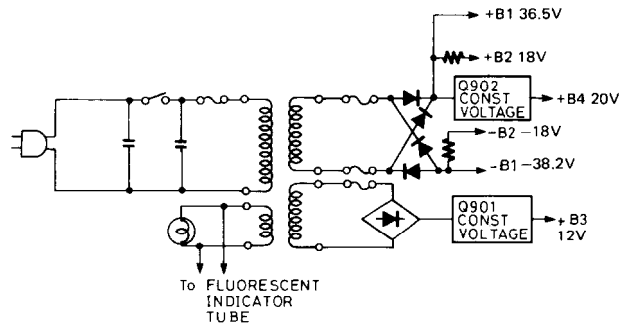

—DYNAMIC BASS EXPANDER—

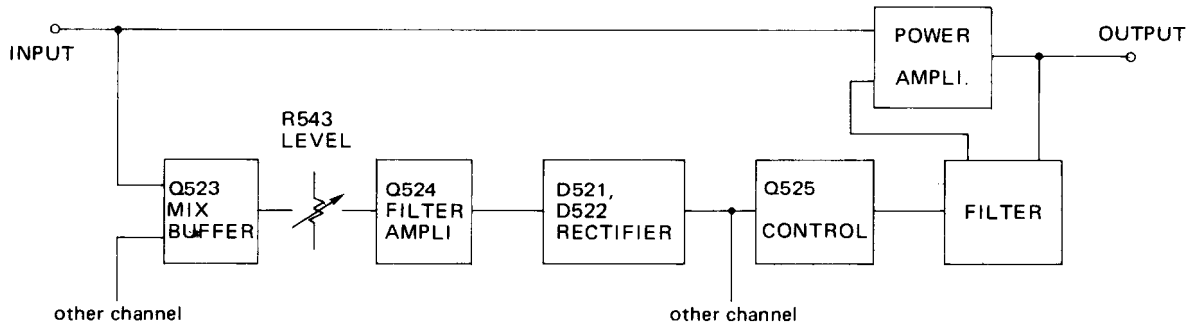


In earlier super base systems, only the frequencies about 70Hz were boosted by about 4dB to expand the playback frequency response to enable playback of the super low region. However, when there was no input signal, the above frequency response resulted in deterioration in the S/N ration in the 70Hz region. This problem has been overcome by the dynamic bass expander where the 70Hz boosted level is varied according to the input signal level. That is, the frequency response remains flat when no input signal is applied, but is boosted at the 70Hz region to the specified level when the input signal exceeds a certain level. The left and right channel input signals from the INPUT terminals are mixed by Q523 and pass through the level volume and filter amplifier. The signal is rectified by D521 and D522, and the resultant DC component control signal is applied to the gate of Q525. When the input signal is at an adequate level, Q525 is turned on and the super base circuit of power amplifier is controlled by the input signal.

# BLOCK DIAGRAM

-TUNER SECTION-

-120V MODEL-

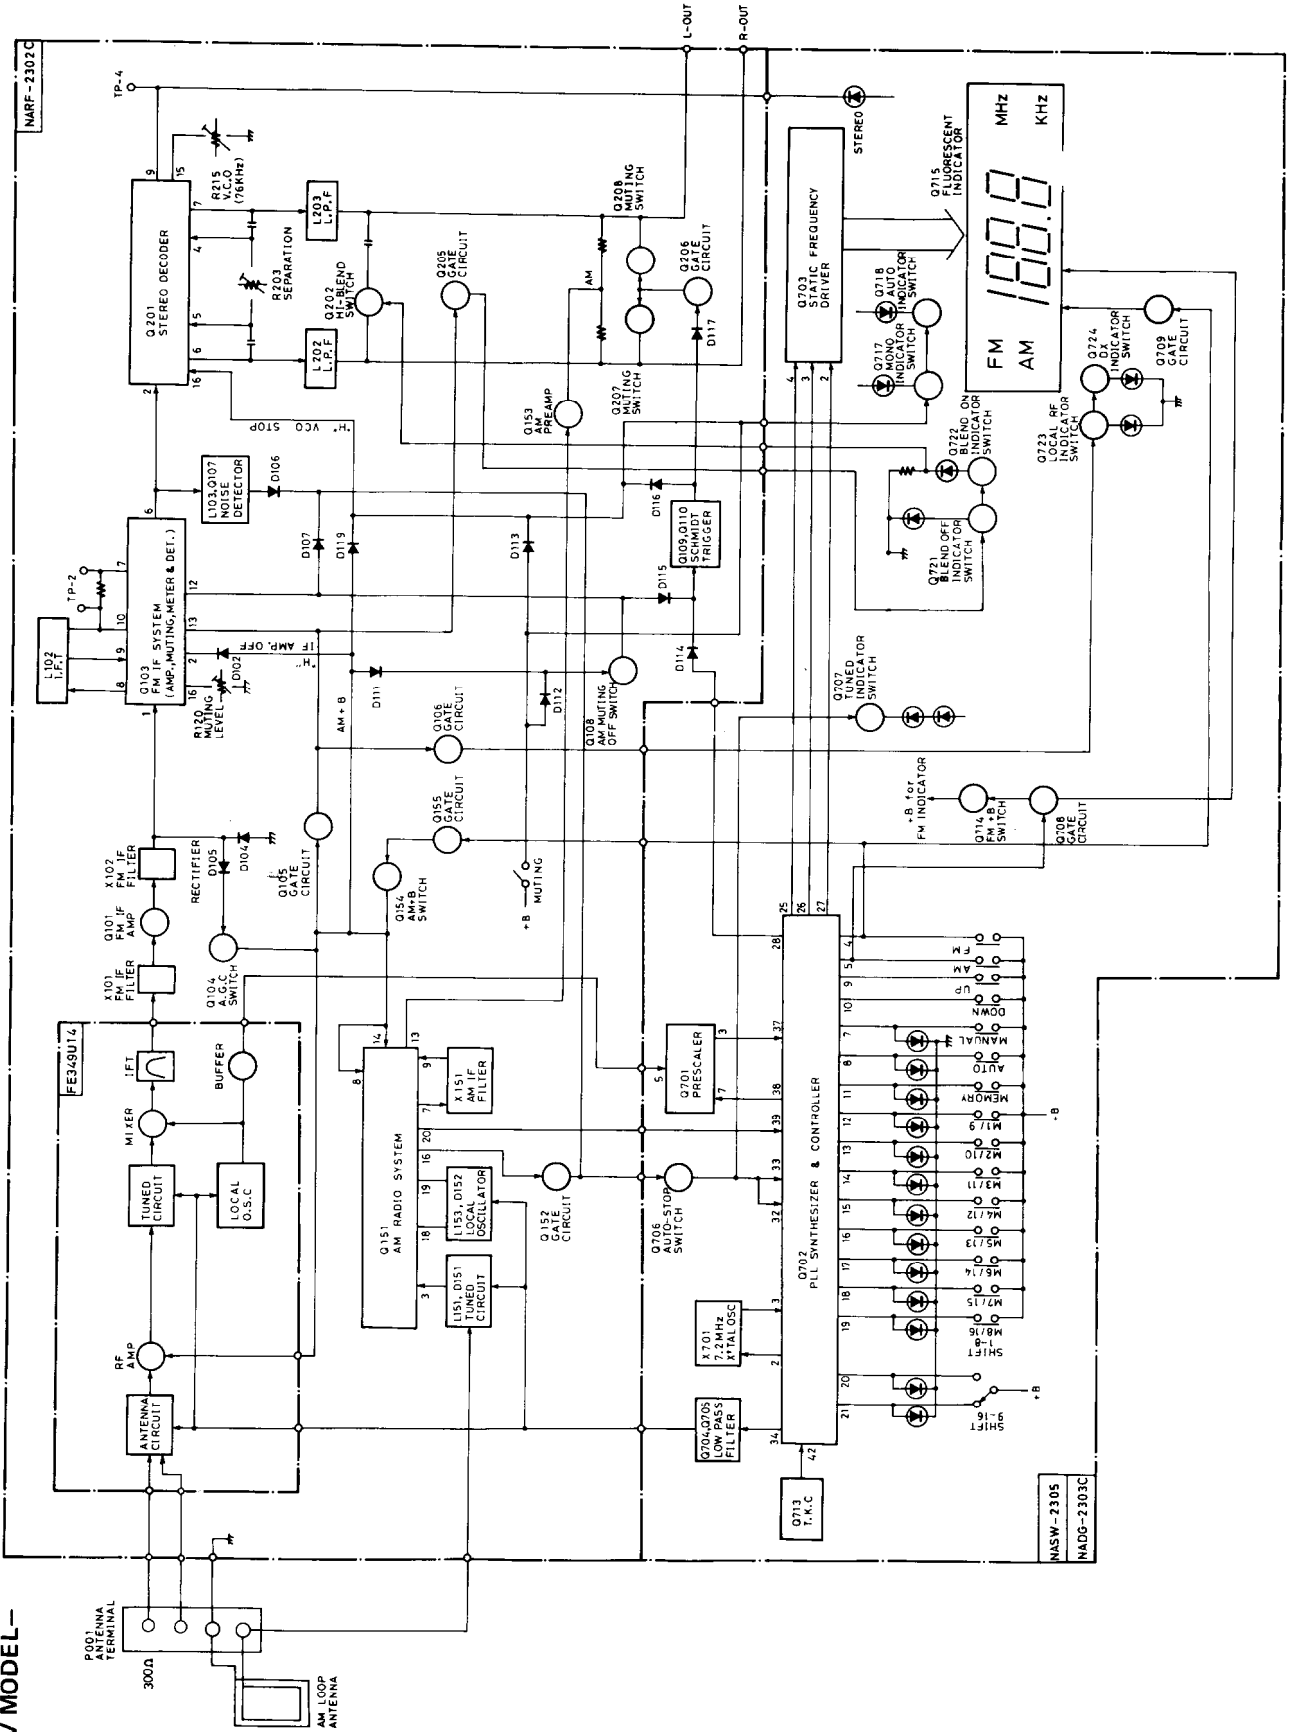


NASW-2305  
NADG-2303C


# BLOCK DIAGRAM

-TUNER SECTION-

-220V MODEL-

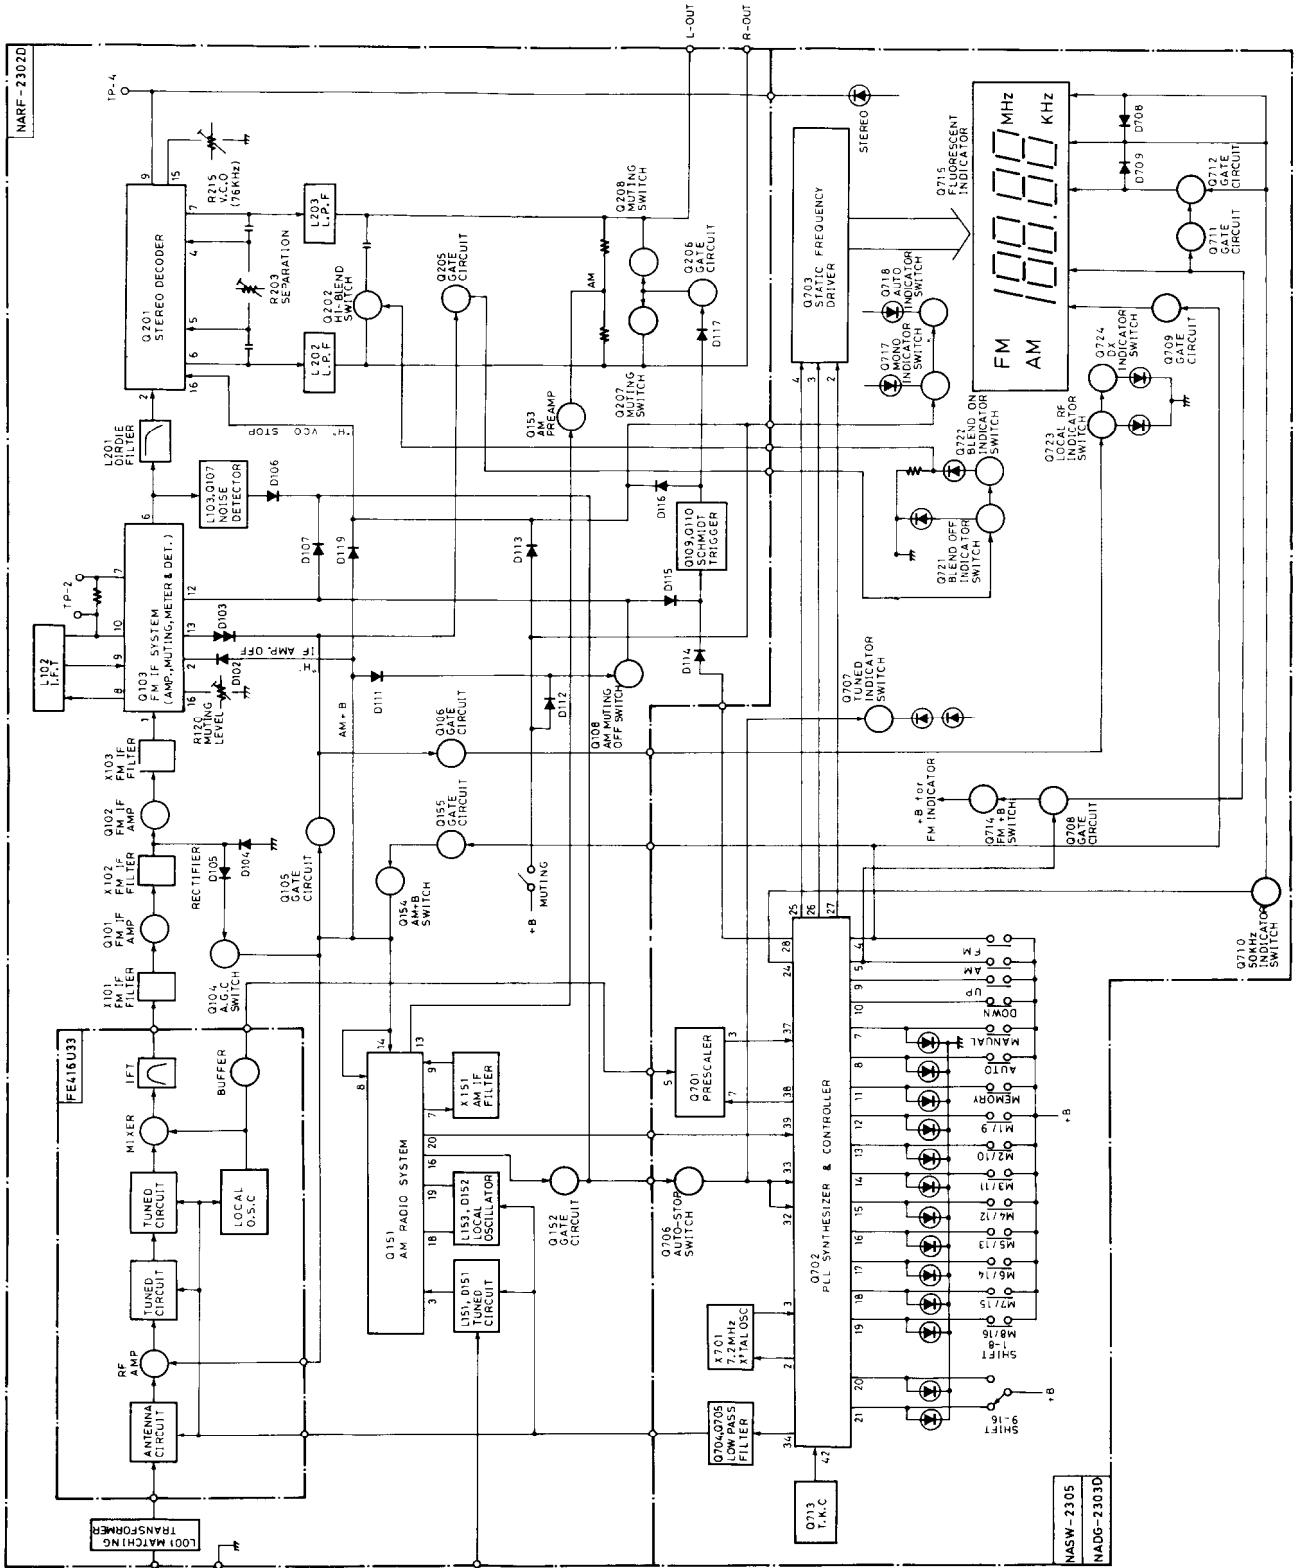

**EXPLODED VIEW**

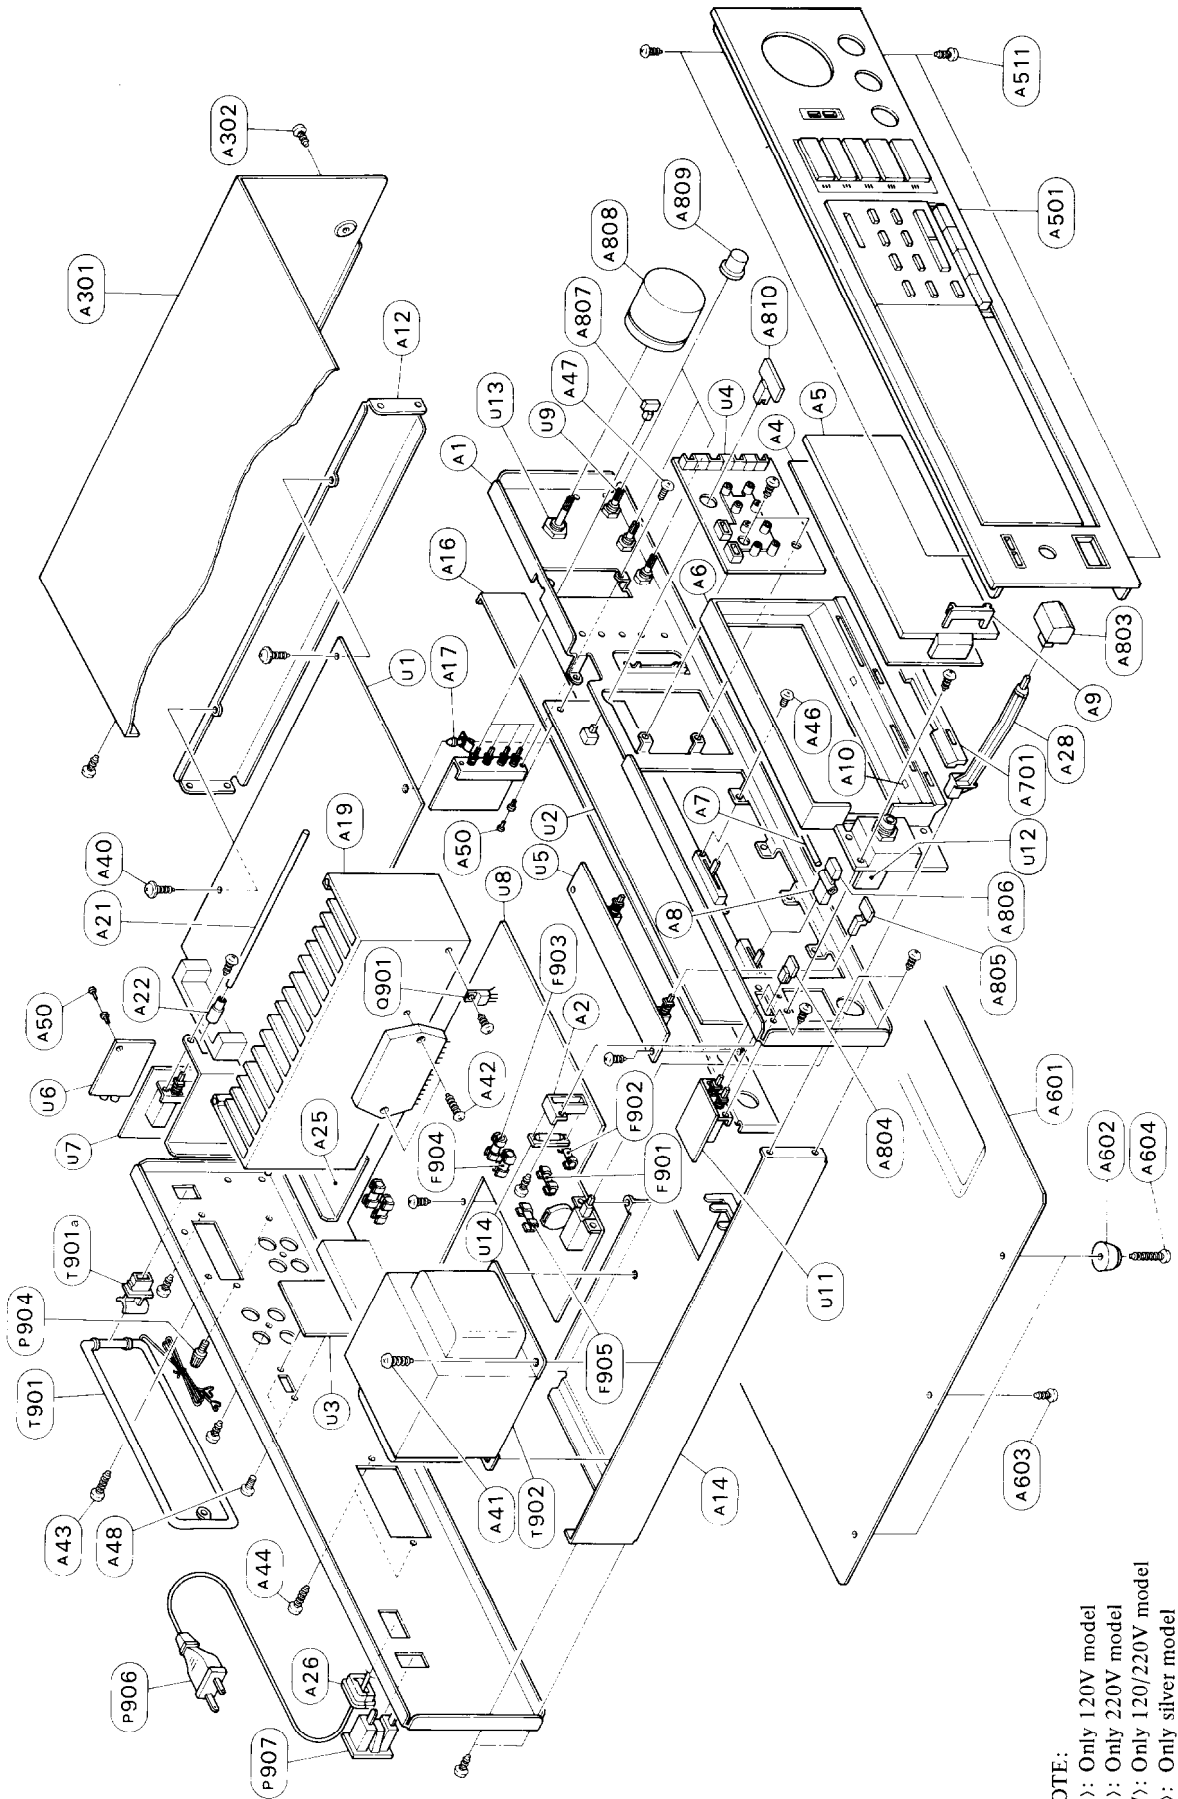

NOTE:  
 (D): Only 120V model  
 (G): Only 220V model  
 (W): Only 120/220V model  
 (S): Only silver model  
 (B): Only black model



# PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27110243	Front bracket	A501e	28322012A	Selector knob ass'y	U1	18448502C	NARF-2302C, Tuner circuit pc board ass'y (D)
A2	27190198A	Holder, lamp	A501f	28322018A	Knob ass'y		18454502D	NARF-2302D, Tuner circuit pc board ass'y (G)
A4	28133132A	Back plate	A511	8384430068	3TTB+6B(BC), Tapping screw		18450502E	NARF-2302E, Tuner circuit pc board ass'y (W)
A5	28130225B	Dial plate	A601	27170198A	Bottom board	U2	18448503C	NADG-2303C, Digital circuit pc board ass'y (D)
A6	27190358A	Holder	A602	27175009A	Leg		18454503D	NADG-2303D, Digital circuit pc board ass'y (G)
A7	27260171B	Shaft	A603	8344430068	3TTS+6B(BC), Tapping screw		18450503E	NADG-2303E, Digital circuit pc board ass'y (W)
A8	27220032A	Slider	A604	8344430128	3TTS+12B(BC), Tapping screw		18450504B	NASW-2304B, De-emphasis switch pc board ass'y (W)
A9	27190359A	Holder, dial	A701	27267402A	Guide, decoration	U3	18408505	NASW-2305, Operation switch pc board ass'y
A10	28198632	Facet	A803	28321928	Knob, power (S)		18448506A	NAAF-2306A, Dynamic bass circuit pc board ass'y
A12	27115180	Side bracket R	A804	28321905B	Knob, power (B)		18408507	NAEQ-2307, Equalizer amplifier pc board ass'y (D/W)
A14	27130388	Bracket, power transformer	A805	28321886	Knob, speaker (S)	U4	18408508	NASW-2308, Source selector switch pc board ass'y (D/W)
A16	27130390	Bracket, center	A806	28321894	Knob, speaker (B)		18414508A	NASW-2308A, Source selector switch pc board ass'y (G)
A17	27190011	Holder	A807	28322005A	Knob, expander		18448509C	NAAF-2309C, Power amplifier and power supply pc board ass'y (D)
A19	27160174	Radiator	A808	28322006	Knob, slide		18454509D	NAAF-2309D, Power amplifier and power supply pc board ass'y (G)
A21	27260172	Shaft	A809	28322007A	Knob, loudness (S)		18450509E	NAAF-2309E, Power amplifier and power supply pc board ass'y (W)
A22	28320135	Connector	A810	28322020A	Knob, loudness (B)	U9	18408510	NATC-2310, Tone control circuit pc board ass'y
A24	27120680B	Back panel (D)		28321887A	Knob, volume (S)	U10	18448511A	NASW-2311A, Switch pc board ass'y
	27120682A	Back panel (G)		28321895	Knob, volume (B)	U11	18408512	NASW-2312, Speaker switch pc board ass'y
A25	27120683A	Back panel (W)		28322008	Knob, balance (S)	U12	18408513	NAHP-2313, Headphone terminal pc board ass'y
A26	27130389B	Bracket B		28322021A	Knob, balance (B)	U13	18408514	NAVR-2314, Volume control pc board ass'y
A28	△ 27300750	Strainrelief		28322022A	Knob, shift (S)	U14	18414516	NAPL-2316, Edge light pc board ass'y
A30	27273030C	Joint L	F501	252059	4A(SS-2), Speaker protection fuse (D/W)			
A38	834430068	3TTS+6B(BC), Tapping screw	F601	252076	3.15A-SE-EAK, Speaker protection fuse (G)			
A40	831130088	3TTW+8B, Tapping screw	F901	△ 252049	4A(ST-6), Primary fuse (D/W)	U8	18448509C	NAAF-2309C, Power amplifier and power supply pc board ass'y (D)
A41	838440089	4TTB+8C(BC), Tapping screw	F902	△ 252074	2A-SE-EAK, Primary fuse (G/W)		18454509D	NAAF-2309D, Power amplifier and power supply pc board ass'y (G)
A42	834430168	3TTS+16B(BC), Tapping screw	F903	△ 252078	5A-SE-EAK, Secondary fuse (G)		18450509E	NAAF-2309E, Power amplifier and power supply pc board ass'y (W)
A43	834230108	3TTS+10B(Ni), Nickel screw (D)	F904	△ 252070	1A-SE-EAK, Secondary fuse (G)		18408510	NATC-2310, Tone control circuit pc board ass'y
A44	834430108	3TTS+10B(BC), Tapping screw	F905	25060044	Terminal GND	U9	18408510	NATC-2310, Tone control circuit pc board ass'y
A46	82142003	2P+3F(BC), Pan head screw	P904	△ 253112	AS-UC-4#18, Power supply cord (D)		18448511A	NASW-2311A, Switch pc board ass'y
A47	82143006	3P+6FN(BC), Pan head screw	P906	△ 253128	AS-CEE, Power supply cord (G/W)	U10	18448511A	NASW-2311A, Switch pc board ass'y
A48	82142604	2.6P+4F(BC), Pan head screw (W)	P907	△ 25050046	NSCT-2P15, AC outlet (D)	U11	18408512	NASW-2312, Speaker switch pc board ass'y
A50	880004	Rivert	Q501	222041	STK-4843, Power amplifier IC		18408512	NASW-2312, Speaker switch pc board ass'y
A301	28184271	Top cover (S)	Q901	222780122	78M12, Constant voltage IC	U12	18408513	NAHP-2313, Headphone terminal pc board ass'y
A302	28184272	Top cover (B)	T901	232085	NMA-3034, AM loop antenna		18408513	NAHP-2313, Headphone terminal pc board ass'y
A303	834430068	3TTS+6B(BC), Tapping screw	T901a	27190105	Holder, antenna	U13	18408514	NAVR-2314, Volume control pc board ass'y
A501	18448121	Front panel ass'y (S)	S902	△ 25065123	NPS-1258P, Voltage selector switch (W)		18414516	NAPL-2316, Edge light pc board ass'y
A501a	27267387	Guide, speaker	T902	△ 230869A	NPT-875D, Power transformer (D)			
A501b	27267387	Guide, power		△ 230870A	NPT-875G, Power transformer (G)			
A501c	27267398	Guide, loudness		230871A	NPT-875DG, Power transformer (W)			
A501d	28191293B	Clear plate						
A501e	28321992A	Selector knob ass'y						
A501f	28321998A	Knob ass'y						
A501	18468121	Front panel ass'y (B)						
A501a	27267390	Guide, speaker						
A501b	27267389B	Guide, loudness						
A501c	27267399	Guide, loudness						
A501d	28191295C	Clear plate						

NOTE: THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.

# CIRCUIT DESCRIPTIONS

## 1. Synthesizer and controller operation

Pin No.	Symbol	Terminal	Description
1	GND	Ground	
2	XT	X'tal	Connected to the 7.2MHz crystal oscillator for the reference frequency.
3	XT		
4	FM	FM band specification input	Mutual reset type, performs switching of each band, FM/MW/LW.
5	MW	MW band specification input	
6	LW	LW band specification input	
7	MANUAL	Manual tuning mode specification input	Mutual reset type, performs auto search and manual operation mode switching during UP/DOWN tuning.
8	AUTO	Auto search tuning mode specification input	
9	UP	UP tuning key input	Connect the push key and perform UP/DOWN tuning.
10	DOWN	DOWN tuning key input	
11	STO	Memory store command input	The preset memory is set to the write mode when the key is pressed.
12-19	M1-M8	Preset memory channel specification input	Controls the write and read out of the internal 16-station preset memory along with the MC1 and MC2 input.
20	MC-1	Memory control input	Set the 16-station preset memory to the 8 FM/8 AM station mode or the FM/MW/LW 3-band 16-station random mode. The 8 FM/8 AM mode is used in this unit.
21	MC-2		
22	OSC2	AM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the AM search mode.
23	OSC1	FM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the FM search mode.
24	0/5	FM 50 kHz output	Output that represents the 50kHz FM band tuning step for European models. Goes to the high level for the 50 kHz setting.
25	CK2	Tuned frequency data output	Outputs the serial data and timing clock to the tuned frequency display driver.
26	CK1		
27	DATA		
28	MUTE	Muting signal output	Goes to the high level during muting output.
29	E2	Regin specification input	See table 1.
30	E1		
31	STOP 3	AM IF signal input	During AM reception, this counts the IF signal and stops auto search.
32	STOP 2	Auto search stop signal input	When the stop 1 input (pin 33) is at the high level and this terminal goes to the high level, auto search is stopped.
33	STOP 1	Scan speed slow input	When the high level is input at this terminal, the auto search speed is cut in half.

Pin No.	Symbol	Terminal	Description
34	DO1	Error output	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided oscillation frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies match. The output is applied to the variable capacitor diode in the front end through low pass filter Q704 and Q705. The output from both terminals is the same, but only DO1 is used.
35	DO2		
36	TEST	Test terminal	Test mode at the high level.
37	FM IN	FM programmable counter input	Connect to the prescaler output (Pin3 of Q701)
38	PSC	Pulse swallow control output	Output to the control the division ratio of the prescaler.
39	AM IN	AM local oscillator signal input	Terminal for input of AM broadcast signal.
40	$\overline{\text{INH}}$	Inhibit input	Operates normally at the high level. Inhibit status at the low level.
41	$\overline{\text{INT}}$	Initialize input	Operates normally at the high level. At the low level, the internal status is initialized.
42	$V_{DD}$	Power supply	Device power terminal; supplies 5V during the normal operation and 2.5V from the super capacitor (C712) for memory preservation.

table 1.


E1 (Pin 30)	E2 (Pin 29)	Regin	Band	Frequency range	Intermediate frequency	Scan step	Reference frequency
0	1	U.S.A	FM	87.5 ~ 108.0 MHz	+10.7 MHz	100 kHz	25 kHz
			AM1	520 ~ 1 710 kHz	+450 kHz	10kHz	10 kHz
1	1		AM2	522 ~ 1 710 kHz	+450 kHz	9kHz	9kHz
1	0	Europe	FM	87.50 ~ 108.00 MHz	+10.7 MHz	50 kHz	25 kHz
			MW	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz
			LM	153 ~ 360 kHz	+450 kHz	1 kHz	1 kHz
0	0	Japan	FM	76.0 ~ 90.0 MHz	-10.7 MHz	100 kHz	25 kHz
			AM	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz

## 2. Auto Hi-blend switch circuit

The Q103 FM IF system incorporates IC's with a built-in IF level detector with a 13 pin output.


If an input above 38dB enters the antenna, Q205 is turned on, and Q721 is turned on, the Q722 and Q202 are turned off and the high blend function is turned off.

### 3. Auto search tuning circuit

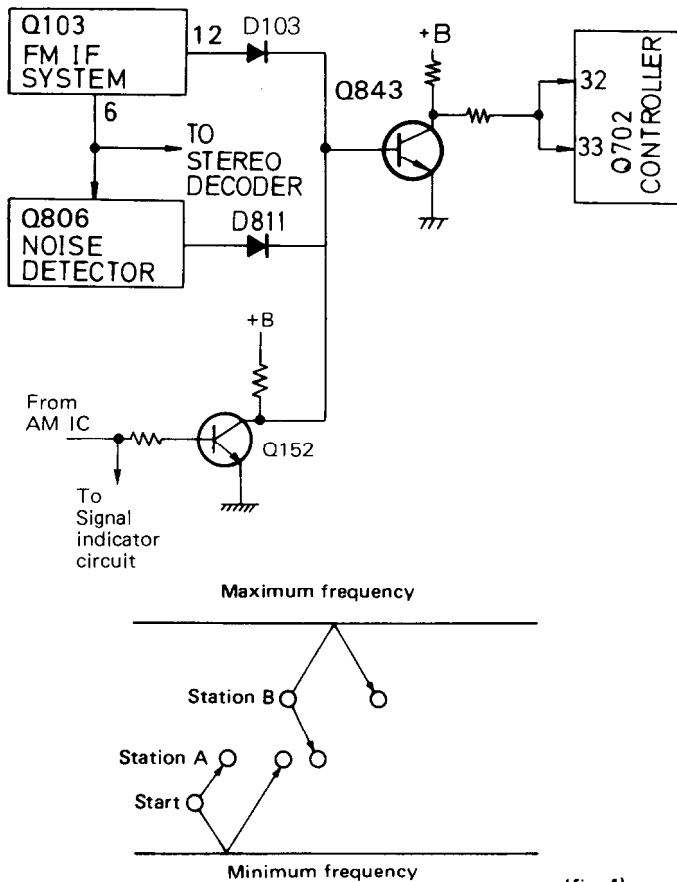

(fig. 4)

### 4. FM/AM switch circuit

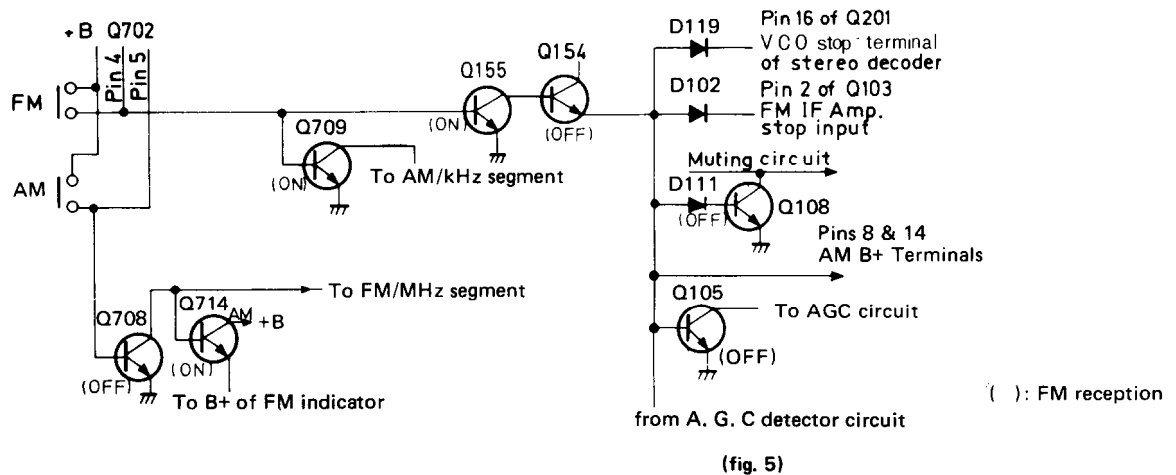

(fig. 5)

The FM/AM selector circuit is shown in the diagram. fig.5. Pins 4 and 5 of Q702 are of the mutual reset type. For FM, pin 4 is high and pin 5 is low; for AM, pin 4 is low and pin 5 is high. Because pin 5 is high and pin 4 is low during AM reception, Q709 is off, the AM, kHz segments of the fluorescent display are turned on. Also, since Q708 goes to on and Q714 is turned off, and the FM indicators are turned off. At the same time, Q155 is turned off and Q154 turned on, so +B is supplied to the power source terminal of the radio

During FM reception, this is operated by the IF level detection and zero point detection circuits included in the FM IF system IC of Q103 and by the noise component detection circuit of Q806. When a station is tuned, the output of all outputs go to the low level so Q843 goes from on to off, causing pins 32 and 33 of the controller IC to go to the high level to complete auto search tuning.

During AM reception, this is operated by the IF level detection included in the AM radio system IC of Q151. When a station is turned, Q152 goes from off to on and Q706 goes to off, causing pins 32 and 33 of the controller IC to go to the high level to complete auto search tuning.

- **Manual Tuning**

When the UP or DOWN key is pressed, the frequency goes up or down by one step. When either key is held down, the frequency rapidly increases or decreases (scans) and stops when the key is released. When either end of the turning range is reached, key input will no longer be received and the frequency will stop at the highest or lowest frequency.


- **Auto Tuning**

When the UP or DOWN key is pressed, scanning begins in the up or down direction, stopping where there is a radio station. Since auto scan is operated by a triangular wave, scanning is begun in the opposite direction the instant either end of the tuning range is reached. Also, if the UP or DOWN key is pressed when the tuned frequency is not at either end of the range, up or down scanning will begin.


system pins 8 & 14 of Q151.

Pin 16 of Q201 goes to the high level, the VCO oscillator stops, and pin 2 of Q103 goes to the high level so the FM IF amp is also switched off. Also, during AM reception, Q108 is turned on so the muting circuit is off. During FM reception, all of the switching transistors mentioned above perform the opposite operations to switch to the FM mode. Figures in parentheses indicate transistor operation during FM reception.

## 5. PLL tuned circuit

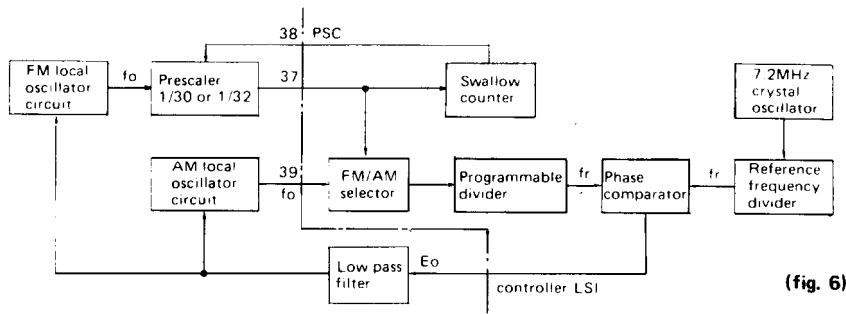

(fig. 6)

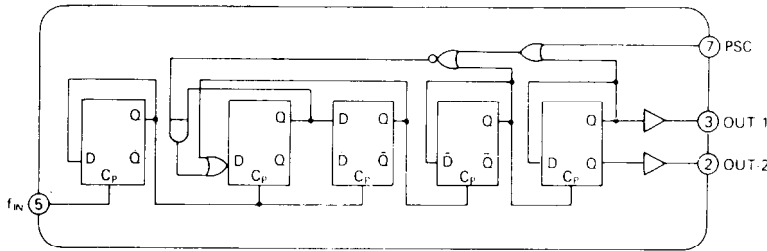

(fig 7) TD6104P (Prescaler)

A block diagram of the tuned circuit of the PLL is shown in figer 6.

### Operation during AM reception

The reception frequency is applied to the programmable divider where it is divided to  $1/N$  and output as  $f_v$ . This is applied to the phase comparator where it is compared with frequency reference  $f_r$  (9kHz for G/W model and 10kHz for D model). If  $f_r$  and  $f_v$  differ,  $E_o$  equal to the difference in frequency is output. Since error output  $E_o$  is a pulse waveform, it is passed through the low pass filter to change it into DC voltage  $V_D$ , which is applied to the variable capacitor diode in the front end to change the reception frequency. This continues until  $f_v$  and  $f_r$  are the same and  $E_o=0$ .

### Operation during FM reception


The pulse swallow method is used in the prescaler of this unit. In this type of prescaler, a supplementary number

(changed according to the program code input) and the divided reception frequency from the prescaler are combined in the control counter and the prescaler's division factor is switched 1/30 or 1/32 according to external control (1/32 when the PSC terminal is "H" and 1/30 when it is "L").


The station oscillator frequency is applied of the programmable divider, but the programmable divider has an upper frequency limit of only 30MHz, so the pulse swallow-type prescaler, which can be used up to 150 MHz, is inserted for division to  $1/N_p$ ;

The signal is applied to the programmable divider and divided to  $1/N$ . The result is compared with a 25kHz frequency reference in the phase detector and the error is output as  $E_o$  until a match is obtained as in AM operation.

## 6. Frequency indicator circuit

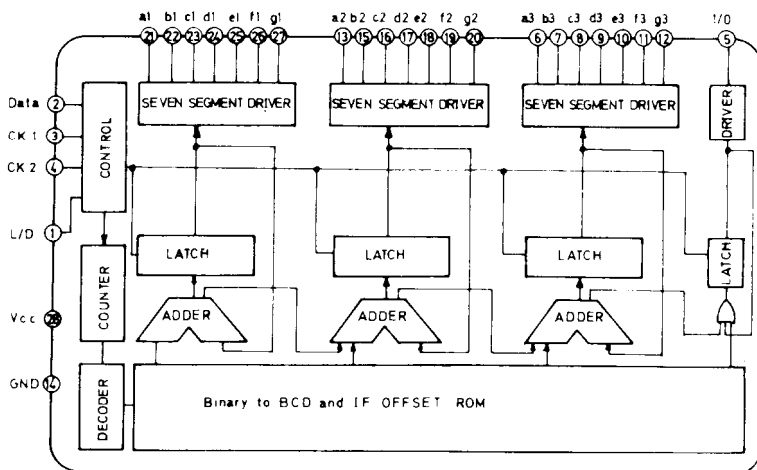


(fig. 8) TD6301AP block diagram

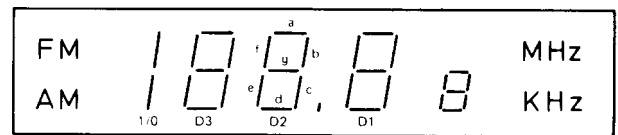

Pin No.	Terminal	Description
1	L/D	Output indication switching input terminal: Fluorescent display at the low level, and LED display at the high level.
2	Data	Tuned frequency data input terminal: Input from the system controller LSI to the serial.
3,4	CK1, CK2	Tuned frequency data input control timing input terminal: Transferred simultaneously with data from the system controller LSI.
5	1/0	Segment drive output terminal: Sets the number of display digit for FM (100MHz) and AM (1.000kHz) reception.
6-12	a3-g3	Seven segment drive output terminals: Sets the number of display digit for FM(10MHz) and AM (100kHz) reception.
13, 15-20	a2-g2	Seven segment drive output terminals: Sets the number of display digit for FM (1MHz) and AM (10kHz) reception
21-27	a1-g1	Seven segment drive output terminals; set the number of display digit for FM (100kHz) and AM (1kHz) reception
14	Vcc	Power source terminal
28	Gnd	Ground

## 7. Muting circuit

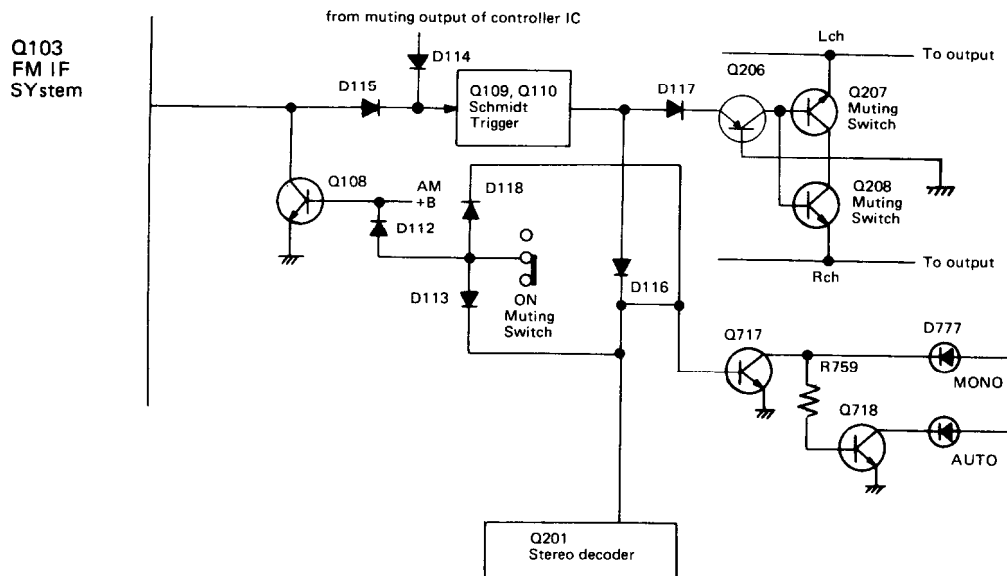

The muting circuit operates in the following cases.

- While pin 28 of the controller IC outputs the high level, Q207 and Q208 are turned on and muting is closed in the following cases: (1) While the manual UP/DOWN switch is being held down, (2) When a station in the memory is recalled, and (3) While a radio station is being received using auto search tuning.
- When an FM station is not being received (and the muting switch is on).

The IF level in the FM IF system (set at R120 so muting is opened at 17 dBf (low position)) and zero point detection circuit (tuning point 55kHz (100kHz step): 30kHz


(50kHz step)— are output at pin 12 through the AND circuit. When a station is tuned, the output goes to the low level.

When output goes to the low level, Q109 is turned off, Q110 is turned on and Q207 and Q208 are turned off, so muting is opened. At the same, pin 16 of stereo decoder Q201 goes to the low level, so the VCO oscillator starts.

# ADJUSTMENT PROCEDURES

## FM section



Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Turning dial setting	Output indicator	Adjustment	Adjust for	Remarks
FM RF	1	Fig. 1	—	—	88.0 MHz	Digital DC voltmeter	OSC	1.4V	Usually not necessary to adjust.
	2	Fig. 1	107.9 MHz 1 kHz, 75 kHz devi.	—	107.9 MHz	AC voltmeter	RF	Maximum output	
FM IF	1	Fig. 2	99.0 MHz 1 kHz, 75 kHz devi. 65 dBf (60d)	—	99.0 MHz	DC voltmeter	L102 Primary coil	0V	Muting switch : off Repeat the steps 1 and 2 until no further adjustment is necessary
	2	Fig. 2	—	—	99.0 MHz	Distortion analyzer	L102 Secondary coil	Minimum	
VCO		Fig. 3	99.0 MHz 1 kHz, 75 kHz devi. 65 dBf (60 dB)	—	99.0 MHz	Frequency counter	R215	19 kHz $\pm$ 10 Hz	Muting switch: on
Distortion		Fig. 3	99.0 MHz 65 dBf (60 dB) Ext. modulation	L+R 1 kHz	99.0 MHz	Distortion analyzer	IF	Minimum	
		Fig. 3	99.0 MHz 65 dBf (60 dB) Ext. modulation	L ch. 1 kHz R ch. 1 kHz	99.0 MHz	R ch. AC voltmeter L ch. AC voltmeter	R203	Minimum Minimum	Maximum and same separation
Muting level	1	Fig. 2	99.0 MHz 17.2 dBf (12 dB) 1 kHz, 75 kHz devi.	—	99.0 MHz	Oscilloscope	R120	Signal output	Muting switch: on
	2		99.0 MHz 16.2 dBf (11 dB) 1 kHz, 75 kHz devi.	—				No output	

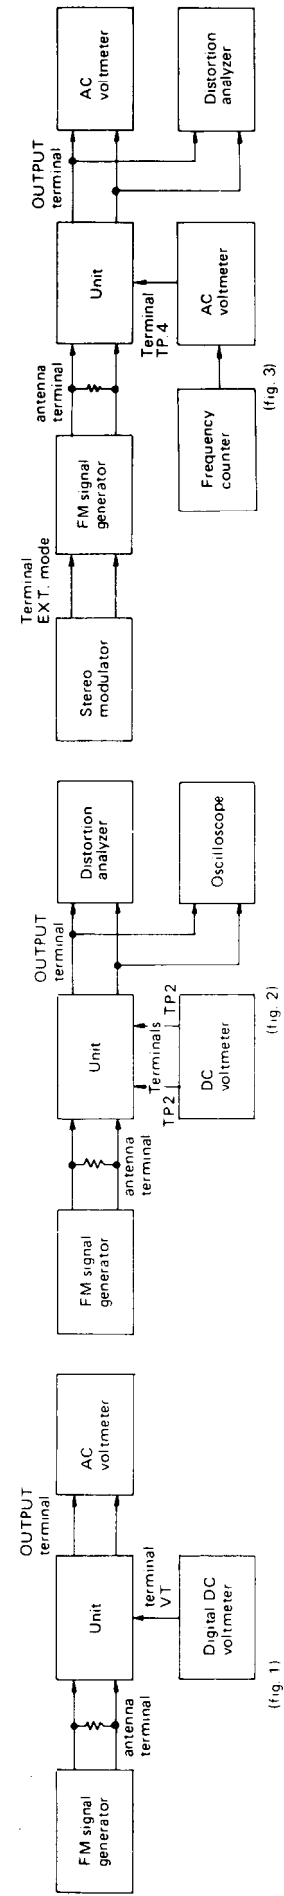

AM section

Step	AM SG output	Tuned frequency	Output indicator	Adjustment point	Adjust for	Remarks
1		522kHz (520kHz)	Digital DC voltmeter	L153	1.2V	Repeat the steps 1 and 2 until no further adjustment is necessary.
2		1611kHz (1710kHz)	Digital DC voltmeter	C170	9.0V (10.5V)	
3	603kHz (600kHz) 400Hz 30% mod.	603kHz (600kHz)	AC voltmeter	L151	Maximum	Repeat the steps 3 and 4 until no further adjustment is necessary.
4	1404kHz (1400kHz) 400Hz 30% mod.	1404kHz (1400kHz)	AC voltmeter	C152	Maximum	
5	999kHz (1000kHz) 400Hz 30% mod.	999kHz (1000kHz)	AC voltmeter	X151	Maximum	

( ): 120V model <10kHz step>

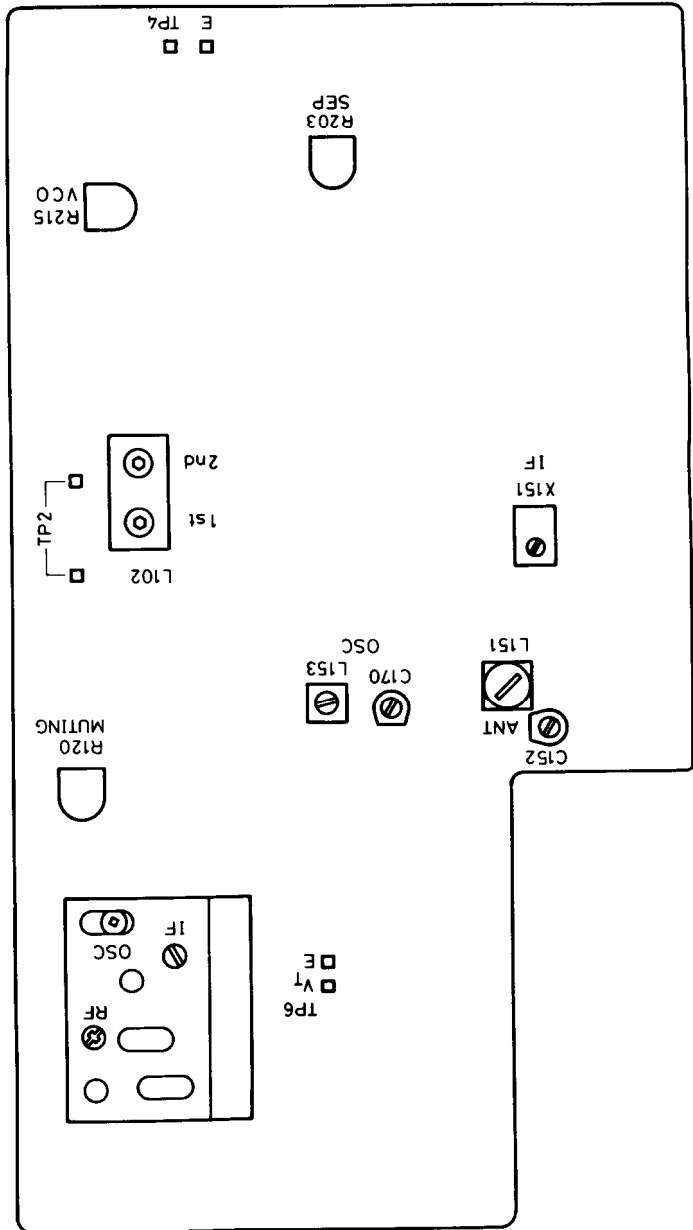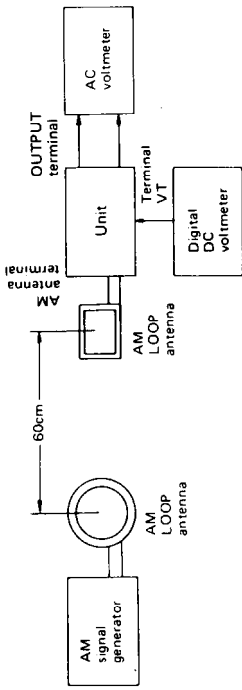



## PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

TUNER CIRCUIT PC BOARD

## PRINTED CIRCUIT BOARD—PARTS LIST

ADJUSTMENT PROCEDURES  
FM section

## TUNER CIRCUIT PC BOARD(NARF-2302C/D/E)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
				<b>Transistors</b>	
TU001	240061	FE349U14 (D/W)	Q206	2211454 or	2SA1015(Y) or
	240059	FE416U33 (G)	Q207,Q208	2212494	JA101(P)
				2211705 or	2SD655(E) or
				2211706	2SD655(F)
				<b>Diodes</b>	
Q103	222540	HA-11225	D101	2243192 or	MTZ8, 2B or
Q151	222701	LA-1245		2239552	RD8, 2EB2 (G)
Q201	222678	μPC-1161C3	D102,D106	223150,	US1040,
			D109-D119	223145 or	1S2076TD or
Q101	2211723 or	2SC1923(O) or		223124	1S2473
	2211722	2SC1923(R)	D108	2243132 or	MTZ4.7B or
Q102	2211723 or	2SC1923(O) or		2239432	RD4.7EB2
	2211722	2SC1923(R) (G)	D104,D105	223132	1K60 (G)
Q104,Q105	2211255,	2SC1815(GR),	D104,D105	223150,	US1040,
Q107-Q110	2210746 or	2SC945A(P) or		223145 or	1S2076TD or
Q152	2212485	JC501(Q)		223124	1S2473 (D/W)
Q154,Q155	2211255,	2SC1815(GR),	D151,D152	223140	KV1236
	2210746 or	2SC945A(P) or		<b>Coils</b>	
	2212485	JC501(Q)	L001	233312	NFA-3051 (G)
Q153,Q106	2211256	2SC1815(BL)	L101	233105 or	NCCH-1005 or
Q205				233024	NCCH-1501
Q202	2211945 or	2SK246(GR) or	L103	233031	NMC-9-1
	2212304	2SK381(D)	L151	232113	NMA-3049

CIRCUIT NO.	PART NO.	DESCRIPTION
	<b>Capacitors</b>	
C152	3060010	NTC-20P09, Trimmer
C158	352741009	10 $\mu$ F, 16V, Elect.
C161	352744709	47 $\mu$ F, 16V, Elect.
C162	352780109	1 $\mu$ F, 50V, Elect.
C165,C166	352750479	4.7 $\mu$ F, 25V, Elect.
C168	370135114	510pF $\pm$ 5%, 100V, APS
C170	3060010	NTC-20P09, Trimmer
C174	352782299	0.22 $\mu$ F, 50V, Elect.
C175	352721019	100 $\mu$ F, 6.3V, Elect.
C176	352780339	3.3 $\mu$ F, 50V, Elect.
C201	352744719	470 $\mu$ F, 16V, Elect.
C203	352750479	4.7 $\mu$ F, 25V, Elect.
C207,C208	370135614	560pF $\pm$ 5%, 100V, APS (W)
C209,C210	352741009	10 $\mu$ F, 16V, Elect.
C212	352782299	0.22 $\mu$ F, 50V, Elect.
C213	352780109	1 $\mu$ F, 50V, Elect.
C214	352780339	3.3 $\mu$ F, 50V, Elect.
C215	370134714	470pF $\pm$ 5%, 100V, APS
C220,C221	352780229	2.2 $\mu$ F, 50V, Elect.
	<b>Resistors</b>	
R120	5215045	N08HR10KBC, Semi-fixed
R203	5215048	N08HR200KBC, Semi-fixed
R215	5215044	N08HR5KBC, Semi-fixed
	<b>Terminal</b>	
P001	25060087	NTM-2PDMN31, Antenna (G)
	25060085	NTM-4PDMN29, Antenna (D/W)
	<b>Sockets</b>	
	25050141	NJPS-4P-S
	25050140	NJPS-3P-S

(D): Only 120V model
(G): Only 220V model
(W): Only 120/220V model

CIRCUIT NO.	PART NO.	DESCRIPTION
	<b>Coils</b>	
L153	232110	NMO-4027
L201	233236	NMC-6027 (G)
L202,L203	233291	NMC-5039
	<b>Transformer</b>	
L102	233274	NFIF-6041
	<b>Ceramic filters</b>	
X101-X103	3010043	SFE10.7MM (G)
X101,X102	3010071	SFE10.7MA5 (D/W)
X151	3010075	SFL450B3
X152	3010076	BFU450C
	<b>Capacitors</b>	
C101	352780339	3.3 $\mu$ F, 50V, Elect.
C107,C110	352780109	1 $\mu$ F, 50V, Elect.
C111	352741009	10 $\mu$ F, 16V, Elect.
C117	352784799	0.47 $\mu$ F, 50V, Elect.
C118	352742209	22 $\mu$ F, 16V, Elect.
C120	352741009	10 $\mu$ F, 16V, Elect.
C123	352784799	0.47 $\mu$ F, 50V, Elect.
C125	352780229	2.2 $\mu$ F, 50V, Elect.
C126	352780109	1 $\mu$ F, 50V, Elect.
C128	352741009	10 $\mu$ F, 16V, Elect.

## DE-EMPHASIS SWITCH PC BOARD

### DE-EMPHASIS SWITCH PC BOARD (NASW-2304B) (Only model W)

CIRCUIT NO.	PART NO.	DESCRIPTION
S701	2565240	NSS-42102, Slide switch
	25050141	NJPS-4P-S, Socket, jumper

# PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

## DIGITAL CIRCUIT PC BOARD

### PRINTED CIRCUIT BOARD-PARTS LIST

#### DIGITAL CIRCUIT PC BOARD(NADG-2303C/D/E)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
					<b>Transistors</b>
Q701	222675	TD6104P	Q704	221 2294 or 2211293	2SK108(D) or 2SK68(M)
Q702	222674	TC9147BP	Q705,Q713	2211255	2SC1815(GR)
Q703	222673	TD6301AP	Q706,Q707	2211255,	2SC1815(GR),
			Q708,Q709	2210746 or	2SC945A(P) or
			Q717,Q718	2212485	JC501(Q)

#### OPERATION SWITCH PC BOARD

#### OPERATION SWITCH PC BOARD(NASW-2305)

CIRCUIT NO.	PART NO.	DESCRIPTION
		<b>L.E.Ds</b>
D754-D761 D783-D785	225137CG, 225137DG or 225137DY	SEL2413E
D762,D763 D786,D787	225142 225142	SEL2913K SEL2913K
		<b>Resistors</b>
R781-R785	49241681505	680Ω×5, 1/4W, Net work
		<b>Switches</b>
S703-S717	25035389	NPS-111-S353, Push
		<b>Holders</b>
	27190361	STL
	27190362	SELL


CIRCUIT NO.	PART NO.	DESCRIPTION
	Q714	2211705 or 2211706
	Q721-Q724	2212600 or 221243
		<b>Diodes</b>
	D701-D705 D707	223150, 223145 or 223124
	D708,D709	223150, 223145 or 223124
	D706	2243163 or 2239493
	D711	2241291
		<b>L.E.Ds</b>
	D751	225142
	D752,D767 D768,D773	225137CG, 225137DG or 225137DY
	D753,D779 D774	225141 225142
	D775,D778	225137CG, 225137DG or 225137DY
	D776,D777 D789	225142 225142
		<b>Fluorescent tube</b>
	Q715	212016
	X701	3010073
		<b>Capacitors</b>
	C702	352744709
	C705	395160107
	C709	352780109
	C710	352780229
	C711	352784799
	C712	3020018
	C717-C719	352741009
	C720	352751009
	C724,C708	352742209
		<b>Resistors</b>
	R729-R737	49121333509
	R738-R750	49121333513
	R534	6142044
		<b>Switch</b>
	S718	25035399
		<b>Holder</b>
		27190363A
		27190360
		<b>Cushion</b>
		28140593
		47 $\mu$ F, 16V, Elect.
		1 $\mu$ F, 35V, Tantalum
		1 $\mu$ F, 50V, Elect.
		2.2 $\mu$ F, 50V, Elect.
		0.47 $\mu$ F, 50V, Elect.
		0.047 $\mu$ F, 5V, Super
		10 $\mu$ F, 16V, Elect.
		10 $\mu$ F, 25V, Elect.
		22 $\mu$ F, 16V, Elect.
		33k $\Omega$ ×9, 1/8W, Network
		33k $\Omega$ ×13, 1/8W, Network
		N30LL100KA15Z, Slide variable
		NPS-122-L364, Shift
		L.E.D
		EXL
		40×10×3.5

(D): Only 120V model (G): Only 220V model (W): Only 120/220V model
--



# SCHEMATIC DIAGRAM

-TUNER SECTION-  
-G/W MODELS-

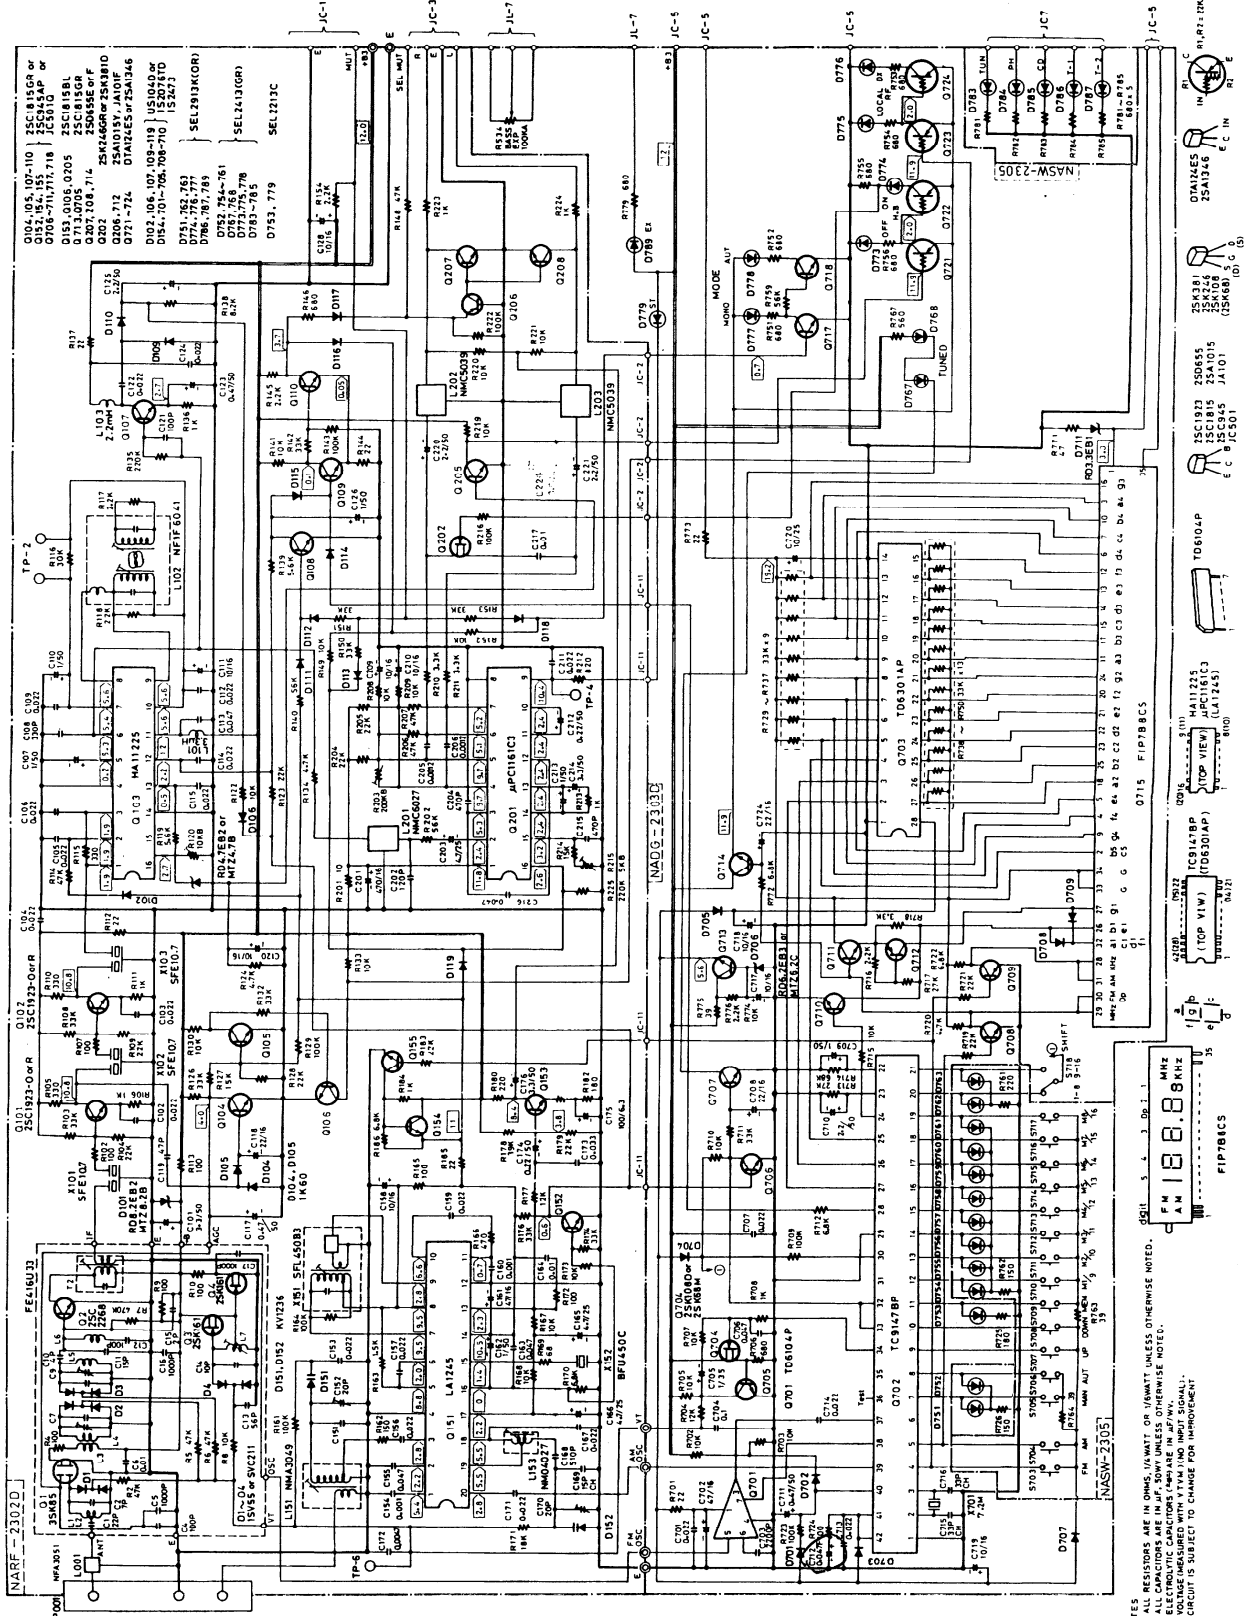

FM 188.8 MHz  
AM 188.8 MHz  
FM 188.8 MHz  
AM 188.8 MHz

NOTES:  
\* ALL RESISTORS ARE IN OHMS, UNLESS OTHERWISE NOTED.  
\* ALL CAPACITORS ARE IN P.F., UNLESS OTHERWISE NOTED.  
\* VALUES IN PARENTHESES ARE FOR IMPROVED SIGNAL.  
\* CREDIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

25A1381 25A0555  
25A1382 25A1015  
25A1383 25A1015  
25A1384 25A1015  
25A1385 25A1015  
25A1386 25A1015  
25A1387 25A1015  
25A1388 25A1015  
25A1389 25A1015  
25A1390 25A1015  
25A1391 25A1015  
25A1392 25A1015  
25A1393 25A1015  
25A1394 25A1015  
25A1395 25A1015  
25A1396 25A1015  
25A1397 25A1015  
25A1398 25A1015  
25A1399 25A1015  
25A1400 25A1015

ONKYO CORPORATION

**PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE**  
**POWER AMPLIFIER AND POWER SUPPLY CIRCUIT PC BOARD**

**SPEAKER SWITCH PC BOARD**

**HEADPHONE TERMINAL PC BOARD**

**PRINTED CIRCUIT BOARD-PARTS LIST**

(D): Only 120V model  
 (G): Only 220V model  
 (W): Only 120/220V model

CIRCUIT NO.	PART NO.	DESCRIPTION
C912	Capacitor	100µF, 35V, Elect.
C913	352761019	2.200µF, 25V, Elect.
C914	352751229	100µF, 25V, Elect.
C916	352751019	100µF, 25V, Elect.
C917	352741009	10µF, 16V, Elect.
C921	352780109	1µF, 50V, Elect.
C922	352753309	33µF, 25V, Elect.
C923	352780339	3.3µF, 50V, Elect.
R507, R607	Resistors	1KΩ, 1/2W, Metal oxide film
R508, R608	441521024	3.3KΩ, 1/2W, Metal oxide film
R510, R610	441523324	2.4KΩ, 1/2W, Metal oxide film
R511, R611	441522424	4.7Ω, 1/2W, Metal oxide film
R512, R612	441520474	4.7Ω, 1/2W, Metal oxide film (G)
R513	441520474	560Ω, Metal oxide film
R514	441525614	100Ω, Metal oxide film
R901	441521014	3.3MΩ, 1/2W, Solid (D)
R902	441523355	39Ω, 1/2W, Metal oxide film
R904, R907	441523904	430Ω, 1/2W, Metal oxide film
R906	441621024	1KΩ, 1W, Metal oxide film
R908	441720624	6.2Ω, 2W, Metal oxide film
R910	441624714	470Ω, 1/2W, Metal oxide film
R924	441522704	27Ω, 1/2W, Metal oxide film
P501	Terminal	NTM-8PDM125, Speaker
P501	25060058	NTM-8S33 (G)
P501	25060092	NTM-8S33 (G)
S901	Switch	NPS-111-132P, Power
R1921	Relay	NRL-2P5-ADC24V-07
F501, F601	Fuses	315A-SE-EAK, Speaker protection (G)
F501, F601	25065134	25065134
F501, F601	2525076	2525076
F901	2525059	44(SS-2), Speaker protection (D/W)
F901	25252049	44(SS-2), Speaker protection (D/W)
F902	25252074	2A-SE-EAK, Primary (D/W)
F903, F904	25252078	5A-SE-EAK, Secondary (G)
F905	25252070	1A-SE-EAK, Secondary (G)
F905	Fuseholders	YSH403T (G/W)
F905	25050065	SNS051 (D/W)
F905	25250113	SNS051 (D/W)
C901a	Cover	SB-1925, Capacitor for C901
C901a	27300601	27300601
C901a	Solders	NTPS-3P-S
C901a	25050140	NTPS-3P-S
C901a	25050143	NTPS-6P-S
C901a	Labels	T3.15A/250V, Fuse, rating (G)
C901a	29360472	29360472
C901a	29360626-1	29360626-1
<b>SPEAKER SWITCH PC BOARD(MASW-2312)</b>		
CIRCUIT NO.	PART NO.	DESCRIPTION
S501, S601	25035467	NPS-212-1429, Speaker switch
<b>HEADPHONE TERMINAL PC BOARD(MAHF-2313)</b>		
CIRCUIT NO.	PART NO.	DESCRIPTION
P902	25045138	HLJ0520-01-010, Headphone terminal
R61, R661	441523914	390Ω, 1/2W, Metal oxide film resistor
<b>NOTE: THE COMPONENTS IDENTIFIED BY MARK</b> ▲ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PARTS NUMBER SPECIFIED.		

**POWER AMPLIFIER AND POWER SUPPLY PC BOARD (NAAF-2309C/D/E)**


CIRCUIT NO.	PART NO.	DESCRIPTION
Q501, Q601	ICs	STK-4843
Q901	222780122	78M12
Q902, Q921	Transistors	2SC1815(GR)
Q922	2211254	2SC1815(V)
D901-D906	Diodes	GR-20D
D907, D908	223845	MTZ18G
	2243273	GZA18X
	2241191	GZA18Y or
	2239713	RD18EB3
D909	223862	WL01
D910	223880	GP101N4003
D911	2241291	RD3.3EB1
D912	2239733 or	RD20EB3 or
	2243283	MTZ20C

CIRCUIT NO.	PART NO.	DESCRIPTION
D921-D923	Diodes	US1040
	223150	1S2076TD or
	223124	1S2473
L501, L601	Coils	S-1.3B (G)
C501, C601	Capacitors	352780479
C504, C604	352731019	352780479
	352780080	4.7µF, 50V, Elect.
C507, C607	352984799	100µF, 10V, Elect. (G/W)
C510, C610	352784709	0.47µF, 50V, Non-polar elect. (D)
C511, C611	352784709	0.47µF, 50V, Non-polar elect.
C513, C514	352781019	47µF, 50V, Elect.
C515, C517	352781009	100µF, 50V, Elect.
C901	352781009	100µF, 50V, Elect.
C905, C906	352781009	100µF, 50V, Elect.
C907, C908	352751019	6.800µF, 47V, Elect.
C909, C910	352752219	100µF, 35V, Elect.
		220µF, 25V, Elect.

# SCHEMATIC DIAGRAM


-AMPLIFIER SECTION-  
-220V MODEL-

NO	FUNCTION	POSITION
5301	POWER	ON OFF
5301	TUNER	LINER
5301	PHONO CD	PHONO CD
5302	T-1 MONITOR	SOURCE MONITOR
5303	T-2 MONITOR	SOURCE MONITOR
5352	LOUDNESS	OFF ON
5353	MODE	STEREO MONO
5522	DYNAMIC BASS	OFF ON
5501	SPEAKER A	OFF ON
5502	SPEAKER B	OFF ON

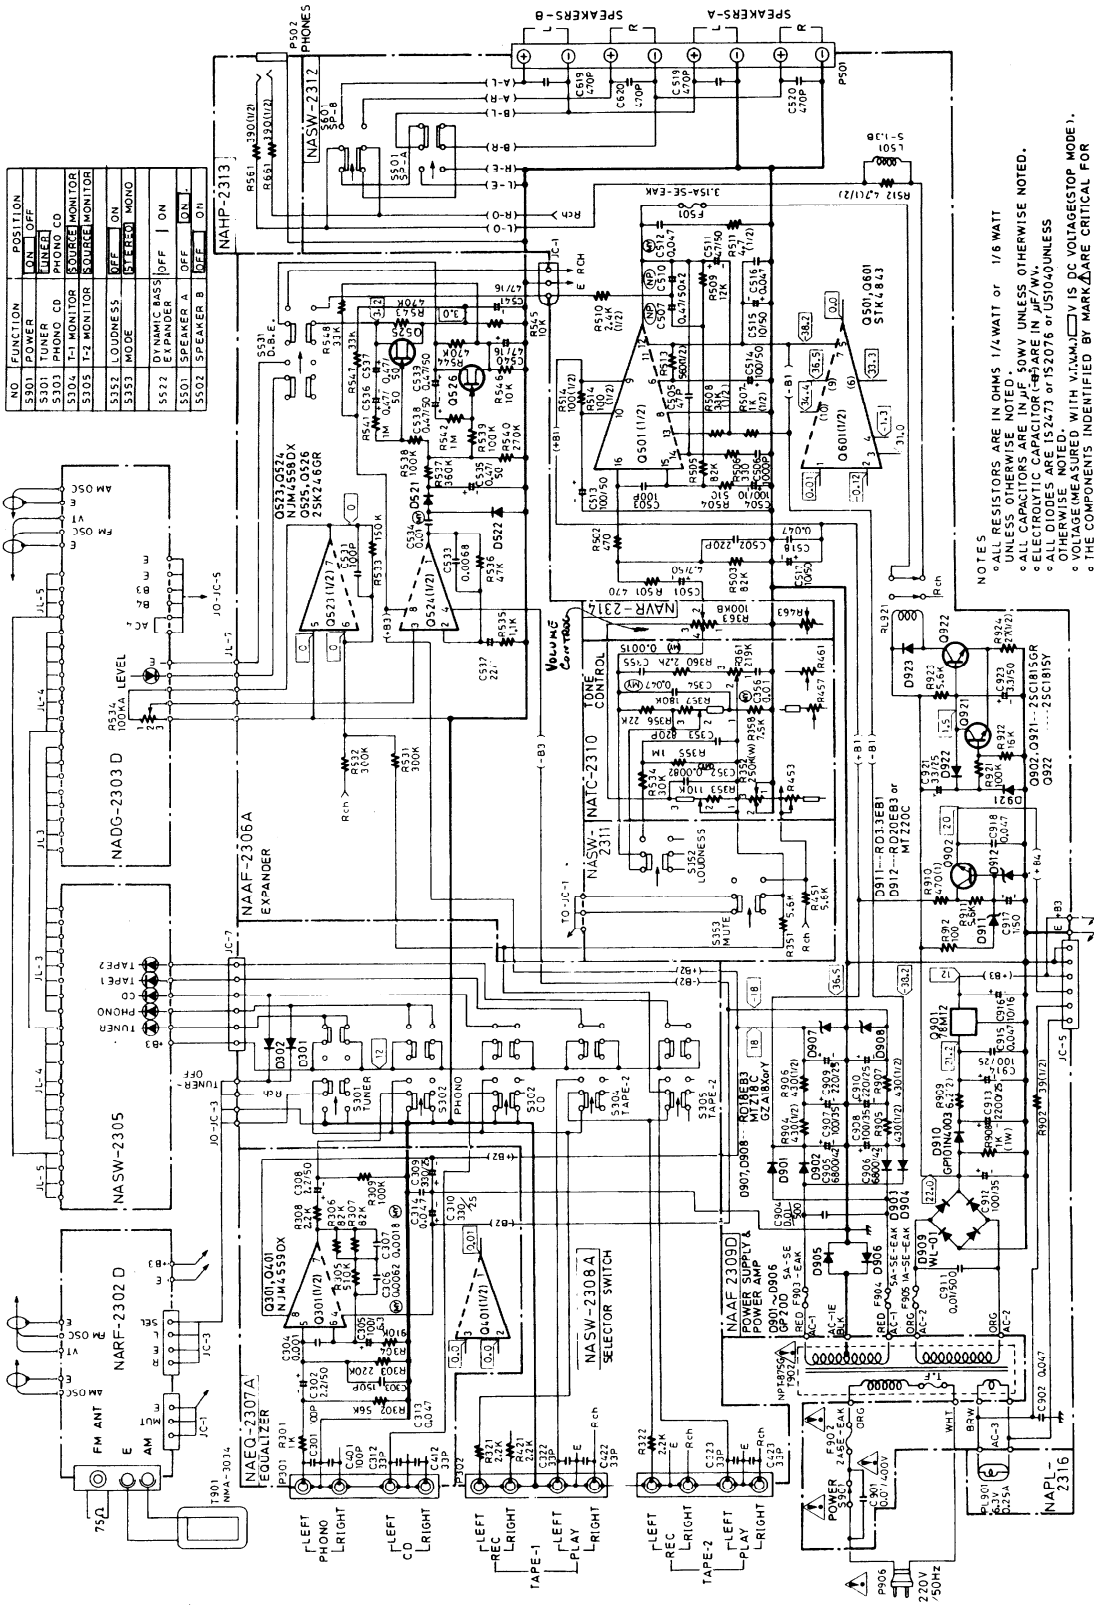

NOTES:  
 \* RESISTORS ARE IN OHMS 1/4WATT or 1/6 WATT UNLESS OTHERWISE NOTED.  
 \* ALL CAPACITORS ARE IN μF 50V UNLESS OTHERWISE NOTED.  
 \* ELECTROLYTIC CAPACITOR (E) ARE IN μF/W.V.  
 \* ALL DIODES ARE 1N5473 or 1N5706 or 1N5400 UNLESS OTHERWISE SPECIFIED WITH V.I.W.V. (V IS DC VOLTAGE STOP MODE).  
 \* THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.


0301,0302, 0501,0502, 0523,0524  
 0902,0921, 0525,0526, 0922






# SCHEMATIC DIAGRAM

-AMPLIFIER SECTION-  
-D/W MODEL-

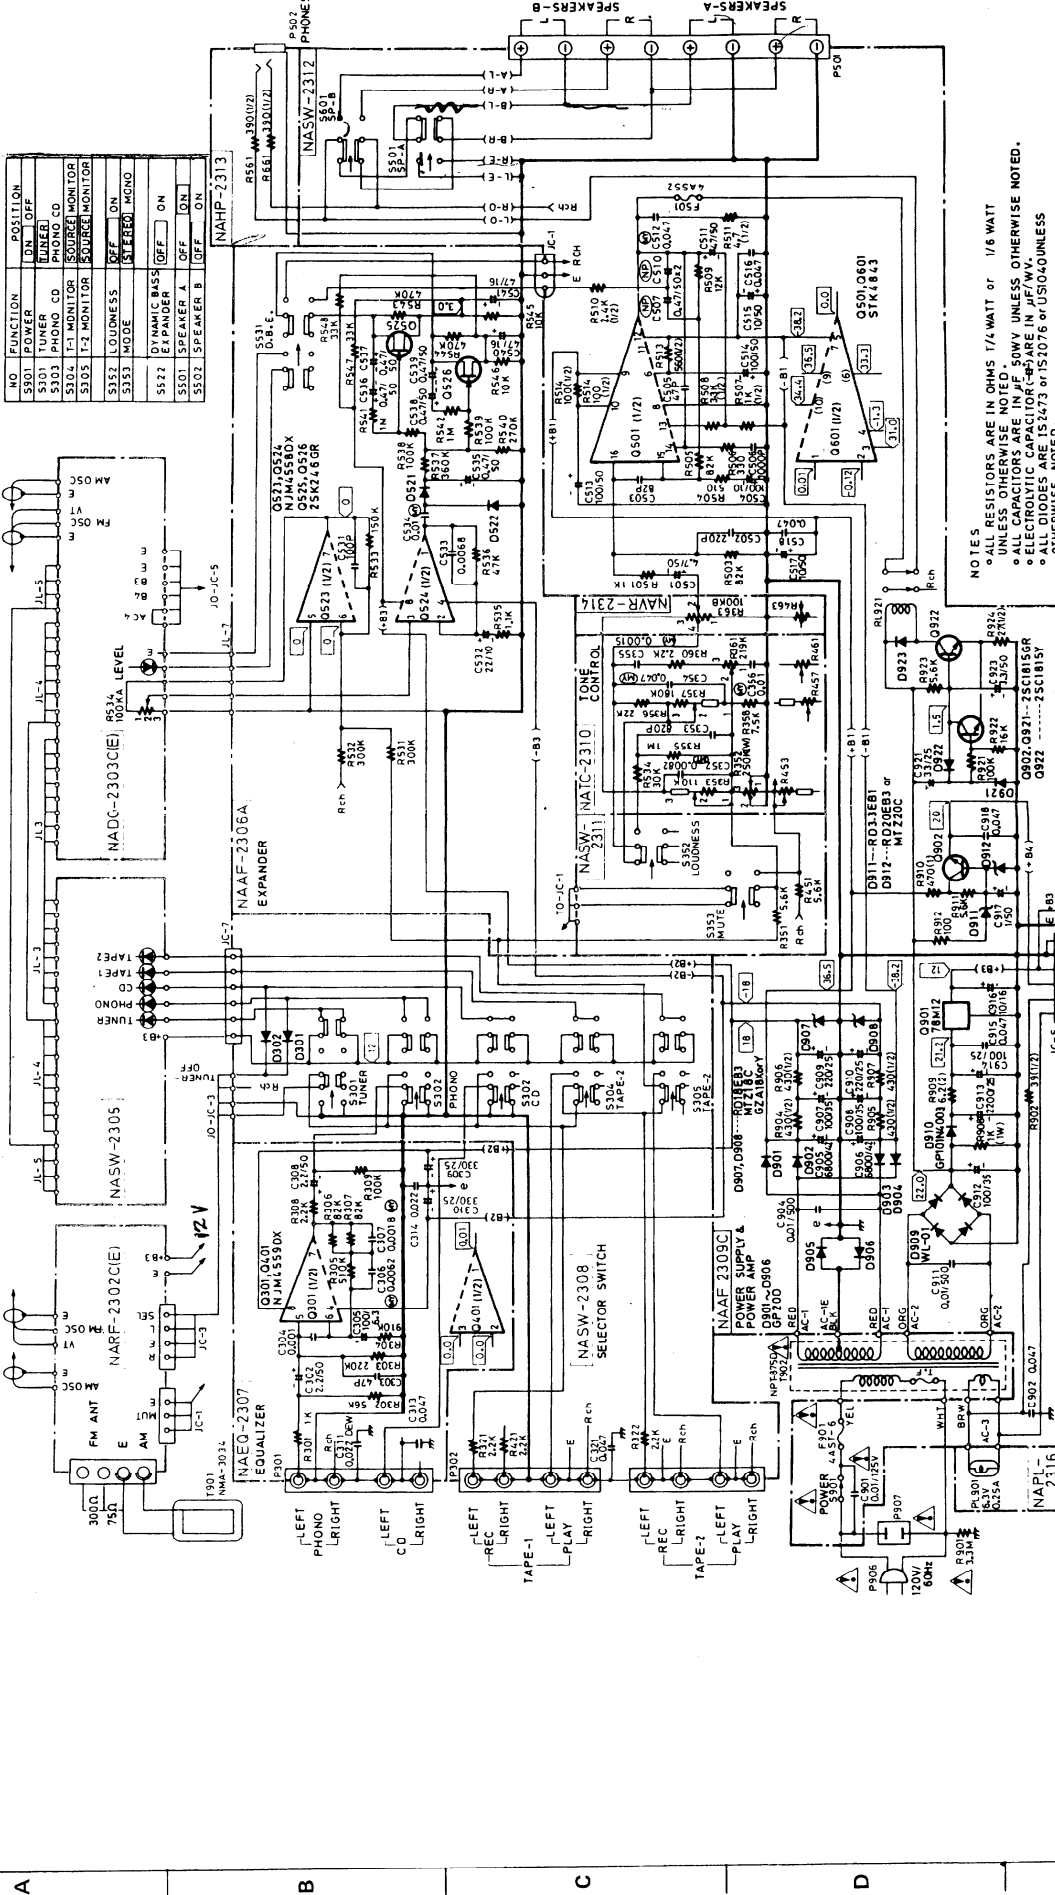

NO	FUNCTION	POSITION
S301	POWER	ON OFF
S301	TUNER	ON OFF
S303	PHONO CD	ON OFF
S302	T-1 MONITOR	ON OFF
S302	T-2 MONITOR	ON OFF
S352	LOUDNESS	OFF ON
S353	MODE	STEREO MONO
S322	DYNAMIC BASS	OFF ON
S301	EXPANDER	OFF ON
S301	SPEAKER A	OFF ON
S302	SPEAKER B	OFF ON

- NOTES
- ALL RESISTORS ARE IN OHMS 1/4 WATT or 1/6 WATT UNLESS OTHERWISE NOTED.
  - ALL CAPACITORS ARE IN P.F. 50V UNLESS OTHERWISE NOTED.
  - ALL DIODES ARE 1N4147 or 1N5106 or 1N5108 UNLESS OTHERWISE NOTED.
  - VOLTAGE MEASURED WITH V.T.M.M. □ IS DC VOLTAGE (STOP MODE).
  - THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.

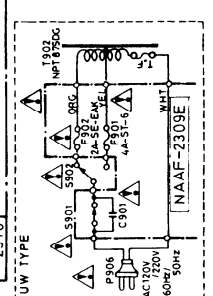

- 301, □302, □501, □601 □802, □821 □815, □516, □822
- 302, □524, □525
- 301, □302, □501, □601 □802, □821 □815, □516, □822
- 301, □302, □501, □601 □802, □821 □815, □516, □822

# PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

TX-27

EQUALIZER AMPLIFIER PC BOARD

DYNAMIC BASS CIRCUIT PC BOARD

A

## PRINTED CIRCUIT BOARD-PARTS LIST

B

EQUALIZER AMPLIFIER PC BOARD(NAEQ-2307/A)

DYNAMIC BASS CIRCUIT PC BOARD(NAAF-2306A)

CIRCUIT NO.	PART NO.	DESCRIPTION
Q301,Q302	222534	NJM-4559DX
<b>Capacitors</b>		
C302,C402	352780229	2.2 $\mu$ F, 50V, Elect.
C305,C405	352721019	100 $\mu$ F, 6.3V, Elect.
C308,C408	352780229	2.2 $\mu$ F, 50V, Elect.
C309,C310	352753319	330 $\mu$ F, 25V, Elect.
<b>Terminal</b>		
P301	25045142	NPJ-4PDBL55

CIRCUIT NO.	PART NO.	DESCRIPTION
Q523,Q524	222502	NJM4558DX
<b>Transistors</b>		
Q525,Q526	2211945	2SK246(GR)
<b>Diodes</b>		
D521,D522	223124,	1S2473,
	223145 or	1S2076TD or
	223150	US1040
<b>Capacitors</b>		
C532	352732209	22 $\mu$ F, 10V, Elect.
C535-C539	352784799	0.47 $\mu$ F, 50V, Elect.
C540,C541	352744709	47 $\mu$ F, 16V, Elect.
<b>Switch</b>		
S531	25035480	NPS-142-L442, Push


C

## BLOCK DIAGRAM


STK-4843(Power amplifier)

NJM4558/4559(Operation amplifier)

D

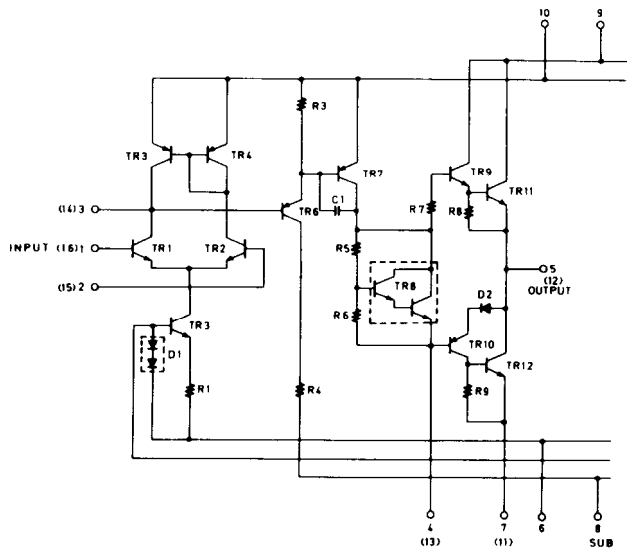

E

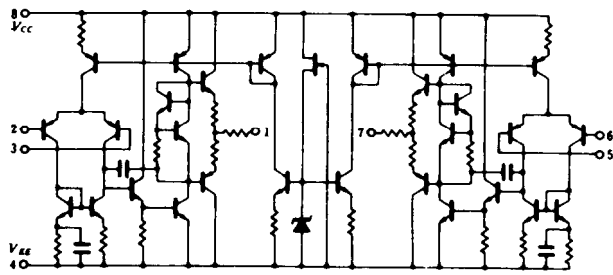

**SOURCE SELECTOR SWITCH PC BOARD****SWITCH PC BOARD****SWITCH PC BOARD(NASW-2311A)**

CIRCUIT NO.	PART NO.	DESCRIPTION
S352,S353	25035471	NPS-222-L433, Selector switch

**SOURCE SELECTOR SWITCH PC BOARD(NASW-2308/A)**

CIRCUIT NO.	PART NO.	DESCRIPTION
D301,D302	223124	1S2473,
	223145 or	1S2076TD or
	223150	US1040, Diode
S301-S305	25035468	NPS-542-L430, Push switch
P302,P303	25045142	NPJ-4PDBL55, Tape input/output
	25050143	NJPS-6P-S, Socket, jumper

**VOLUME CONTROL PC BOARD****TONE CONTROL PC BOARD****VOLUME CONTROL PC BOARD(NAVR-2314)**

CIRCUIT NO.	PART NO.	DESCRIPTION
R363,R463	5148101	N16RGM100KBTP30, Variable resistor

**EDGE LIGHT PC BOARD****TONE CONTROL CIRCUIT PC BOARD(NATC-2310)**


CIRCUIT NO.	PART NO.	DESCRIPTION
R352,R452	5146049	N16RLC250KWT30, Balance control variable resistor
R353,R453	5148073	N16RQMC110K180K30, Bass control variable resistor
R361,R461	5148102	N16RGMC219K30, Treble control variable resistor

**EDGE LIGHT PC BOARD(NAPL-2316)**

CIRCUIT NO.	PART NO.	DESCRIPTION
PL901	210064A	PL6.3V, 0.25A, Lamp


# BLOCK DIAGRAM OF IC

HA-11225(FM IF system)

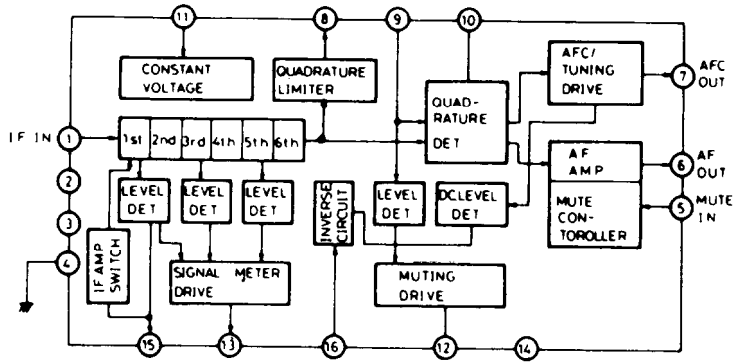


1. IF signal input
2. IF amplifier switch input  
H level: Off
5. Muting switch input
6. Composite signal output
7. AFC output
8. IF amplifier output
9. 10.7MHz input
10. Reference voltage
11. Power supply.
12. Muting output  
Tuned: L level
13. Signal strength output
15. AGC output
16. Muting level


LA-1245(AM radio system)

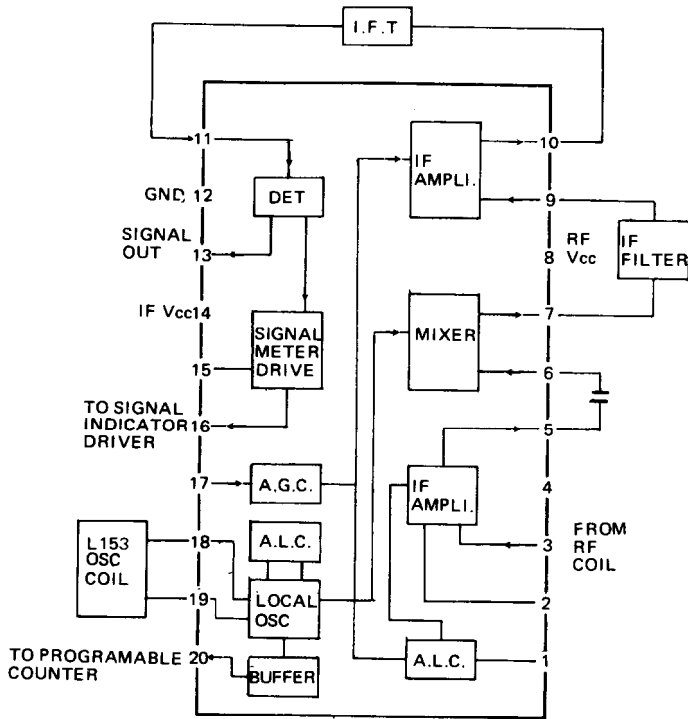

μPC1161C3(Stereo decoder)

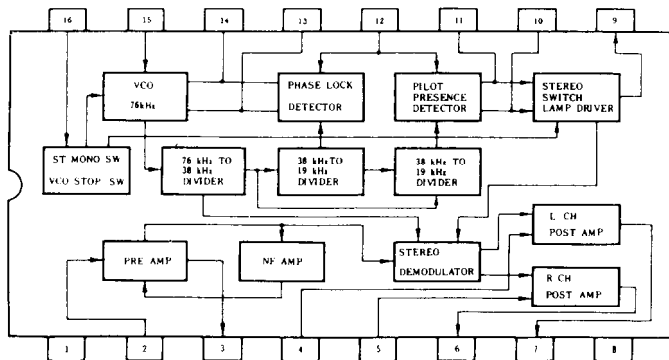

# PACKING VIEW

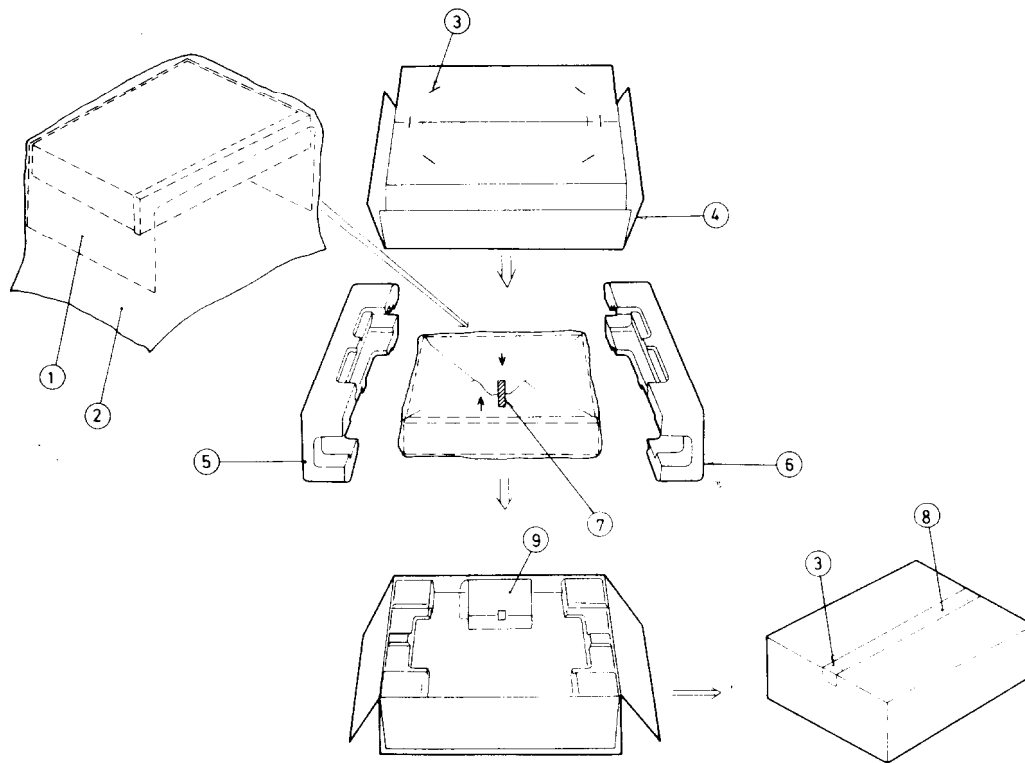

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	29095012-1	500×800mm, Protection sheet (B)		<b>120V model</b>	
2	29100034	650×850mm, Poly-vinyl bag		292064A	FM antenna
3	282301	Sealing hook		29100006A	350×250mm, Poly-vinyl bag
4	29051092	Master carton box (S)		29340860	Instruction manual
	29051093	Master carton box (B)		<b>220V model</b>	
5	29090817A	Pad R		292092	FM antenna
6	29090816B	Pad L		29100006A	350×250mm, Poly-vinyl bag
7	29110032	W=15mm, Adhesive tape		29340863	Instruction manual
8	260012	50(W)×600mm, Damplon tape		<b>120/220V model</b>	
9	Accessory bag complete			292064A	FM antenna
	<b>U.S.A. model</b>			29100006A	350×250mm, Poly-vinyl bag
	292064A	FM antenna		29340863	Instruction manual
	29100006A	350×250mm, Poly-vinyl bag		25055040	CV-K-2, Conversion plug
	29340860	Instruction manual			
	29365006-6	Warranty card			
	29358002C	Service station list			

Note: (B): Only black model  
(S): Only silver model

## ONKYO CORPORATION

International Division: No. 24 Mori Bldg., 23-5, 3-chome, Nishi-Shinbashi, Minato-ku, Tokyo, Japan  
Telex: 2423551 ONKYO J. Phone: 03-432-6981

## ONKYO U.S.A. CORPORATION

200 Williams Drive, Ramsey, N.J. 07446 Tel. 201-825-7950