
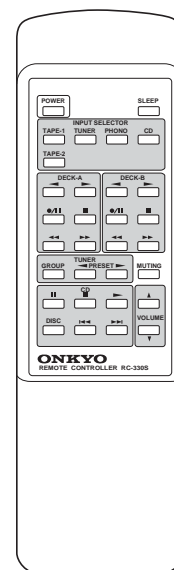


# ONKYO SERVICE MANUAL

## STEREO RECEIVER MODEL TX-8011

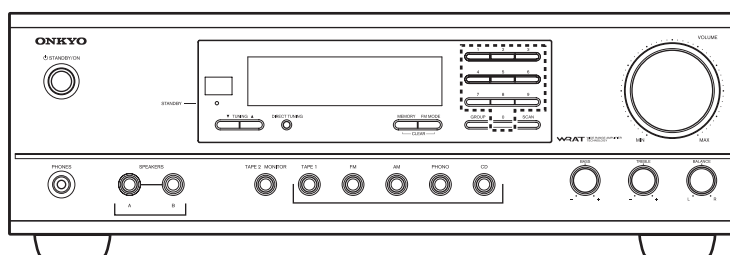


RC-330S

Black model

BMDD	120 V AC, 60 Hz
------	-----------------

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

## SPECIFICATIONS

### Amplifier Section

Power Output	Front L/R 50 W + 50 W (8ohm, 20 Hz-20 kHz, FTC)
Dynamic Power	105 W + 105 W (4 ohm) 70 W + 70 W (8 ohm)
THD (Total Harmonic Distortion)	0.08 % (Power Rated)
Damping Factor	60 (Front, 1 kHz, 8 ohm)
Input Sensitivity and Impedance	150 mV/50 kohm (LINE) 2.5 mV/50 kohm (PHONO MM)
Output Level and Impedance	150 mV/2.2 kohm (REC OUT)
Phono Overload	120 mV (MM 1 kHz 0.5 %)
Frequency Response	10 Hz-100 kHz/+1 dB -3 dB (TONE FLAT, CD, TAPE-1, TAPE-2/MONITOR)
Tone Control	±10 dB, 50 Hz (BASS) ±10 dB, 20 kHz (TREBLE)
SN Ratio	100 dB (LINE ,IHF-A) 80 dB (PHONO, IHF-A)
Speaker Impedance	4 ohm

### Tuner Section

#### FM

Tuning Frequency Range	87.5 MHz-108.0 MHz
Usable Sensitivity	Stereo 17.2 dBf 2.0 $\mu$ V(75 ohm IHF) Mono 11.2 dBf 1.0 $\mu$ V(75 ohm IHF)
S/N Ratio	Stereo 70 dB (IHF-A) Mono 76 dB (IHF-A)
THD	Stereo 0.25 % (1kHz) Mono 0.15 % (1kHz)
Frequency Response	30 Hz-15 kHz/±1.5 dB
Stereo Separation	45 dB ( 1kHz )

#### AM

Tuning Frequency Range	530 kHz-1710 kHz
Usable Sensitivity	30 $\mu$ V
S/N Ratio	40 dB
THD	0.70%


### General


Power Supply	AC 120 V, 60 Hz
Power Consumption	180 W
Stand-by Power Consumption	1.35 W
Dimensions(W x H x D)	17-1/8" x 5-7/8" x 12-11/16" inches 435 x 150 x 322 mm
Weight	16.3 lbs 7.4 kg
Analog Inputs	PHONO, CD, TAPE-1, TAPE-2/ MONITOR
Analog Outputs	TAPE-1, TAPE-2/MONI
Speaker Outputs	4(SP-A, SP-B)
Phones	1

Specifications and features are subject to change without notice.

## SERVICE PROCEDURES

### 1. Replacing the fuse

 This symbol located near the fuses indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating refer to the marking adjacent to the symbol.

 Ce symbole indique que le fusible utilise est a rapide. Pour une protection permanente, n'utiliser que fusibles de meme type. Ce dernier est la qu le present symbol est appse.

CIRCUIT NO.	PART NO.	DESCRIPTION
F901	252163	4A-UL/T-237,Fuse

### 2. To initialize the unit

This device employs a microprocessor to perform various functions and operations. If interference generated by an external power supply, radio wave, or other electrical source results in accident which causes the specified operations and functions to operate abnormally.

To perform a result, please follow the procedure below.

- 1.Press and hold down the TAPE 1 button, then press the DIRECT TUNING button.
- 2.After "CLEAR" is displayed, the preset memory stored in the memory, are initialized and will return to the factory setting.

### 3. Safety-check out

(Only U.S.A. model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and screw on the back panel.

Specifications: 3.3Mohm $\pm$ 10% at 500V.

### 4. Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in order to charge the back-up system.

The memory preservation period after the unit has been unplugged varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time the unit has been unplugged. This period is shorter when the unit is exposed to a highly humid climate.

A

B

C

D

E


EXPLODED VIEW

1


2

3

4

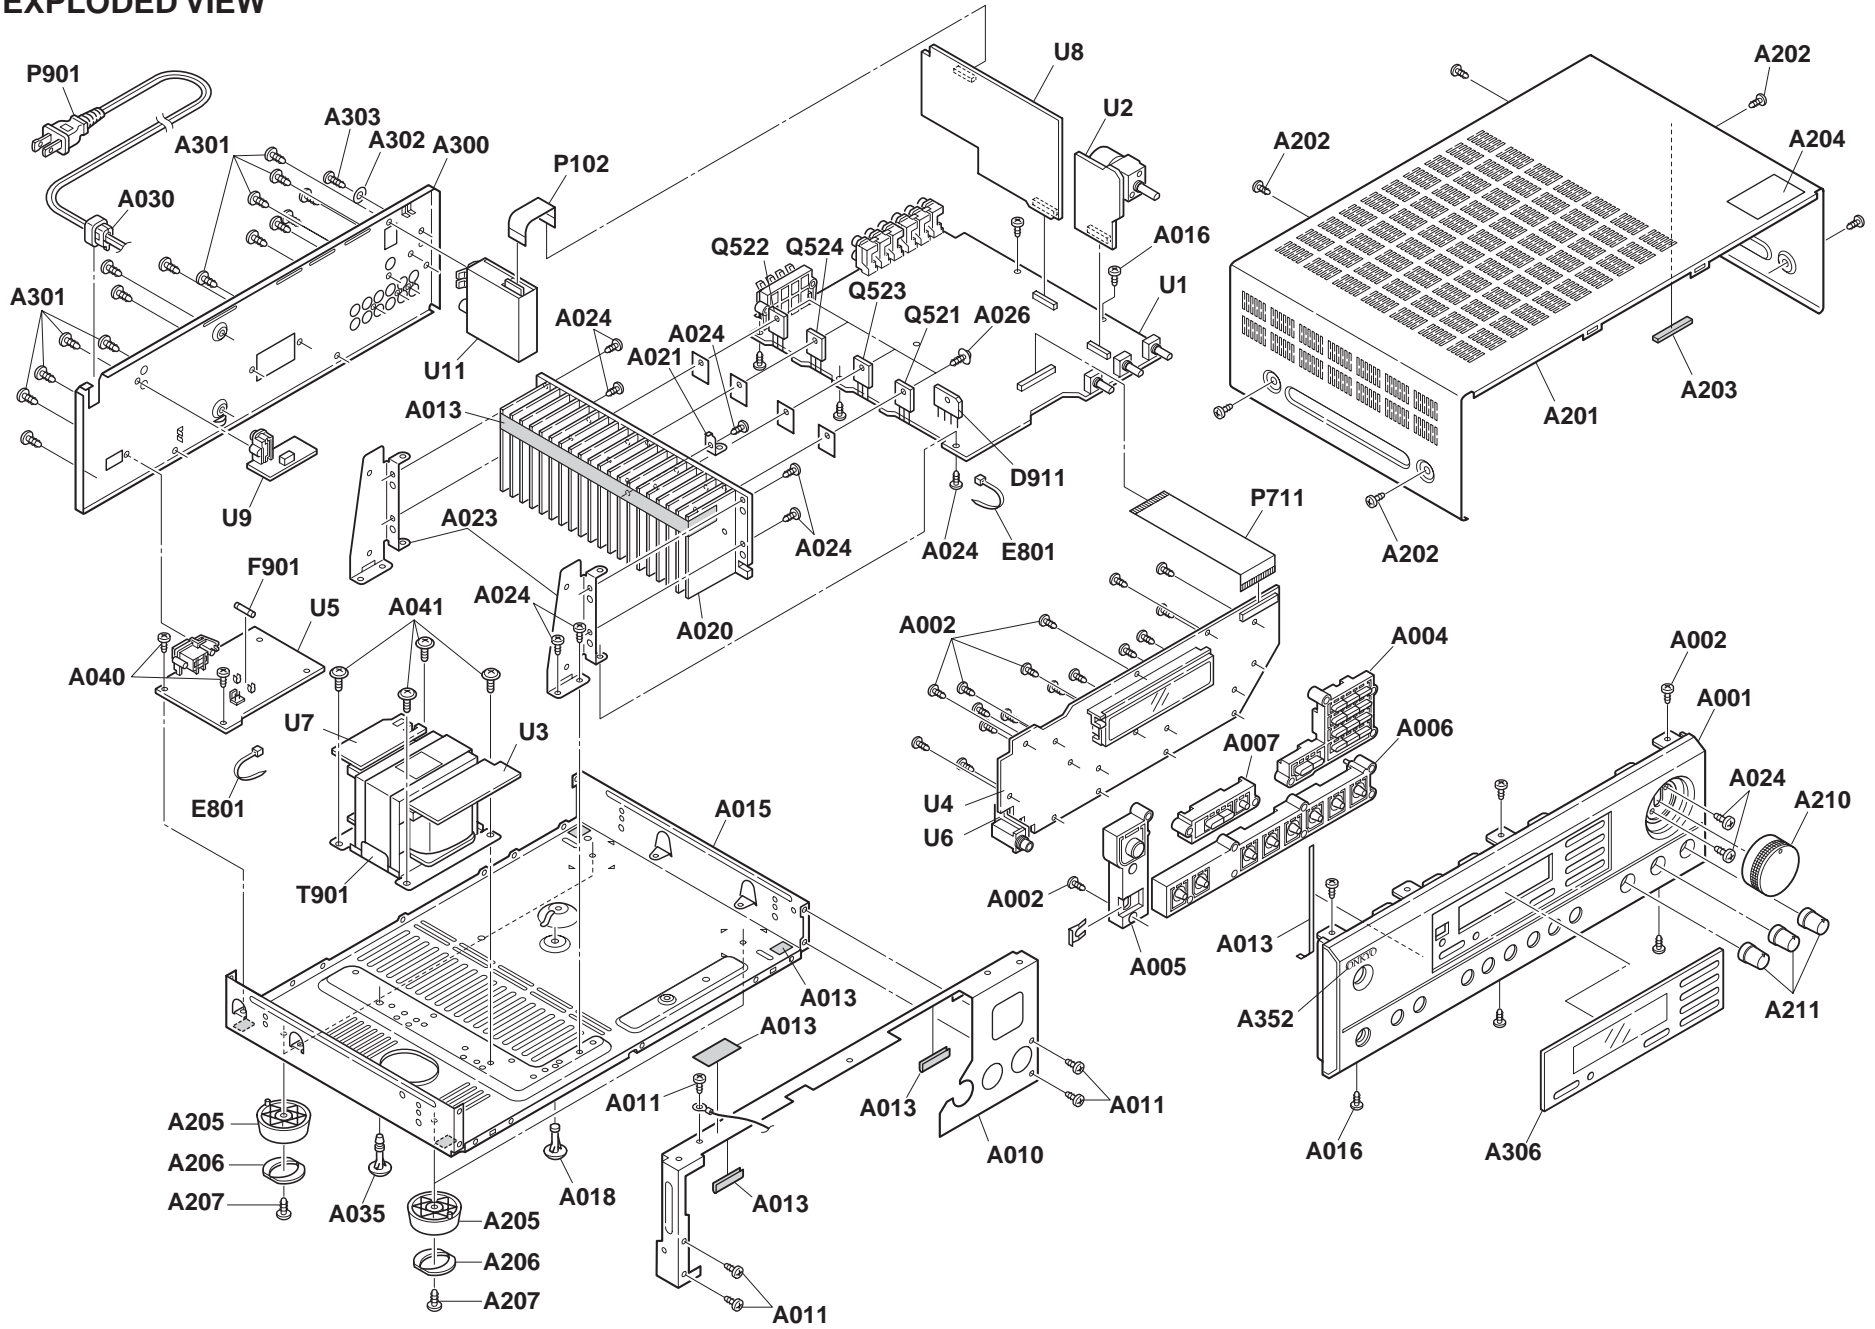

**BLOCK DIAGRAM**

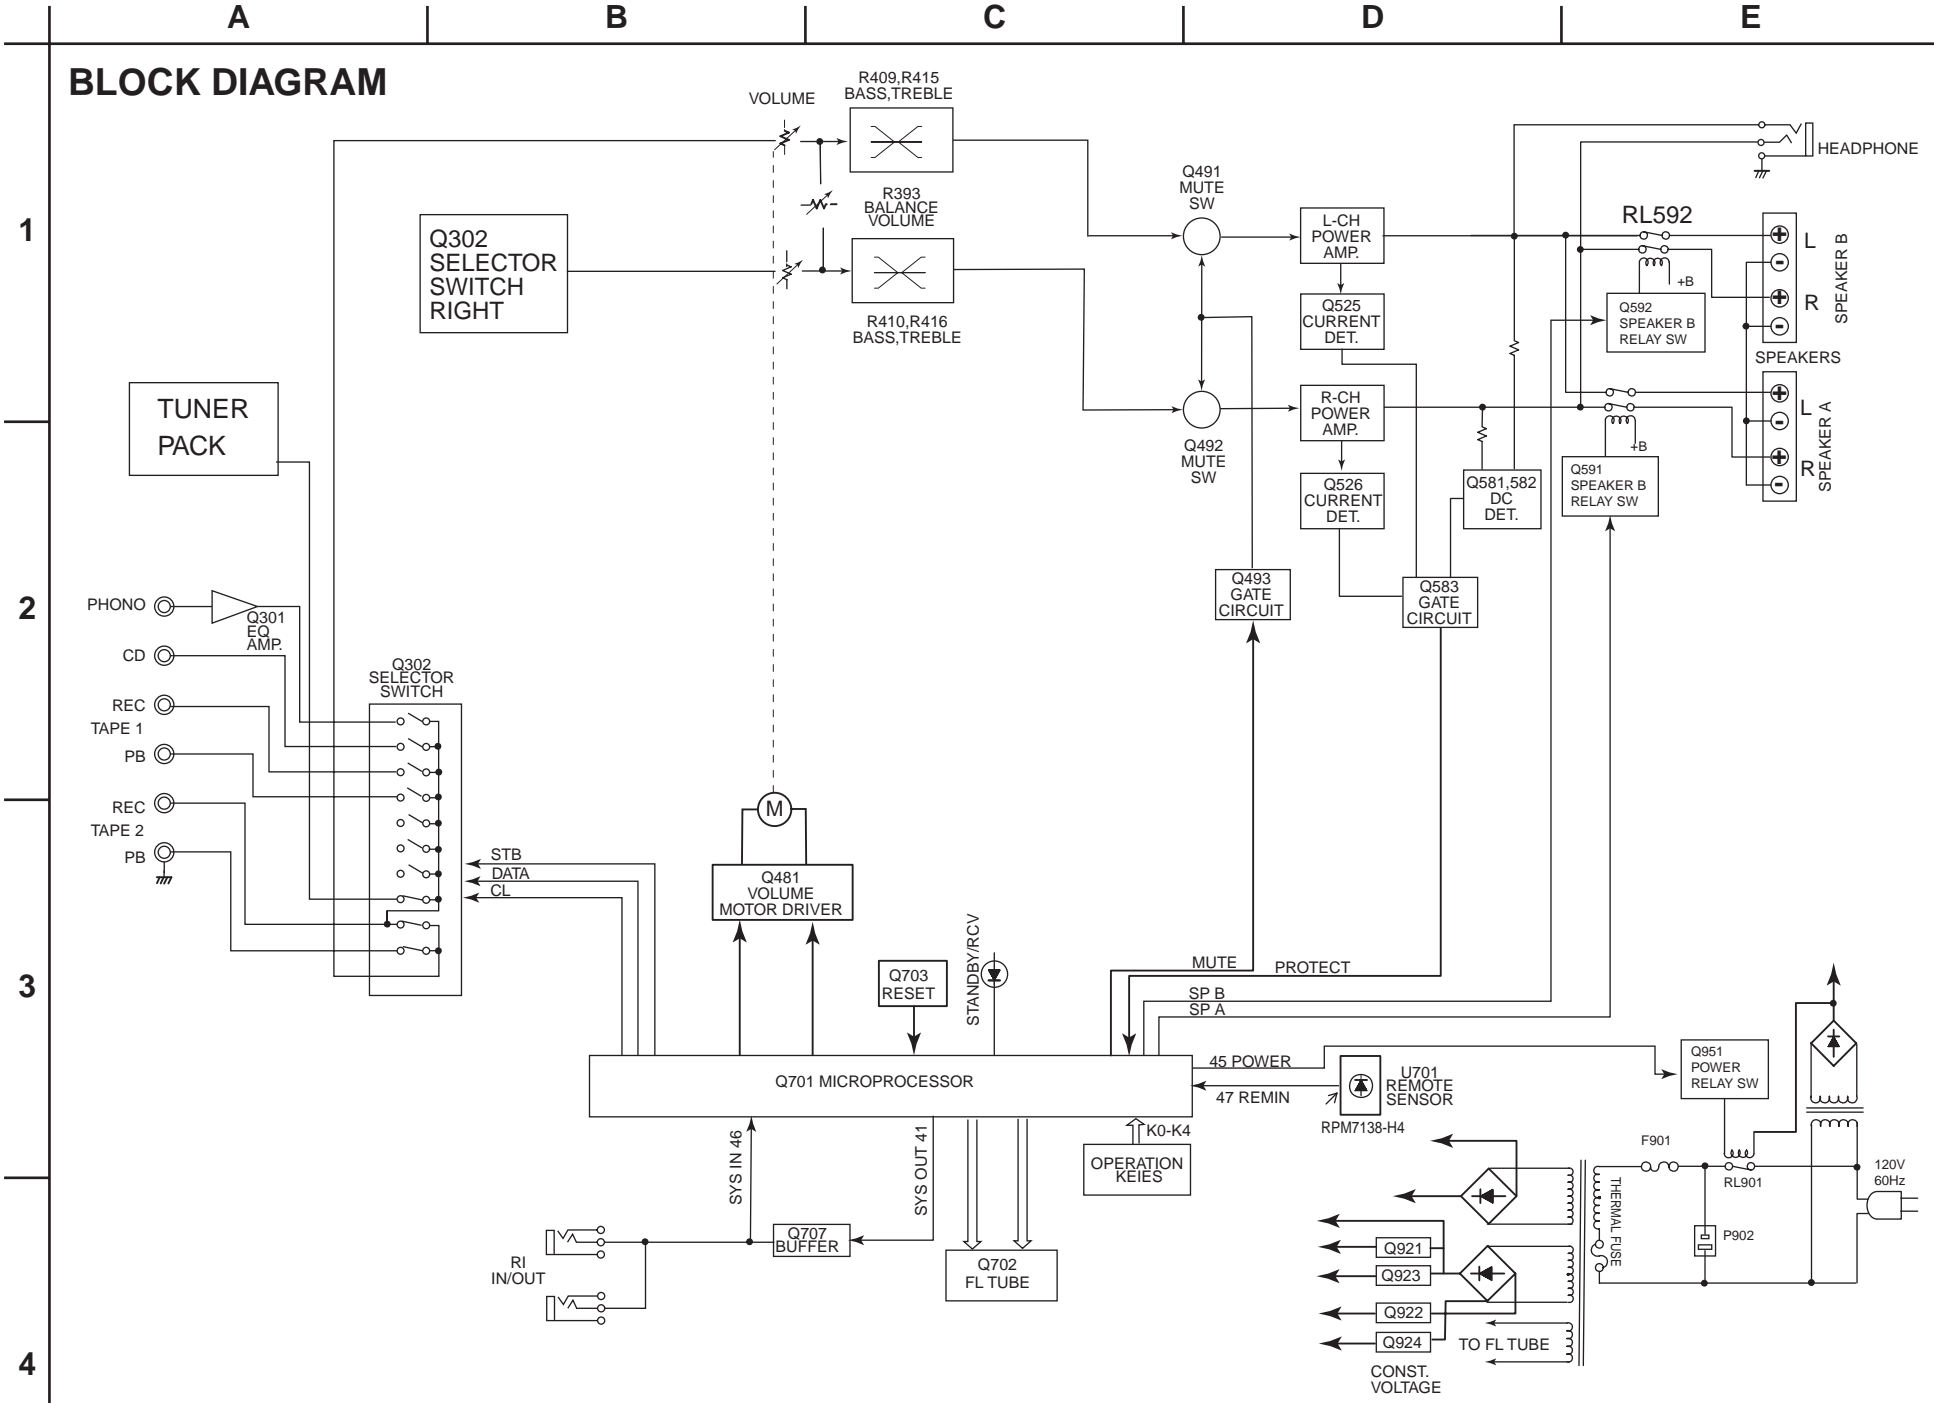

**SCHEMATIC DIAGRAM 1**  
**DISPLAY SECTION**


1

2

3

4

5

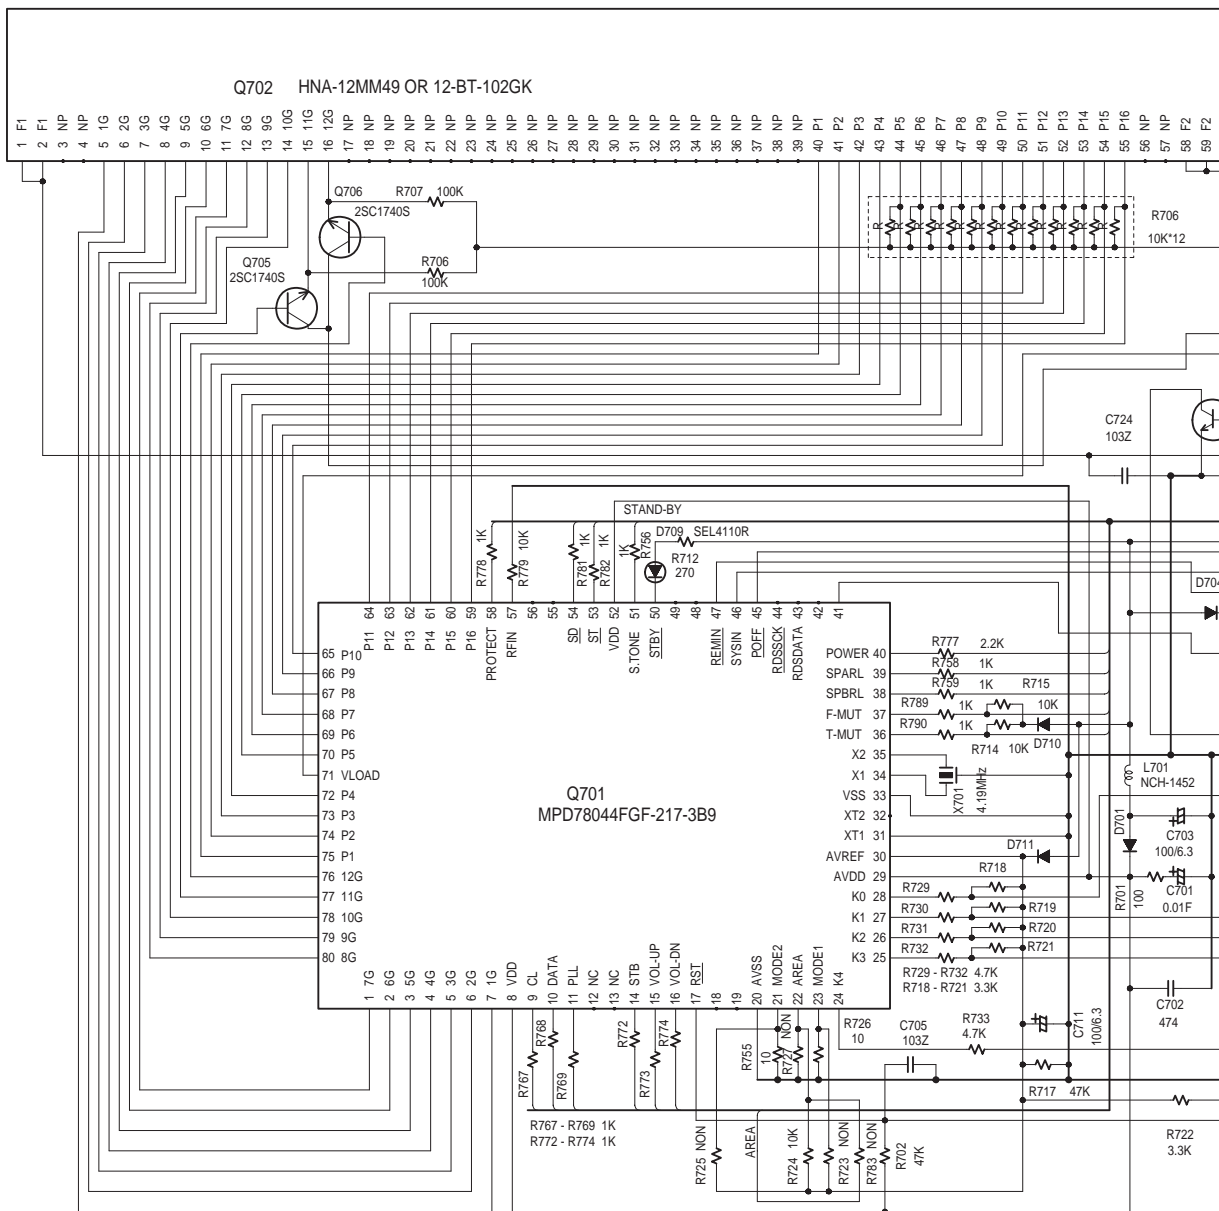

**NOTE**

- THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS () ARE IN  $\mu$ F/WV.
- ALL CAPACITORS ARE IN pF/50V/V UNLESS OTHERWISE NOTED.  
EX) 030k9pF 330x33pF 331x330pF 333x0.033uF
- ALL RESISTORS ARE IN OHMS 1/4WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.  
EX) PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

**CAUTION**



FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.

**ATTENTION**



AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMME INDIQUE.




THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL



CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA OÙ LE PRESENT SYMBOLE EST APPOSE.

**SCHEMATIC DIAGRAM 1**  
**DISPLAY SECTION**

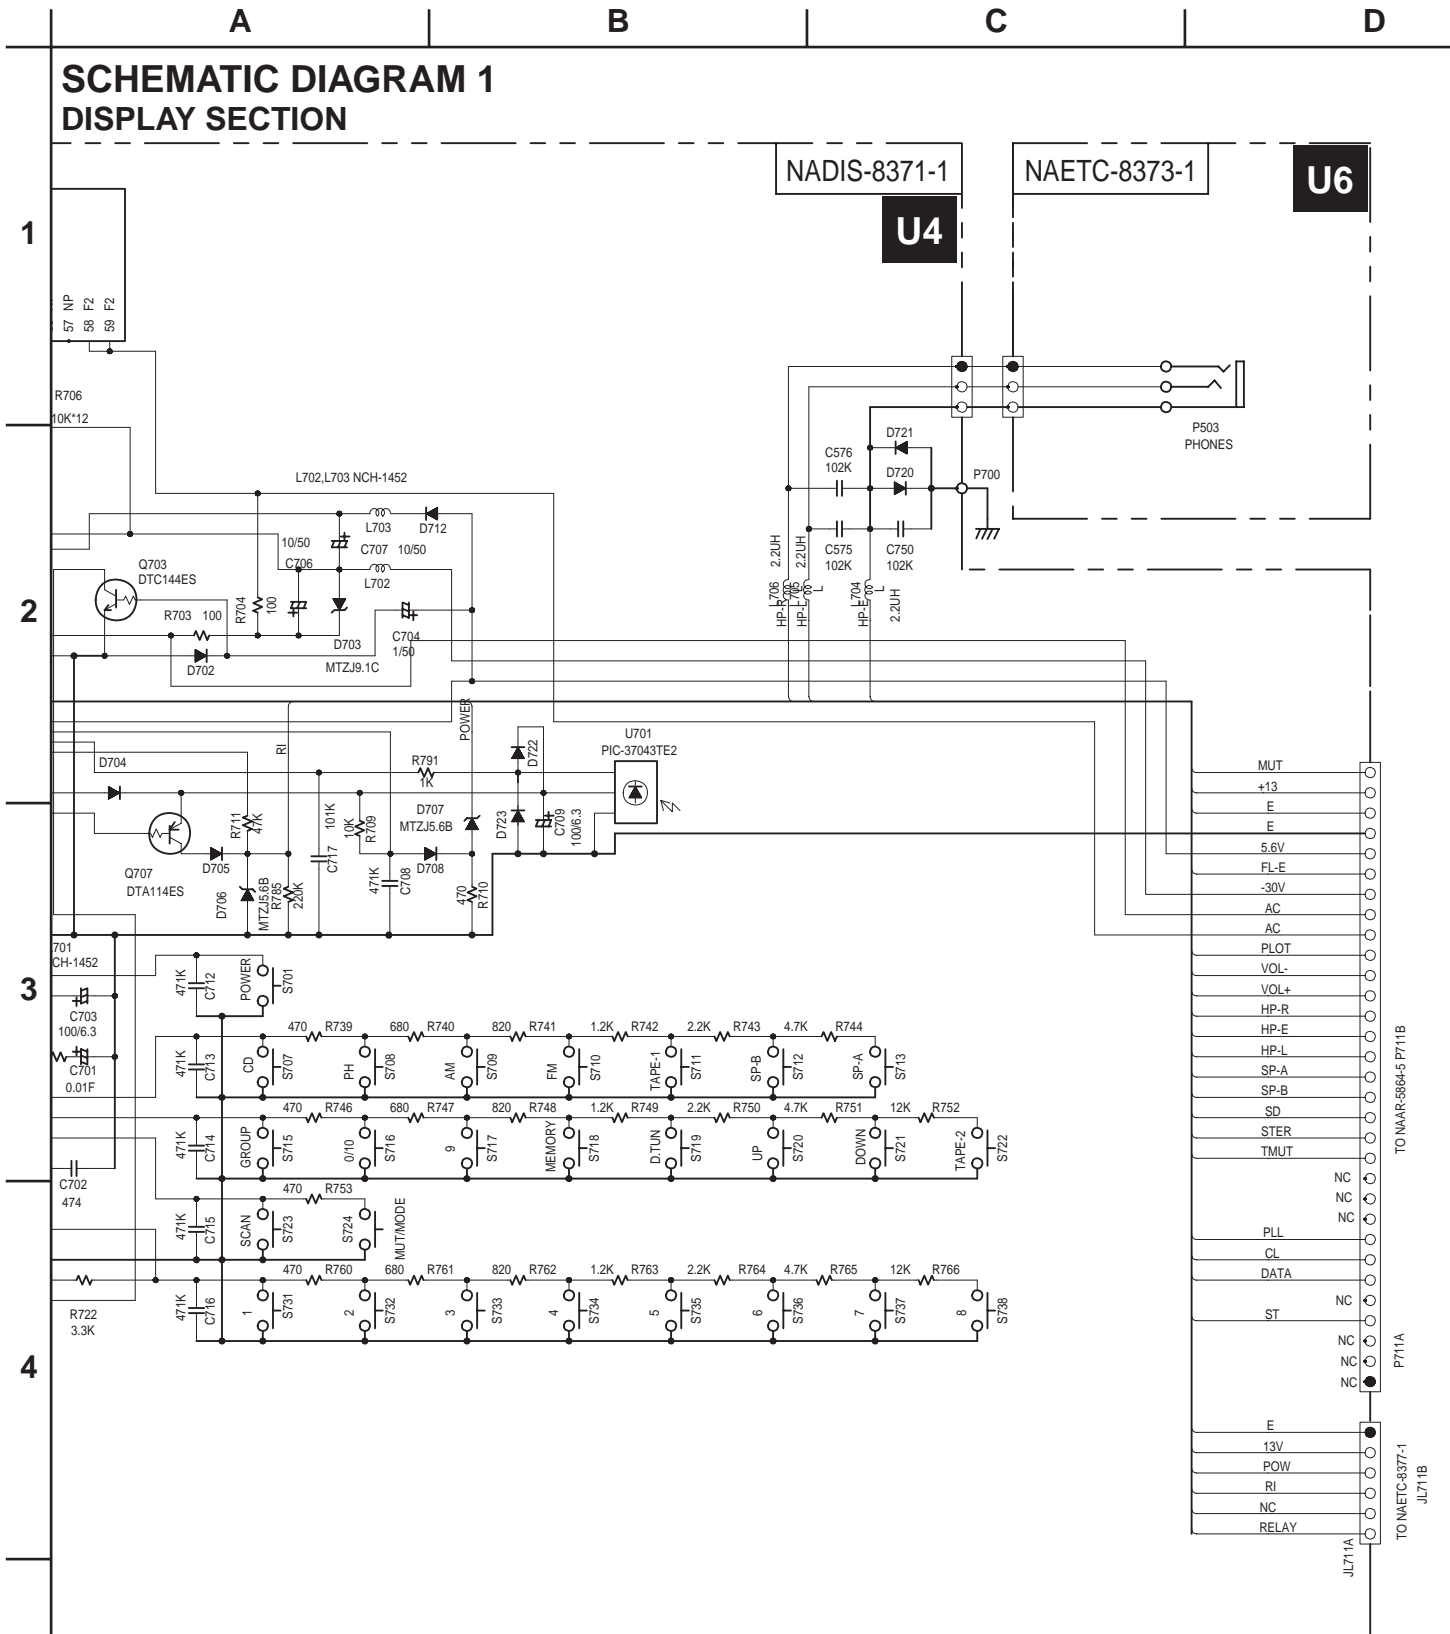

**NOTE**

- THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS () ARE IN uF/VV.
- ALL CAPACITORS ARE IN pF/50V/V UNLESS OTHERWISE NOTED.  
EX) 030x3pF 330x33pF 331x330pF 333x0.033uF
- ALL RESISTORS ARE IN OHMS 1/4WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.  
EX) PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

**CAUTION**

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.



**ATTENTION**

AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMME INDIQUE.



THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL



CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA OÙ LE PRESENT SYMBOLE EST APPOSE.

TO NAAR-5664-5 P711B  
P711A  
TO NAETC-8377-1 JLT71B

# SCHEMATIC DIAGRAM 2 AMPLIFIER SECTION

A B C D


1

2

3

4

5

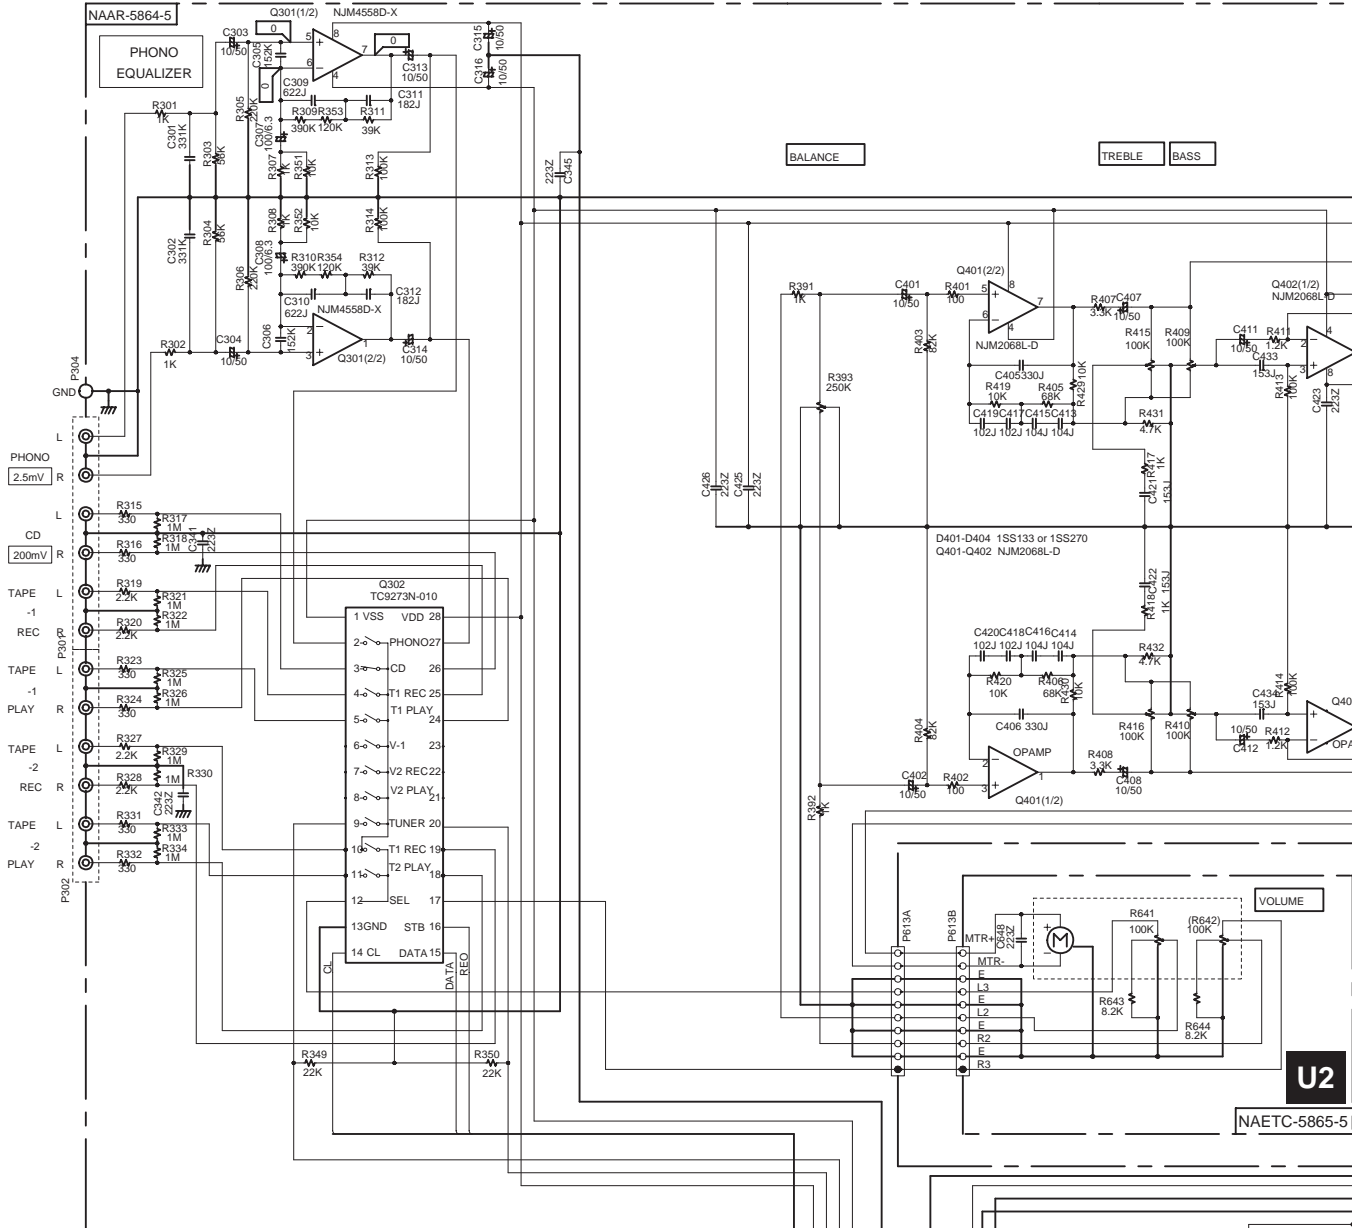

**CAUTION**  
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.


**ATTENTION**  
AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMMME INDIQUE.

THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.

CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST E LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA QU LE PRESENT SYMBOLE EST APPOSE.


**NOTE**

- THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS () ARE IN uF/MV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
- EX) 030x3pF 330x33pF 331x330pF
- ALL RESISTORS ARE IN OHMS 1/4W/5% UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- EX) PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

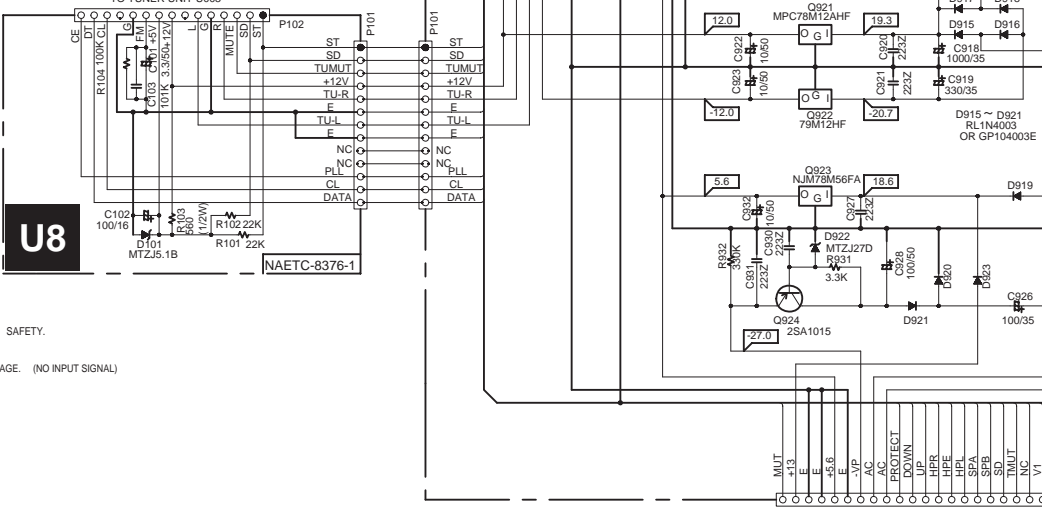



# SCHEMATIC DIAGRAM 2 AMPLIFIER SECTION

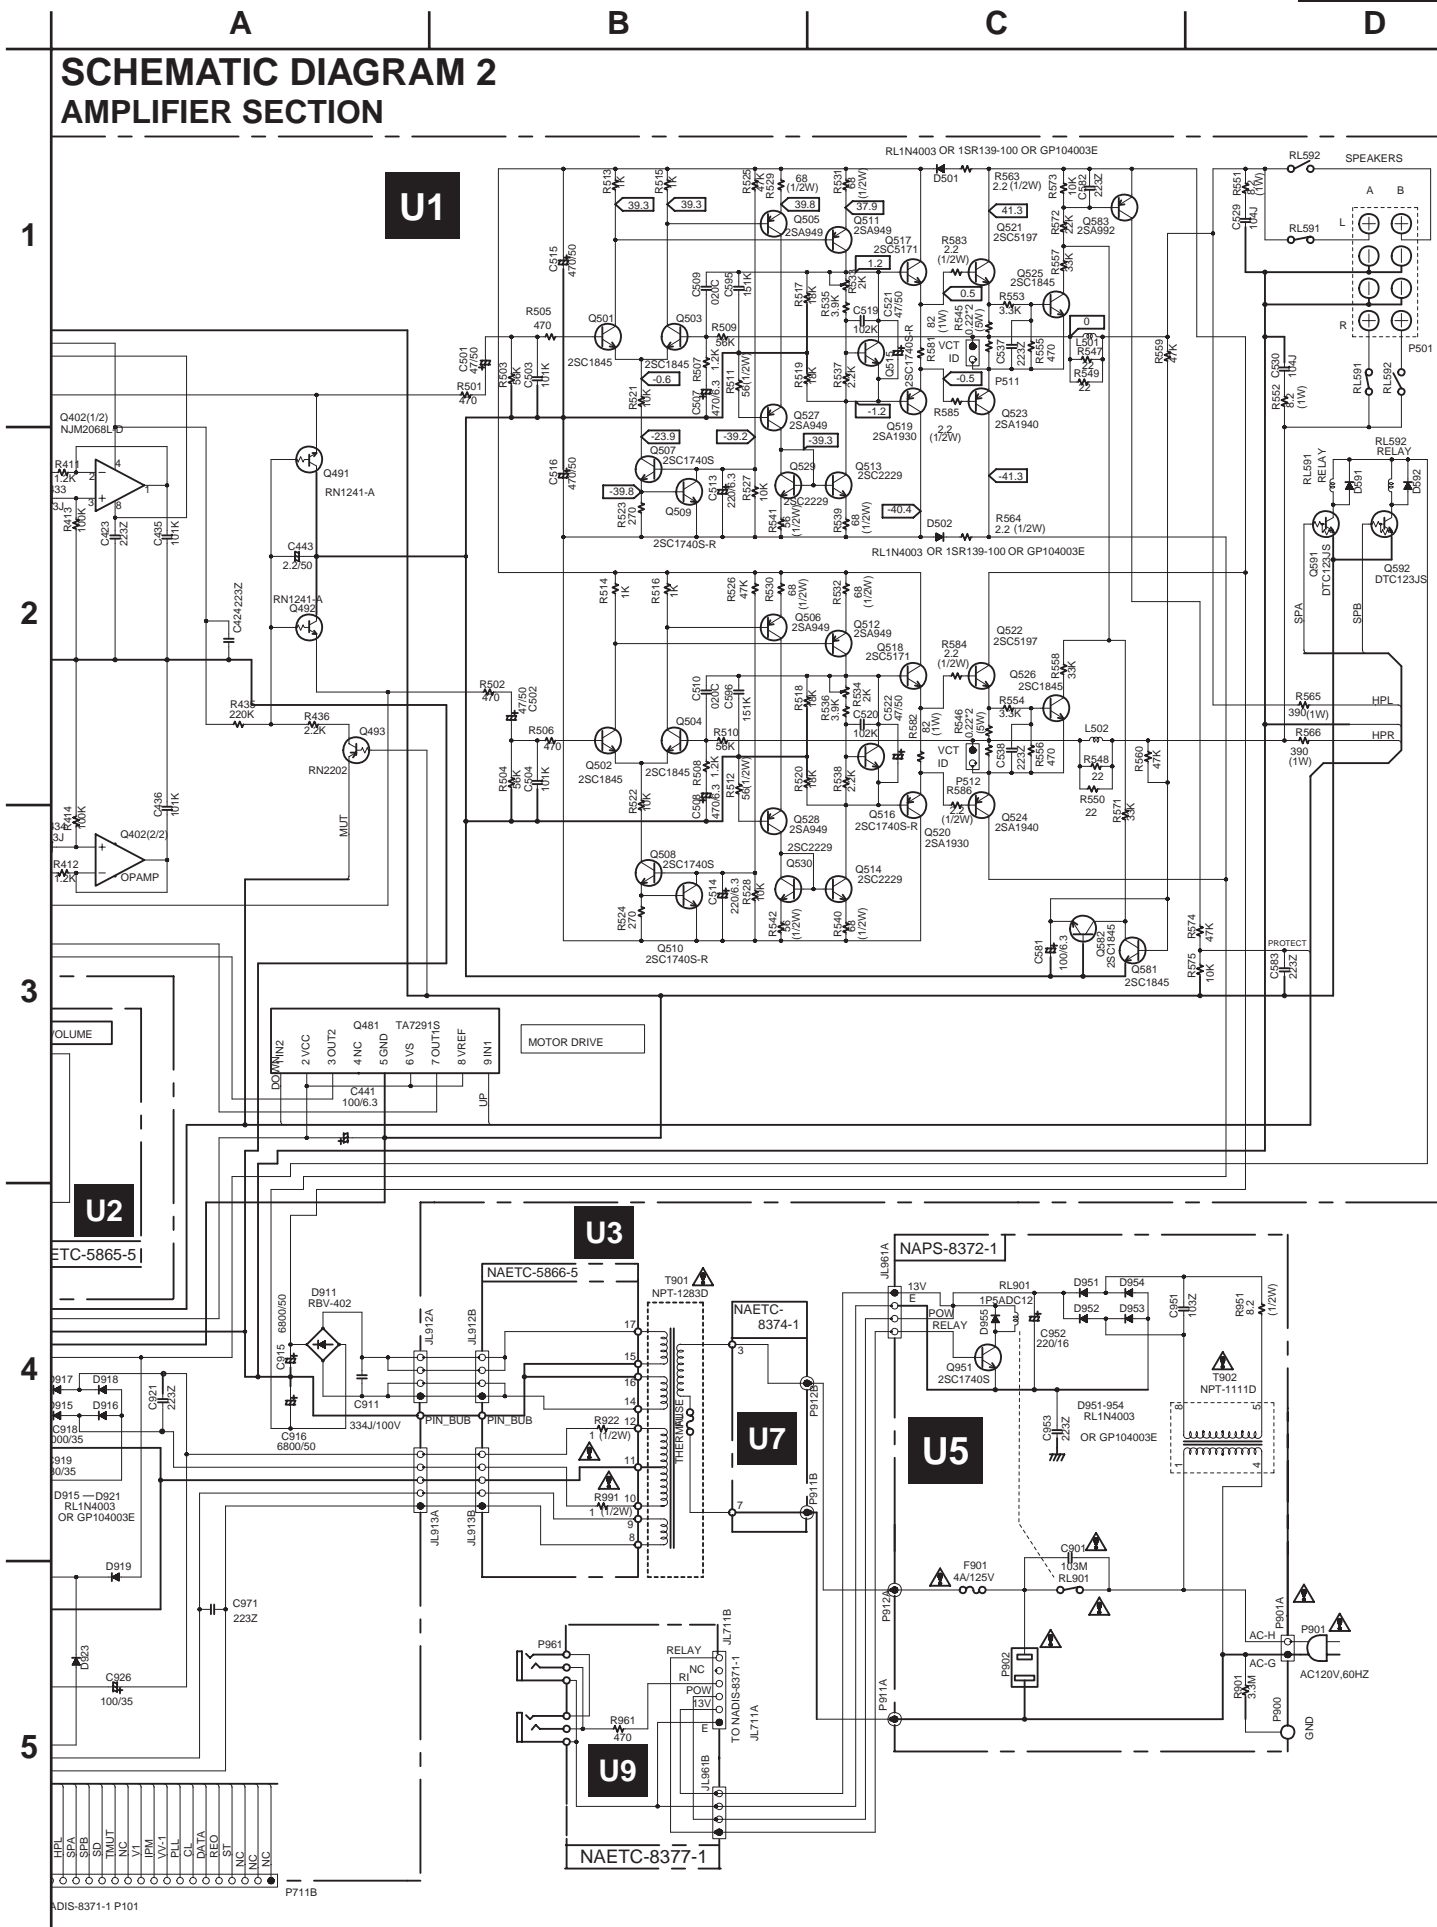

# SCHEMATIC DIAGRAM 1 DISPLAY SECTION


1

2

3

4

5

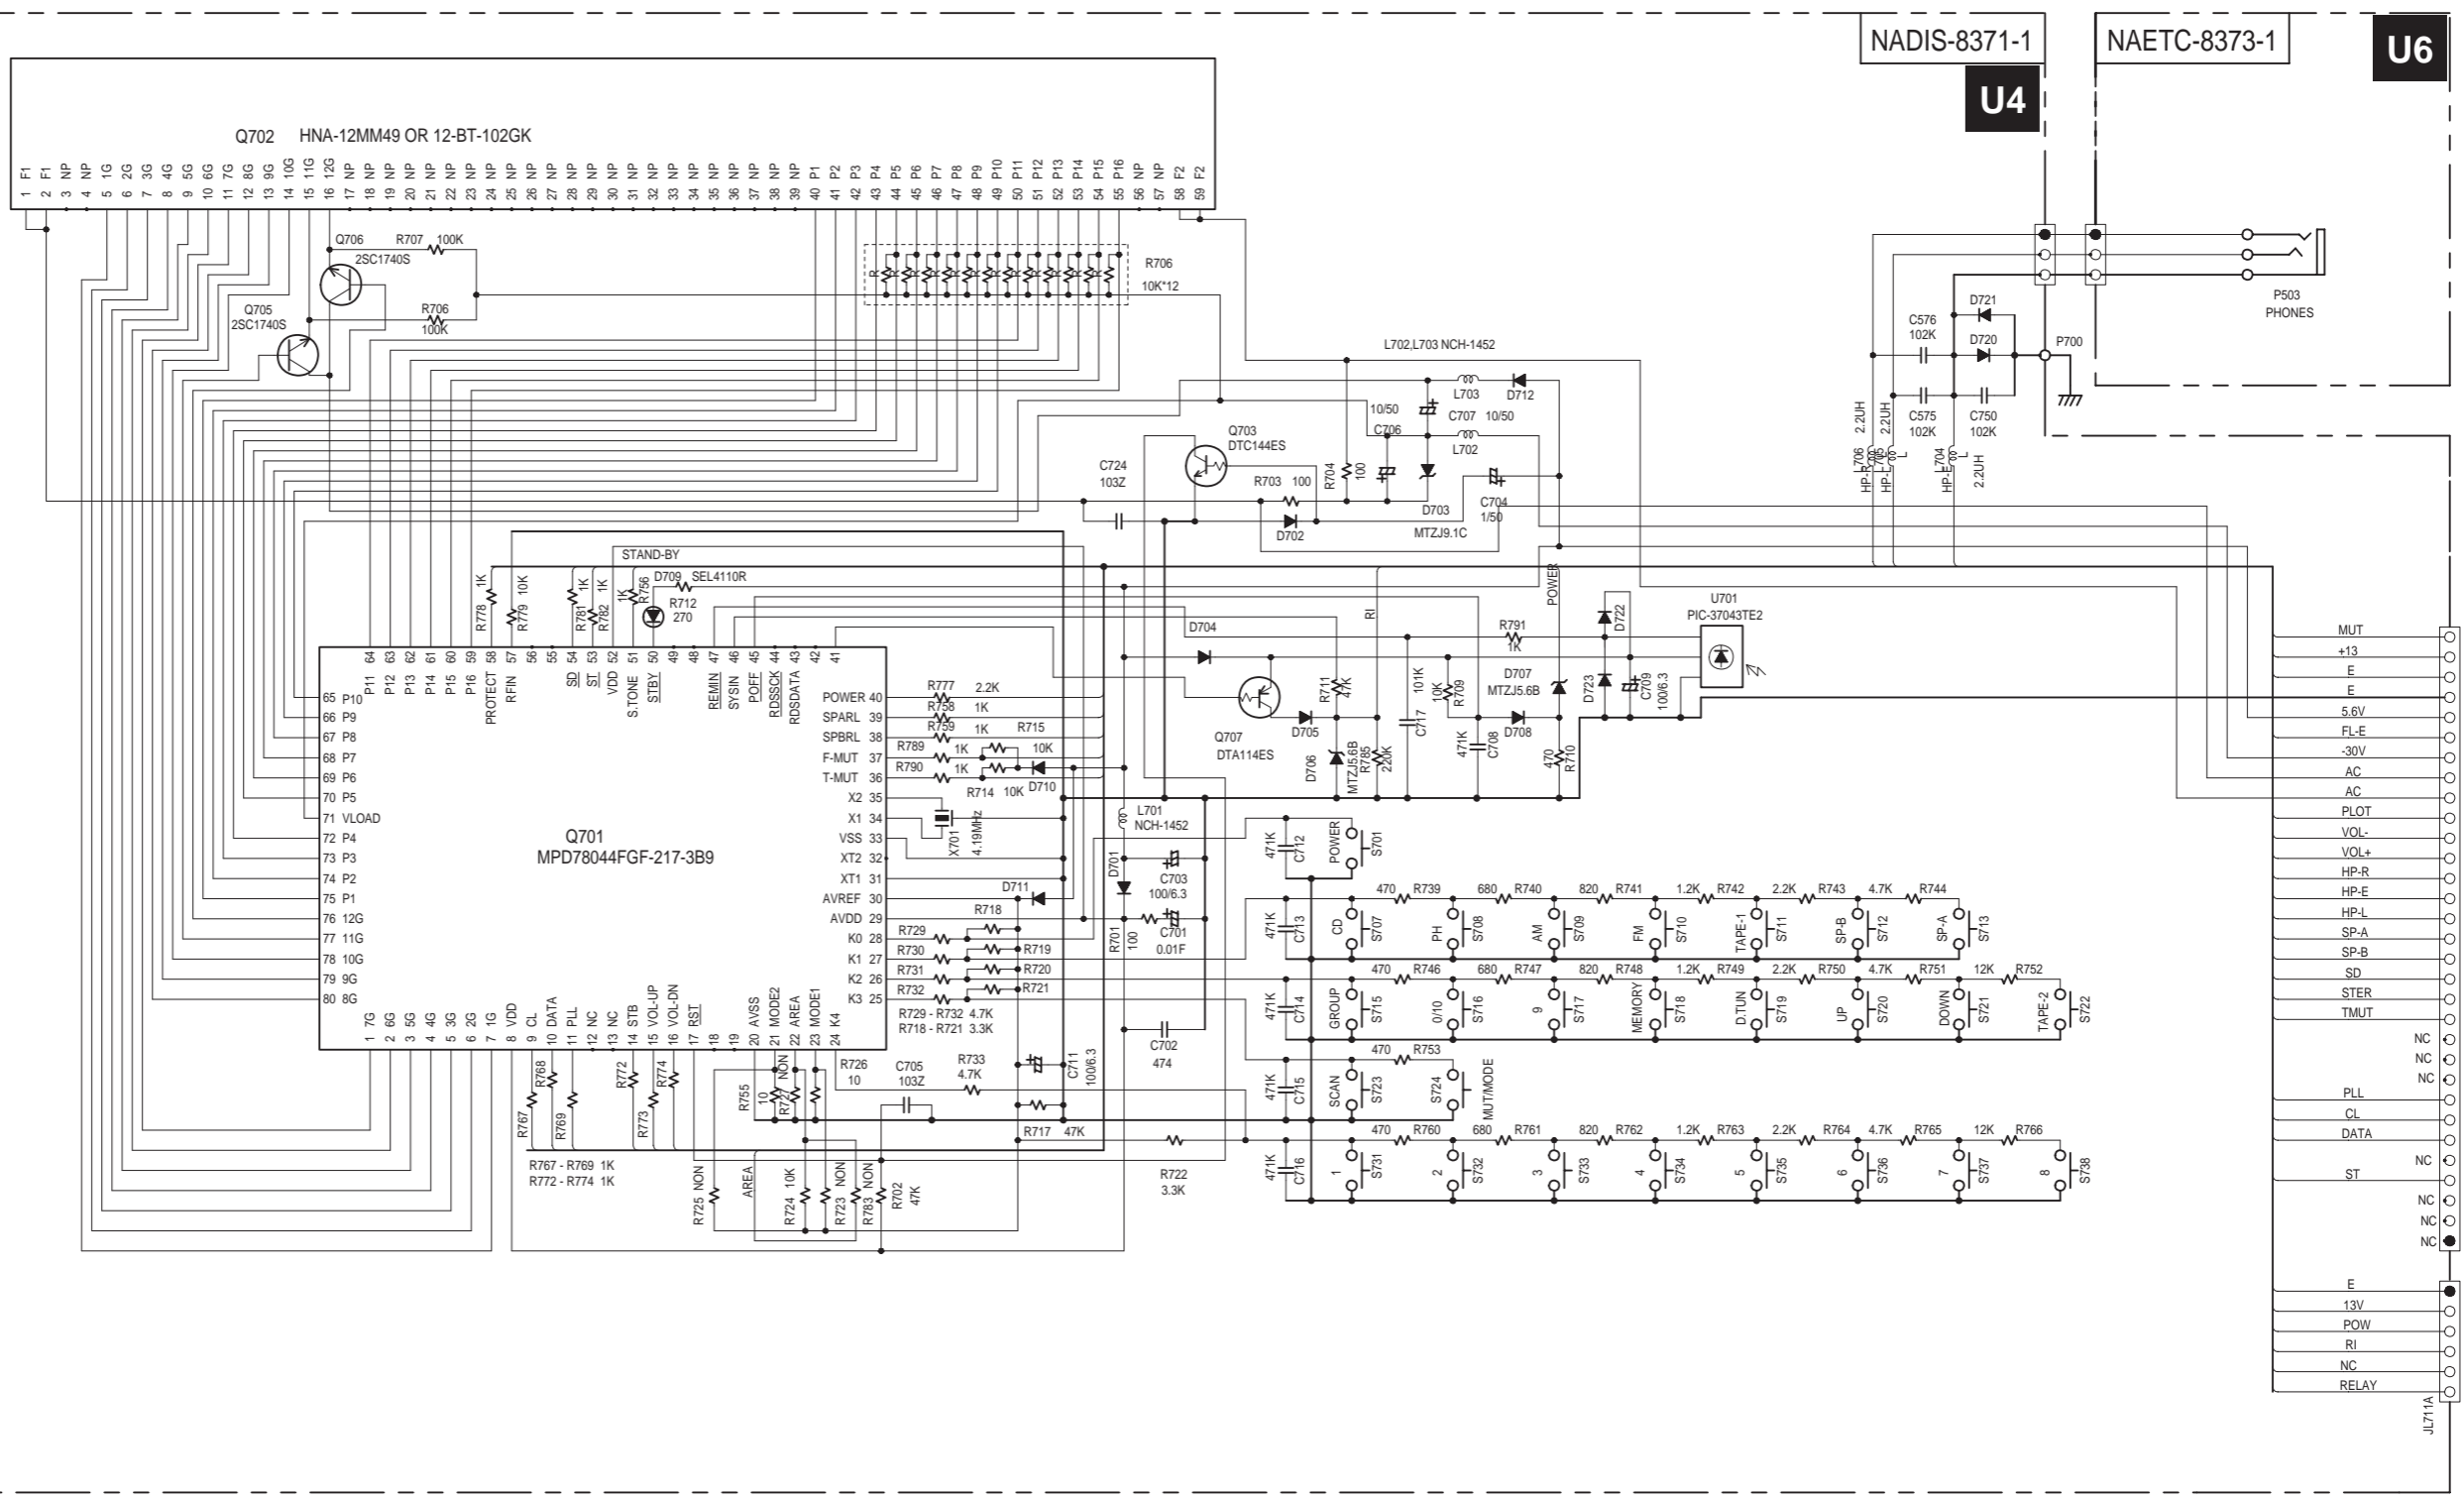

**NOTE**

- THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS () ARE IN uF/WV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED.
- EX) 030x3pF 330x33pF 331x330pF 333x0.033uF
- ALL RESISTORS ARE IN OHMS 1/4WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- EX) PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

**CAUTION**


FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH FUSE OF SAME TYPE AND RATING INDICATED.

**ATTENTION**

AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE ET CALIBRATION COMME INDIQUE.


THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.

CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST E LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA QU LE PRESENT SYMBOLE EST APPOSE.

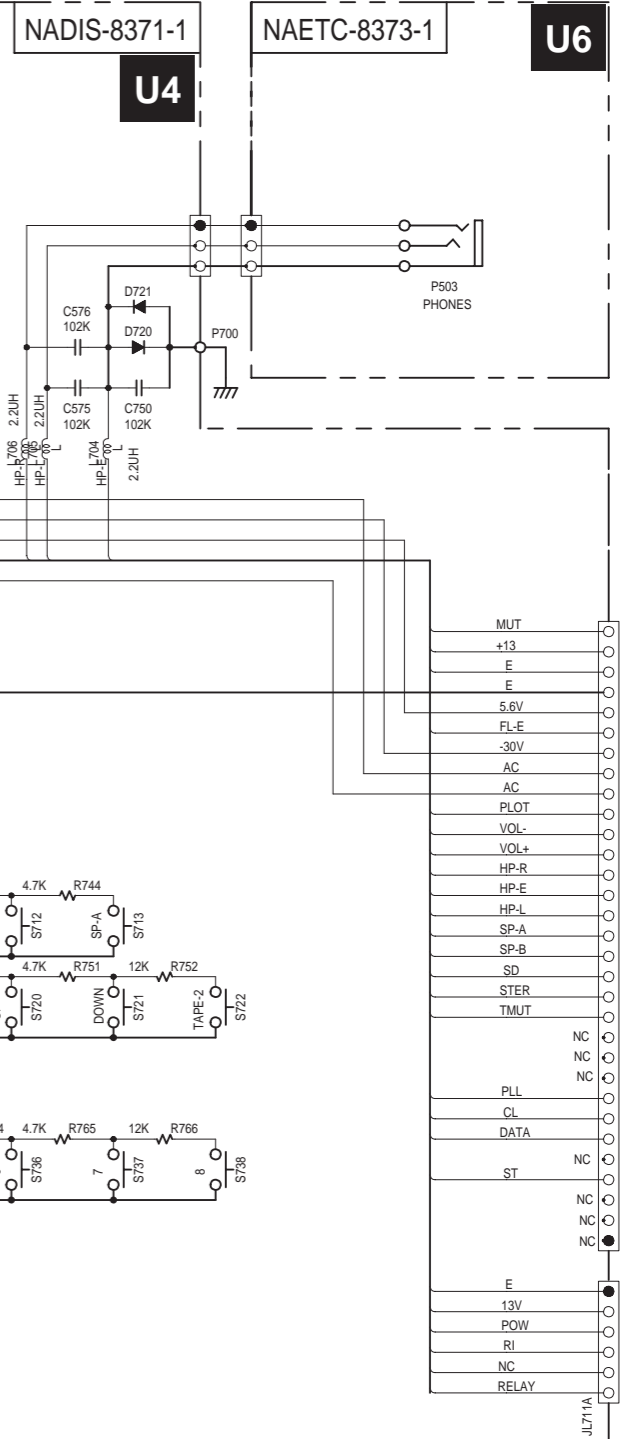

TO NAAR-8864-5 P711B  
P711A  
TO NAETC-8377-1 JL711B

# SCHEMATIC DIAGRAM 2 AMPLIFIER SECTION

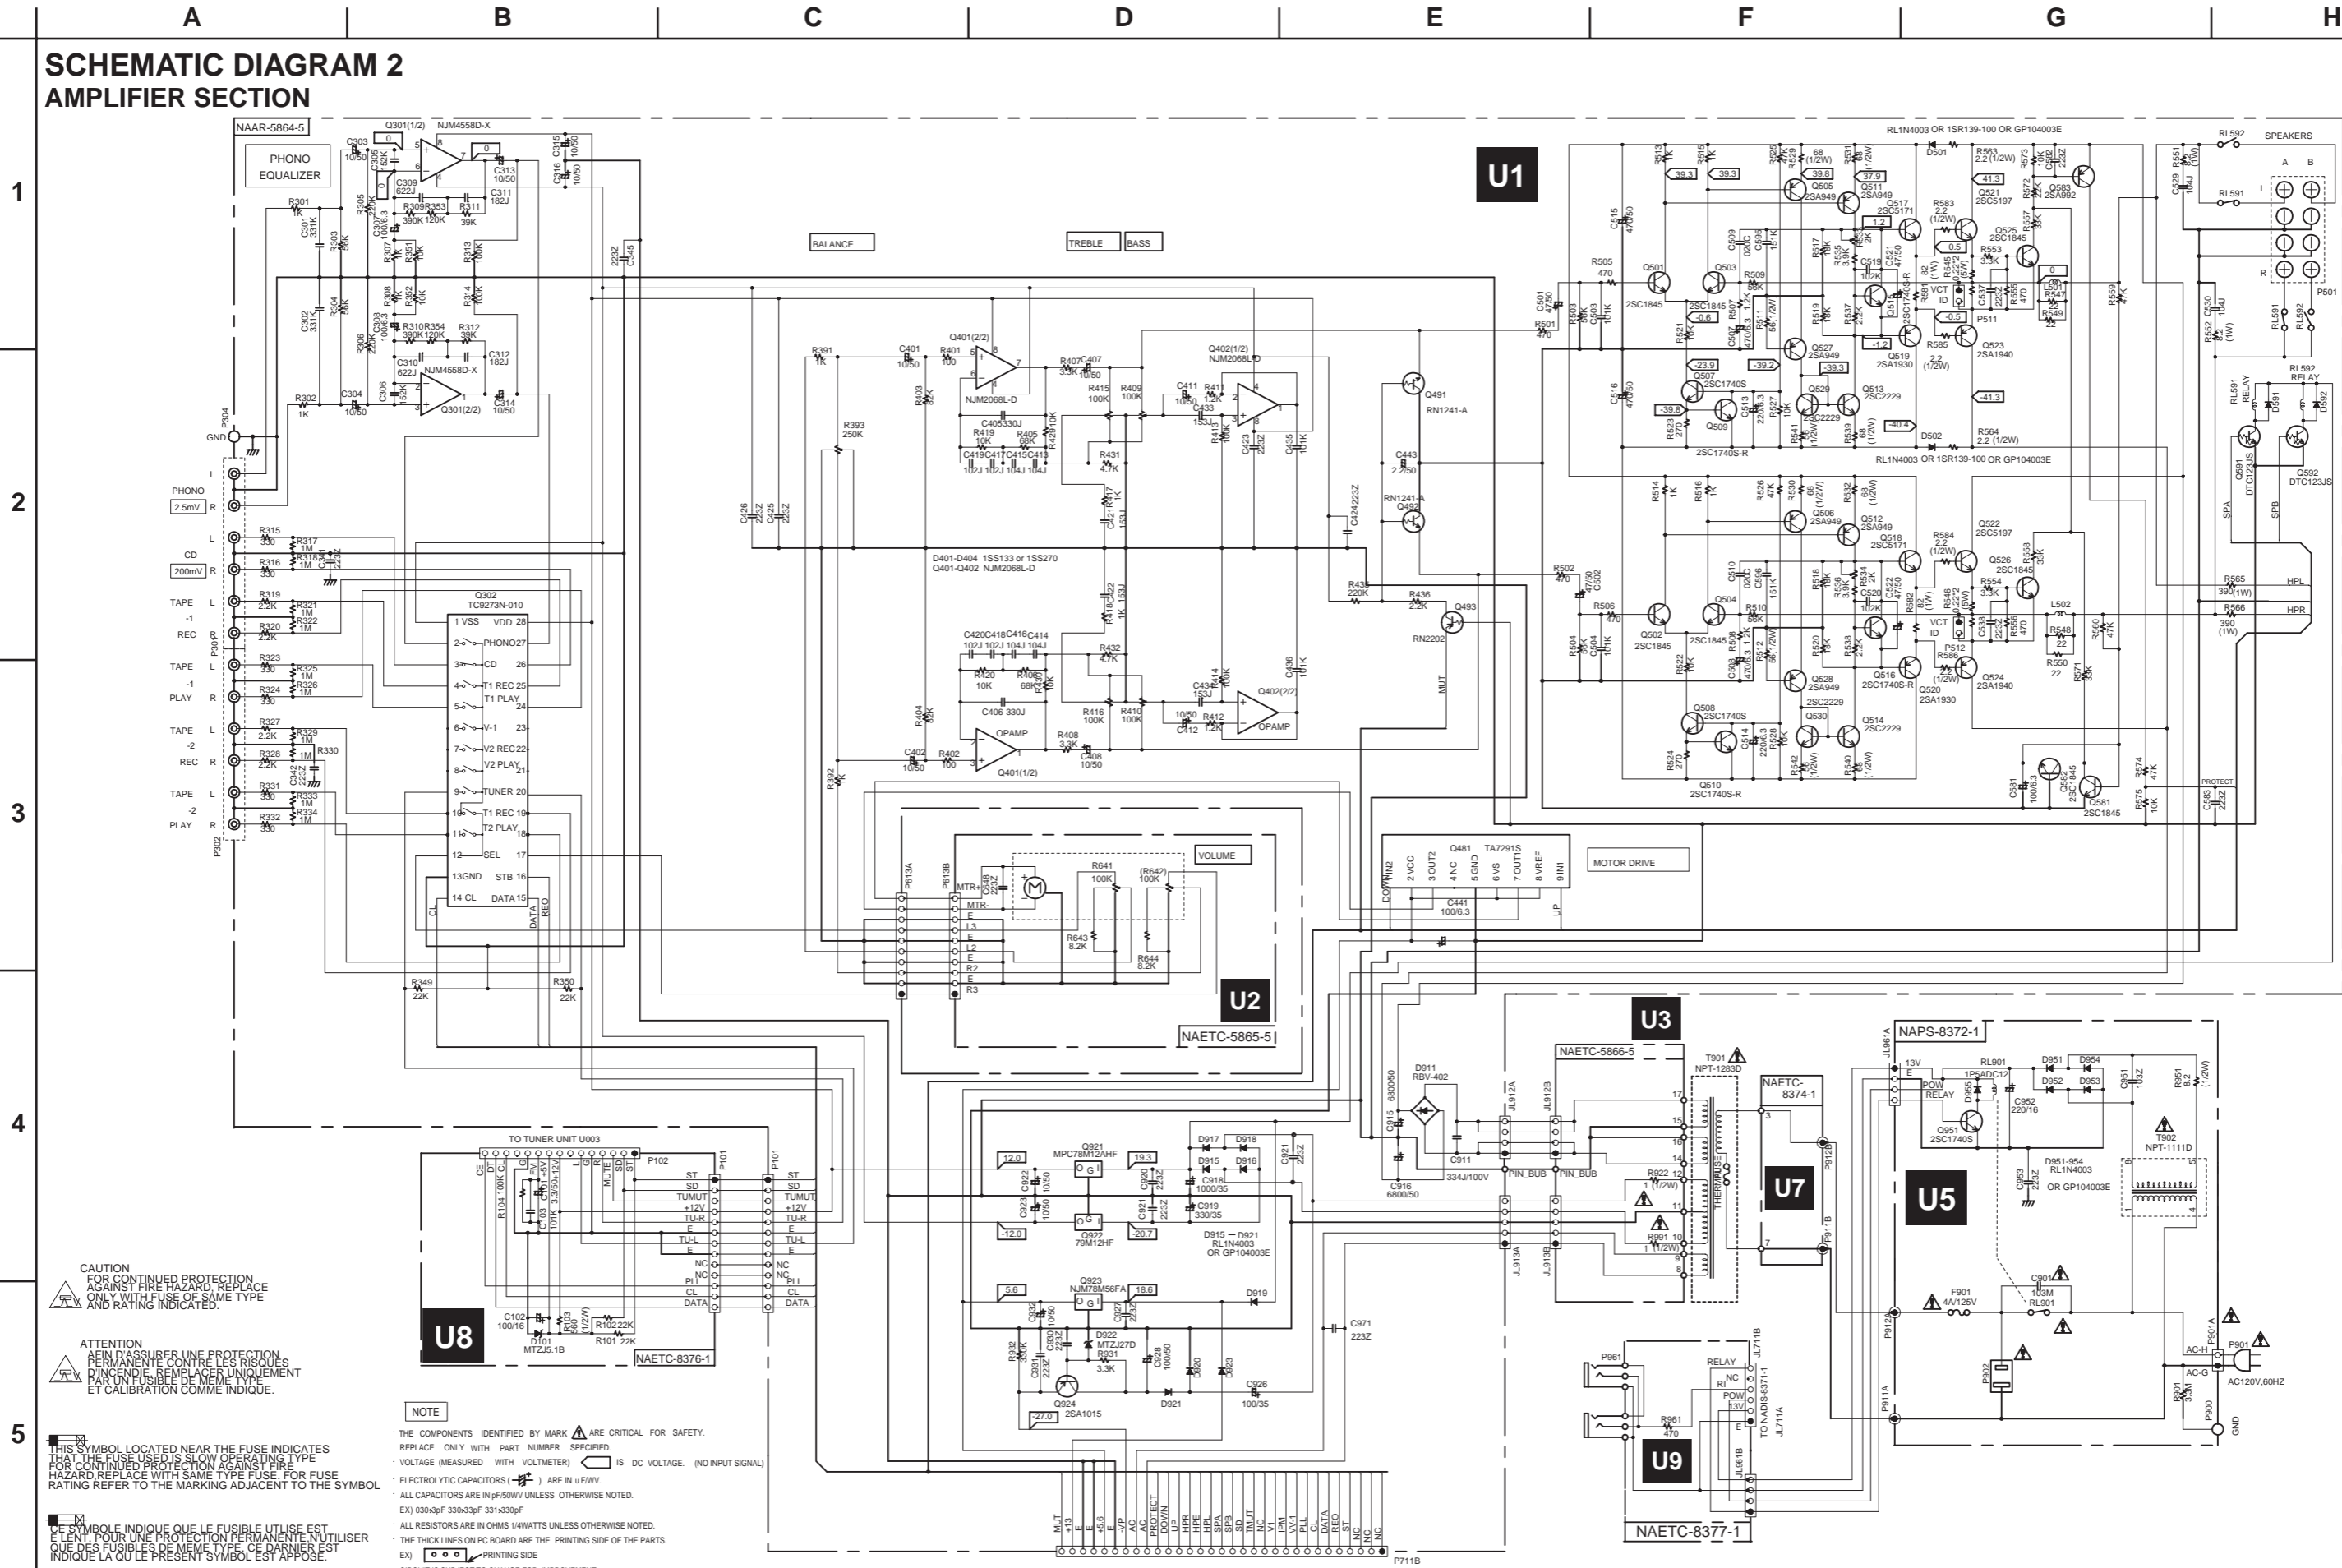

1

2

3

4

5

**CAUTION**  
FOR CONTINUED PROTECTION  
AGAINST FIRE HAZARD, REPLACE  
ONLY WITH FUSE OF SAME TYPE  
AND RATING INDICATED.


**ATTENTION**  
Afin d'assurer une protection  
d'incendie, remplacez uniquement  
par un fusible de même type  
et de même valeur.

**NOTE**

- THE COMPONENTS IDENTIFIED BY MARK ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS () ARE IN uFW.
- ALL CAPACITORS ARE IN pF UNLESS OTHERWISE NOTED.
- EX) 030x3pF 33x1x30pF
- ALL RESISTORS ARE IN OHMS 1/4Watts UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS.
- EX) PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE WITH SAME TYPE FUSE. FOR FUSE RATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.

CE SYMBOLE INDIQUE QUE LE FUSIBLE UTILISE EST LE LENT. POUR UNE PROTECTION PERMANENTE, UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST INDIQUE LA QU LE PRESENT SYMBOLE EST APPOSE.

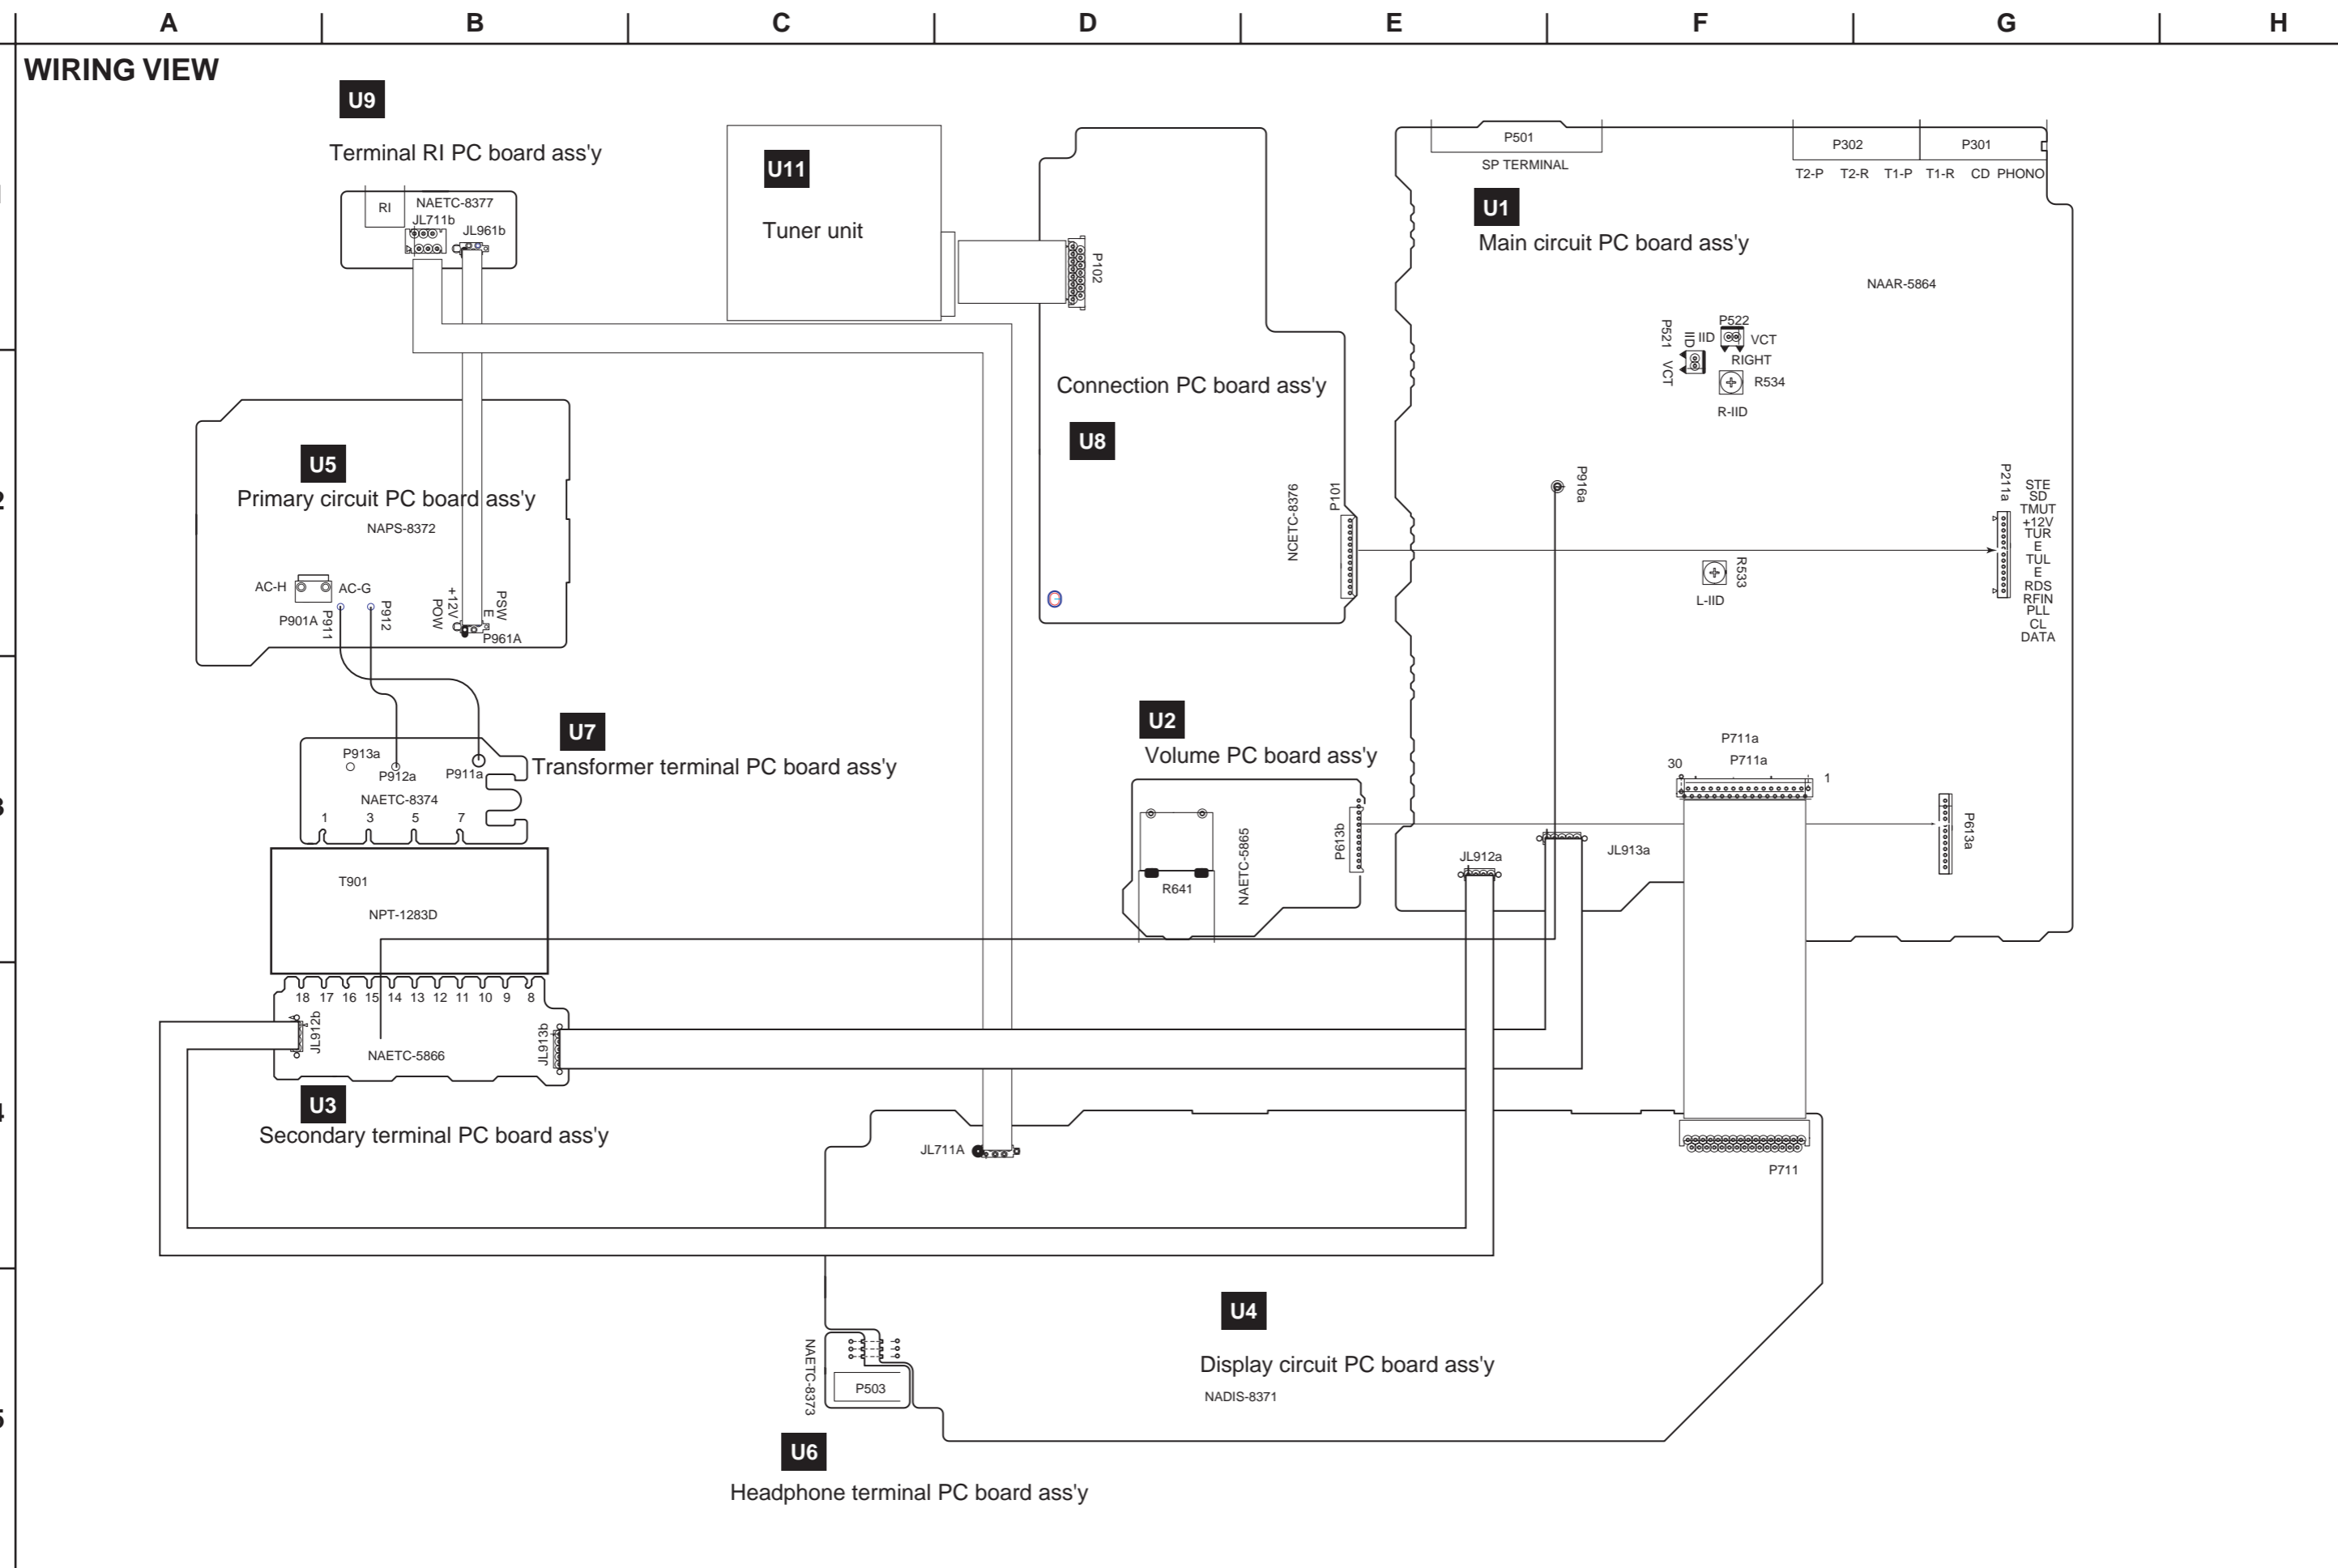


A

B

C

D

PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE

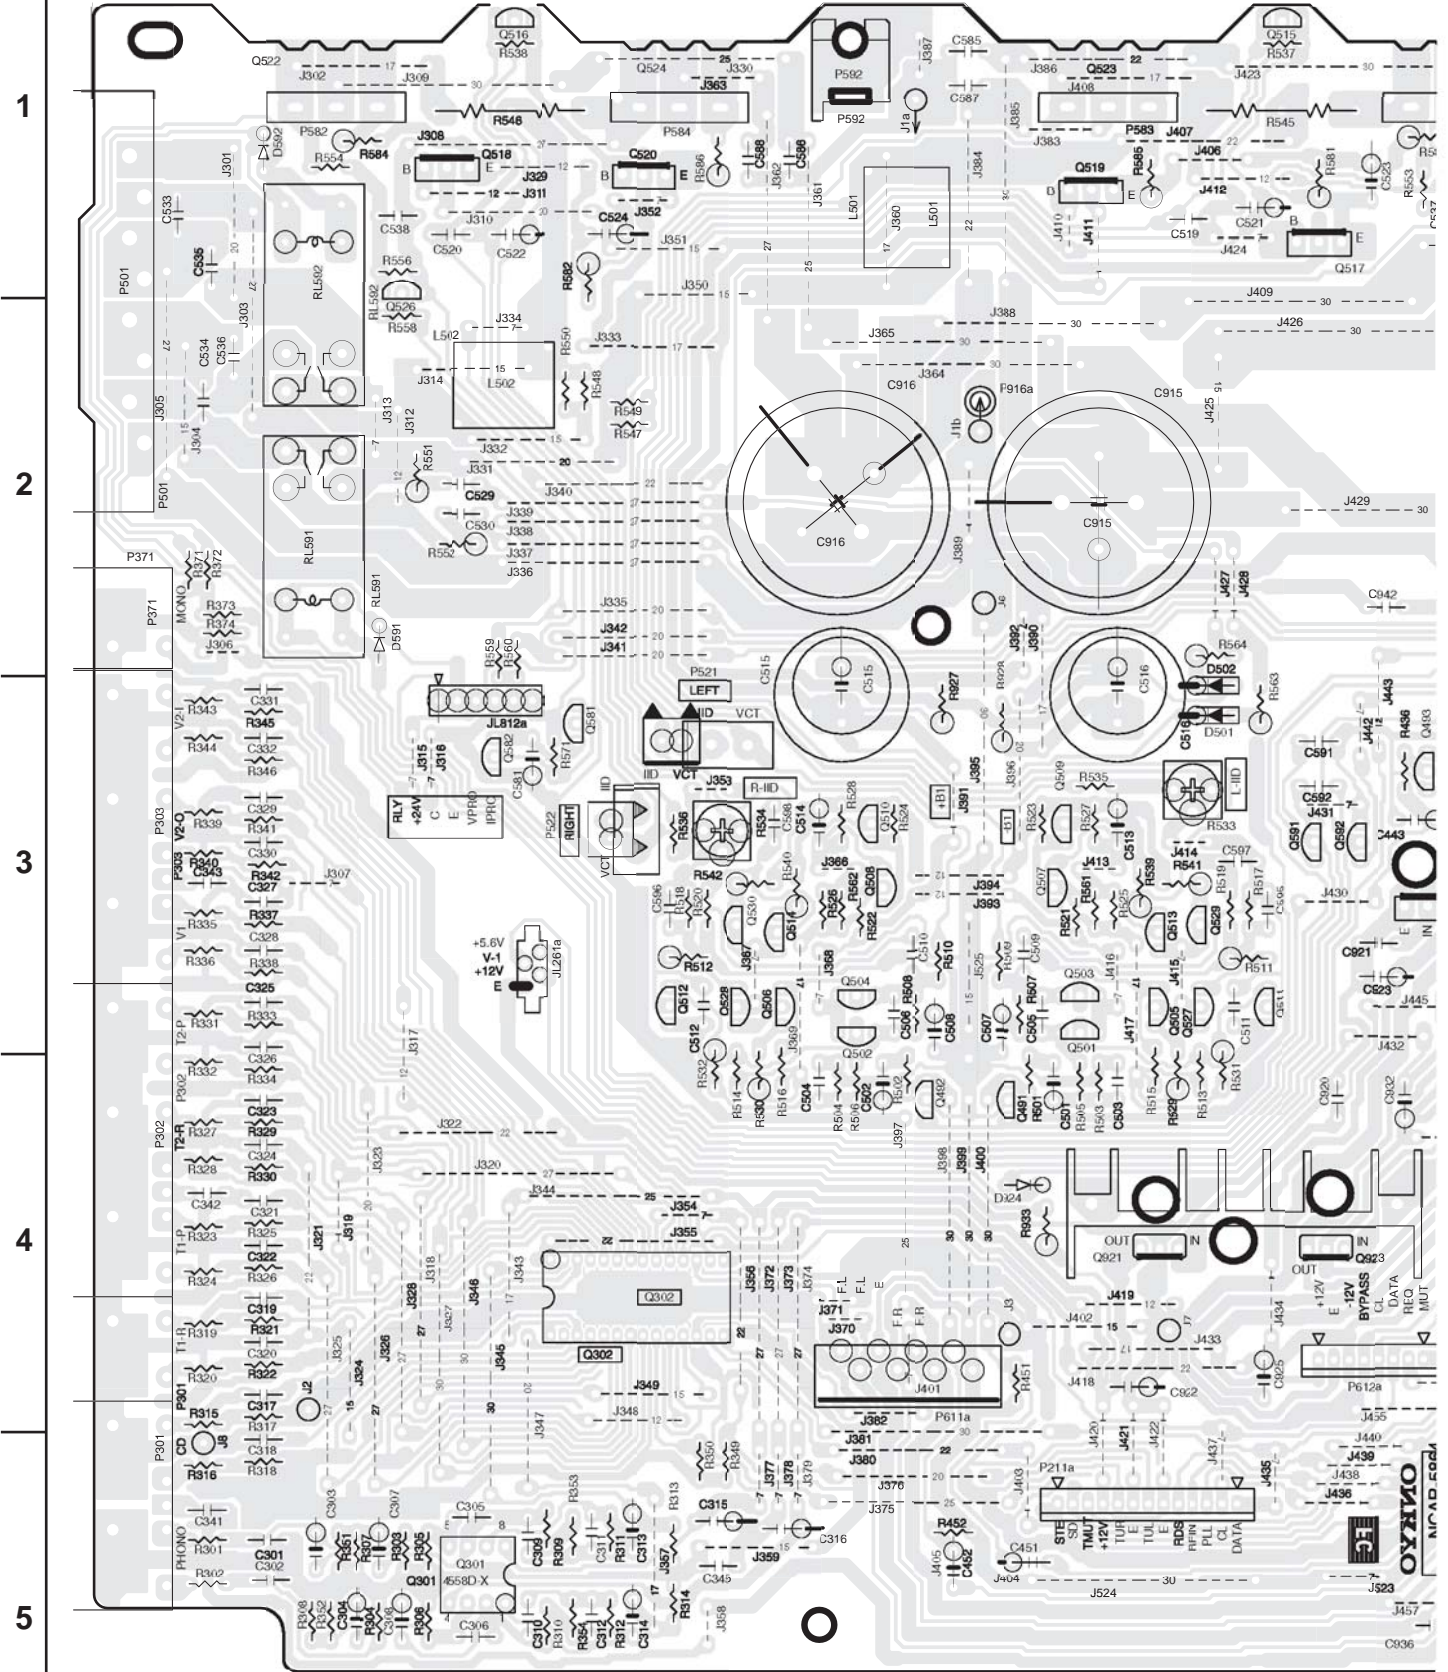

U1

NAAR-5864-5A, Main circuit PC board ass'y

A

B

C

D

PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE


1

2


3

4

5

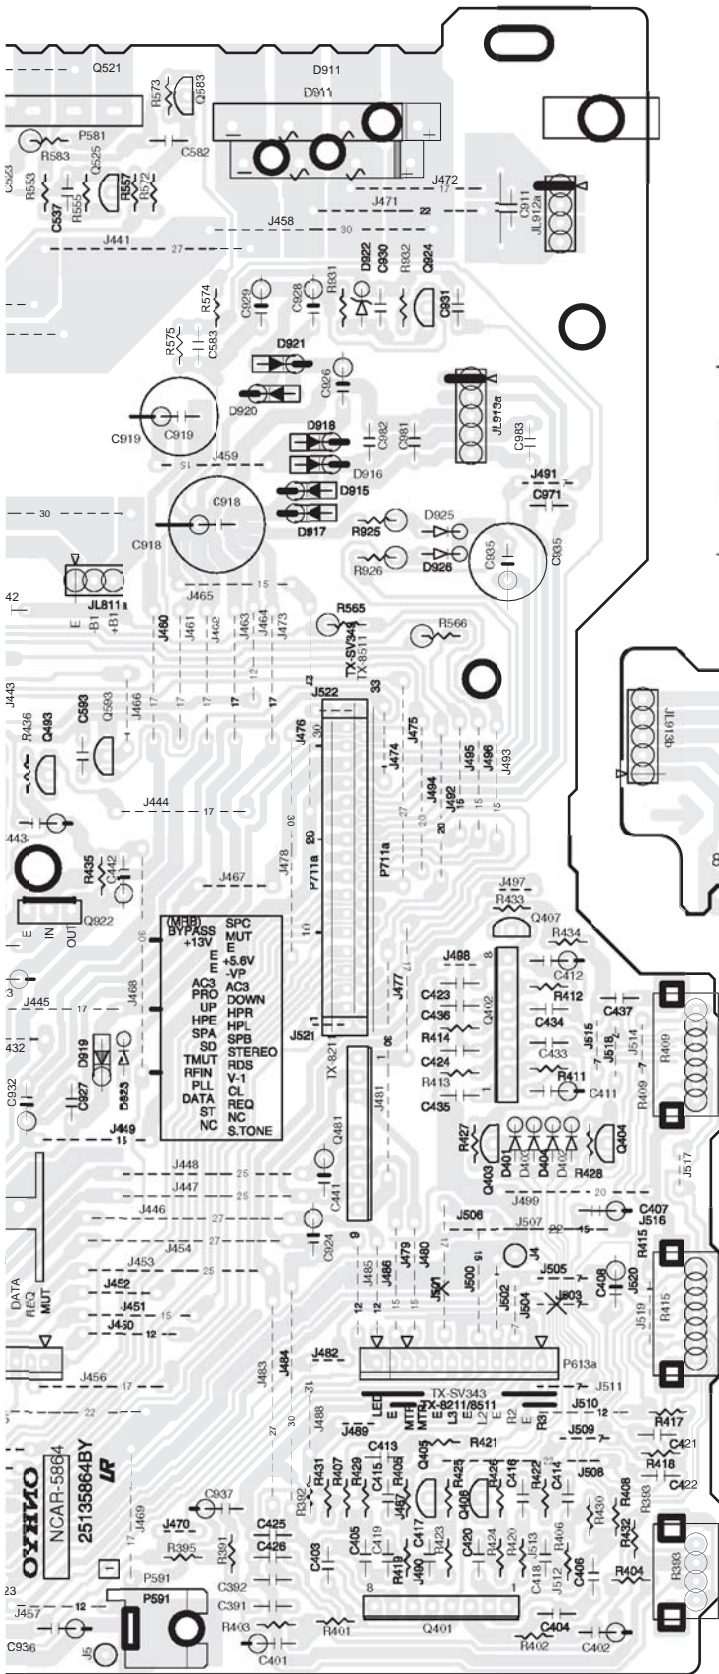


U2

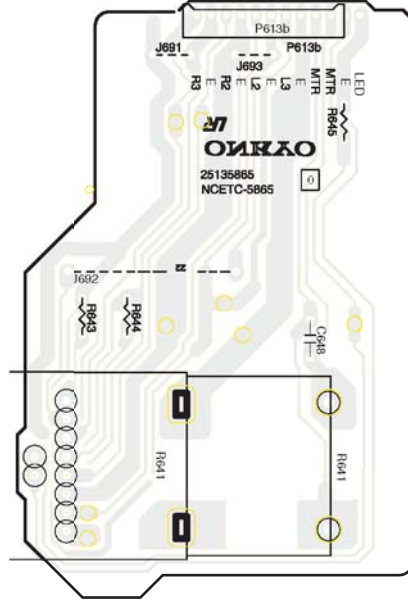

NAETC-5865-5A, Volume PC board ass'y

U3

NAETC-5866-5A, Secondary terminal PC board ass'y

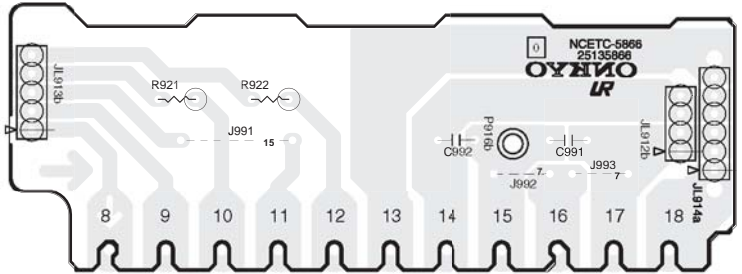

A

B


C

D

# PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE


**U6**

NAETC-8373-1A,  
Headphone terminal  
PC board ass'y

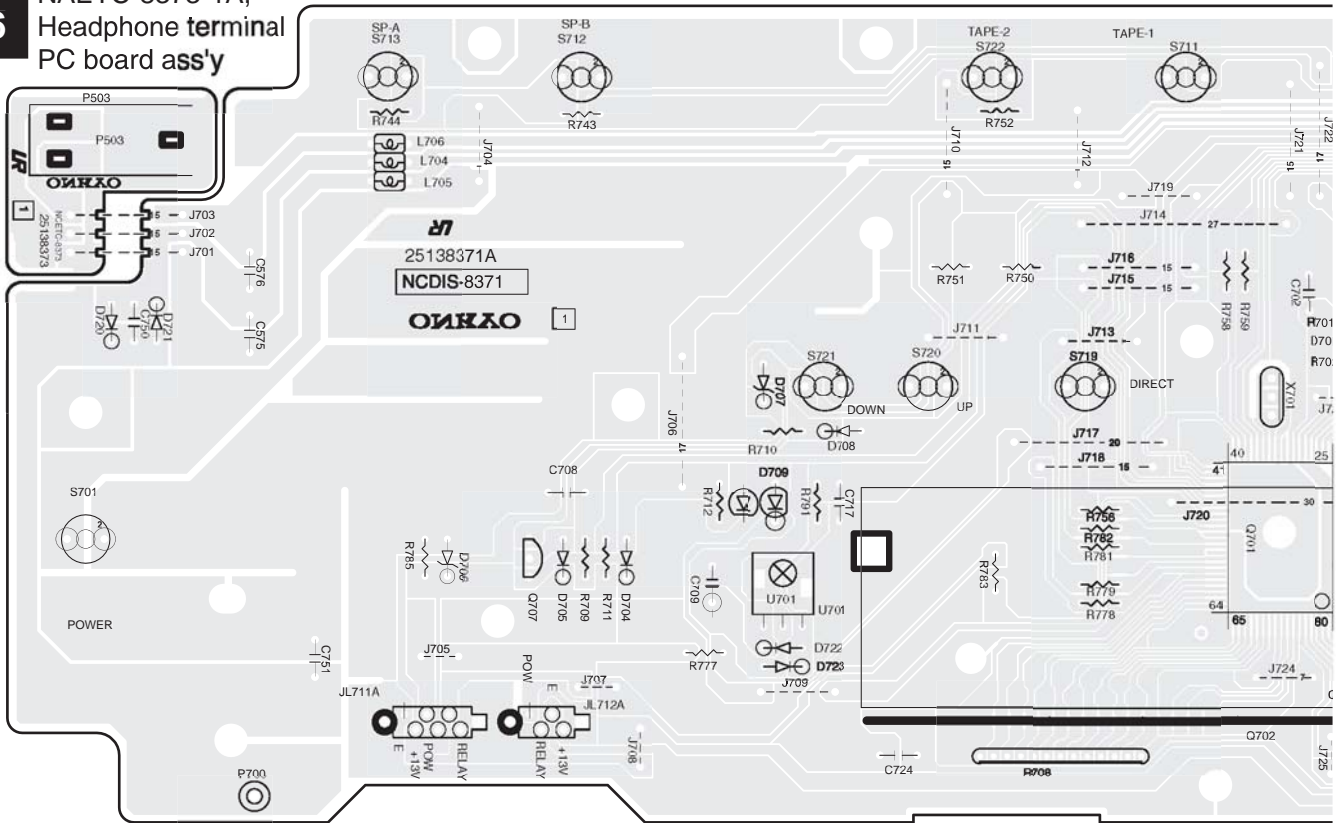


**U4**

NADIS-8371-1A, Display circuit PC board ass'y

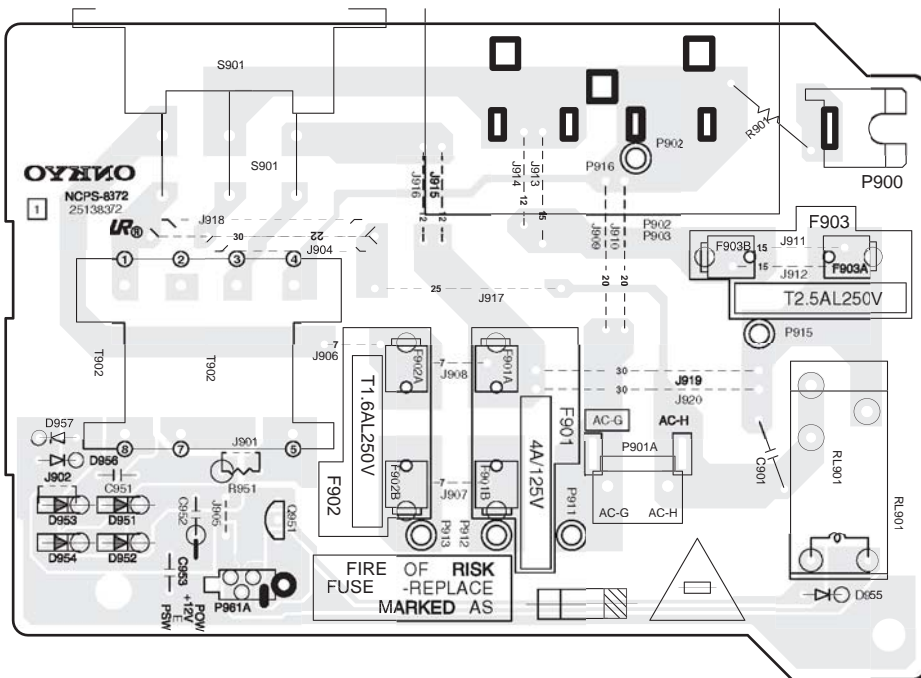


**U7**

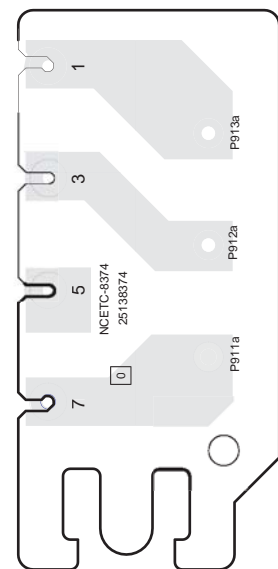

NAETC-8374-1A, Transformer  
terminal PC board ass'y


**U5**

NAPS-8372-1A, Primary circuit PC board ass'y

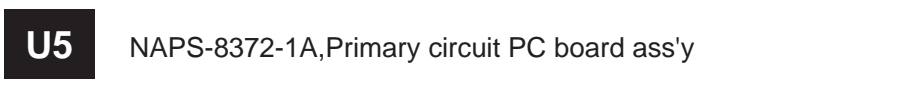

A B C D

# PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE

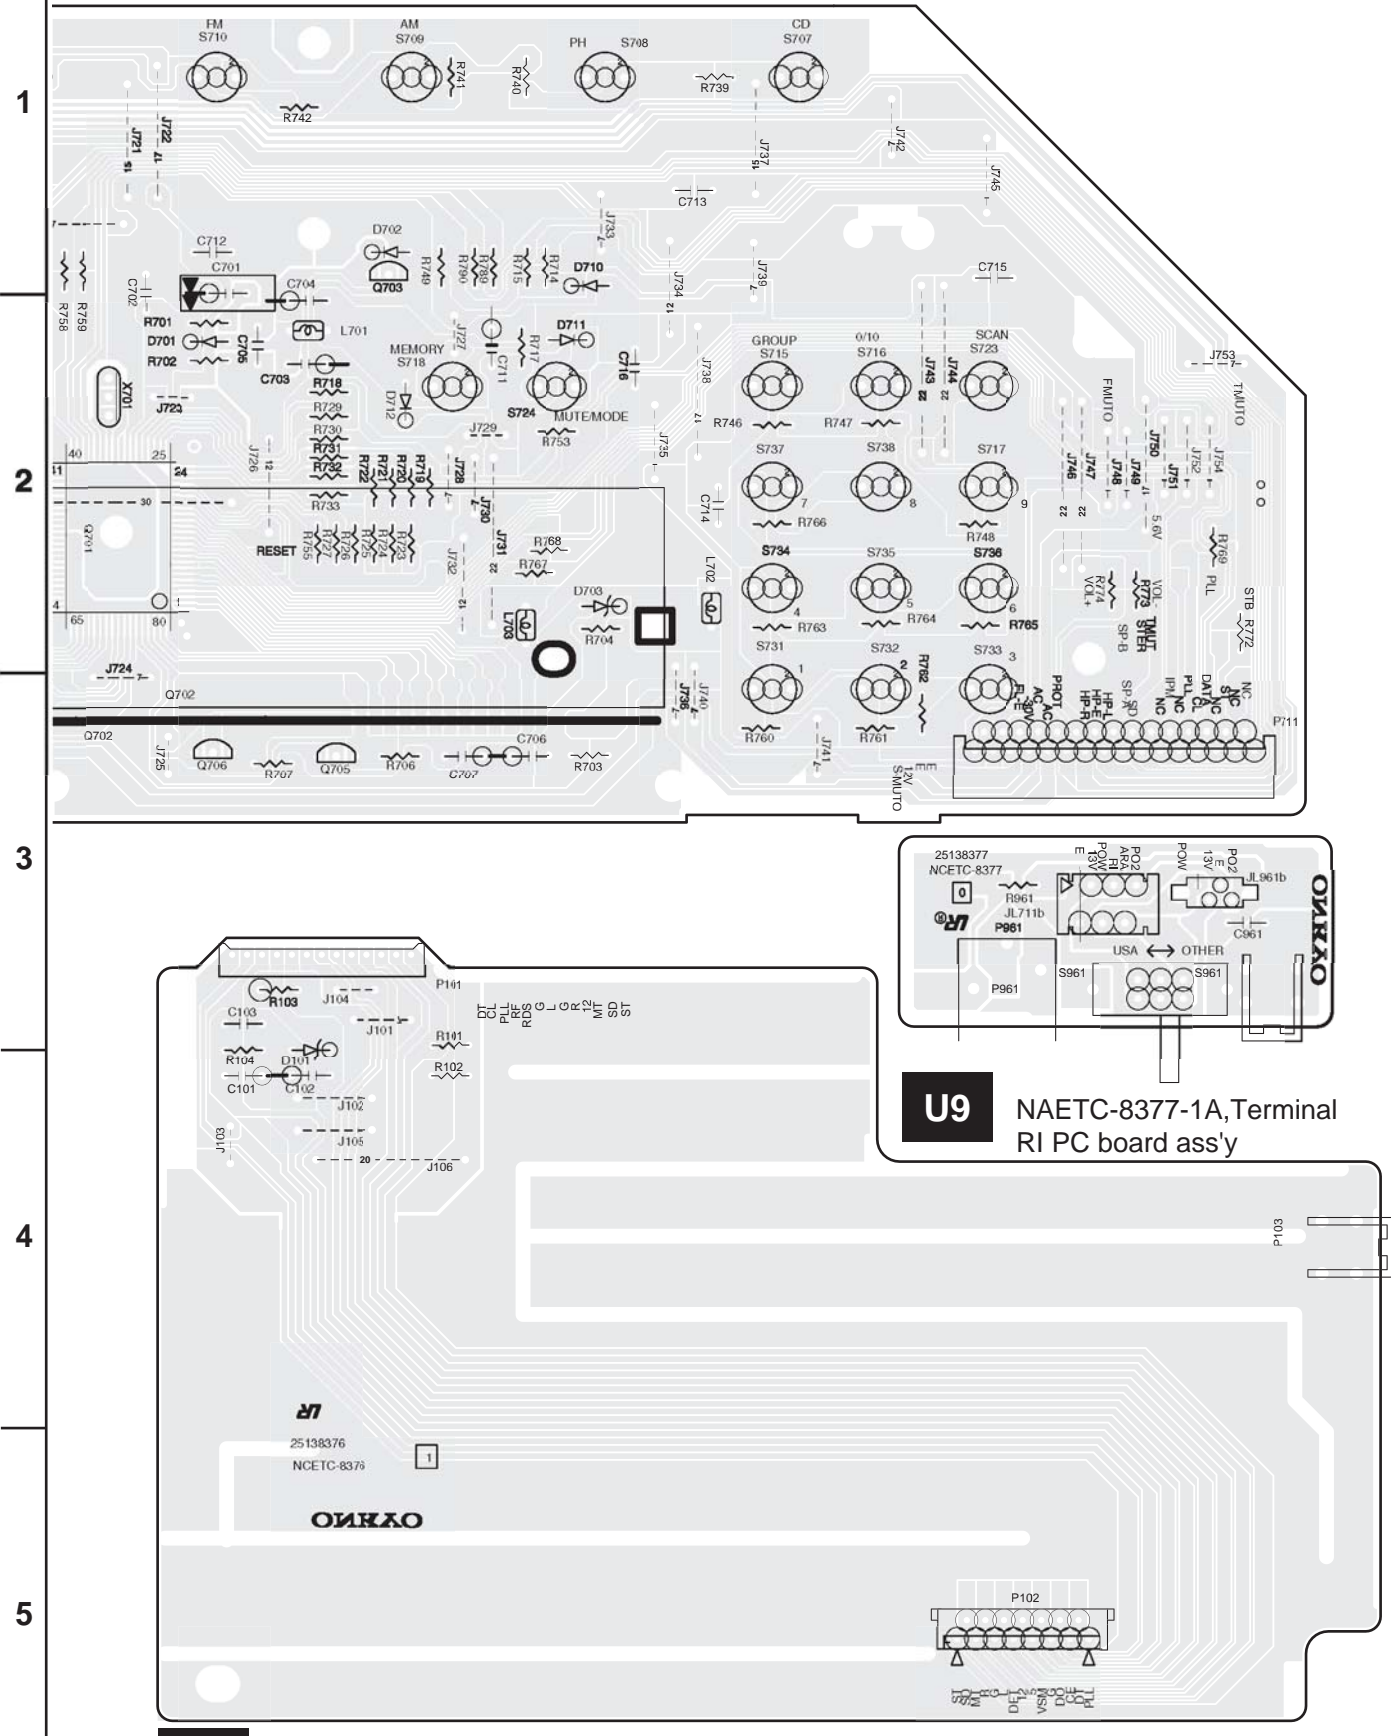


1

2

3

4

5

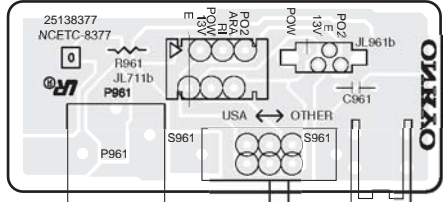

**U9** NAETC-8377-1A, Terminal RI PC board ass'y

**U8** NAETC-8376-1A, Connection PC board ass'y



A B C D E F G H

PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE


1

2


3

4


5

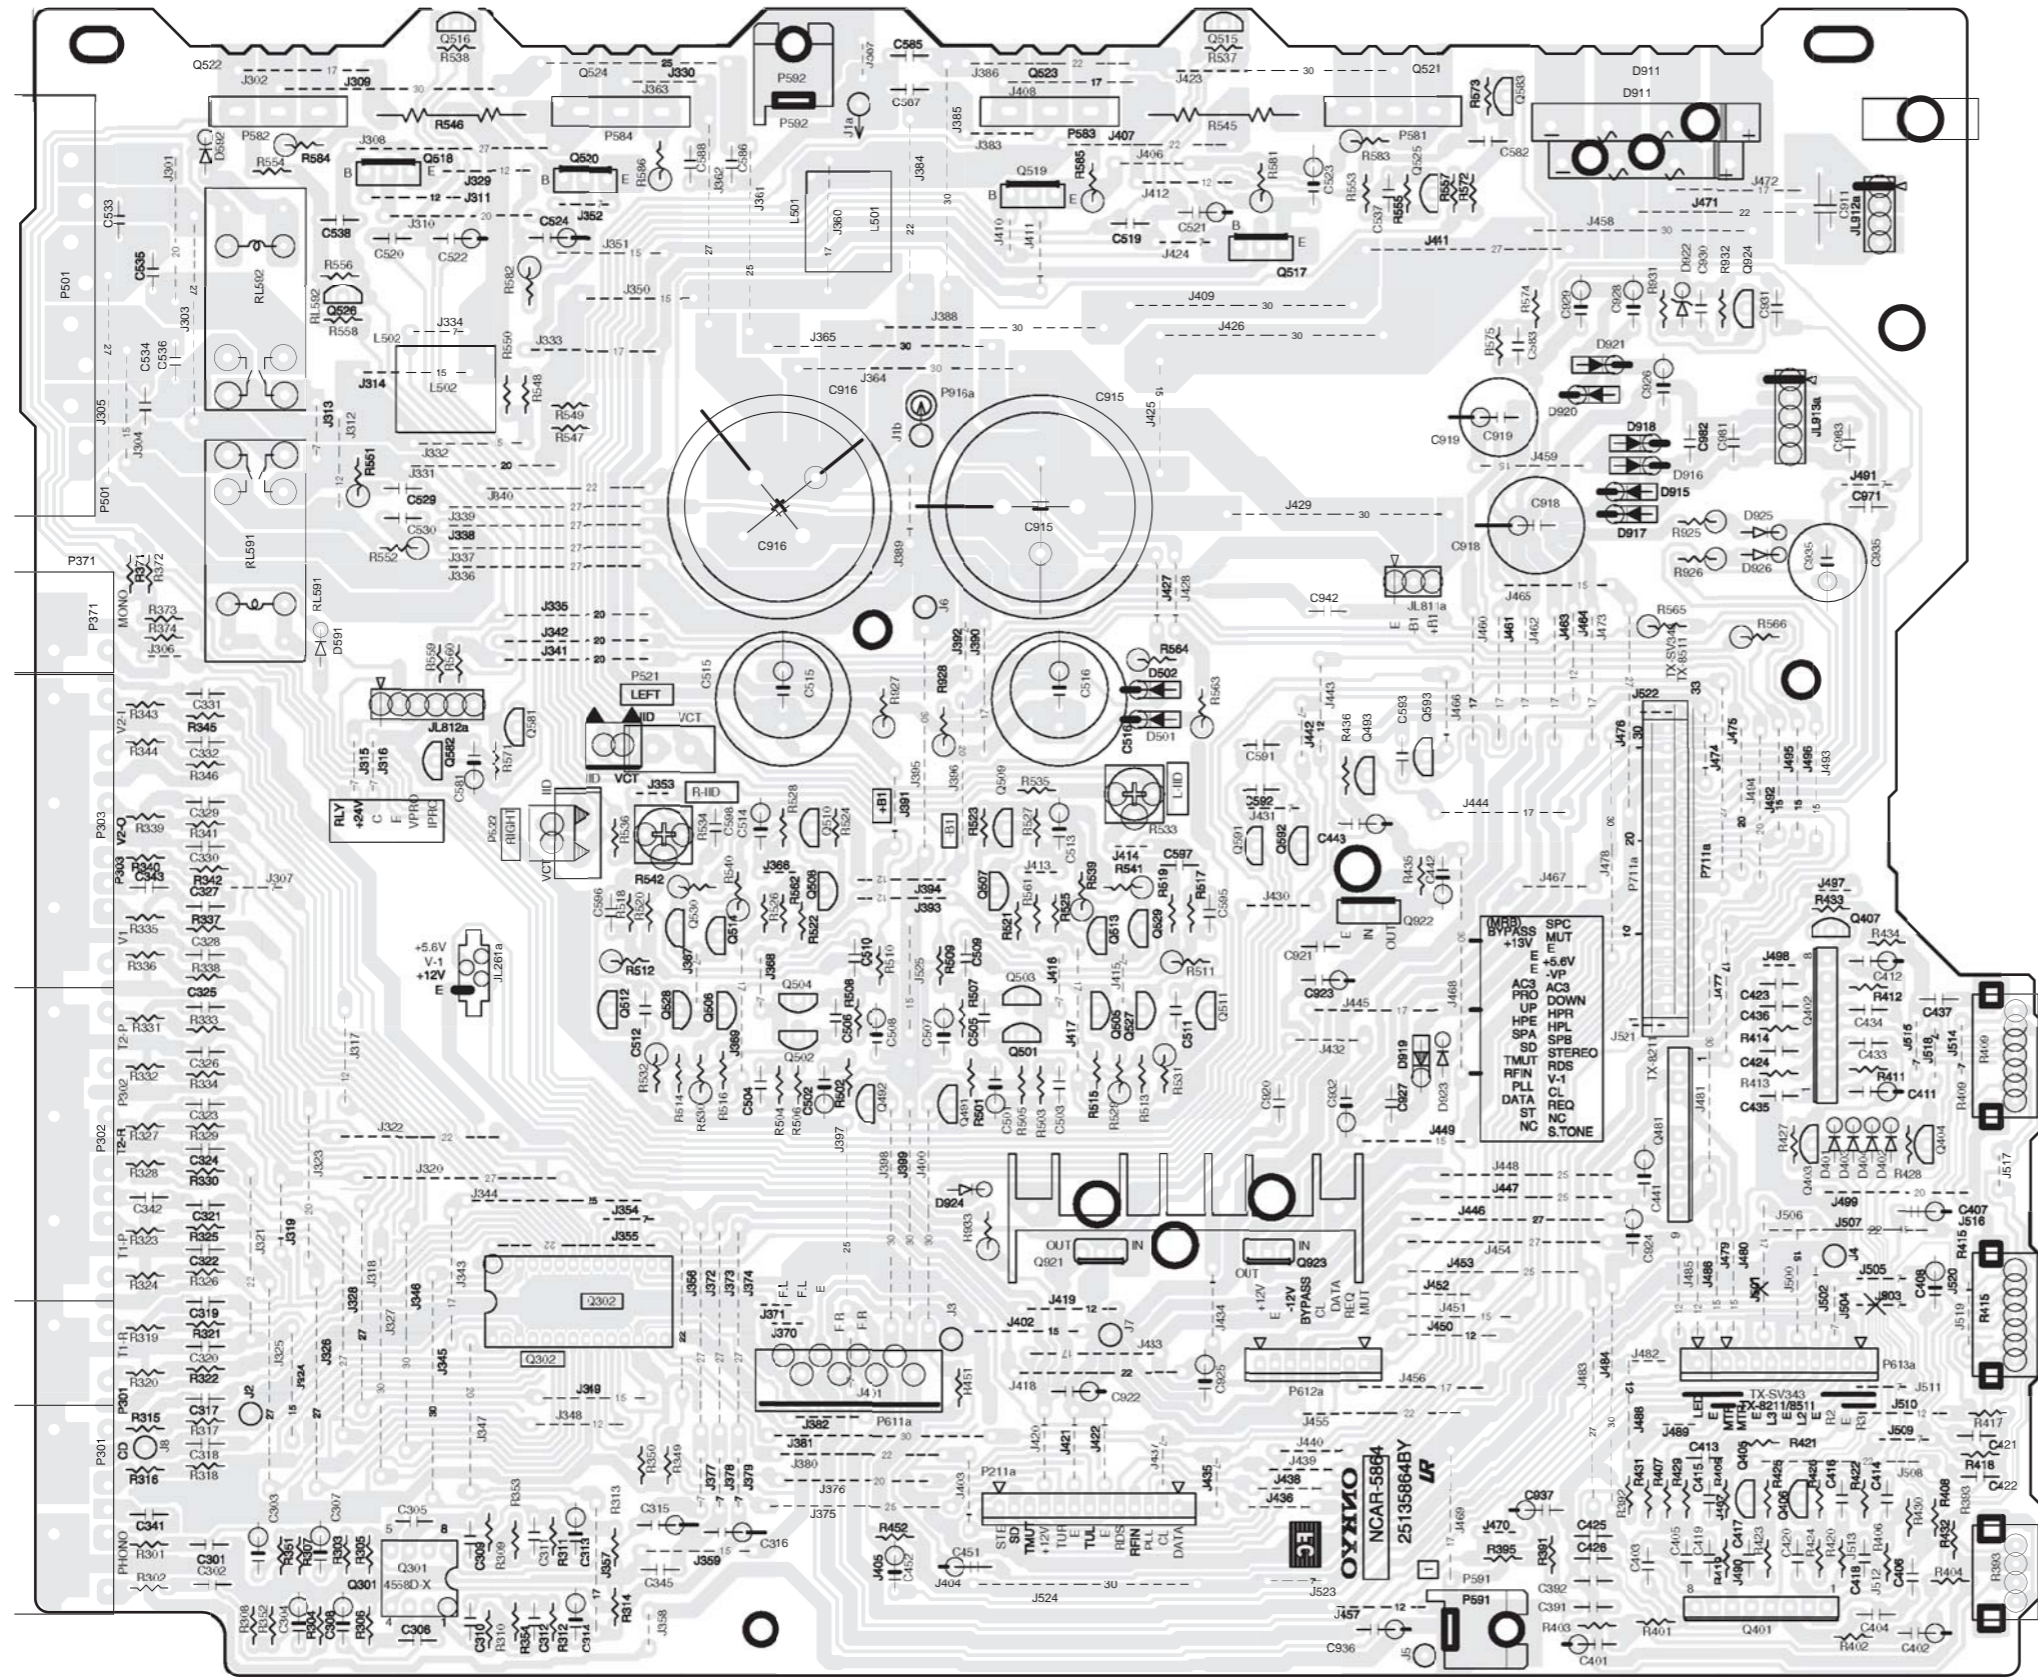

**U1** NAAR-5864-5A, Main circuit PC board ass'y

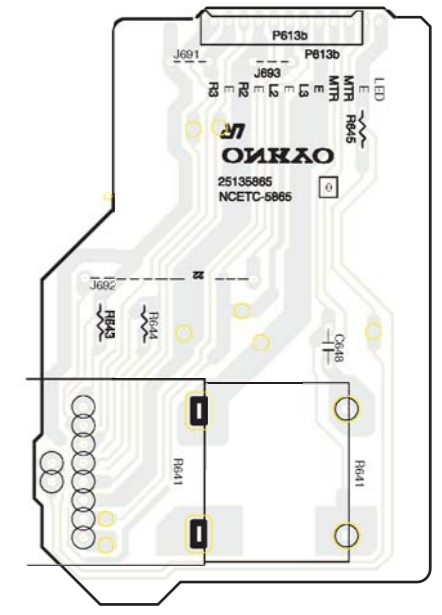



**U2** NAETC-5865-5A, Volume PC board ass'y

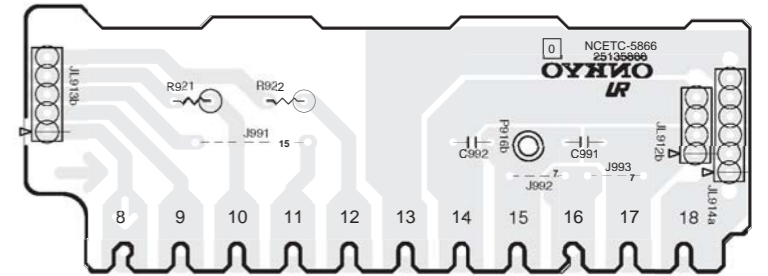

**U3** NAETC-5866-5A, Secondary terminal PC board ass'y

A B C D E F G H

PRINTED CIRCUIT BOARD VIEW FROM SOLDERING SIDE

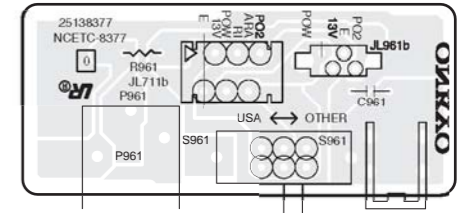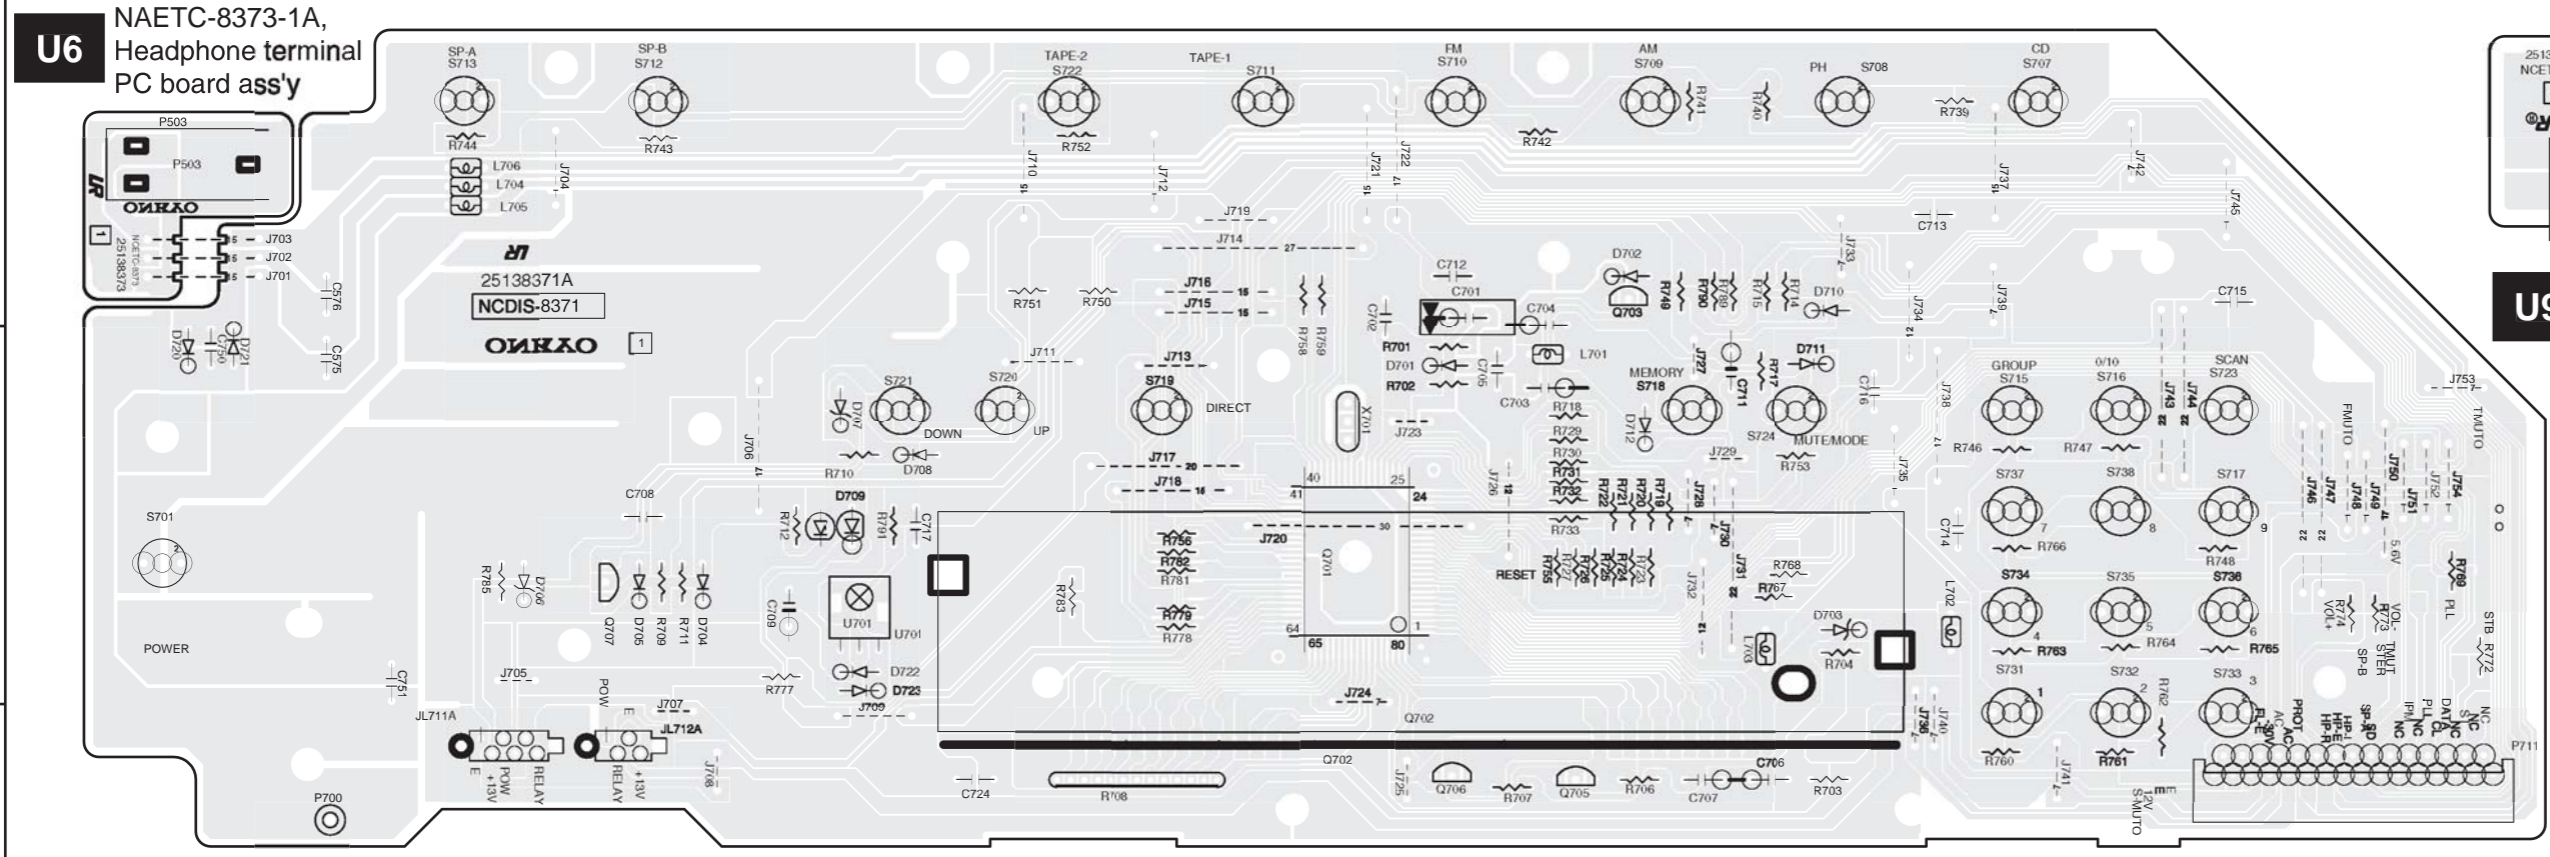

**U9** NAETC-8377-1A, Terminal RI PC board ass'y


1

2

3

4

5

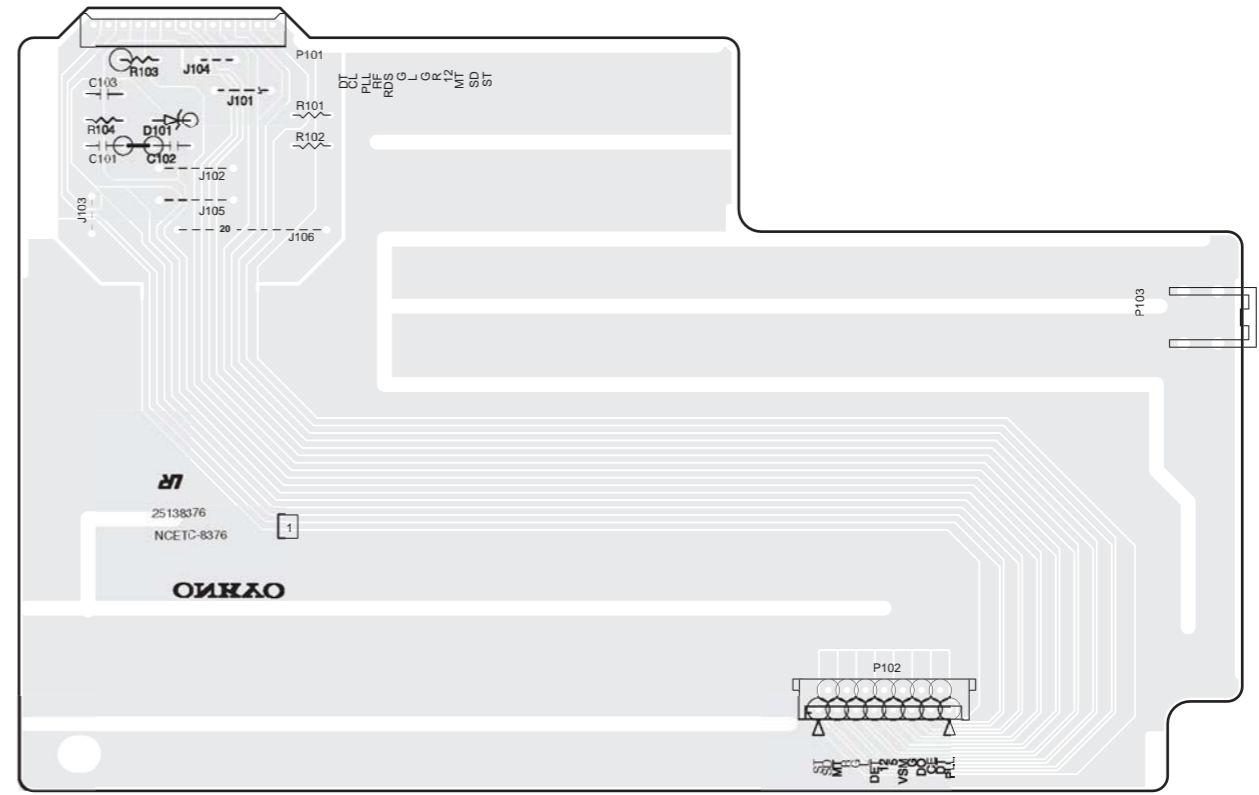


**U8** NAETC-8376-1A, Connection PC board ass'y

FIRE OF RISK FUSE - REPLACE MARKED AS


## IC BLOCK DIAGRAMS AND DESCRIPTIONS

### TC9273N-010(Analog Switch Array)

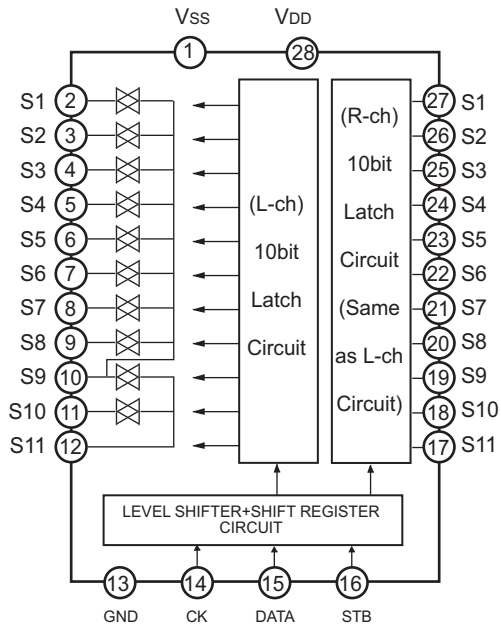

Pin No.	Symbol	Description
1	Vss	Negative power supply pin
13	GND	Digital ground pin
28	VDD	Positive power supply pin
2/27	S1	Input/Output pins
3/26	S2	
4/25	S3	
5/24	S4	
6/23	S5	
7/22	S6	
8/21	S7	
9/20	S8	
10/19	S9	
11/18	S10	
12/17	S11	
14	CK	Clock input pin for data transfer.
15	DATA	Serial data input pin for setting switches.
16	STB	Strobe input pin for data writing.


### TA7291S(Volume Motor Driver)

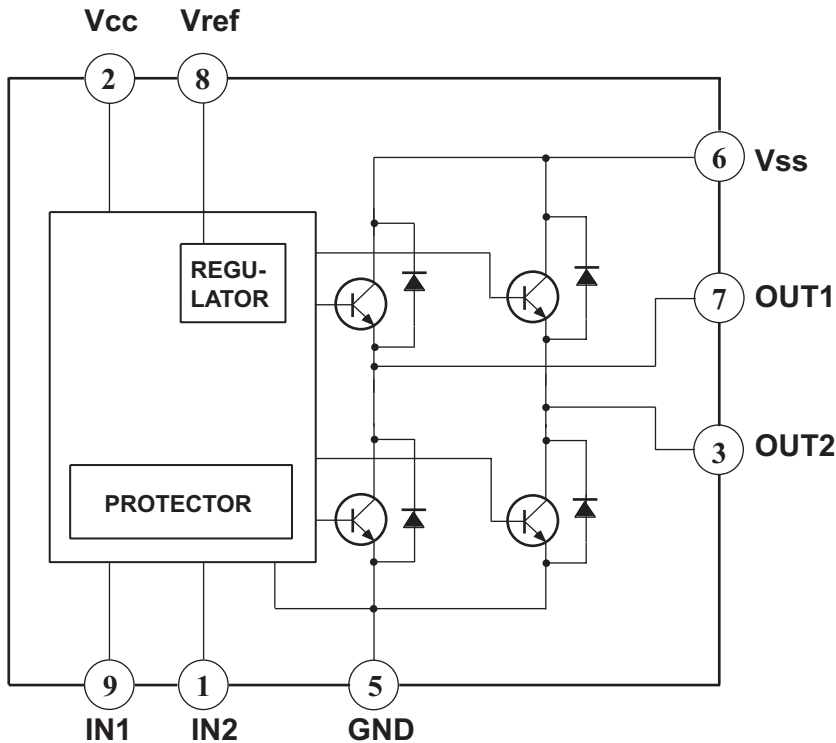

INPUT		OUTPUT		MODE
IN1	IN2	OUT1	OUT2	
0	0	$\infty$	$\infty$	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

CCW: Counter-clockwise direction  
 CW: Clockwise direction

# MICROPROCESSOR-CONNECTION DIAGRAM

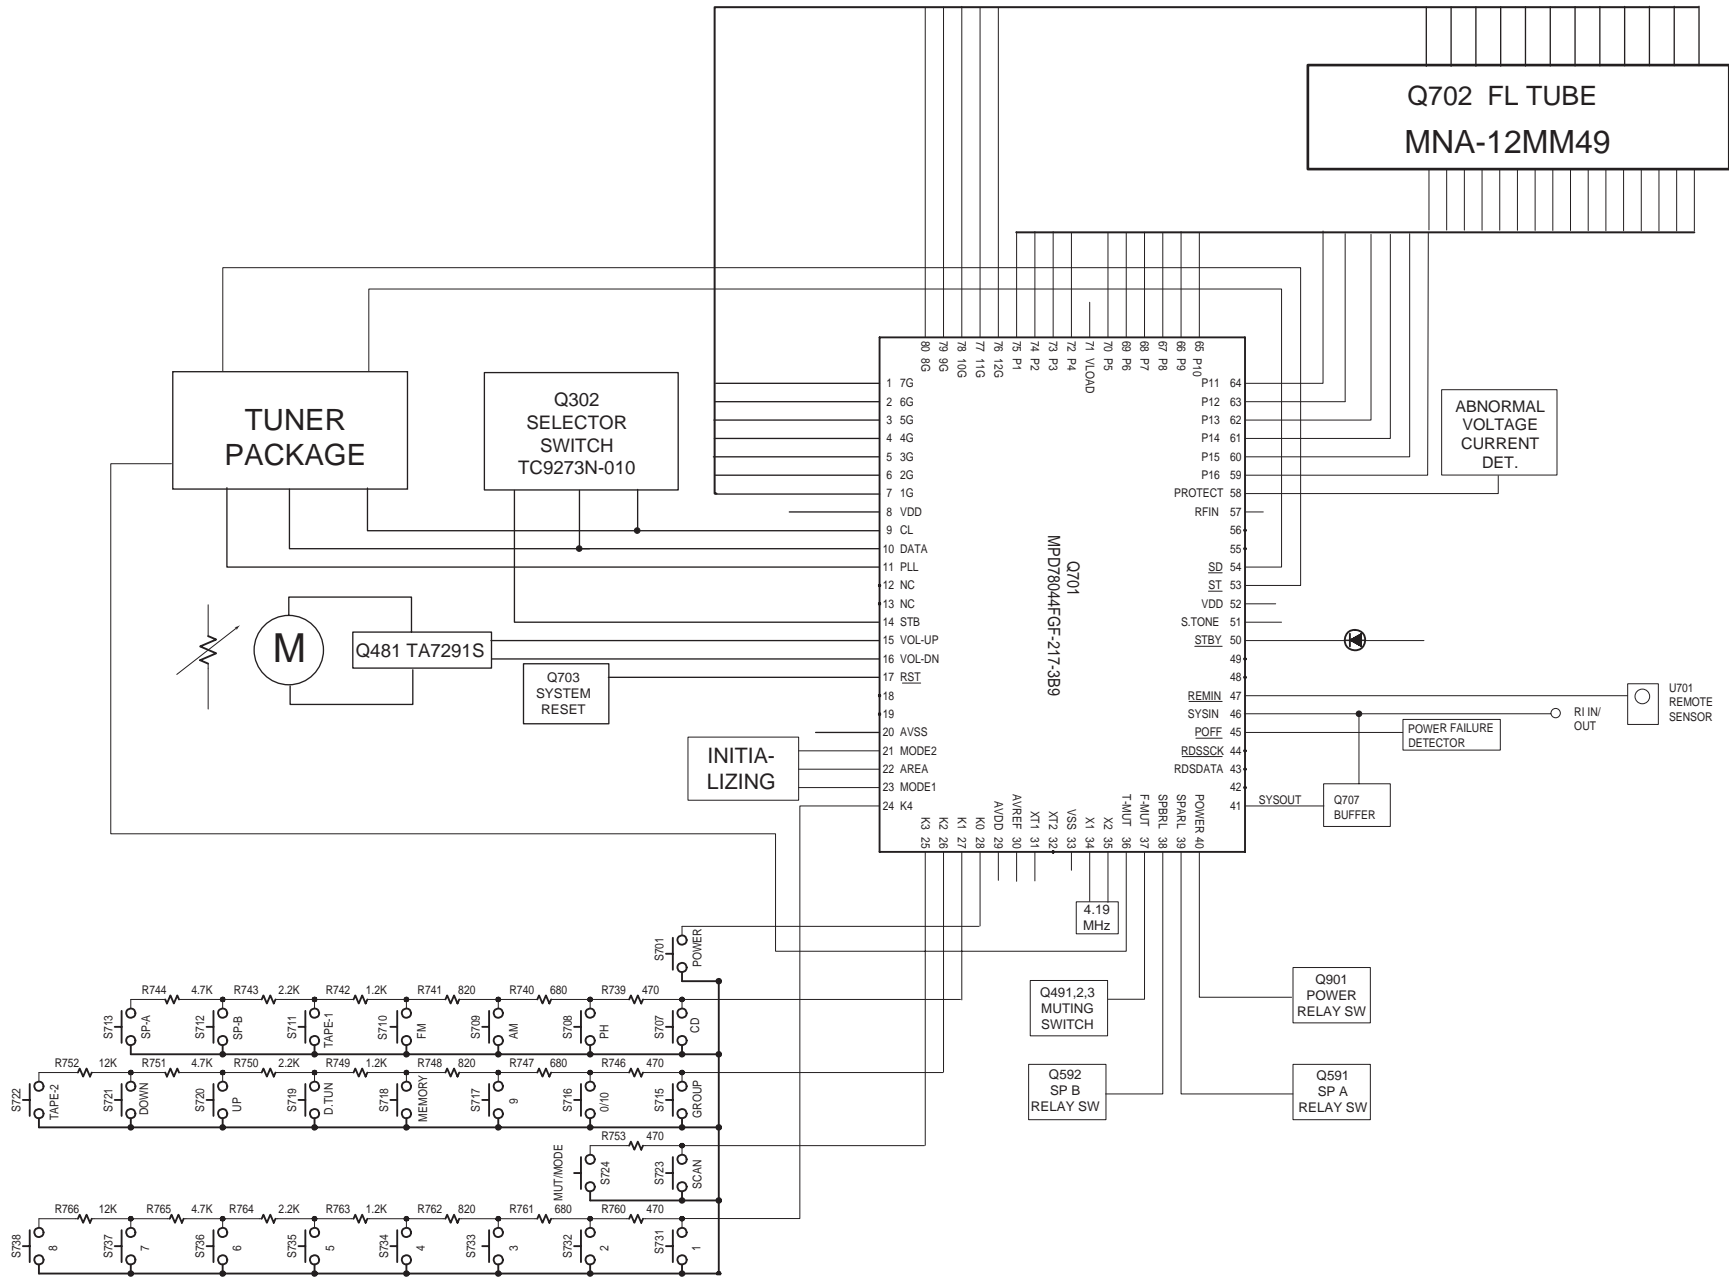

## MICROPROCESSOR-TERMINAL DESCRIPTIONS

Pin No.	Function	I/O	Description
1-7	7G-1G	O	Grid control output pin
8	VDD		Power supply pin
9	CL	O	Clock output pin for selector switch and PLL IC.
10	DATA	O	Data output pin for selector switch and PLL IC.
11	PLL	O	Chip enable output pin for PLL IC.
14	STB	O	Chip enable output pin for selector switch IC.
15	VOL UP	O	Volume control output pin
16	VOL DOWN	O	Volume control output pin
17	RST	I	System reset input pin
20	AVSS		Ground pin for A/D converter
21	MODE2	I	Mode initializing pin
22	AREA	I	Band area set initializing pin
23	MADE1	I	Mode initializing pin
24-28	K4-K0	I	Operation key connection pin
29	AVDD		A/D converter power supply pin
30	AVREF		Reference voltage input pin for A/D converter
33	VSS		Ground pin
34,35	X1,X2		Main system clock pin. Connect the ceramic oscillator.
36	T-MUT	O	Muting control output pin for tuner section
37	F MUT	O	Muting control output pin for amplifier section
38	SPBRL	O	Speaker relay B control output pin
39	SPARL	O	Speaker relay A control output pin
40	POWER	O	Power relay control output pin
41	SYSOUT	O	System code output pin
45	POFF	I	Power failure detection input pin
46	SYSIN	I	System code input pin
47	REMIN	I	Remote control signal input pin
50	STBY	O	Standby indicator control pin
52	VDD		Power supply pin
53	ST	I	Stereo broadcast detection input pin
54	SD	I	Broadcast detection pin
58	PROTECT	I	Protection circuit detection pin
59-70	P18-P5	O	Segment control output pin
71	VLOAD		Pull-down resistor connection pin
72-75	P4-P1	O	Segment control output pin
76-80	12G-8G	O	Grid control output pin

# ADJUSTMENT AND CONFIRMATION PROCEDURES 1

## Idling current adjustment

Before Idling adjustment, turn the trimming resistors R533 and R534 to counter clockwise.

Connect the DC voltmeter to terminals P521 and P522.

After turn POWER to ON, adjust the trimming resistors R533 and R534 so that the reading of voltmeter becomes 2.0 mV.


After adjustment, attach the top cover.

Confirm the voltage of points above after about five minutes.

When less than 7.0 mV, readjust the resistors above so that the voltage becomes 7.0 mV.

When 7.0 mV to 9.0 mV, you are not necessary to adjust.

When more than 9.0 mV, readjust the resistors above so that the voltage becomes 9.0 mV.

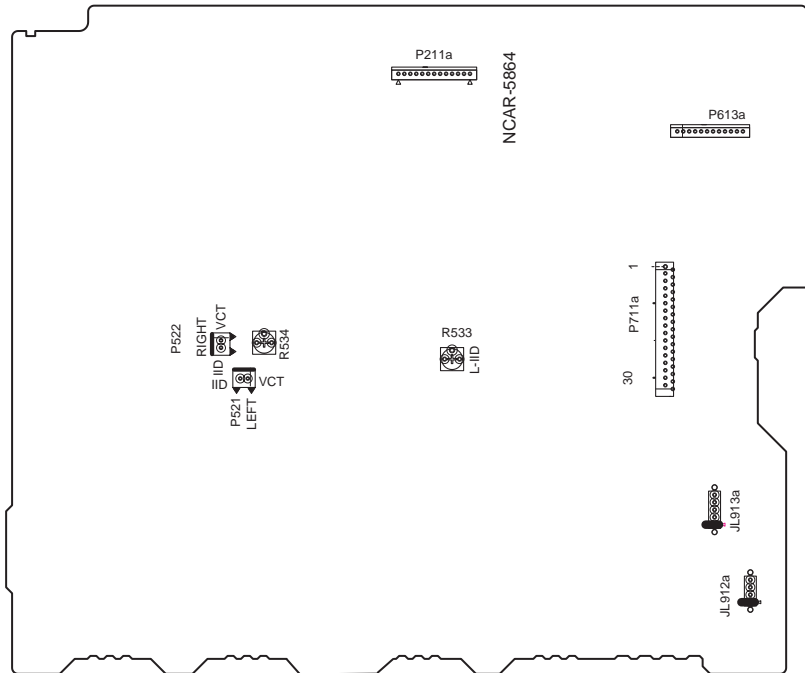

## Confirmation of protection circuit

### 1. Confirmation of operation of speaker relay

Confirm that the speaker relays turn ON approximate. 5 seconds after the power switch is turned ON.

Confirm that the speaker relays turn OFF immediately after the power switch is turned OFF.

### 2. Confirmation of DC detection circuit

Press and hold down CD button, then press DIRECT TUNING button.

After "TEST- " on the FL tube light on, press TAPE 1 button to set the unit to "TEST-1 00".

Apply DC 1.5 to 3V to CD terminal with no load.

Confirm that the speaker relay turns OFF.

Apply DC -1.5 to -3V to CD terminal with no load.

Confirm that the speaker relay turns OFF.

Caution: Don't apply DC voltage more than 1 sec..

## ADJUSTMENT AND CONFIRMATION PROCEDURES 2

### 3. Confirmation of Current detection circuit

Set the unit to "TEST-1 00".


Connect the differentiating circuit and apply the 200Hz square signal to CD terminal of each channel.

Adjust the attenuator or Volume so that the output level becomes 35V p-p.

Confirm that the speaker relay does not turn OFF when a 2.0 ohm load is connected.

Confirm that "Protect" indicator lights on when a 0.5 ohm load is connected.


Caution: Don't continue more than 3 seconds.

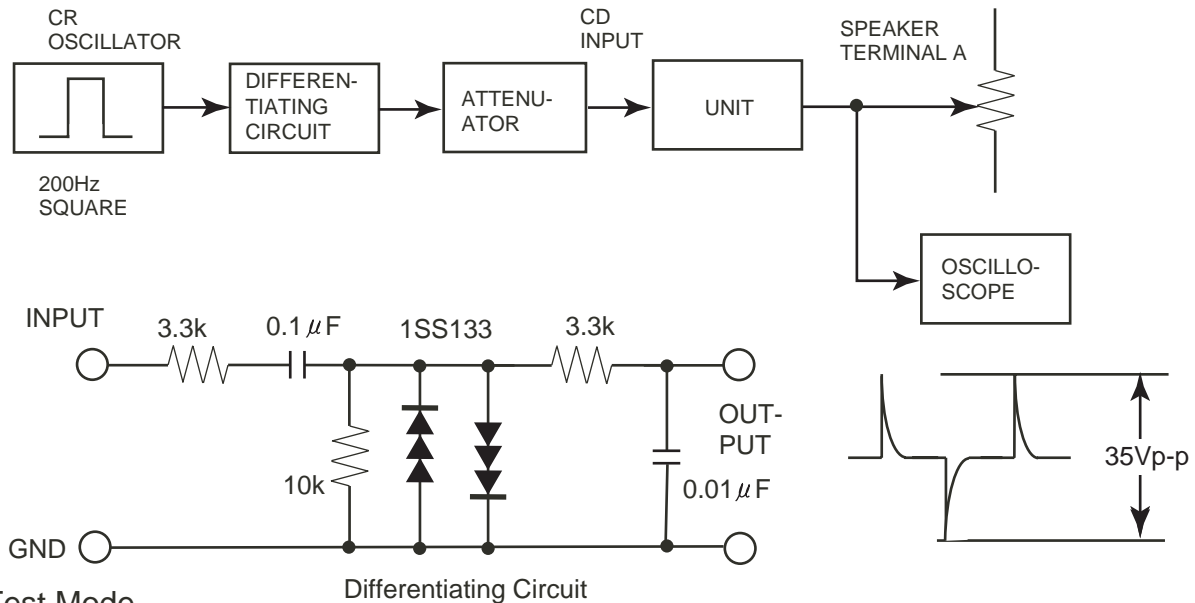


#### Test Mode

1. Turn POWER button on.
2. Press and hold down CD button, then press DIRECT TUNING button.
3. After "TEST-" on the FL tube is displayed, press CD button to set the unit to the test mode of FL tube.

#### Test mode of FL tube

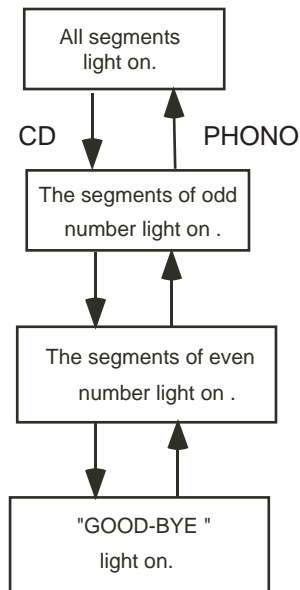

PACKING VIEW

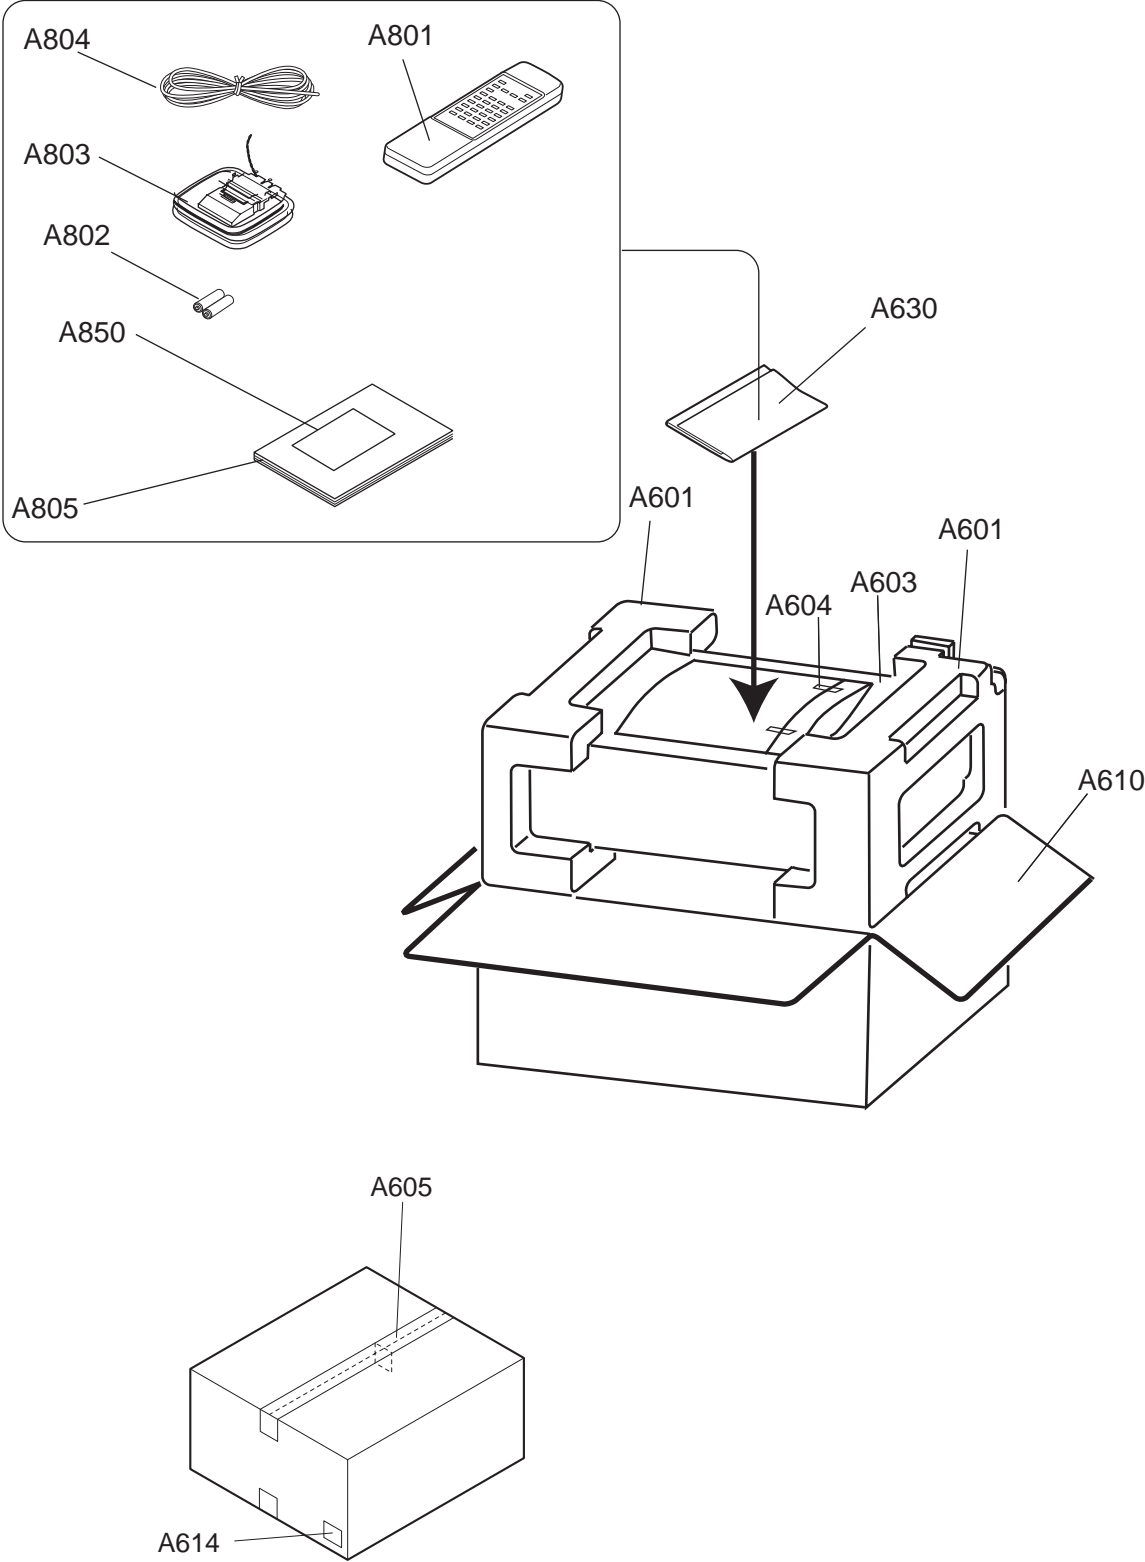



**EXPLODED VIEW-PARTS LIST**

NOTE: THE COMPONENTS IDENTIFIED BY MARK !  
ARE CRITICAL FOR RISK OF FIRE AND  
ELECTRIC SHOCK. REPLACE ONLY WITH  
PART NUMBER SPECIFIED.

REF.NO.	PART NO.	DESCRIPTION
A001	27212724	Front panel
A002	838130088	3TTB+8B,Screw
A004	28326246	Knob,function
A005	28326247	Knob,power
A006	28326248	Konb,selector
A007	28326249	Knob,tuning
A010	27141946	Retainer F
A011	838130088	3TTB+8B,Screw
A013	29110083	Tape,cloth
A015	27100321B	Chassis
A016	838430088	3TTB+8B(BC),Screw
A018	27190991	Holder
A020	27160378	Heat sink
A021	27141530A	Retainer
A023	27141672	Retainer H
A024	838130088	3TTB+8B,Screw
A026	801433	3SMS8W.SW+14B(BC),Special screw
A030	27300750	! Bushing
A035	27190266-1 or	LSR-12R or
	27190266	KGLS-12RT,Holder
A040	838130088	3TTB+8B,Screw
A041	830440089	4TTC+8C(BC),Screw
A201	28184663-1	Top cover
A202	838430088	3TTB+8B(BC),Screw
A203	28141240	Cushion
A204	29362772	Label,cover
A205	27175319B	Leg
A206	28141494	Cushion
A207	838130088	3TTB+8B,Screw
A210	28325456	Knob,volume
A211	28325454	Knob,tone
A300	27123379	Back panel
A301	838430088	3TTB+8B(BC),Screw
A302	87643010	W3*10F(BC),Flat washer
A303	838930088	3TTB+8B(UN),Screw
A306	28192054	Clear plate
A352	28135244	Badge
E801	260208	Wire tie
F901	252163	! 4A-UL/T-237,Fuse
P102	2047150522	NCFC7-150522,Flexible cable
P711	2047311512	NCFC7-311512,Flexible cable
P901	253368LTK,	! AS-UC-2,Power supply cord
Q521,Q522	2203043	2SC5197-O,Transistor
Q523,Q524	2203033	2SA1940-O,Transistor
T901	2301220	! NPT-1283D,Power transformer

<b>REF.NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
U1	1B042564-5A	NAAR-5864-5A,Main circuit PC board ass'y
U2	1B042565-5A	NAETC-5865-5A,Volume PC board ass'y
U3	1B042566-5A	NAETC-5866-5A,Secondary terminal PC board ass'y
U4	1B042571-1A	NADIS-8371-1A,Display circuit PC board ass'y
U5	1B042572-1A	NAPS-8372-1A,Primary circuit PC board ass'y
U6	1B042573-1A	NAETC-8373-1A,Headphone terminal PC board ass'y
U7	1B042574-1A	NAETC-8374-1A,Transformer terminal PC board ass'y
U8	1B042576-1A	NAETC-8376-1A,Connection PC board ass'y
U9	1B042577-1A	NAETC-8377-1A,Terminal RI PC board ass'y
U11	240146 or 240134A	FAE385-A02F or TFCE1U114B,Tuner unit

**PACKING VIEW-PARTS LIST**

<b>REF.NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
A355	29363194	Label
A601	29091763A	Pad ass'y
A603	29100034-1A	850*650,Polybag
A604	29110149	Tape, cellophane
A605	29110148	Tape PP
A606	29095906	Sheet
A610	29054302A	Carton box
A614	29364023	Label UPC
A630	29100097-1A	350*250,Polybag
A801	24140330	RC-330S,Remote control
A802	3010054	R6/AA(UM-3),Two batteries
A803	232140	NMA-3057,AM loop antenna
A804	292142	FM antenna
A805	29343912	Instruction manual
A850	29365090B	Warranty card

---

**ONKYO CORPORATION**

Sales & Product Planning Div. : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8023 Fax: 072-831-8124

**ONKYO U.S.A. CORPORATION**

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
Tel: 201-785-2600 Fax: 201-785-2650 <http://www.onkyousa.com>

**ONKYO EUROPE ELECTRONICS GmbH**

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY  
Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 <http://www.onkyo.net>

**ONKYO CHINA LIMITED**

Units 2102-2107, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung,  
N.T., HONG KONG Tel: 852-2429-3118 Fax: 852-2428-9039