


Service Service Service

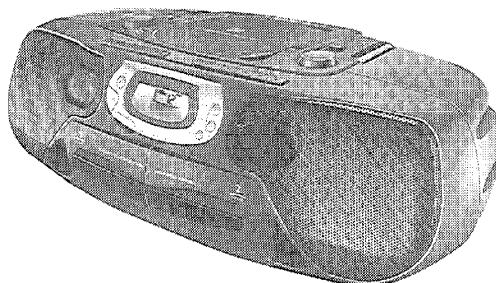

Manual# 1838
AZ1602/17

Service Manual

CONTENTS

PAGE



Safety	1
Connections and Controls	2-6
Specifications	7
Disassembly Diagram	8
Block Diagram	9
Wiring Diagram	10
Front Board - Circuit Diagram	11
- Layout Diagram	12
Tuner Board (FM/AM) - Circuit Diagram	13
- Layout Diagram	14
Tuner Board (FM/LW/MW) - Circuit Diagram	15
- Layout Diagram	16
Audio Board - Circuit Diagram	17
- Layout Diagram	18
Tape Board - Circuit Diagram	19
- Layout Diagram	20
Cassette Adjustment	20
CD97 - Circuit Diagram	21
- Layout Diagram	22
CD Startup and Service Test Program	23-24
Exploded View Diagram - Tape Deck	25
Mechanical Partslist	25
Exploded View Diagram - Cabinet	26
Electrical Partslist	27-32


CLASS 1
LASER PRODUCT

2142 110 03420



PHILIPS

HANDLING CHIP COMPONENTS

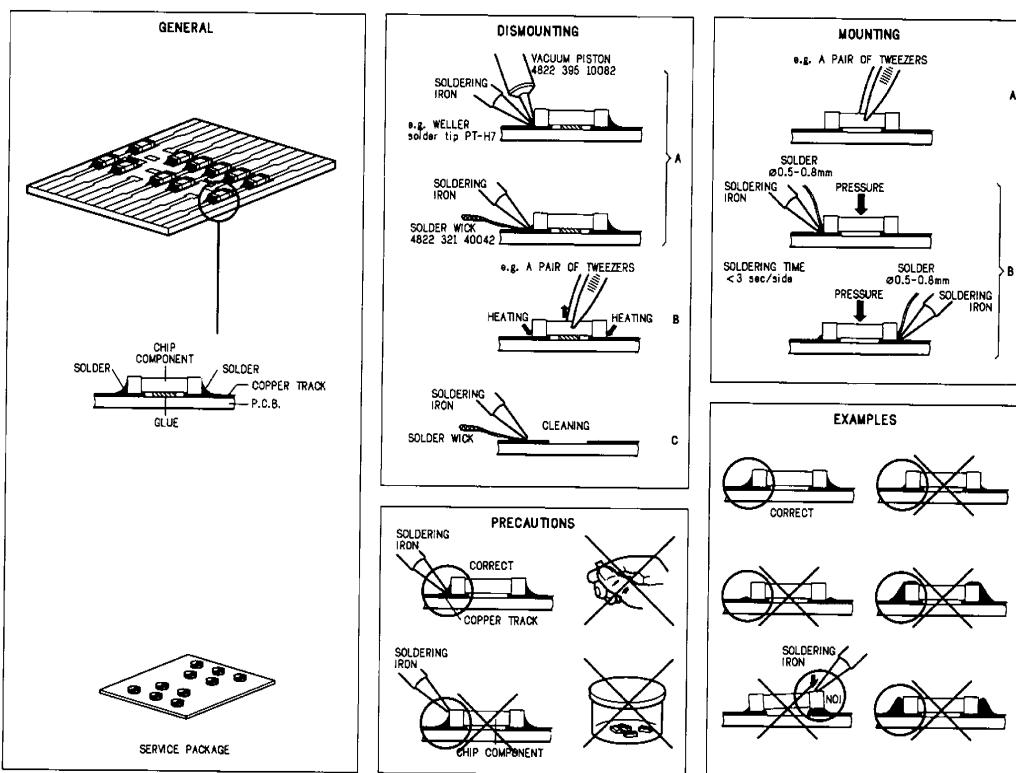

GB WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools at this potential.

F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet servi d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

Anti-static table mat large 1200x650x1.25mm
small 600x650x1.25mm

Anti-static wrist band

Connection box (1MOhm)

Extendible cable (to connect wrist band to conn. box)

Connecting cable (to connect table mat to conn. box)

Earth cable (to connect any product to mat or box)

Complete kit ESD3 (combining all above products)

Wristband tester

D WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).

Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Sorgen Sie dafür, dass sie im Reparaturfall über ein Pulswiderstand mit dem Massepotential des Gerätes verbunden sind.

Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

4822 466 10953

4822 466 10558

4822 395 10223

4822 320 11307

4822 320 11305

4822 320 11306

4822 320 11308

4822 310 10671

4822 344 13999

NL WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor elektrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegate allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Affidarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

GB WARNING

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

F ATTENTION

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

D WARNUNG

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Original-ersatzteile zu verwenden.

NL WAARSCHUWING

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

I AVVERTIMENTO

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

GB

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.

The leakage current must not exceed 0.5mA.


F

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne."

CONNECTIONS AND CONTROLS

Switching on and off

Set the POWER slider to the desired sound source:
CD, TUNER, or TAPE.

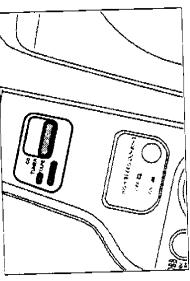


The set is switched off when the POWER slider is in position OFF/TAPE and the keys of both tape decks are released.

Note: If you run the set on batteries, always be sure to switch the set off after use. This will avoid unnecessary power consumption.

Adjusting volume and sound

Adjust the volume using the VOLUME control.
→ Display indication: Volume level from 0 to 32.

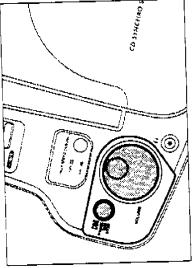

Increase and decrease the bass level by pressing DBB.

The bass frequencies can also be emphasised if you place the set against a wall or shelf. Do not cover any vents and leave sufficient room around the unit for ventilation.

15

Radio – tuning to radio stations

1 Set the POWER slider to TUNER.

2 Select the wave band by using the BAND selector.


3 Tune to the desired radio station by using the TUNING knob.

Improving RADIO reception

For FM, pull out the telescopic antenna. To improve the signal, incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).

For MW and LW, direct the built-in antenna by turning the whole set. The telescopic antenna is not needed.

- | | |
|-----------------------------|--|
| ① POWER:
CD, TUNER, TAPE | selects the sound source |
| ② DBB | enhances the bass frequencies |
| ③ VOLUME | adjusts the volume level |
| ④ Ø | 3.5 mm headphone socket |
| ⑤ Display | Window for showing different CD playing modes |
| ⑥ CD PLAYER | |
| △ OPEN | opens the CD lid |
| STOP □ | stops CD play and erases the program |
| PLAY/PAUSE ▷ | starts and interrupts CD play |
| SEARCH ↵ | skips and searches forward and backward |
| PROGRAM | programs track numbers and reviews the program |
| SHUFFLE | plays CD tracks in random order |
| REPEAT | repeats a track, the entire CD or the program |

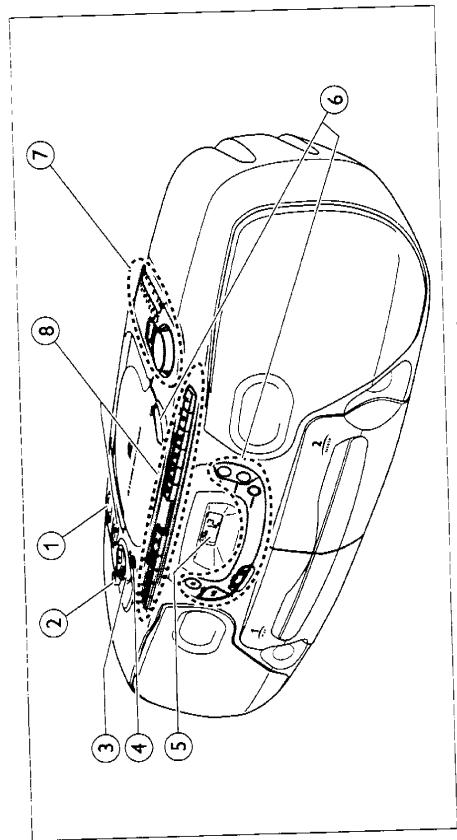

BASIC FUNCTIONS


- | | |
|---------------------------------|---|
| ⑦ RADIO | tunes to radio stations
BAND.....selects the wave band |
| ⑧ DOUBLE DECK CASSETTE RECORDER | PAUSE II |
| | interrupts recording or playback |
| | STOP OPEN □ |
| | stops the tape and opens the cassette compartment |
| | SEARCH ↵ |
| | rewinds the tape |
| | SEARCH ▶ |
| | fast forwards the tape |
| | PLAY < |
| | starts playback |
| | RECORD O |
| | [only for deck 2] starts recording |

Note: Inserting the plug will switch off the speakers.

- | | |
|--------------|--|
| HIGH SPEED | copies a cassette at high speed |
| DUBBING | |
| PLAY PAUSE ▷ | starts and interrupts CD play |
| SEARCH ↵ | skips and searches forward and backward |
| PROGRAM | programs track numbers and reviews the program |
| SHUFFLE | plays CD tracks in random order |
| REPEAT | repeats a track, the entire CD or the program |


CONNECTIONS AND CONTROLS

Different playing modes: SHUFFLE / REPEAT

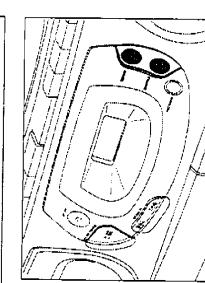

SHUFFLE – Playing in random order

- 1 Press SHUFFLE before or during CD play.
- All the tracks of the CD (or program if available) will now be played in random order.




REPEAT – Repeating the entire CD or one track of the CD

- 1 Before or during CD play, press REPEAT repeatedly to cause the display to show the different repeating modes.
 - REPEAT: the current track is played repeatedly.
 - REPEAT ALL: the entire CD or program is played repeatedly.
- 2 Press REPEAT until the display indication disappears to return to normal CD play.



Note: You can activate the different playing modes at the same time, e. g. you can repeatedly play the entire CD or program in random order [SHUFFLE REPEAT ALL].

Search backward << and >> forward

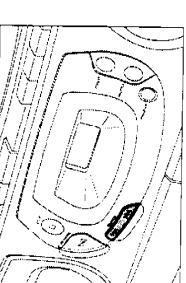

Selecting another track

Briefly press the SEARCH << or >> button once/several times to skip to the beginning of the current/previous or subsequent track(s).

During play:

CD play continues automatically with the selected track.
From stop position:

- 1 Press PLAY/PAUSE ▶ to start CD play.
- Display indication: the selected track number.

Searching for a passage during CD play

- 1 Hold down the SEARCH << or >> button to find a particular passage in a forward or backward direction.
 - CD play continues at a low volume.
- 2 Release the button when you have reached the desired passage.

Note: In the SHUFFLE and REPEAT modes or when playing a program, searching is only possible within the particular track.

Playing a CD

- 1 Set the POWER slider to CD.
- 2 Press △ OPEN to open the lid.
- 3 Insert an audio CD (printed side up) and close the lid.
 - The CD player starts and scans the contents list of the CD. Then, the CD player stops. Display indication: the total number of tracks.
- 4 Press the PLAY/PAUSE ▶ button to start CD play.
 - Display indication: the current track number.
- 5 Press the STOP □ button to stop CD play.
 - Display indication: the total number of tracks.

You can interrupt CD play by pressing PLAY/PAUSE ▶. Continue CD play by pressing the button again.


→ Display indication: the current track number flashes.



- Note: CD play will also stop if:*
- you open the lid,
 - the end of the CD is reached, or
 - you move the POWER slider to TUNER or TAPE.

If you make a mistake when operating the CD player, or the CD player cannot read the CD, the display shows E or n/a. (See chapter "TROUBLESHOOTING".)

If you press PLAY/PAUSE ▶ and there is no CD inserted the display shows n/a.

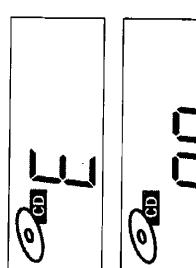

CONNECTIONS AND CONTROLS


Programming track numbers

You can select a number of tracks and store these in the memory in the desired sequence. You can store any track more than once. At maximum of 20 tracks can be stored in the memory.

- 1 Select the desired track with SEARCH \leftarrow or \rightarrow .
- 2 As soon as the number of the desired track is displayed, press the PROGRAM button to store the track in the memory.
→ PROGRAM appears in the display and P lights up briefly.
Then, the number of the stored track is shown.
- 3 Select and store all desired tracks in this way.

You can review your settings by pressing the PROGRAM button for more than 2 seconds.
→ The display shows all stored track numbers in sequence.

If you try to store more than 20 tracks the display shows F .

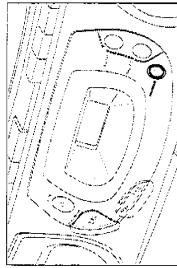

Playing a cassette

1 Set the POWER slider to TAPE.

2 Press STOP-OPEN $\square\Delta$ to open a cassette compartment.

3 Insert a recorded cassette with the open side upwards and close the cassette compartment.


4 Press PLAY \triangleleft to start playback.

5 By pressing \ll or \gg fast winding of the tape is possible in both directions.

6 To stop the tape press STOP-OPEN $\square\Delta$.

Note: The keys are released at the end of the tape.

Continuous play - deck 1 followed by deck 2

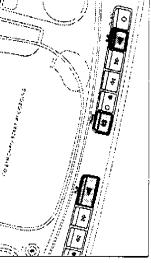

1 Set the POWER slider to TAPE.

2 Press STOP-OPEN $\square\Delta$ on both cassette compartments to open them.

3 Insert recorded cassettes in both cassette compartments and close them.

4 Press PLAY \triangleleft on deck 1.
→ Playback starts on deck 1.

5 Press PAUSE $\|\!\|$ and PLAY \triangleleft on deck 2.
→ As soon as deck 1 stops, PAUSE $\|\!\|$ will be released on deck 2 and playback starts there.

6 Press STOP-OPEN $\square\Delta$ on both tape decks to stop playback completely.

Note: Playback on deck 2 will also start if you press STOP-OPEN $\square\Delta$ on deck 1 to stop playback there.


- Note: The program will also be erased if you*
- interrupt the power supply,*
- open the lid, or*
- move the POWER slider to TUNER or TAPE.*

CONNECTIONS AND CONTROLS

General information on recording

Recording from the CD player - CD synchro start

- 1 Set the POWER slider to CD.
- 2 Insert a CD and, if desired, program track numbers.
- 3 Press STOP-OPEN □△ for deck 2 to open this cassette compartment.
- 4 Insert a blank, unprotected cassette and close the cassette compartment.
- 5 Press RECORD ○ to start recording.
 - Playing of the CD or program starts automatically. It is not necessary to start the CD player separately.
- 6 For brief interruptions press PAUSE ┏. Press the PAUSE ┏ key again to resume recording.
- 7 To stop recording, press STOP-OPEN □△.

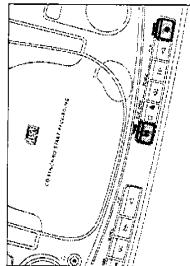

Note: the recording can be started from different positions:
– if the CD player is in pause mode, recording will start from this very position (use SEARCH ↵ or ↶).
– if the CD player is in stop mode, recording will start from the beginning of the CD or program.

Recording from the radio

- 1 Set the POWER slider to TUNER.
- 2 Tune to the desired radio station (see chapter "RADIO").
- 3 Press STOP-OPEN □△ for deck 2 to open this cassette compartment.
- 4 Insert a blank, unprotected cassette and close the cassette compartment.
- 5 Press RECORD ○ to start recording.
- 6 For brief interruptions press PAUSE ┏. To resume recording press the PAUSE ┏ key again.
- 7 To stop recording, press STOP-OPEN □△.

Important!

Recording is only possible on tape deck 2.

Recording is permissible insofar as copyright or other rights of third parties are not infringed upon.

For recording on this set you should use a cassette of the type NORMAL (IEC type I). This deck is not suitable for recording on cassettes of the type CHROME (IEC type II) or METAL (IEC type IV).


The recording level is set automatically. The VOLUME and DBB controls do not affect the recording.

At the very beginning and end of the tape, no recording will take place in the 7 seconds during which the leader tape passes the recorder heads.

Protecting tapes from accidental erasure

Keep the cassette side to be protected in front of you and snap off the left tab. Now, recording on this side is no longer possible.

To record again on this side of the cassette, cover the aperture with a piece of adhesive tape.

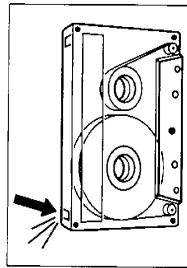

Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

CONNECTIONS AND CONTROLS

WARNING


If a fault occurs, first check the points listed below before taking the set for repair.

Under no circumstance should you try to repair the set yourself as this will invalidate the guarantee.

Dubbing – Copying from tape deck 1 to deck 2

When dubbing, it is recommended to use full batteries or to connect the set to the mains.

- 1 Set the POWER slider to TAPE.
- 2 Set the HIGH SPEED DUBBING button to:
 - for high speed dubbing,
 - for normal speed dubbing.

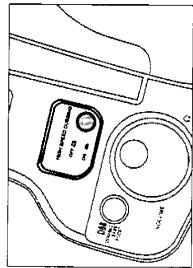

Notes: – Do not press the HIGH SPEED DUBBING button during dubbing.

– Dubbing at normal speed will take longer but results in a better sound quality.

- 3 Press STOP-OPEN □△ on both cassette compartments to open them.

- 4 Insert the cassette to be copied into deck 1.

- 5 Insert a blank, unprotected cassette into deck 2 and close both cassette compartments.

- 6 Press PAUSE II and then RECORD ○ on deck 2.

- 7 Press PLAY ▶ on deck 1.
→ The PAUSE II key on deck 2 is released and dubbing starts automatically.

- 8 For brief interruptions, press PAUSE II on deck 2. To resume recording, press the PAUSE II key again.

- 9 To stop dubbing, press STOP-OPEN □△ on both tape decks.

6-1

Problem	Possible cause	Solution
No sound, no power	VOLUME is not adjusted. Headphone is connected. Mains cable is not securely connected. Batteries are flat.	Adjust volume. Disconnect headphone. Connect mains cable properly. Insert fresh batteries.
	Batteries are inserted incorrectly.	Insert batteries correctly.
	Trying to change over from mains to battery supply without removing the plug.	Remove the mains plug from the unit's AC MAINS inlet.
No reaction to operation of any keys	Electrostatic discharge.	Disconnect the set from power supply, reconnect after a few seconds.
Poor radio reception	Weak radio signal.	Direct the antenna for optimum reception.
	Interference caused by vicinity of electrical equipment like TVs, computers, engines, etc..	Keep the radio away from electrical equipment.
no or E indication	The CD is badly scratched or dirty. No CD is inserted.	Replace or clean the CD. Insert a CD.
	The CD is inserted upside down.	Insert CD with label upwards.
	The laser lens is steamed up.	Wait until the lens has cleared.
The CD skips tracks	The CD is damaged or dirty.	Replace or clean the CD.
	SHUFFLE or PROGRAM is active.	Switch off SHUFFLE or PROGRAM play.
Poor cassette sound quality	Dust and dirt on the heads, capstans, and pressure rollers.	Clean heads, capstans, and pressure rollers.
	Use of unsuitable cassette types (METAL or CHROME) for recording.	Only use NORMAL type cassettes for recording.
Recording does not work	Cassette tab(s) may be snapped off.	Apply a piece of adhesive tape over the aperture.

SPECIFICATIONS

GENERAL

Mains voltage	-/00/14 : 230 V -/01/11 : 120/230 V -/05 : 240 V -/17 : 120 V
Mains frequency	-/00/05/14 : 50 Hz -/01/11 : 50/60 Hz -/17 : 60 Hz
Power consumption	: 15 W
Dimension (W x H x D)	: 540 x 175 x 250 mm
Weight	: 5 Kg

AMPLIFIER

Output power	mains : 2 x 2 W battery : 2 x 2 W
Speaker impedance	: 2 x 4 ohm
Frequency response	: 100 Hz - 100 KHz

AUDIO/CASSETTE

Tape speed	: 4.76 cm/s ± 3%
Wow & flutter	: < 0.48 JIS UWTD
Fast-wind time (C60)	: < 110 sec.
Frequency response	P/B : 250 - 6300 Hz High speed dubbing : 125 - 8000 Hz
S/N ratio	: 40dB
Erase ratio	: > 50 dB
Bias frequency	: 73 ± 1.5 KHz

COMPACT DISC

Frequency response	±3dB : 30 - 16 KHz
Signal/hiss ratio	: > 80 dB
Distortion	at 1KHz : < 0.5 %
Channel difference	at 1KHz : > 2 dB
Channel crosstalk	at 1KHz : > 50 dB
Laser wavelength	: 780 ± 20 nm
Laser light power	: < 0.3 mW

TUNER - FM section


Tuning range	: 87.5 - 108 MHz
IF frequency	: 10.7 ± 0.2 MHz
Sensitivity	: < 22 dBf at 26dB S/N
Selectivity	: > 20 dB at 300KHz B.W.
IF rejection	: > 50 dB
Image rejection	: > 20 dB

TUNER - AM section

Tuning range	MW : 522 - 1607 KHz -17 : 520 - 1730 KHz LW : 148.5 - 284 KHz
IF frequency	: 468 ± 3 KHz
Sensitivity	MW : < 4000 µV/m at 26dB S/N LW : < 6000 µV/m at 26dB S/N
Selectivity	MW : > 16 dB LW : > 20 dB
IF rejection	MW : > 24 dB LW : > 26 dB
Image rejection	MW : > 28 dB LW : > 30 dB


DISASSEMBLY DIAGRAM

- A. To remove Front Cabinet Assembly
- B. To remove Cassette Doors
- C. To remove Tape Deck
- D. To remove CD Assembly
- E. To remove Audio Board Assembly
- F. To remove Tuner Board Assembly
- G. To remove Handle

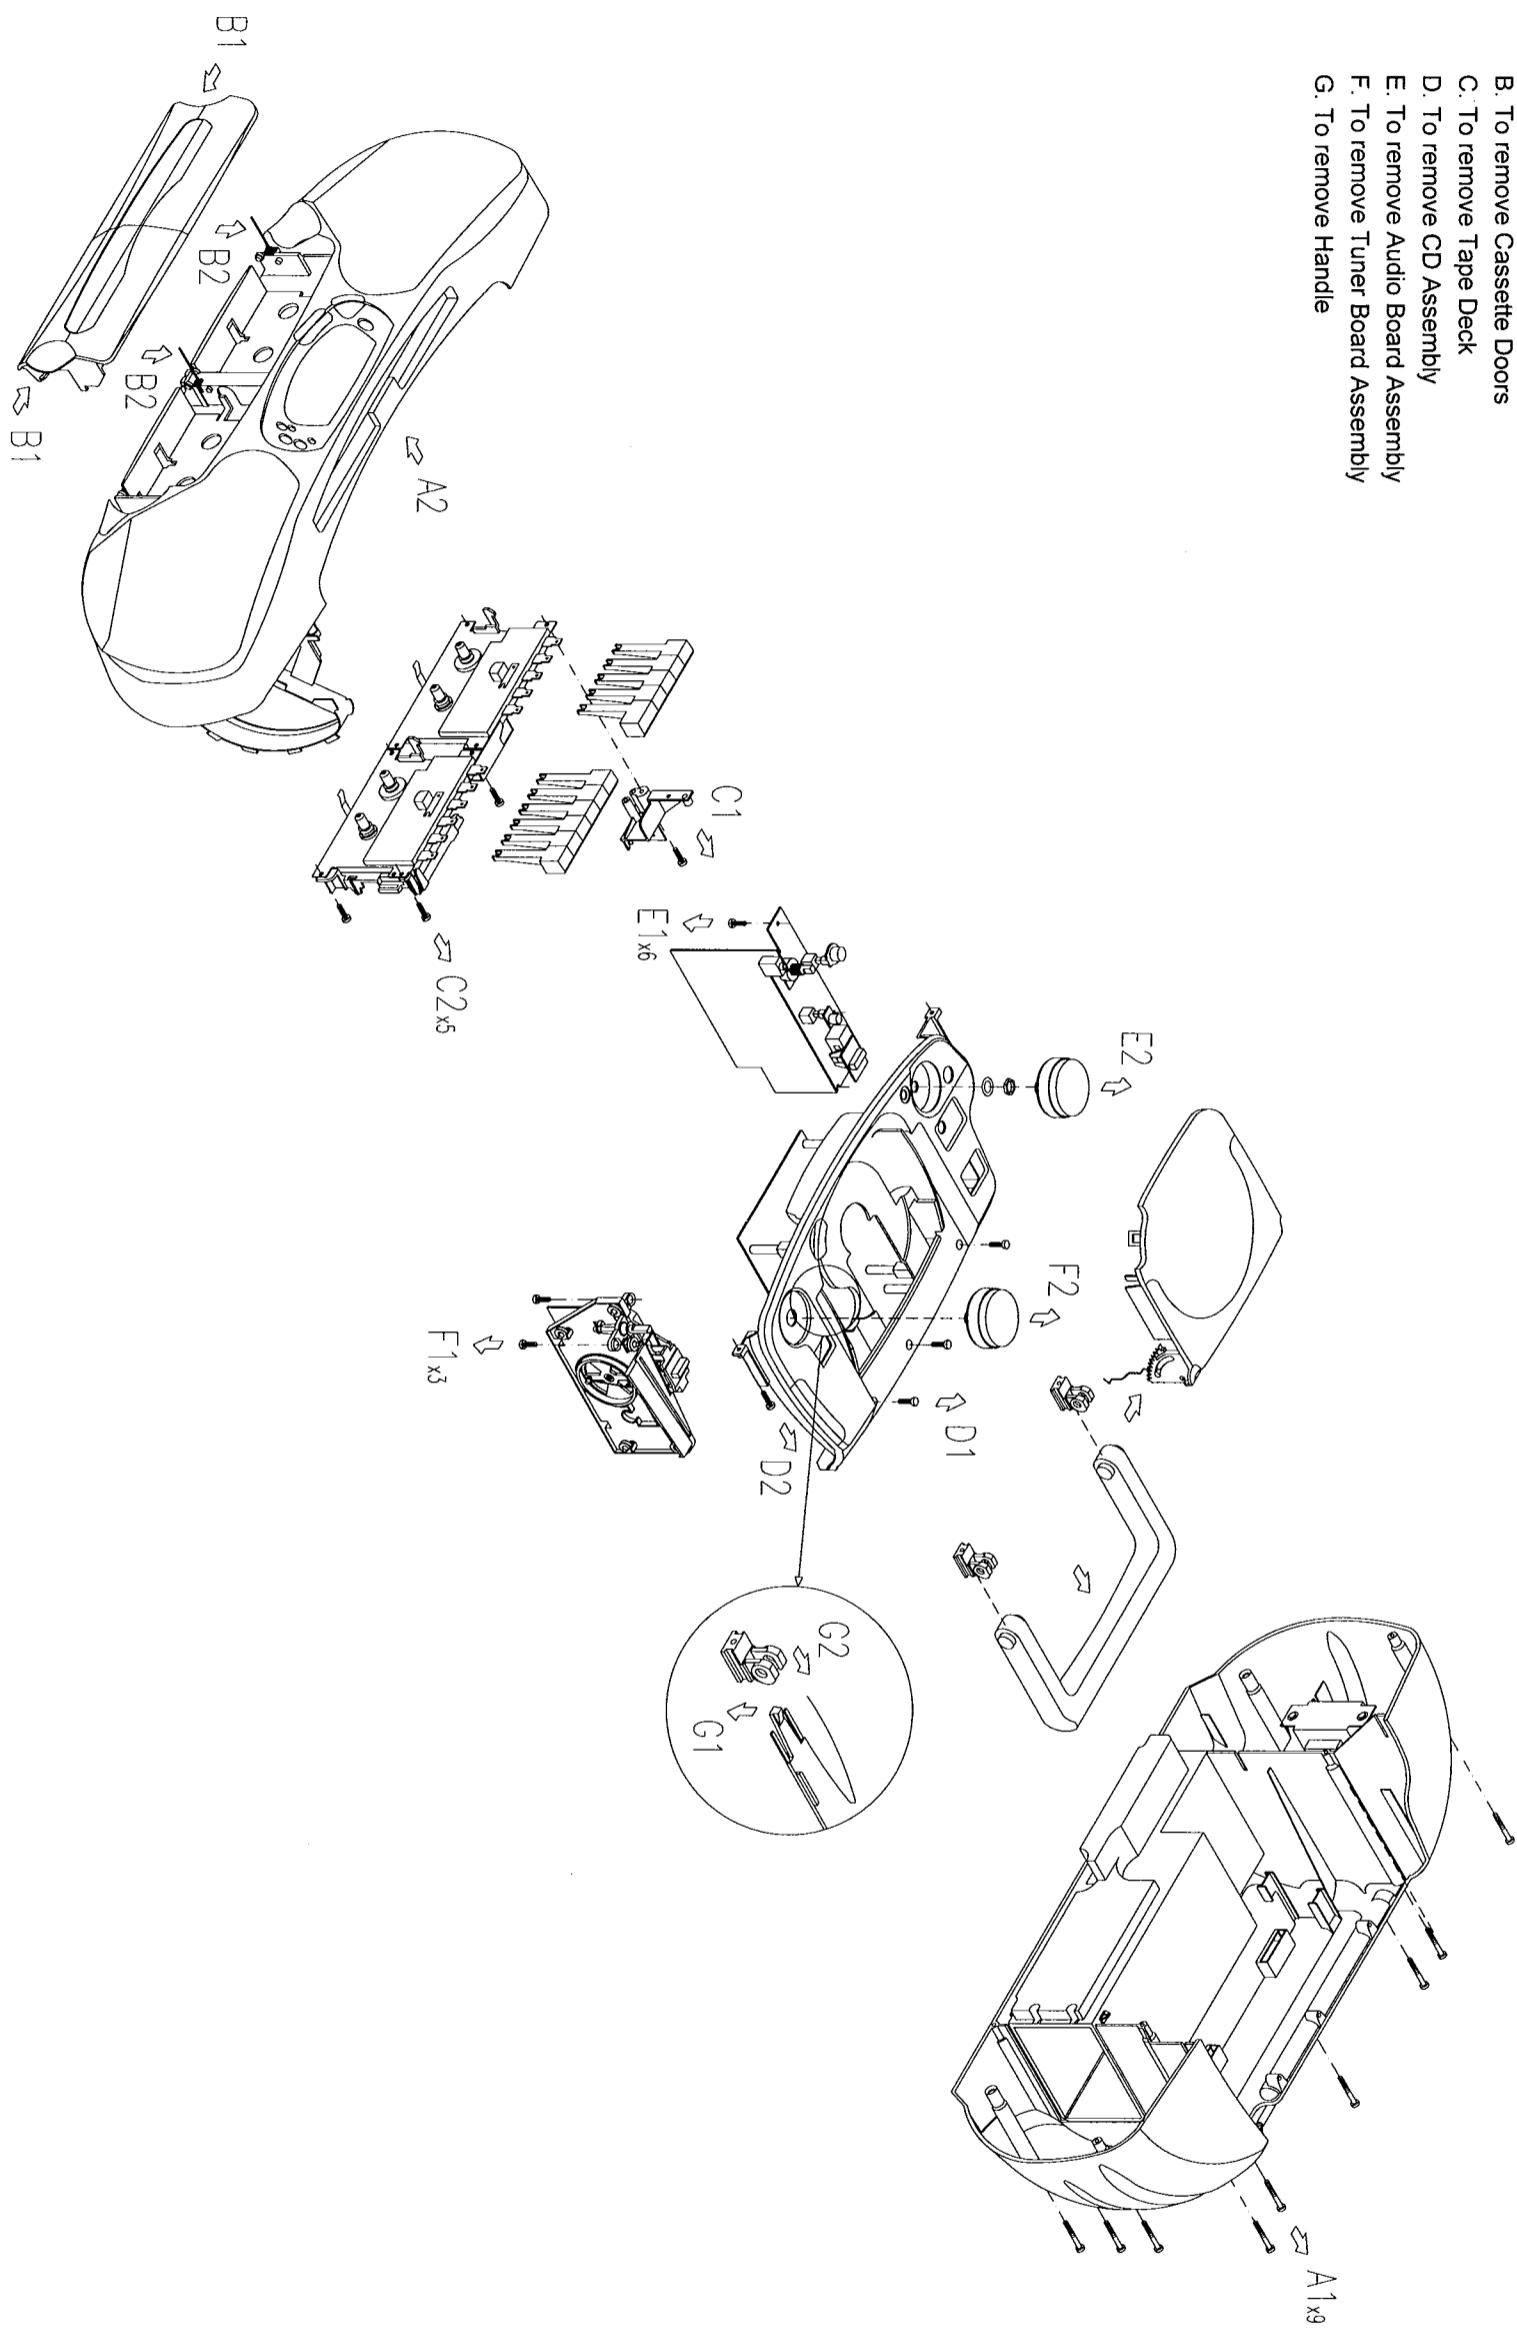


BLOCK DIAGRAM

AZ1602/ALL BLOCK DIAGRAM

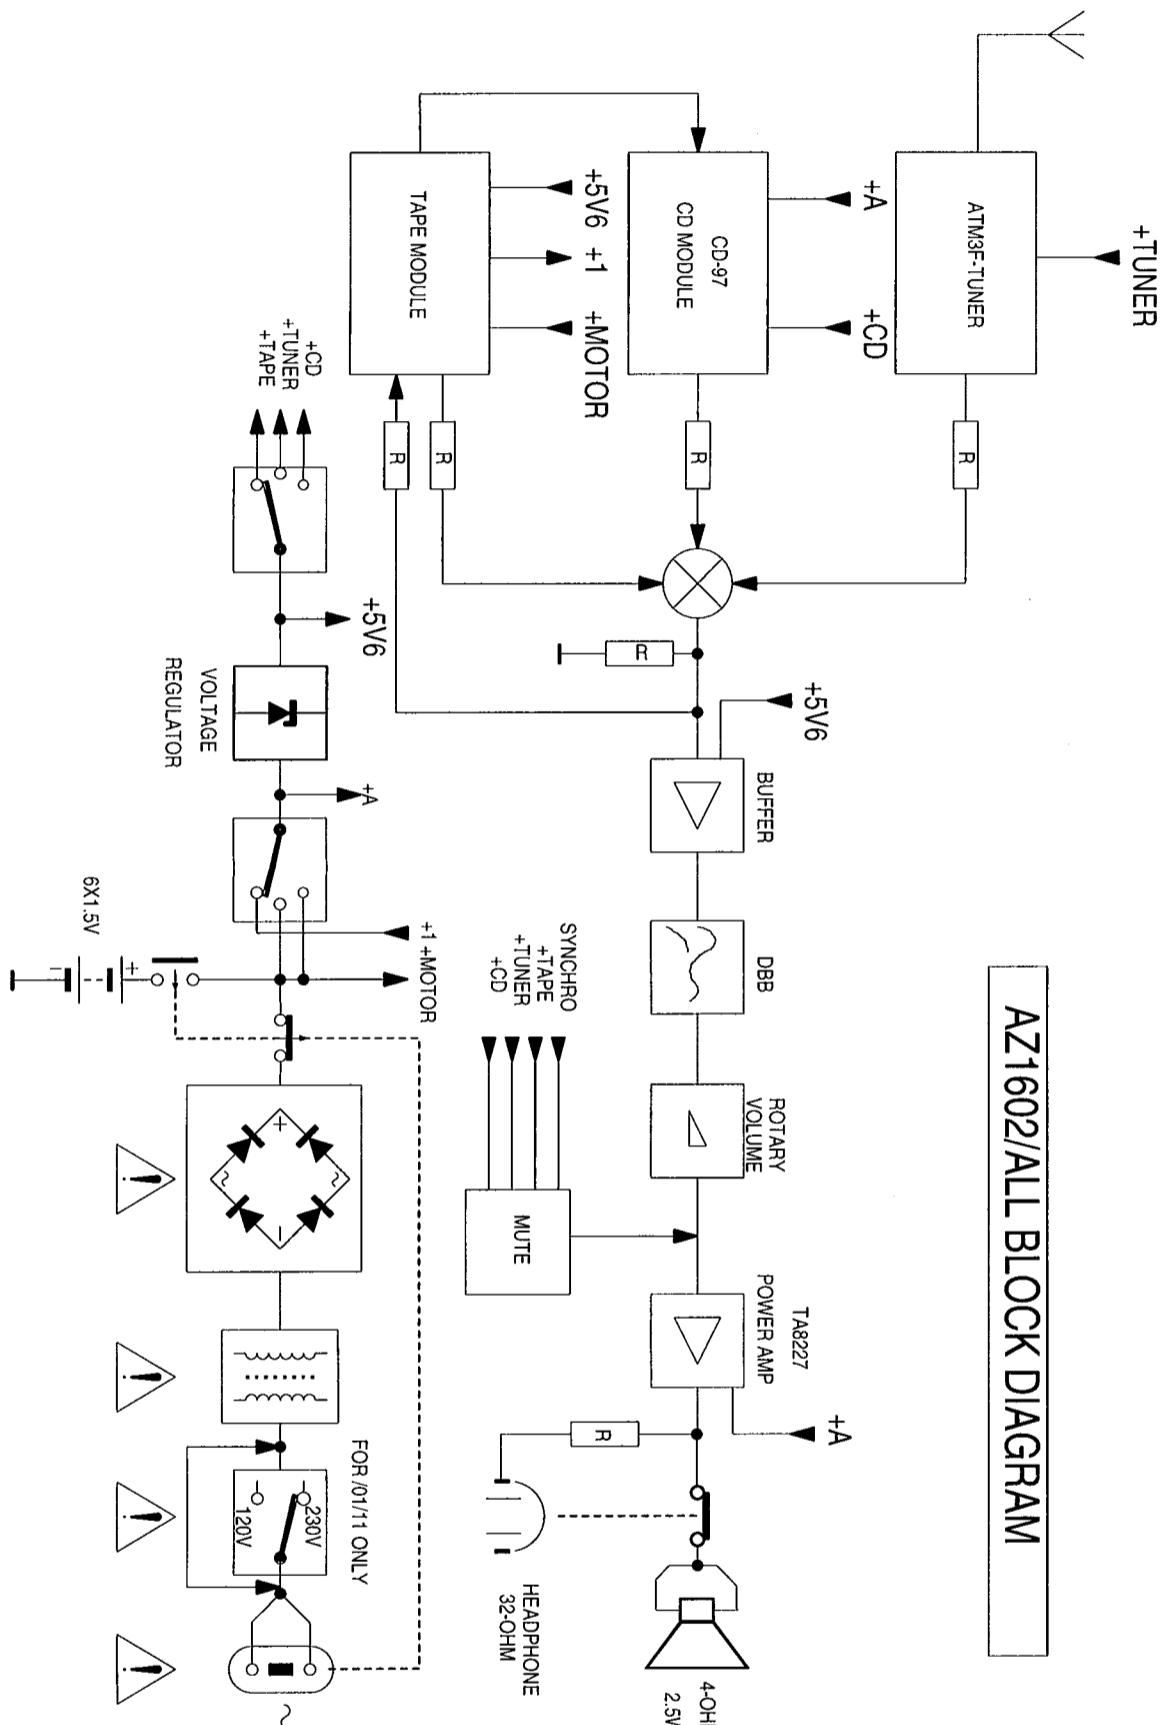


filename: /usr2/theda/tmp/3140/113/30961/01/a30/block


WIRING DIAGRAM

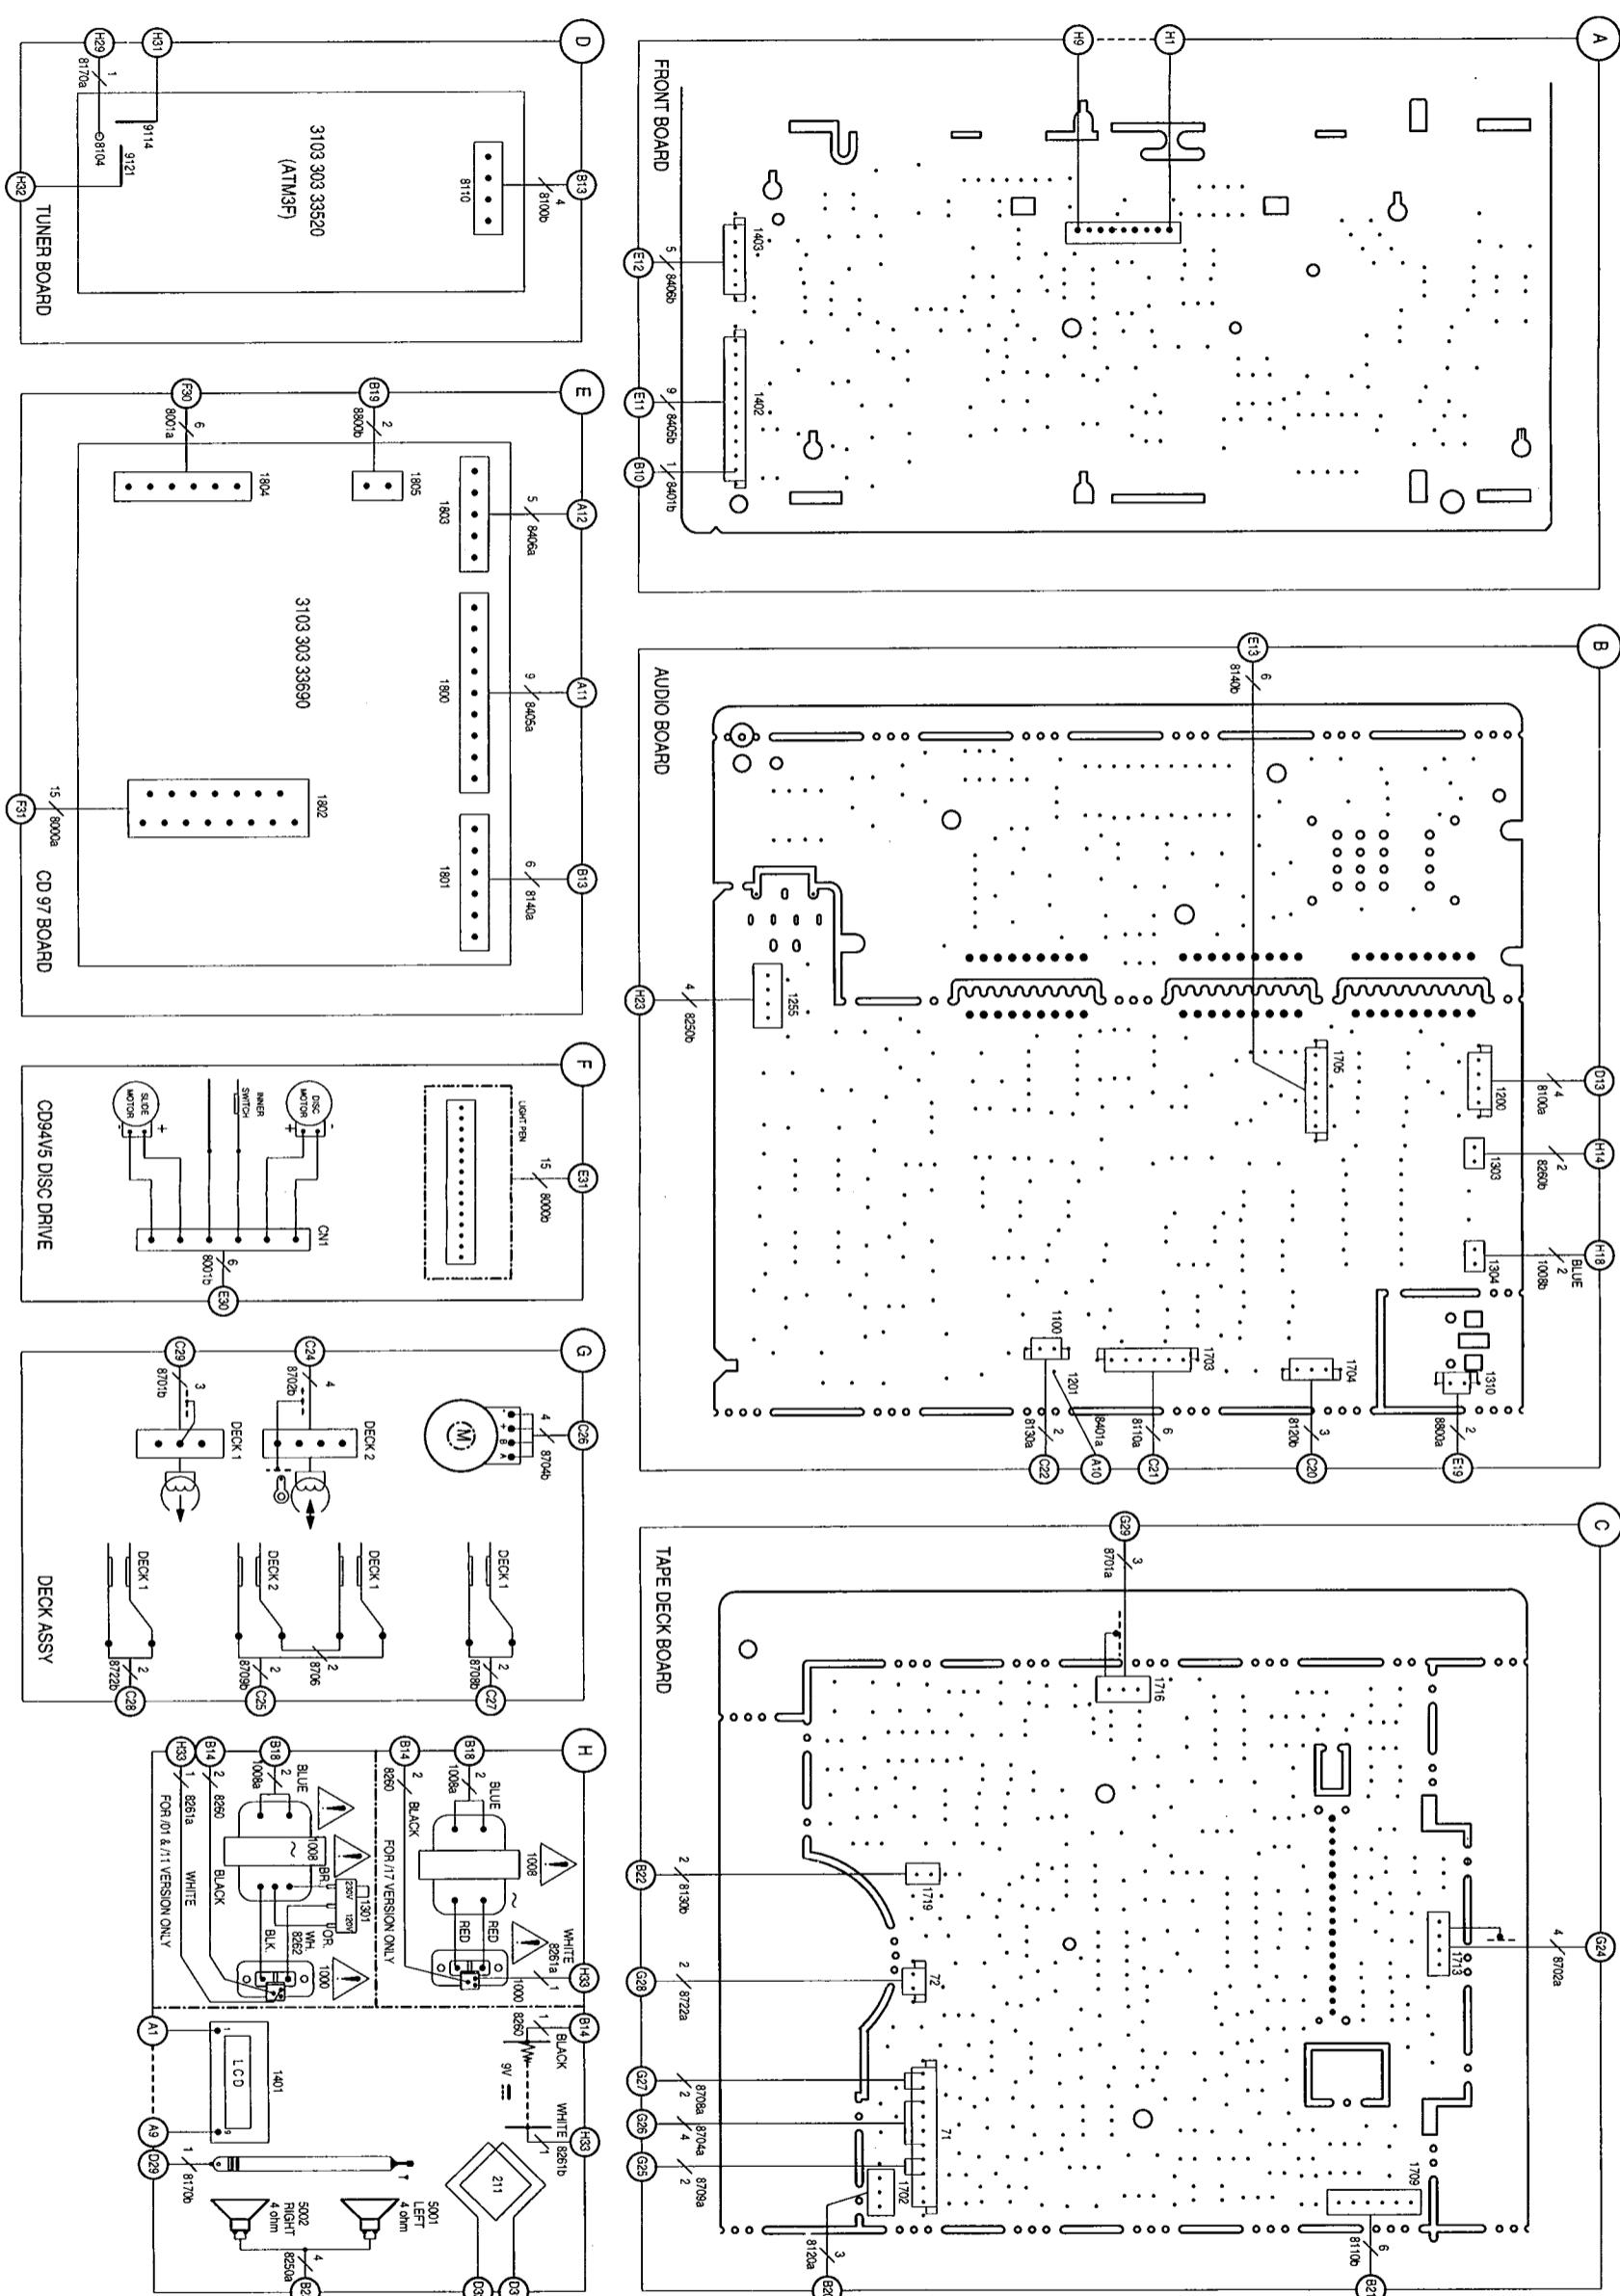

FRONT BOARD - CIRCUIT DIAGRAM

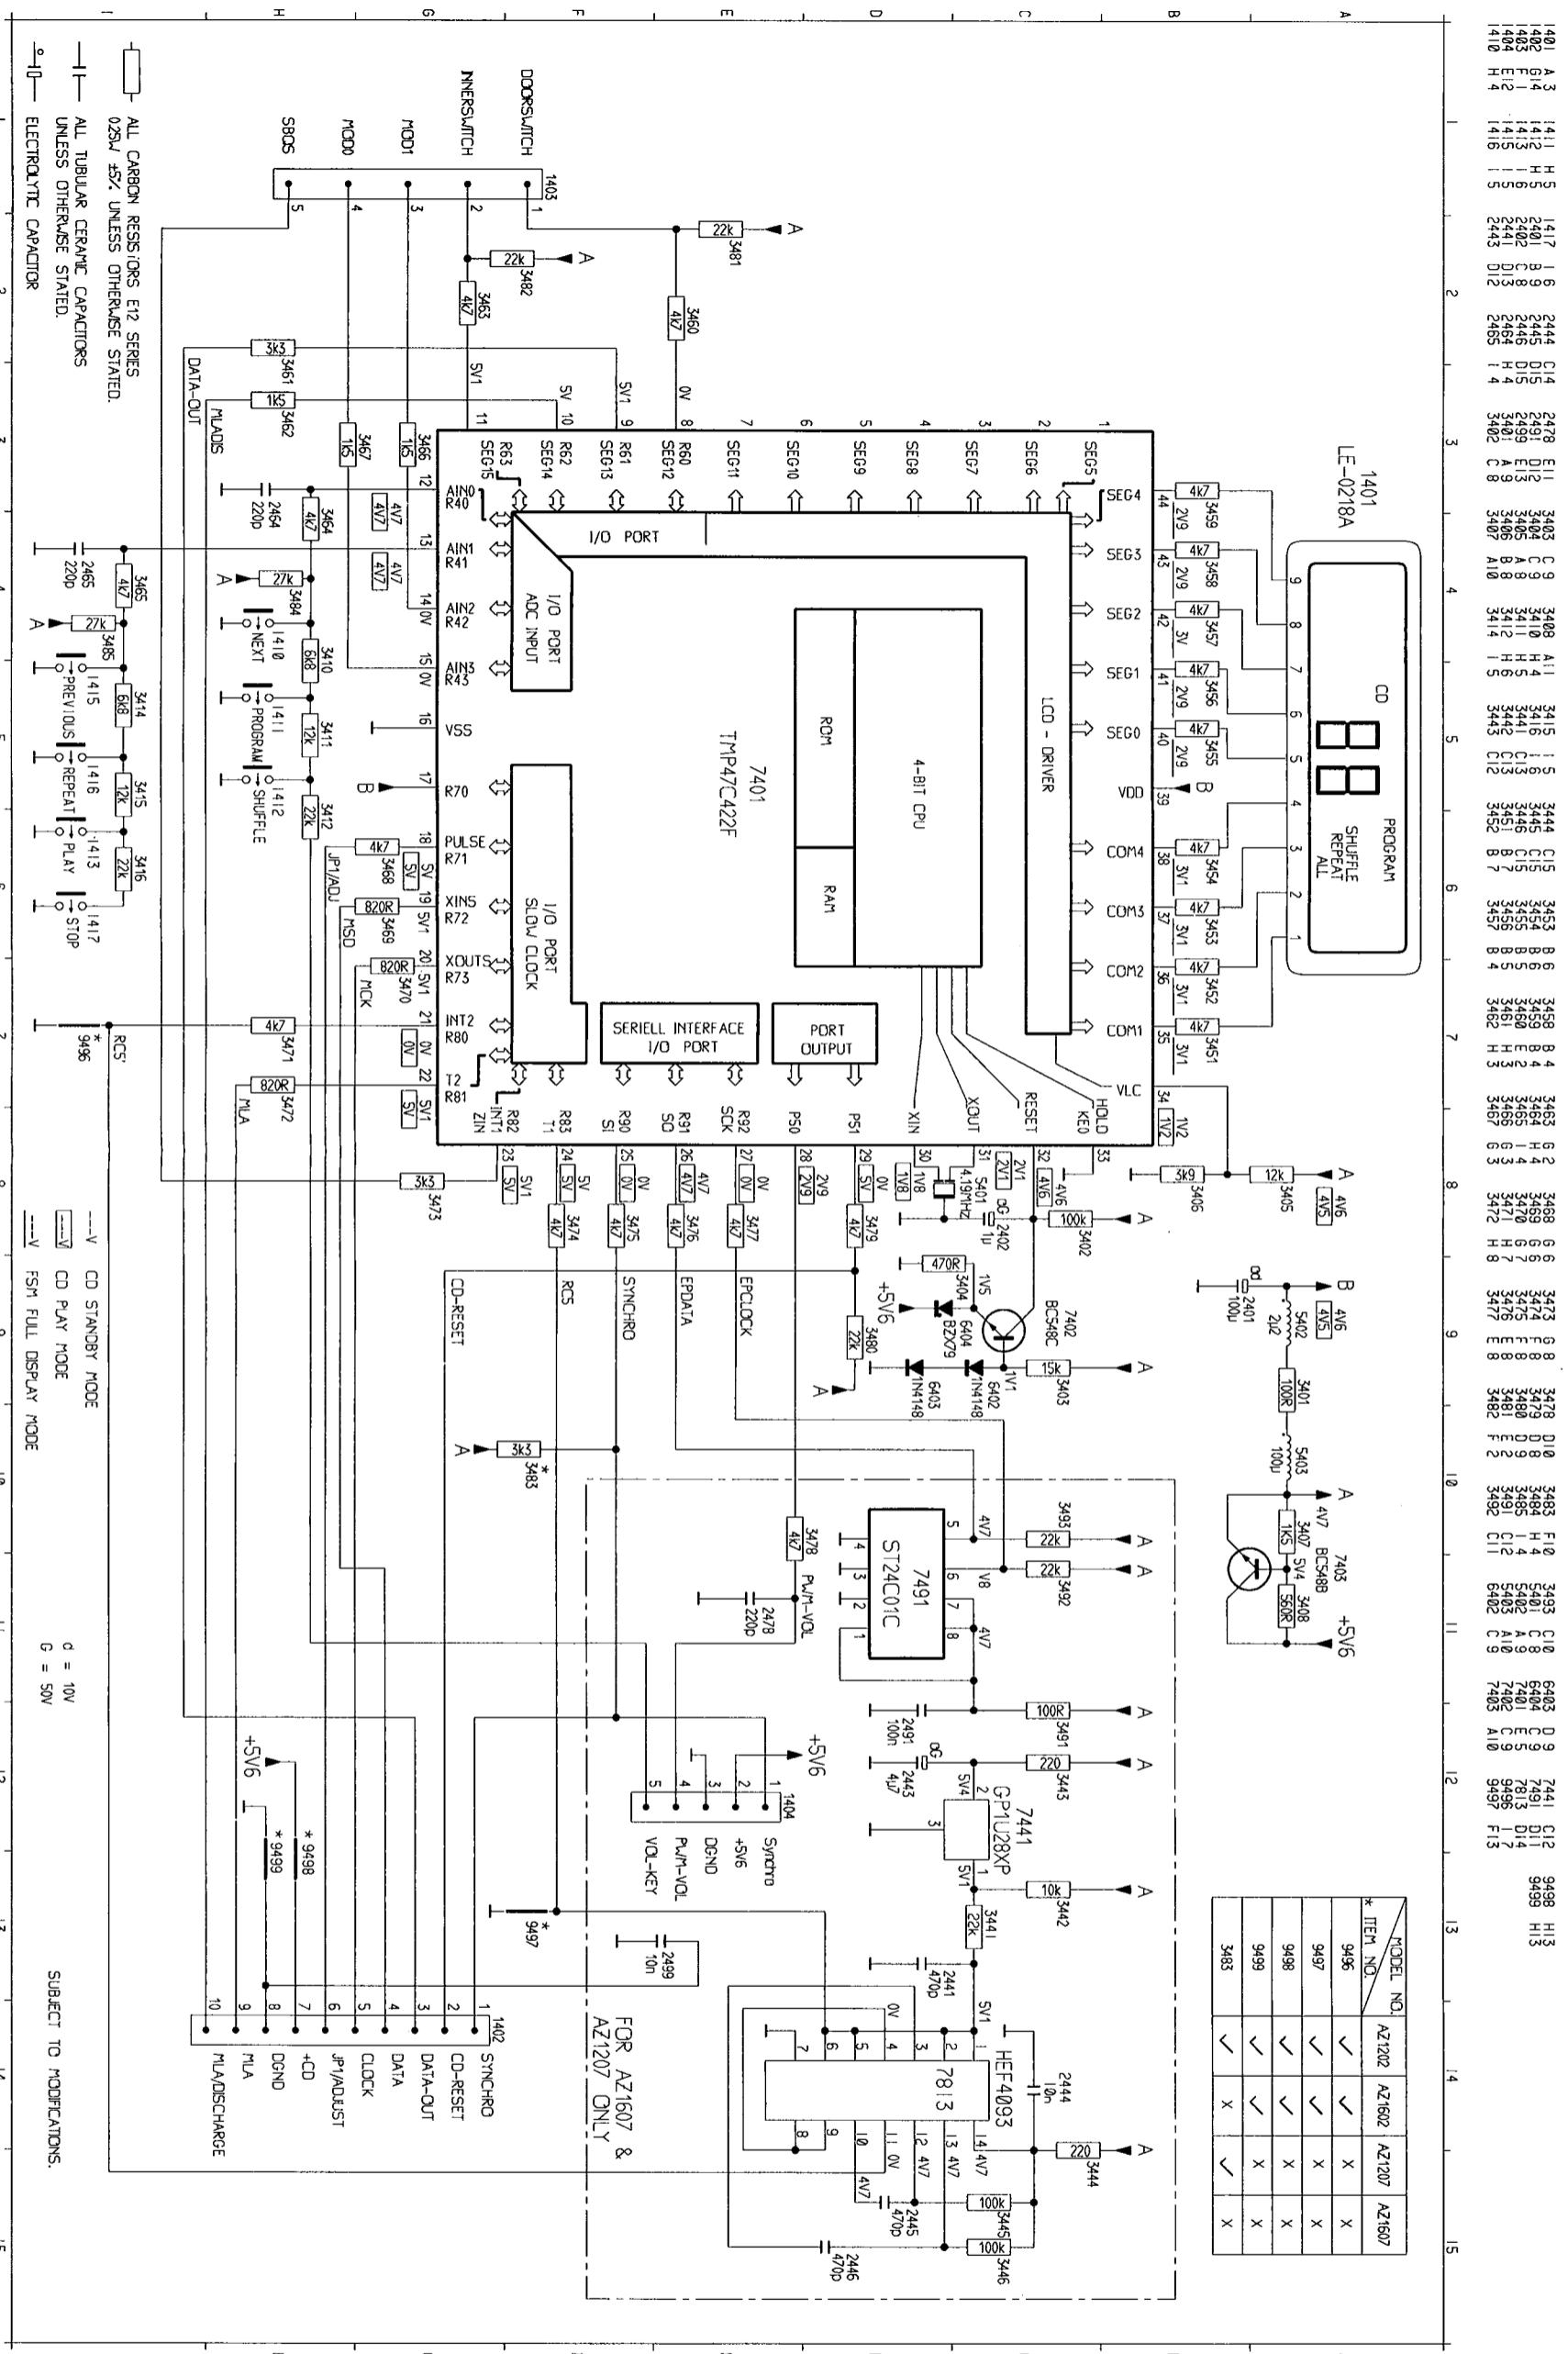

FRONT BOARD - LAYOUT DIAGRAM

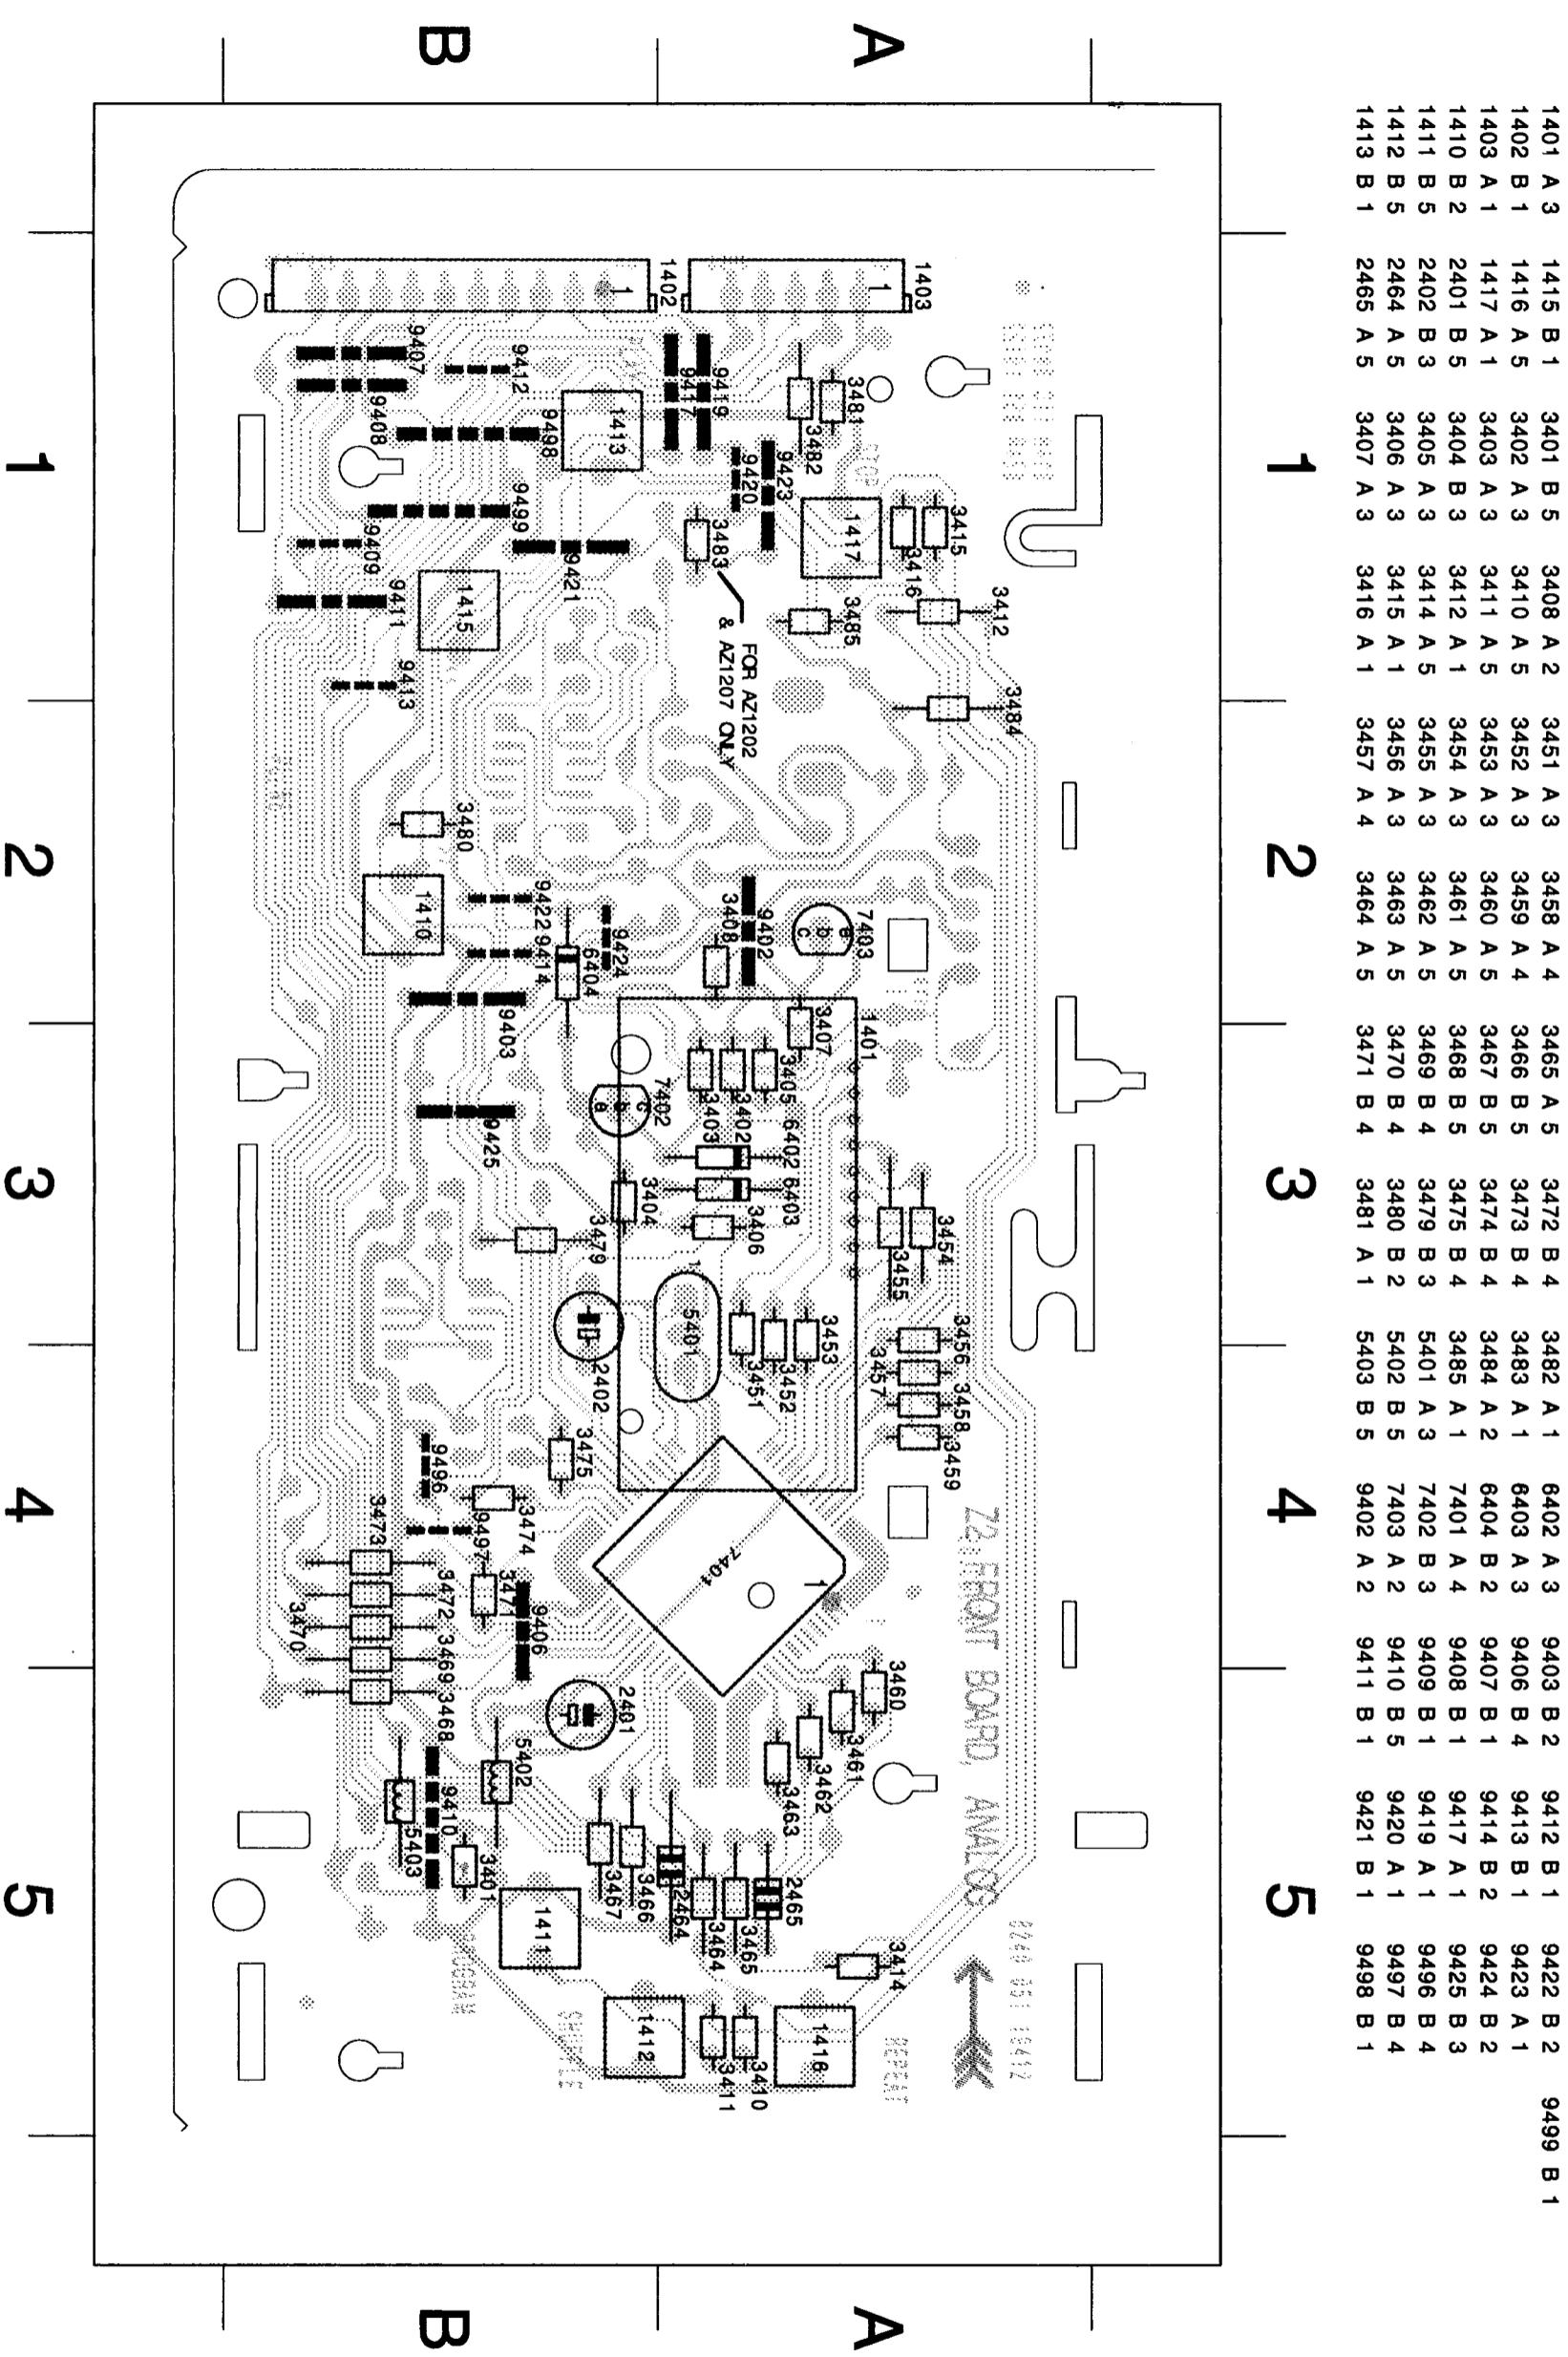

1201 B 1 2106 A 2 2124 B 4 2121 A 4 3103 A 4 3110 B 4 5106 B 3 6101 B 1 9101 B 3 9116 A 4
 1104 A 1 2107 B 3 2115 B 4 2122 A 4 3104 A 4 3111 A 1 5107a B 3 6102 B 1 9106 B 3 9117 A 1
 2103 B 2 2108 A 3 2116 B 4 2123 A 3 3105 A 4 3112 A 4 5107b B 4 6103 B 1 9107 B 3 9120 A 1
 2102 B 2 2109 A 3 2117 B 4 2124 A 3 3106 A 4 3113 A 4 5101 A 3 5107 C 4 7103 A 3 9109 B 3 9121 A 1
 2103 B 3 2110 A 2 2118 B 4 2125 A 3 3107 A 4 3102 A 2 5102 A 4 8101 A 3 9111 A 1 9122 A 4
 2104 B 2 2111 A 2 2119 B 4 2126 A 4 3108 A 4 3103 A 2 5103 A 3 5104 A 3 8102 A 3 9112 A 2 9123 A 1
 2105 B 2 2113 B 4 2120 A 4 3109 B 4 3102 A 4 5105 A 2 5111 A 2 8110 A 4 9114 A 2

1

2

3

4

TUNER ADJUSTMENT TABLE (ATM3 FM/AM - versions with AM-frame aerial)

Wavemode	Input Frequency	Input	Set tuned to	Adjust	Measure on	Scope / Counter
FM	87.5 - 108 MHz	A	lower band end	5104	1 or 2	
MW	87.35 MHz	A	upper band end	2106.C1	1 or 2	

OSCILLATOR

FM	87.5 - 108 MHz	A	lower band end	5104	1 or 2	
MW	87.35 MHz	A	upper band end	2106.C1	1 or 2	
MW	525 - 1607 kHz (530 - 1710 kHz)	C	lower band end	5105	1 or 2	

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157


158

159


ANALOG TUNER BOARD (ATM3F)

EWI WWW and EWSWW versions


FM/LW/MW and FMS/MW Versions

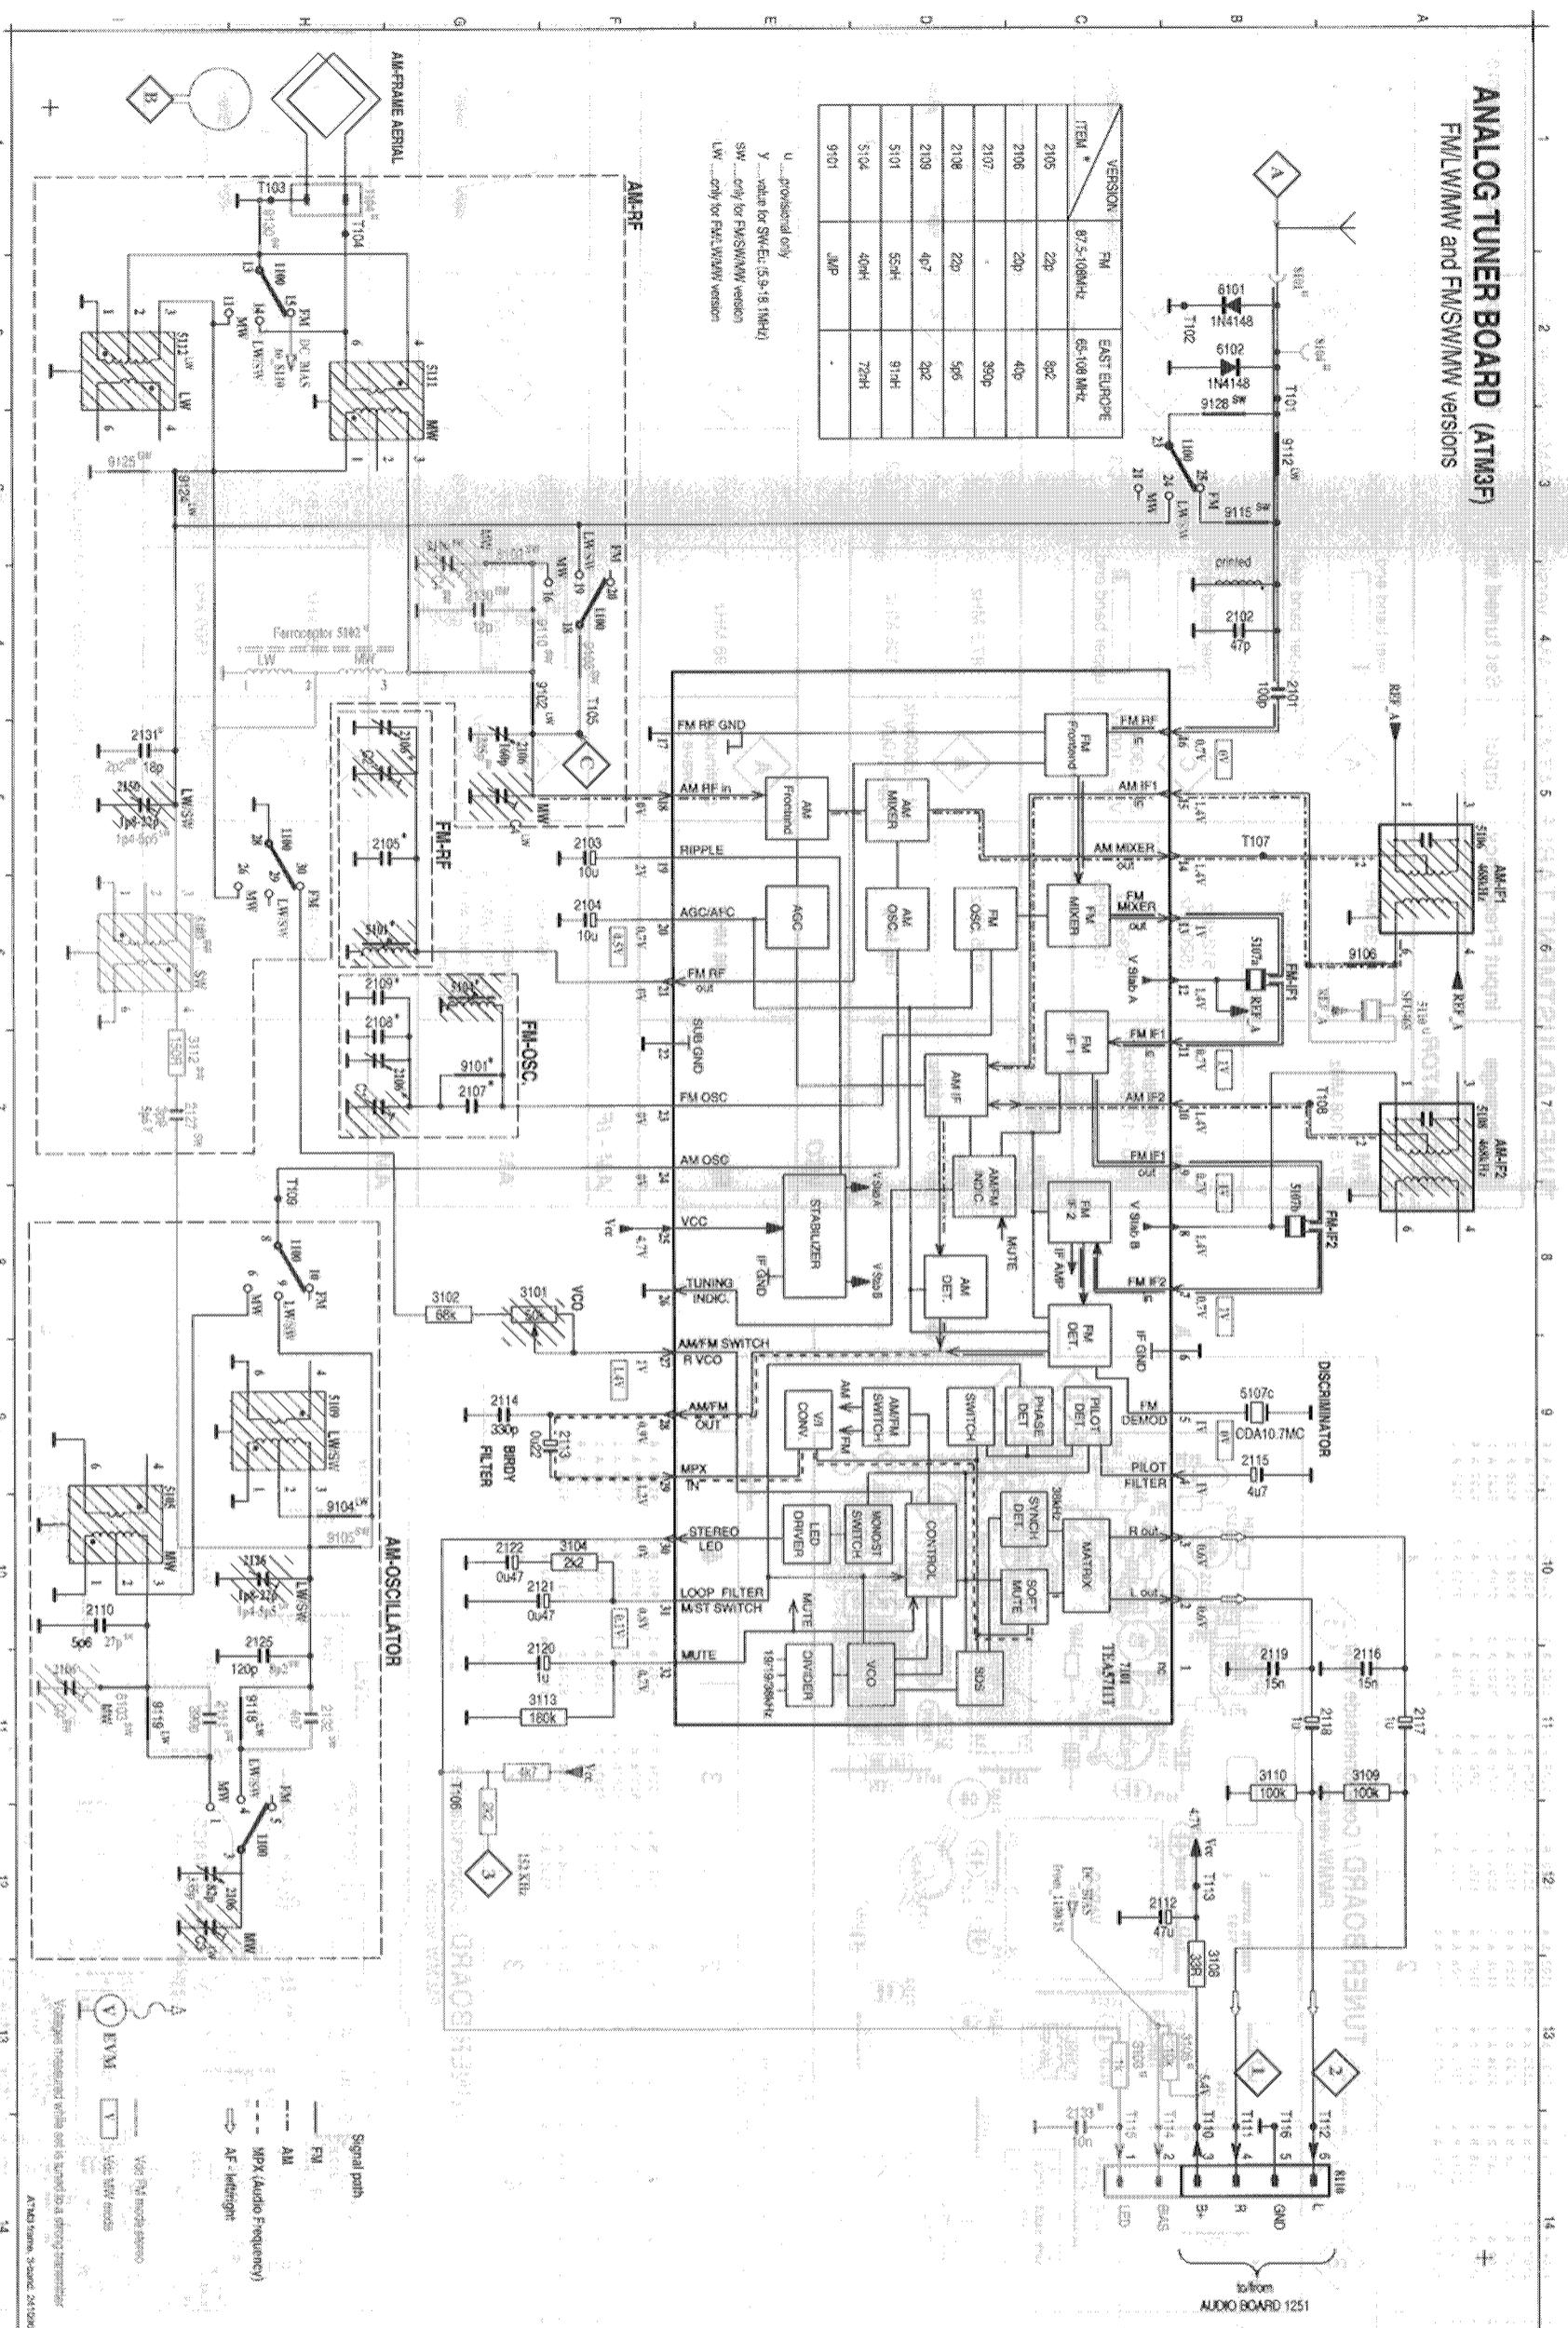

ECONOMIC



WAVE RANGE SWITCH 100



TUNER ADJUSTMENT TABLE (ATM3 FMLW/MW- versions with AM-frame aerial)

Wavrange	Input Frequency	Input	Set tuned to	Adjust	Measure on	Scope / Counter
OSCILLATOR						
MW 505 - 1607 kHz (65 - 108 MHz) ¹⁾	108.25 MHz	V _{HIF} = 100μV	Af = ±500kHz V _{HIF} = 100μV	lower band end upper band end	5104	1 or 2
FM 87.5 - 108 MHz (65 - 108 MHz) ¹⁾	87.35 MHz (66.7 MHz)					
LW ³⁾ 87.5 - 284 kHz (65 - 108 MHz) ¹⁾	147 kHz	V _{HIF} = 100μV	upper band end lower band end	2106 C4	1 or 2	
AM - IF	87.5 MHz (65 MHz)	A	87.5 MHz (65 MHz)	5101	1 or 2	
VCO	87.5 MHz (65 MHz)	A	87.5 MHz (65 MHz)	5101	1 or 2	
AM	468 kHz	C	468 kHz	5106	1 or 2	
	connect pin 24 of IC 7101 (AM Osc) with short wire to ground		IC 7101 pin 24			
FM	98 MHz	A	98 MHz	3101	3	
	V _{HIF} = 1 mV		continuous wave			
LW ³⁾	260 kHz	B	560 kHz	2106 C2	1 or 2	
	170 kHz		170 kHz	5108	2	
	260 kHz		170 kHz	5112	1 or 2	
	2150		2150			

repeat*

¹⁾ for East Europe /14

²⁾ for USA /17

³⁾ LW not for all versions

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*

*


*

*


*

*

AUDIO BOARD - CIRCUIT DIAGRAM

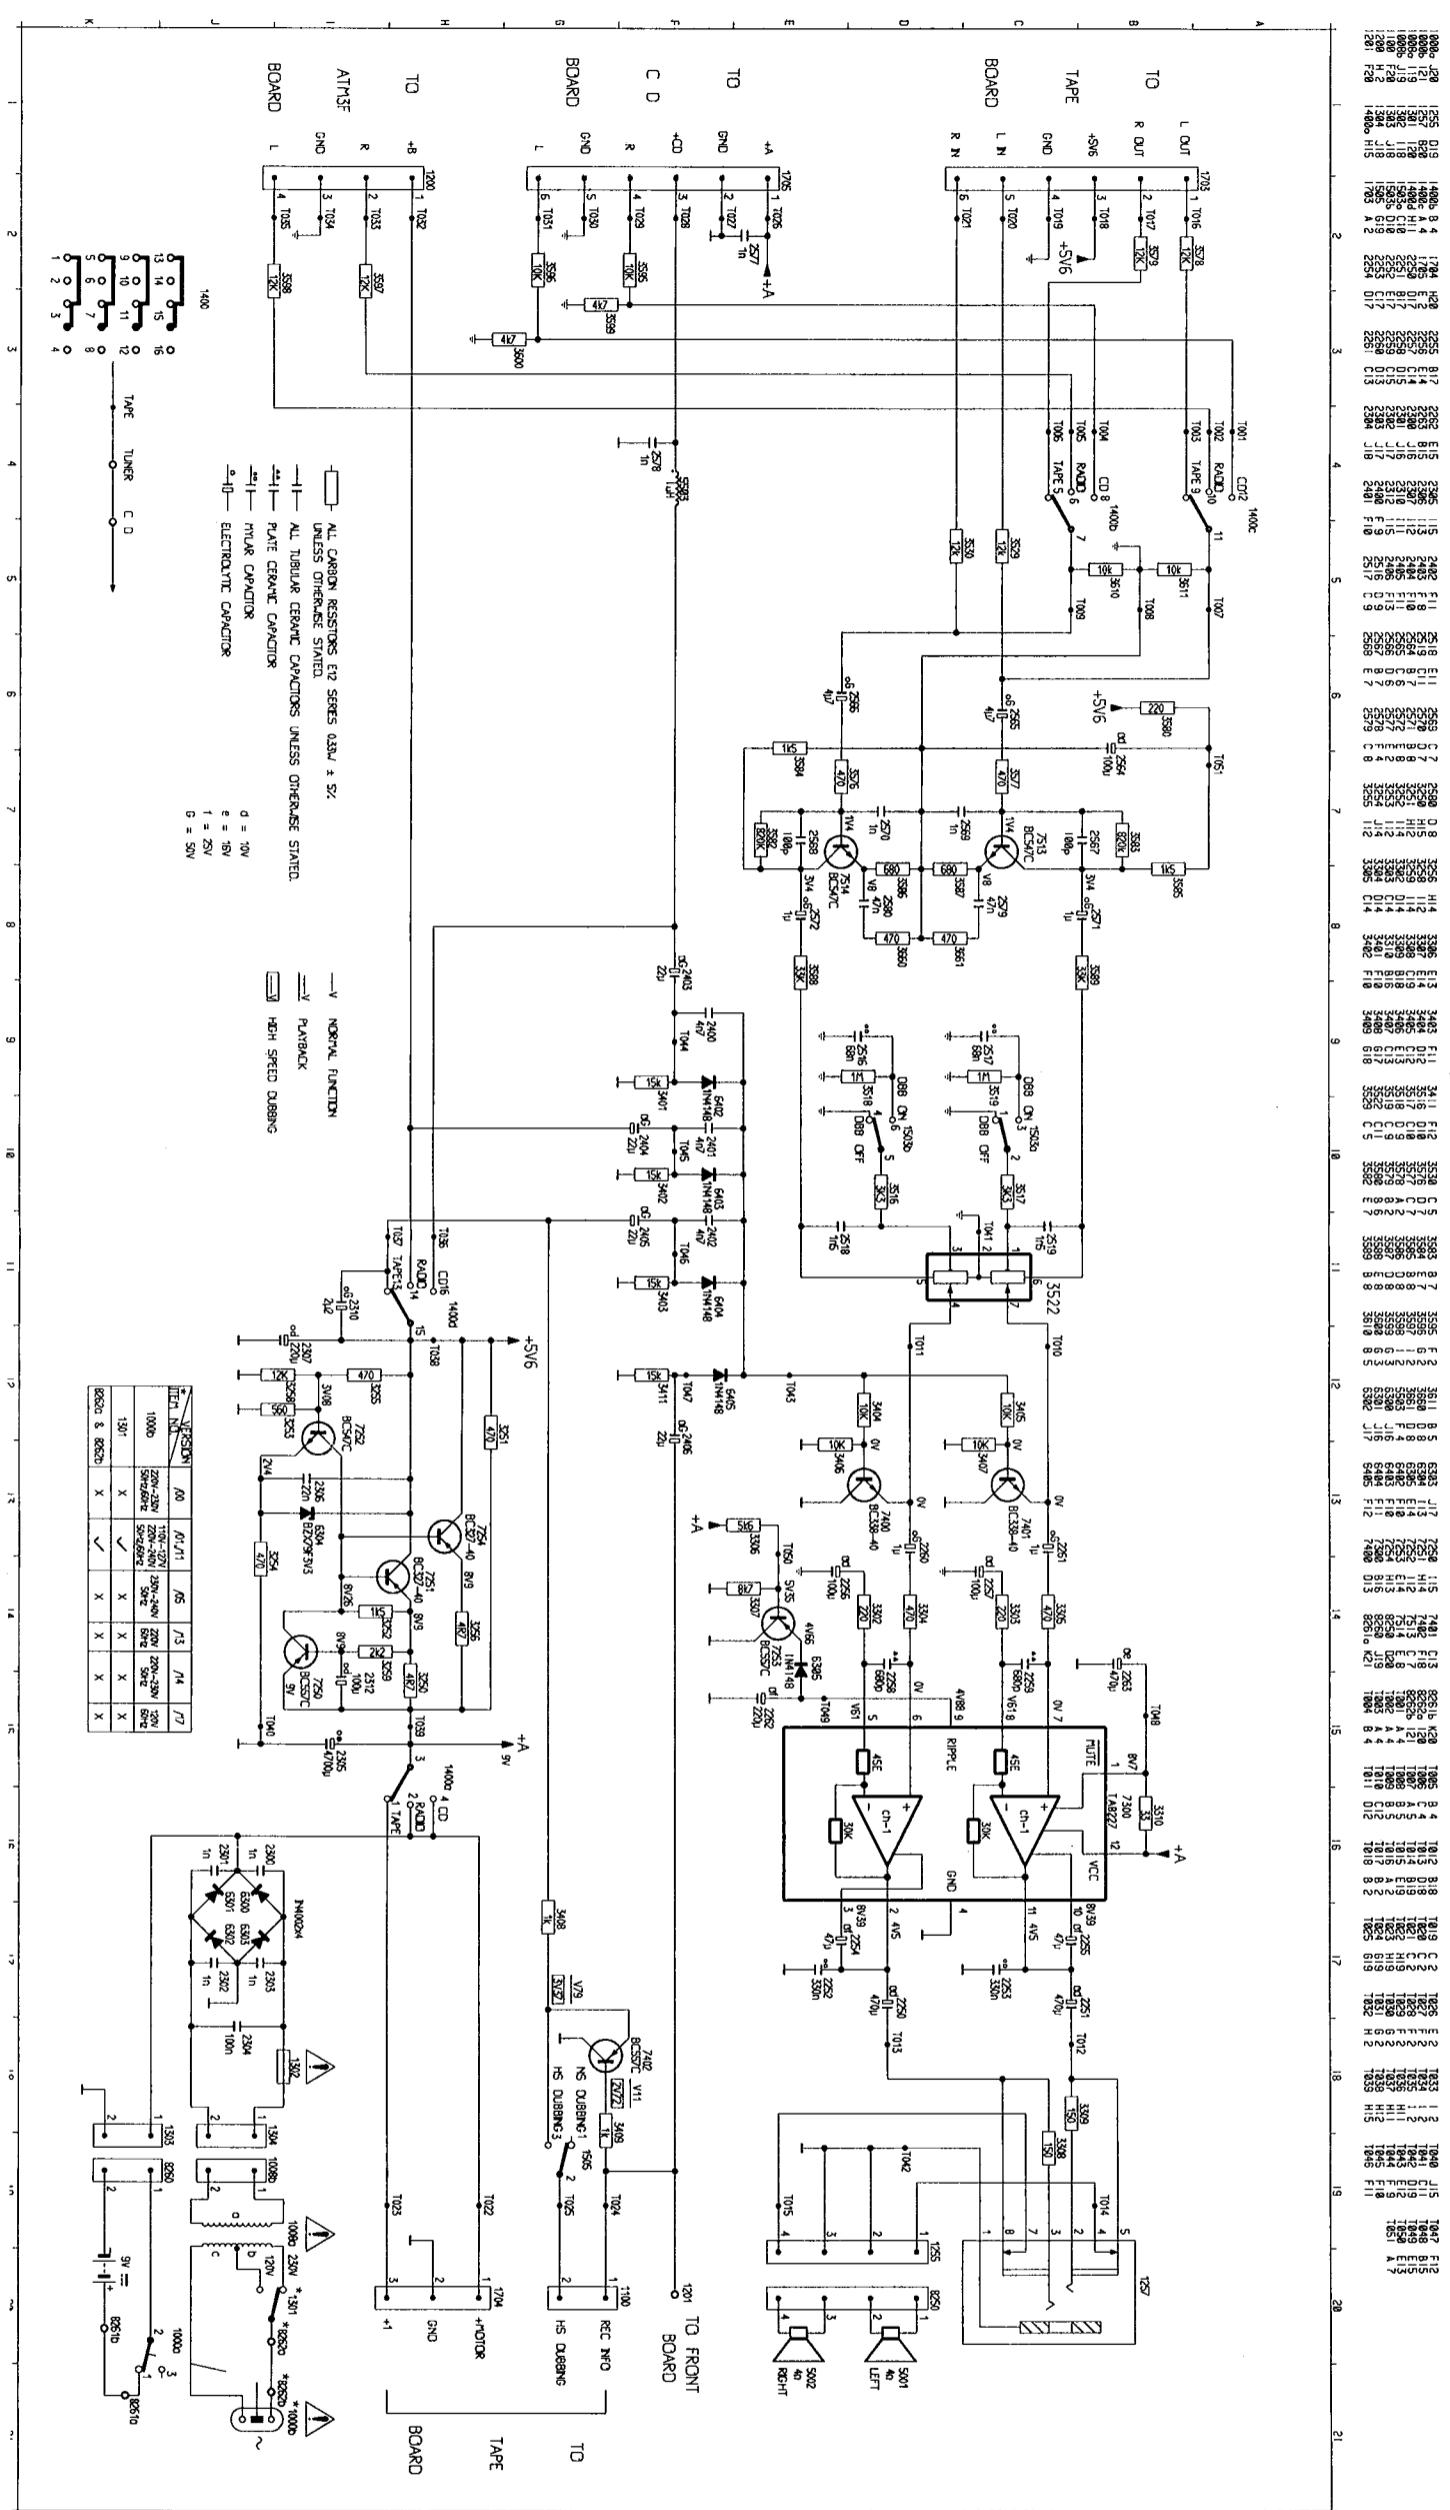


AUDIO BOARD - LAYOUT DIAGRAM

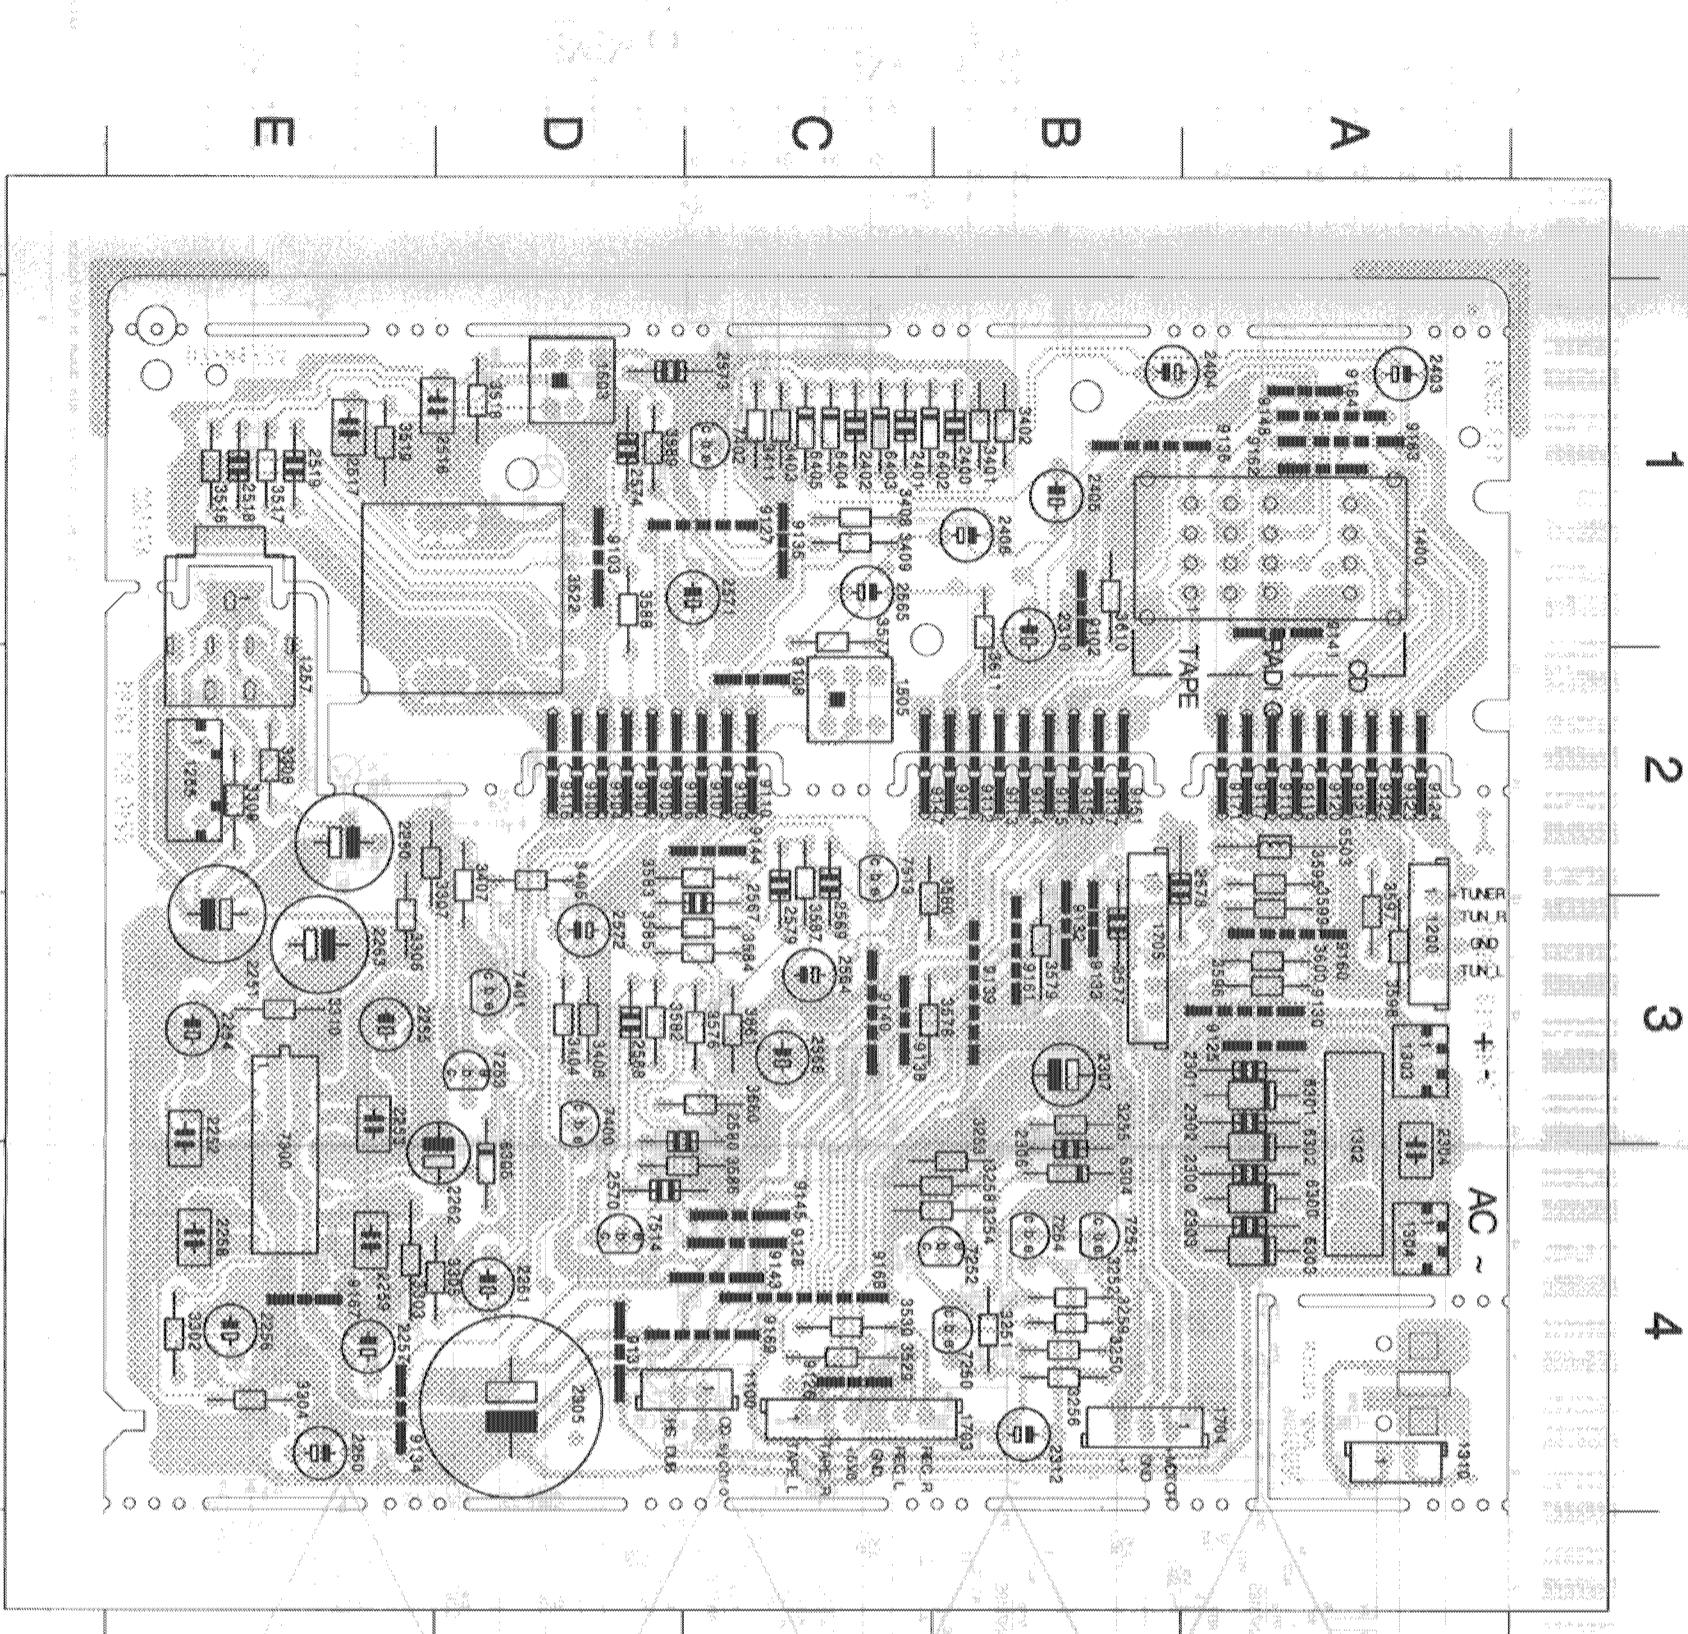


1100 C 4	3253 B 4	7251 B 4
1200 A 3	3254 B 4	7252 B 4
1255 E 2	3255 B 3	7253 D 3
1257 E 2	3256 B 4	7254 B 4
1302 A 4	3258 B 4	7300 E 4
1303 A 3	3259 B 4	7400 D 3
1304 A 4	3302 E 4	7401 D 3
1310 A 4	3303 E 4	7402 C 1
1400 A 1	3305 D 4	7513 C 2
1503 D 1	3306 E 3	8100 D 2
1505 C 2	3308 E 3	8107 E 2
1703 C 4	3307 E 2	9101 D 2
1704 B 4	3308 E 2	9102 B 1
1705 B 3	3309 E 2	9103 D 1
2250 E 2	3310 E 3	9104 D 2
2251 E 3	3401 B 1	9105 D 2
2252 E 3	3402 B 1	9106 D 2
2253 E 3	3403 C 1	9107 C 2
2254 E 3	3404 D 3	9108 C 2
2255 E 3	3405 D 2	9109 C 2
2256 E 4	3406 D 3	9110 C 2
2257 E 4	3407 D 2	9111 B 2
2258 E 4	3408 C 1	9112 B 2
2259 E 4	3409 C 1	9113 B 2
2260 E 4	3411 C 1	9114 B 2
2261 D 4	3516 E 1	9115 B 2
2262 D 4	3517 E 1	9116 D 2
2263 E 3	3518 D 1	9117 A 2
2300 A 4	3519 E 1	9118 A 2
2301 A 3	3522 D 1	9119 A 2
2305 D 4	3577 C 1	9123 A 2
2306 B 4	3578 C 3	9124 A 2
2307 B 3	3579 B 3	9125 A 3
2308 A 4	3590 C 4	9121 A 2
2312 B 4	3582 D 3	9127 C 1
2400 B 1	3583 C 2	9128 C 4
2401 C 1	3584 C 3	9130 A 3
2402 C 1	3585 C 3	9131 D 4
2403 A 1	3586 D 4	9132 B 3
2404 B 1	3587 C 2	9133 B 3
2405 B 1	3588 D 1	9134 E 4
2406 B 1	3589 D 1	9135 C 1
2516 D 1	3595 A 2	9136 B 1
2517 E 1	3596 A 3	9137 B 2
2518 E 1	3597 A 3	9138 C 3
2519 E 1	3598 A 3	9139 B 3
2564 C 3	3599 A 3	9140 C 3
2565 C 1	3600 A 3	9141 A 1
2566 C 3	3610 B 1	9143 C 4
2567 C 3	3611 B 1	9144 C 2
2568 D 3	3660 C 3	9145 C 4
2569 C 2	3661 C 3	9147 C 2
2670 D 4	3603 A 2	9148 A 1
2671 C 1	6300 A 2	9151 B 2
2672 D 3	6301 A 3	9152 B 2
2573 D 1	6302 A 4	9160 A 3
2574 D 1	6303 A 4	9161 B 3
2577 B 3	6304 B 4	9162 A 1
2578 B 2	6305 D 4	9163 A 1
2579 C 2	6402 C 1	9164 A 1
2580 D 3	6403 C 1	9167 E 4
3250 B 4	6404 C 1	9168 C 4
3251 B 4	6405 C 1	9169 C 4
3252 B 4	7250 B 4	9171 A 2

TAPE BOARD - CIRCUIT DIAGRAM (MTF)

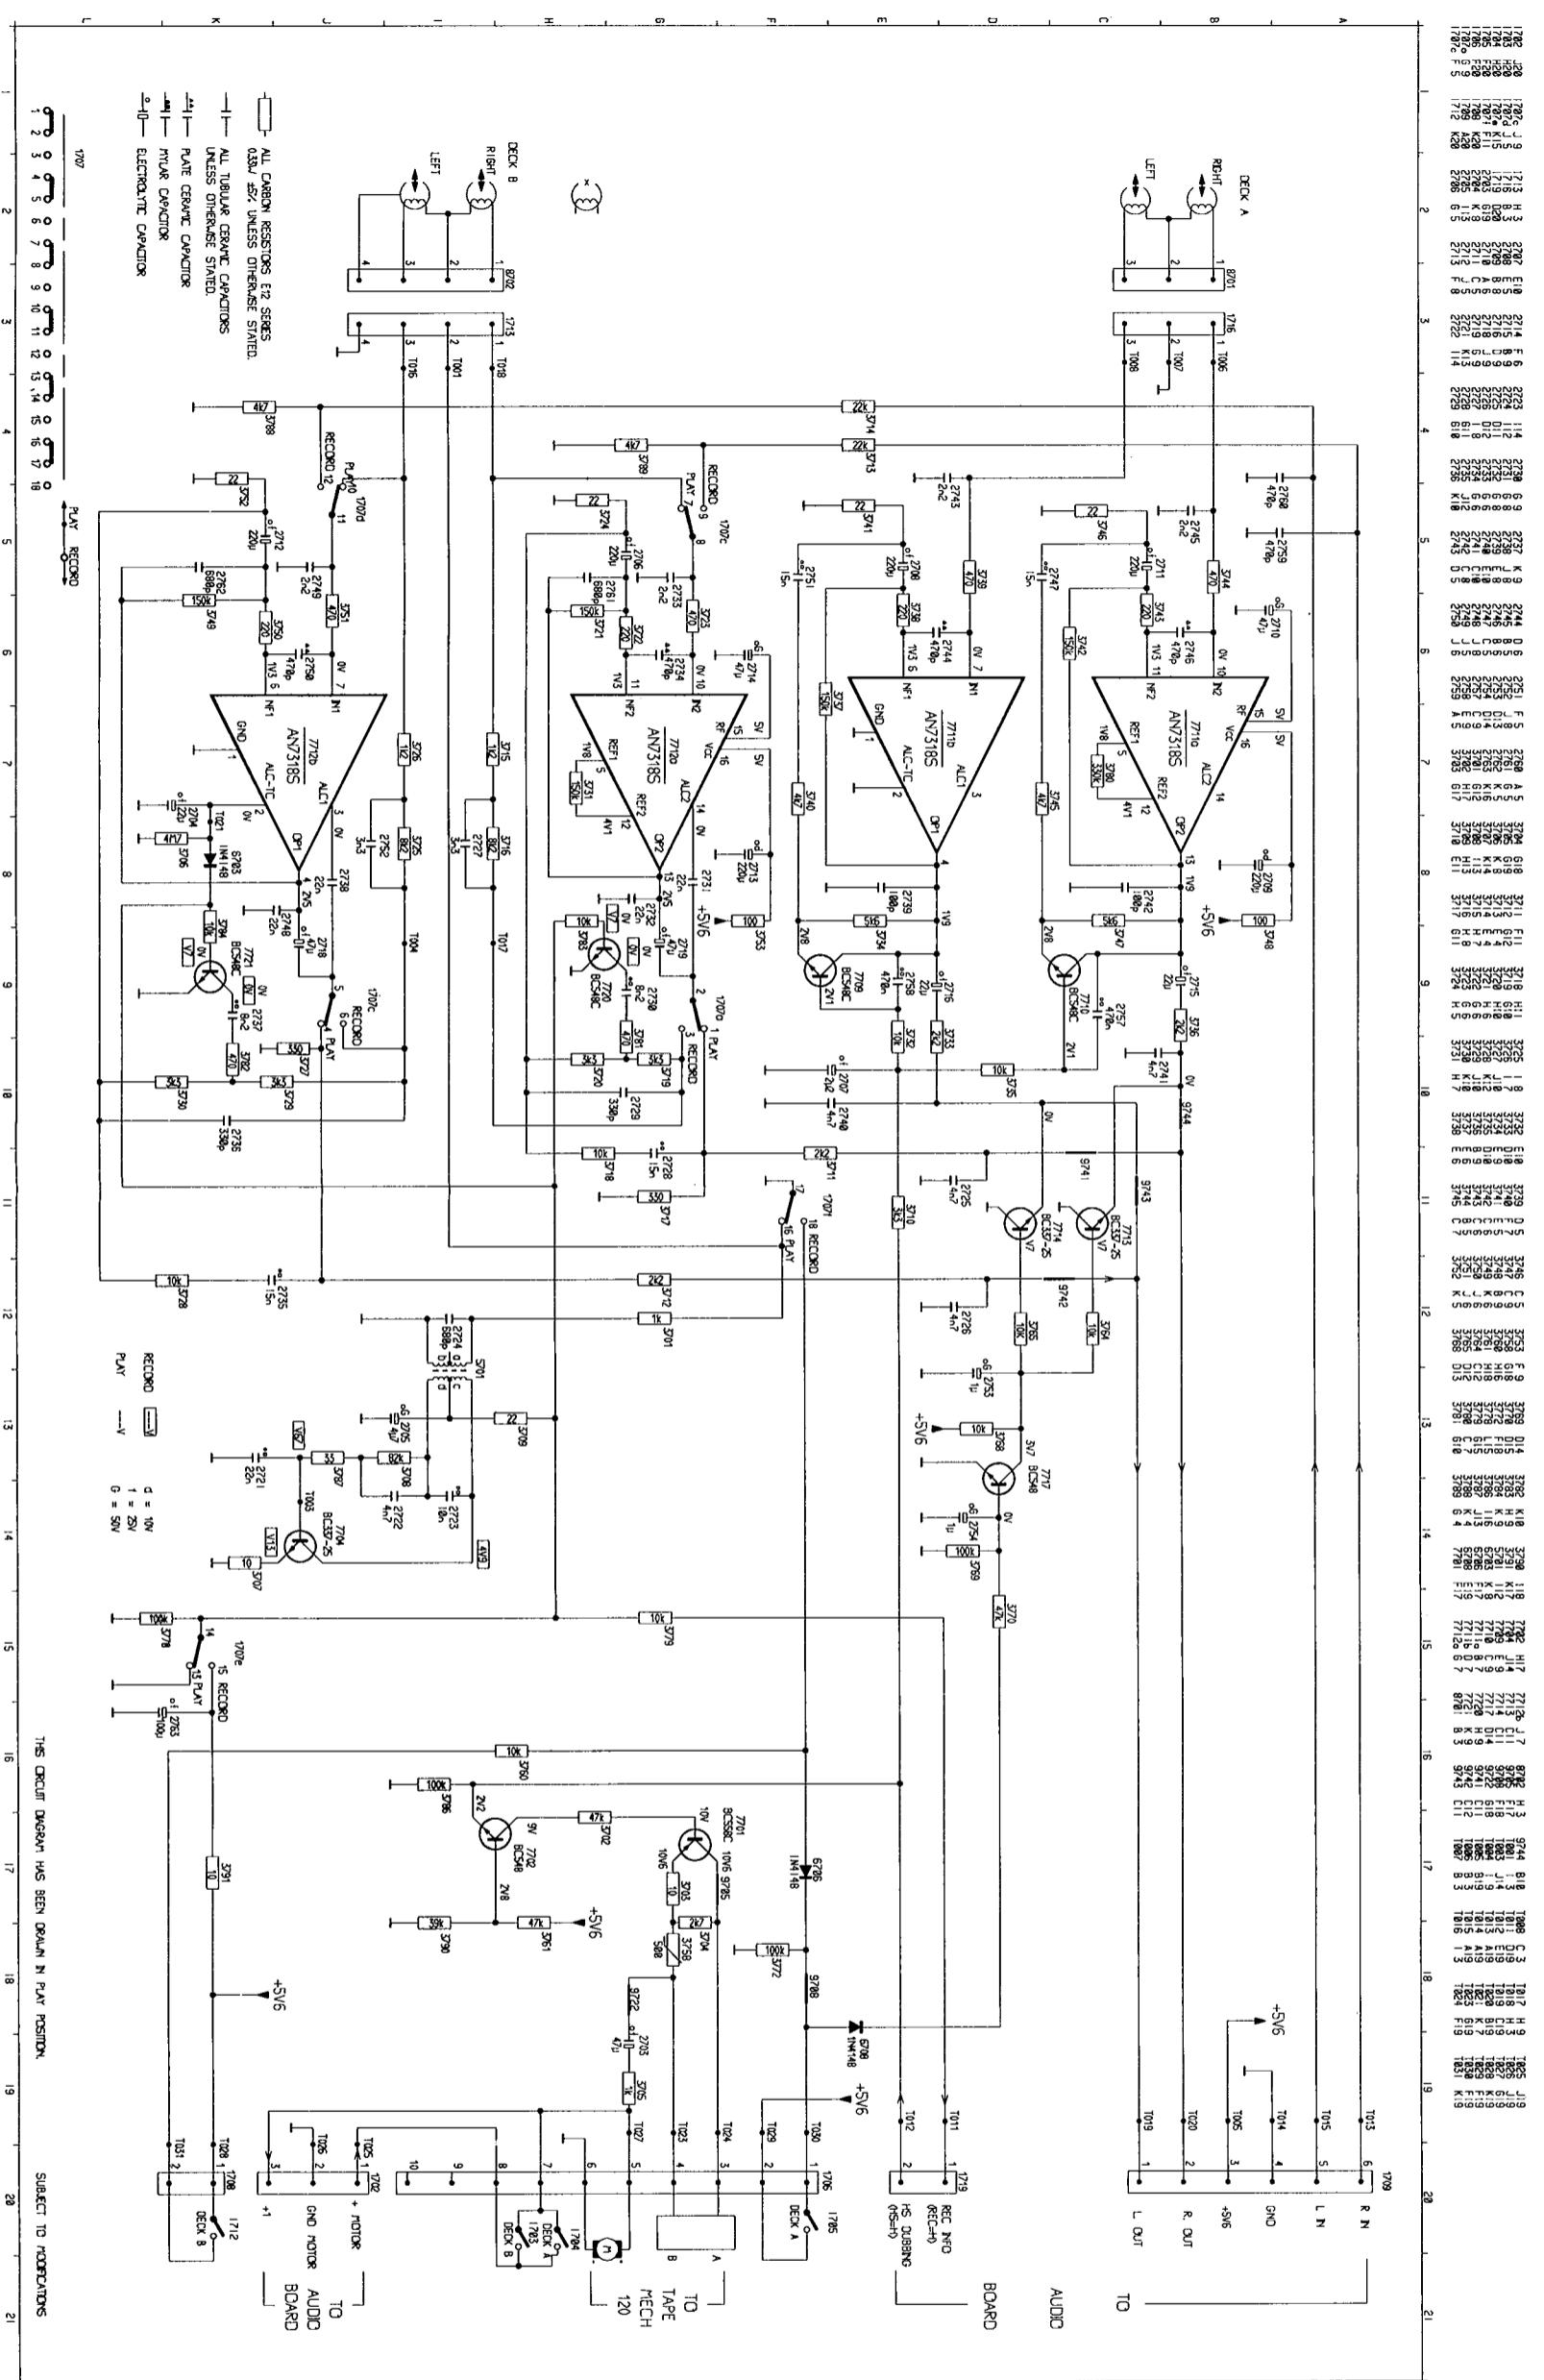

TAPE BOARD - LAYOUT DIAGRAM(MTF)

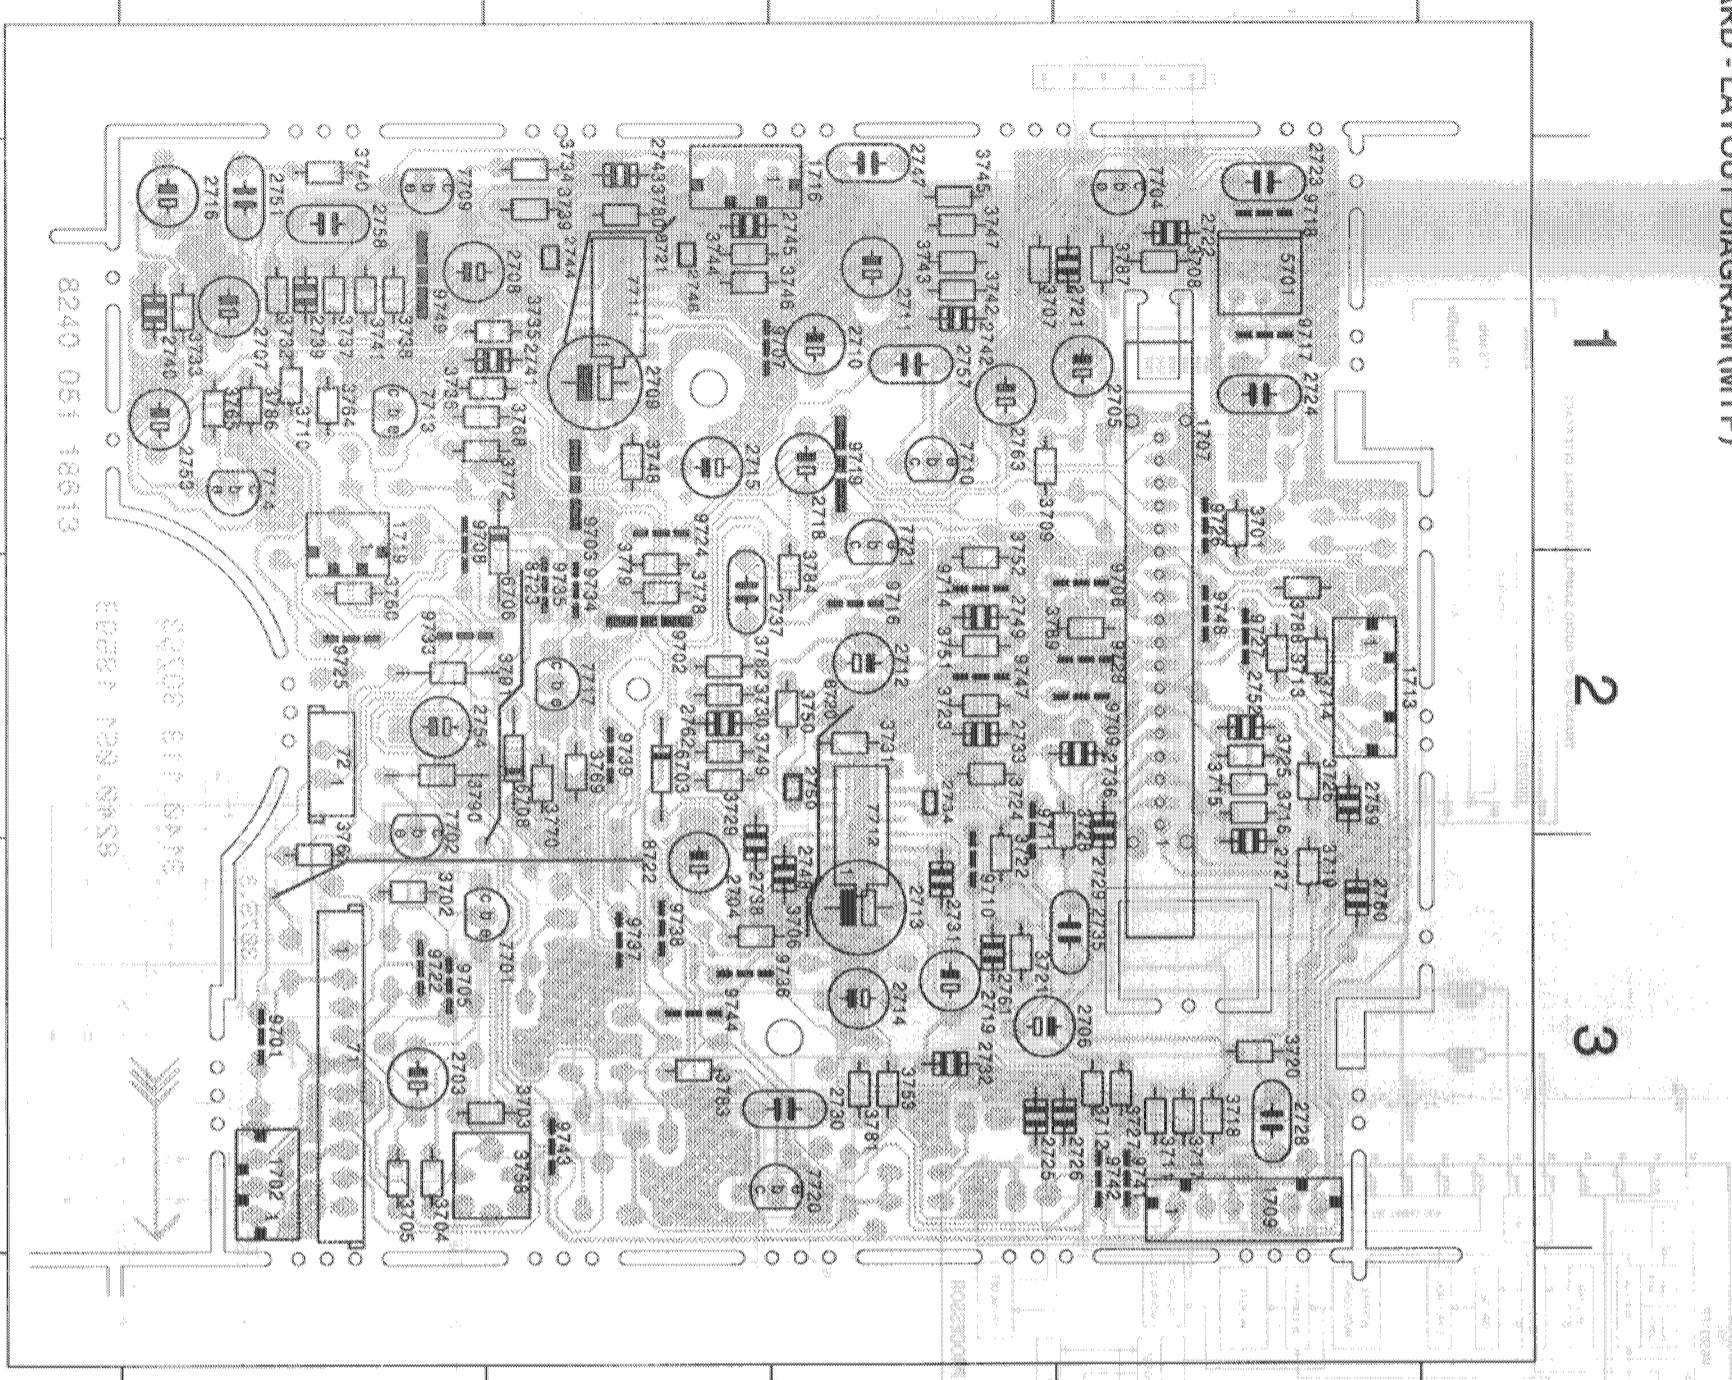

CASSETTE ADJUSTMENT

Adjustment	Cassette	Speed	T _i	S _i
Head	10KHz		T _i	
Azimuth	SBC420*		T _i	
Tape	3150Hz	T _i		
	SBC420*	(nor.)		
		(high)		

*a The maximum permissible:
Moreover, the wow and flutter


SBC420* 4822 397 30071

CASSETTE ADJUSTMENT

WAGGONER - 403


Adjustment	Cassette	Recorder position			Measure on	Read on	Adjust with	Adjust to
		SK	Deck 1	Deck2				
Head		Tape	Play	--	H/P Jack	mV meter	Left screw of R/P head on Deck 1	
Azimuth	SB-C420*	Tape	--	Play	H/P Jack	mV meter	Left screw of R/P head on Deck 2	L = R max.
Speed	3150Hz	Tape (nor. speed)	Play	--	H/P Jack	Wow and flutter meter	3736	**a
	SB-C420*	Tape (high speed)	Record	Play	H/P Jack	Frequency counter	Check only	6.0KHz ±0.3KHz


* SBC420: 4822 397 30071
**a The maximum permissible speed deviation is $\pm 3\%$.
Moreover, the wow and flutter value can be read.

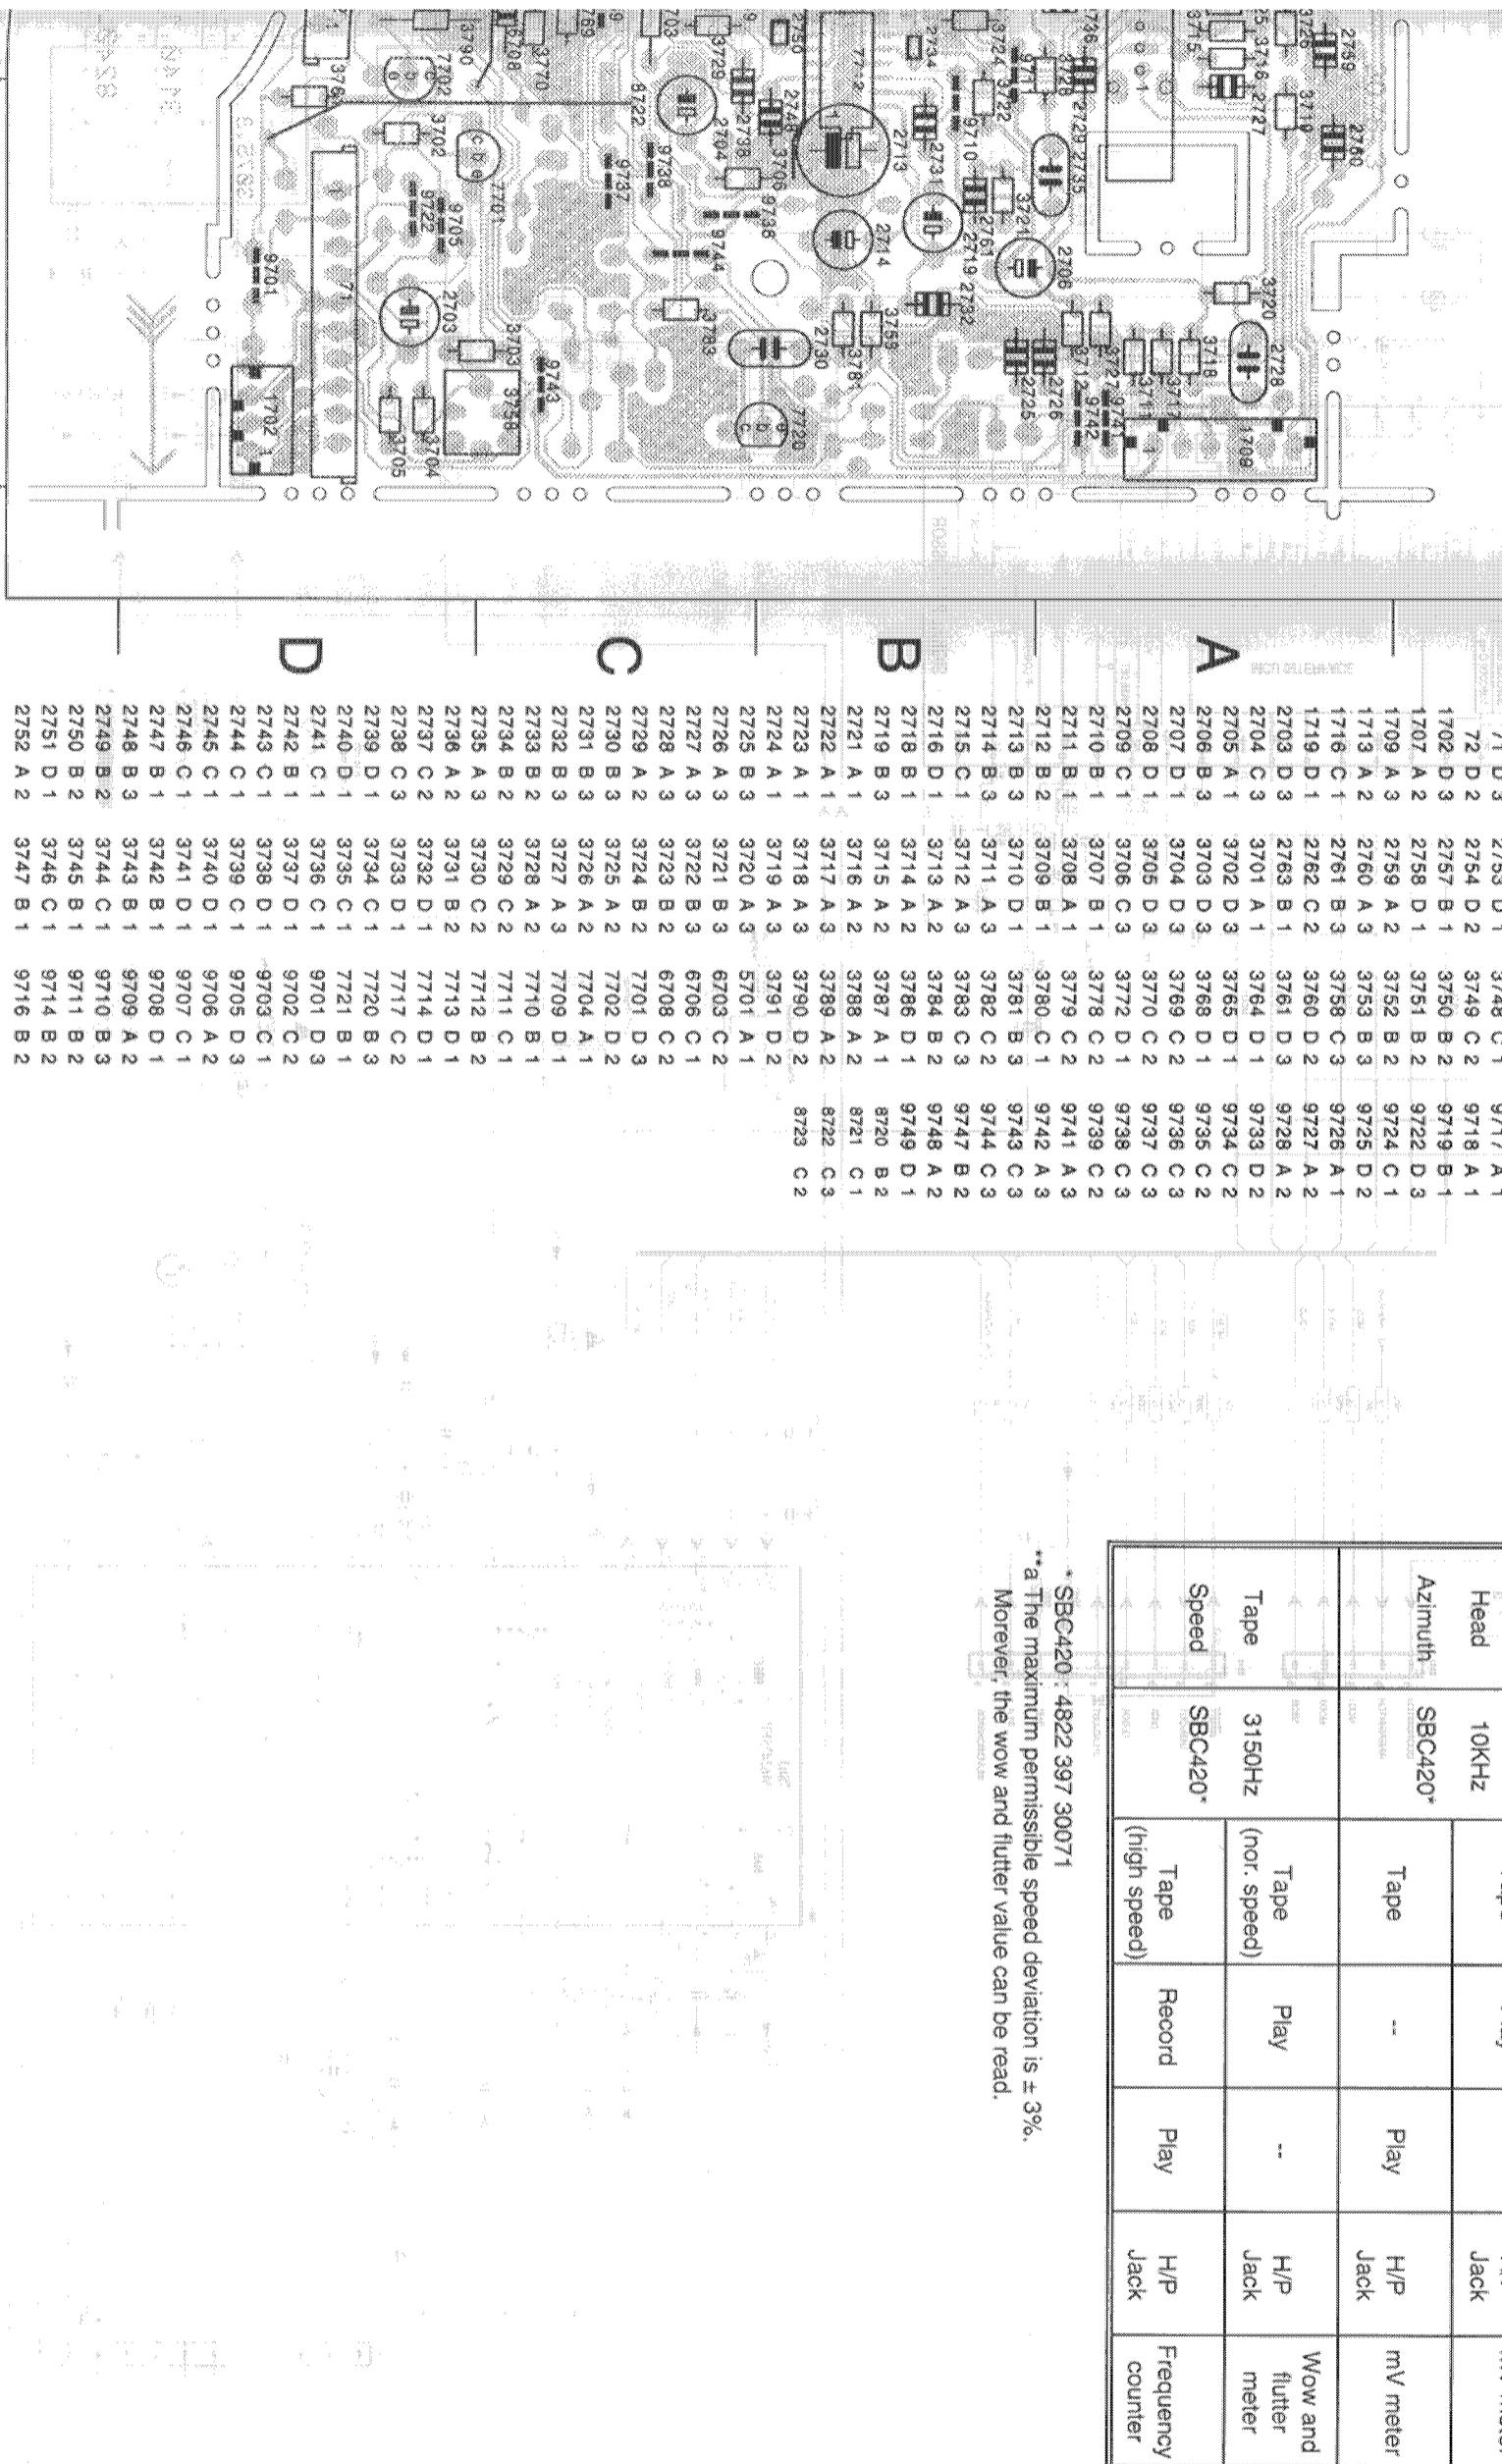

60

CD97 - CIRCUIT DIAGRAM

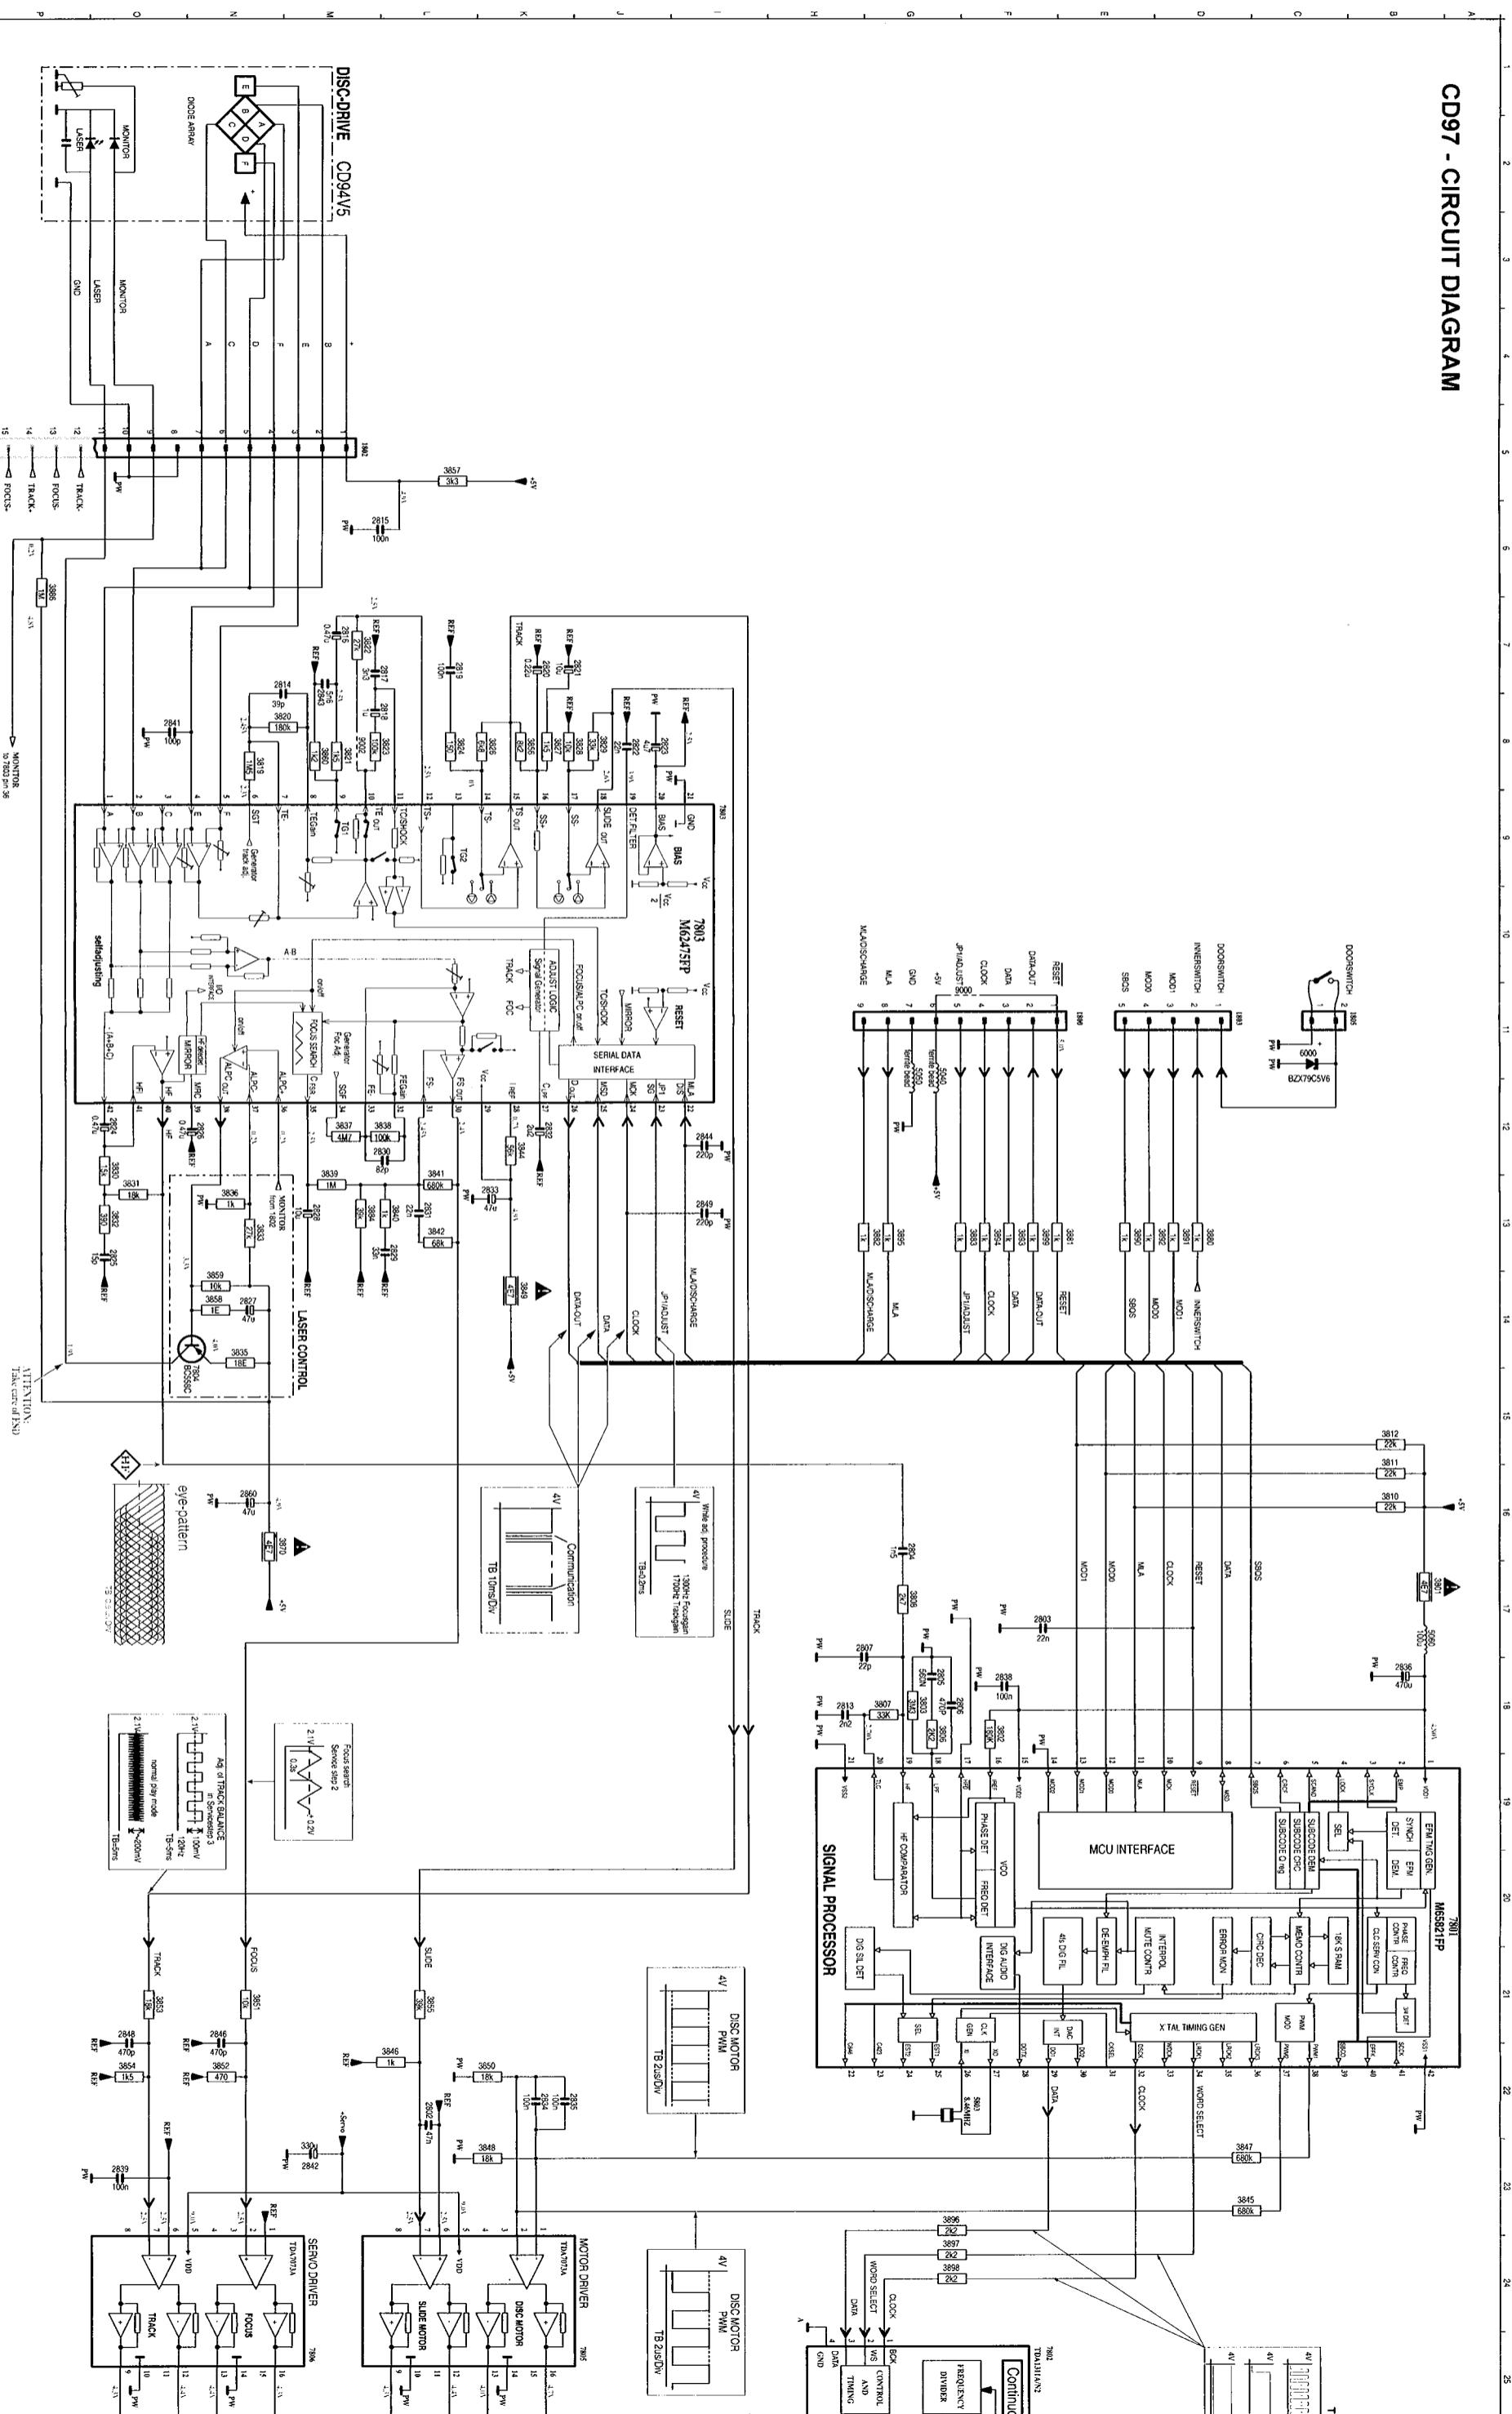


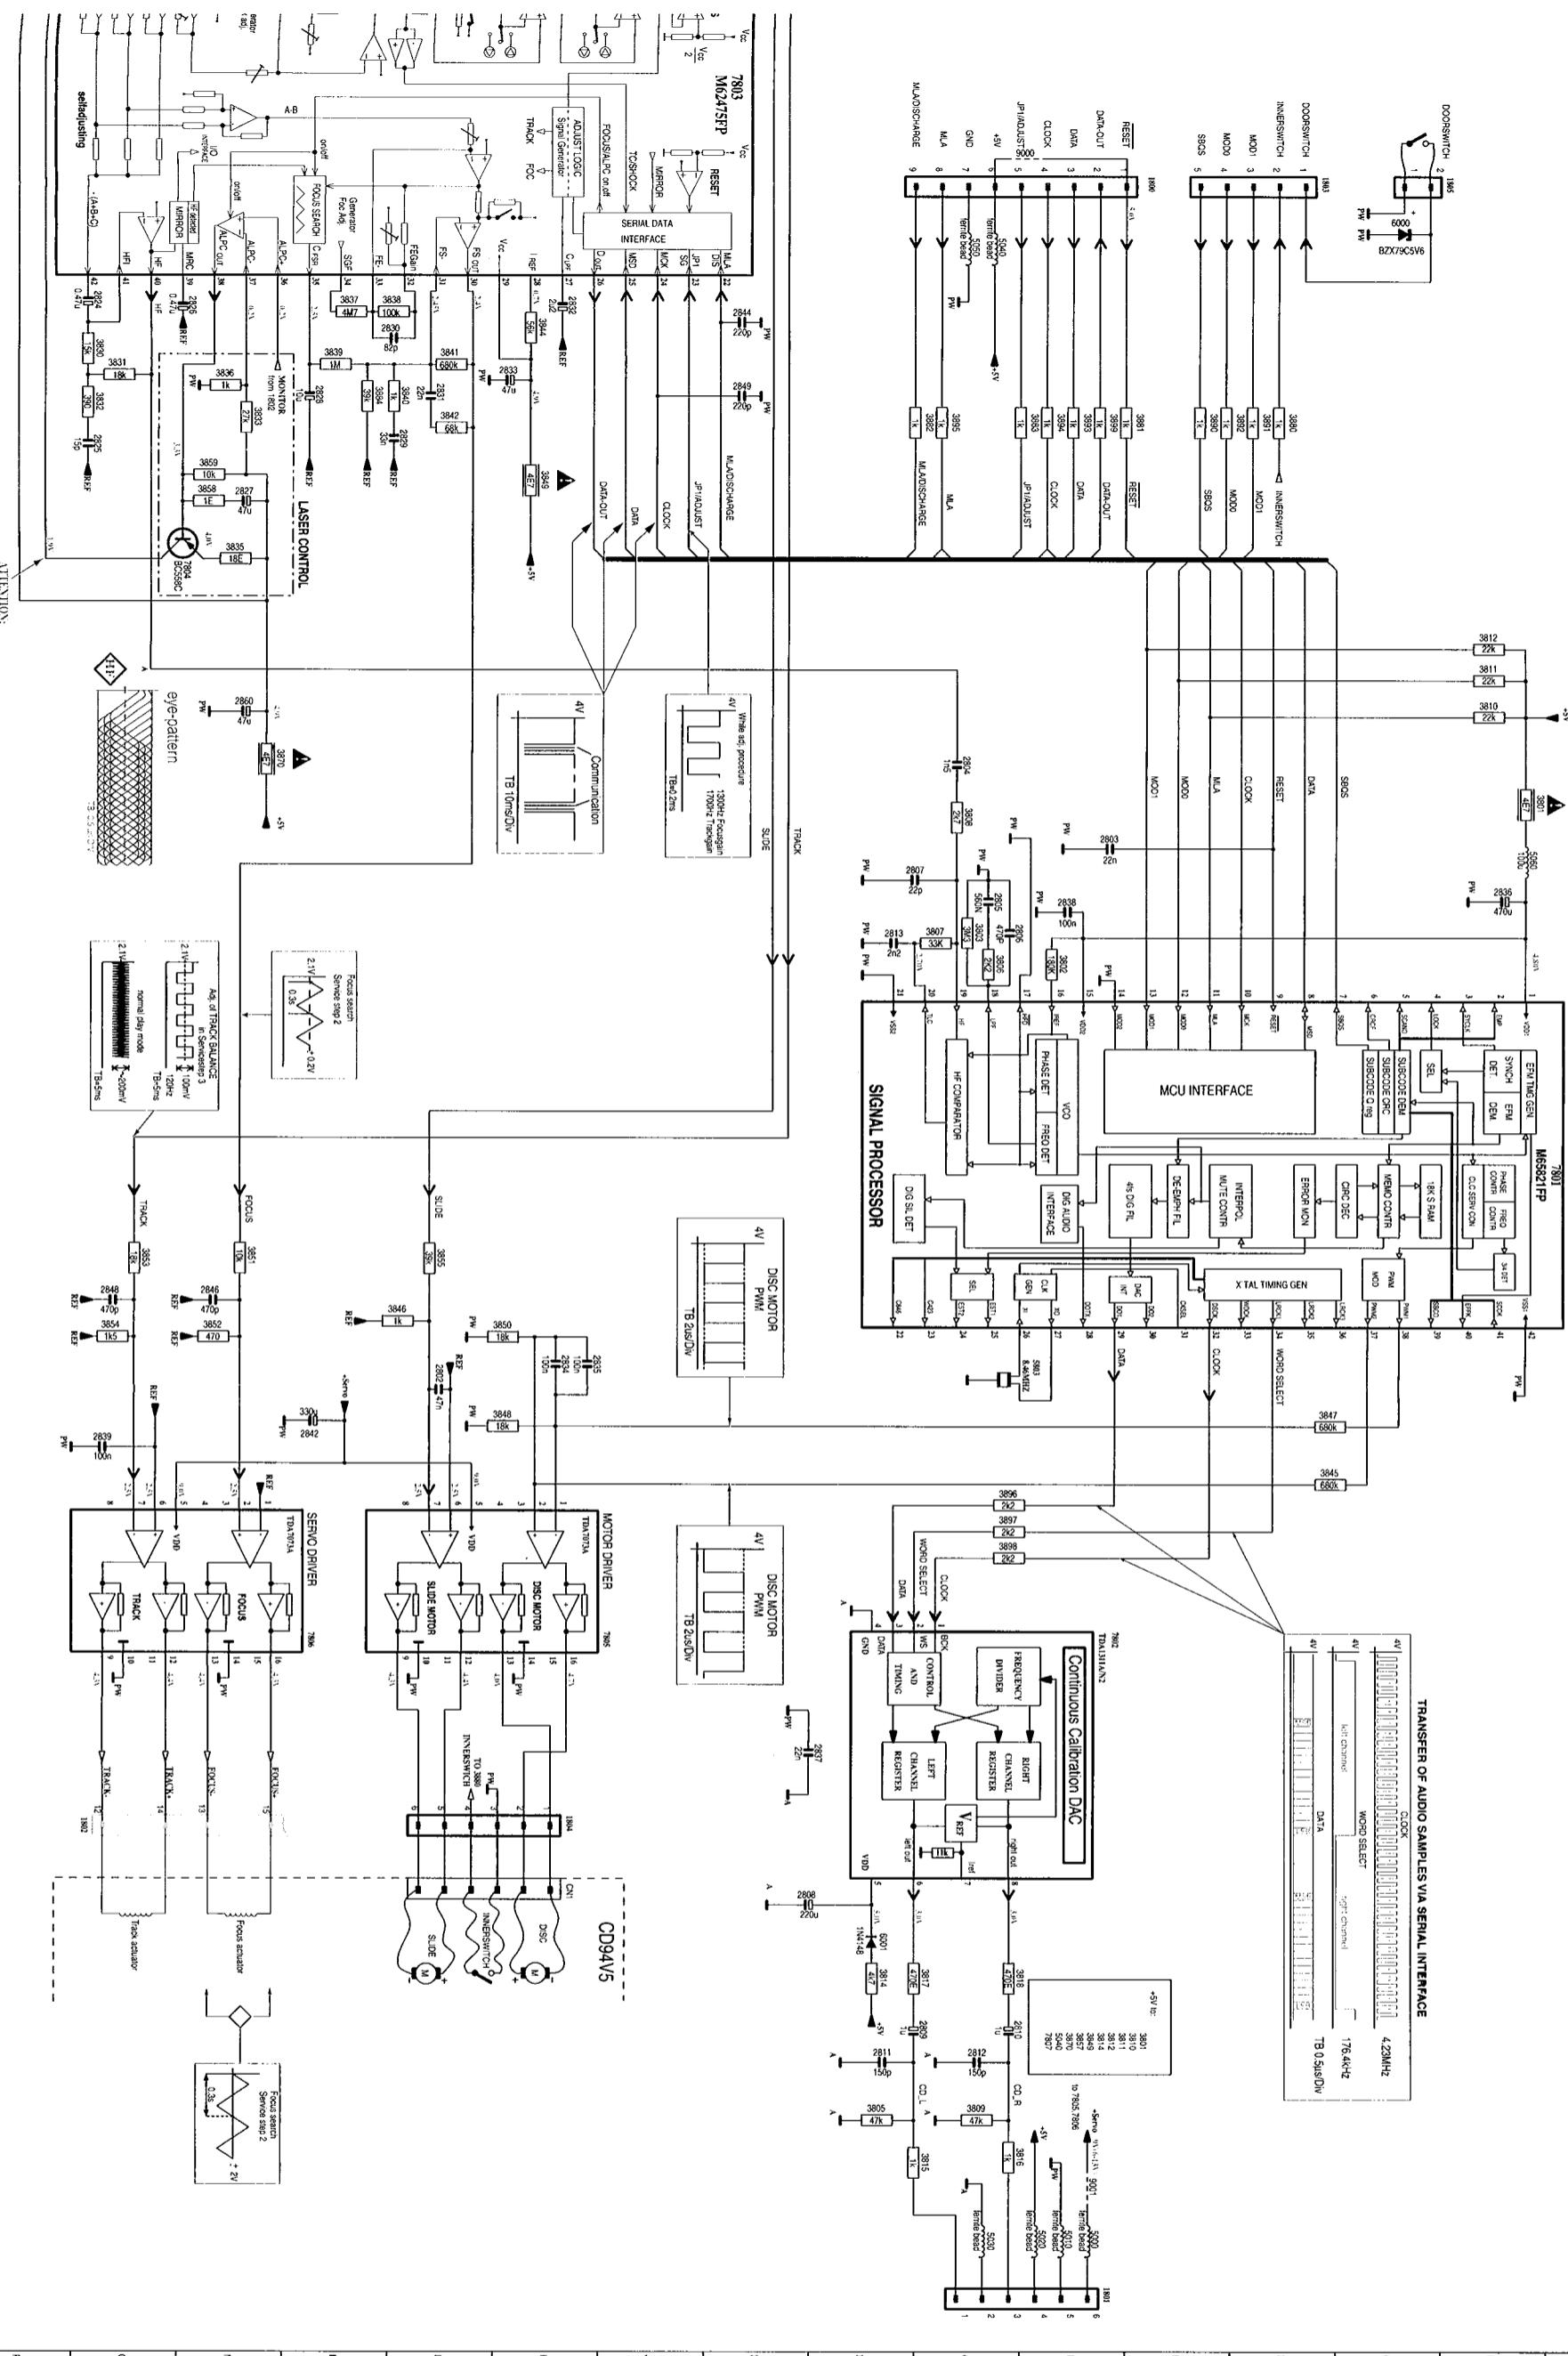


CD97 - LAYOUT DIAGRAM



Componentside view

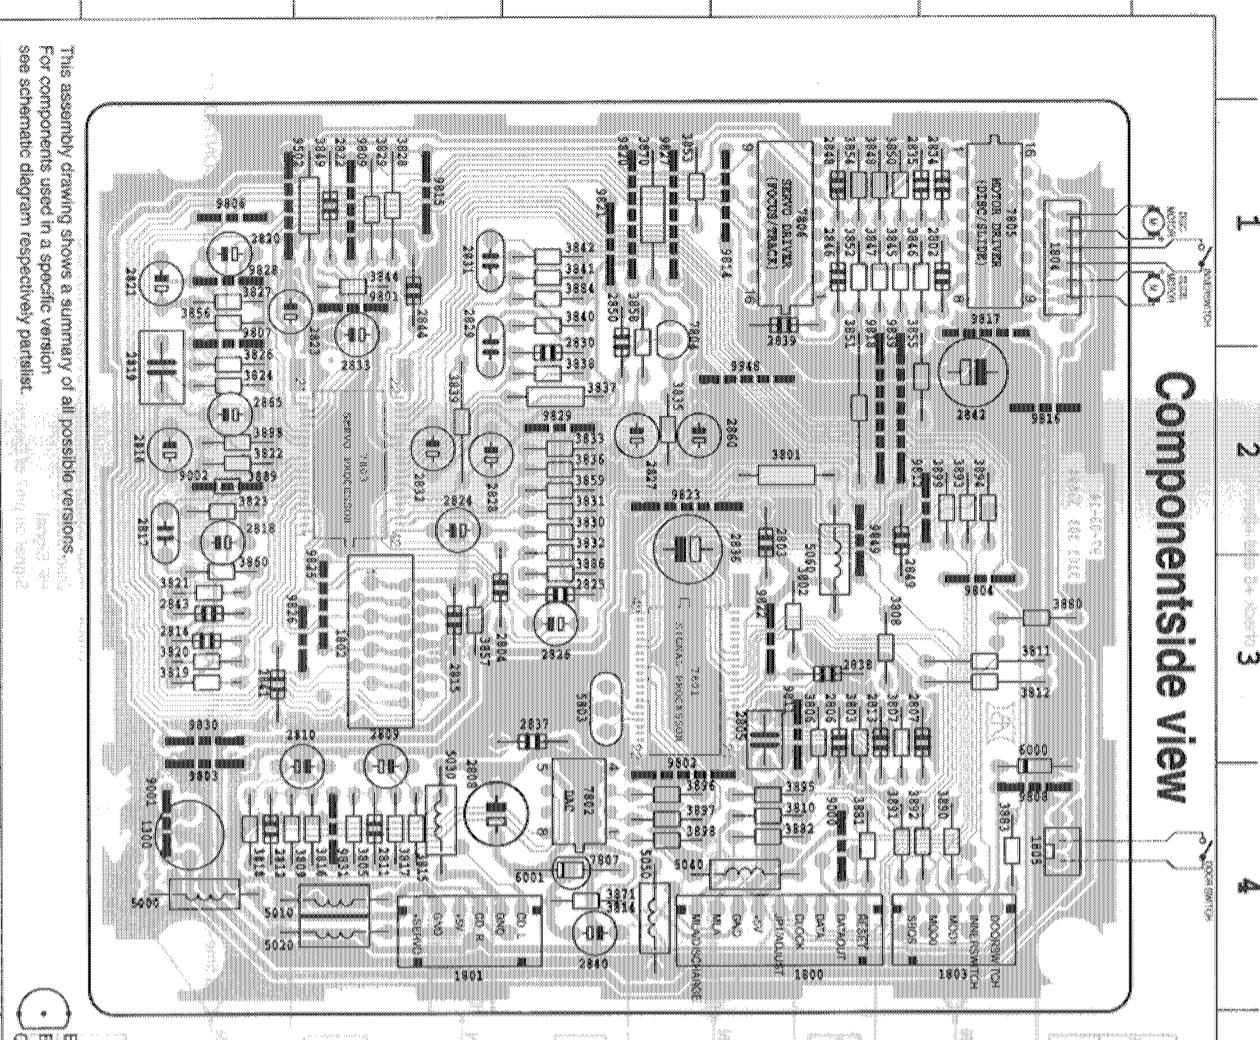

Copperside view
ISSN 0898-2603 • 1996 • Vol. 13, No. 1

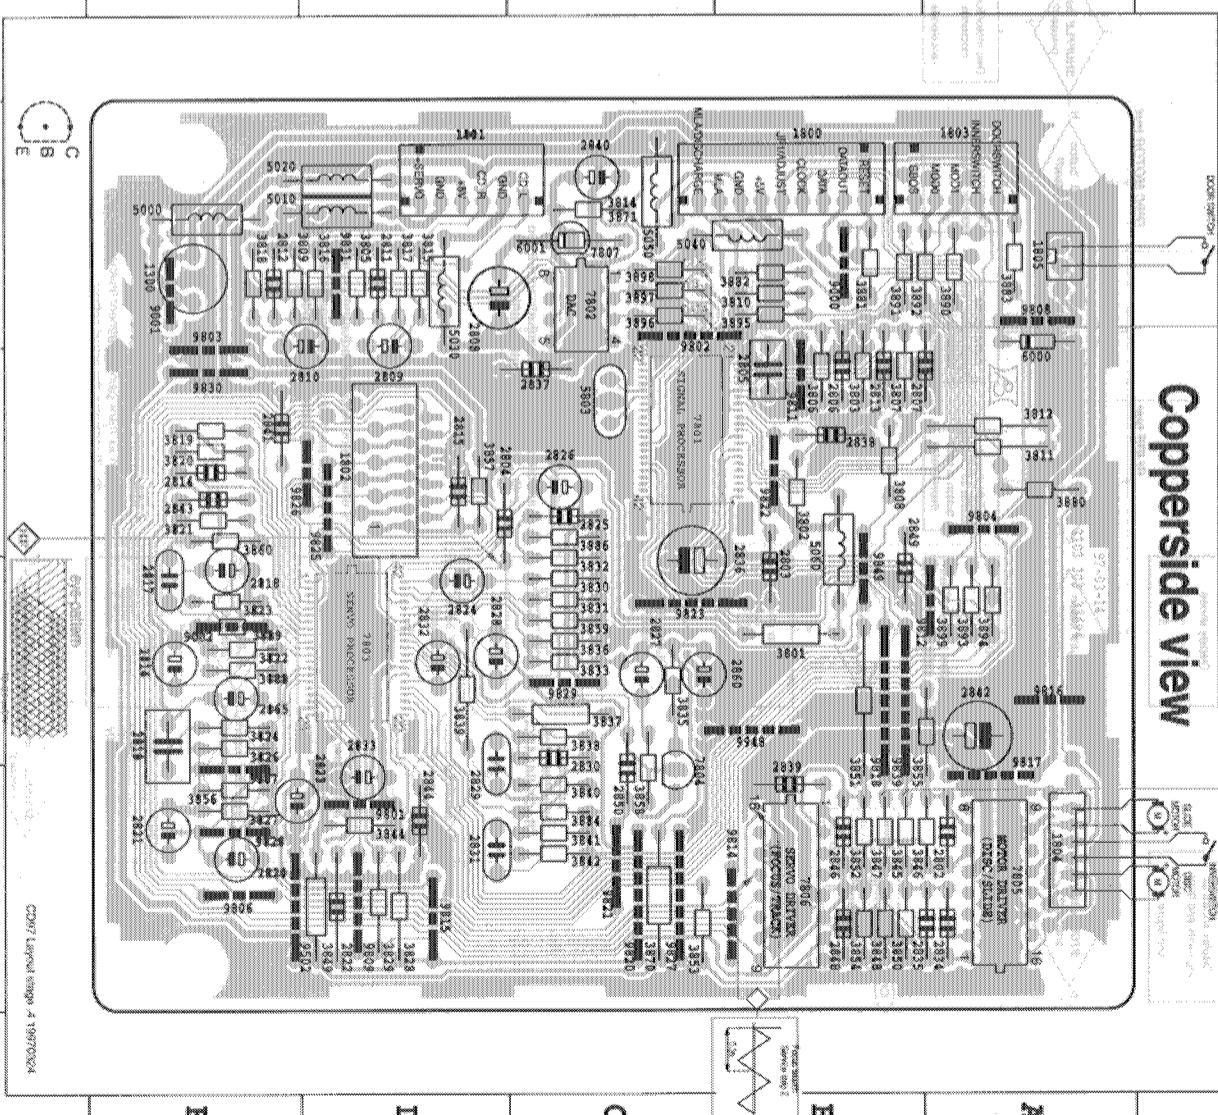

This assembly drawing shows a summary of all possible versions For components used in a specific version see schematic diagram respectively partlist.

Abbreviations and Pin-descriptions of CD ICs


SERVO PROCESSOR M62475FP

Pin	Name	Direction	Description
1-3	A, B, C	-	Diode array → Servo processor
4-5	E, F	-	Diode array → Servo processor
6	SGT	-	Servo processor → Track servo
7	TE-	-	-
8	TGain	-	Inverting input of track error amplifier
9	TG1	-	Gain control pin of track error amplifier
10	TE out	-	Track Gain 1 - switch; controls the gain of the track servo amplifier
11	TC/IS/track	-	Track Error amplifier output
12	TS+	-	Track Cross/Shock detector input
13	TG2	-	Non inverting input of track servo amplifier
14	TS-	-	Non inverting input of track servo amplifier
15	TS out	-	Track Gain 2 - switch; controls the gain of the track servo amplifier
16	SS +	-	Inverting input of track servo amplifier
17	SS -	-	Output of track servo amplifier
18	Slide out	-	Non inverting input of slide servo amplifier
19	DETFL	-	Output or slide servo amplifier
20	BIAS	-	Inverting input of track servo amplifier
21	GND	-	Output of track servo amplifier
22	MLADIS	-	Non inverting input of slide servo amplifier
23	JPI/SG	-	Non inverting input of slide servo amplifier
24	MCK	-	Output or slide servo amplifier
25	MSD	-	Output of slide servo amplifier
26	Dout	-	Output of slide servo amplifier
27	CLPF	-	Output of slide servo amplifier
28	IREF	-	Output of slide servo amplifier
29	VCC	-	Output of slide servo amplifier
30	FSout	-	Output of slide servo amplifier
31	FS-	-	Output of slide servo amplifier
32	FEGain	-	Output of slide servo amplifier
33	FE-	-	Output of slide servo amplifier
34	SGF	-	Output of slide servo amplifier
35	CFSR	-	Output of slide servo amplifier
36	APC +	-	Output of slide servo amplifier
37	APC -	-	Output of slide servo amplifier
38	APC out	-	Output of slide servo amplifier
39	MRC	-	Output of slide servo amplifier
40	HF	-	Output of slide servo amplifier
41	HFI	-	Output of slide servo amplifier
42	ABC	-	Output of slide servo amplifier

SIGNAL PROCESSOR M65821FP

Pin	Name	Direction	Description
1	VDD1	-	+supply for signal processor
2	EMP	-	Emphasis flag output
3	SYCLK	-	Frame synchronize output
4	LOCK	-	Low disc rotation detect output
5	SCAND	-	Subcode sync signal detection
6	CRCF	-	Subcode Q CRC check flag output
7	SBOS	-	Interrupt signal to read out subcode Q data
8	MSD	-	Data line
9	RESET	-	System reset
10	MCK	-	Clock input.
11	MLA	-	Latch clock input
12-14	MODX	-	Mode setting inputs (0,1,2)
15	VDD2	-	+supply for data slicer and VCO
16	IREF	-	Current reference
17	HFD	-	HF signal detect
18	LPF	-	PLL loop filter
19	HF	-	HF signal input
20	TLC	-	Output from slice level control
21	VSS2	-	Ground
22	C846	-	8.4672MHz clock output
23	C423	-	4.236MHz clock output
24	EST2	-	Error monitor output2
25	EST1	-	Error monitor output1
26	XI	-	Crystal oscillator input
27	XO	-	Crystal oscillator output
28	DOTX	-	Output of digital interface
29	DO1	-	Serial data output to DAC
30	DO2	-	Serial data output to Dual DAC
31	CKSEL	-	Crystal selector input H=8MHz, L=16MHz
32	DSCK	-	Data shift clock
33	WDCK	-	Word clock
34	LRC1	-	Left/Right clock
35-36	not used	-	Left/Right clock
37	PWM1	-	Disc motor driving (Pulse Width Modulation) output1
38	PWM2	-	Disc motor driving (Pulse Width Modulation) output2
39-41	not used	-	Digital system ground
42	VSS1	-	Digital system ground

EXPLODED VIEW DIAGRAM - TAPE DECK CDS-83WV (STD)

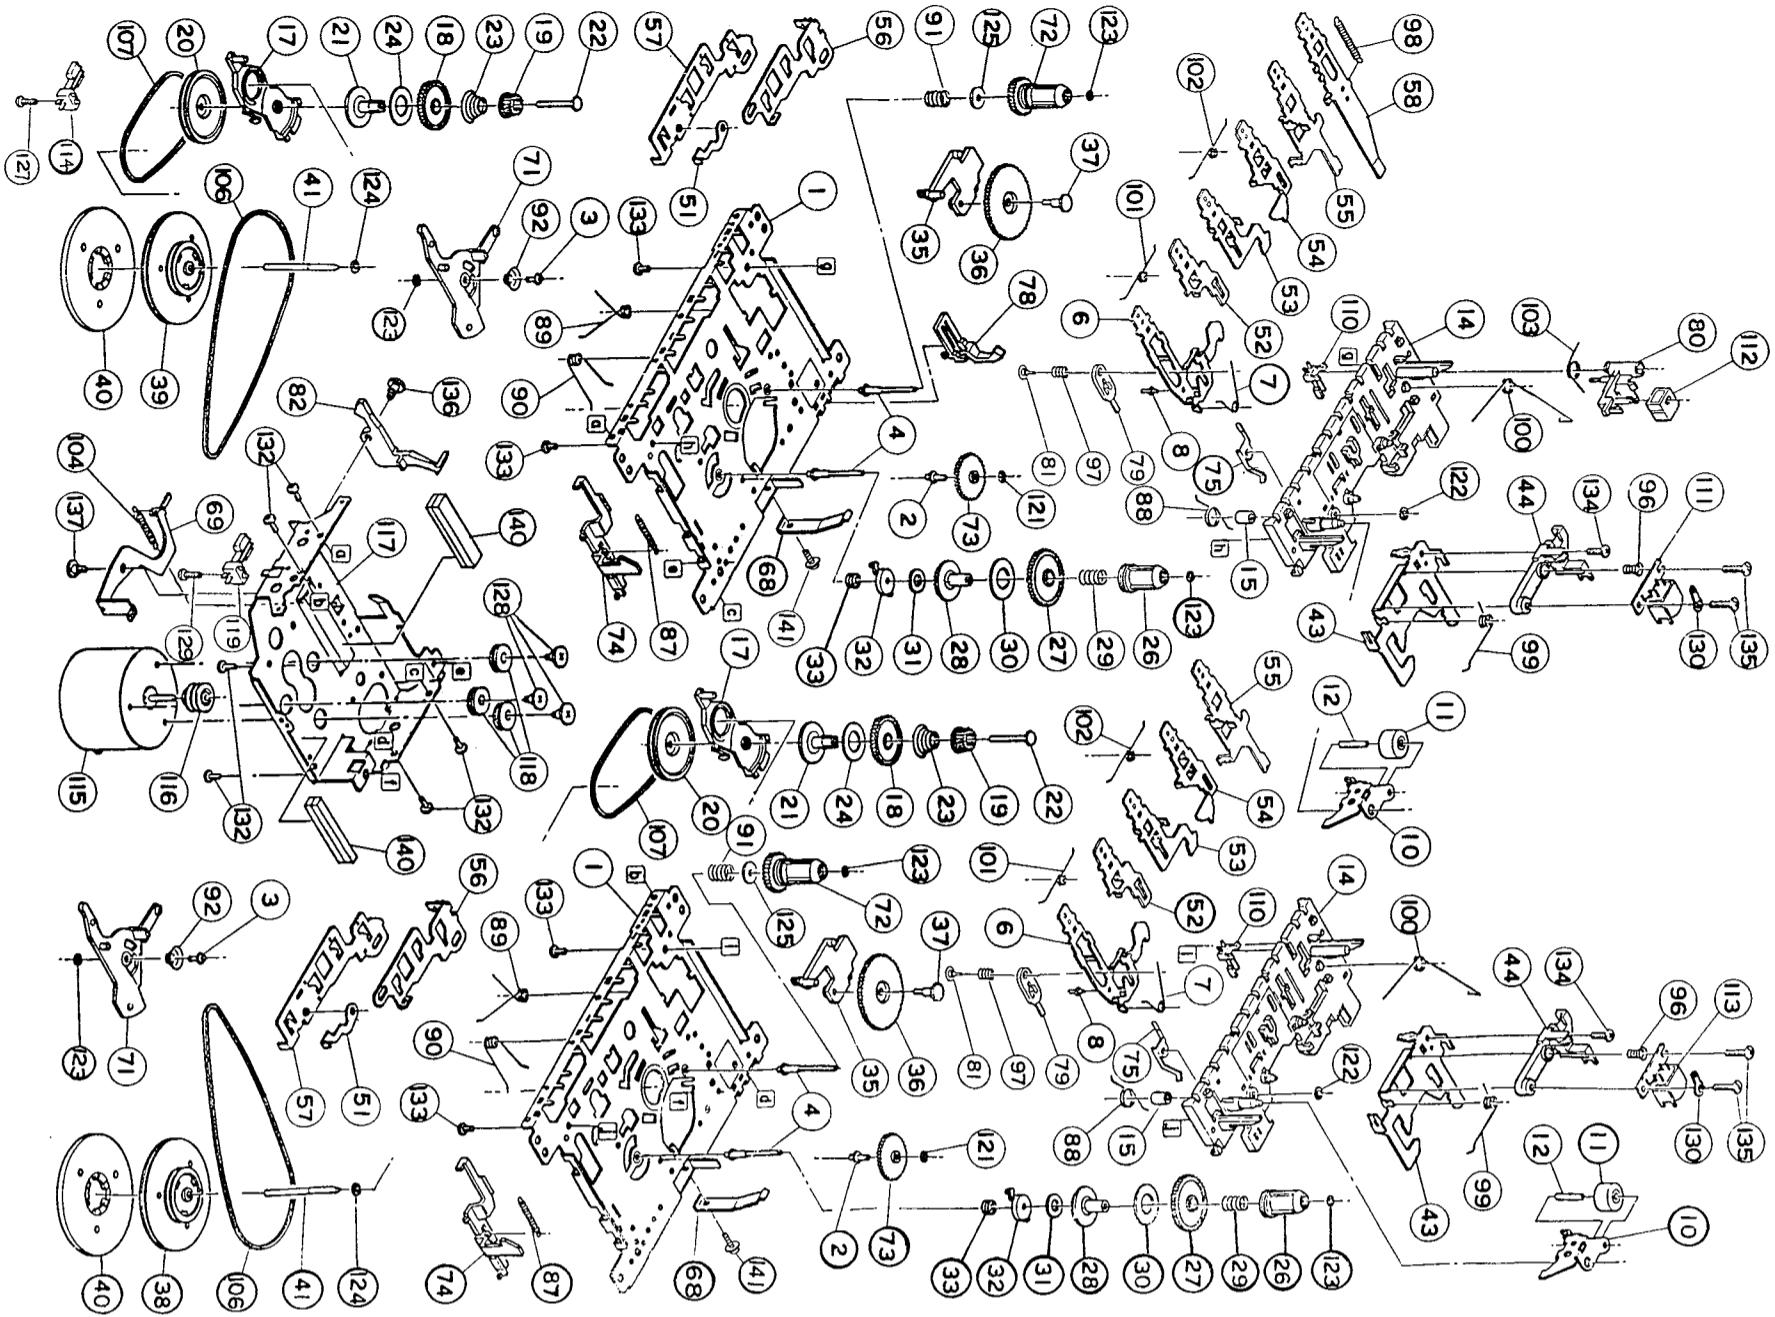

MECHANICAL PARTSLIST - CABINET

401	4822 459 04566	Front Panel	442	4822 402 61508	Bracket CD
402	4822 450 10325	Lens CD (Not for -/17)	443	4822 532 12798	Pressure Ring Assy
402	4822 450 10319	Lens CD (For -/17)	444	4822 443 10654	CD Door
403	4822 381 11874	Window LCD	446	4822 410 11127	Knob Band
	4822 450 10323	Lens Door (L)	447	4822 464 10294	Frame Tuning
406	4822 450 10324	Lens Door (R)	448	4822 492 40854	Torsion Spring
407	4822 443 10656	Cassette Door (L)	449	4822 528 40208	Drum
408	4822 443 10657	Cassette Door (R)	451	4822 528 80907	Pulley Pom
409	4822 492 42709	Spring Door	452	4822 450 10322	Pointer
411	4822 459 04565	Front Cabinet Assy	453	4822 529 10386	Damper Rubber (30 Deg)
412	4822 410 11129	Keyset 1 - CD	454	4822 691 10587	CD Drive CD94AV5T1
413	4822 240 10094	Loudspeaker 4W	456	4822 529 10322	Damper Assy
414	4822 402 10722	Bracket LCD	457	4822 450 10326	Lens Tuning (For -/00/05)
416	4822 532 12797	PCB Spacer	457	4822 450 10321	Lens Tuning (For -/01/11)
417	4822 691 10591	Tape Deck Mechanism	457	4822 450 10318	Lens Tuning (For -/14)
418	4822 410 11122	Cassette Knob (R)	457	4822 450 10321	Lens Tuning (For -/17)
419	4822 410 11121	Cassette Knob (L)	458	4822 410 11126	Knob Tuning
421	4822 404 10928	PCB Support	459	4822 402 10724	Bracket Handle
422	4822 492 11061	Spring Recording	461	4822 498 10644	Handle
423	4822 402 10126	Lever Recording	462	4822 492 11418	Spring CD
424	4822 410 11131	Keyset 2 - CD	463	4822 426 10436	Cabinet Rear
426	4822 529 10322	Damper Assy	464	4822 265 20318	Socket Main (Not for -/17)
427	4822 240 10094	Loudspeaker 4W	466	4822 265 20706	Socket Main (For -/17)
428	4822 529 10387	Damper Rubber (40 Deg)	467	4822 492 51961	Spring Compression
429	4822 410 11124	Knob DBB			
431	4822 410 11125	Knob Hi Sp Dubbing	468	4822 290 80313	Contact Plate
432	4822 410 11123	Knob Mode	469	4822 443 10655	Battery Door
434	4822 402 10723	Lever Eject	471	4822 303 14038	Telescopic Aerial
436	4822 492 11058	Spring Eject		4822 321 11215	Mains Cord (For -/00/01/11/14)
437	4822 418 10259	Tray CD (For -/00/05/14)		4822 321 10886	Mains Cord (For -/05)
437	4822 418 10258	Tray CD (For -/01/11)	4822 321 10882	Mains Cord (For -/17)	
437	4822 418 10257	Tray CD (For -/17)	4822 736 15282	Instruction Manual (For -/00/05)	
438	4822 410 11132	Knob Volume	4822 736 15281	Instruction Manual (For -/01/11)	
439	4822 410 11128	Knob Open	4822 736 15278	Instruction Manual (For -/14)	
441	4822 535 60096	Disc	4822 736 15279	Instruction Manual (For -/17)	


MECHANICAL PARTSLIST - TAPE DECK


10	4822 528 11115	Pinch Roller Arm	116	4822 528 11114	Motor Pulley
11	4822 528 70695	Pinch Roller Assy			
74	4822 403 70968	Eject Hook (A)			
106	4822 358 10198	Main Belt			
107	4822 358 31124	Sub Belt			
110	4822 278 90663	Leaf Switch			
111	4822 249 30218	MS18R-AKONI			
112	4822 249 40296	E. Head			
113	4822 249 30218	MS18R-AKONI			
115	4822 361 21592	EG-530YD-9BH			

Note : Only those parts mentioned in the list are normal service parts.

EXPLODED VIEW DIAGRAM - CABINET

DIAL STRINGING

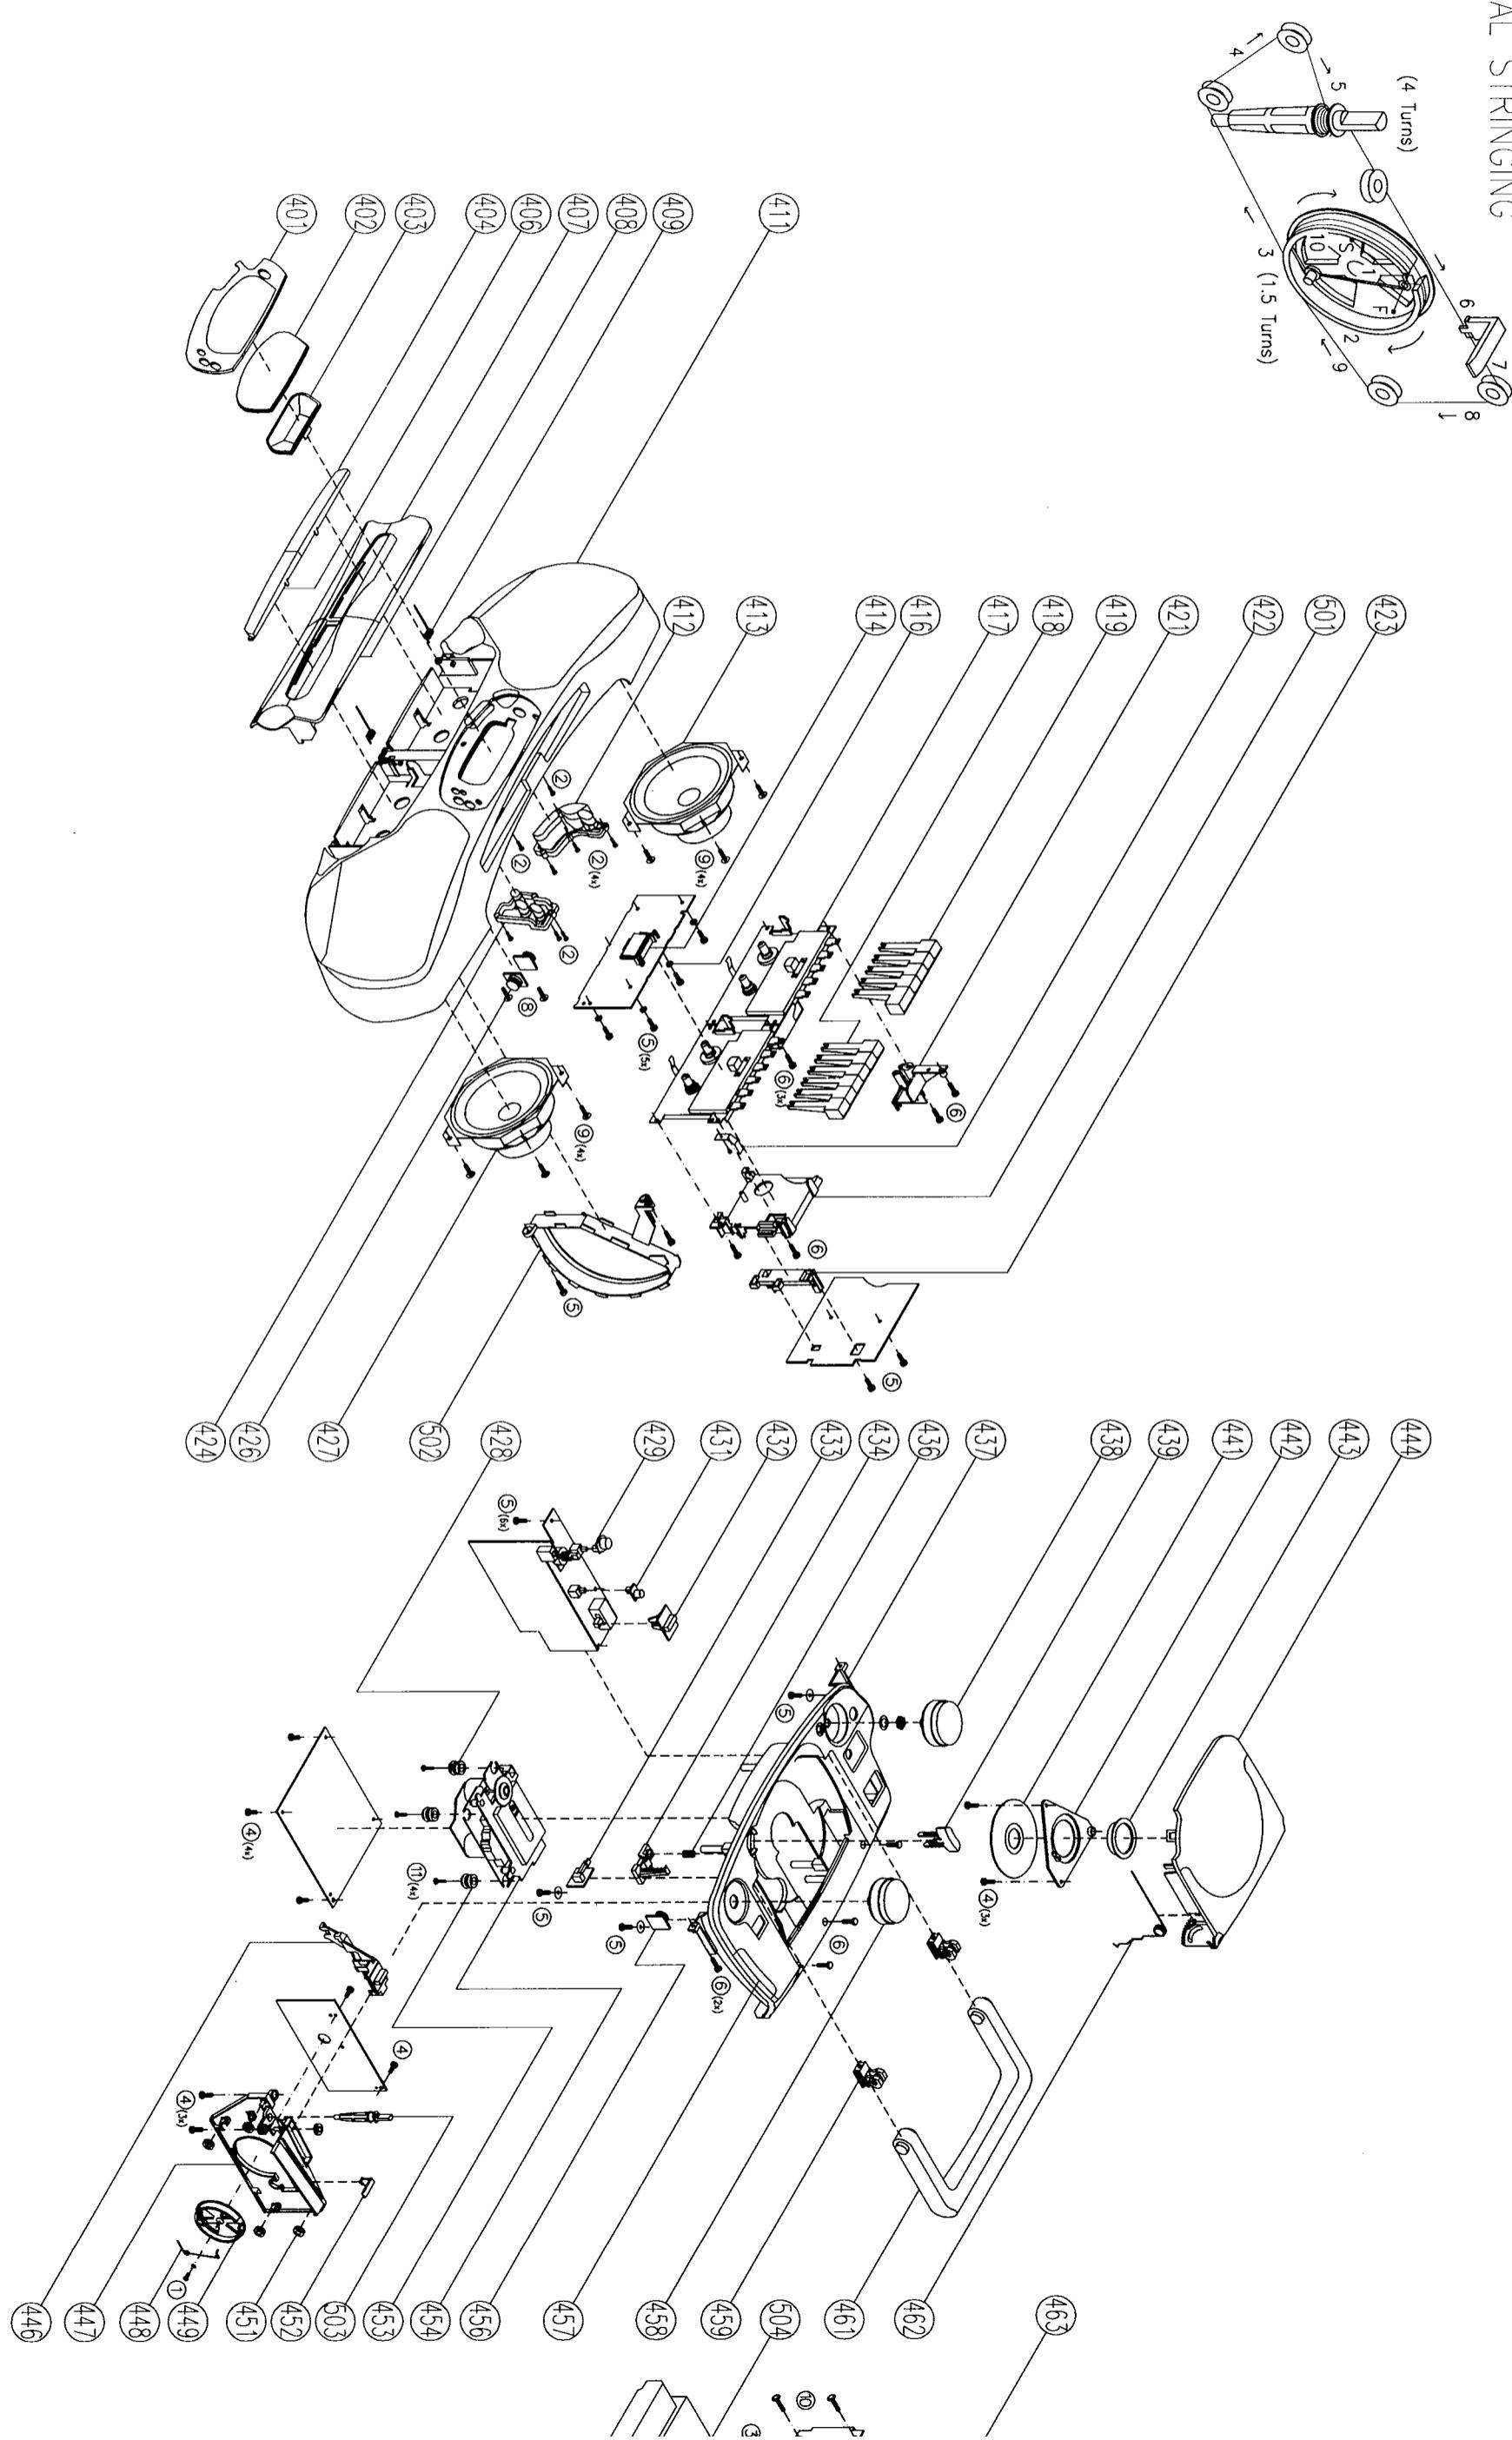

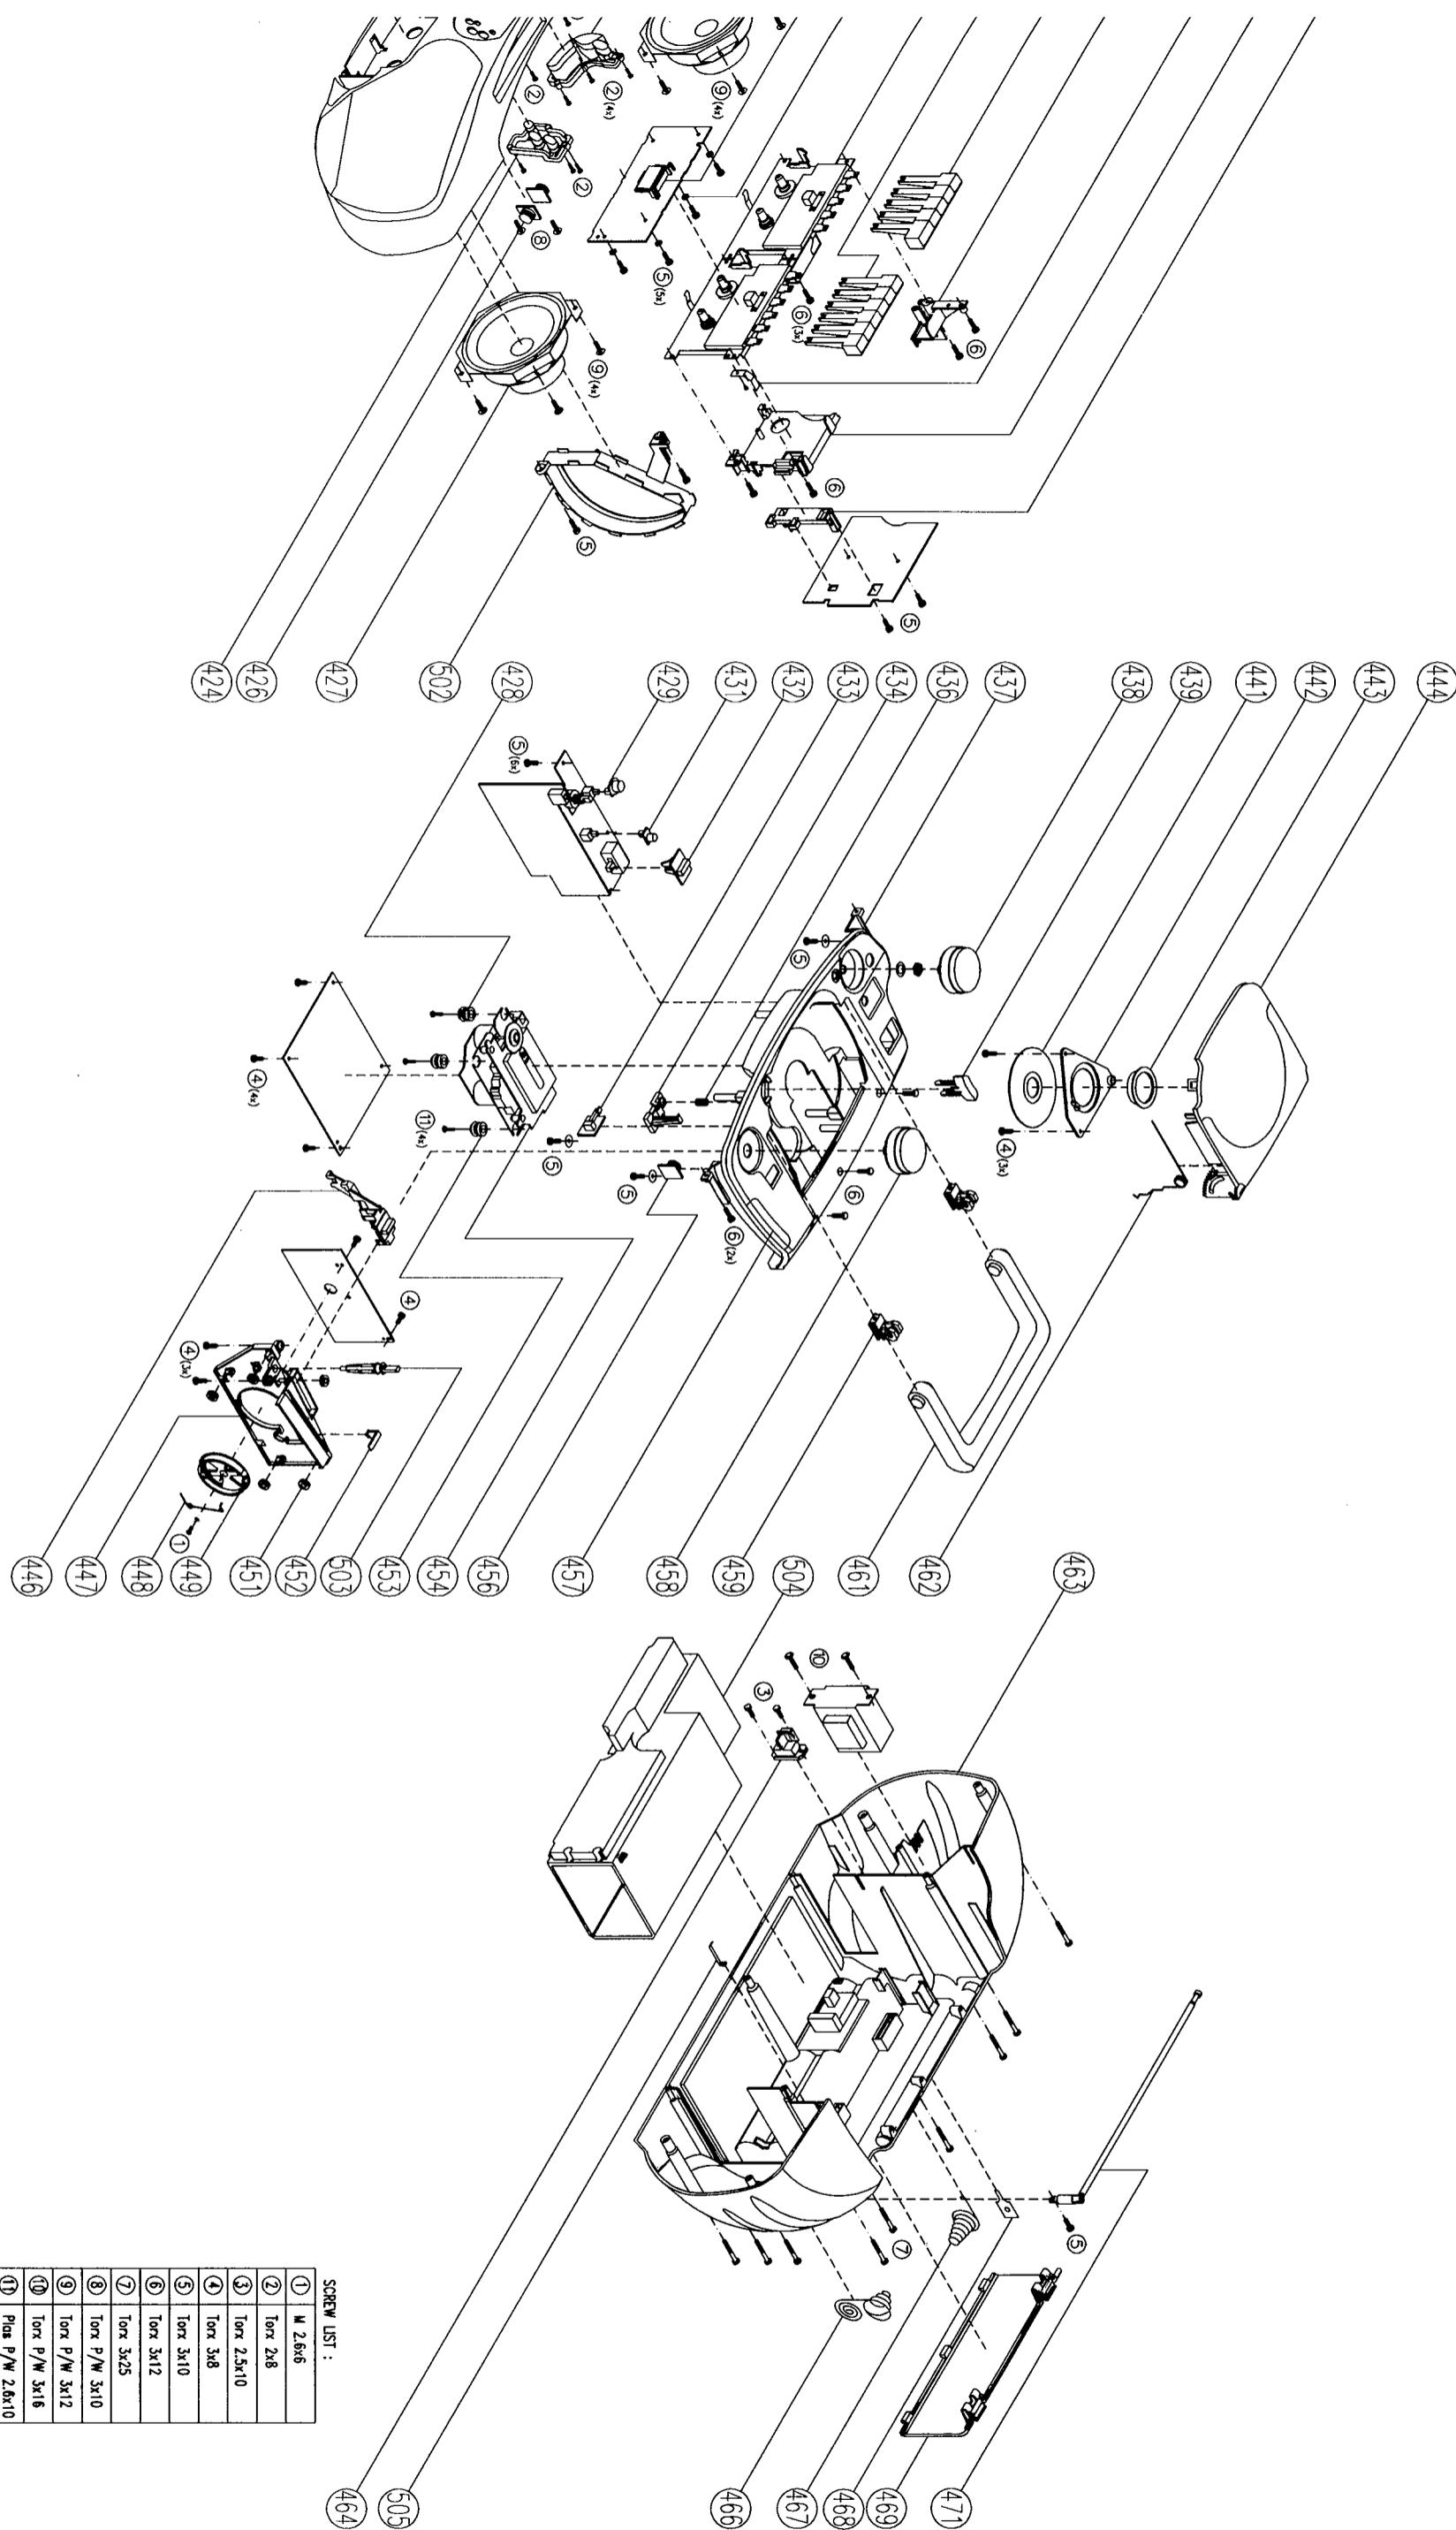

26-2

26-3

MTF



2703	4822 124 41397	47µF	20%	25V	2745	4822 126 12339	2,2nF	10%	Y5R
2704	4822 124 41596	22µF	20%	50V	2746	5322 122 32311	470pF	10%	100V
2705	4822 124 40246	4,7µF	20%	63V	2747	4822 121 51305	15nF	10%	50V
2706	4822 124 40181	220µF	20%	10V	2748	4822 126 11585	22nF +80-20% Y5V 25V		
2707	4822 124 41576	2,2µF	20%	50V	2749	4822 126 12339	2,2nF	10%	Y5R
2708	4822 124 40181	220µF	20%	10V	2750	5322 122 32311	470pF	10%	100V
2709	4822 124 80144	220µF	20%	25V	2751	4822 121 51305	15nF	10%	50V
2710	4822 124 41397	47µF	20%	25V	2752	4822 122 10577	3,3nF	10%	16V
2711	4822 124 40181	220µF	20%	10V	2753	4822 124 40242	1µF	20%	63V
2712	4822 124 40181	220µF	20%	10V	2754	4822 124 40242	1µF	20%	63V



2713	4822 124 80144	220µF	20%	25V	2757	4822 121 51252	470nF	5%	63V
2714	4822 124 41397	47µF	20%	25V	2758	4822 121 51252	470nF	5%	63V
2715	4822 124 41596	22µF	20%	50V	2759	4822 122 33519	470pF	10%	50V
2716	4822 124 41596	22µF	20%	50V	2760	4822 122 33519	470pF	10%	50V
2718	4822 124 41397	47µF	20%	25V	2761	4822 122 33169	680pF	10%	50V
2719	4822 124 41397	47µF	20%	25V	2762	4822 122 33169	680pF	10%	50V
2721	4822 121 43144	22nF	10%	50V	2763	4822 124 41584	100µF	20%	10V
2722	4822 122 10577	3,3nF	10%	16V					
2723	4822 121 51304	10nF	10%	50V					
2724	5322 122 32052	680pF	10%	50V					



2725	4822 126 11714	4,7nF	20%		3701	4822 116 83863	1K	5%	0,5W
2726	4822 126 11714	4,7nF	20%		3702	4822 116 83884	47K	5%	0,5W
2727	4822 122 10577	3,3nF	10%	16V	3703	4822 116 52176	10R	5%	0,5W
2728	4822 121 51305	15nF	10%	50V	3704	4822 116 52263	2K7	5%	0,5W
2729	4822 126 12787	330pF	10%	50V	3705	4822 116 83863	1K	5%	0,5W
2730	4822 121 43898	8,2nF	10%	50V	3706	4822 111 30893	4M7	5%	0,2W
2731	4822 126 11585	22nF +80-20% Y5V 25V			3707	4822 116 52176	10R	5%	0,5W
2732	4822 126 11585	22nF +80-20% Y5V 25V			3708	4822 116 52304	82K	5%	0,5W
2733	4822 126 12339	2,2nF	10%	Y5R	3709	4822 116 52186	22R	5%	0,5W
2734	5322 122 32311	470pF	10%	100V	3710	4822 116 52269	3K3	5%	0,5W



2735	4822 121 51305	15nF	10%	50V	3711	4822 116 52256	2K2	5%	0,5W
2736	4822 126 12787	330pF	10%	50V	3712	4822 116 52256	2K2	5%	0,5W
2737	4822 121 43898	8,2nF	10%	50V	3713	4822 116 52257	22K	5%	0,5W
2738	4822 126 11585	22nF +80-20% Y5V 25V			3714	4822 116 52257	22K	5%	0,5W
2739	4822 122 33195	100pF	10%	50V	3715	4822 116 52207	1K2	5%	0,5W
2740	4822 126 11714	4,7nF	20%		3716	4822 116 52303	8K2	5%	0,5W
2741	4822 126 11714	4,7nF	20%		3717	4822 116 52219	330R	5%	0,5W
2742	4822 122 33195	100pF	10%	50V	3718	4822 116 83864	10K	5%	0,5W
2743	4822 126 12339	2,2nF	10%	Y5R	3719	4822 116 52269	3K3	5%	0,5W
2744	5322 122 32311	470pF	10%	100V	3720	4822 116 52269	3K3	5%	0,5W



Note : Only those are norma	1707	4822 2;

MTF



2703	4822 124 41397	47µF	20%	25V	2745	4822 126 12339	2,2nF	10%	Y5R
2704	4822 124 41596	22µF	20%	50V	2746	5322 122 32311	470pF	10%	100V
2705	4822 124 40246	4,7µF	20%	63V	2747	4822 121 51305	15nF	10%	50V
2706	4822 124 40181	220µF	20%	10V	2748	4822 126 11585	22nF +80-20% Y5V 25V		
2707	4822 124 41576	2,2µF	20%	50V	2749	4822 126 12339	2,2nF	10%	Y5R
2708	4822 124 40181	220µF	20%	10V	2750	5322 122 32311	470pF	10%	100V
2709	4822 124 80144	220µF	20%	25V	2751	4822 121 51305	15nF	10%	50V
2710	4822 124 41397	47µF	20%	25V	2752	4822 122 10577	3,3nF	10%	16V
2711	4822 124 40181	220µF	20%	10V	2753	4822 124 40242	1µF	20%	63V
2712	4822 124 40181	220µF	20%	10V	2754	4822 124 40242	1µF	20%	63V



2713	4822 124 80144	220µF	20%	25V	2757	4822 121 51252	470nF	5%	

MTF

2nF	10%	Y5R	3721	4822 116 52245	150K	5%	0,5W	3764	4822 116 83864	10K	5%	0,5W
0pF	10%	100V	3722	4822 116 83872	220R	5%	0,5W	3765	4822 116 83864	10K	5%	0,5W
nF	10%	50V	3723	4822 116 83883	470R	5%	0,5W	3768	4822 116 83864	10K	5%	0,5W
$\text{nF} + 80-20\%$	Y5V	25V	3724	4822 116 52182	15R	5%	0,5W	3769	4822 116 52234	100K	5%	0,5W
3nF	10%	Y5R	3725	4822 116 52303	8K2	5%	0,5W	3770	4822 116 83884	47K	5%	0,5W
0pF	10%	100V	3726	4822 116 52207	1K2	5%	0,5W	3772	4822 116 52234	100K	5%	0,5W
nF	10%	50V	3727	4822 116 52219	330R	5%	0,5W	3778	4822 116 52234	100K	5%	0,5W
3nF	10%	16V	3728	4822 116 83864	10K	5%	0,5W	3779	4822 116 83864	10K	5%	0,5W
F	20%	63V	3729	4822 116 52269	3K3	5%	0,5W	3780	4822 116 52272	330K	5%	0,5W
F	20%	63V	3730	4822 116 52269	3K3	5%	0,5W	3781	4822 116 83883	470R	5%	0,5W
0pF	5%	63V	3731	4822 116 52245	150K	5%	0,5W	3782	4822 116 83883	470R	5%	0,5W
0nF	5%	63V	3732	4822 116 83864	10K	5%	0,5W	3783	4822 116 83864	10K	5%	0,5W
0pF	10%	50V	3733	4822 116 52256	2K2	5%	0,5W	3784	4822 116 83864	10K	5%	0,5W
0pF	10%	50V	3734	4822 116 52289	5K6	5%	0,5W	3786	4822 116 52234	100K	5%	0,5W
0pF	10%	50V	3735	4822 116 83864	10K	5%	0,5W	3787	4822 116 52191	33R	5%	0,5W
0pF	10%	50V	3736	4822 116 52256	2K2	5%	0,5W	3788	4822 116 52283	4K7	5%	0,5W
$0\mu\text{F}$	20%	10V	3737	4822 116 52245	150K	5%	0,5W	3789	4822 116 52283	4K7	5%	0,5W
C	5%	0,5W	3738	4822 116 83872	220R	5%	0,5W	3790	4822 116 83882	39K	5%	0,5W
K	5%	0,5W	3739	4822 116 83883	470R	5%	0,5W	3791	4822 116 52176	10R	5%	0,5W
R	5%	0,5W	3740	4822 116 52283	4K7	5%	0,5W					
C	5%	0,5W	3741	4822 116 52186	22R	5%	0,5W					
K	5%	0,5W	3742	4822 116 52245	150K	5%	0,5W					
R	5%	0,5W	3743	4822 116 83872	220R	5%	0,5W					
C	5%	0,5W	3744	4822 116 83883	470R	5%	0,5W					
R	5%	0,5W	3745	4822 116 52283	4K7	5%	0,5W					
C	5%	0,5W	3746	4822 116 52186	22R	5%	0,5W					
R	5%	0,5W	3747	4822 116 52289	5K6	5%	0,5W					
K	5%	0,5W	3748	4822 116 52175	100R	5%	0,5W					
R	5%	0,5W	3749	4822 116 52245	150K	5%	0,5W					
C	5%	0,5W	3750	4822 116 83872	220R	5%	0,5W					
C	5%	0,5W	3751	4822 116 83883	470R	5%	0,5W	6703	4822 130 30621	Diode 1N4148		
R	5%	0,5W	3752	4822 116 52182	15R	5%	0,5W	6706	4822 130 30621	Diode 1N4148		
K	5%	0,5W	3753	4822 116 52175	100R	5%	0,5W	6707	4822 130 30621	Diode 1N4148		
K	5%	0,5W	3754	4822 116 52256	2K2	5%	0,5W	6708	4822 130 30621	Diode 1N4148		
C	5%	0,5W	3755	4822 116 52256	2K2	5%	0,5W					
C	5%	0,5W	3756	4822 116 52256	2K2	5%	0,5W					
R	5%	0,5W	3757	4822 116 52256	2K2	5%	0,5W					
K	5%	0,5W	3758	4822 100 20165	500R	30%	0,1W					
C	5%	0,5W	3760	4822 116 83864	10K	5%	0,5W					
C	5%	0,5W	3761	4822 116 83884	47K	5%	0,5W					

MTF

C	5%	0,5W	3741	4822 116 52186	22R	5%	0,5W	3788	4822 116 52283	4K7	5%	0,5W
K	5%	0,5W	3742	4822 116 52245	150K	5%	0,5W	3789	4822 116 52283	4K7	5%	0,5W
R	5%	0,5W	3743	4822 116 83872	220R	5%	0,5W	3790	4822 116 83882	39K	5%	0,5W
C	5%	0,5W	3744	4822 116 83883	470R	5%	0,5W	3791	4822 116 52176	10R	5%	0,5W
R	5%	0,5W	3745	4822 116 52283	4K7	5%	0,5W					
C	5%	0,5W	3746	4822 116 52186	22R	5%	0,5W					
R	5%	0,5W	3747	4822 116 52289	5K6	5%	0,5W					
K	5%	0,5W	3748	4822 116 52175	100R	5%	0,5W					
R	5%	0,5W	3749	4822 116 52245	150K	5%	0,5W					
C	5%	0,5W	3750	4822 116 83872	220R	5%	0,5W					
C	5%	0,5W	3751	4822 116 83883	470R	5%	0,5W	5701	4822 157 10371	Coil		
R	5%	0,5W	3752	4822 116 52182	15R	5%	0,5W					
K	5%	0,5W	3753	4822 116 52175	100R	5%	0,5W					
K	5%	0,5W	3754	4822 116 52256	2K2	5%	0,5W					
C	5%	0,5W	3755	4822 116 52256	2K2	5%	0,5W					
C	5%	0,5W	3756	4822 116 52256	2K2	5%	0,5W					
R	5%	0,5W	3757	4822 116 52256	2K2	5%	0,5W					
K	5%	0,5W	3758	4822 100 20165	500R	30%	0,1W					
C	5%	0,5W	3760	4822 116 83864	10K	5%	0,5W					
C	5%	0,5W	3761	4822 116 83884	47K</td							

FRONT BOARD

		2401 4822 124 11959 100µF 20% 10V 2402 4822 124 40242 1µF 20% 50V 2464 4822 122 10466 220pF 10% 50V 2465 4822 122 10466 220pF 10% 50V 2478 4822 122 10466 220pF 10% 50V		3467 4822 116 52243 1K5 5% 0,5W 3468 4822 116 52283 4K7 5% 0,5W 3469 4822 116 52231 820R 5% 0,5W 3470 4822 116 52231 820R 5% 0,5W 3471 4822 116 52283 4K7 5% 0,5W
		3401 4822 116 52175 100R 5% 0,5W 3402 4822 116 52234 100K 5% 0,5W 3403 4822 116 52244 15K 5% 0,5W 3404 4822 116 83883 470R 5% 0,5W 3405 4822 116 52238 12K 5% 0,5W		3472 4822 116 52231 820R 5% 0,5W 3473 4822 116 52269 3K3 5% 0,5W 3474 4822 116 52283 4K7 5% 0,5W 3475 4822 116 52283 4K7 5% 0,5W 3478 4822 116 52283 4K7 5% 0,5W
		3406 4822 116 52276 3K9 5% 0,5W 3407 4822 116 52243 1K5 5% 0,5W 3408 4822 116 52226 560R 5% 0,5W 3410 4822 116 83961 6K8 5% 0,5W 3411 4822 116 52238 12K 5% 0,5W		3479 4822 116 52283 4K7 5% 0,5W 3480 4822 116 52257 22K 5% 0,5W 3481 4822 116 52257 22K 5% 0,5W 3482 4822 116 52257 22K 5% 0,5W 3484 4822 116 52264 27K 5% 0,5W
		3412 4822 116 52257 22K 5% 0,5W 3414 4822 116 83961 6K8 5% 0,5W 3415 4822 116 52238 12K 5% 0,5W 3416 4822 116 52257 22K 5% 0,5W 3451 4822 116 52283 4K7 5% 0,5W		3485 4822 116 52264 27K 5% 0,5W
		3452 4822 116 52283 4K7 5% 0,5W 3453 4822 116 52283 4K7 5% 0,5W 3454 4822 116 52283 4K7 5% 0,5W 3455 4822 116 52283 4K7 5% 0,5W 3456 4822 116 52283 4K7 5% 0,5W		5401 4822 242 73769 Res Cer 4.19MHz 5402 4822 156 21721 Inductor 2,2µH 10% 5403 4822 157 52333 Inductor 100µH 10%
		3457 4822 116 52283 4K7 5% 0,5W 3458 4822 116 52283 4K7 5% 0,5W 3459 4822 116 52283 4K7 5% 0,5W 3460 4822 116 52283 4K7 5% 0,5W 3461 4822 116 52269 3K3 5% 0,5W		6402 4822 130 30621 Diode 1N4148 6403 4822 130 30621 Diode 1N4148 6404 4822 130 31554 Diode BZX79-F
		3462 4822 116 52243 1K5 5% 0,5W 3463 4822 116 52283 4K7 5% 0,5W 3464 4822 116 52283 4K7 5% 0,5W 3465 4822 116 52283 4K7 5% 0,5W 3466 4822 116 52243 1K5 5% 0,5W		7401 4822 209 15568 IC TMP47C422F 7402 4822 130 44503 Trans BC547C 7403 4822 130 40959 Trans BC547B



FRONT BOARD

- MISCELLANEOUS -

1401	4822 135 00124	LCD Display
1410	4822 276 13114	Tact Switch
1411	4822 276 13114	Tact Switch
1412	4822 276 13114	Tact Switch
1413	4822 276 13114	Tact Switch
1415	4822 276 13114	Tact Switch
1416	4822 276 13114	Tact Switch
1417	4822 276 13114	Tact Switch

Note : Only those parts mentioned in the list
are normal service parts.

AUDIO BOARD

AL

					
2250	4822 126 13678	470µF 20% 10V			
2251	4822 126 13678	470µF 20% 10V			
2252	5322 121 42661	330nF 10% 63V			
2253	5322 121 42661	330nF 10% 63V			
2254	4822 124 11958	47µF 20% 25V			
2255	4822 124 11958	47µF 20% 25V			
2256	4822 124 11959	100µF 20% 10V			
2257	4822 124 11959	100µF 20% 10V			
2258	5322 122 32052	680pF 10% 50V			
2259	5322 122 32052	680pF 10% 50V			
2260	4822 124 40242	1µF 20% 50V			
2261	4822 124 40242	1µF 20% 50V			
2262	4822 124 80144	220µF 20% 25V			
2263	4822 124 80558	470µF 20% 16V			
2300	4822 122 33197	1nF 10% 50V			
2301	4822 122 33197	1nF 10% 50V			
2302	4822 122 33197	1nF 10% 50V			
2303	4822 122 33197	1nF 10% 50V			
2304	5322 121 42386	100nF 10% 63V			
2305	4822 124 11878	700µF 20% 16V			
2306	4822 126 11585	22nF +80-20% 25V			
2307	4822 124 11972	220µF 20% 10V			
2310	4822 124 41576	2,2µF 20% 50V			
2312	4822 124 11959	100µF 20% 10V			
2400	4822 126 11714	4,7nF 20% 16V			
2401	4822 126 11714	4,7nF 20% 16V			
2402	4822 126 11714	4,7nF 20% 16V			
2403	4822 124 41596	22µF 20% 50V			
2404	4822 124 41596	22µF 20% 50V			
2405	4822 124 41596	22µF 20% 50V			
2406	4822 124 41596	22µF 20% 50V			
2516	5322 121 42465	68nF 10% 50V			
2517	5322 121 42465	68nF 10% 50V			
2518	4822 126 12878	1,5nF 10% 16V			
2519	4822 126 12878	1,5nF 10% 16V			
2564	4822 124 11959	100µF 20% 10V			
2565	4822 124 40246	4,7µF 20% 50V			
2566	4822 124 40246	4,7µF 20% 50V			
2567	4822 122 33195	100pF 10% 50V			
2568	4822 122 33195	100pF 10% 50V			

					
2569	4822 122 33197	1nF 10% 50V			
2570	4822 122 33197	1nF 10% 50V			
2571	4822 124 40242	1µF 20% 50V			
2572	4822 124 40242	1µF 20% 50V			
2577	4822 122 33197	1nF 10% 50V			
2578	4822 122 33197	1nF 10% 50V			
2579	4822 126 12785	47nF +80-20% 50V			
2580	4822 126 12785	47nF +80-20% 50V			
					
3250	4822 116 81753	4R7 5% 0,5W			
3251	4822 116 83883	470R 5% 0,5W			
3252	4822 116 83863	1K 5% 0,5W			
3253	4822 116 52226	560R 5% 0,5W			
3254	4822 116 83883	470R 5% 0,5W			
3255	4822 116 83883	470R 5% 0,5W			
3256	4822 116 81753	4R7 5% 0,5W			
3258	4822 116 52238	12K 5% 0,5W			
3259	4822 116 52256	2K2 5% 0,5W			
3302	4822 116 83872	220R 5% 0,5W			
3303	4822 116 83872	220R 5% 0,5W			
3304	4822 116 83883	470R 5% 0,5W			
3305	4822 116 83883	470R 5% 0,5W			
3306	4822 116 52289	5K6 5% 0,5W			
3307	4822 116 52303	8K2 5% 0,5W			
3308	4822 116 83868	150R 5% 0,5W			
3309	4822 116 83868	150R 5% 0,5W			
3310	4822 116 52191	33R 5% 0,5W			
3401	4822 116 52244	15K 5% 0,5W			
3402	4822 116 52244	15K 5% 0,5W			
3403	4822 116 52244	15K 5% 0,5W			
3404	4822 116 83864	10K 5% 0,5W			
3405	4822 116 83864	10K 5% 0,5W			
3406	4822 116 83864	10K 5% 0,5W			
3407	4822 116 83864	10K 5% 0,5W			
3408	4822 116 83863	1K 5% 0,5W			
3409	4822 116 83863	1K 5% 0,5W			
3411	4822 116 52244	15K 5% 0,5W			
3516	4822 116 52269	3K3 5% 0,5W			
3517	4822 116 52269	3K3 5% 0,5W			

AUDIO BOARD

3518	4822 116 52235	1M 5% 0,5W
3519	4822 116 52235	1M 5% 0,5W
3522	4822 102 10447	Rot 50KB x 2
3529	4822 116 52303	8K2 5% 0,5W
3530	4822 116 52303	8K2 5% 0,5W
3576	4822 116 83883	470R 5% 0,5W
3577	4822 116 83883	470R 5% 0,5W
3578	4822 116 52238	12K 5% 0,5W
3579	4822 116 52238	12K 5% 0,5W
3580	4822 116 83872	220R 5% 0,5W
3582	4822 116 52305	820K 5% 0,5W
3583	4822 116 52305	820K 5% 0,5W
3584	4822 116 52243	1K5 5% 0,5W
3585	4822 116 52243	1K5 5% 0,5W
3586	4822 116 52228	680R 5% 0,5W
3587	4822 116 52228	680R 5% 0,5W
3588	4822 116 52271	33K 5% 0,5W
3589	4822 116 52271	33K 5% 0,5W
3595	4822 116 83864	10K 5% 0,5W
3596	4822 116 83864	10K 5% 0,5W
3597	4822 116 52238	12K 5% 0,5W
3598	4822 116 52238	12K 5% 0,5W
3599	4822 116 52283	4K7 5% 0,5W
3600	4822 116 52283	4K7 5% 0,5W
3610	4822 116 83864	10K 5% 0,5W
3611	4822 116 83864	10K 5% 0,5W
3660	4822 116 83883	470R 5% 0,5W
3661	4822 116 83883	470R 5% 0,5W
5503	4822 157 51195	Inductor 1µH 20%
6300	5322 130 30684	Diode 1N4002GP
6301	5322 130 30684	Diode 1N4002GP
6302	5322 130 30684	Diode 1N4002GP
6303	5322 130 30684	Diode 1N4002GP
6304	4822 130 32806	Diode BZX79-F

6305	4822 130 30621	Diode 1N4148
6402	4822 130 30621	Diode 1N4148
6403	4822 130 30621	Diode 1N4148
6404	4822 130 30621	Diode 1N4148
6405	4822 130 30621	Diode 1N4148
7250	4822 130 42231	Trans 'BC557C
7251	4822 130 41327	Trans BC327
7252	4822 130 44503	Trans BC547C
7253	4822 130 42231	Trans 'BC557C
7254	4822 130 41327	Trans BC327
7300	4822 209 31544	IC TA8227P
7400	5322 130 44779	Trans BC338
7401	5322 130 44779	Trans BC338
7402	4822 130 42231	Trans BC557C
7513	4822 130 44503	Trans BC547C
7514	4822 130 44503	Trans BC547C
- MISCELLANEOUS -		
1257	4822 267 31468	Phone Socket 3.5mm
1302	4822 070 32002	Fuse 250V 2A
1400	4822 277 30689	Slide Switch
1503	4822 276 12648	Push Switch
1505	4822 276 12648	Push Switch
1800	4822 276 13625	Push Switch
	4822 277 21794	Volt Sel (For -/01/11)
	4822 146 10424	Transf (For -/00/05/14)
	4822 146 10794	Transf (For -/01/11)
	4822 146 10425	Transf (For -/17)

Note : Only those parts mentioned in the list are normal service parts.

ATM 3

	2101 4822 122 33195	100pF 10% 50V			
	2102 4822 126 12812	47pF 5% 50V			
	2103 4822 124 40248	10µF 20% 63V			
	2104 4822 124 40248	10µF 20% 63V			
	2105 4822 126 12112	22pF 5% 50V			
	2105 4822 126 12283	8,2pF 0,5% 50V			
	2106 4822 125 50681	Var Capacitor			
	2106 4822 125 50648	Var Capacitor			
	2107 4822 126 12827	390pF 5% 50V			
	2108 4822 122 32147	22pF 2% 100V			
	2108 4822 126 12284	5,6pF 0,5% 50V			
	2109 4822 122 31821	3,3pF 0,25% 100V			
	2109 4822 126 12809	2,2pF 5% 50V			
	2110 4822 126 12284	5,6pF 0,5% 50V			
	2110 4822 126 12229	8,2pF N750 50V			
	2112 4822 124 41397	47µF 20% 25V			
	2113 4822 126 13581	0,22µF 20% 50V			
	2114 4822 126 12787	330pF 10% 50V			
	2115 4822 124 40246	4,7UF20% 63V			
	2116 4822 126 12077	15nF 10% 25V			
	2116 4822 126 12147	22nF 10% 25V			
	2117 4822 124 40242	1µF 20% 63V			
	2118 4822 124 40242	1µF 20% 63V			
	2119 4822 126 12077	15nF 10% 25V			
	2119 4822 126 12147	22nF 10% 25V			
	2120 4822 124 40242	1µF 20% 63V			
	2121 4822 124 40239	0,47µF 20% 63V			
	2122 4822 124 40239	0,47µF 20% 63V			
	2125 β 4822 126 12826	120pF 50% 50V			
	2126 β 4822 125 50045	1p8-22p 250V			
	2150 β 4822 125 50045	1p8-22p 250V			
	3101 4822 100 20167	50K 30% 0,1W			
	3102 4822 116 52297	68K 5% 0,5W			
	3104 4822 116 52256	2K2 5% 0,5W			
	3108 4822 116 52191	33R 5% 0,5W			
	3109 4822 116 52234	100K 5% 0,5W			
	3110 4822 116 52234	100K 5% 0,5W			
	3111 α 4822 116 83863	1K 5% 0,5W			
	3113 4822 116 52252	180K 5% 0,5W			
	5101 4822 157 70513	Coil FM-RF			
	5101 4822 157 70762	Coil FM-RF			
	5101 4822 157 53789	Coil FM-RF			
	5104 4822 156 30947	Coil FM-OSC			
	5104 4822 157 70033	Coil FM-OSC			
	5105 4822 157 71145	Coil MW-OSC			
	5106 4822 157 70499	AM IF Filter			
	5107 4822 242 81154	AM IF Filter			
	5108 4822 156 11146	AM IF Filter			
	5109 β 4822 157 71144	Coil LW OSC.			
	5111 4822 156 21738	Coil MW RF			
	5112 β 4822 156 21739	Coil LW RF			
	6101 4822 130 30621	Diode 1N4148			
	6102 4822 130 30621	Diode 1N4148			
	7101 4822 209 32746	IC TEA5711T/N2			
- MISCELLANEOUS -					
	1100 β 4822 277 30933	Switch FM/LW/MW			
	1101 α 4822 277 21698	Switch FM/AM			

α for FM/MW only

β for FM/MW/LW only

Note : Only those parts mentioned in the list
are normal service parts.

CD97

II		II				
2802	4822 126 12785	47nF +80-20% 50V	2843	4822 126 13098	5,6nF 20%	16V
2803	4822 126 11585	47nF +80-20% 50V	2844	4822 122 10466	220pF 10%	50V
2804	4822 126 12878	1,5nF 10% 16V	2846	4822 122 33519	470pF 10%	50V
2805	4822 121 51412	560nF 10% 50V	2848	4822 122 33519	470pF 10%	50V
2806	4822 122 33519	470pF 10% 50V	2849	4822 122 10466	220pF 10%	50V
2807	4822 122 33191	18pF 5% 50V	2860	4822 124 40433	47μF 20%	25V
2808	4822 124 22263	220μF 20% 25V				
2809	4822 124 40242	1μF 20% 50%				
2810	4822 124 40242	1μF 20% 50%				
2811	4822 122 33849	150pF 10% 50V				
2812	4822 122 33849	150pF 10% 50V	3801	4822 052 10478	4R7 5%	0,33W
2813	4822 126 12339	2,2nF 10% 16V	3802	4822 116 52252	180K 5%	0,16W
2814	4822 126 13677	39pF 5% 50V	3803	4822 111 50499	3M3 5%	
2815	4822 126 12882	100nF 8,2% 50V	3805	4822 116 83884	47K 5%	0,16W
2816	4822 124 41407	0,47μF 20% 50V	3806	4822 116 52256	2K2 5%	0,16W
2817	4822 121 42687	3,3nF 10% 50V	3807	4822 116 52271	33K 5%	0,16W
2818	4822 124 40242	1μF 20% 50V	3808	4822 116 52263	2K7 5%	0,16W
2819	5322 121 42386	100nF 10% 50V	3809	4822 116 83884	47K 5%	0,16W
2820	4822 124 40746	0,22μF 20% 50V	3810	4822 116 52257	22K 5%	0,16W
2821	4822 124 41579	10μF 20% 50V	3811	4822 116 52257	22K 5%	0,16W
2822	4822 122 10167	22nF 30% 50V	3812	4822 116 52257	22K 5%	0,16W
2823	4822 124 40246	4,7μF 20% 50V	3815	4822 050 11002	1K 5%	0,16W
2824	4822 124 41407	0,47μF 20% 50V	3816	4822 050 11002	1K 5%	0,16W
2825	4822 122 10462	15pF 5% NP0	3817	4822 116 83883	470R 5%	0,16W
2826	4822 124 41407	0,47μF 20% 50V	3818	4822 116 83883	470R 5%	0,16W
2827	4822 124 40433	47μF 20% 25V	3819	4822 117 11825	1M5 5%	
2828	4822 124 41579	10μF 20% 50V	3820	4822 116 52252	180K 5%	0,16W
2829	5322 121 42489	33nF 10% 50V	3821	4822 116 52243	1K5 5%	0,16W
2830	4822 122 10319	82pF 10% 50V	3822	4822 116 52264	27K 5%	0,16W
2831	4822 121 41856	22nF 10% 50V	3823	4822 116 52234	100K 5%	0,16W
2832	4822 124 41576	2,2μF 20% 50V	3824	4822 116 83868	150R 5%	0,16W
2833	4822 124 40433	47μF 20% 25V	3826	4822 116 83961	6K8 5%	0,16W
2834	4822 126 12882	100nF +80-20% 50V	3827	4822 116 52243	1K5 5%	0,16W
2835	4822 126 12882	100nF +80-20% 50V	3828	4822 116 83864	10K 5%	0,16W
2836	4822 124 80791	470μF 20% 16V	3829	4822 116 52271	33K 5%	0,16W
2837	4822 126 11585	22nF +80-20% 25V	3830	4822 116 52244	15K 5%	0,16W
2838	4822 126 12882	100nF +80-20% 50V	3831	4822 116 52251	18K 5%	0,16W
2839	4822 126 12882	100nF +80-20% 50V	3832	4822 116 52222	390R 5%	0,16W
2841	4822 122 33195	100pF 10% 50V	3833	4822 116 52264	27K 5%	0,16W
2842	4822 124 40849	330μF 20% 16V	3835	4822 116 52184	18R 5%	0,16W

CD97

				
3836	4822 050 11002	1K 5% 0,16W	3898	4822 116 52256 2K2 5% 0,16W
3837	4822 111 30893	4M7 5%	3899	4822 050 11002 1K 5% 0,16W
3838	4822 116 52234	100K 5% 0,16W		
3839	4822 116 52235	1M 5% 0,16W		
3840	4822 050 11002	1K 5% 0,16W		
3841	4822 116 52298	680K 5% 0,16W	5000	4822 526 10494 Ind Fxd 100MHz
3842	4822 116 52297	68K 5% 0,16W	5010	4822 526 10494 Ind Fxd 100MHz
3844	4822 116 52291	56K 5% 0,16W	5020	4822 526 10494 Ind Fxd 100MHz
3845	4822 116 52298	680K 5% 0,16W	5030	4822 526 10494 Ind Fxd 100MHz
3846	4822 050 11002	1K 5% 0,16W	5040	4822 526 10494 Ind Fxd 100MHz
3847	4822 116 52298	680K 5% 0,16W	5050	4822 526 10494 Ind Fxd 100MHz
3848	4822 116 52251	18K 5% 0,16W	5060	4822 157 50964 Coil 100µH 10%
3849	4822 052 10478	4R7 5%	5803	4822 242 73557 Filter 8MHz467
3850	4822 116 52251	18K 5% 0,16W		
3851	4822 116 52244	15K 5% 0,16W		
3852	4822 116 83883	470R 5% 0,16W	6001	4822 130 30621 Diode 1N4148
3853	4822 116 52251	18K 5% 0,16W		
3854	4822 116 52243	1K5 5% 0,16W		
3855	4822 116 83882	29K 5% 0,16W		
3856	4822 116 52303	8K2 5% 0,16W		
3857	4822 116 52269	3K3 5% 0,16W	7801	4822 209 13703 IC M65821FP
3858	4822 116 80176	1R 5% 0,16W	7802	4822 209 32421 IC TDA1311A
3859	4822 116 83864	10K 5% 0,16W	7803	4822 209 90496 IC M62475FP
3860	4822 116 52207	1K2 5% 0,16W	7804	5322 130 60068 Trans BC558C(UAW)
3870	4822 052 10478	4R7 5%	7805	4822 209 32852 IC TDA7073A
3871	4822 116 52283	4K7 5% 0,5W	7806	4822 209 32852 IC TDA7073A
3880	4822 050 11002	1K 5% 0,16W		
3881	4822 050 11002	1K 5% 0,16W		
3882	4822 050 11002	1K 5% 0,16W		
3883	4822 050 11002	1K 5% 0,16W		
3884	4822 116 83882	39K 5% 0,16W		
3886	4822 116 52235	1M 5% 0,16W		
3890	4822 050 11002	1K 5% 0,16W		
3891	4822 050 11002	1K 5% 0,16W		
3892	4822 050 11002	1K 5% 0,16W		
3893	4822 050 11002	1K 5% 0,16W		
3894	4822 050 11002	1K 5% 0,16W		
3895	4822 050 11002	1K 5% 0,16W		
3896	4822 116 52256	2K2 5% 0,16W		
3897	4822 116 52256	2K2 5% 0,16W		

Note : Only those parts mentioned in the list
are normal service parts.



