

Service
Service
Service



Service Manual


TABLE OF CONTENTS

	Page
Location of PCBs	1-2
Version Variations & Package	1-2
Technical Specifications	1-3
Measurement Setup	1-4
Service Aids	1-5
ESD & Safety Instruction	1-6
System Setup & Controls	1-7 to 1-11
Troubleshooting	1-12
Repair Instructions	2-1 to 2-2
Disassembly Instructions & Service Positions	3-1 to 3-2
Set Block & Wiring Diagram	4
Key / Power Switch Board	5
Source + Phone / 6ch in Board	6
Power Board	7
Main Board	8
Set Mechanical Exploded View & Parts list	9



© Copyright 2001 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by SL-ET0316 Service Audio Printed in The Netherlands Subject to modification


 3140 785 32480

Version 1.0



PHILIPS

LOCATION OF PCB BOARDS

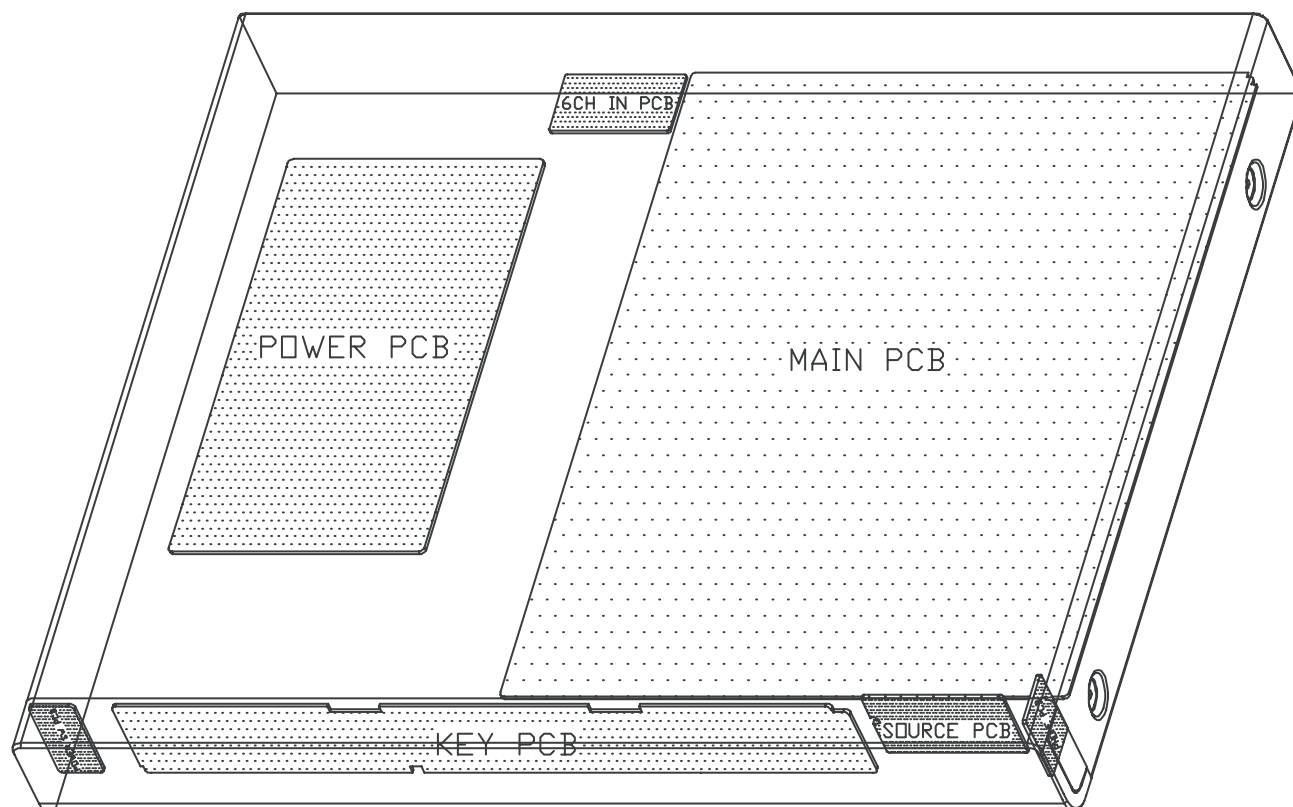

VERSION VARIATION:

Features & Board in used	Type/Versions	LX700D	LX700D	LX700D
		/21S	/22S	/25S
RDS function			x	x
Grid Switch	By software			
Line Cord (Detachable)		x	x	x
Line Cord (Fixed)				
AC Voltage (110V~127V / 220~240V)		x		
AC Voltage (220V~240V)			x	x
AC Voltage Selector		x		

SPECIFICATIONS

AMPLIFIER SECTION

Power Output	
- Stereo mode (DIN).....	2 x 50 W
- Surround mode (1 kHz).....	50 WRMS/channel
Total Harmonic Distortion.....	10 % at rated power (1 kHz)
Frequency Response	180 Hz-14 kHz/ 1 dB
Signal-to-Noise Ratio.....	> 65dB(CCIR)
Input Sensitivity.....	400 mV

TUNER SECTION

Tuning Range.....	FM 87.5 - 108 MHz
.....	MW 531 - 1602 kHz (9kHz steps)
.....	/22S/25S
.....	MW 530 - 1700 kHz (10kHz steps)
.....	/21S
26 dB Quieting Sensitivity.....	FM 20 dB
26 dB Quieting Sensitivity.....	MW3260uV/m
Image Rejection Ratio.....	FM 25 dB
.....	MW28 dB
IF Rejection Ratio.....	FM 60 dB
.....	MW24 dB
Signal-to-Noise Ratio.....	FM 55 dB
.....	MW35 dB
AM Suppression Ratio.....	FM 30 dB
Harmonic Distortion.....	FM Mono 3%
.....	FM Stereo 3%
.....	MW5%
Frequency Response.....	FM 180 Hz-10kHz/ 6 dB
Stereo Separation.....	FM 26 dB(1 kHz)
Stereo threshold.....	FM 23.5 dB

MISCELLANEOUS / GENERAL SECTION

Power Supply Rating.....	220~240V/50 Hz
.....	/22S/25S
.....	110~127V/220~240V, 50/60Hz
.....	/21S

Power Consumption.....	160 W
Dimensions (w x h x d).....	435 mm x 58 mm x 362mm
Weight.....	4.2 kg

IR REMOTE CONTROL

Effective Range.....	> 8 Meter
Number of Keys.....	45
Battery (1.5V).....	AA x 2

SPEAKERS

Front Speakers / Surround speaker

System.....	2-way shielded
Impedance/ ohm.....	8Ω
Speaker drivers.....	3" woofer, flat tw
Dimensions (w x h x d).....	89 mm x 270 mm x 41 mm
Weight.....	0.40 Kg





Center Speaker

System.....	2-way shielded
Impedance/ ohm.....	8Ω
Speaker drivers.....	3" woofer, flat tw
Dimensions (w x h x d).....	286 mm x 95 mm x 67 mm
Weight.....	0.88 Kg

SUBWOOFER

Subwoofer (not magnetically shielded design).....	6.5"
Input power.....	100W (8Ω, DIN)
Dimensions (w x h x d).....	195 mm x 462 mm x 263 mm
Weight.....	5.5 Kg

MEASUREMENT SETUP

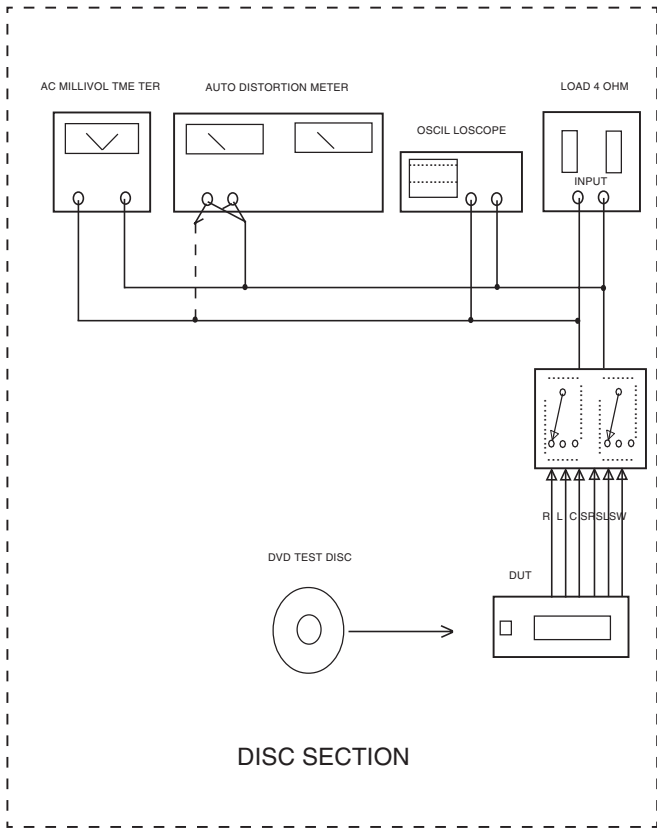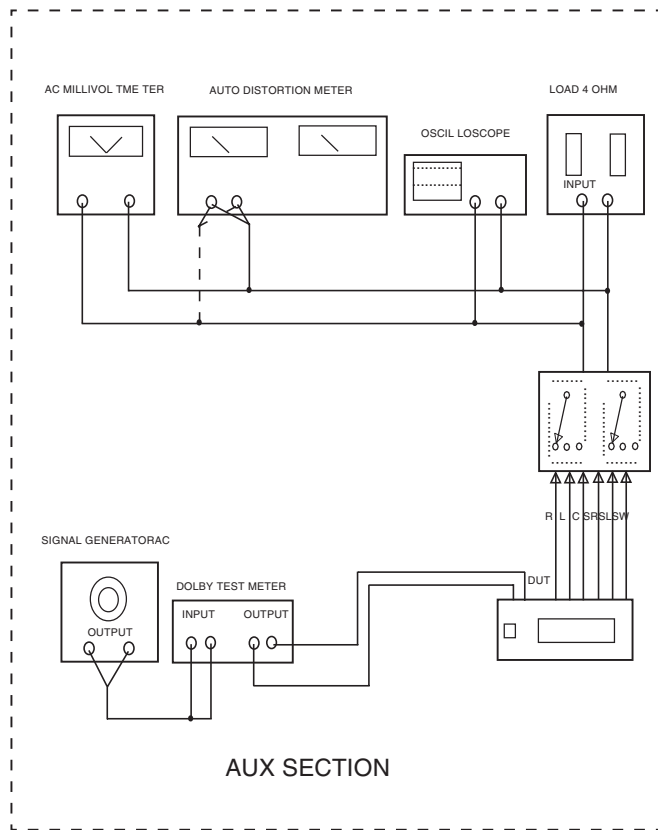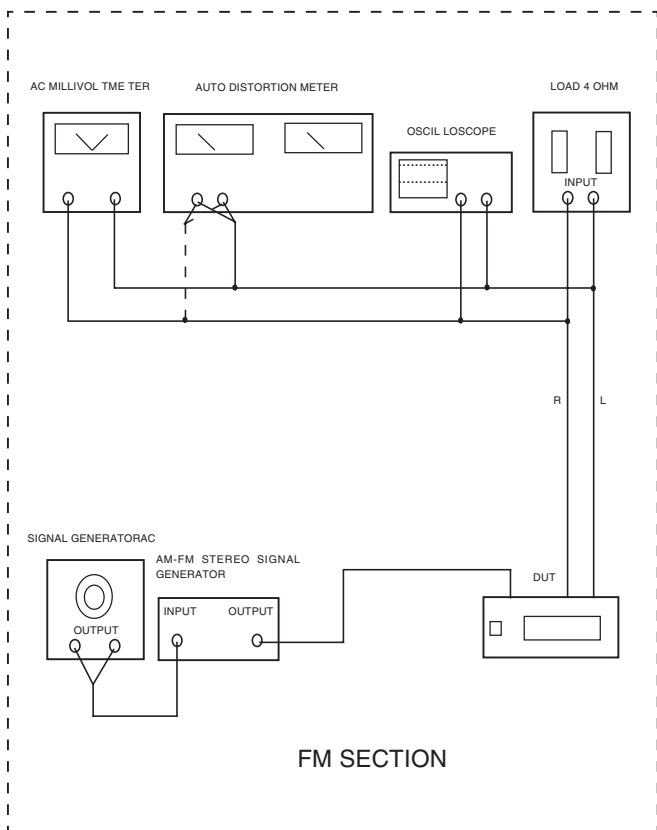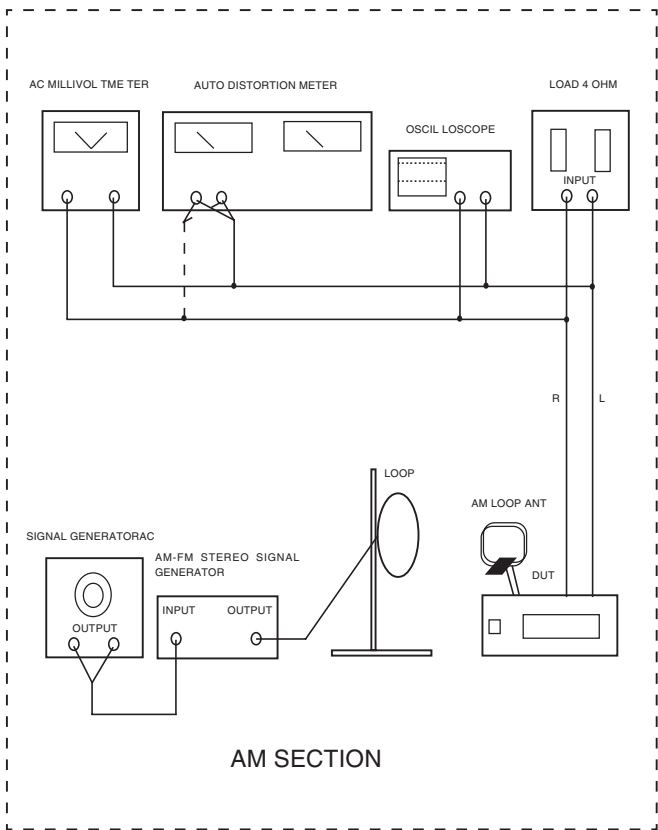

SERVICE AIDS

Service Tools:

Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6-T20	4822 395 50145
Torx driver T10 extended	4822 395 50423






Compact Disc:

SBC426/426A Test disc 5 + 5A	4822 397 30096
SBC442 Audio Burn-in test disc 1kHz	4822 397 30155
SBC429 Audio Signals disc	4822 397 30184
Dolby Pro-logic Test Disc	4822 395 10216

ESD Equipment:

Anti-static table mat - large 1200x650x1.25mm	4822 466 10953
anti-static table mat - small 600x650x1.25mm	4822 466 10958
Anti-static wristband	4822 395 10223
Connectorbox (1MΩ)	4822 395 11307
Extension cable (to connect wristband to conn.box)	4822 320 11305
Connecting cable (to connect table mat to conn.box)	4822 320 11306
Earth cable (to Connect product to mat or box) --	4822 320 11308
Complete kit ESD3 (combining all above products)	4822 320 10671
Wristband tester	4822 344 13999

HANDLING CHIP COMPONENTS

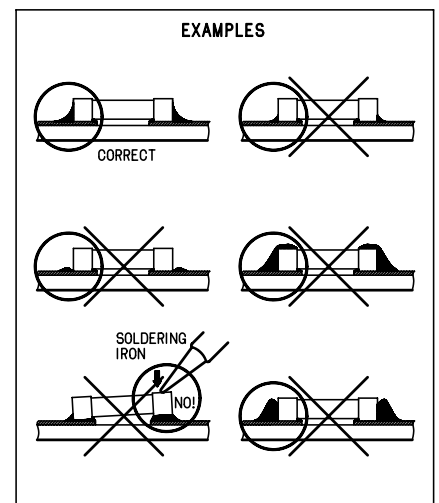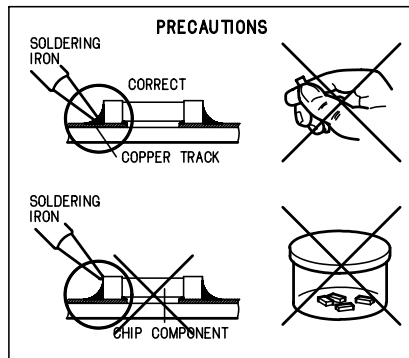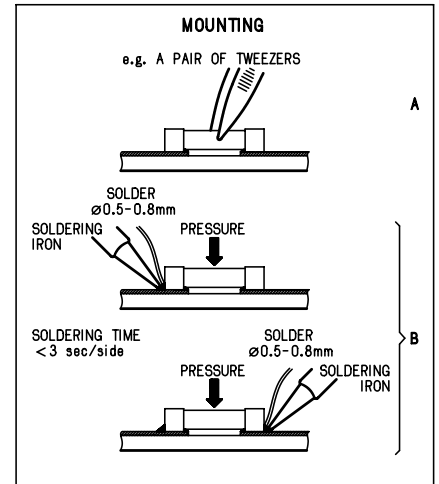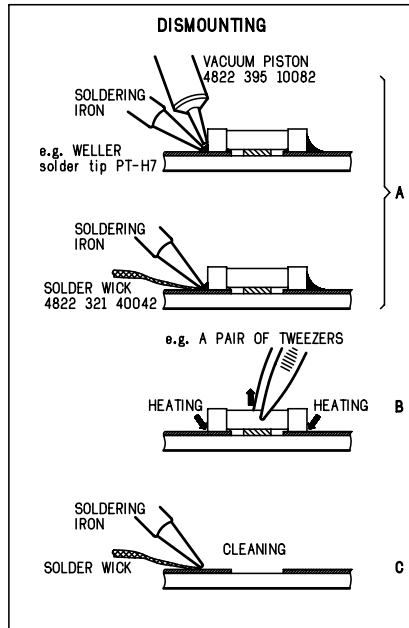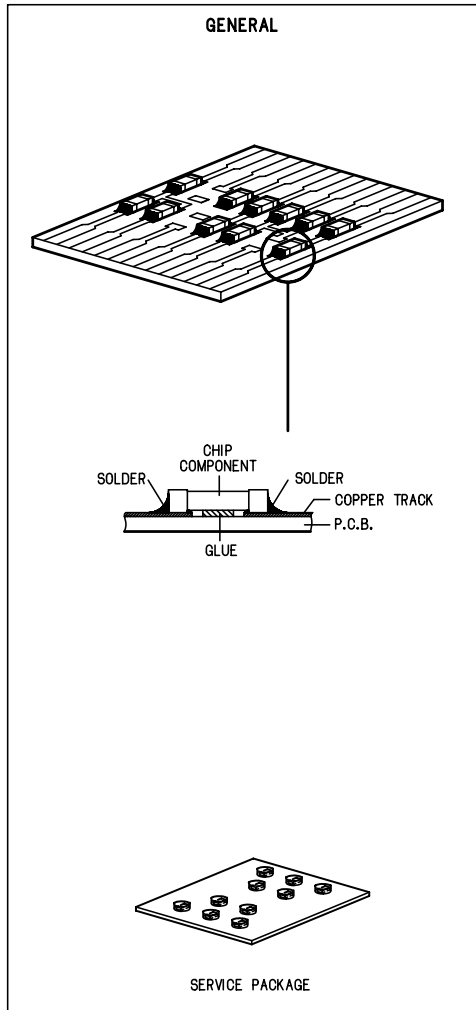

GB WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance.

Keep components and tools also at this potential.

ESD**NL** WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen.

Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).

Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet serti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

D WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).

Unvorsichtige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes.

Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione.

Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

NL

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées.

D


Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

I

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."

Connections

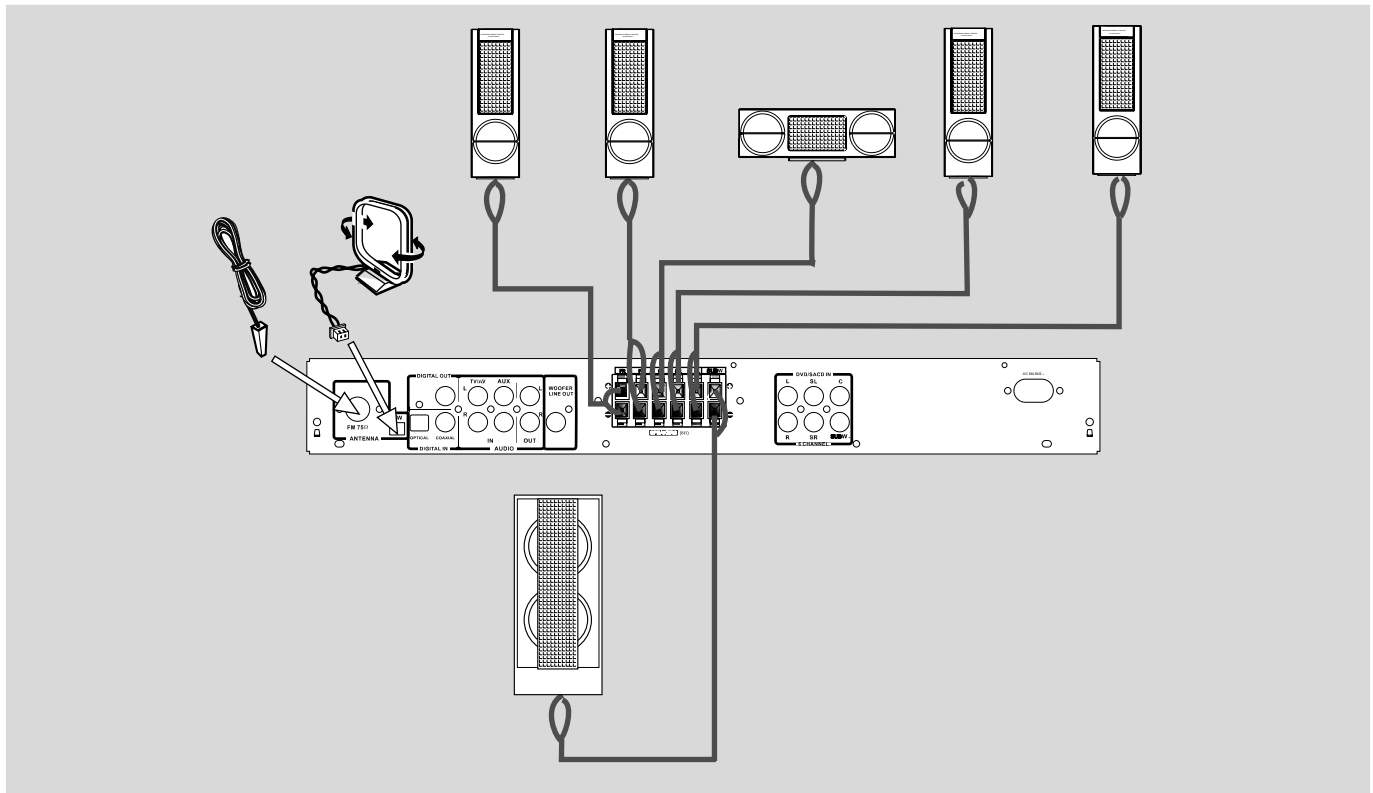


IMPORTANT!

- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.
- Never make or change any connections with the power switched on.
- The type plate is located at the rear of the system.

Connecting the speakers


Press up (or down) the speaker's jack and fully insert the stripped portion of the speaker cable into the jack, then release.

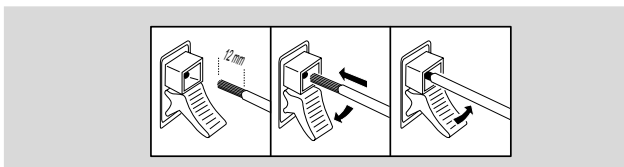

Before connecting the speakers:

- Mount the speakers onto the mini speaker stands as shown in the illustration.
- Remove the protective cover only after the connection and installation of speakers are completed.

Connect the supplied speaker system using the supplied speaker cable by matching the colors of the jacks and speaker cable.

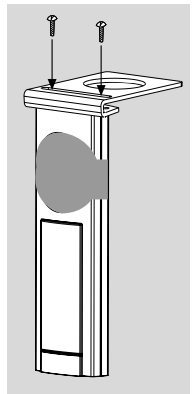

Notes:

- Check the speaker cables are correctly connected. Improper connections may damage the system due to short-circuit.
- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker jacks.
- Do not connect speakers with impedance lower than the speakers supplied. Please refer to the SPECIFICATION section of this manual.


Speakers	⊖	+
Front Left (L)	black	white
Front Right (R)	black	red
Center	black	green
Surround (Rear) Left (L)	black	blue
Surround (Rear) Right (R)	black	grey
Passive Subwoofer	black	purple

Connections

Connecting antennas


MW Indoor Loop Antenna

Connect the supplied MW loop antenna to the **MW** jack. Position the loop antenna to receive the clearest sound.

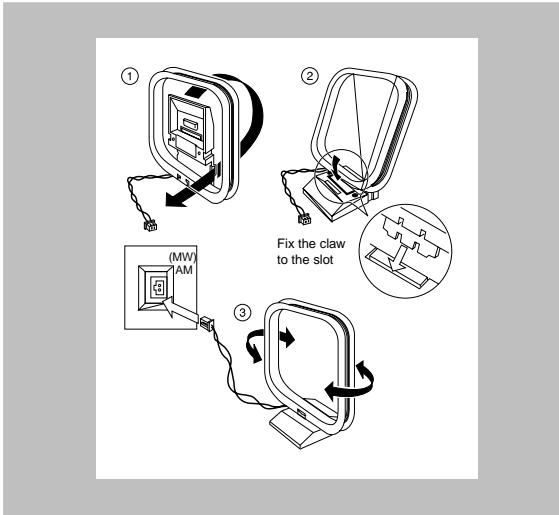

FM Indoor Antenna

Connect the supplied FM antenna to the **FM** jack. Move the antenna in various directions until the clearest signal is received.

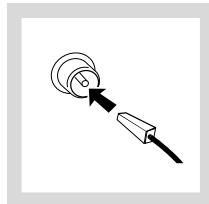


Note:

– Keep the antenna as far away as possible from the TV, VCR or any radiation source to prevent unwanted noise.

FM Outdoor Antenna

For better FM reception, use a 75 ohm coaxial cable (not supplied) to connect the system to an outdoor FM antenna as shown.

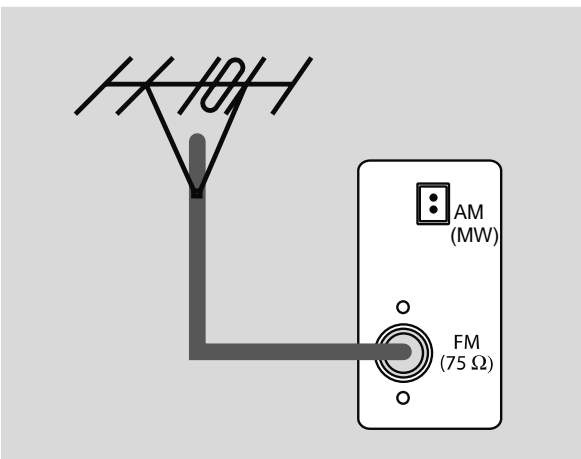

Connecting from a DVD and additional components

To listen to playback from your **DVD** or **SACD** player:

Option 1

6 CHANNEL-DVD/SACD IN

Use the supplied audio cables to connect the **6 CHANNEL-DVD/SACD IN** jacks to the corresponding Multichannel **AUDIO OUT** on your **DVD** or **SACD** player.

About 6 CHANNEL-DVD/SACD IN

The **6 CHANNEL-DVD/SACD IN** can be used to connect from a device with a built-in multichannel decoder (e.g. Dolby, Digital, DTS, etc) and 6-channel output, i.e. a high end **DVD/SACD** player

When using the **6 CHANNEL-DVD/SACD IN** audio input, the Receiver works as a multichannel amplifier. The source reproduces surround sound and sends it to the Receiver divided into the necessary channels. Therefore the **SURROUND** button has no effect since the provided signal is already multichannel.

From a source which is connected to the **6 CHANNEL-DVD/SACD IN**, audio input cannot be recorded.

OR

Option 2

DIGITAL IN

Connect the **OPTICAL** or **COAXIAL** jack to the **DIGITAL OUT** jack on the **DVD** or **SACD** player. You will need to set the Receiver's digital input to the jack you connected to (refer to "System Setup - Digital Input")

Connecting additional components

For listening to the playback from other audio/ visual devices through the Receiver

- Connect the **AUDIO IN (TV/AV or AUX)** jacks to the **AUDIO OUT** jacks on the **TV, VCR** or other audio/visual device.

AND/OR

- Connect the **DIGITAL IN (OPTICAL or COAXIAL)** jack to the **DIGITAL OUT** jack on other audio/ visual device. You will need to set the Receiver's digital input to the jack you connected to (refer to "System Setup - Digital Input").

For recording to an external recording device

- Connect the **AUDIO OUT** jacks to the **AUDIO IN** jacks on an analog recording device.

AND/OR

- Connect the **DIGITAL OUT** jack to the **DIGITAL IN** jack on a digital recording device. You can only make a digital recording from digital signal received from the **DIGITAL IN** jack on this receiver.

Connections

Notes:

- If the audio format of the digital input does not match the capabilities of your Receiver, it will produce a strong distorted sound or no sound at all
- Always refer to the instruction manual of the connected equipment to make an optimal connection

Recording from the digital output

It is possible to connect a digital recorder to the digital output of the receiver. In this way, all signals coming from the digital inputs can be recorded directly on the connected audio recorder.


The receiver can be used to record digital sound audio signal from DVD to CD-R.

Notes:

- Dolby Digital, DTS or MPEG signal are not possible to record from this receiver.
- Digital recording is not possible when the digital source material is copy-protected.

Inserting batteries into the remote control

- Open the battery compartment.
- Place the batteries in the compartment with the correct polarity as indicated by '+' and '-' symbols.
- Close the cover.

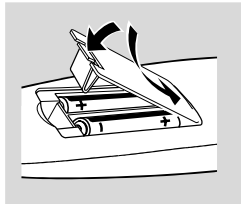

CAUTION!

- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.

Setting up the surround sound system

You must connect all the speakers and set up the system properly in order to enjoy the Digital Cinema experience at home (refer to "Connections - Connecting the speakers"). You will have the feeling of being in the middle of the action because sound is coming from everywhere around you. The subwoofer can enhance the bass performance of your system dramatically.


IMPORTANT!

Please sit at your usual listening position in order to set up the speaker balance correctly.

Placing the speakers

To obtain the best surround effect, place the speaker as follows.

Preparations

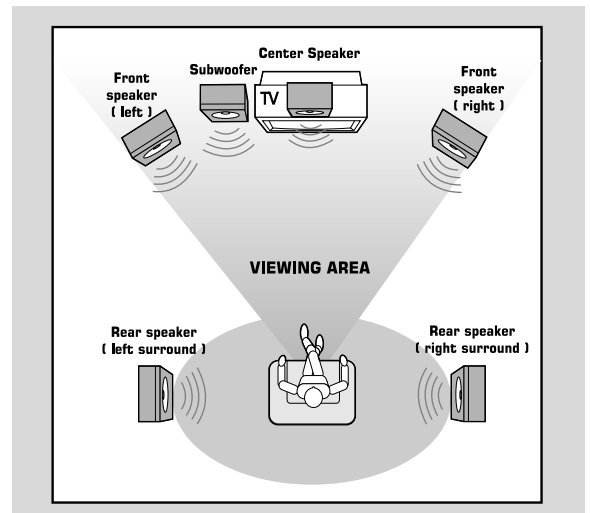

- 1 Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees from the listening position.
- 2 Place the center speaker above or below the TV, so the center channel's sound is localized.
- 3 Place the surround speakers at normal listening ear level facing each other or mounted on the wall.
- 4 Place the subwoofer on the floor near to the TV.

Notes:


- To avoid magnetic interference, do not position the front speakers too close to your TV.
- If the rear surround speakers are installed farther away from the listening position than the front and center speakers, it will weaken the surround effect.
- All speakers should be securely installed to prevent accidents and improve sound quality.

Switching on the system


- 1 After completing all the connections, connect the AC power cord of the Receiver to the wall outlet. The system will go into STANDBY mode.
- 2 Press **STANDBY ON** to switch on the last selected source.
- 3 Rotate the **SOURCE** button or press **TV/AV, DISC, TUNER** or **AUX** on the remote control to select the input source.
 - The selected source will be displayed.

Functional Overview

Front and Rear panels

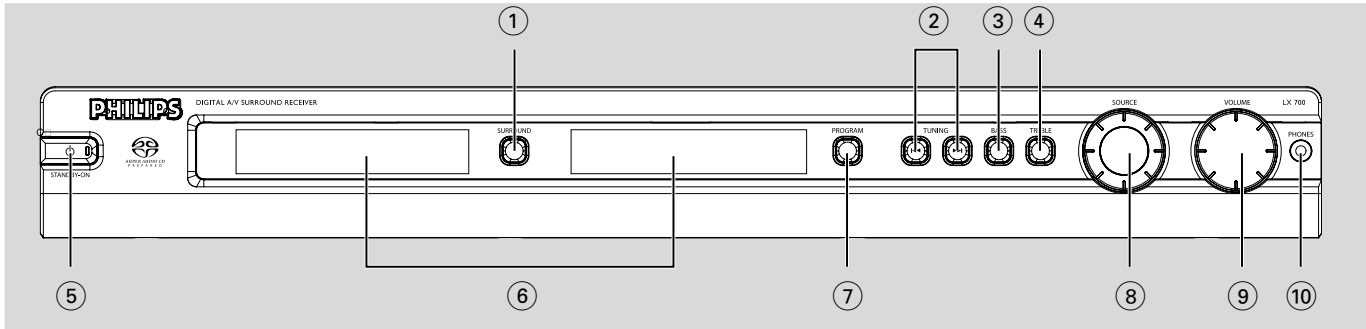

- ① **SURROUND**
 - to select multichannel surround (Dolby Digital, DTS, Dolby Pro Logic or Dolby Pro Logic II) or stereo sound effect.
- ② **TUNING** |◀◀ ▶▶|
 - to select the tuner frequency.
- ③ **BASS**
 - to select bass adjustment mode.
- ④ **TREBLE**
 - to select treble adjustment mode.
- ⑤ **STANDBY ON** ☰
 - to switch between power on and standby mode.
- ⑥ **DISPLAY SCREEN**
 - shows the status of the system.
- ⑦ **PROGRAM**
 - in Tuner mode, to program MW/FM stations.
- ⑧ **SOURCE**
 - to select the desired source or external input source (TV/AV, DISC DI, DISC 6CH, TUNER or AUX).
- ⑨ **VOLUME**
 - to adjust the master volume.
- ⑩ **PHONE**
 - to connect headphones.

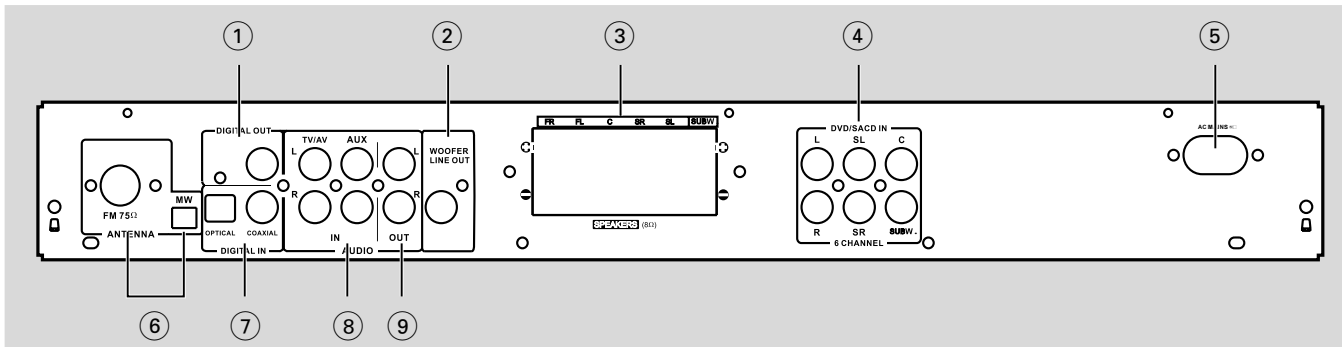


- ① **DIGITAL OUT**
 - connect to the digital inputs of an external audio equipment.
 - is active only when receiving input from DIGITAL IN (Coaxial or Optical).
- ② **WOOFER LINE OUT**
 - connect to an active subwoofer (optional).
- ③ **SPEAKERS**
 - connect to the front, center, surround and subwoofer speakers.
- ④ **DVD/SACD IN**
 - connect from the 6 channel output of a DVD or SACD player.
- ⑤ **AC POWER CORD**
 - connect to a standard AC outlet.
- ⑥ **MW / FM**
 - connect to the MW loop antenna or FM antenna
- ⑦ **DIGITAL IN**
 - connect from audio equipment with digital (Coaxial or Optical) audio output.
- ⑧ **AUDIO IN (TV/AV, AUX)**
 - connect from the analog audio outputs of a TV or other equipment.
- ⑨ **AUDIO OUT**
 - connect to the analog audio inputs of an external recording device or amplifier.

Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Functional Overview

Remote control

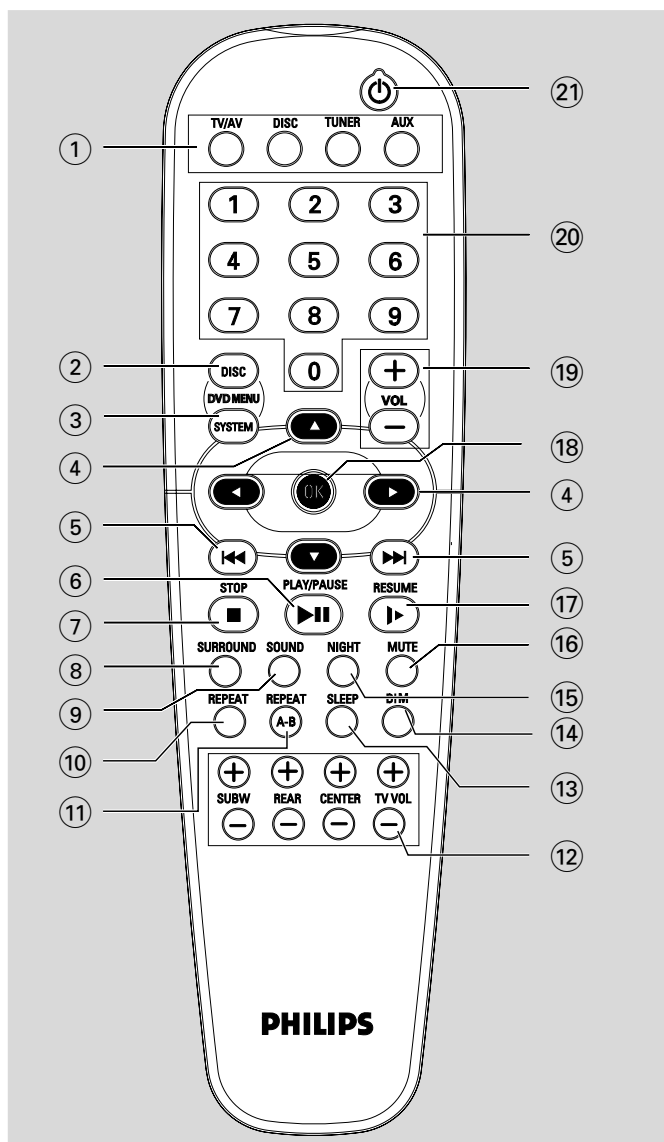

Notes:

– The keys in the following list operate exclusively for this Receiver only.

- ① **SOURCE**
– to select the desired source (TV/AV, DISC, TUNER or AUX).
- ④ ◀ ▶
– Press ◀/▶ to select a preset radio station.
- ⑤ ◀◀ / ▶▶
– in Tuner mode, to tune to a lower or higher radio frequency.
- ⑧ **SURROUND**
– to select multichannel surround (Dolby Digital, DTS or Dolby ProLogic II) or stereo sound effect.
- ⑨ **SOUND**
– to select the various soundfield effects: CONCERT,

DRAMA, ACTION, SCI-FI, CLASSIC, JAZZ, ROCK or DIGITAL.

- ⑫ **SUBW + / –**
– to adjust the subwoofer's level.
- REAR + / –**
– to adjust the surround speakers' level.
- CENTER + / –**
– to adjust the center speaker's level.
- TV + / –**
– to adjust Philips's television volume level.
- ⑬ **SLEEP**
– to set the sleep (auto-off) timer function.
- ⑭ **DIM**
– to select different brightness for the display screen.
- ⑮ **MUTE**
– to interrupt or resume sound reproduction.
- ⑯ **NIGHT (Dolby Digital mode only)**
– to optimise the dynamics of the sound output.
- ⑲ **VOL + / –**
– to adjust the volume level.
- ⑳ **Numeric Keypad (0-9)**
– to enter the number of a preset radio station.
- ㉑ ⏻
– to switch to standby mode.

Notes:

The following keys only operate for a Philips DVD player. For details, please refer to a Philips DVD player instruction manual.

- ② **DISC - DVD MENU**
– to enter or exit the disc contents menu.
- ③ **SYSTEM - DVD MENU**
– to enter or exit the system menu bar.
- ⑥ ▶ ||
– to start or interrupt disc playback.
- ⑦ ■
– to stop playing the disc.
- ⑩ **REPEAT**
– to repeat chapter, track or disc.
- ⑪ **REPEAT A-B**
– to repeat a specific section on a disc.
- ⑰ **RESUME**
– to continue disc playback after an interruption.
- ⑱ **OK**
– to exit or confirm the selection.

Troubleshooting

WARNING!




Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to solve a problem by following these hints, consult your dealer or service center.


Problem	Solution
No power.	<ul style="list-style-type: none"> – Check the connection to the AC power cord.
No sound or distorted sound from speakers	<ul style="list-style-type: none"> – Check the connection to the speakers. – Adjust the volume. – Select the source you wish to listen to. – If the muting is on, press the MUTE button. – Replace the speaker cables.
No sound is heard from center or rear speakers	<ul style="list-style-type: none"> – Check the connections to the speakers. – Use the CENTER +/- or REAR +/- to adjust the volume level. – Check the speaker settings are connect correctly.
No sound from subwoofer.	<ul style="list-style-type: none"> – Check the connections to the subwoofer. – Play the bass source.
Noise interference	<ul style="list-style-type: none"> – The unit is too close to a TV set or other electrical appliances, relocate the unit, or turn off other appliances.
Sound cuts off during listening to music	<ul style="list-style-type: none"> – The positive and negative speaker cords may have short-circuited. Turn off the power and check the speaker cords. – Turn off the power and turn it on again, then reduce the volume.
Sound from the left and right speaker is reversed	<ul style="list-style-type: none"> – Check that the left and right speakers are not positioned in reverse order. – Check the left and right speakers cables are not connected to the terminals in reverse order.
Considerable noise in radio broadcasts.	<ul style="list-style-type: none"> – Tune to the correct frequency. – Connect the antenna. – Route all connection cables away from the antenna terminals and wires. – Fully extend the FM wire antenna. Position for best reception and secure to a wall. – Connect an outdoor FM or MW antenna. – Adjust the direction and position for best reception. – Turn off the equipment causing the noise. – Place the antenna farther away from the equipment causing the noise.
The remote control does not function.	<ul style="list-style-type: none"> – Point the remote control at the remote sensor of the unit. – Reduce the distance to the Receiver. – Remove any possible obstacles. – Replace the batteries with new ones. – Check that the batteries are loaded correctly. – Insert the mains plug into an outlet and press the main unit STANDBY ON ϕ button.
Can't set NIGHT mode	<ul style="list-style-type: none"> – Play a source with DOLBY DIGITAL 5.1 channel sound. – Select a source (OPTICAL or COAXIAL) connected by digital cable correctly.
The display is dark	<ul style="list-style-type: none"> – Press DIM again.
Low bass response	<ul style="list-style-type: none"> – Check all speakers for correct polarity.
Can't select DTS mode	<ul style="list-style-type: none"> – Check the source's sound output setting and turn on DTS output. – Play a source with DTS sound. – Select a OPTICAL or COAXIAL source connected by digital cable.

REPAIR INSTRUCTION

MAIN UNIT REPAIR CHART

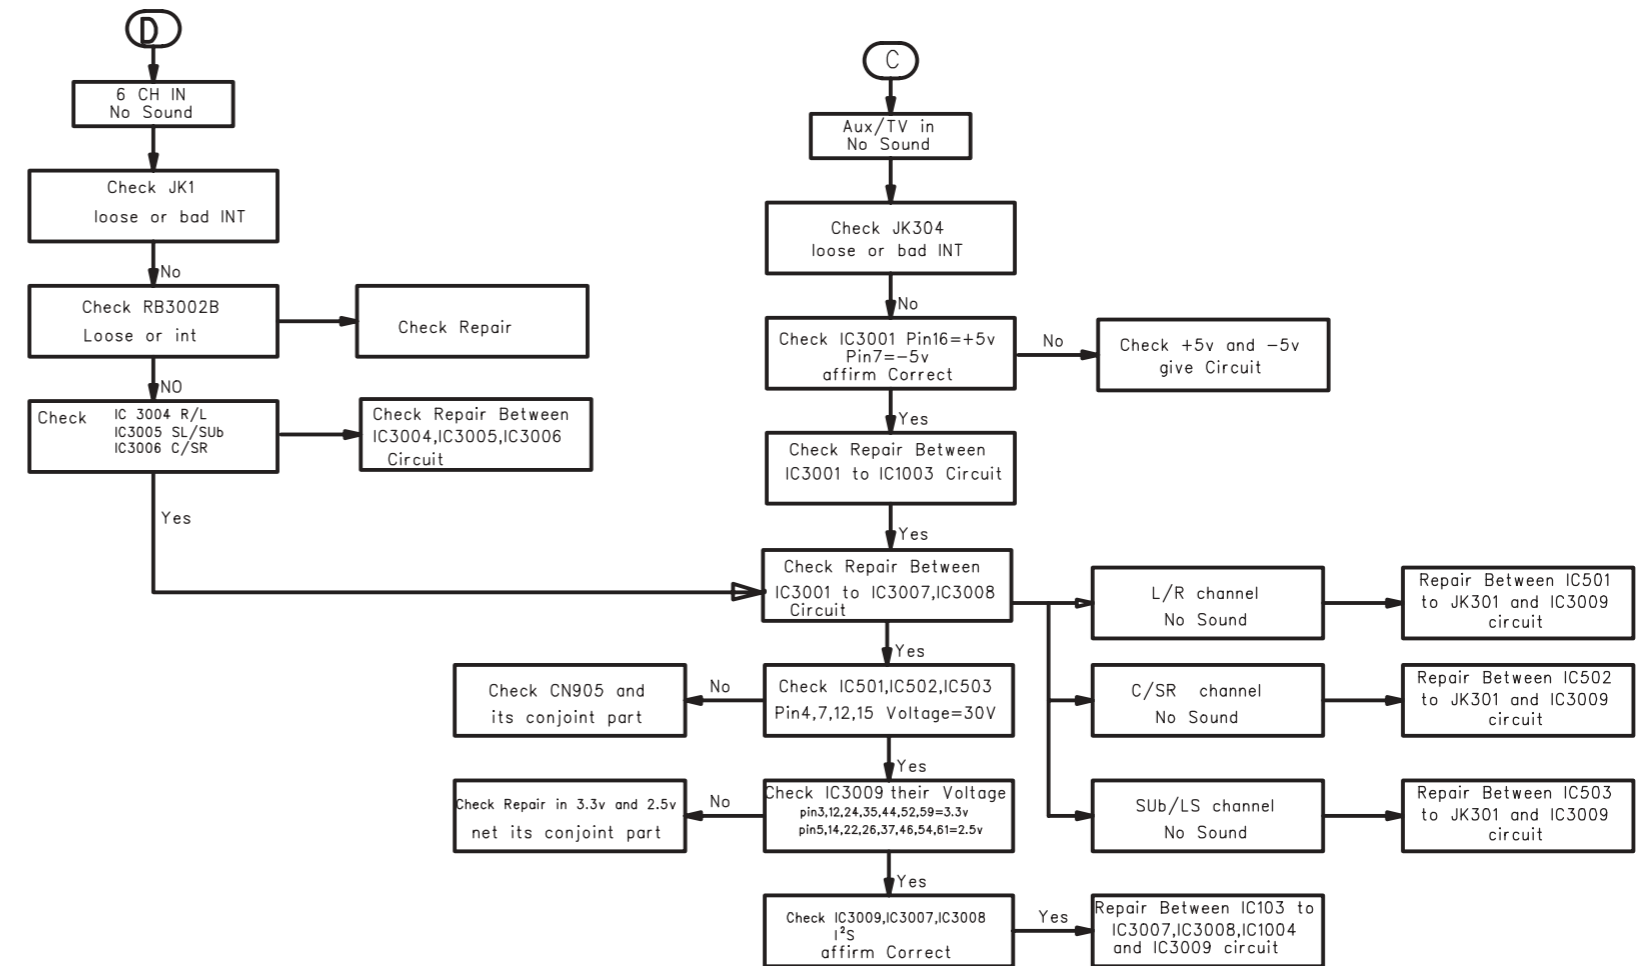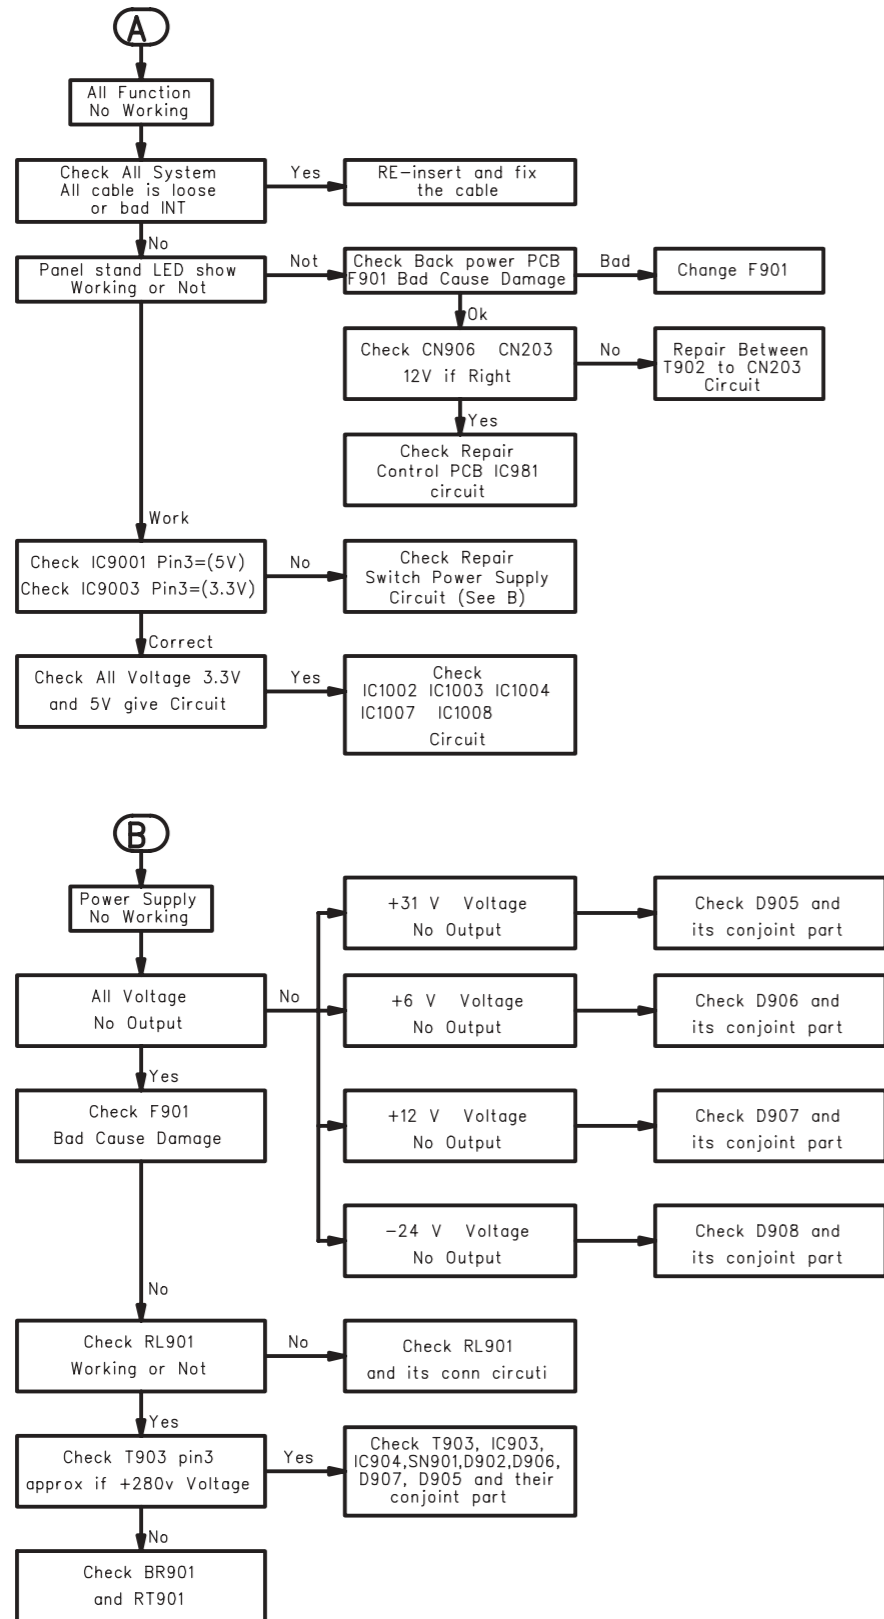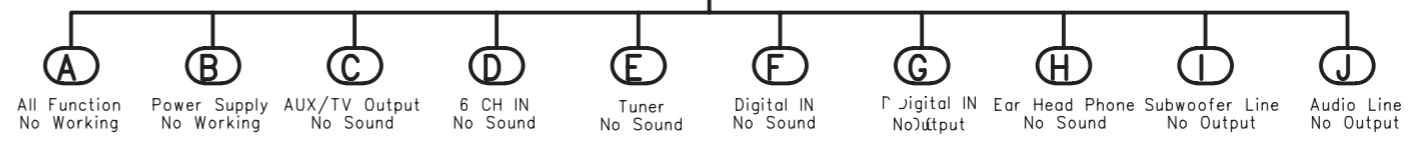

REPAIR INSTRUCTION

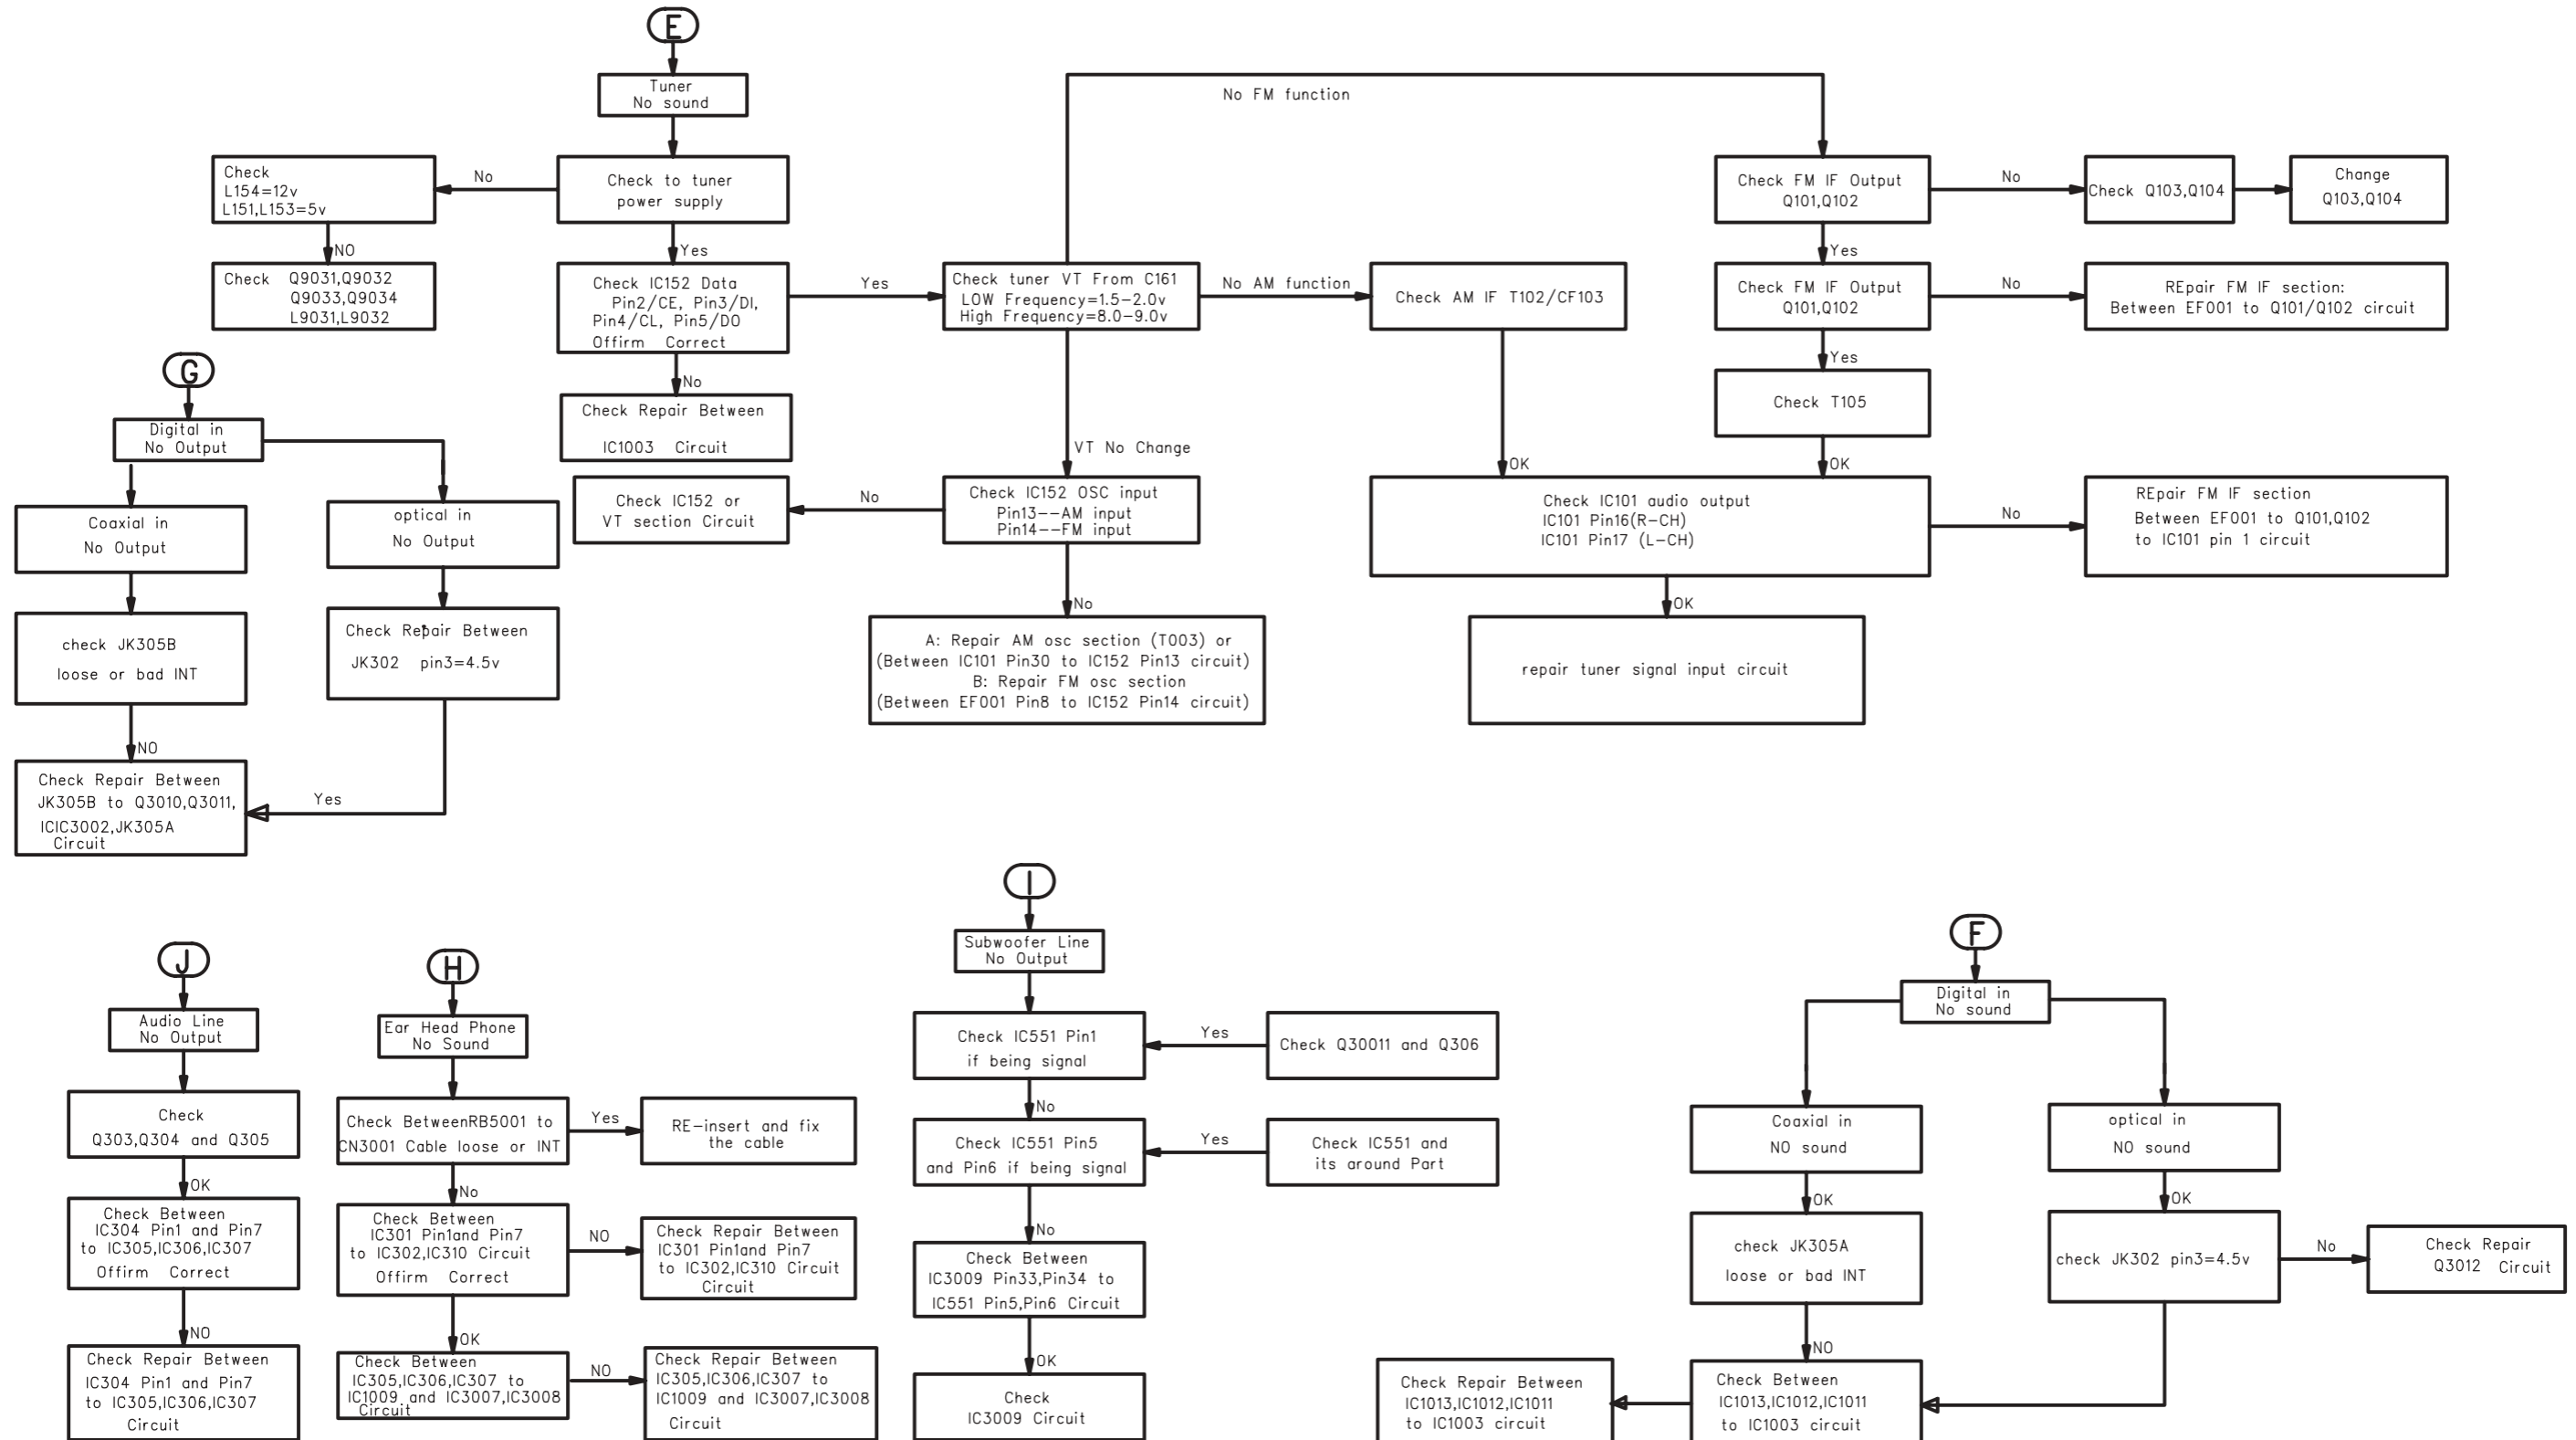

DISASSEMBLY INSTRUCTIONS

- 1) Loosen 9 screws and remove the Top Cover by lifting the rear portion upwards before sliding it out towards the rear.
 - 5 screws on the back
 - 2 screws each on the left & right side
- 2) Loosen 7 screws & lift up the top edge of Front Panel assembly to free some catches before sliding it out towards the front.
 - 4 screws on the bottom
 - 1 screw "A" on the inside as indicated in Figure 1.
 - 1 screw each on the left & right side

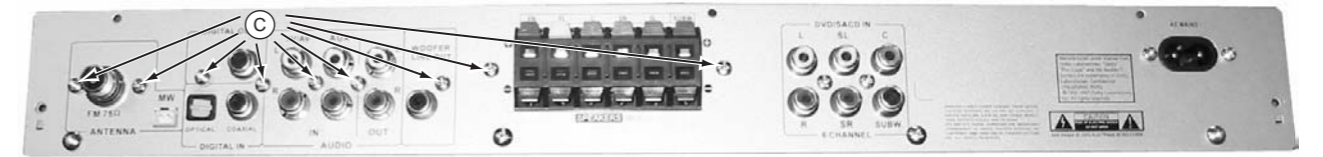


Figure 2

Dismantling of the Main Board

- 1) Loosen 6 screws "B" on the top of main board as shown in figure 1.
- 2) Loosen 9 screws "C" at the back panel as shown in figure 2.

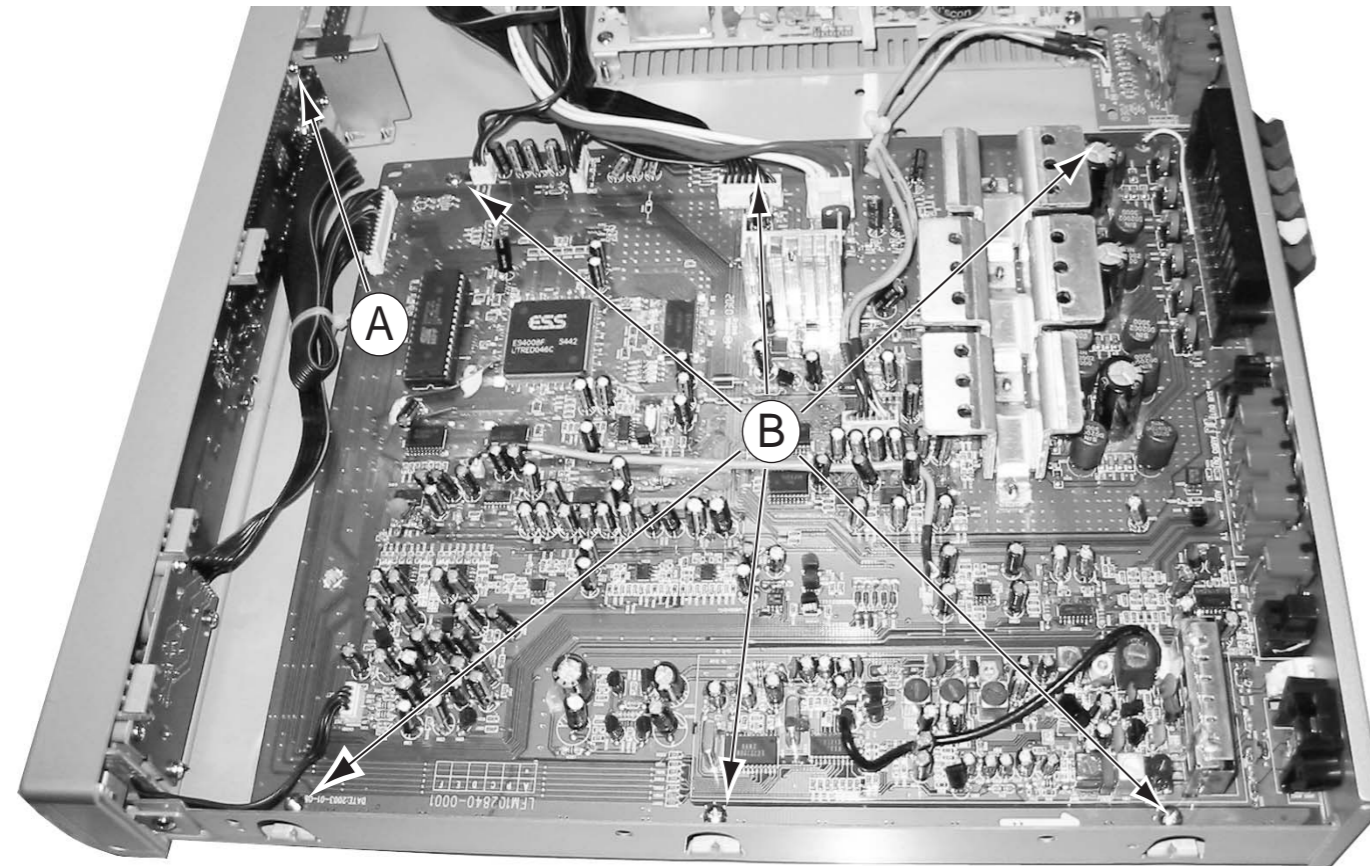


Figure 1

Dismantling of the PowerBoard

- 1) Loosen 4 screws "d" on the top of power board as shown in figure 3.


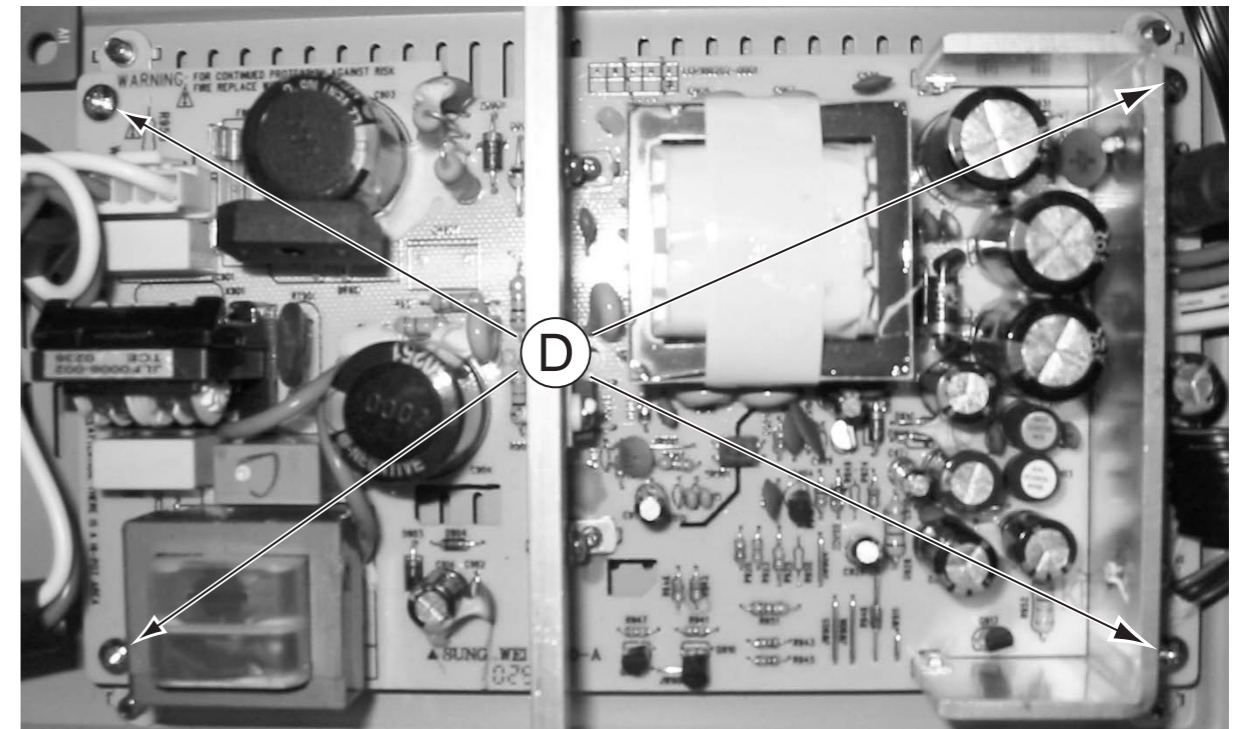



Figure 2

SERVICE POSITIONS


Service position A

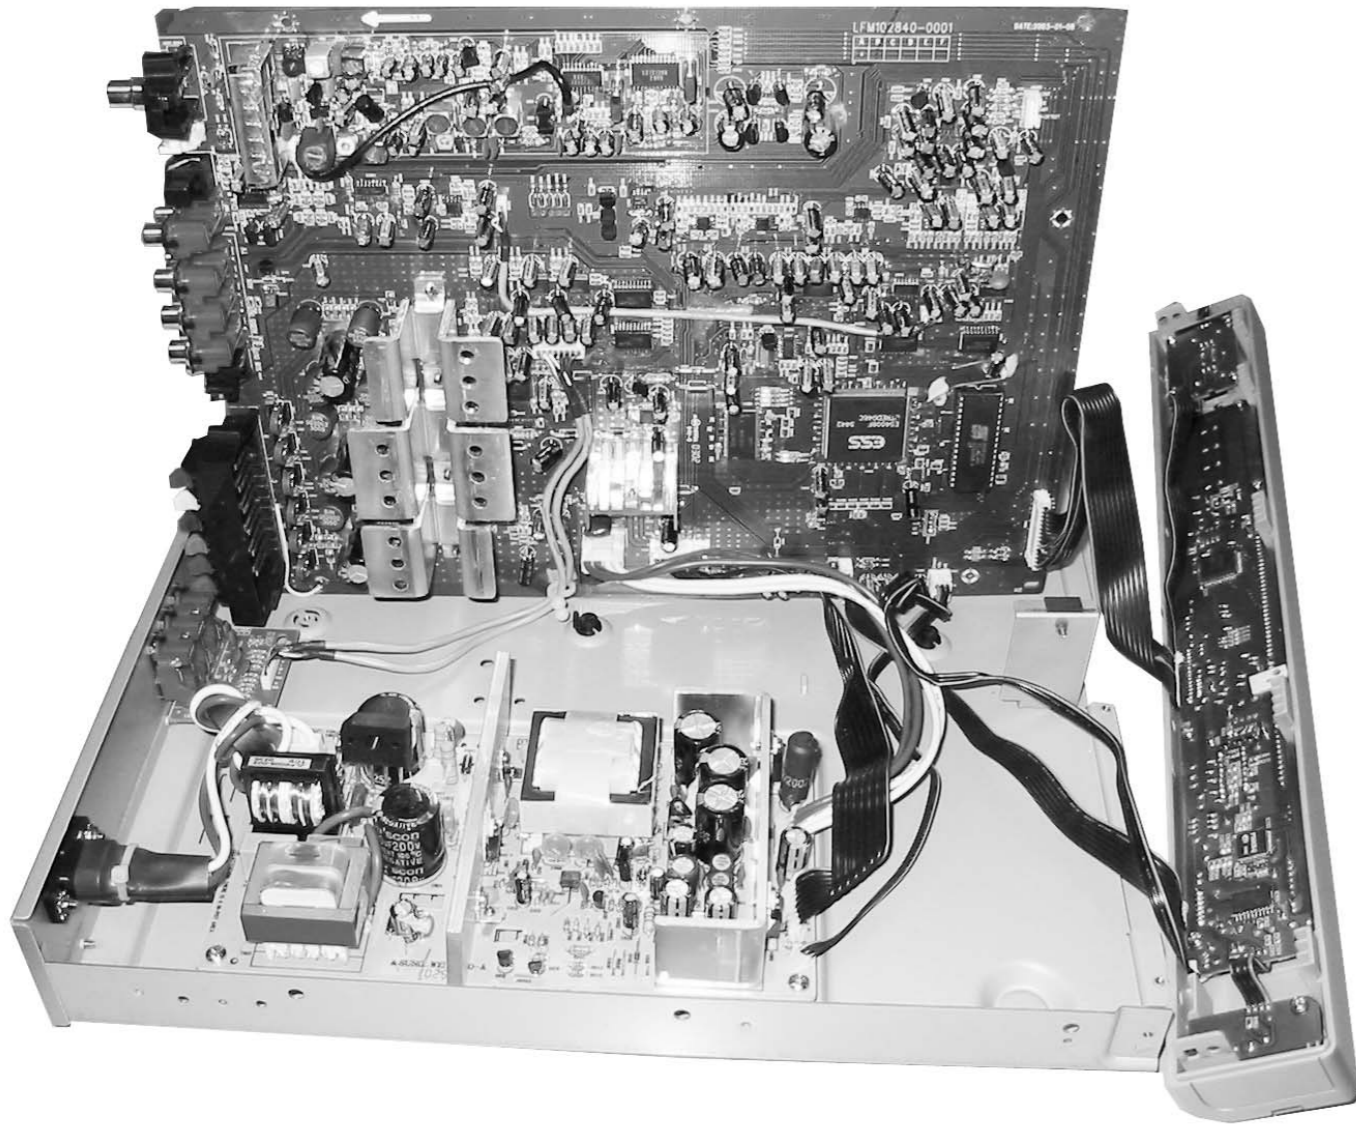


Service position B

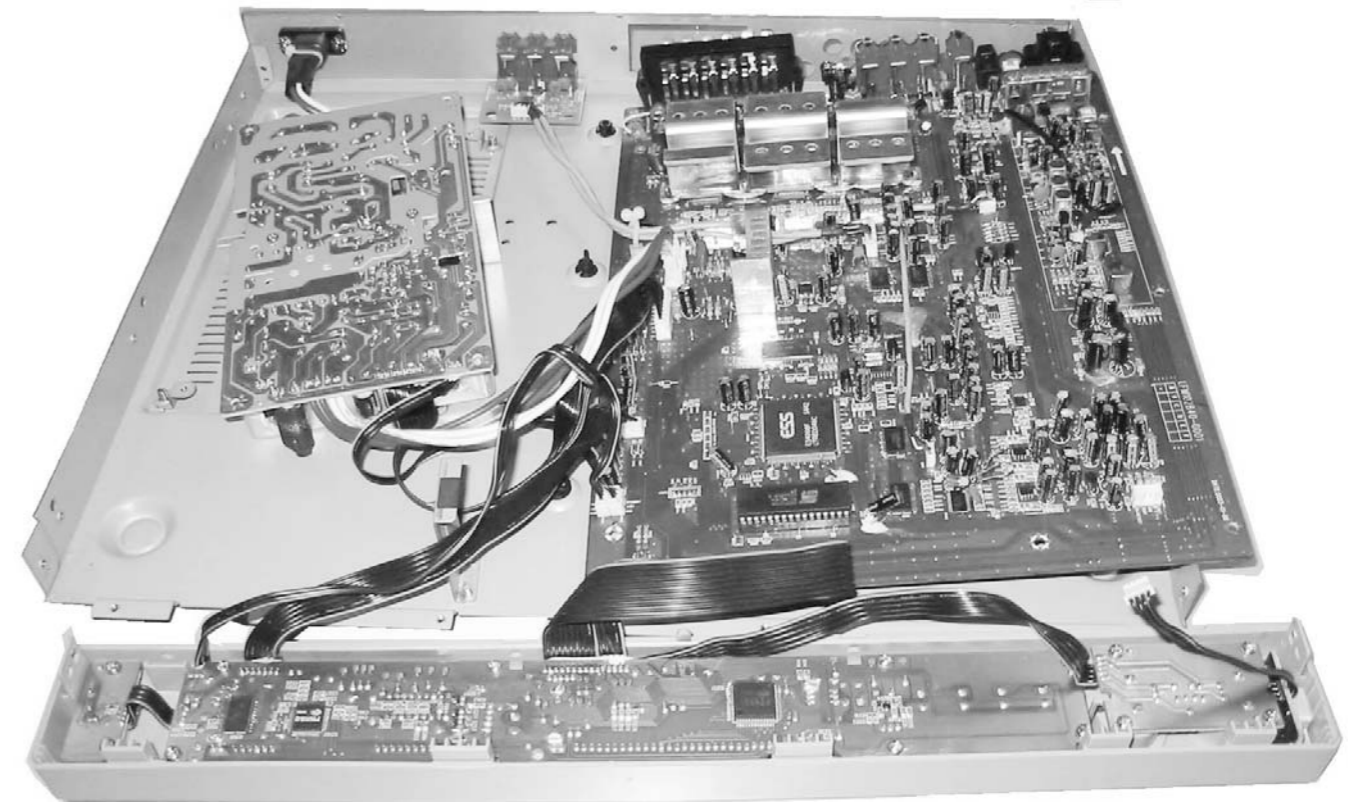

BLOCK DIAGRAM

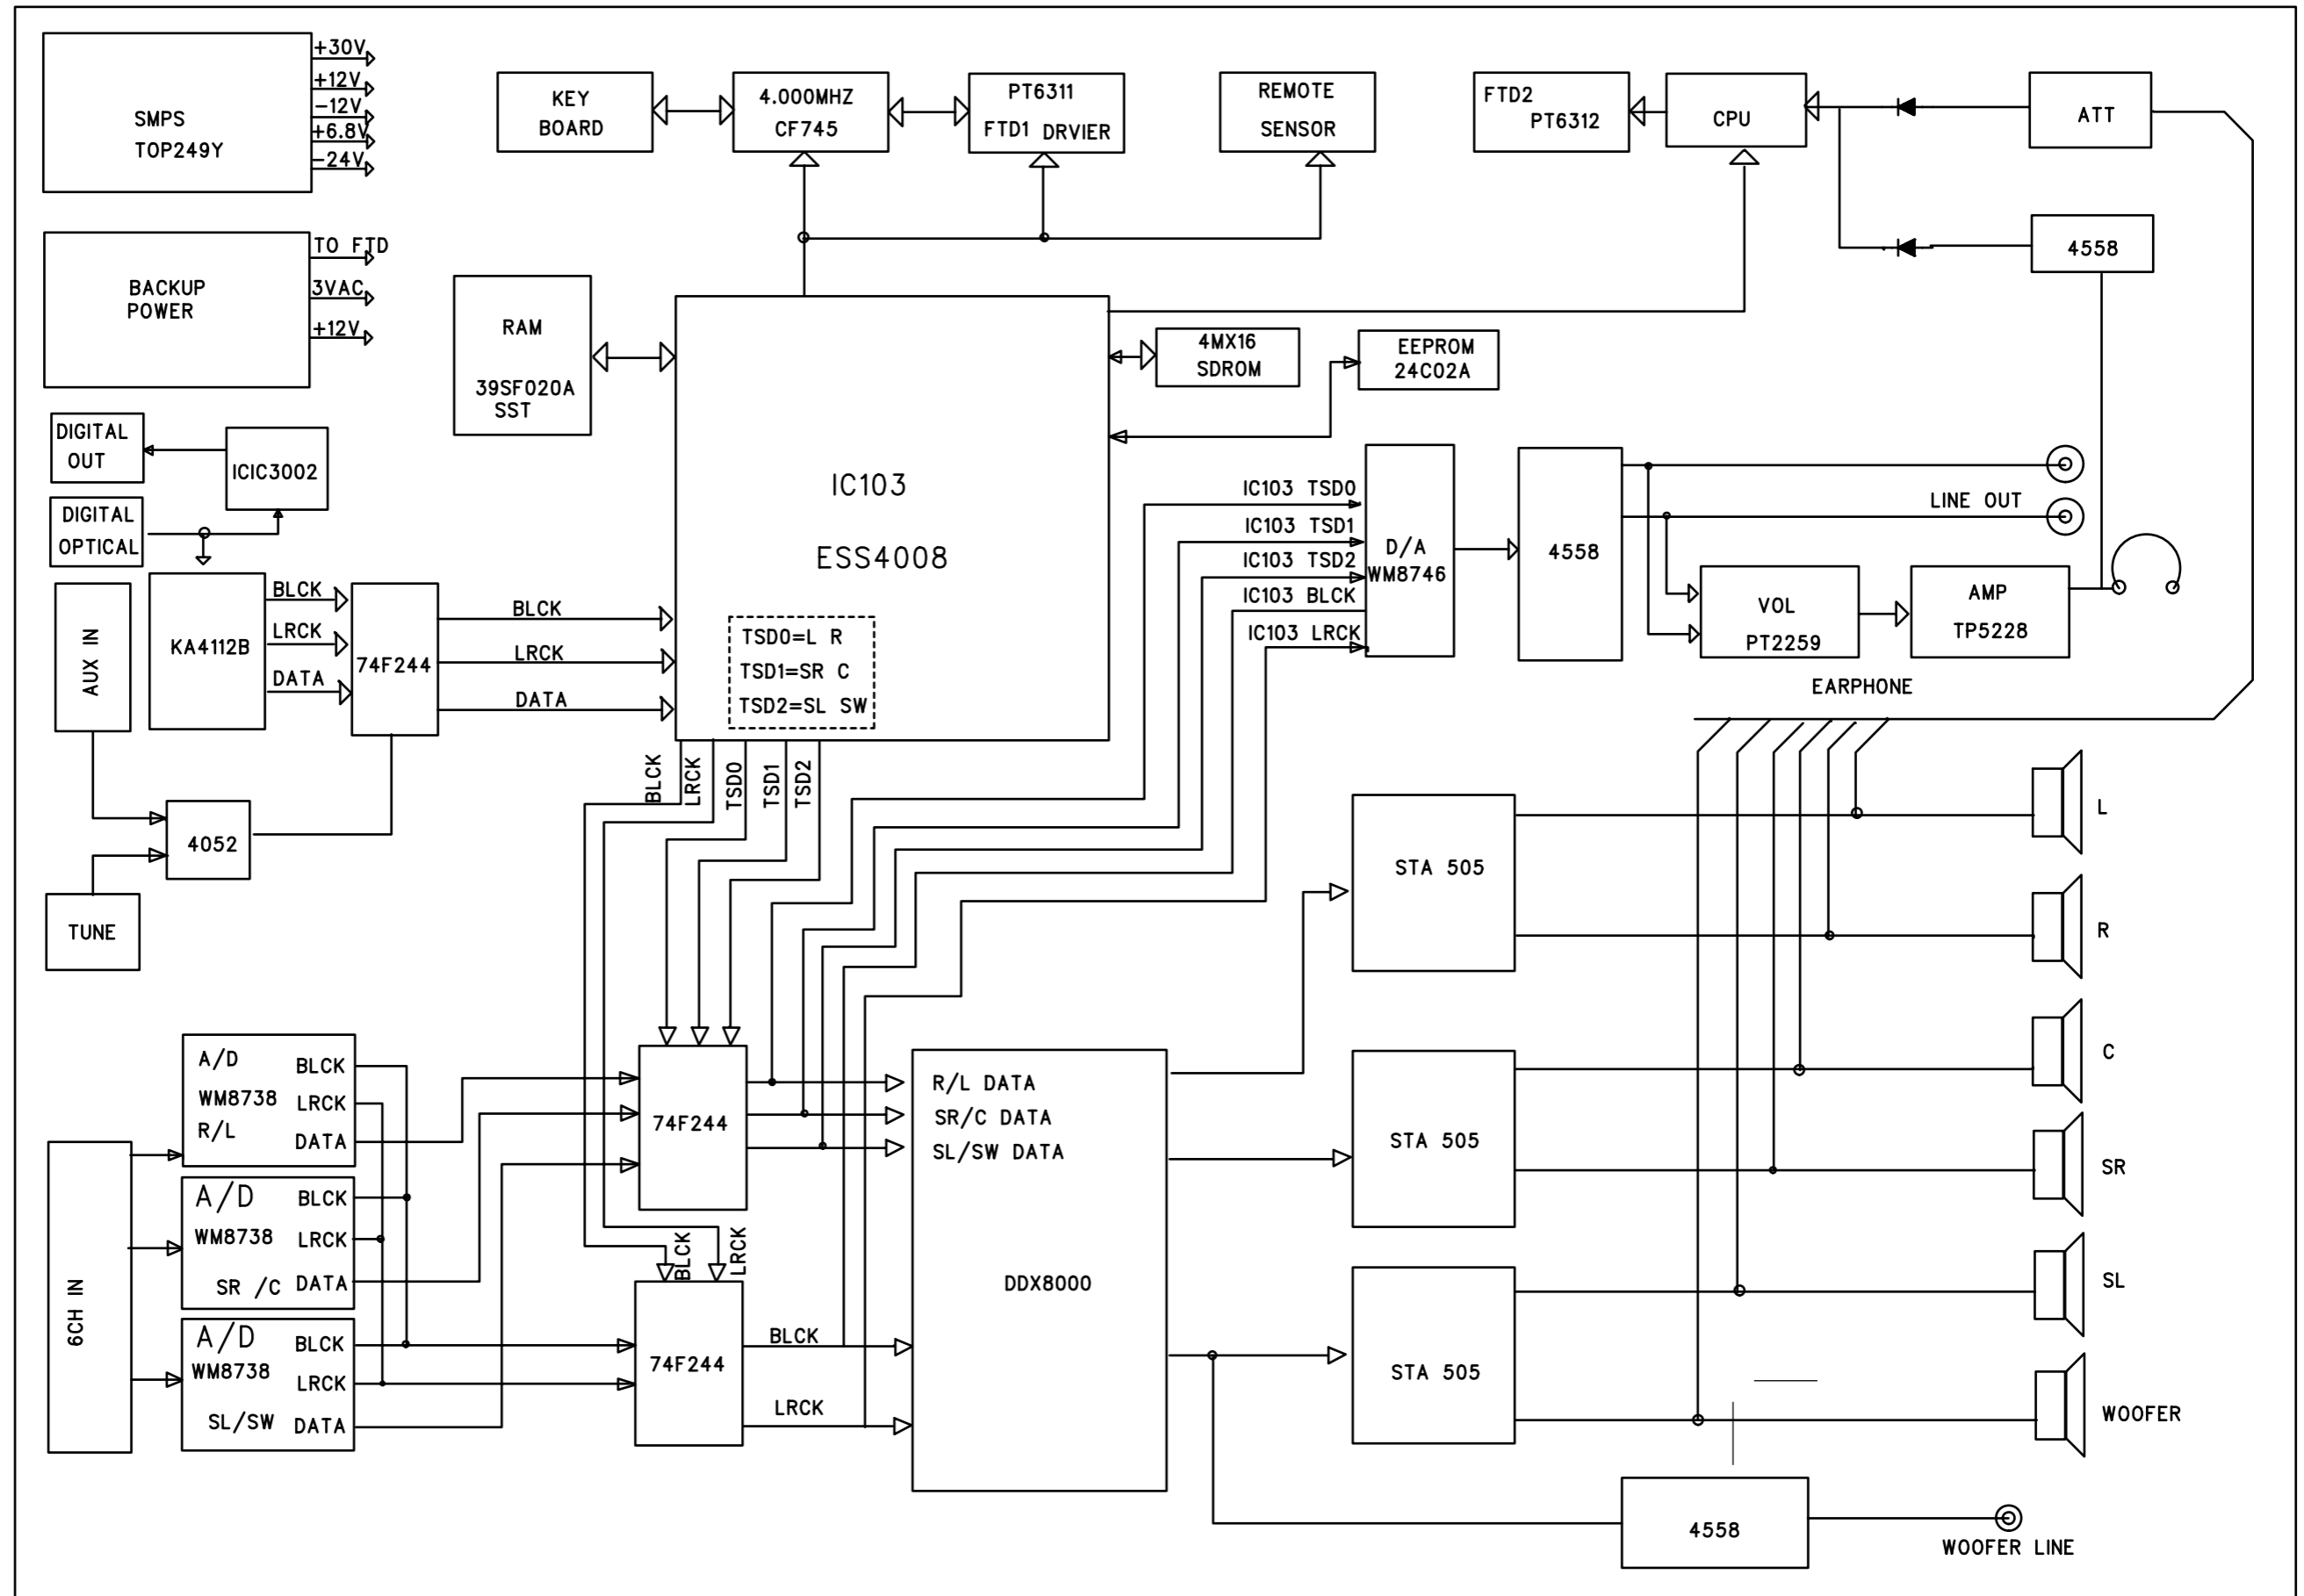

WIRING DIAGRAM

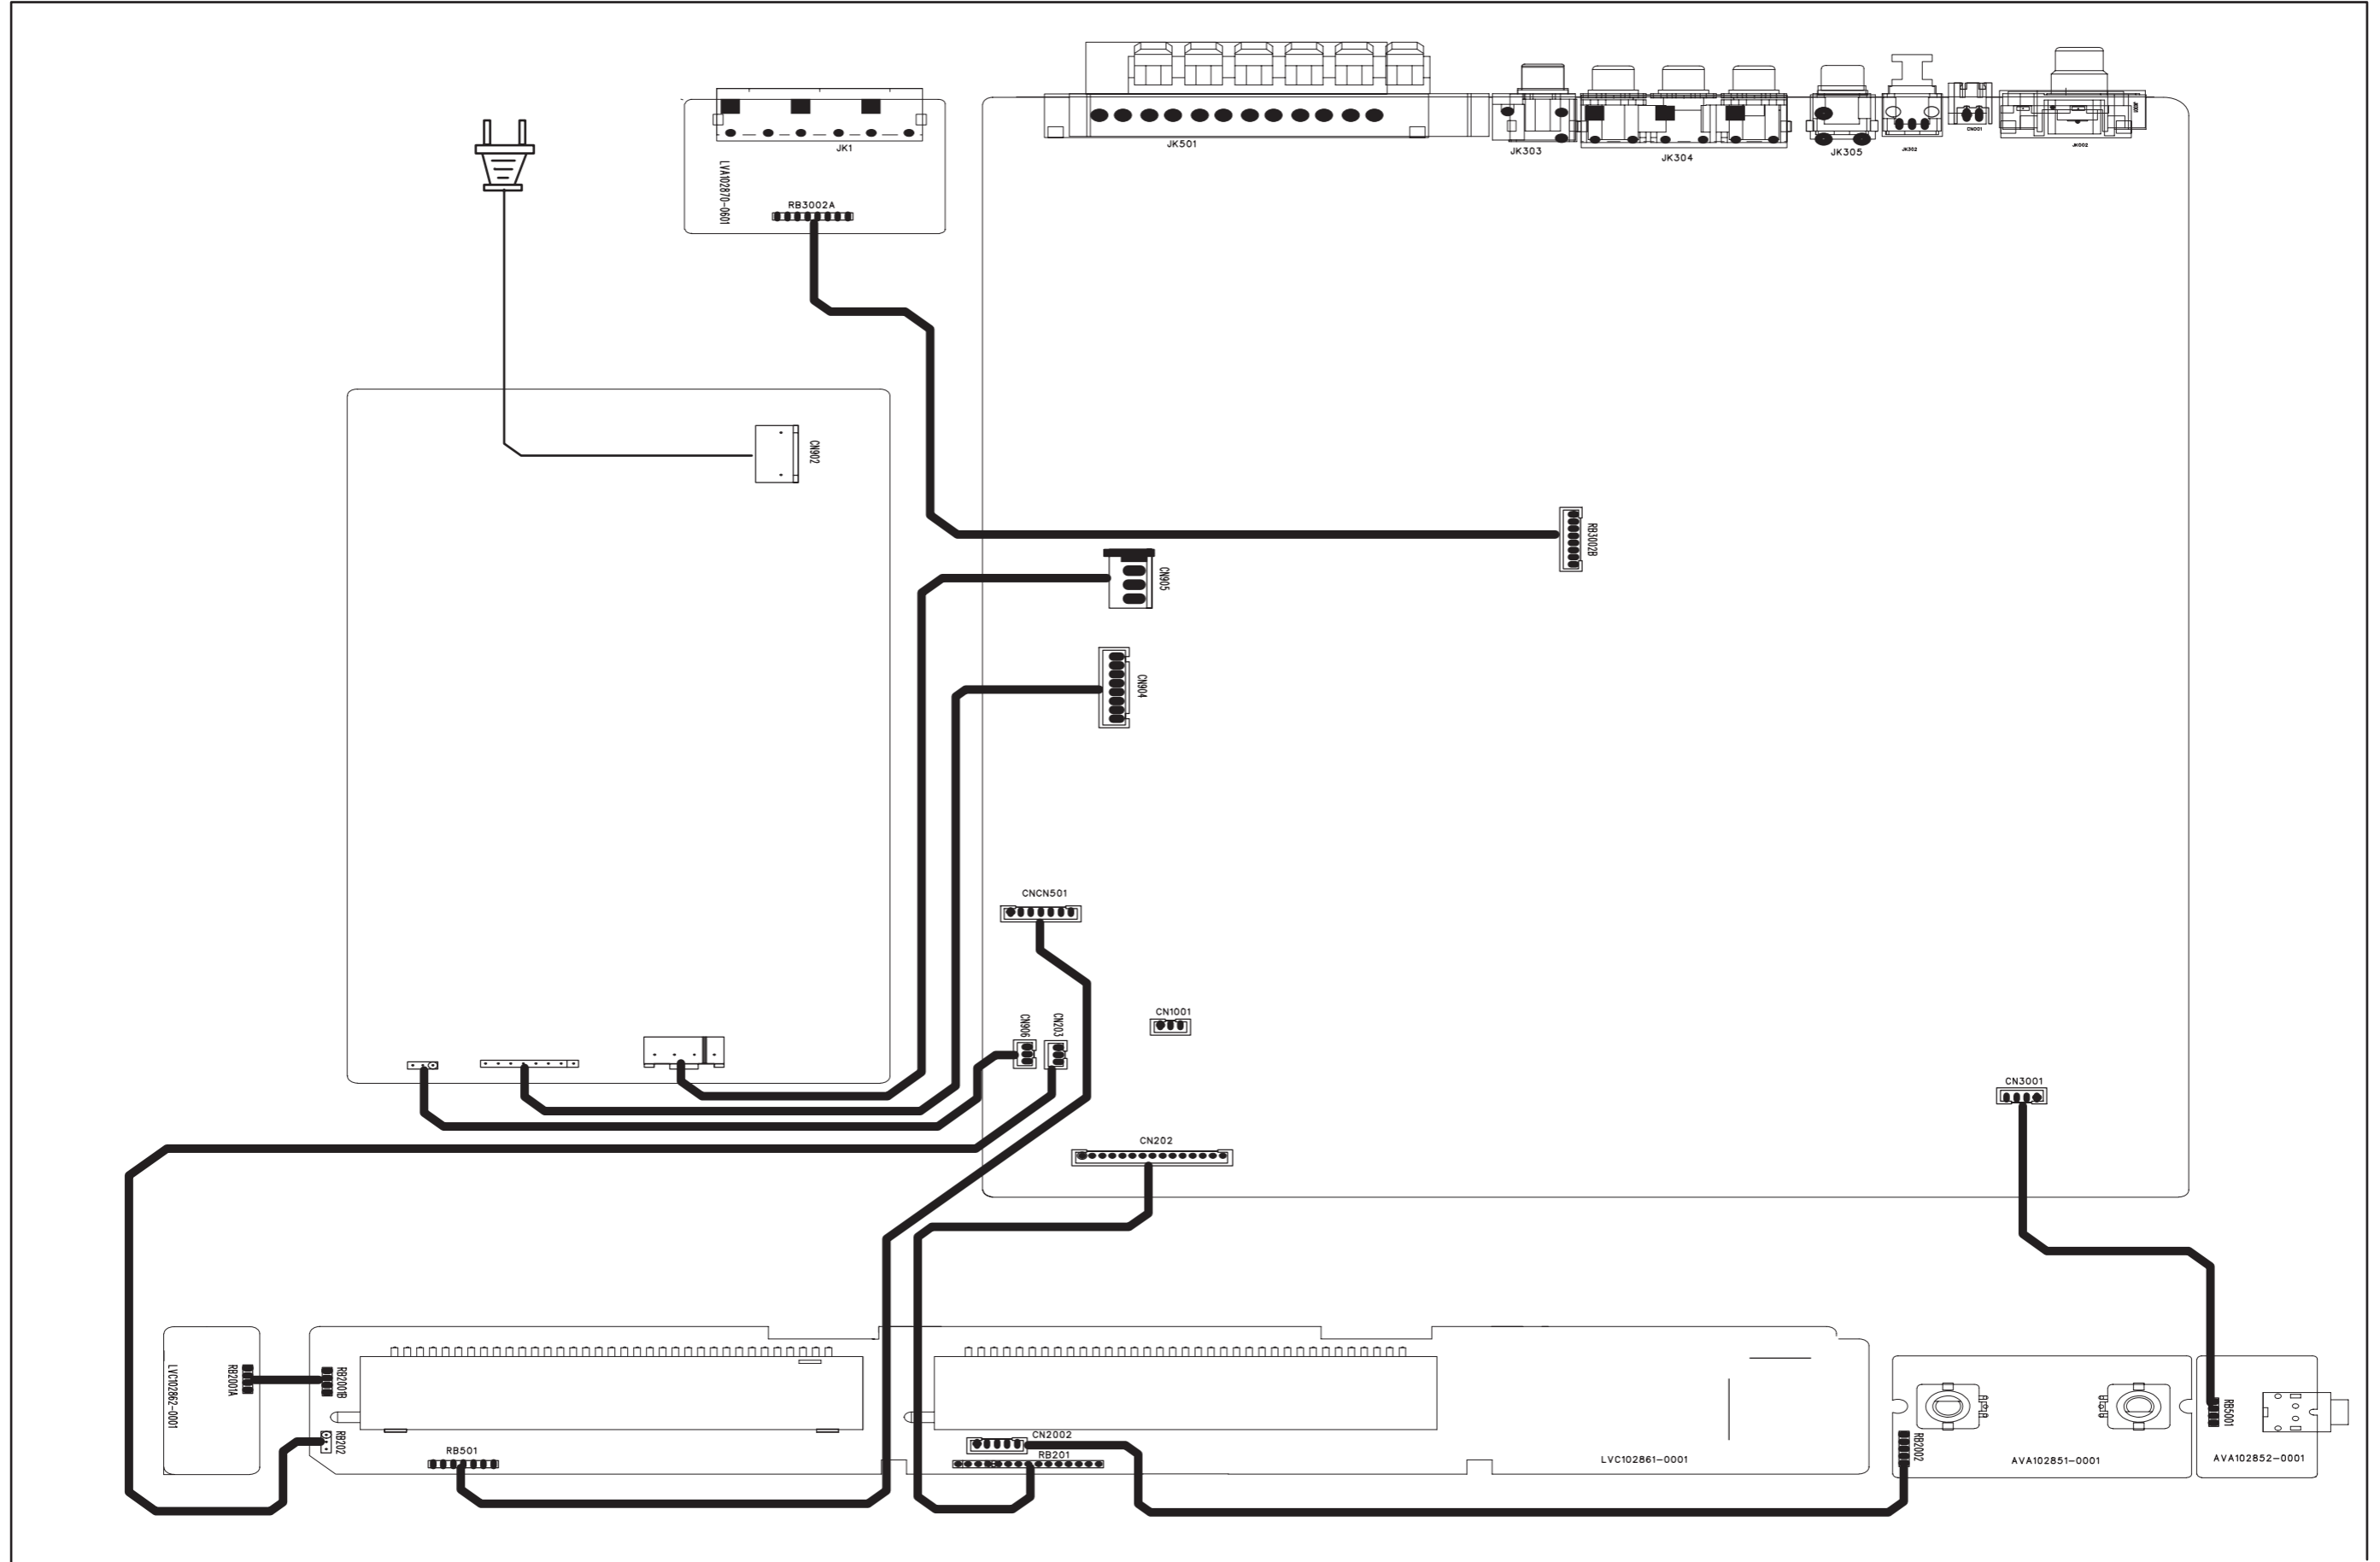


KEY / POWER SW BOARD


TABLE OF CONTENTS

IC Internal Block Diagram	5-1
Circuit Diagram	5-2
PCB Layout Top & Bottom View	5-3
Electrical Parts List	5-4


CF745 INTERNAL BLOCK DIAGRAM

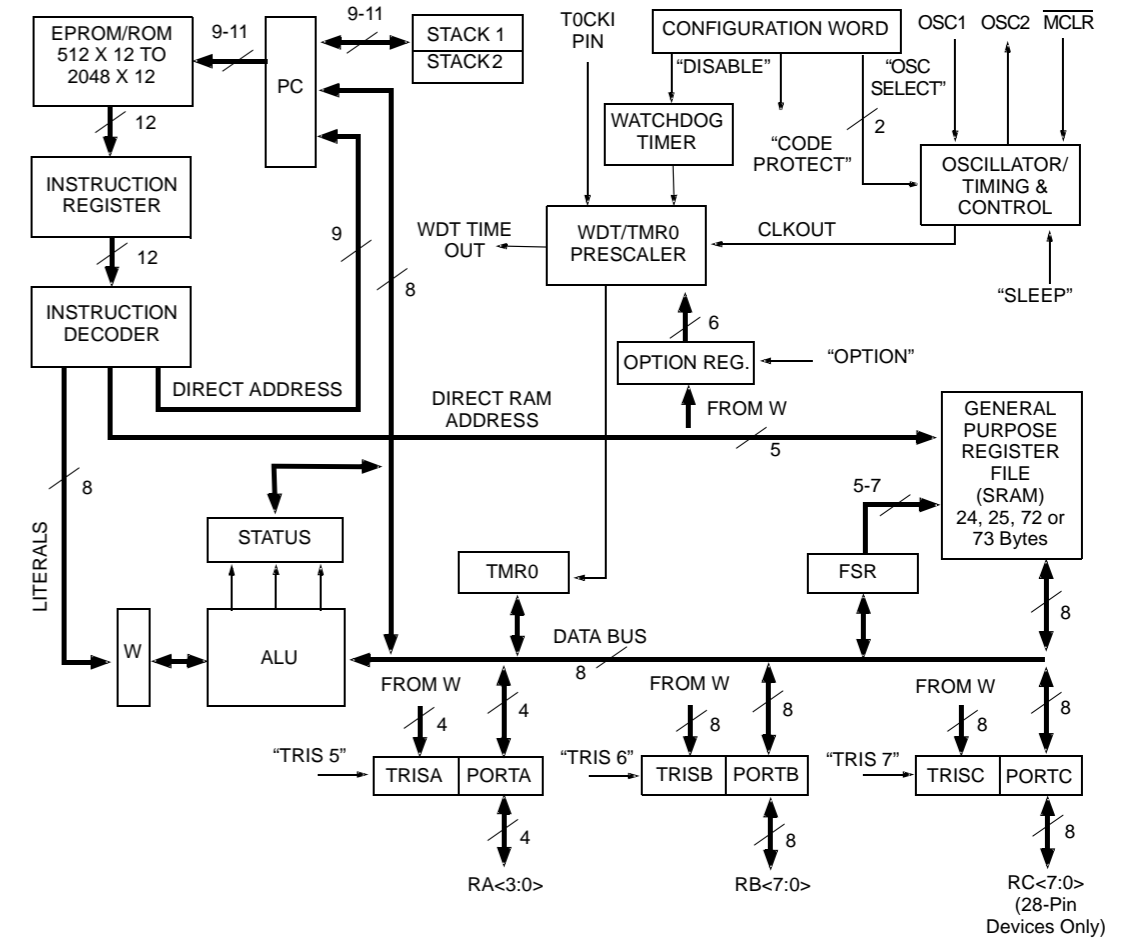

PT6311 INTERNAL BLOCK DIAGRAM

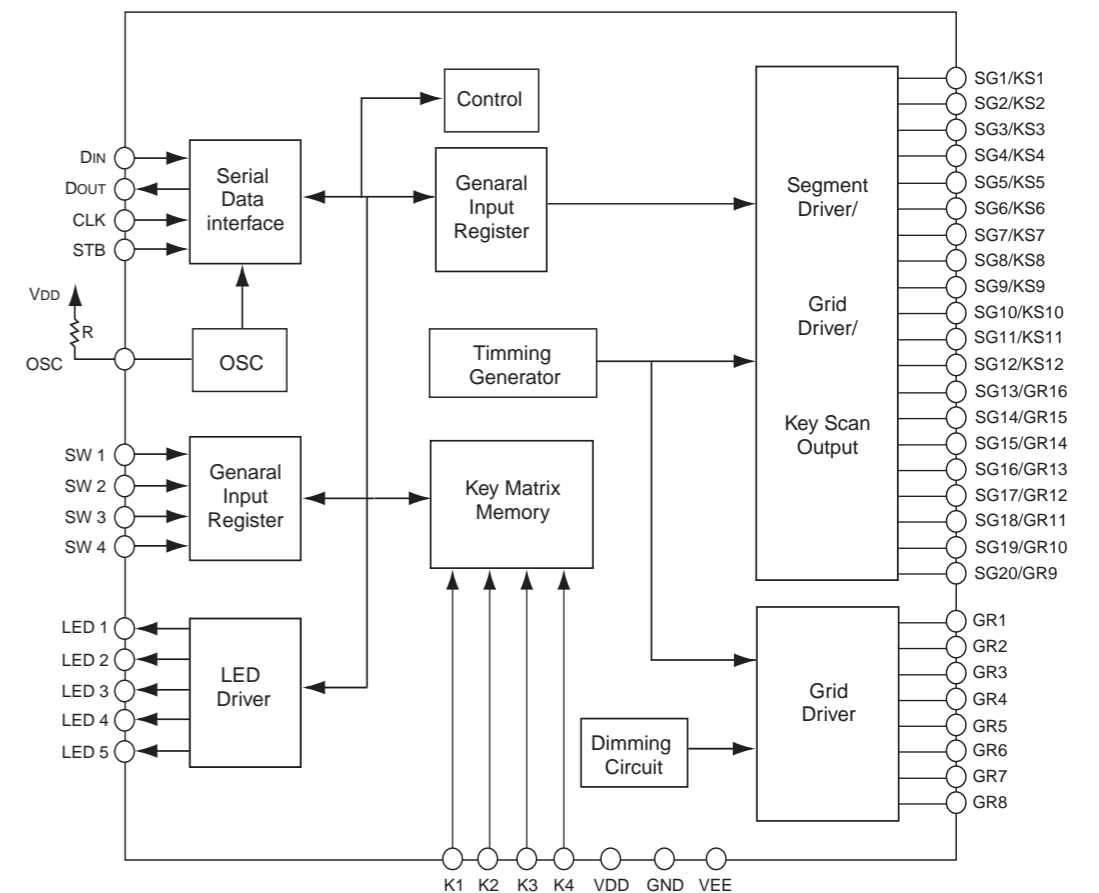


CIRCUIT DIAGRAM

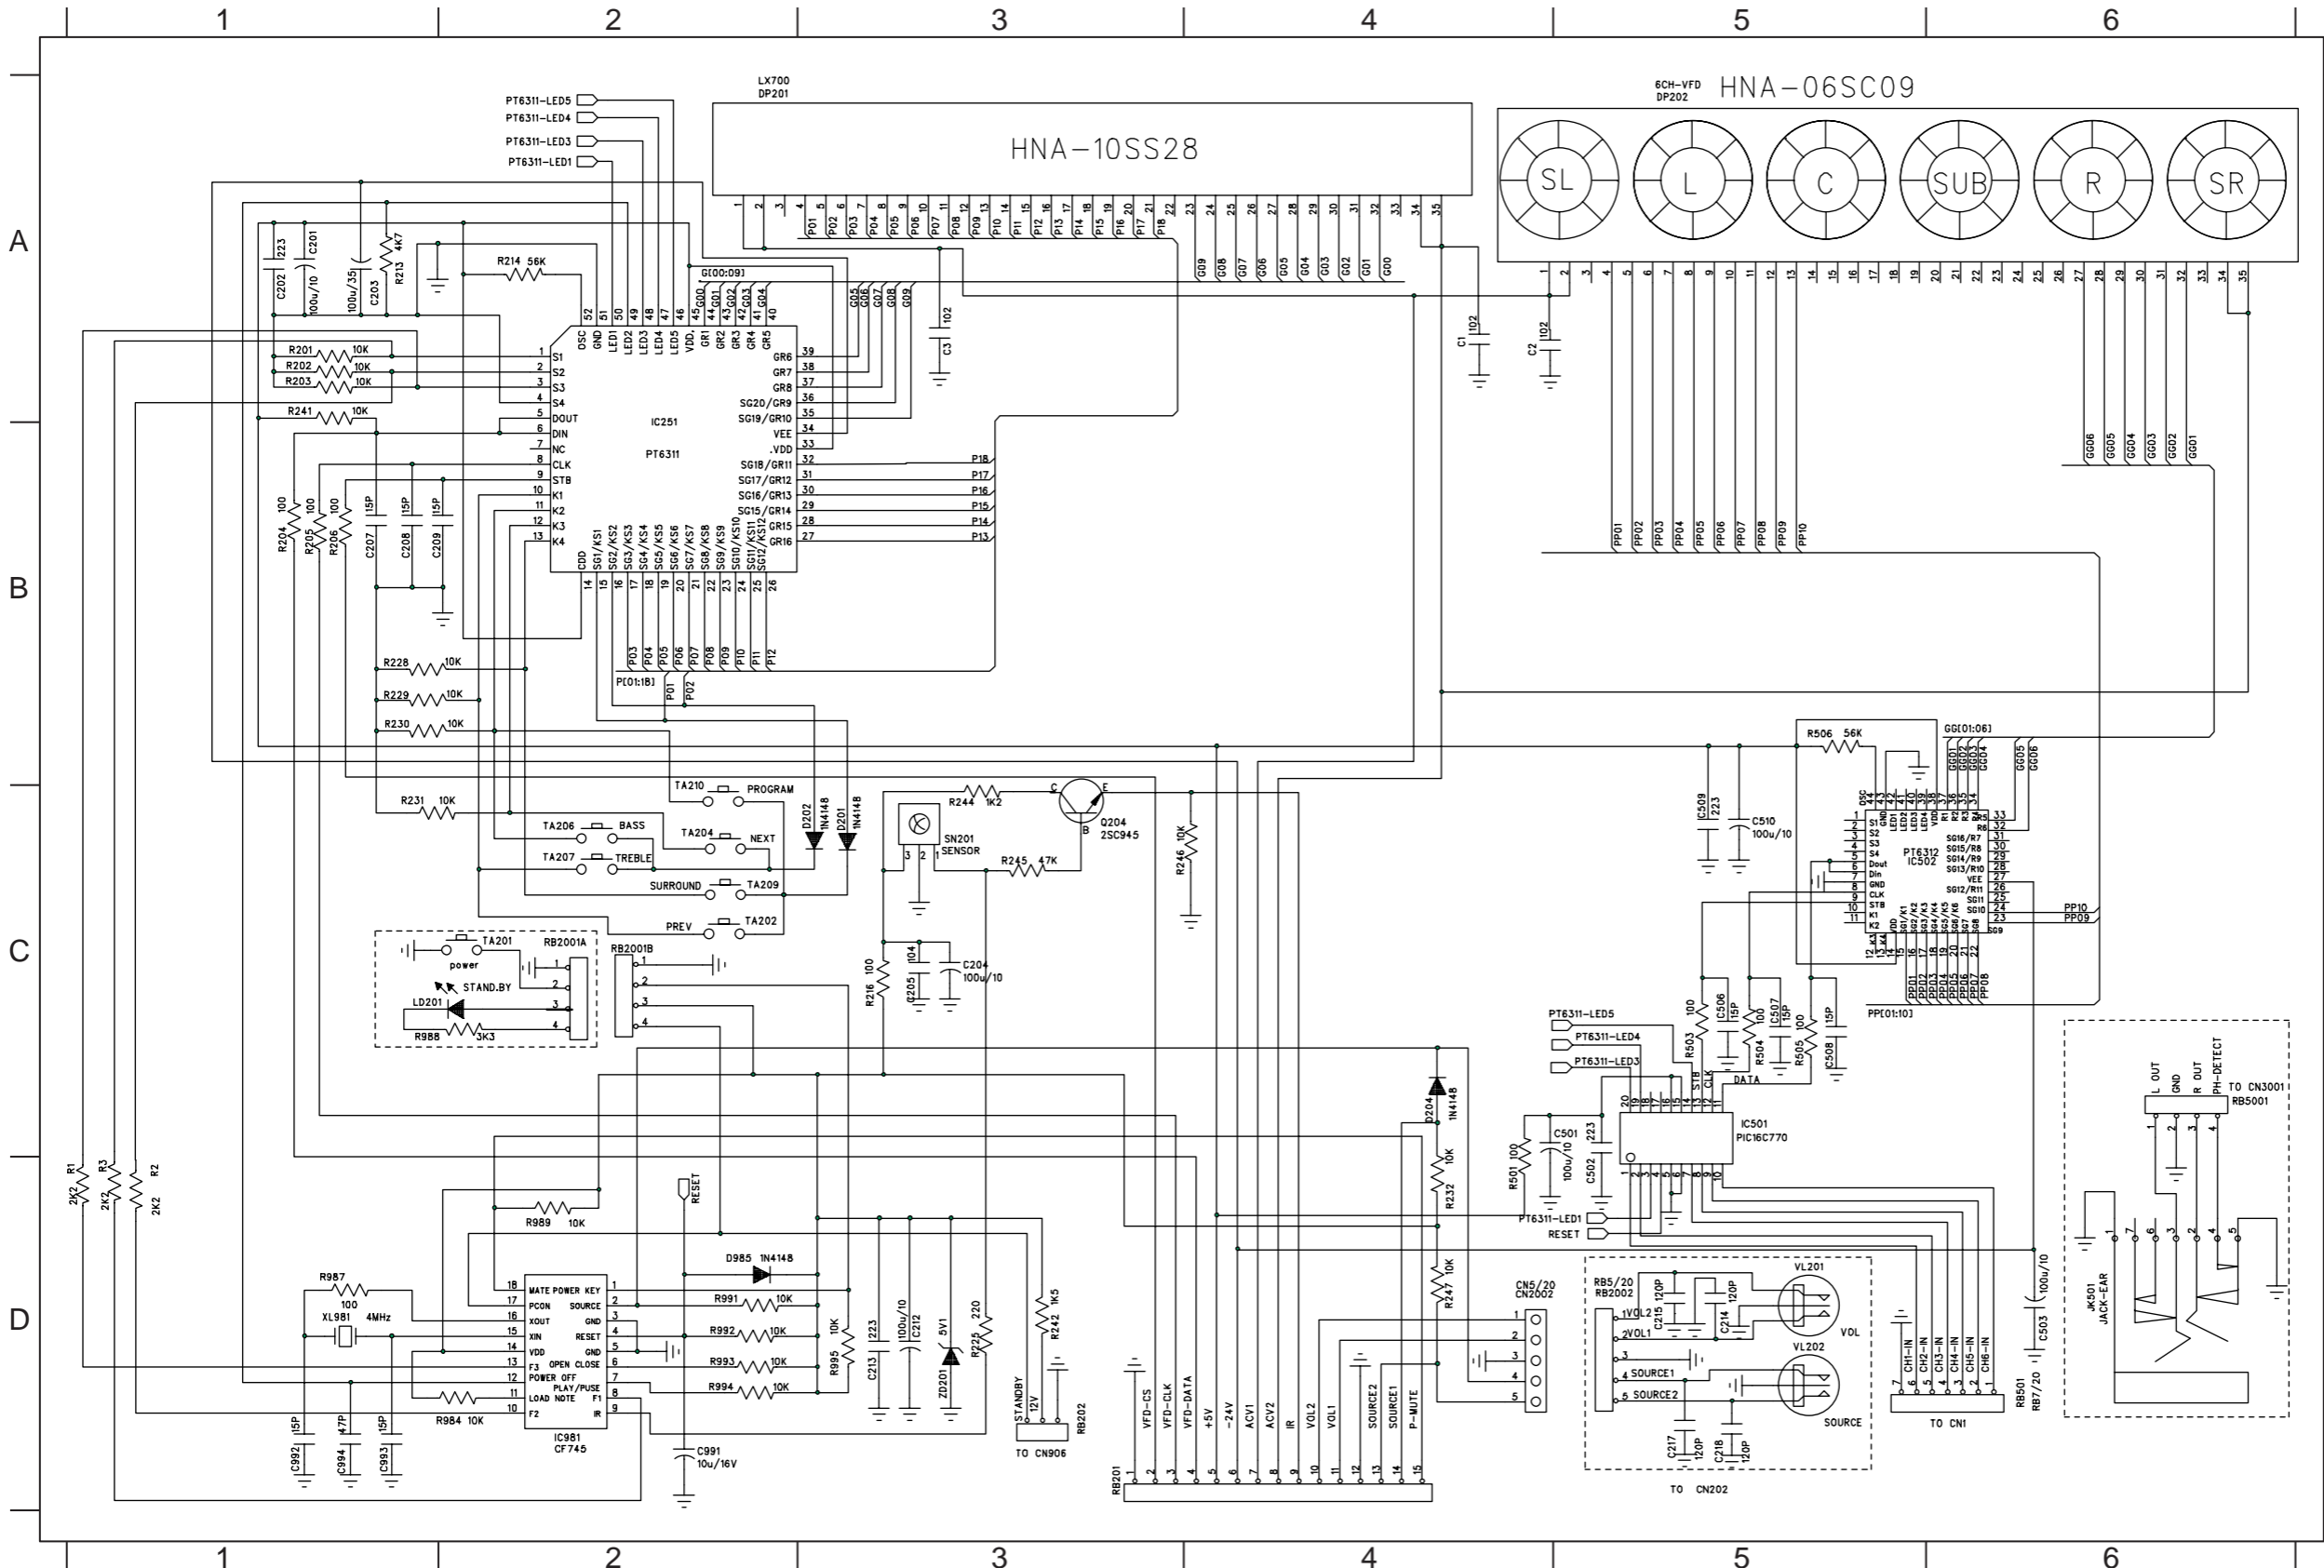


C1	A4	R247	D4
C2	A4	R255	D3
C3	A3	R501	D4
C201	A1	R503	C5
C202	A1	R504	C5
C203	A1	R505	C5
C204	C3	R506	B5
C205	C3	R984	D2
C207	B1	R987	D1
C208	B1	R988	C1
C209	B1	R989	D2
C212	D3	R991	D2
C213	D3	R992	D2
C214	D5	R993	D2
C215	D5	R994	D2
C217	D5	R995	D3
C218	D5	RB201	D3
C501	C5	RB202	D3
C502	D5	RB501	D6
C503	D6	RB2001A	C2
C506	C5	RB2001B	C2
C507	C5	RB2002	D5
C508	C5	RB5001	C6
C509	C5	SN201	C3
C510	C5	TA201	C2
C991	D2	TA202	C2
C992	D1	TA204	C2
C993	D1	TA206	C2
C994	D1	TA207	C2
CN2002	D4	TA209	C2
D201	C3	TA210	C2
D202	C3	VL201	D5
D204	C4	VL202	D5
D985	D2	XL981	D1
DP201	A2	ZD201	D3
DP202	A5		
IC251	A2		
IC501	C5		
IC502	C5		
IC981	D2		
JK501	D6		
LD201	C1		
Q204	C3		
R1	D1		
R2	D1		
R3	D1		
R201	A1		
R202	A1		
R203	A1		
R204	B1		
R205	B1		
R206	B1		
R213	A1		
R214	A2		
R216	C3		
R228	B1		
R229	B1		
R230	B1		
R231	C1		
R232	D4		
R241	A1		
R242	D3		
R244	C3		
R245	C3		
R246	C3		

PCB LAYOUT VIEW

C201	B3	CN2002	B3	LD201	A1	RB201	B3	TA204	B6
C203	B2	D201	A4	R204	A4	RB202	B1	TA206	B6
C204	B5	D202	A4	R205	A4	RB501	B1	TA207	B6
C212	B5	D204	B2	R206	A4	RB2001A	A1	TA209	A3
C501	A1	D985	A1	R225	B4	RB2001B	A1	TA210	B5
C503	B4	DP201	A5	R241	A3	SN201	A5	XL981	A2
C510	B3	DP202	A3	R242	B1	TA201	B1	ZD201	A1
C991	B2	IC981	B2	R247	B3	TA202	B6		

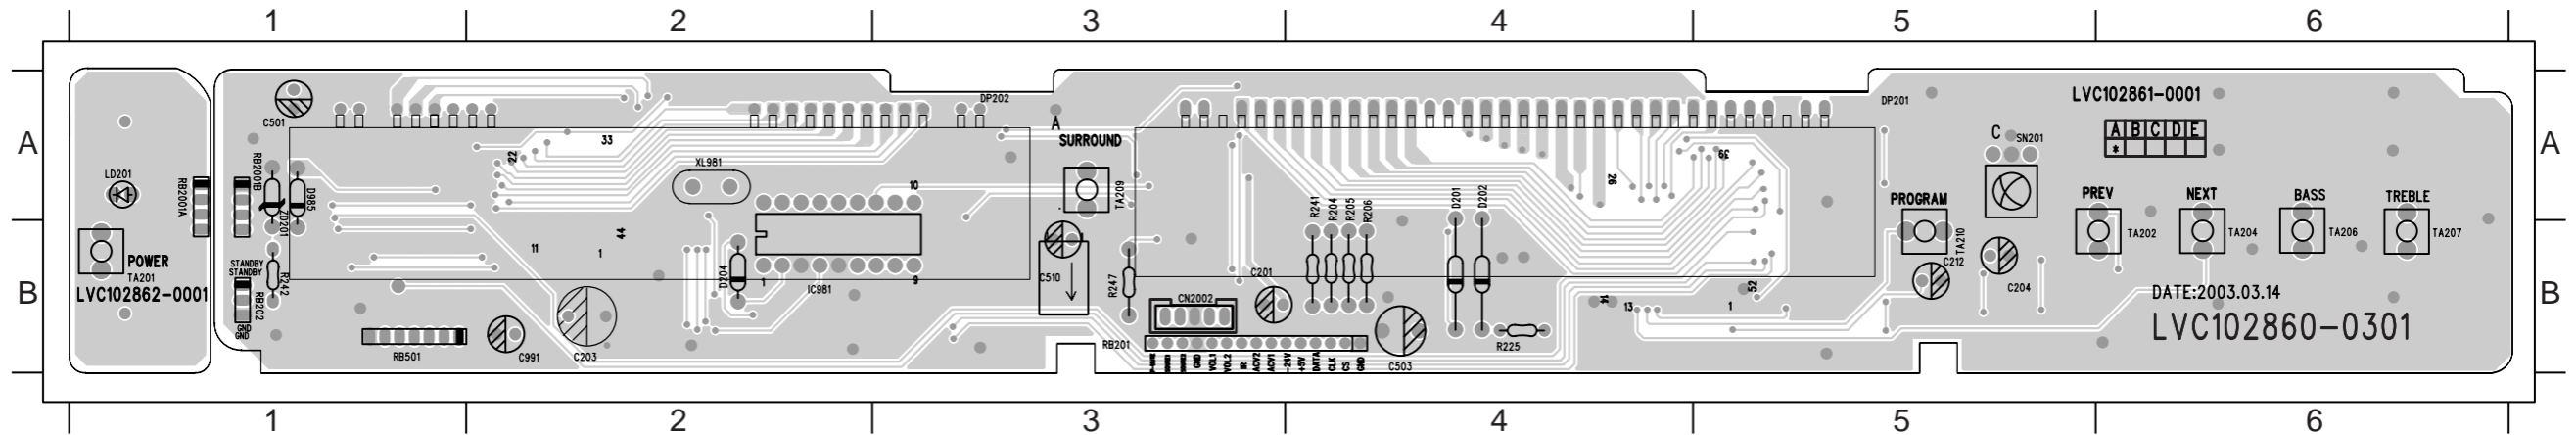

C1	A4	C502	B6	IC501	A6	R213	A5	R245	B2	R987	A5
C2	A4	C506	B5	IC502	A5	R214	B2	R246	A2	R988	B6
C3	A2	C507	B5	Q204	B2	R216	A2	R501	A6	R989	A5
C202	A5	C508	B5	R1	A4	R228	A3	R502	A1	R991	B5
C205	A2	C509	A5	R2	B4	R229	A2	R503	B5	R992	B5
C207	A3	C992	B5	R3	B4	R230	A2	R504	B5	R993	B4
C208	A3	C993	A5	R201	B4	R231	A2	R505	B5	R994	B5
C209	A3	C994	A5	R202	B4	R232	B5	R506	B5	R995	B5
C213	B5	IC251	B3	R203	A4	R244	B2	R984	B4		

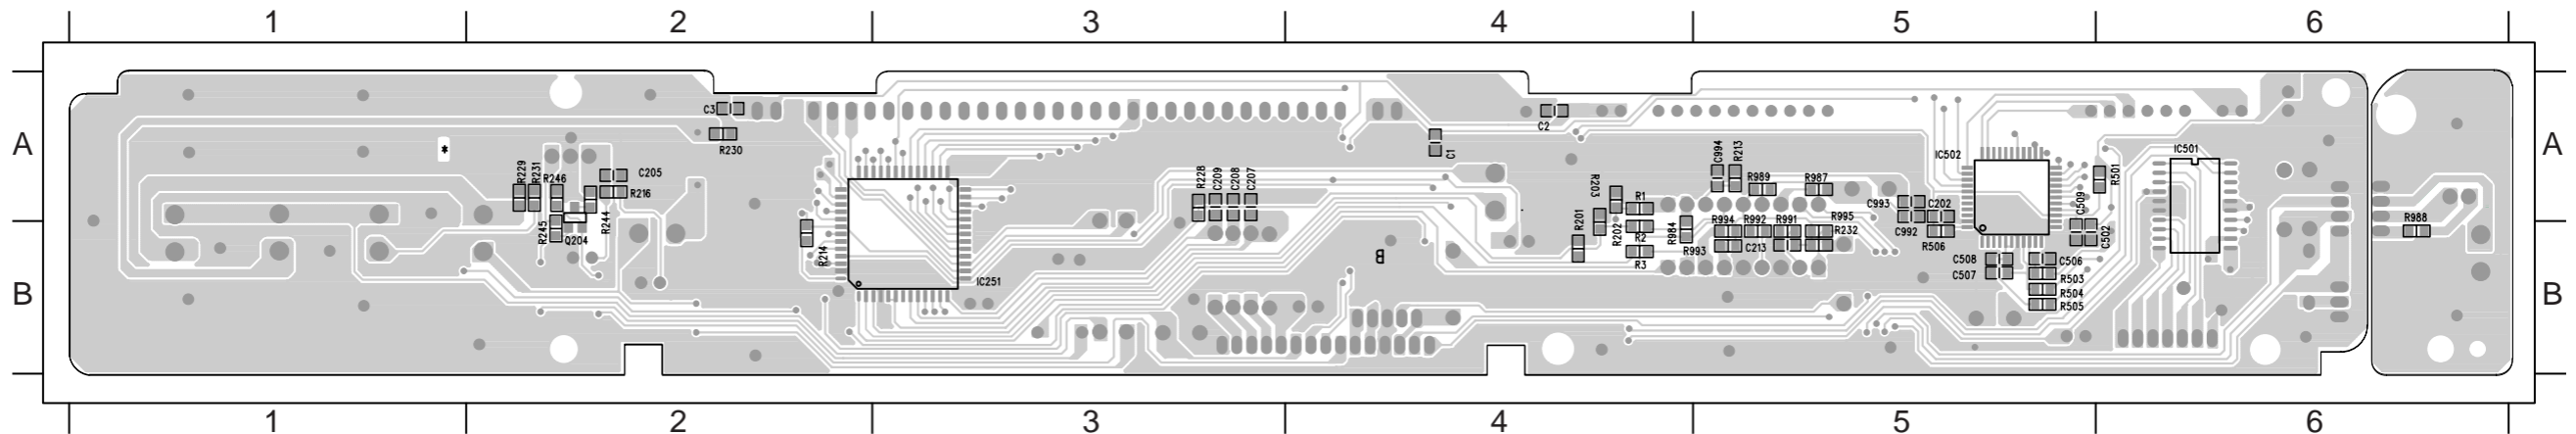

ELECTRICAL PARTSLIST - KEY + POWER BOARD**- MISCELLANEOUS -**

CN2002	9965 000 15895	CONNECTOR 5P
DP201	9965 000 17398	VFD HNA-10SS28
DP202	9965 000 17399	VFD HNA-06SC09
LD201	9965 000 17400	LED
RB2001	9965 000 17401	CON/WIRE 4P 40MM
RB201	9965 000 17402	CON/WIRE 15P
RB202	9965 000 17403	CON/WIRE 3P 260MM
RB501	9965 000 17404	CON/WIRE 7P 220MM
SN201	9965 000 13071	IRT SENSOR
TA201	4822 276 13648	TACT SWITCH
TA202	4822 276 13648	TACT SWITCH
TA204	4822 276 13648	TACT SWITCH
TA206	4822 276 13648	TACT SWITCH
TA207	4822 276 13648	TACT SWITCH
TA209	4822 276 13648	TACT SWITCH
TA210	4822 276 13648	TACT SWITCH

- COILS & FILTERS -

XL981	9965 000 17405	CRYSTAL 4.00000MHZ
-------	----------------	--------------------

- DIODES -

D201	4822 130 30621	1N4148
D202	4822 130 30621	1N4148
D204	4822 130 30621	1N4148
D985	4822 130 30621	1N4148
ZD201	4822 130 34233	BZX79-B5V1

- IC & TRANSISTORS -

IC251	9965 000 12550	PT6311(PTC)
IC501	9965 000 17445	IC PIC16C770
IC502	9965 000 17446	IC PT6312 44 PIN
IC981	9965 000 17447	IC S-CPU EM78P156ELP
Q204	9965 000 17448	XISTR NPN SMT (2SC945)


Note: Only these parts mentioned in the list are normal service parts.

SOURCE + PHONE / 6 CH IN BOARD

TABLE OF CONTENTS


Source + Phone Circuit Diagram	6-2
Source + Phone PCB Layout	6-2
6 CH IN Circuit Diagram	6-3
6 CH IN PCB Layout	6-3
Electrical Parts List(Source + Phone / 6CH IN)	6-4

CIRCUIT DIAGRAM - SOURCE + PHONE PCB

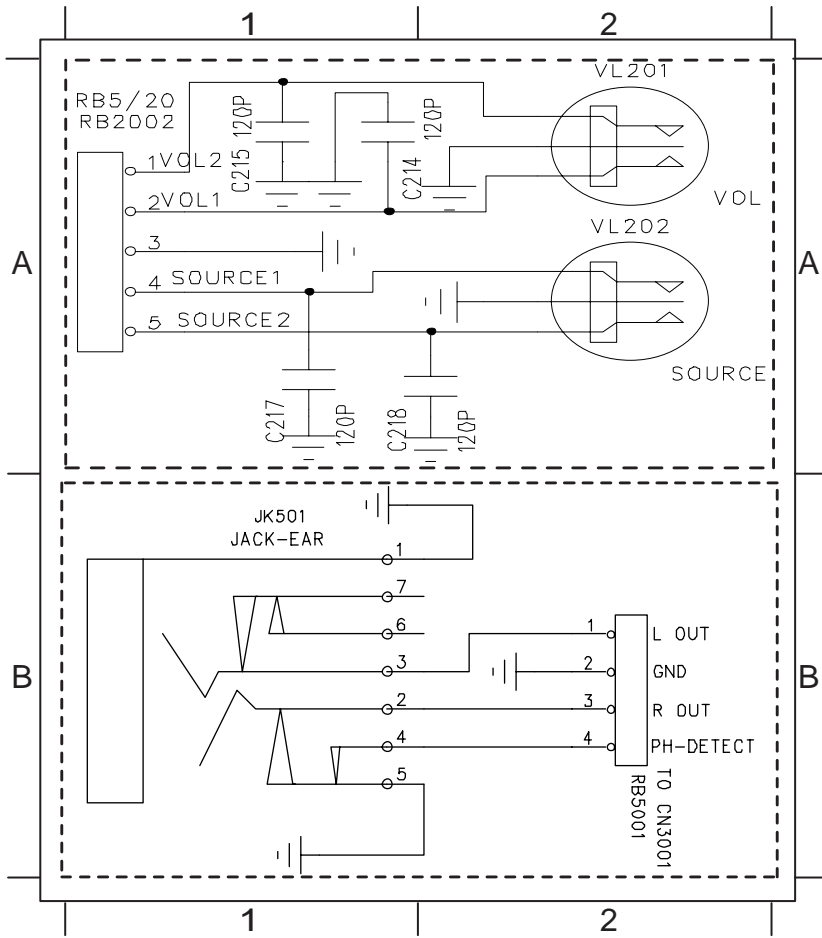


C214	A1
C215	A1
C217	A1
C218	A1
JK501	B1
RB2002	A1
RB5001	B2
VL201	A2
VL202	A2

PCB LAYOUT - SOURCE + PHONE PCB

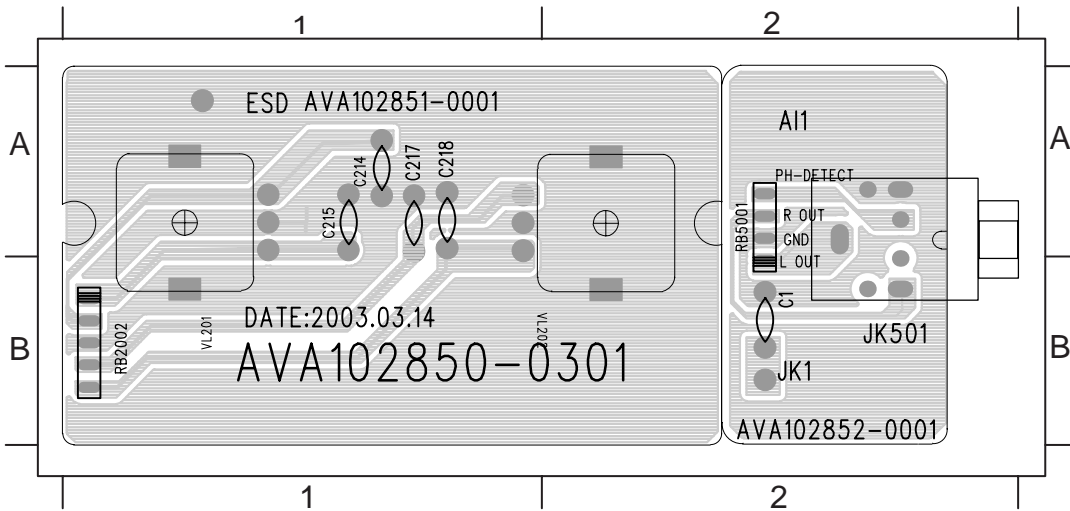


C1	B2
C214	A1
C215	A1
C217	A1
C218	A1
JK1	B2
JK501	B2
RB2002	B1
RB5001	A2
VL201	B1
VL202	B2

CIRCUIT DIAGRAM - 6 CH IN PCB

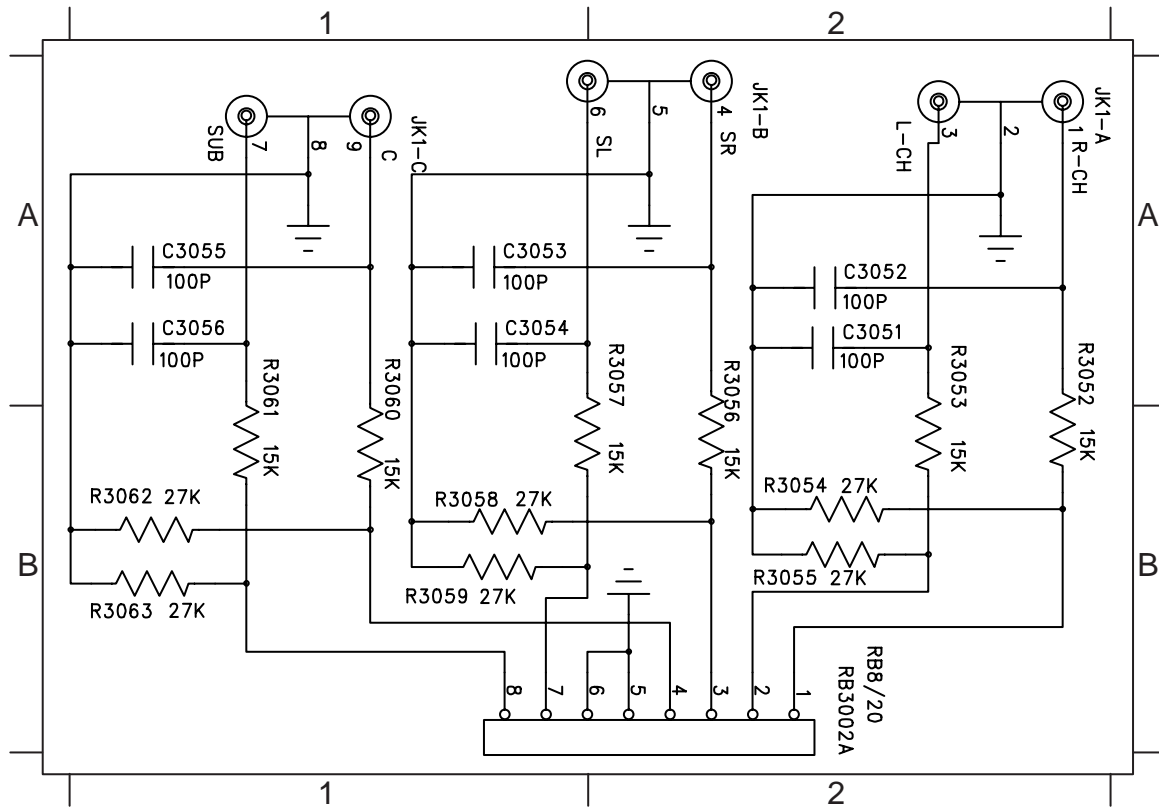

C3051	A2
C3052	A2
C3053	A1
C3054	A1
C3055	A1
C3056	A1
JK1-A	A2
JK1-B	A2
JK1-C	A1
R3052	A2
R3053	A2
R3054	B2
R3055	B2
R3056	A2
R3057	A2
R3058	B1
R3059	B1
R3060	A1
R3061	A1
R3062	B1
R3063	B1
RB3002A	B2

PCB LAYOUT - 6 CH IN PCB

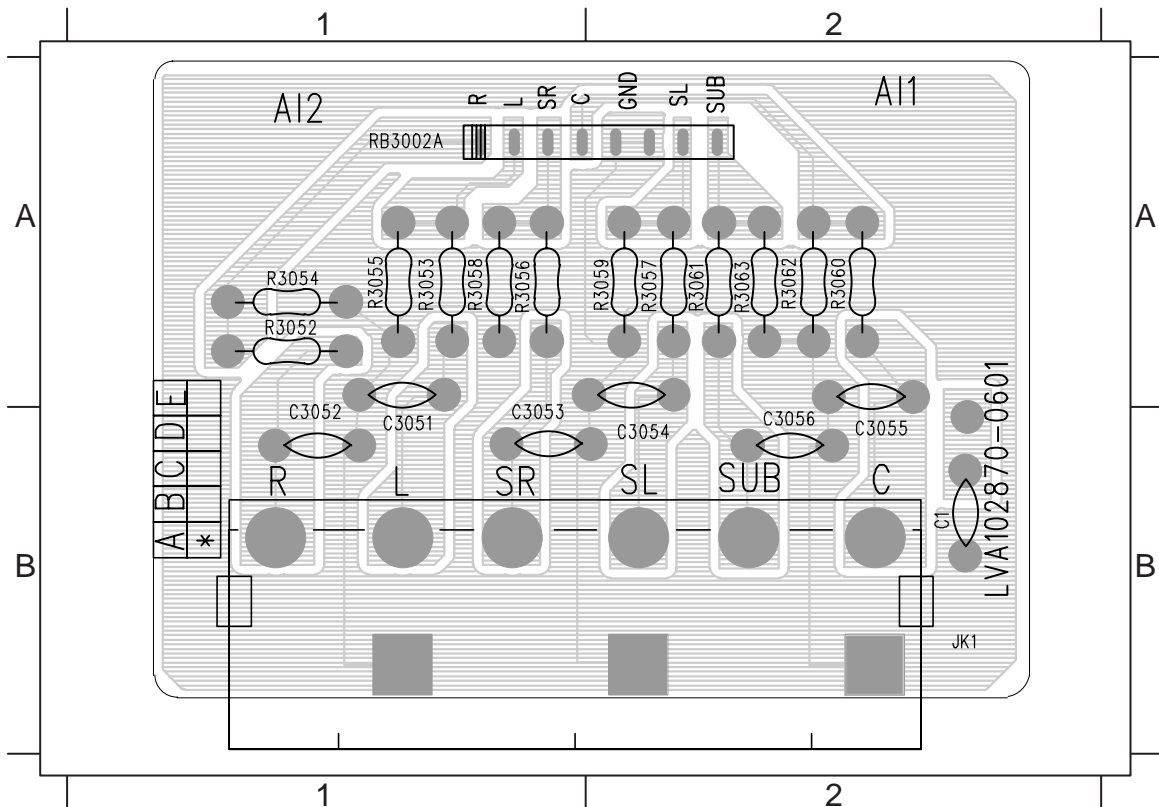

C1	B2
C3051	B1
C3052	B1
C3053	B1
C3054	B2
C3055	B2
C3056	B2
JK1	B2
R3052	A1
R3053	A1
R3054	A1
R3055	A1
R3056	A1
R3057	A2
R3058	A1
R3059	A2
R3060	A2
R3061	A2
R3062	A2
R3063	A2
RB3002A	A1

ELECTRICAL PARTSLIST - KEY + POWER BOARD

- MISCELLANEOUS -

JK501	9965 000 12505	CINCH SOCKET 6P WHITE/RED
RB2002	9965 000 17449	CON/WIRE 5P 230MM
RB5001	9965 000 17450	CON/WIRE 4P 90MM
VL201	△ 9965 000 17451	ROTARY L20XF7MM P2.5MM
VL202	△ 9965 000 17451	ROTARY L20XF7MM P2.5MM

ELECTRICAL PARTSLIST - KEY + POWER BOARD

- MISCELLANEOUS -


JK1	9965 000 17452	6P WHTX2-BLU/REDX2-BLK
RB3002	9965 000 17453	8P 250MM 2547#26X2P

POWER BOARD


TABLE OF CONTENTS

Internal IC Diagram.....	7-1
Circuit Diagram	7-2
PCB Layout.....	7-3
Electrical Parts List.....	7-4

TL431 EQUIVALENT SCHEMATIC

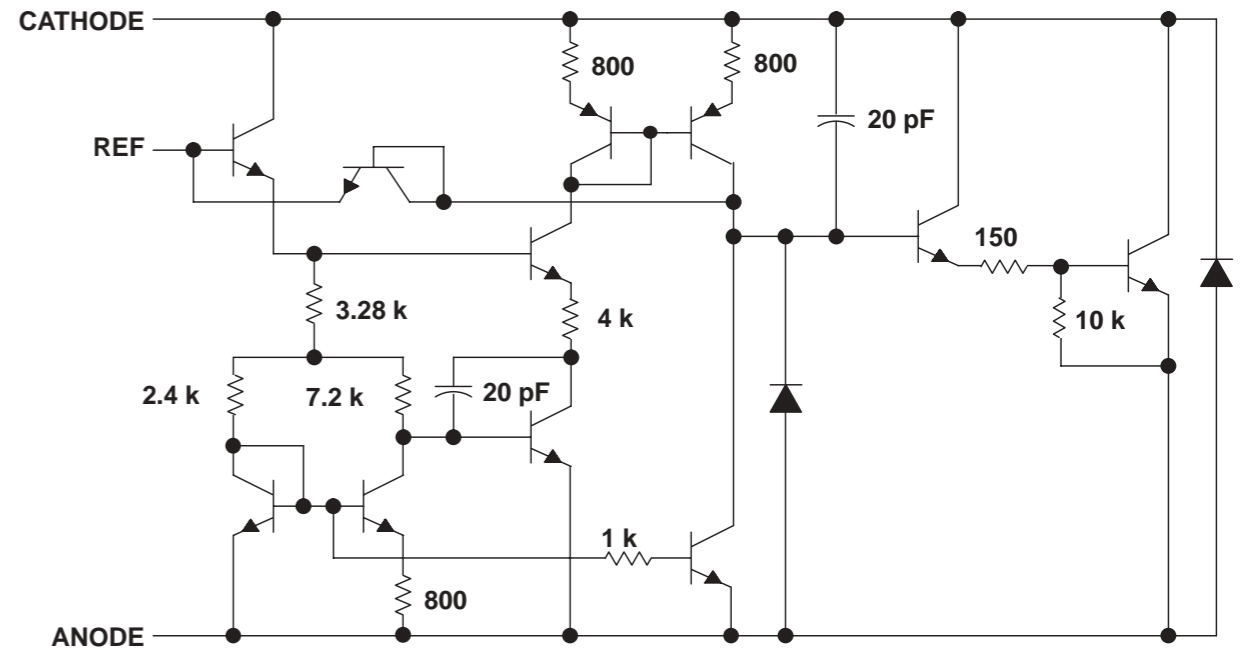


TOP249 BLOCK DIAGRAM

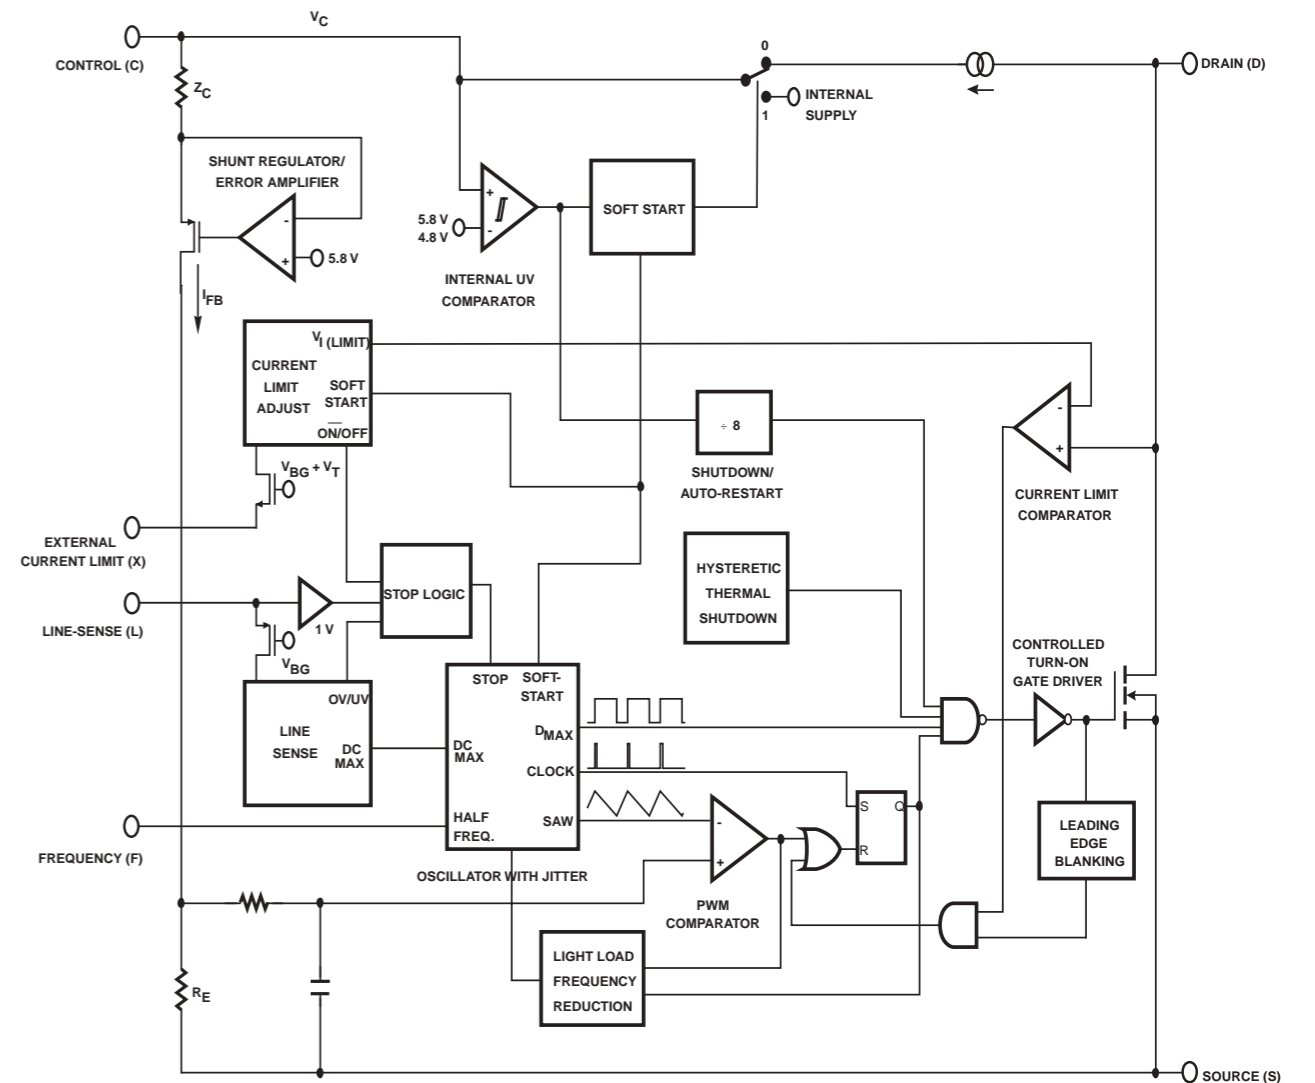


CIRCUIT DIAGRAM

BR901	A3	C908	A4	C919	C5	C933	A6	C949	A6	C966	A5	CN907	B3	D907	A5	L902	B6	R901	A3	R919	B5	R931	A5	R948	D3	XRB906D6	ZD901	A4	
C901	A2	C909	A4	C920	C5	C938	B5	C950	A6	C967	B5	CN908	B3	D908	B5	L903	A6	R902	B3	R920	B5	R932	A6	R949	C4	RL901	C3	ZD902	C4
C902	A3	C910	B4	C925	B5	C939	B5	C951	A6	C968	A3	D901	B4	D909	B5	Q903	C5	R903	A3	R921	B5	R941	D3	R950	C5	RT901	A1	ZD903	A6
C903	B3	C911	B4	C926	B6	C940	B6	C952	A6	C969	B4	D902	B4	D910	B5	Q904	A6	R904	B4	R922	B5	R942	D3	R951	C4	SN901	B4	ZD946	D4
C904	B3	C912	B4	C929	A5	C941	B6	C962	C3	C970	B6	D903	C3	F901	A2	Q910	C3	R905	A4	R923	C5	R943	D4	R952	A5	T901	A2		
C905	B3	C913	B4	C930	A5	C945	A5	C963	A4	C971	B6	D904	C3	IC903	B3	Q912	D3	R906	A4	R924	C5	R945	D4	R953	B2	T902	C2		
C906	B3	C914	C3	C931	B6	C947	A5	C964	A4	C972	B5	D905	A5	IC904	C5	Q913	C4	R907	B4	R925	C5	R946	D3	RB904	B6	T903	B4		
C907	A4	C915	B4	C932	A6	C948	A5	C965	A5	CN902	B2	D906	B5	L901	A6	R1	B5	R908	B4	R928	B6	R947	D3	R947	D3	ZD1	B5		

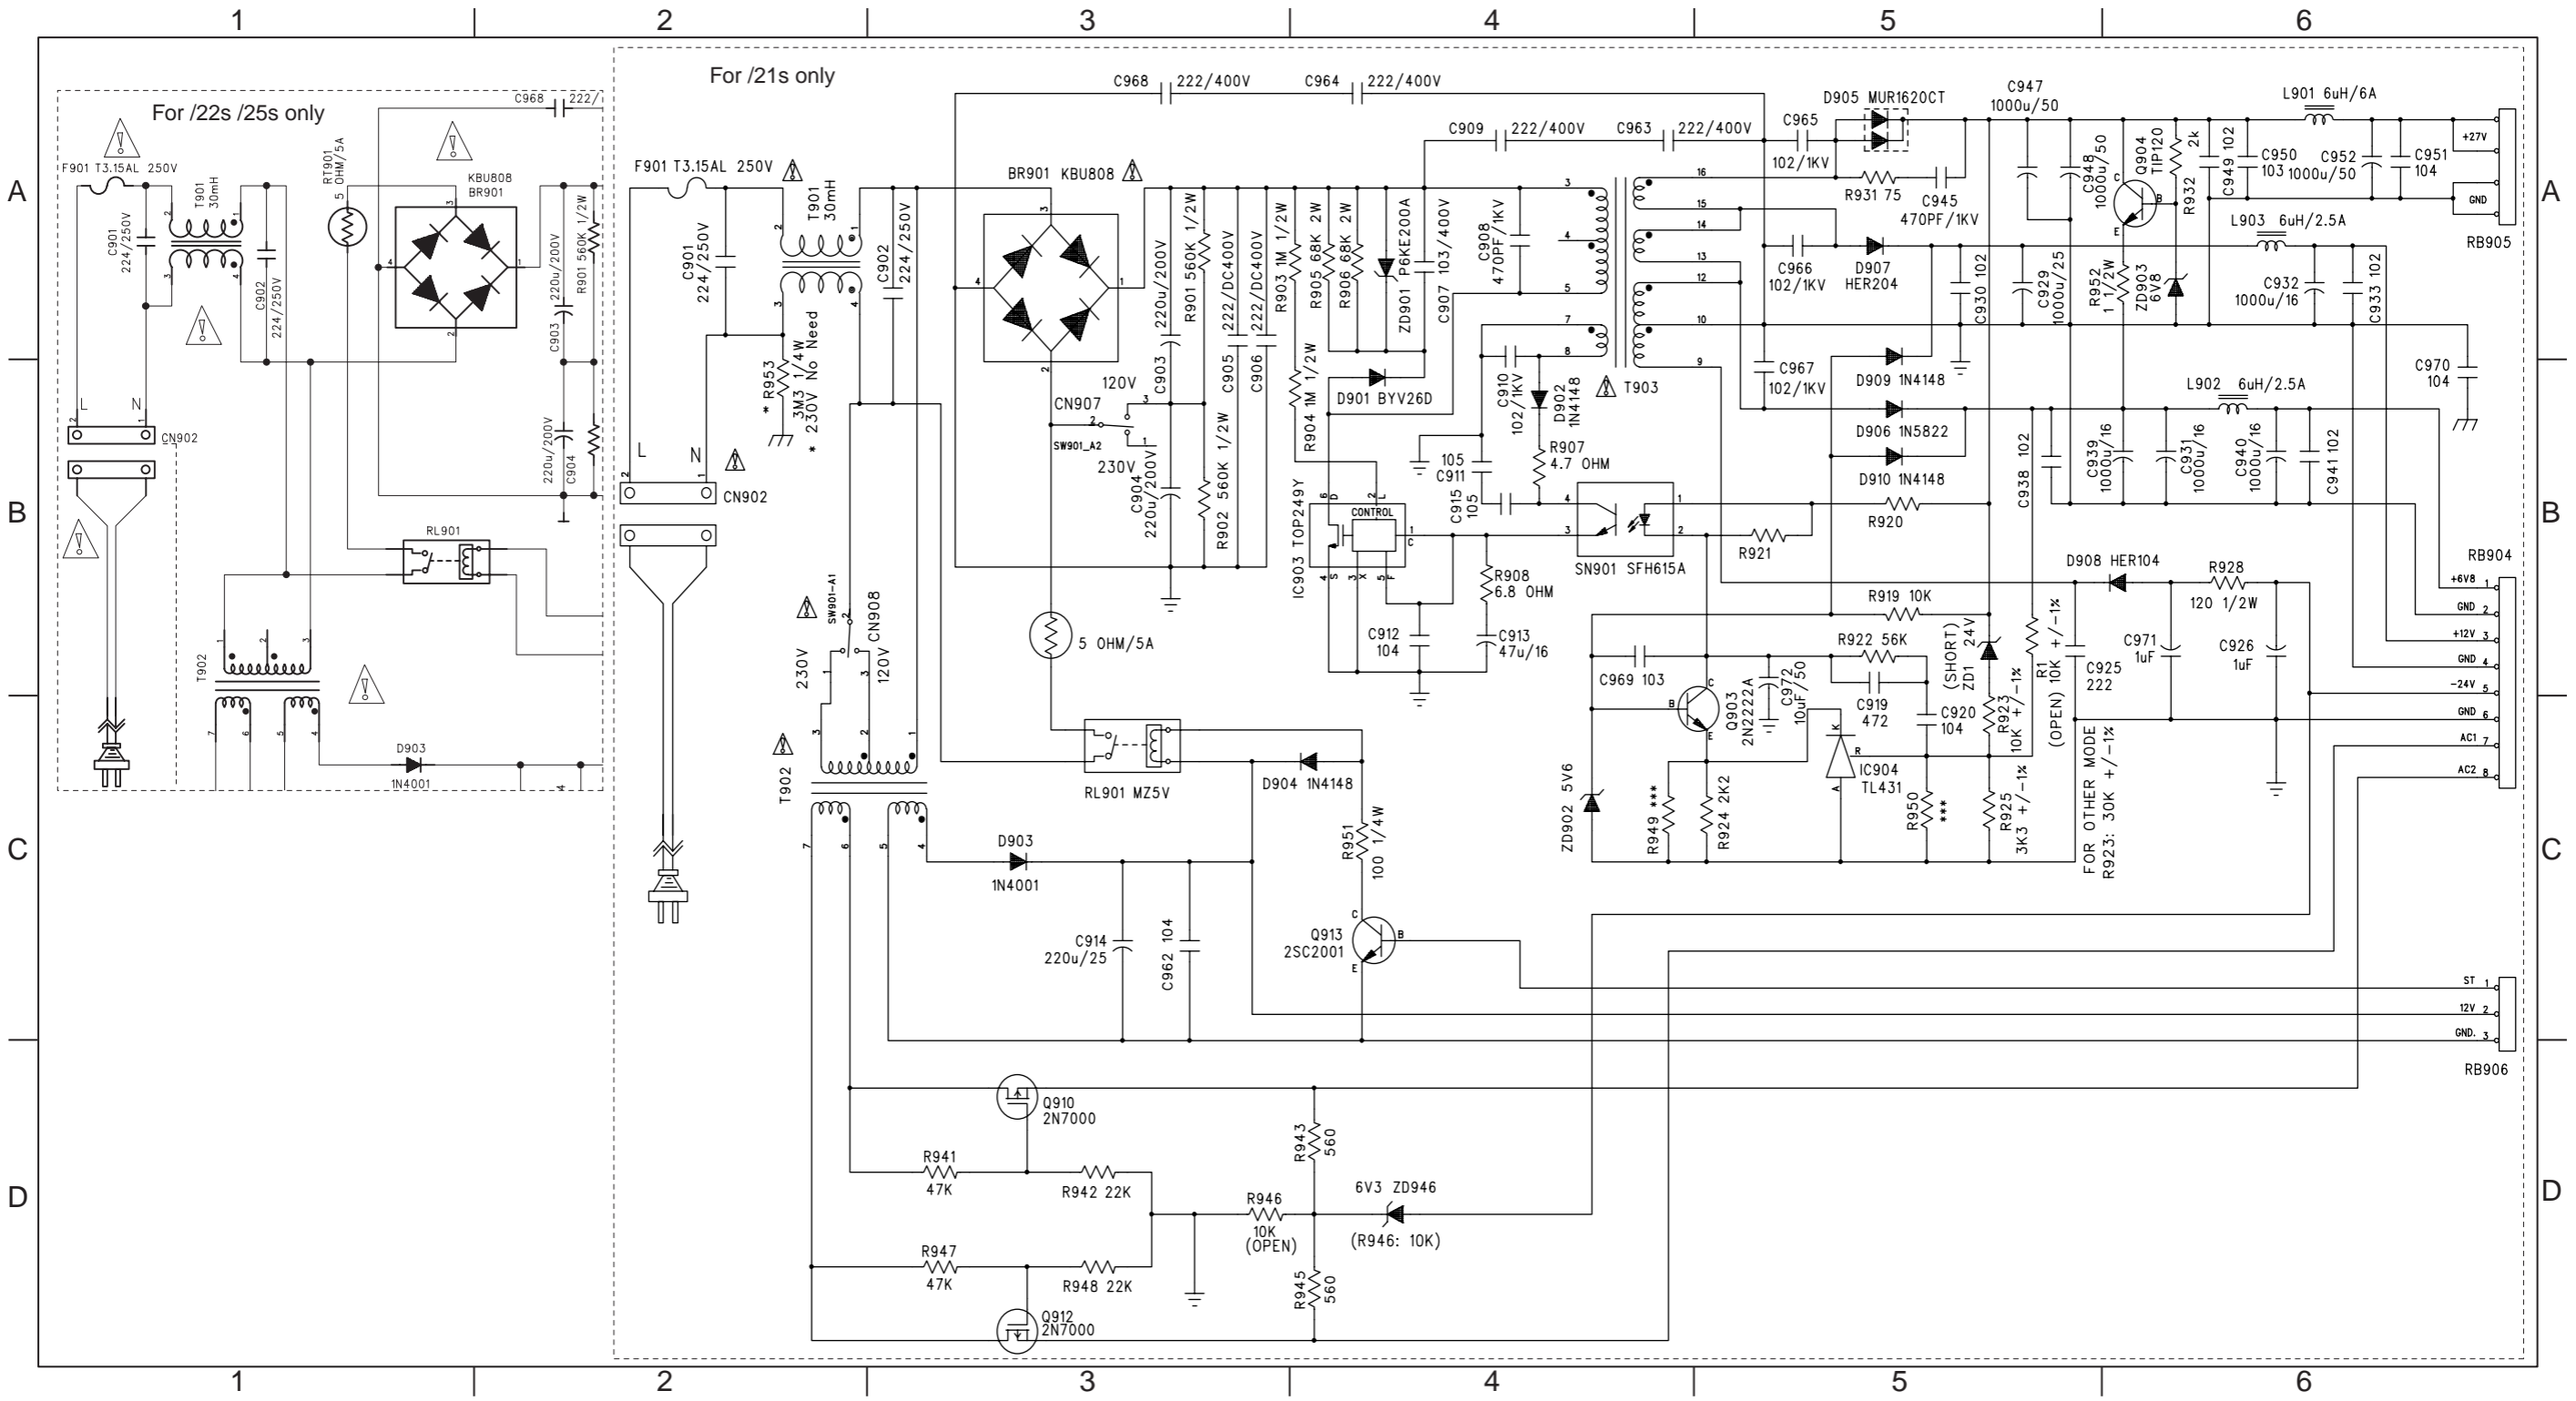

POWER PCB LAYOUT

BR901 B2	C908 A2	C919 B3	C933 B4	C949 A4	C966 A3	CN907 A2	D907 B3	JW904 C3	C5038 C5	P904 C2	R1 C4	R908 B3	R928 C3	R947 C3	RB905 B4	RB905 B4
C901 A1	C909 A3	C920 C3	C938 B4	C950 A4	C967 A4	CN908 C1	D908 B3	JW905 C3	L901 A4	P905 C3	R901 B2	R919 C3	R931 A4	R948 C3	RB906 C4	ZD901 A2
C902 B1	C910 B3	C925 B3	C939 B4	C951 B4	C968 B3	D901 A2	D909 B3	JW906 C3	L902 B4	P906 C4	R902 B2	R920 C3	R932 C4	R949 B3	RL901 B2	ZD902 C3
C903 A2	C911 C3	C926 C3	C940 B4	C952 B4	C969 B3	D902 B2	D910 B3	JW907 C1	L903 B4	Q903 B3	R903 A2	R921 B3	R941 C3	R950 C3	RT901 B1	ZD903 C4
C904 B2	C912 B2	C929 C4	C941 B4	C962 C2	C970 A3	D903 C2	F901 A1	JW908 C4	L905 A4	Q904 C4	R904 B2	R922 B3	R942 C3	R951 C3	SN901 B3	ZD946 C3
C905 B2	C913 C3	C930 C3	C945 A4	C963 A3	C971 B3	D904 C2	IC903 B2	JW909 C4	P901 B1	Q910 C3	R905 A2	R923 C3	R943 C3	R952 C4	T901 B1	
C906 B2	C914 C2	C931 B4	C947 A4	C964 B3	C972 B3	D905 A4	IC904 B3	JW910 B3	P902 B2	Q912 C3	R906 A2	R924 B3	R945 C3	R953 A1	T902 C1	
C907 A2	C915 C3	C932 C4	C948 A4	C965 A3	CN902 A1	D906 B4	JW903 C3	JW911 C3	P903 B1	Q913 C4	R907 B3	R925 C3	R946 C3	RB904 B4	T903 A3	

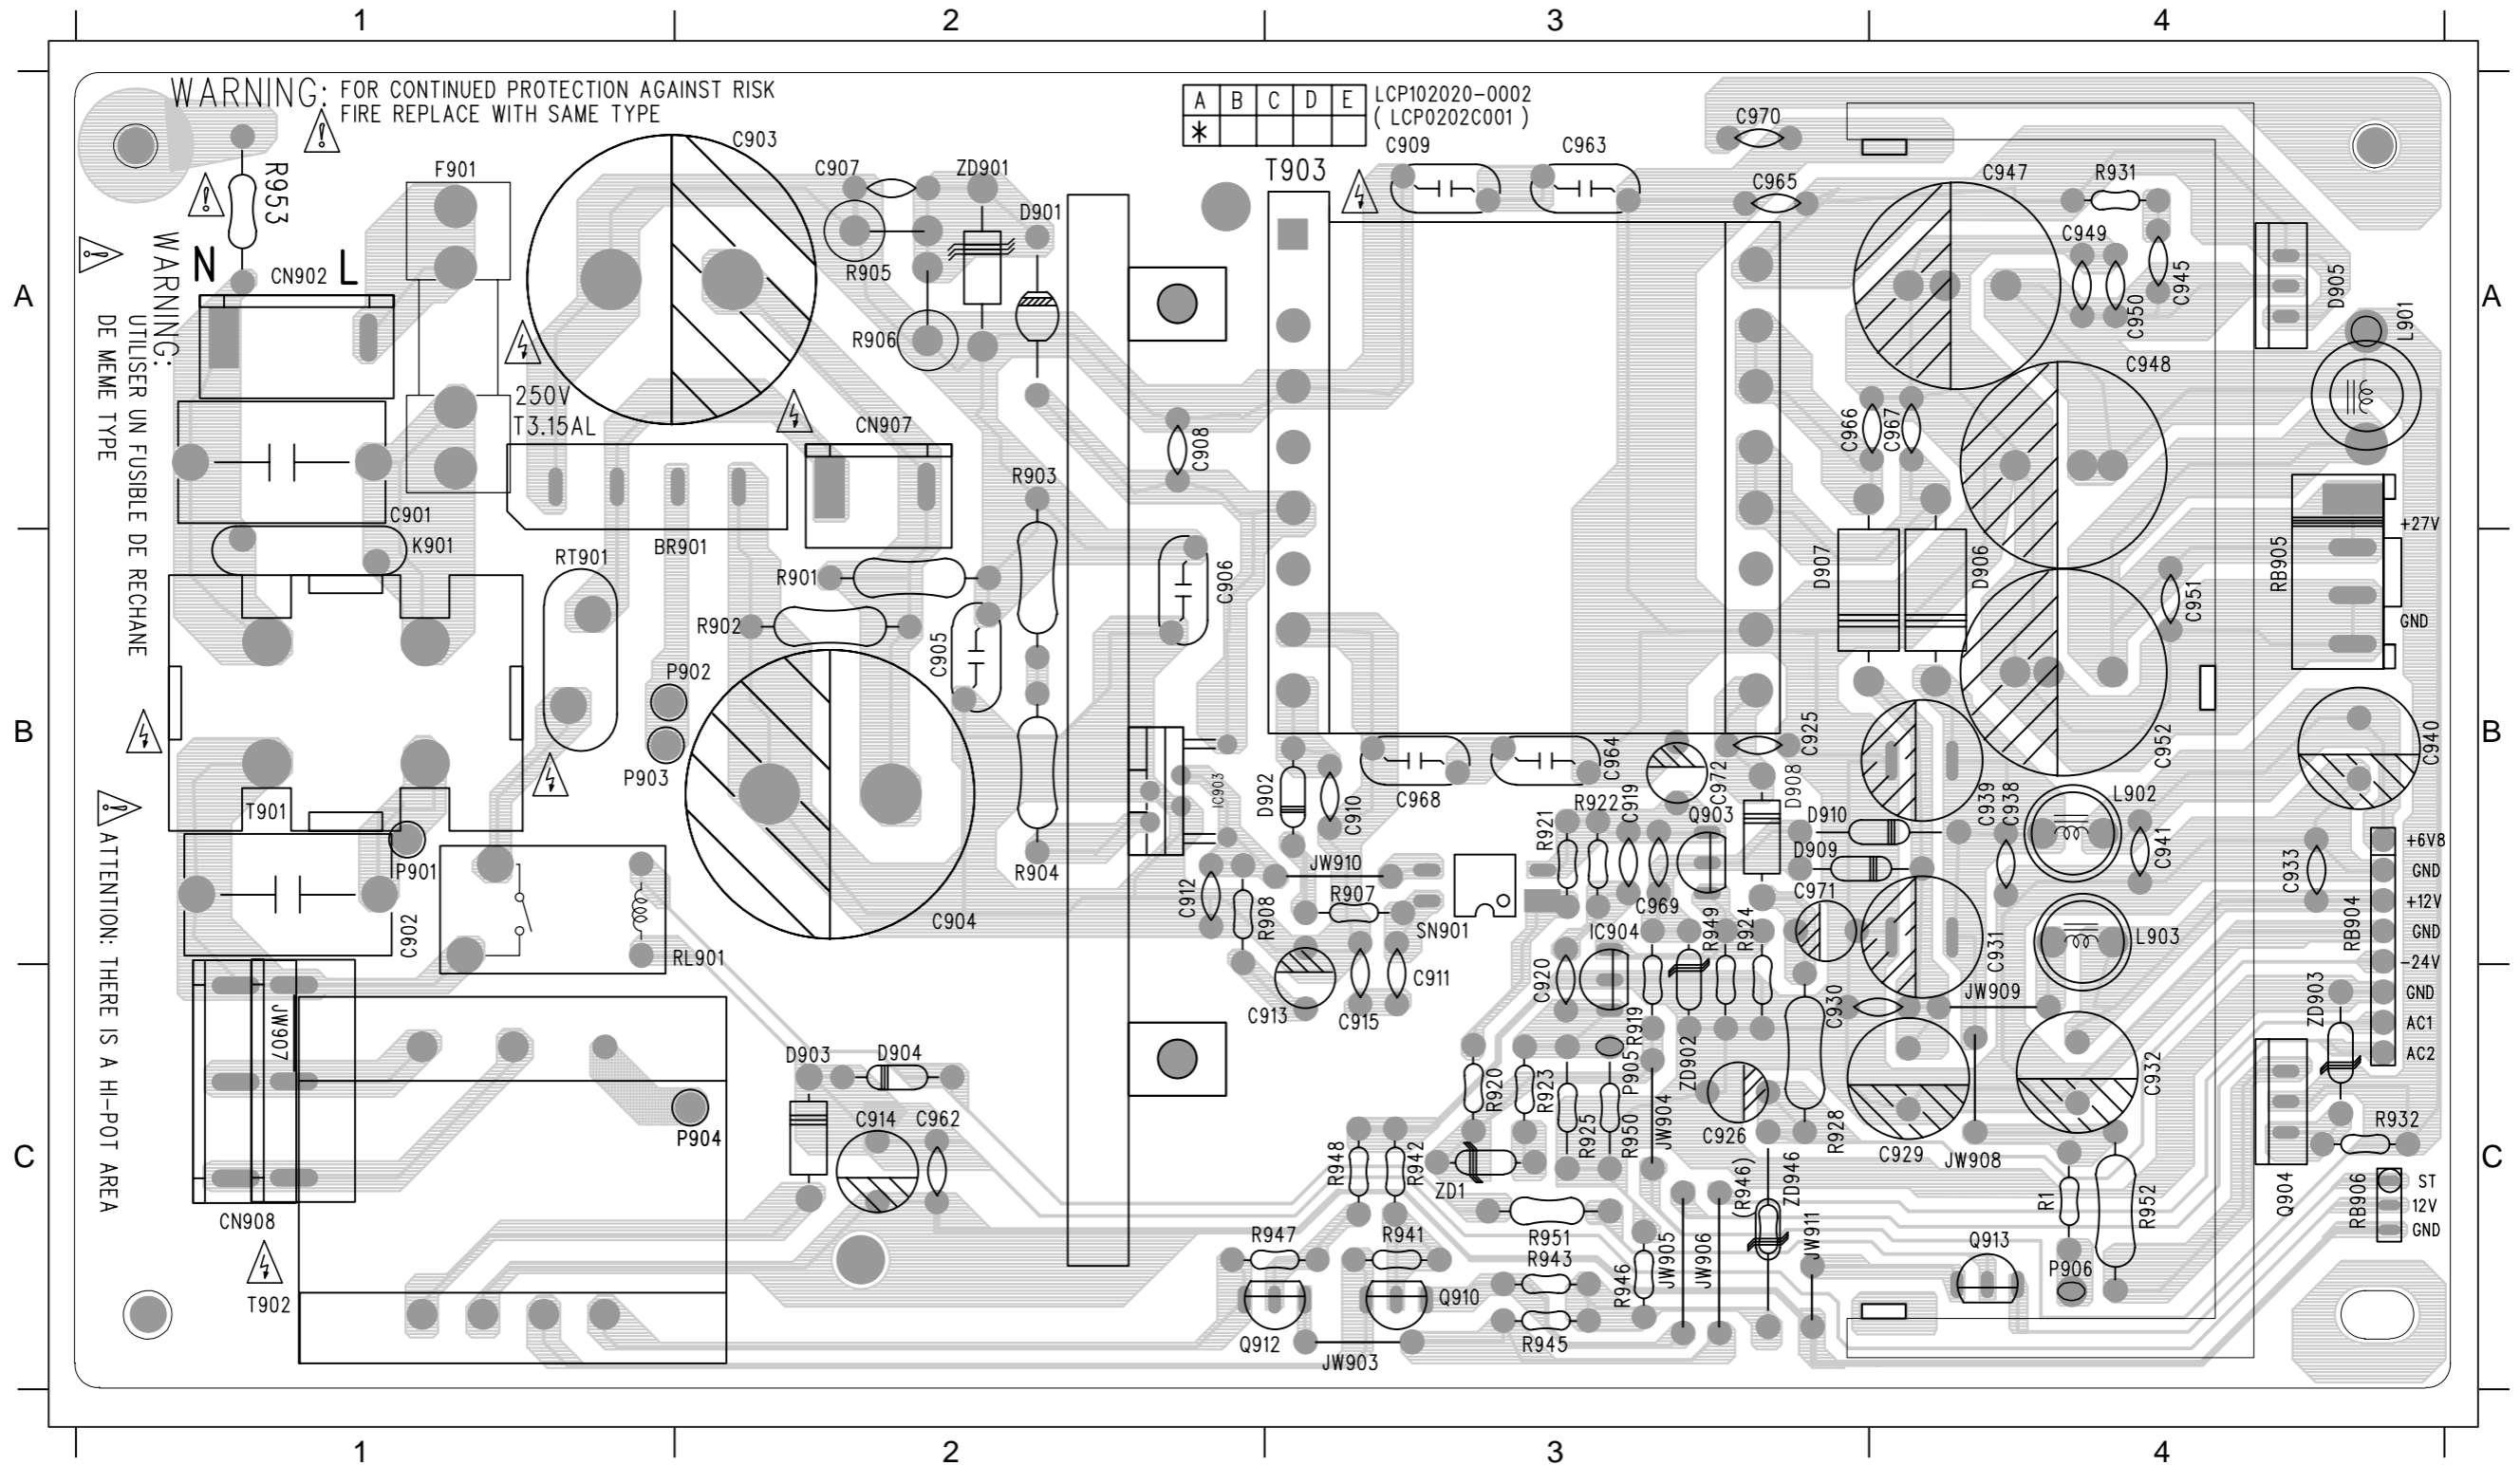

ELECTRICAL PARTSLIST - POWER BOARD**- MISCELLANEOUS -**

CN902	9965 000 15936	CONNECTOR 4P
CN907	9965 000 17458	CONNECTOR 3P /21S
CN908	9965 000 17459	CONNECTOR 5P /21S
F901	△9965 000 17388	FUSE 3.15A 250V SLOW
RB904	9965 000 17389	8P 260MM 2468#26
RB905	9965 000 17390	4P 260MM RDX2-WTX2
RB906	0000 000 00000	3P 220mm
RL901	△9965 000 15937	RELAY
T902	△9965 000 17391	PWR TRANS EI-35 110~230V
T903	△9965 000 17392	PWR TRANS EI-42
SN901	9965 000 15769	PHOTO COUPLER

- IC & TRANSISTORS -

IC904	9965 000 17387	IC TL431
Q903	9965 000 17396	PN2222A FAIRCHILD
Q904	9965 000 17397	XISTR NPN TIP120
Q910	9965 000 16497	2N7000TA 60V/0.2A,
Q912	9965 000 16497	2N7000TA 60V/0.2A
Q913	4822 130 41651	2SC2001L

- RESISTORS -

R905	9965 000 17393	68K 2W 5% W/KINK
R906	9965 000 17393	68K 2W 5% W/KINK
RT901	9965 000 17394	5R 5A

- COILS & FILTERS -

L901	9965 000 16693	6UH 10.5TS 6A
L902	9965 000 16694	6UH 13.5TS 2UEW
L903	9965 000 16694	6UH 13.5TS 2UEW
T901	9965 000 17395	1.7A L1:86TS L2:86TS

Note: Only these parts mentioned in the list are normal service parts.

- DIODES -

BR901	9965 000 14146	ZENER 6.4-6.7V 0.5W
D901	4822 130 11044	BYV26D
D902	4822 130 30621	1N4148
D903	4822 130 31438	1N4001G
D904	4822 130 30621	1N4148
D905	9965 000 14186	MUR1620CT 8A 200V
D906	5322 130 32677	1N5822
D907	9965 000 14187	HER204 2A/300V 50NS
D908	9965 000 14188	HER104 1A/300V 50NS
D909	4822 130 30621	1N4148
D910	4822 130 30621	1N4148
ZD1	9965 000 17373	23.6-24.7V 0.5W
ZD901	9965 000 14209	P6KE200A
ZD902	9965 000 15944	DIODE ZENR 5.6-5.9V 0.5W
ZD903	4822 130 80272	MTZJ7.5C
ZD946	4822 130 34167	BZX79-B6V2

- IC & TRANSISTORS -


IC903	9965 000 14189	TOP249Y 250W
-------	----------------	--------------

MAIN BOARD


TABLE OF CONTENTS

Internal IC Diagram	8-1
Circuit Diagram (Top Left)	8-6
Circuit Diagram (Top Right).....	8-7
Circuit Diagram (Bottom Left)	8-8
Circuit Diagram (Bottom Right)	8-9
PCB Layout(Component View)	8-10
PCB Layout(Copperside View).....	8-12
Electrical Parts list	8-14


LC72131 INTERNAL IC DIAGRAM

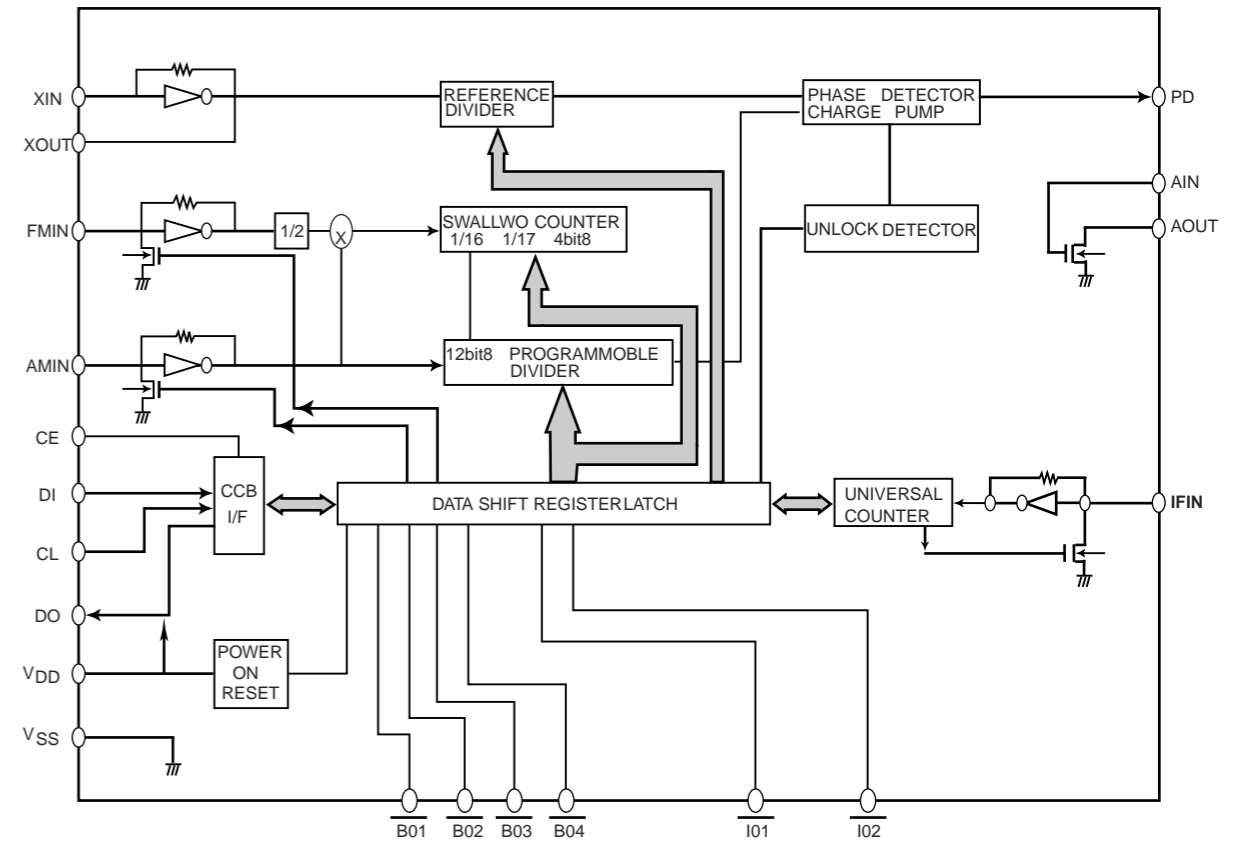


ST505 INTERNAL IC DIAGRAM

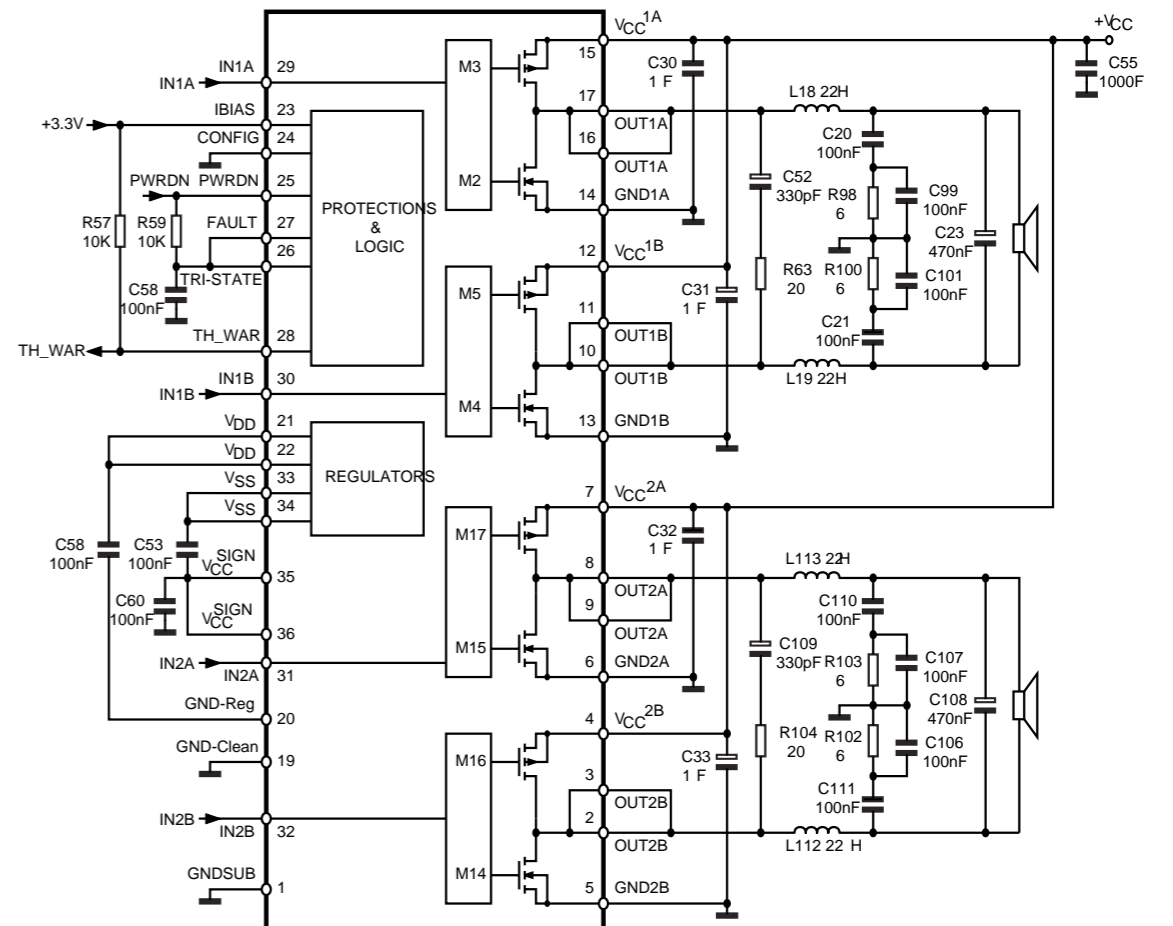

LA1837 INTERNAL IC DIAGRAM

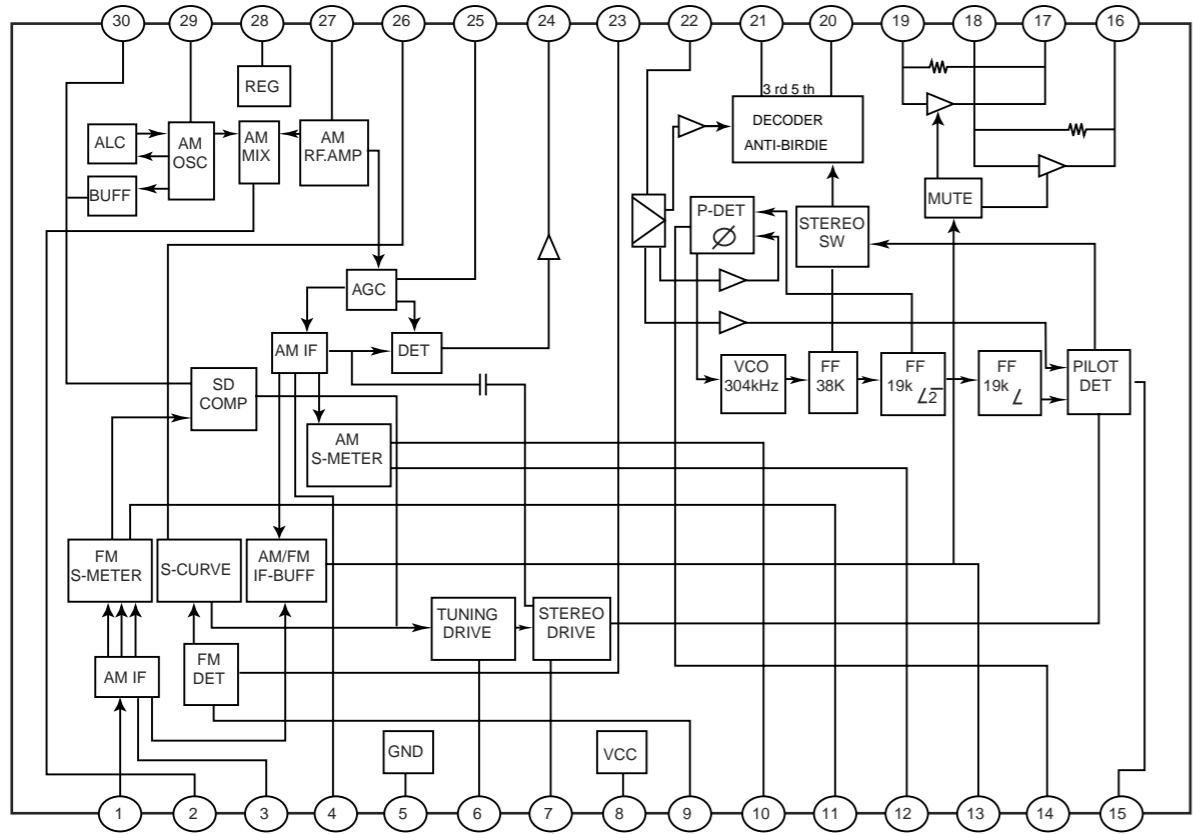


ESS4008 INTERNAL IC DIAGRAM

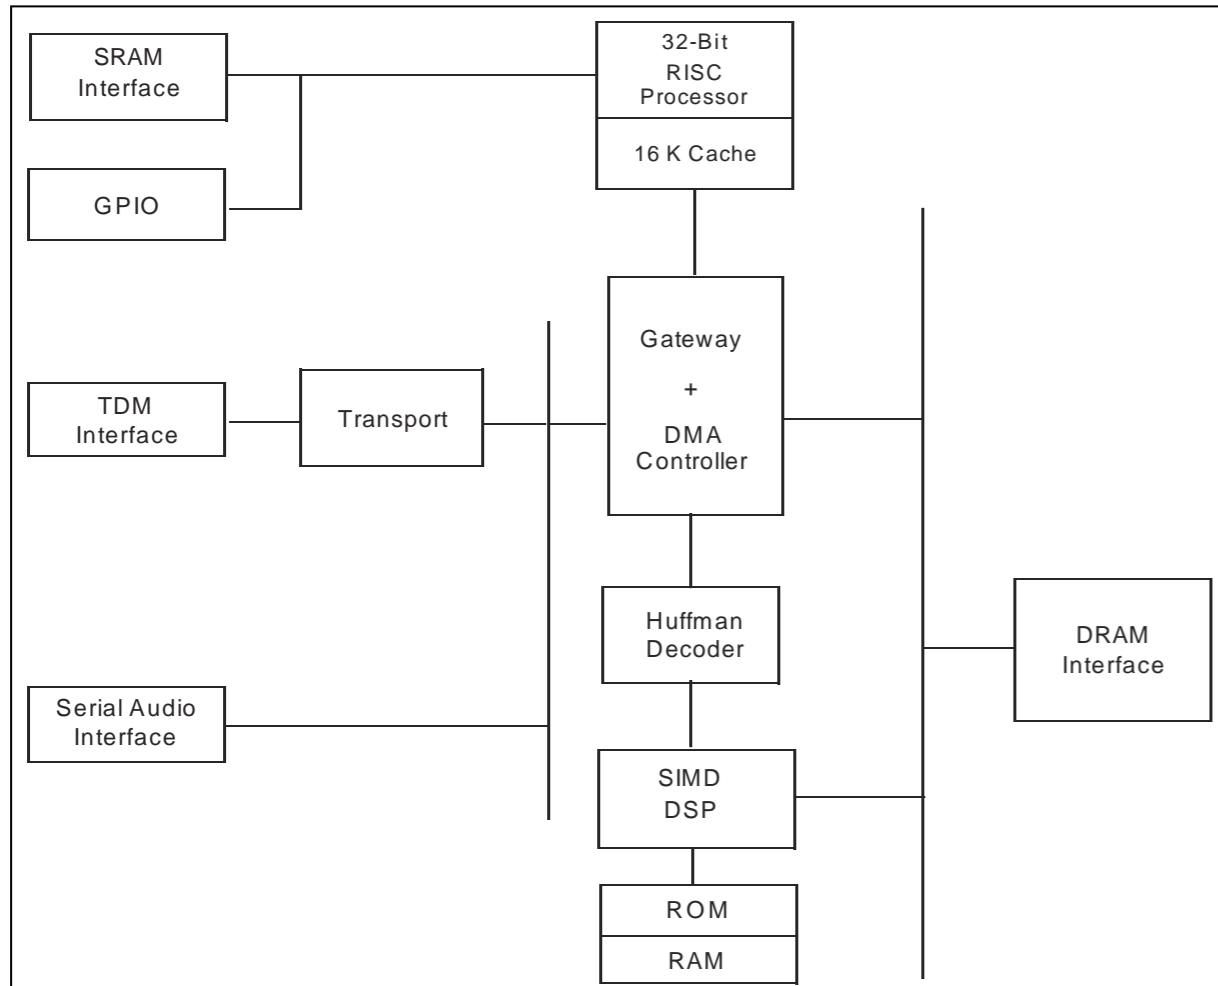

**SYNCHRONOUS DRAM
1MX16Y3VTW**


**PIN ASSIGNMENT (Top View)
50 - Pin TSOP**

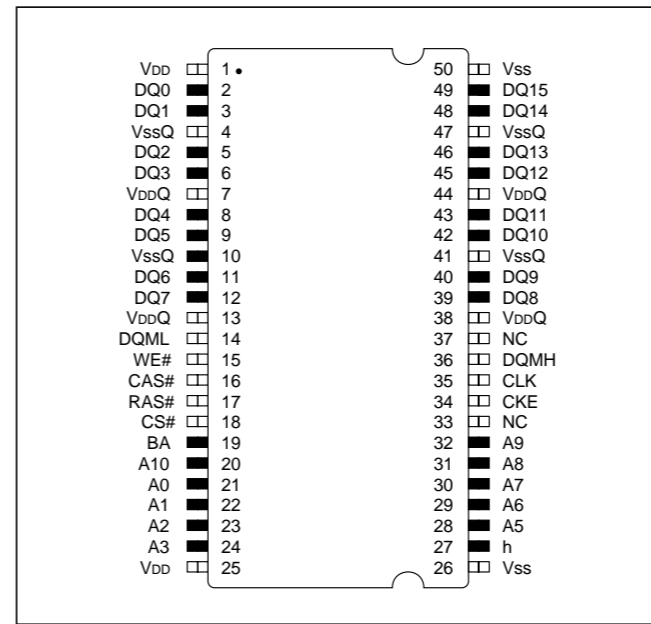

Note: The # symbol indicates signal is active LOW.


	1 Meg x 16
Configuration	512Kx16x2banks
Refresh Count	2K or 4K
Row Addressing	2K (A0-A10)
Bank Addressing	2 (BA)
Column Addressing	256 (A0-A7)

**FUNCTIONAL BLOCK DIAGRAM
1 Meg x 16 SDRAM**

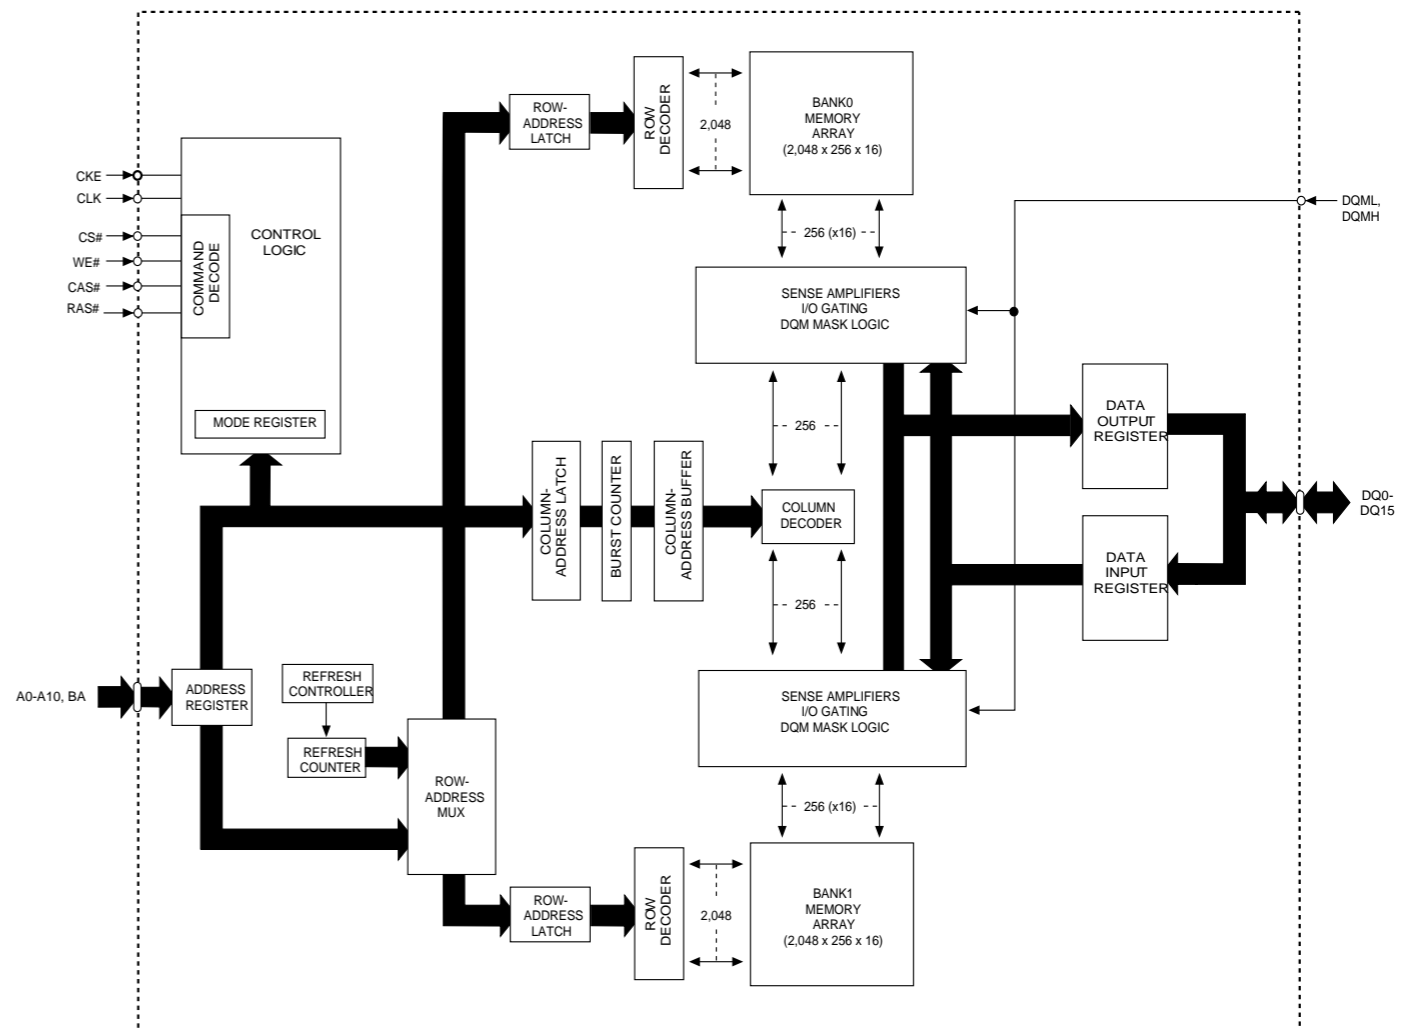


DIGITAL AUDIO PROCESSOR STA308

BLOCK DIAGRAM

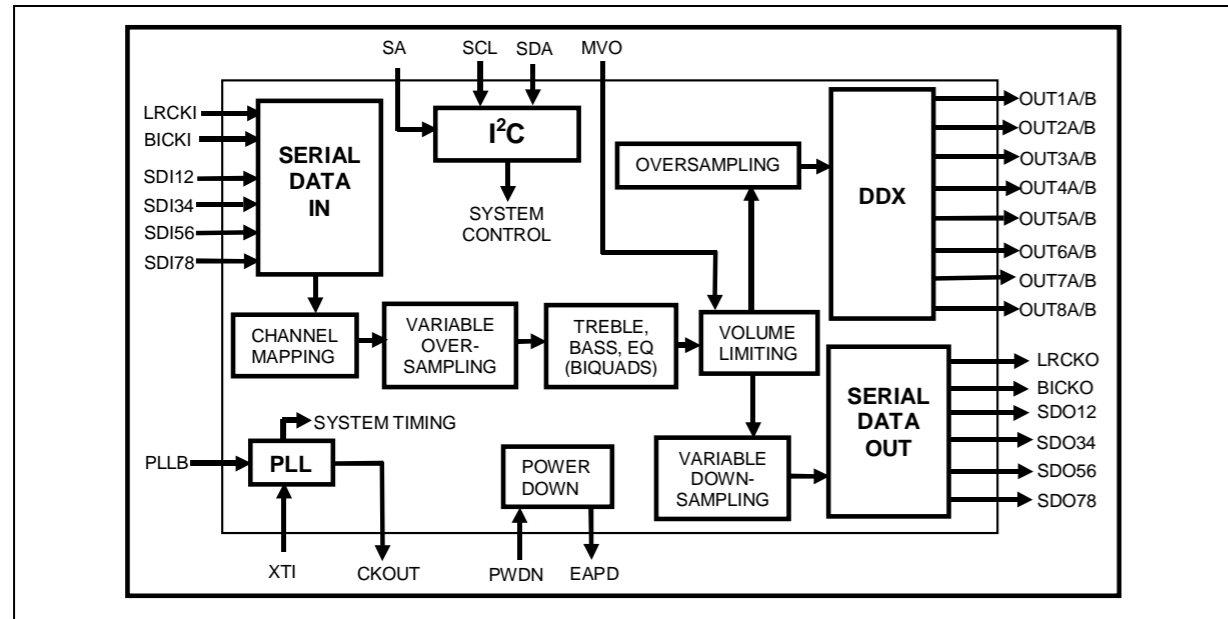


SIGNAL FLOW DIAGRAM

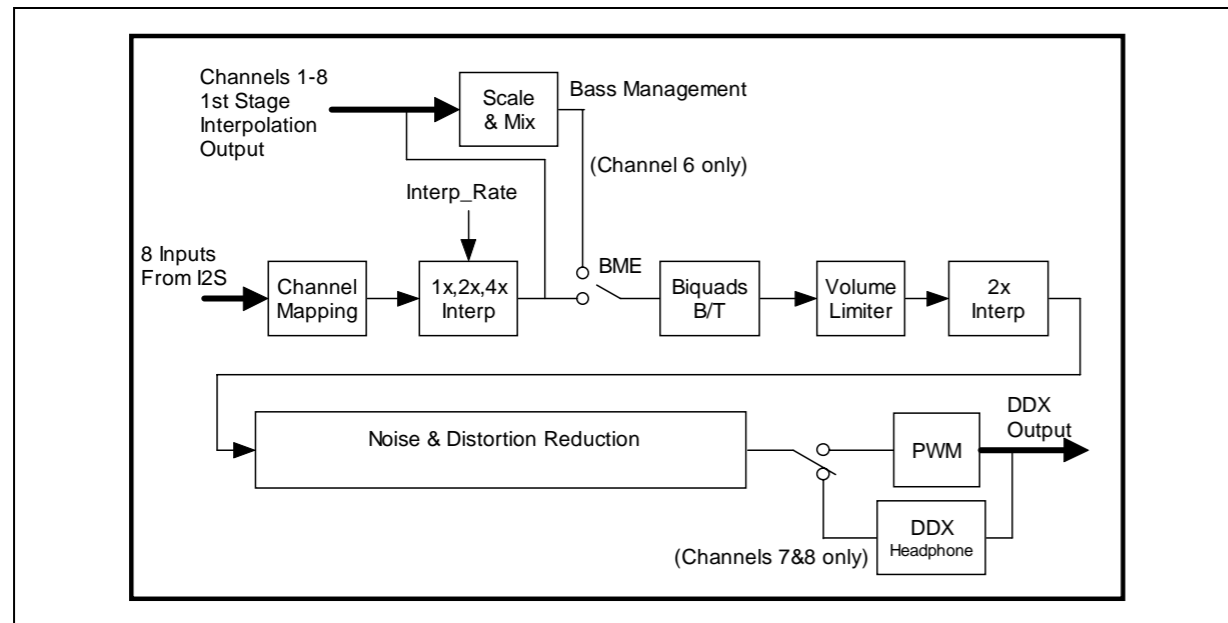

DIGITAL AUDIO PROCESSOR STA308

PIN CONNECTION (Top view)

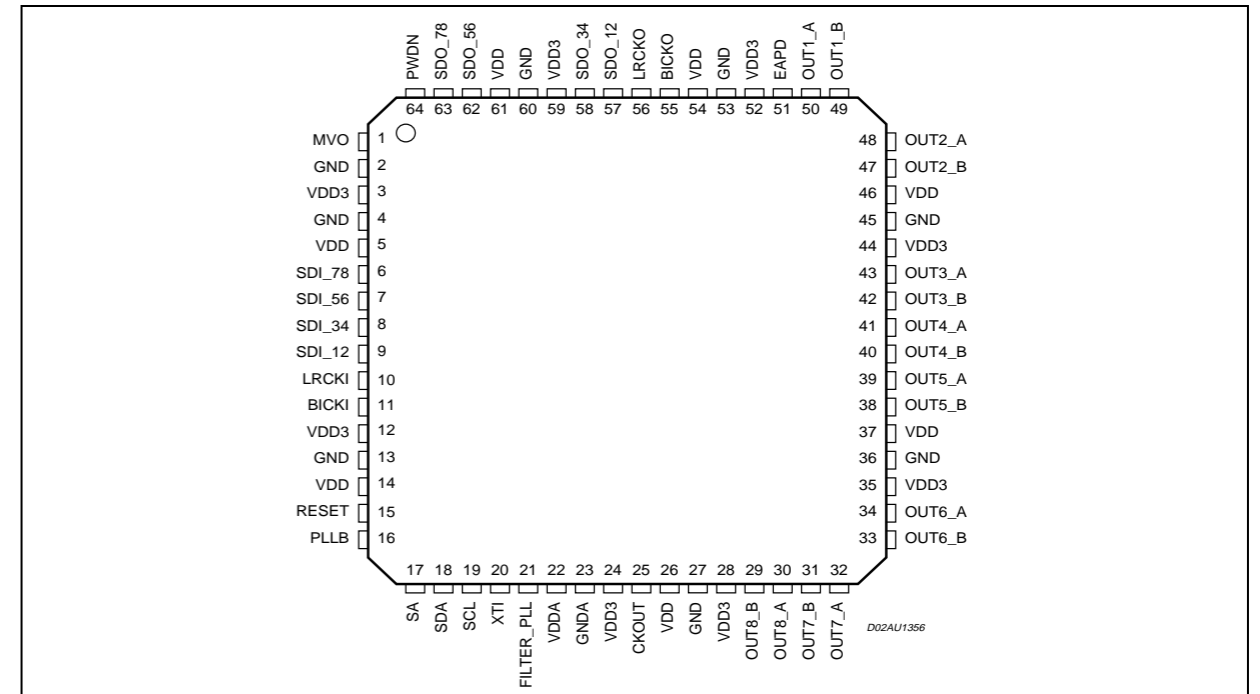

PIN FUNCTION

PIN	NAME	TYPE	DESCRIPTION	PAD TYPE
1	MVO	I	Master Volume Override	CMOS Input Buffer with Pull-Down
3, 12, 24, 28, 35, 44, 52, 59	VDD3		3.3V Digital Supply	3.3V Digital Power Supply Voltage (pad ring)
2, 4, 13, 27, 36, 45, 53, 60	GND		Digital Ground	Digital Ground
5, 14, 26, 37, 46, 54, 61	VDD		2.5V Digital Supply	2.5V Digital Power Supply Voltage (core + ring)
6	SDI_78	I	Input I2S Serial Data Channels 7 & 8	5V Tolerant TTL Input Buffer
7	SDI_56	I	Input I2S Serial Data Channels 5 & 6	5V Tolerant TTL Input Buffer
8	SDI_34	I	Input I2S Serial Data Channels 3 & 4	5V Tolerant TTL Input Buffer
9	SDI_12	I	Input I2S Serial Data Channels 1 & 2	5V Tolerant TTL Input Buffer
10	LRCKI	I	Inputs I2C Left/Right Clock	5V Tolerant TTL Input Buffer
11	BICKI	I	Inputs I2C Serial Clock	5V Tolerant TTL Input Buffer
15	RESET	I	Global Reset	5V Tolerant TTL Schmitt Trigger Input Buffer
16	PLLB	I	PLL Bypass	CMOS Input Buffer with Pull-Down
17	SA	I	Select Address (I2C)	CMOS Input Buffer with Pull-Down
18	SDA	I/O	I2C Serial Data	Bidirectional Buffer: 5V Tolerant TTL Schmitt Trigger Input; 3.3V Capable 2 mA Slew-rate control Output;
19	SCL	I	I2C Serial Clock	5V Tolerant TTL Schmitt Trigger Input Buffer

DIGITAL AUDIO PROCESSOR STA308

PIN FUNCTION (continued)

PIN	NAME	TYPE	DESCRIPTION	PAD TYPE
20	XTI	I	Crystal Oscillator Input (Clock Input)	3.3V Tolerant TTL Schmitt Trigger Input Buffer
21	FILTER_PLL		PLL Filter	Analog Pad
22	VDDA		PLL 2.5V Supply	2.5V Analog Power Supply Voltage
23	GND_A		PLL Ground	Analog Ground
25	CKOUT	O	Clock Output	3.3V Capable TTL Tristate 4mA Output Buffer
29	OUT8_B	O	PWM Channel 8 Output B	3.3V Capable TTL 2mA Output Buffer
30	OUT8_A	O	PWM Channel 8 Output A	3.3V Capable TTL 2mA Output Buffer
31	OUT7_B	O	PWM Channel 7 Output B	3.3V Capable TTL 2mA Output Buffer
32	OUT7_A	O	PWM Channel 7 Output A	3.3V Capable TTL 2mA Output Buffer
33	OUT6_B	O	PWM Channel 6 Output B	3.3V Capable TTL 2mA Output Buffer
34	OUT6_A	O	PWM Channel 6 Output A	3.3V Capable TTL 2mA Output Buffer
38	OUT5_B	O	PWM Channel 5 Output B	3.3V Capable TTL 2mA Output Buffer
39	OUT5_A	O	PWM Channel 5 Output A	3.3V Capable TTL 2mA Output Buffer
40	OUT4_B	O	PWM Channel 4 Output B	3.3V Capable TTL 2mA Output Buffer
41	OUT4_A	O	PWM Channel 4 Output A	3.3V Capable TTL 2mA Output Buffer
42	OUT3_B	O	PWM Channel 3 Output B	3.3V Capable TTL 2mA Output Buffer
43	OUT3_A	O	PWM Channel 3 Output A	3.3V Capable TTL 2mA Output Buffer
47	OUT2_B	O	PWM Channel 2 Output B	3.3V Capable TTL 2mA Output Buffer
48	OUT2_A	O	PWM Channel 2 Output A	3.3V Capable TTL 2mA Output Buffer
49	OUT1_B	O	PWM Channel 1 Output B	3.3V Capable TTL 2mA Output Buffer
50	OUT1_A	O	PWM Channel 1 Output A	3.3V Capable TTL 2mA Output Buffer
51	EAPD	O	External Amplifier Power Down	3.3V Capable TTL 2mA Output Buffer
55	BICKO	O	Output I2S Serial Clock	3.3V Capable TTL 2mA Output Buffer
56	LRCKO	O	Output I2S Left/Right Clock	3.3V Capable TTL 2mA Output Buffer
57	SDO_12	O	Output I2S Serial Data Channels 1 & 2	3.3V Capable TTL 2mA Output Buffer
58	SDO_34	O	Output I2S Serial Data Channels 3 & 4	3.3V Capable TTL 2mA Output Buffer
62	SDO_56	O	Output I2S Serial Data Channels 5 & 6	3.3V Capable TTL 2mA Output Buffer
63	SDO_78	O	Output I2S Serial Data Channels 7 & 8	3.3V Capable TTL 2mA Output Buffer
64	PWDN	I	Device Powerdown	5V Tolerant TTL Schmitt Trigger Input Buffer

OCTAL BUFFER / LINE DRIVER 74HCT244

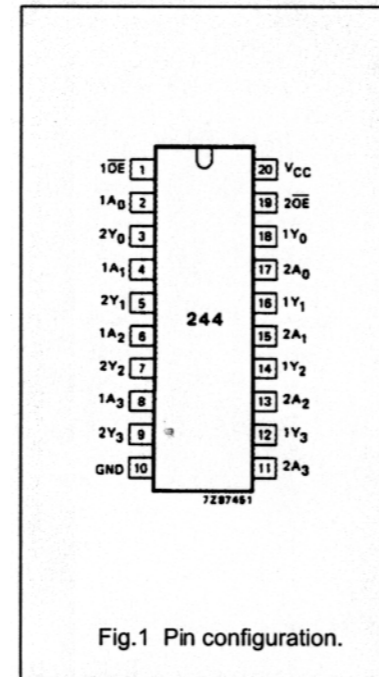


Fig.1 Pin configuration.

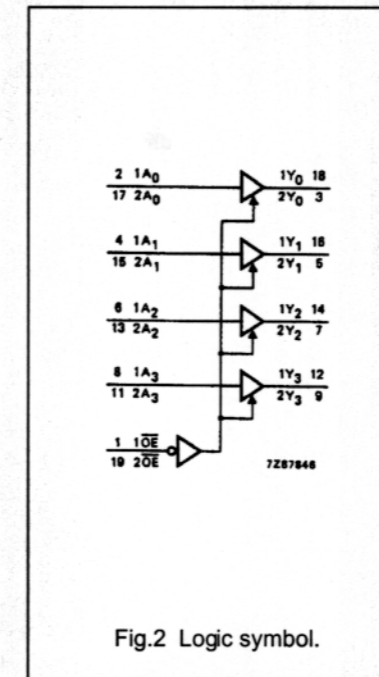


Fig.2 Logic symbol.

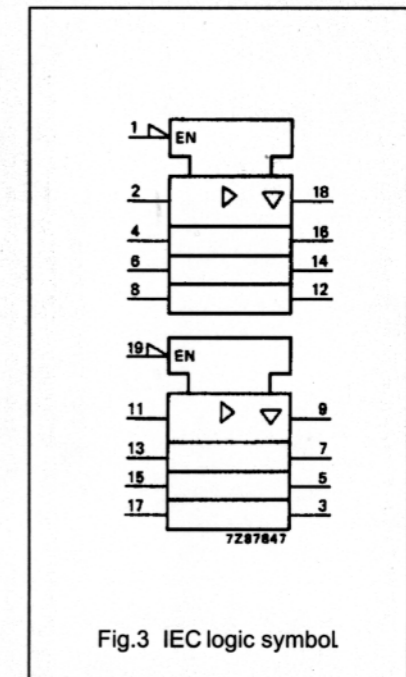


Fig.3 IEC logic symbol

PIN DESCRIPTION

PIN NO.	SYMBOL	NAME AND FUNCTION
1	$\overline{1OE}$	output enable input (active LOW)
2, 4, 6, 8	1A ₀ to 1A ₃	data inputs
3, 5, 7, 9	2Y ₀ to 2Y ₃	bus outputs
10	GND	ground (0 V)
17, 15, 13, 11	2A ₀ to 2A ₃	data inputs
18, 16, 14, 12	1Y ₀ to 1Y ₃	bus outputs
19	$\overline{2OE}$	output enable input (active LOW)
20	V _{CC}	positive supply voltage

OCTAL BUFFER / LINE DRIVER 74HCT244

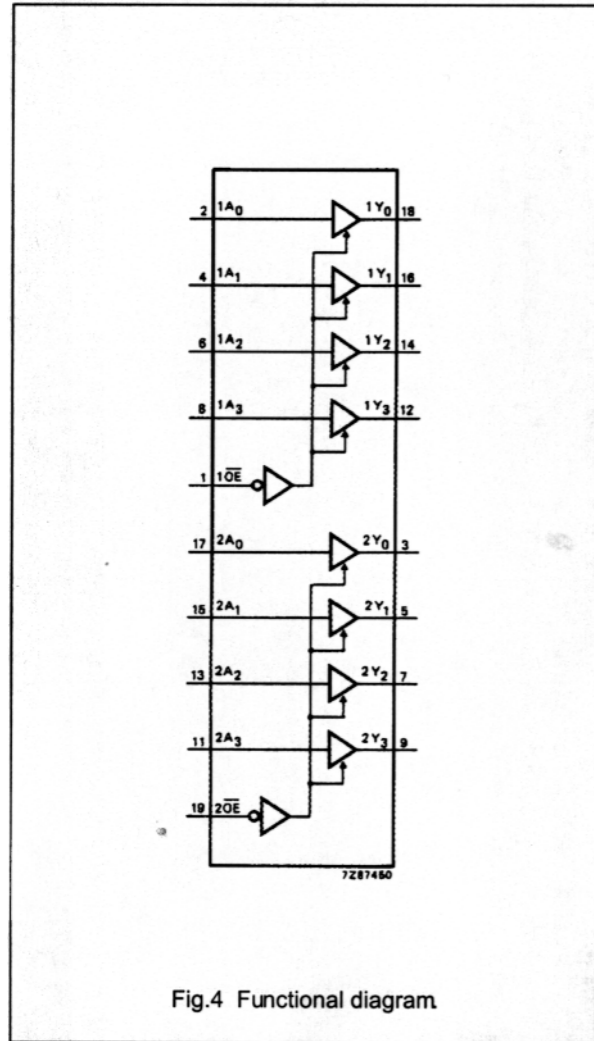


Fig.4 Functional diagram

FUNCTION TABLE


INPUTS		OUTPUT
$n\overline{OE}$	nA_n	nY_n
L	L	L
L	H	H
H	X	Z

Note


- H = HIGH voltage level
L = LOW voltage level
X = don't care
Z = high impedance OFF-state

MULTI-PURPOSE FLASH SST39SF020A

FUNCTIONAL BLOCK DIAGRAM

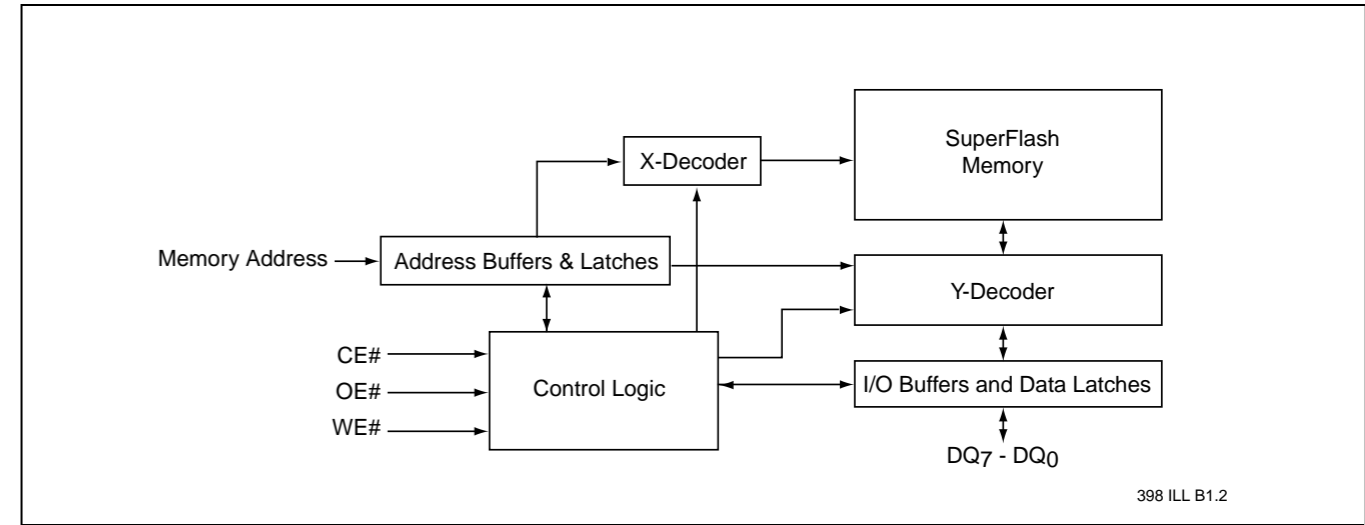

PIN ASSIGNMENTS FOR 32-PIN PDIP

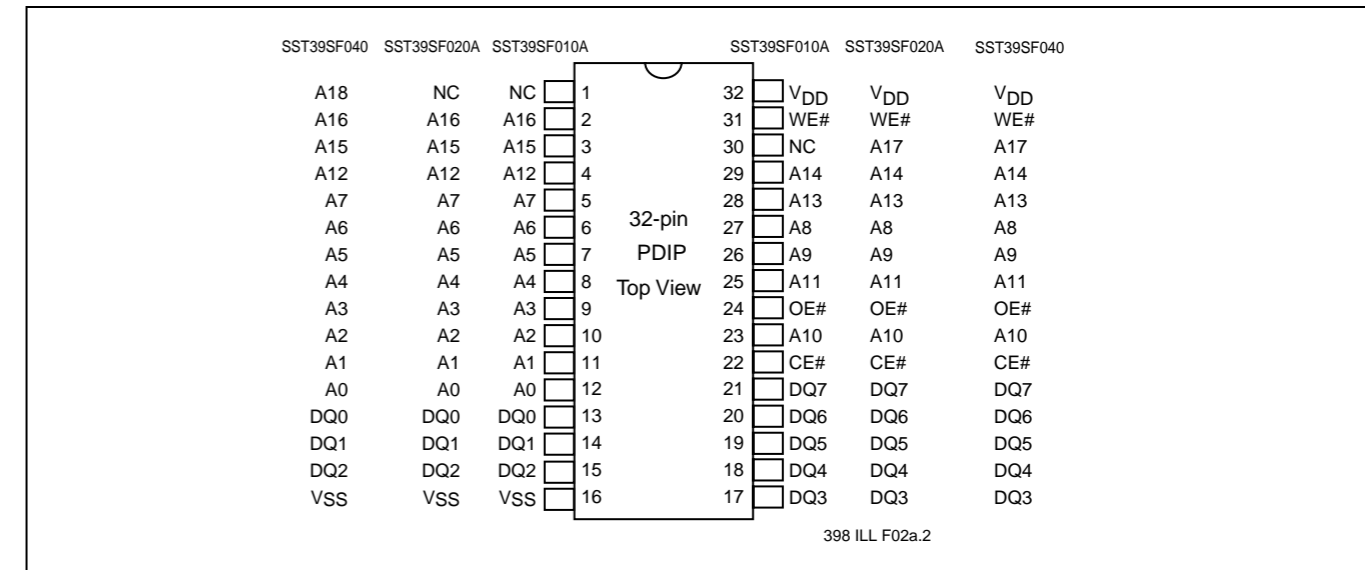


PIN DESCRIPTION

Symbol	Pin Name	Functions
$A_{MS}^1-A_0$	Address Inputs	To provide memory addresses. During Sector-Erase $A_{MS}-A_{12}$ address lines will select the sector.
DQ_7-DQ_0	Data Input/output	To output data during Read cycles and receive input data during Write cycles. Data is internally latched during a Write cycle. The outputs are in tri-state when OE# or CE# is high.
CE#	Chip Enable	To activate the device when CE# is low.
OE#	Output Enable	To gate the data output buffers.
WE#	Write Enable	To control the Write operations.
V _{DD}	Power Supply	To provide 5.0V supply (4.5-5.5V)
V _{SS}	Ground	
NC	No Connection	Unconnected pins.


1. A_{MS} = Most significant address
 A_{MS} = A₁₆ for SST39SF010A, A₁₇ for SST39SF020A, and A₁₈ for SST39SF040

CIRCUIT DIAGRAM (TOP LEFT)

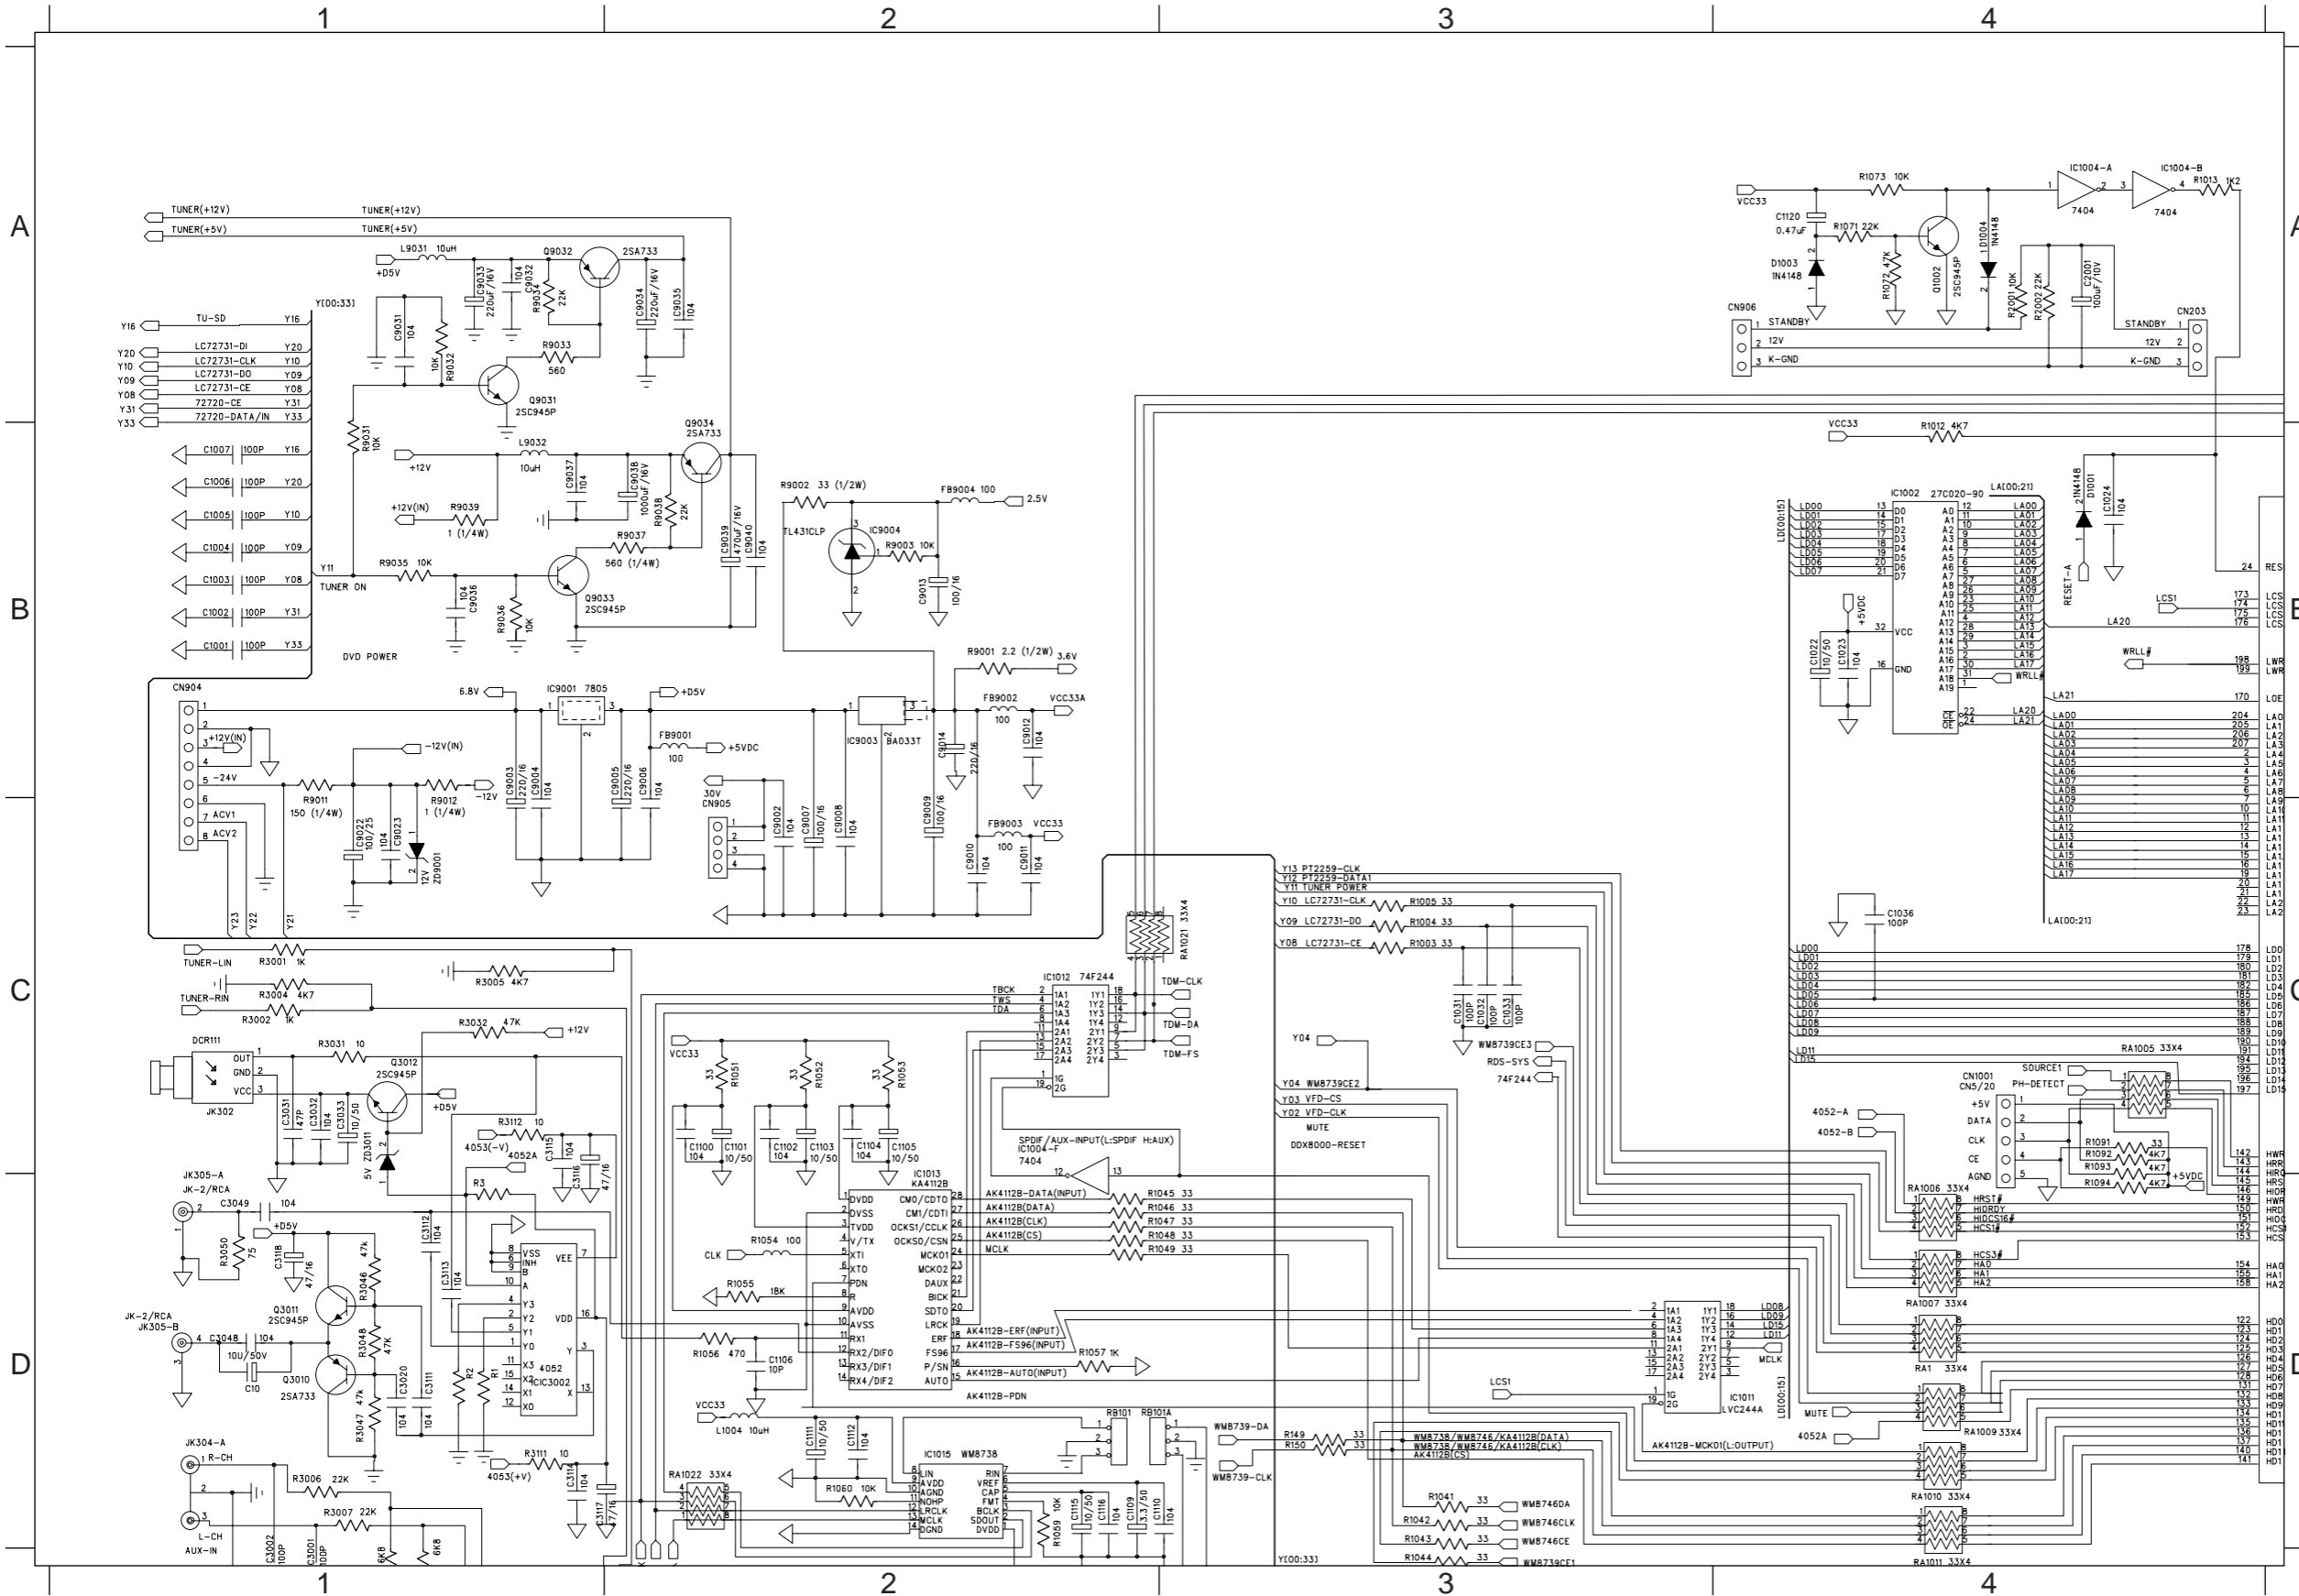


C10	D1	Q9034	B2
C1001	A1	R1	D1
C1002	A1	R2	D1
C1003	A1	R3	D1
C1004	A1	R149	D3
C1005	A1	R150	D3
C1006	A1	R1003	C3
C1007	A1	R1004	C3
C1022	B4	R1005	C3
C1023	B4	R1012	B4
C1024	B4	R1013	A4
C1031	C3	R1041	D3
C1032	C3	R1042	D3
C1033	C3	R1043	D3
C1036	C4	R1045	C3
C1100	B2	R1046	C3
C1101	B2	R1047	C3
C1102	B2	R1048	C3
C1103	B2	R1049	C3
C1104	B2	R1051	B2
C1105	B2	R1052	B2
C1106	D2	R1053	B2
C1109	D2	R1054	D2
C1110	D2	R1055	D2
C1111	D2	R1056	D2
C1112	D2	R1057	D2
C1115	D2	R1059	D2
C1116	D2	R1060	D2
C1120	A4	R1071	A4
C2001	A4	R1072	A4
C3020	D1	R1073	A4
C3031	C1	R1091	C4
C3032	C1	R1092	C4
C3033	C1	R1093	C4
C3048	D1	R1094	D4
C3049	D1	R2001	A4
C3111	D1	R2002	A4
C3112	D1	R3001	C1
C3113	D1	R3002	C1
C3114	D1	R3004	C1
C3115	C1	R3005	C1
C3116	D1	R3006	D1
C3117	D1	R3007	D1
C3118	D1	R3031	C1
C9002	C2	R3032	C1
C9003	B1	R3046	D1
C9004	B1	R3047	D1
C9005	B2	R3048	D1
C9006	B2	R3050	D1
C9007	C2	R3111	D1
C9008	C2	R3112	C1
C9009	C2	R9001	B2
C9010	C2	R9002	B2
C9011	C2	R9003	B2
C9012	B2	R9011	C1
C9013	B2	R9012	C1
C9014	B2	R9031	B1
C9022	C1	R9032	A1
C9023	C1	R9033	A1
C9031	A1	R9034	A1
C9032	A1	R9035	B1
C9033	A1	R9036	B1
C9034	A2	R9037	B2
C9035	A2	R9038	B2
C9036	B1	R9039	B1
C9037	B1	RA1	D4
C9038	B2	RA1005	C4
C9039	B2	RA1006	D4
C9040	B2	RA1007	D4
CN203	A4	RA1009	D4
CN904	C1	RA1010	D4
CN905	C2	RA1021	C3
CN906	A4	RA1022	D2
CN1001	C4	RA1011	D2
D1001	B4	RB101A	D2
D1003	A4	ZD3001	C1
D1004	A4	ZD9001	C1
FB9001	B2		
FB9002	B2		
FB9003	B2		
FB9004	B2		
IC1002	A4		
IC1004-A	A4		
IC1004-B	A4		
IC1004-F	C2		
IC1011	D4		
IC1012	B2		
IC1013	D2		
IC1015	D2		
IC13002	D1		
IC9001	B1		
IC9003	B2		
IC9004	B2		
JK302	C1		
JK304-A	D1		
JK305-A	D1		
JK305-B	D1		
L1004	D2		
L9032	B1		
Q1002	A4		
Q3010	D1		
Q3011	D1		
Q3012	C1		
Q9031	A1		
Q9032	A1		
Q9033	B1		

CIRCUIT DIAGRAM (TOP RIGHT)

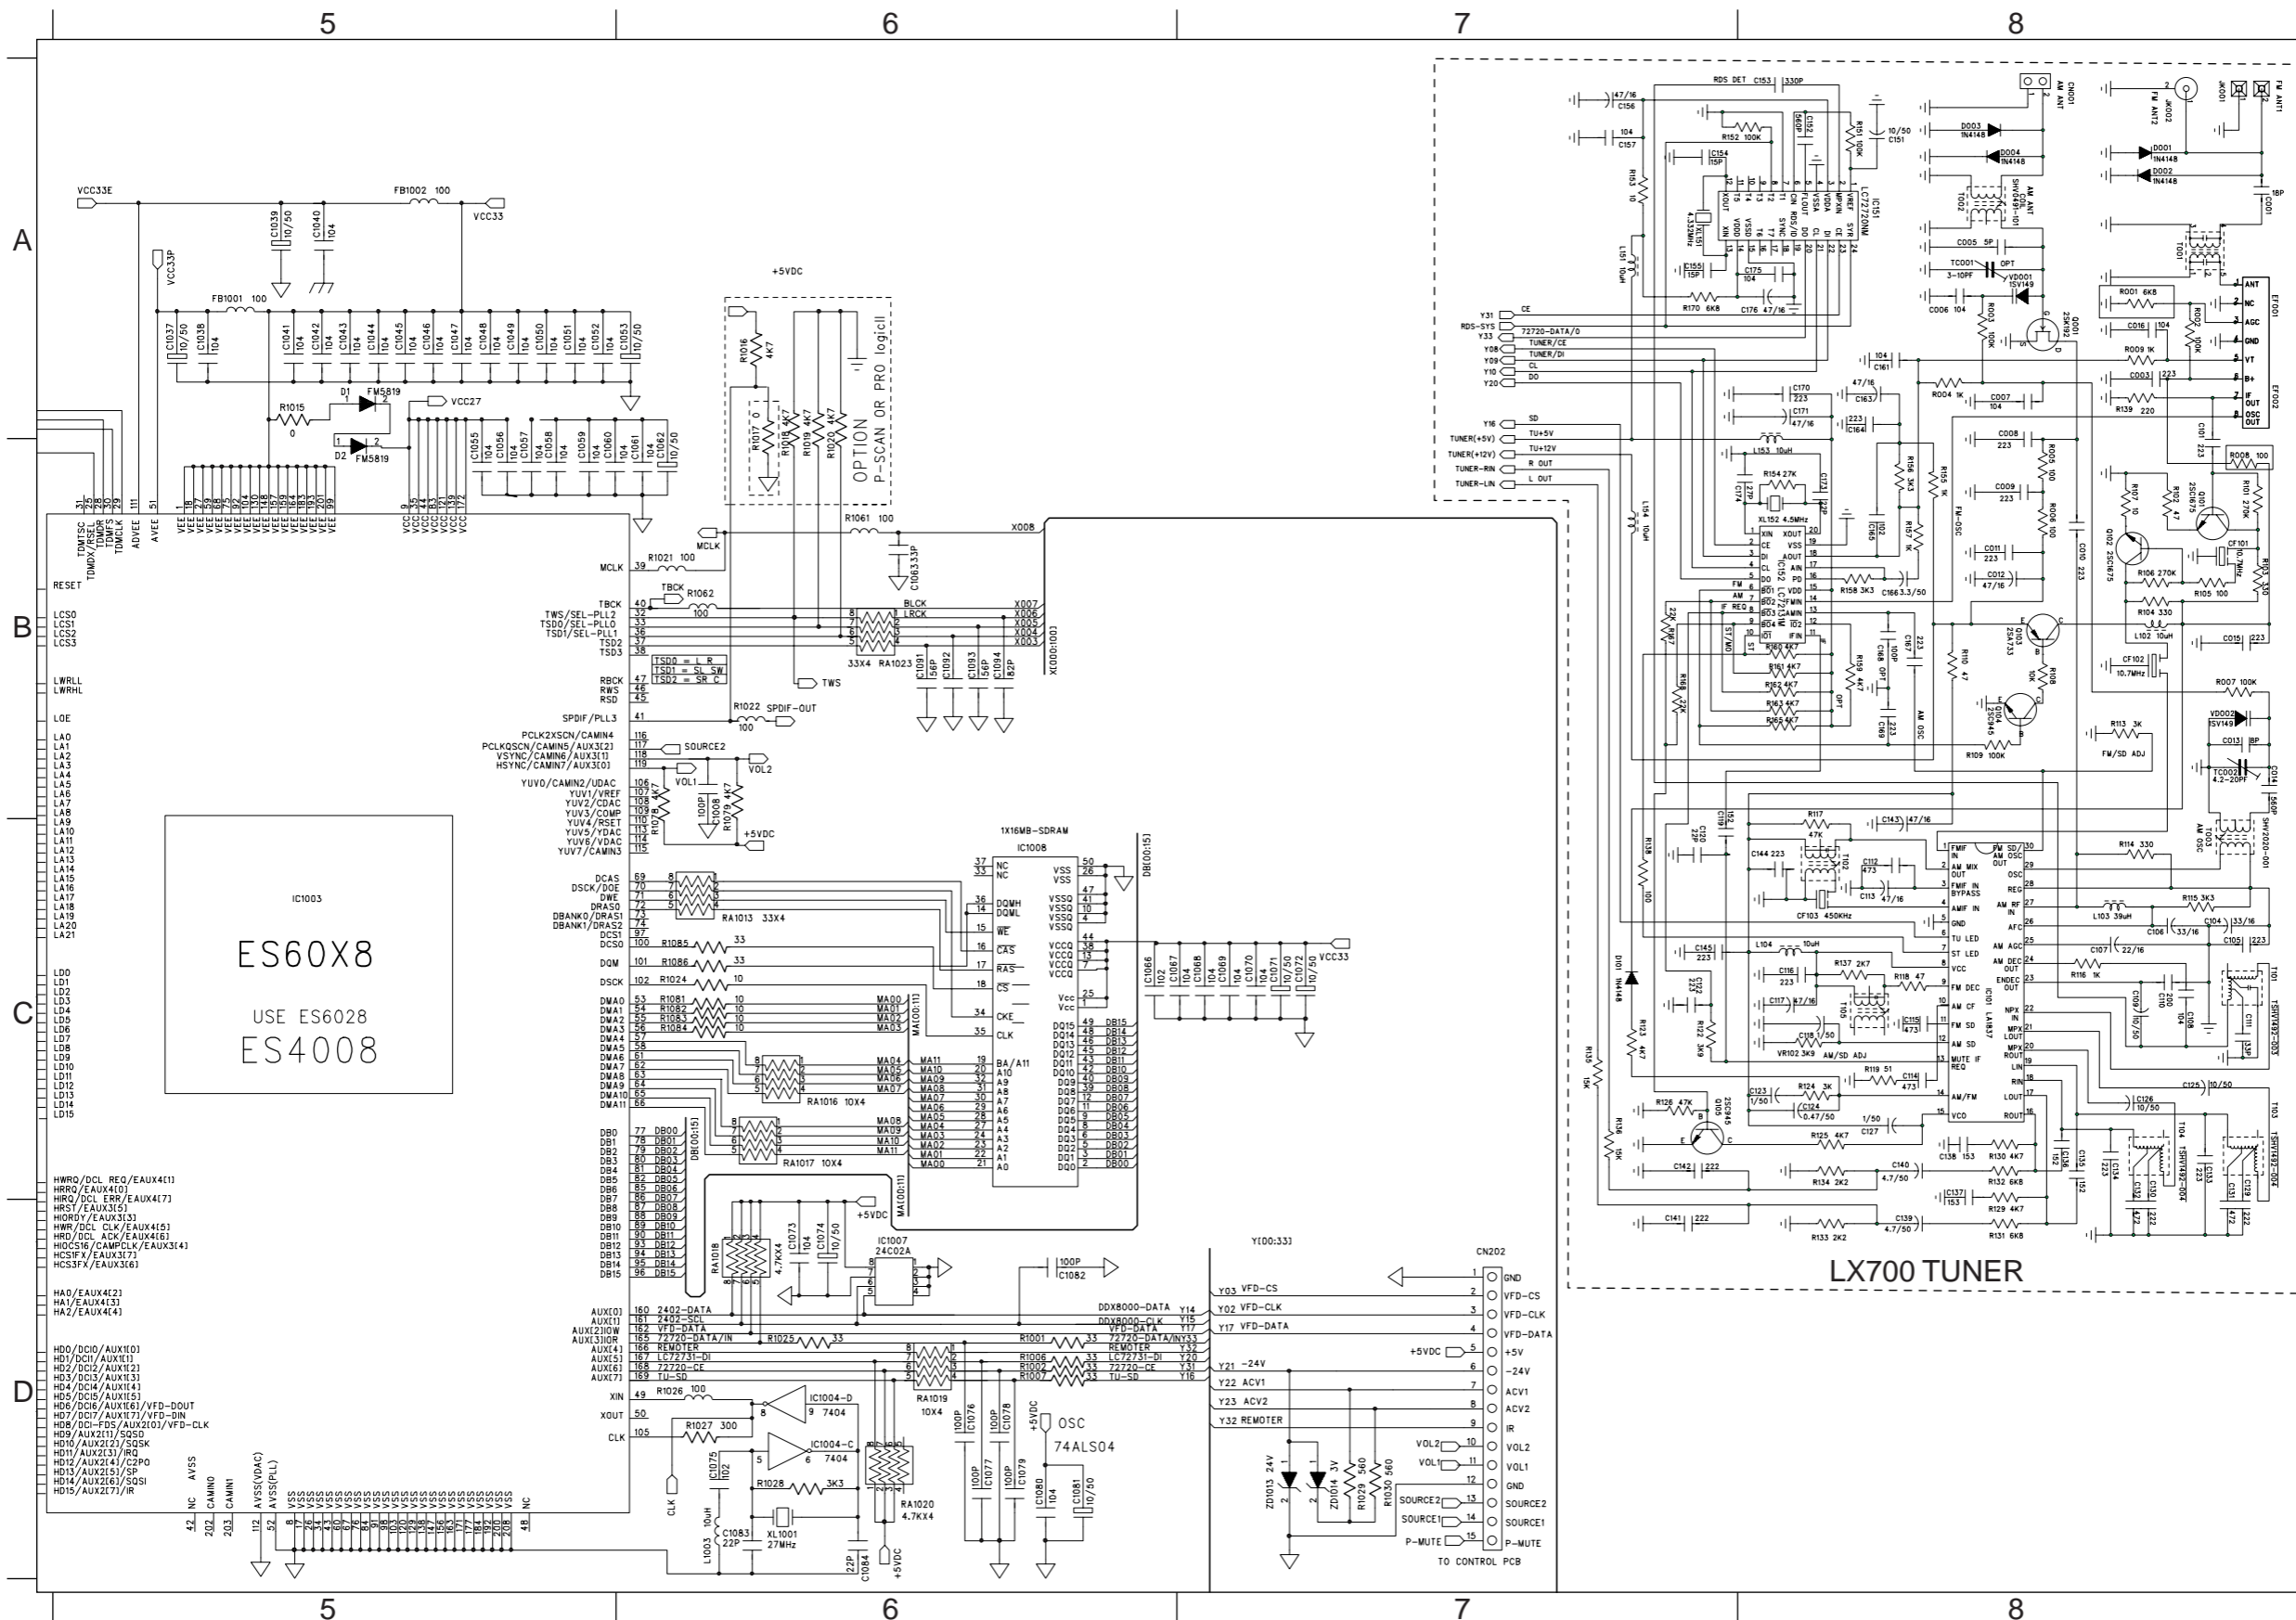


C001	A8	C1075	D6	R167	B7
C003	A8	C1076	D6	R168	B7
C005	A8	C1077	D6	R170	A7
C006	A8	C1078	D6	R1001	D6
C007	A8	C1079	D6	R1002	D6
C008	A8	C1080	D6	R1006	D6
C009	B8	C1081	D6	R1007	D6
C010	B8	C1082	D6	R1015	A5
C011	B8	C1083	D6	R1016	A6
C012	B8	C1084	D6	R1017	A6
C013	B8	C1091	B6	R1018	A6
C014	B8	C1092	B6	R1019	A6
C015	B8	C1093	B6	R1020	A6
C016	A8	C1094	B6	R1021	B6
C104	A8	CF101	B8	R1022	B6
C105	C8	CF102	B8	R1024	C6
C106	C8	CF103	C8	R1025	C6
C107	C8	CF104	A8	R1026	D6
C108	C8	CF105	D7	R1027	D6
C109	C8	D1	A5	R1028	D6
C110	C8	D2	A5	R1029	D7
C111	C8	D001	A8	R1030	D7
C112	C8	D002	A8	R1061	B6
C113	C8	D003	A8	R1062	B6
C114	C8	D004	A8	R1078	B6
C115	C8	D101	C7	R1079	B6
C116	C8	EF001	A8	R1081	C6
C117	C8	EF002	A8	R1082	C6
C118	C8	FB1001	A5	R1083	C6
C119	C7	IC101	C8	R1085	C6
C120	C7	IC151	A8	R1086	C6
C121	C7	IC152	B8	RA1013	C6
C122	C8	IC1003	C5	RA1016	C6
C123	C8	IC1004	D6	RA1017	C6
C124	C8	IC1004-C	D6	RA1018	D6
C125	C8	IC1004-D	D6	RA1019	D6
C126	C8	IC1007	C6	RA1020	D6
C127	C8	IC1008	C6	RA1021	D6
C128	C8	JK001	A8	RA1023	B6
C129	C8	JK002	A8	TO01	A8
C130	C8	L102	B8	TO02	A8
C131	C8	L103	C8	TO03	C8
C132	C8	L104	C8	T101	C8
C133	C8	L105	A7	T102	C8
C134	C8	L151	B8	T103	C8
C135	C8	L152	B7	T104	C8
C136	C8	L153	D6	T105	C8
C137	C8	L154	B7	TC001	A8
C138	C8	L1003	A8	TC002	B8
C139	D8	Q001	B8	VD001	A8
C140	C8	Q101	B8	VD002	B8
C141	D7	Q102	B8	XL101	D7
C142	C7	Q103	B8	ZD1013	D7
C143	B8	Q104	B8	ZD1014	D7
C144	C8	Q105	C7		
C145	C7	RO01	A8		
C151	A8	RO02	A8		
C152	A8	RO03	A8		
C153	A8	RO04	A8		
C154	A7	RO05	B8		
C155	A7	RO06	B8		
C156	A7	RO07	B8		
C157	A7	RO08	B8		
C161	A8	RO09	A8		
C163	A8	RO10	B8		
C164	A8	RO13	B8		
C165	B8	RO14	B8		
C166	B8	RO15	B8		
C167	B8	RO16	B8		
C168	B8	RO17	B8		
C169	B8	RO18	B8		
C170	A8	RO19	B8		
C171	A8	RO110	B8		
C173	B8	RO113	B8		
C174	B8	RO114	C8		
C175	A8	RO115	C8		
C176	A8	RO116	C8		
C1008	B6	RO117	C8		
C1037	A5	RO118	C8		
C1038	A5	RO119	C8		
C1039	A5	RO122	C7		
C1040	A5	RO123	C7		
C1041	A5	RO124	C8		
C1042	A5	RO125	C8		
C1043	A5	RO126	C7		
C1044	A5	RO129	D8		
C1045	A5	RO130	C8		
C1046	A5	RO131	D8		
C1047	A5	RO132	C8		
C1048	A5	RO133	D8		
C1049	A5	RO134	C8		
C1050	A5	RO135	C7		
C1051	A5	RO136	C7		
C1052	A5	RO137	C8		
C1055	A5	RO138	C7		
C1056	A5	RO139	A8		
C1057	A5	RO151	A8		
C1058	A5	RO152	A7		
C1059	A5	RO153	A7		
C1060	A5	RO154	B8		
C1063	B6	RO155	B8		
C1066	C6	RO156	B8		
C1067	C6	RO157	B8		
C1068	C7	RO158	B8		
C1069	C7	RO159	B8		
C1070	C7	RO160	B8		
C1071	C7	RO161	B8		
C1072	C7	RO162	B8		
C1073	D6	RO163	B8		
C1074	D6	RO165	B8		

CIRCUIT DIAGRAM (BOTTOM LEFT)

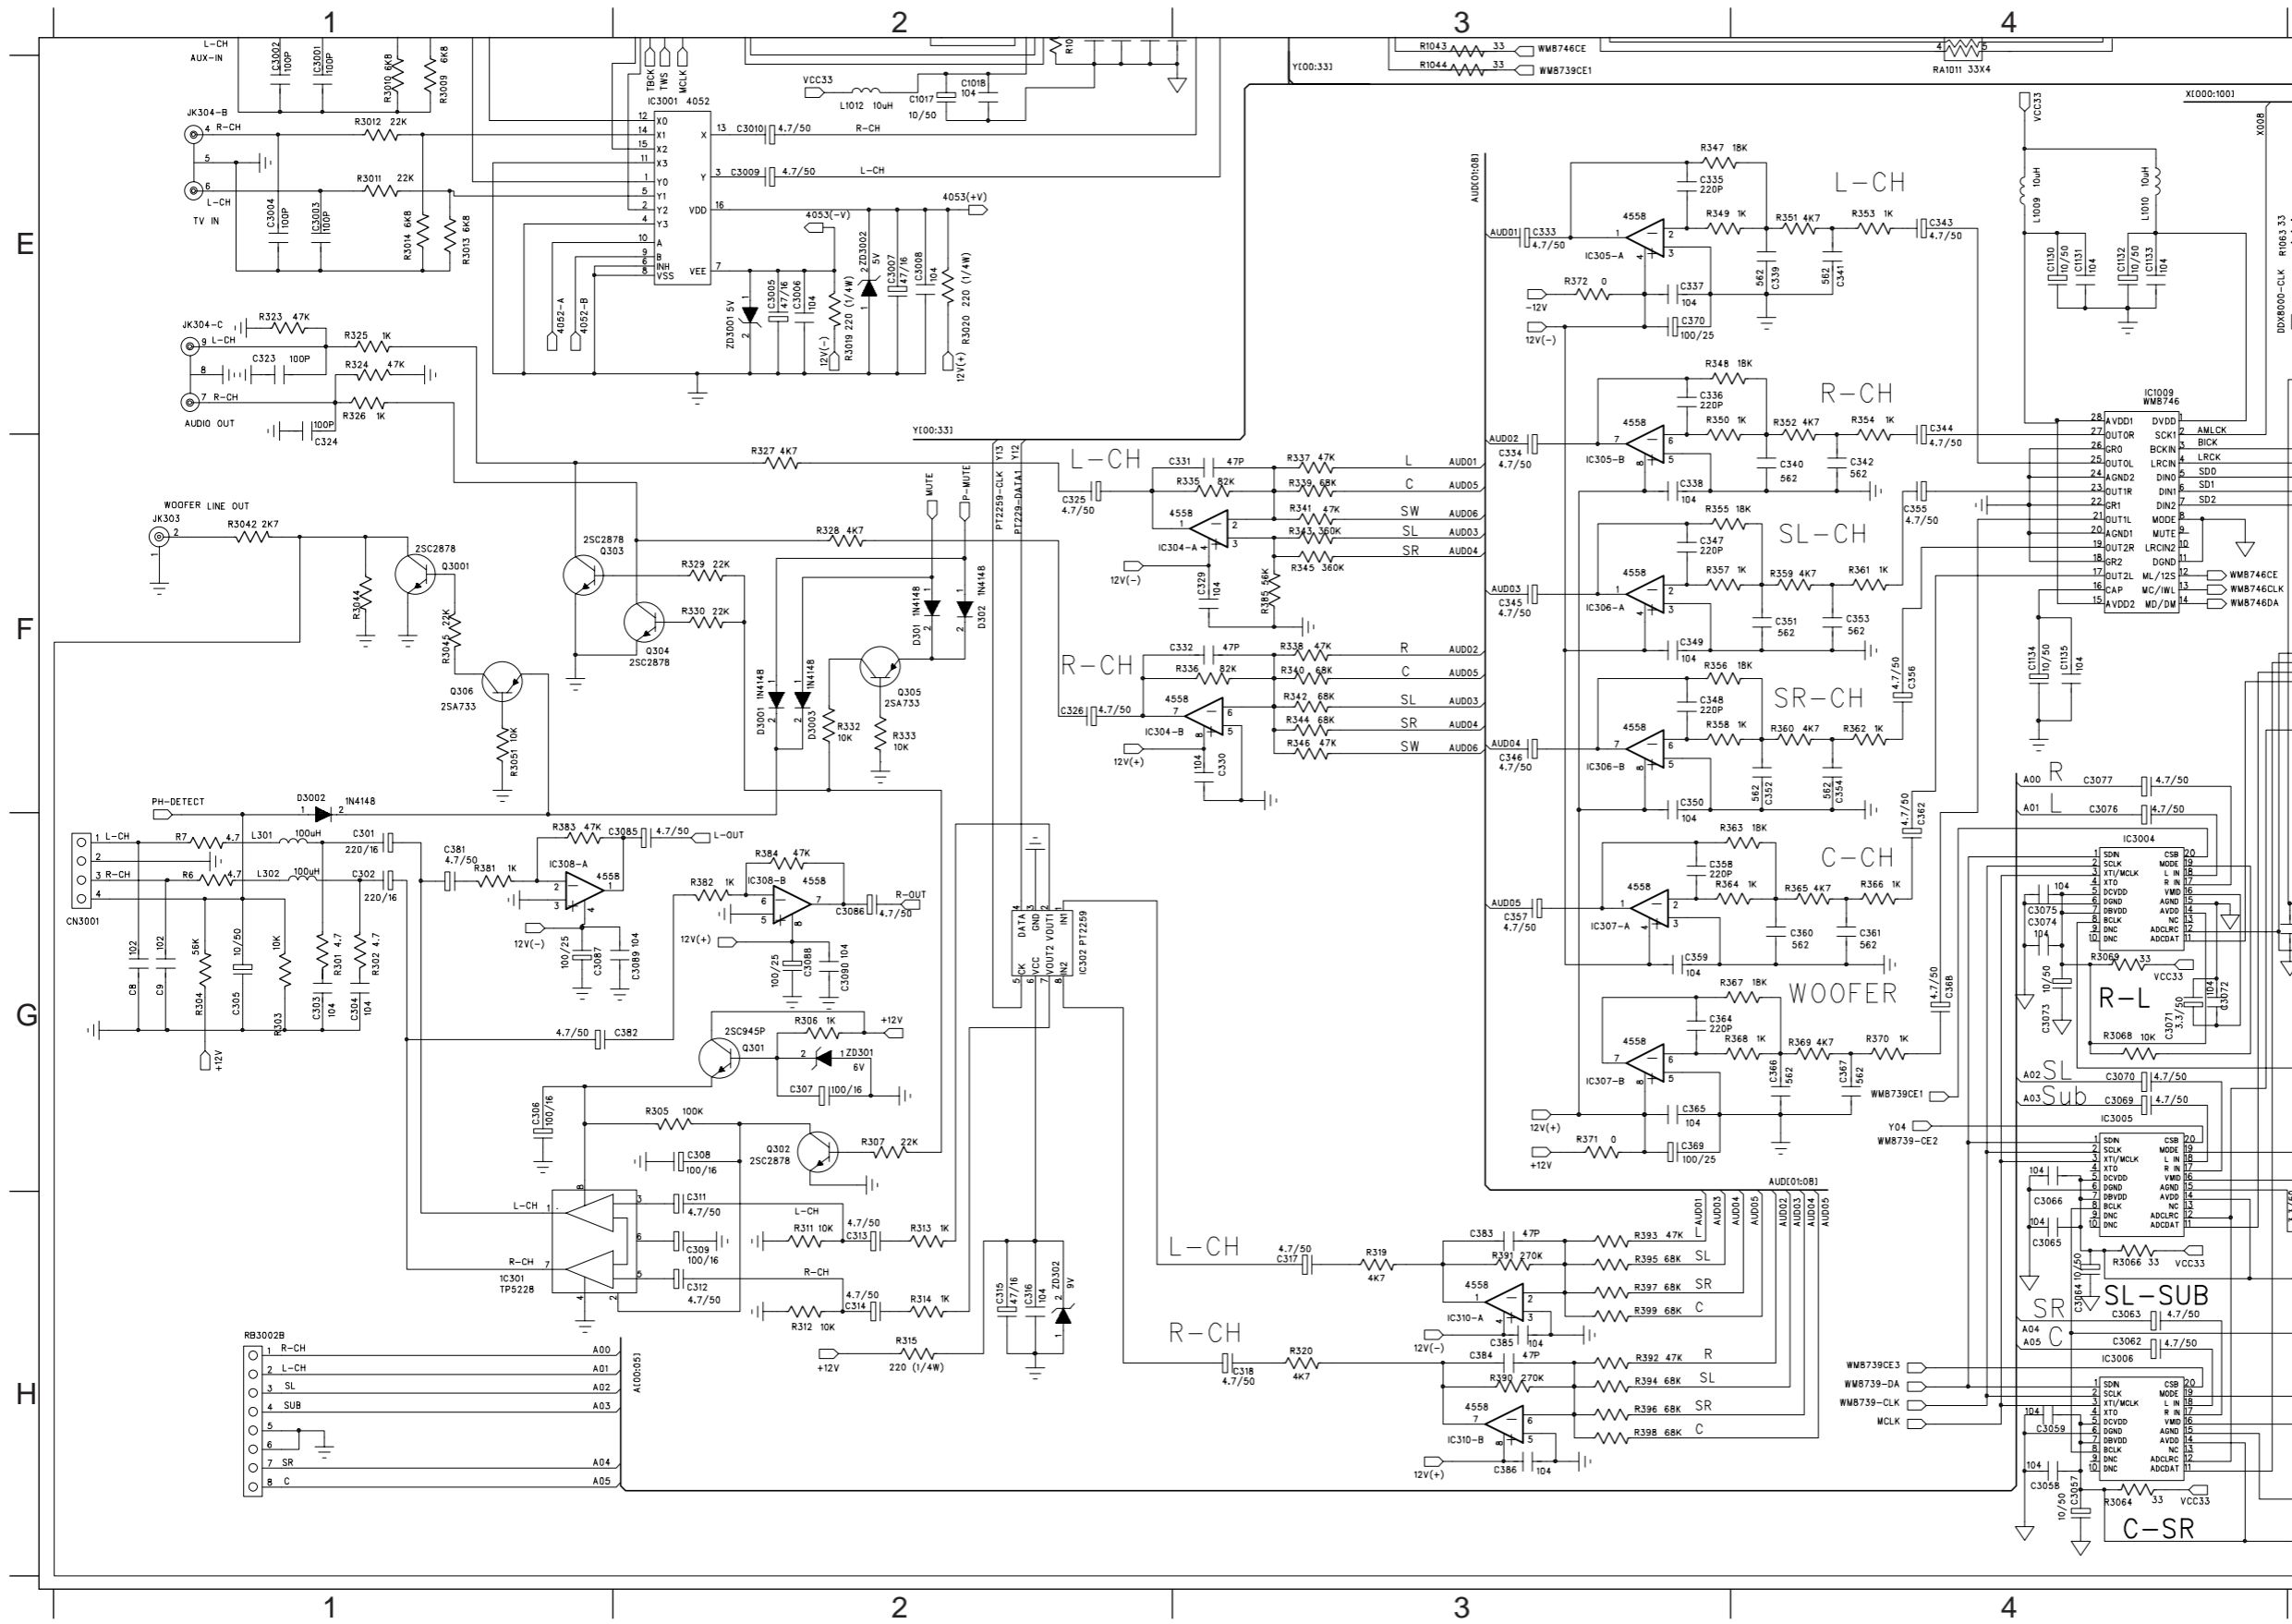


C301	G1	CN3001	G1	R391	H3
C302	G1	D301	F2	R392	H3
C303	G1	D302	F2	R393	H3
C304	G1	D3001	F2	R394	H3
C305	G1	D3002	F2	R395	H3
C306	G1	D3003	F2	R396	H3
C307	G2	IC301	G1	R397	H3
C308	G2	IC302	G2	R398	H3
C309	G2	IC304-A	F3	R399	H3
C311	G2	IC304-B	F3	R1044	E3
C312	G2	IC305-A	E3	R1063	E4
C313	G2	IC305-B	F3	R3009	E1
C314	G2	IC306-A	F3	R3010	E1
C315	G2	IC306-B	F3	R3011	E1
C316	G2	IC307-A	G3	R3012	E1
C317	H3	IC307-B	G3	R3013	E1
C318	H3	IC308-A	G1	R3014	E1
C323	E1	IC308-B	H2	R3019	E2
C324	F1	IC310-A	H3	R3020	E2
C325	F2	IC1009	E4	R3042	F1
C329	F3	IC3001	E2	R3045	F1
C330	F3	IC3004	G4	R3051	F1
C331	F3	IC3005	H4	R3064	H4
C332	F3	JK303	F3	R3066	H4
C333	F3	JK304-B	E1	R3068	G4
C334	E3	JK304-C	E1	R3069	G4
C335	E3	L301	G1	RA1011	E4
C336	E3	L302	G1	RB3002B	G1
C337	E3	L1009	E4	ZD301	G2
C338	F3	L1010	E4	ZD302	G2
C339	E4	L1012	E2	ZD3001	E2
C340	E4	Q301	G2	ZD3002	E2
C341	F4	Q302	G2		
C342	F4	Q303	F2		
C343	E4	Q304	F2		
C344	E4	Q305	F2		
C345	F3	Q306	F1		
C346	F3	Q3001	G1		
C347	F3	R6	G1		
C348	F3	R7	G1		
C349	F3	R301	G1		
C350	F3	R302	G1		
C351	F4	R303	G1		
C352	F4	R304	G2		
C353	F4	R305	G1		
C354	F4	R306	G2		
C355	F4	R307	G2		
C356	F4	R311	G2		
C357	G3	R312	G2		
C358	G3	R313	G2		
C359	G3	R314	G2		
C360	G4	R315	G2		
C361	G4	R319	H3		
C362	F4	R320	H3		
C364	G3	R323	E1		
C365	G3	R324	E1		
C366	G4	R325	E1		
C367	G4	R326	E1		
C368	G4	R327	F2		
C369	G3	R328	F2		
C370	E3	R329	F2		
C381	G1	R330	F2		
C382	G2	R332	F2		
C383	H3	R333	F2		
C384	H3	R335	F3		
C385	H3	R336	F3		
C386	H3	R337	F3		
C1130	E4	R338	F3		
C1131	E4	R339	F3		
C1132	E4	R340	F3		
C1133	E4	R341	F3		
C1134	F4	R342	F2		
C1135	F4	R343	F2		
C3001	E1	R344	F2		
C3002	E1	R345	F2		
C3003	E1	R346	F2		
C3004	E1	R347	E3		
C3005	E2	R348	E3		
C3006	E2	R349	E3		
C3007	E2	R350	E3		
C3008	E2	R351	E4		
C3009	E2	R352	E4		
C3010	E2	R353	E4		
C1017	E2	R354	E4		
C1018	E2	R355	F4		
C3057	H4	R356	F3		
C3058	H4	R357	F3		
C3059	H4	R358	F3		
C3060	H4	R359	F4		
C3061	H4	R360	F4		
C3062	H4	R361	F4		
C3063	H4	R362	F4		
C3064	H4	R363	G3		
C3065	H4	R364	G3		
C3066	H4	R365	G3		
C3067	H4	R366	G4		
C3068	H4	R367	G4		
C3069	H4	R368	G4		
C3070	G4	R369	G4		
C3071	G4	R370	G4		
C3072	G4	R371	G3		
C3073	G4	R372	G3		
C3074	G4	R373	G4		
C3075	G4	R374	G4		
C3076	F4	R375	E3		
C3077	F4	R376	E3		
C3078	G2	R377	G1		
C3079	G2	R378	G1		
C3080	G2	R379	G2		
C3081	G2	R380	G2		
C3082	G2	R381	G1		
C3083	G1	R382	G1		
C3084	G2	R383	G2		
C3085	G2	R384	G2		
C3086	G2	R385	F2		
C3087	G1	R386	H3		
C3088	G2	R387	H3		
C3089	G2	R388	H3		
C3090	G2	R389	H3		

CIRCUIT DIAGRAM (BOTTOM RIGHT)

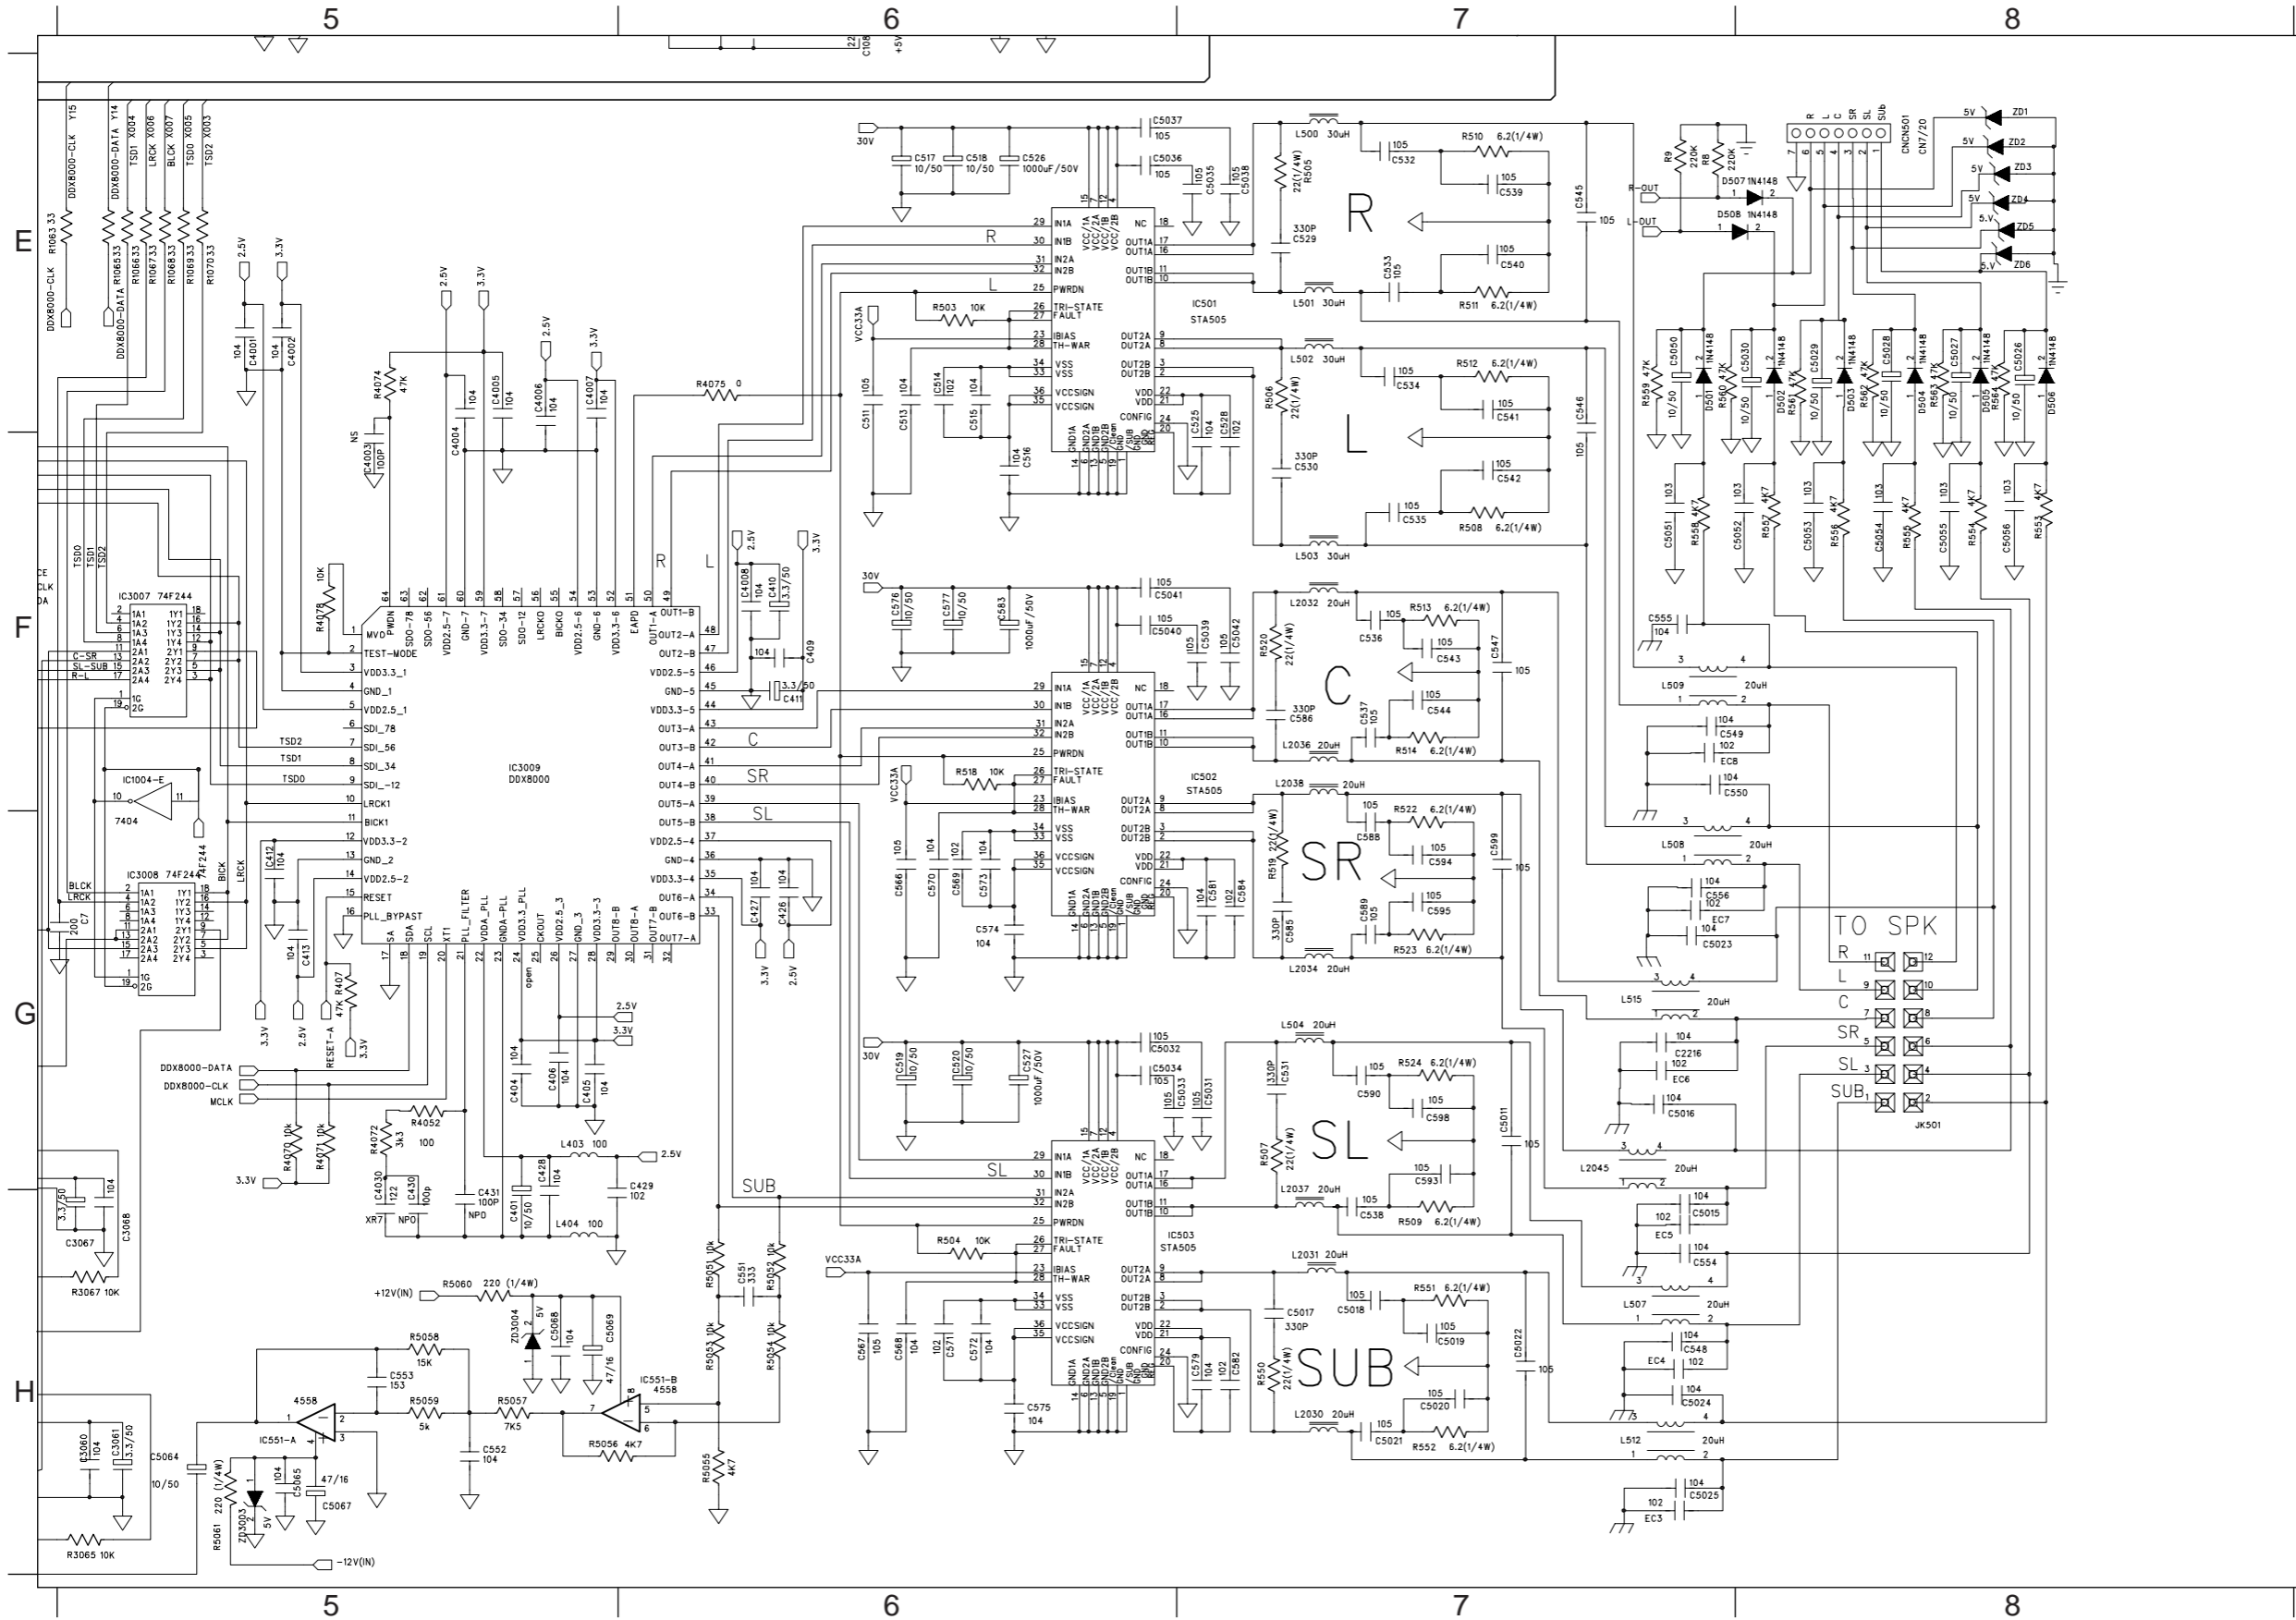

C401	H5	C5026	E8	R1065	E5
C404	G5	C5027	E8	R1066	E5
C405	G5	C5028	E8	R1067	E5
C406	G5	C5029	E8	R1068	E5
C409	F6	C5030	E8	R1069	E5
C410	F6	C5031	G7	R1070	E5
C411	F6	C5032	G6	R3065	H5
C412	G5	C5033	G7	R3067	H5
C413	G5	C5034	G6	R4070	G5
C426	G6	C5035	E7	R4071	G5
C427	G6	C5036	E7	R4072	G5
C428	G5	C5037	E6	R4074	E5
C429	G6	C5038	E7	R4075	E6
C430	G5	C5039	F7	R4078	F5
C431	H5	C5040	F6	R5011	H6
C511	E6	C5041	F6	R5052	G5
C513	E6	C5042	F7	R5053	H6
C514	E6	C5050	E7	R5054	H6
C515	E6	C5051	F7	R5055	H6
C516	F6	C5052	F8	R5056	H5
C517	E6	C5053	F8	R5057	H5
C518	E6	C5054	F8	R5058	H5
C519	G6	C5055	F8	R5059	H5
C520	G6	C5056	F8	R5060	H5
C525	E7	C5064	H5	R5061	H5
C526	E6	C5065	H5	ZD1	E8
C527	G6	C5067	H5	ZD2	E8
C528	E7	C5068	H5	ZD3	E8
C529	E7	C5069	H5	ZD4	E8
C530	F7	C5071	F5	ZD5	E8
C531	G7	D502	E8	ZD6	E8
C532	E7	D503	E8	ZD3003	H5
C533	E7	D504	E8	ZD3004	H5
C534	E7	D505	E8		
C535	F7	D506	E8		
C536	F7	D507	E7		
C537	F7	D508	E7		
C538	H7	EC3	H7		
C539	E7	EC4	H7		
C540	E7	EC5	H7		
C541	E7	EC6	G7		
C542	F7	EC7	G7		
C543	F7	EC8	F7		
C544	E7	IC501	E7		
C545	E7	IC502	F7		
C546	E7	IC503	H6		
C547	F7	IC551-A	H5		
C548	H7	IC551-B	H6		
C549	F7	IC1004-E	F5		
C550	F7	IC3007	F5		
C551	H6	IC3008	G5		
C552	H5	IC3009	F5		
C553	H5	JK501	G8		
C554	H7	L403	G5		
C555	F7	L404	H5		
C556	G7	L500	E7		
C557	G6	L501	E7		
C558	H6	L502	E7		
C559	H6	L503	F7		
C560	G6	L504	G7		
C561	G6	L507	H7		
C562	H6	L508	G7		
C563	G6	L512	H7		
C564	G6	L515	G7		
C565	H6	L2030	H7		
C566	F6	L2031	H7		
C567	F6	L2032	F7		
C568	H7	L2034	G7		
C569	G7	L2036	F7		
C570	H7	L2037	F7		
C571	F6	L2038	F7		
C572	G7	L2045	G8		
C573	G7	R9	E7		
C574	G6	R407	G5		
C575	G7	R503	E6		
C576	G7	R504	H6		
C577	G7	R505	E7		
C578	G7	R506	E7		
C579	G7	R507	G7		
C580	G7	R508	F7		
C581	G7	R509	H7		
C582	H7	R510	E7		
C583	F6	R511	E7		
C584	G7	R512	E7		
C585	G7	R513	F7		
C586	G7	R514	F7		
C587	G7	R515	F6		
C588	G7	R519	G7		
C589	G7	R522	F7		
C590	G7	R524	G7		
C591	G7	R525	G7		
C592	F5	R527	F7		
C593	F5	R528	G7		
C594	F5	R529	H7		
C595	F5	R530	H7		
C596	F5	R531	H7		
C597	F5	R532	H7		
C598	F5	R533	H7		
C599	F5	R534	H7		
C600	F5	R535	H7		
C601	F5	R536	H7		
C602	F5	R537	H7		
C603	F5	R538	H7		
C604	F5	R539	H7		
C605	F5	R540	H7		
C606	F5	R541	H7		
C607	F5	R542	H7		
C608	F5	R543	H7		
C609	F5	R544	H7		
C610	F5	R545	H7		
C611	F5	R546	H7		
C612	F5	R547	H7		
C613	F5	R548	H7		
C614	F5	R549	H7		
C615	F5	R550	H7		
C616	F5	R551	H7		
C617	F5	R552	H7		
C618	F5	R553	H7		
C619	F5	R554	H7		
C620	F5	R555	H7		
C621	F5	R556	H7		
C622	F5	R557	H7		
C623	F5	R558	H7		
C624	F5	R559	H7		
C625	F5	R560	H7		
C626	F5	R561	H7		
C627	F5	R562	H7		
C628	F5	R563	H7		
C629	F5	R564	H7		


PCB LAYOUT (COMPONENT VIEW)

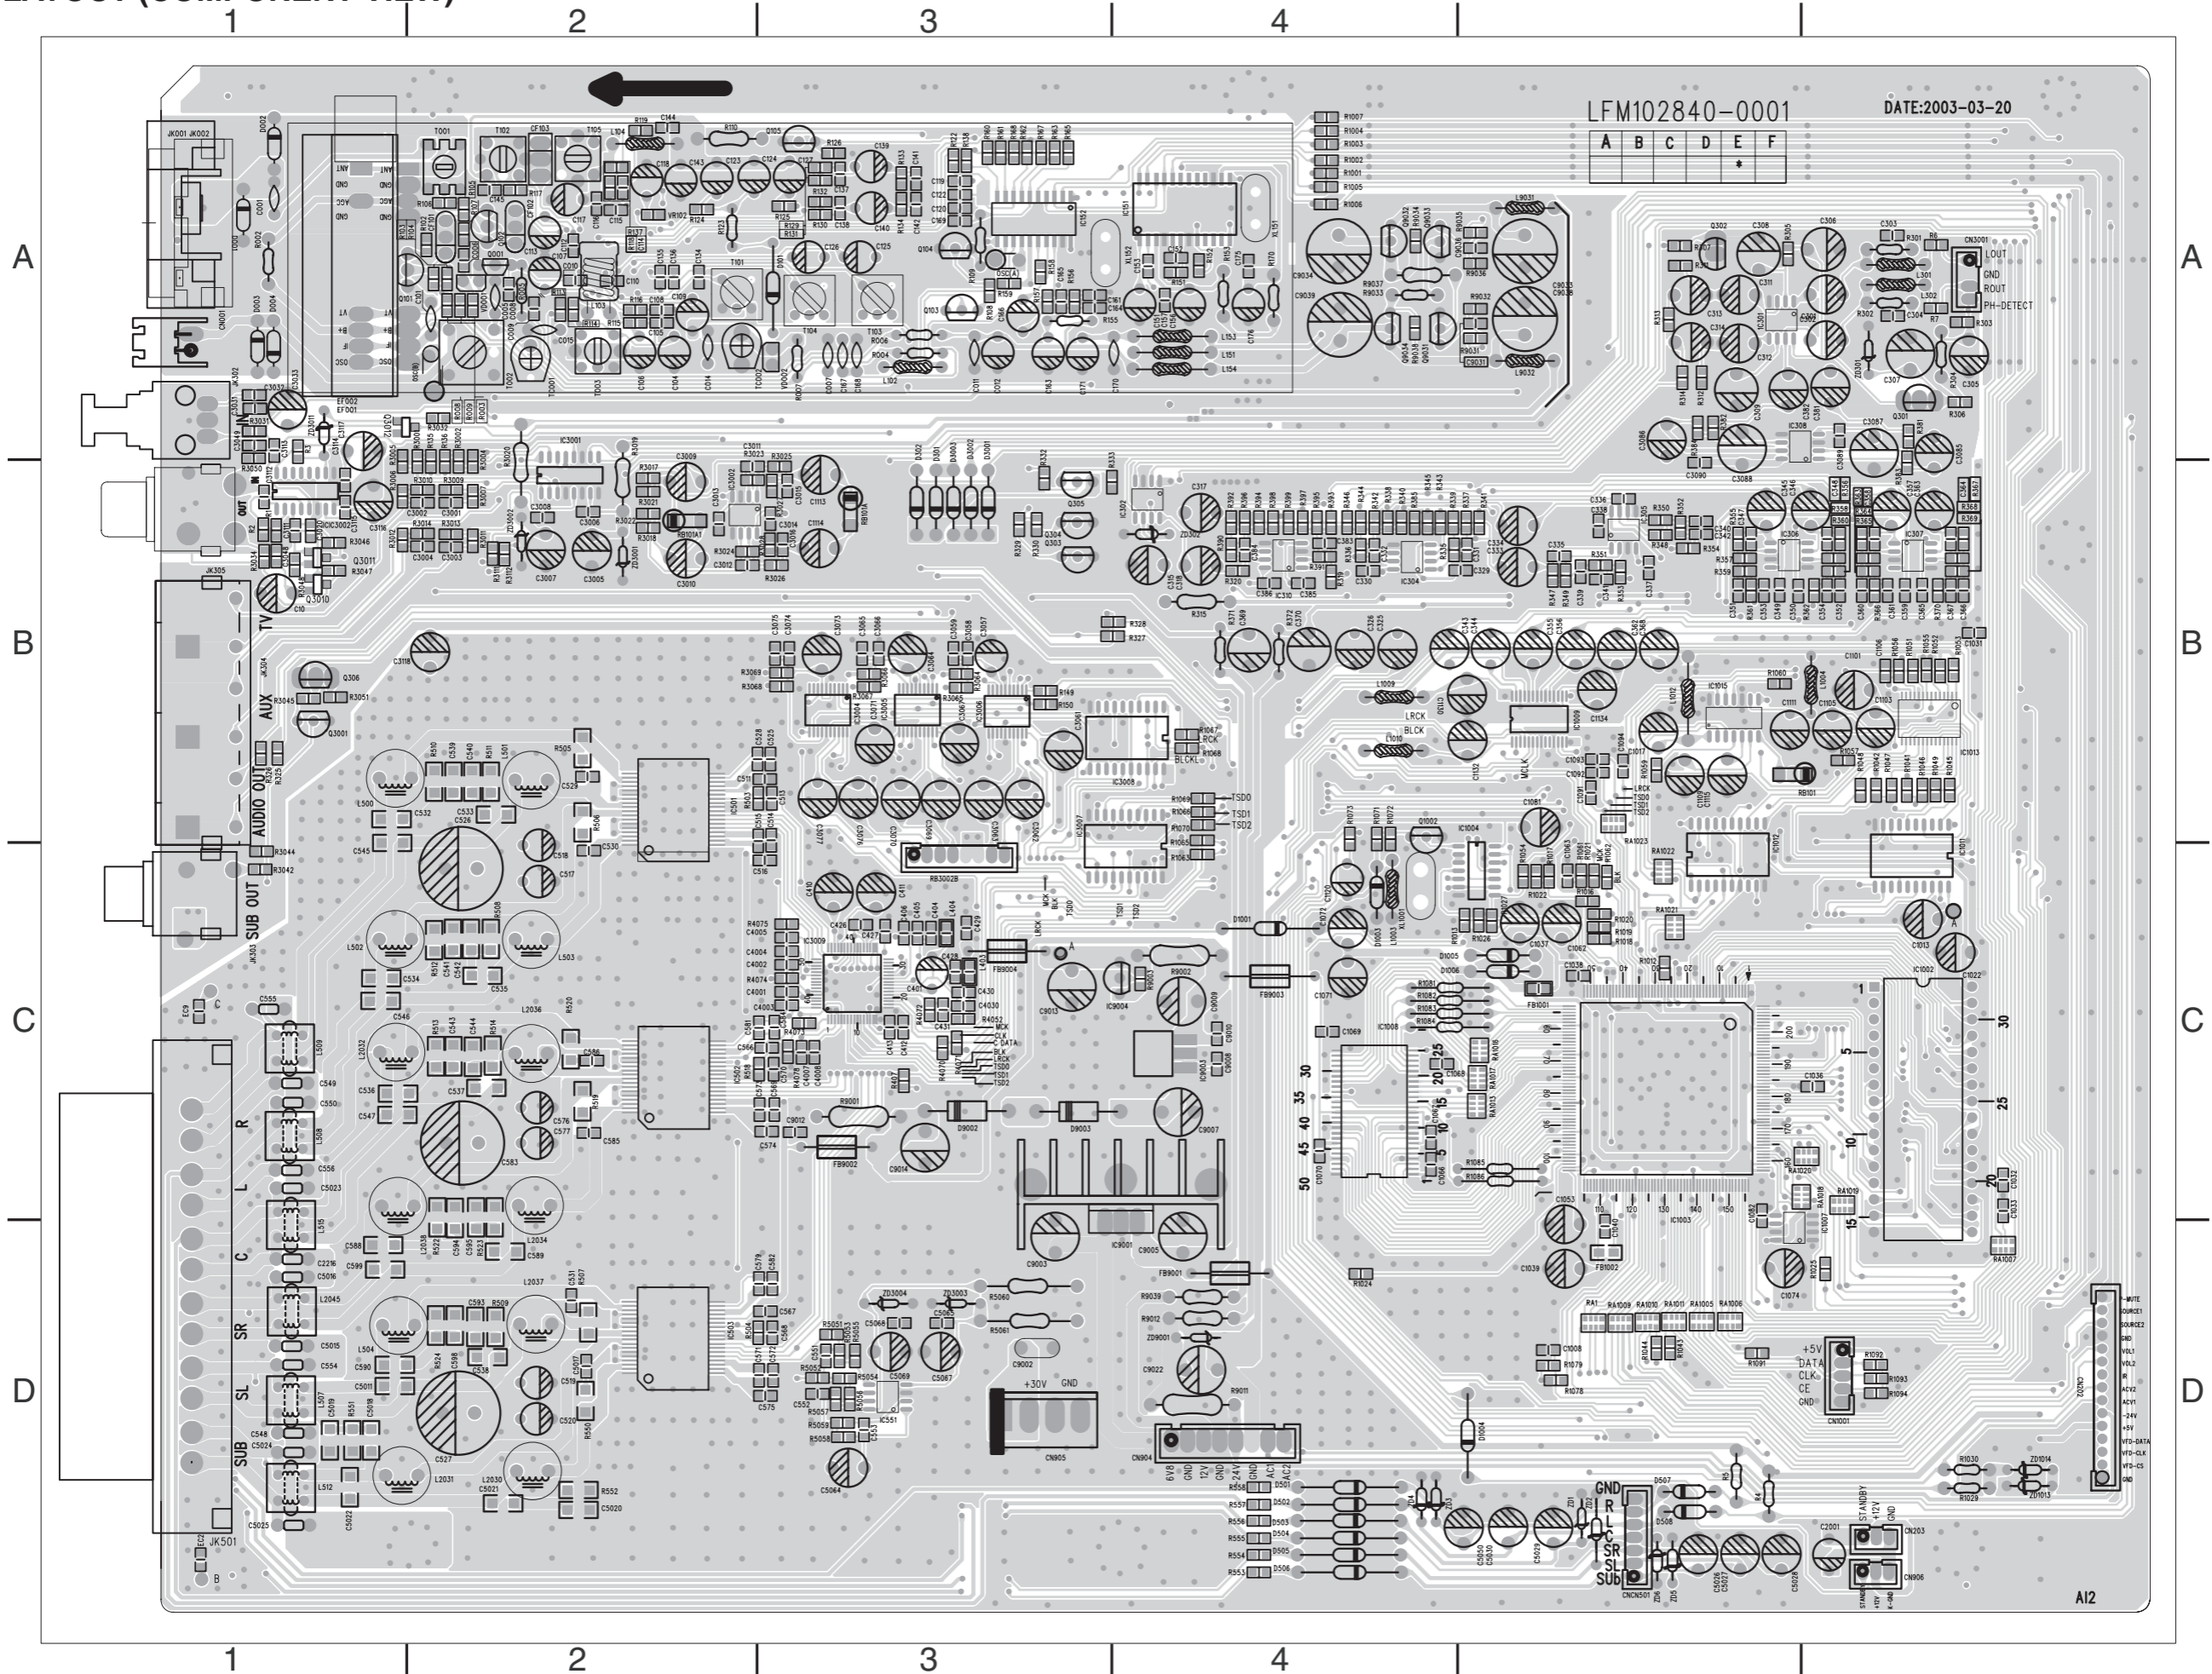

LAYOUT MAPPING (COPPERSIDE VIEW)

C1	B6	C5032	D5
C2	B5	C5033	D5
C3	B5	C5034	D5
C4	A6	C5035	B5
C5	A1	C5036	B5
C6	B2	C5037	B5
C7	B3	C5038	C5
C8	A1	C5039	C5
C8	A1	C5040	C5
C11	A3	C5041	C5
C003	A6	C5042	C5
C013	A5	C5051	D3
C016	A6	C5052	D3
C111	A5	C5053	D3
C129	A4	C5054	D3
C130	A4	C5055	D3
C131	A4	C5056	D3
C132	A4	C9004	D3
C133	A4	C9006	D3
C154	A3	C9011	C3
C155	A3	C9023	D3
C173	A4	C9032	A2
C174	A4	C9035	A3
C316	B3	C9037	A2
C323	B6	C9040	A3
C324	B6	EC1	D6
C409	C4	EC3	D6
C1001	A3	EC4	D6
C1002	A3	EC5	D6
C1003	A3	EC7	C6
C1004	A3	EC8	C6
C1005	A3	EC9	D6
C1006	A3	IC101	A5
C1007	A3	R9	D2
C1018	B2	R10	A3
C1023	C1	R001	A6
C1024	C2	R101	A6
C1041	C2	R139	A6
C1042	C2	R154	A3
C1043	C2	R323	B6
C1044	C2	R324	B6
C1045	C2	R559	D3
C1046	C2	R560	D3
C1047	C2	R561	D3
C1048	C2	R562	D3
C1049	C2	R563	D3
C1050	C2	R564	D3
C1051	C2	R1028	C3
C1052	C2	R2001	D1
C1055	C2	R2002	D1
C1056	C2		
C1057	C2		
C1058	C2		
C1059	C2		
C1060	C2		
C1061	C2		
C1073	D1		
C1075	C3		
C1076	D1		
C1077	D1		
C1078	D1		
C1079	D1		
C1080	B2		
C1083	C2		
C1084	C2		
C1100	B1		
C1102	B1		
C1104	B1		
C1110	B2		
C1112	B1		
C1116	B2		
C1131	B2		
C1133	B2		
C1135	B2		
C3060	B4		
C3068	B4		
C3072	B4		
C4006	C4		
C4052	C4		
C5031	D5		

PCB LAYOUT (COPPERSIDE VIEW)

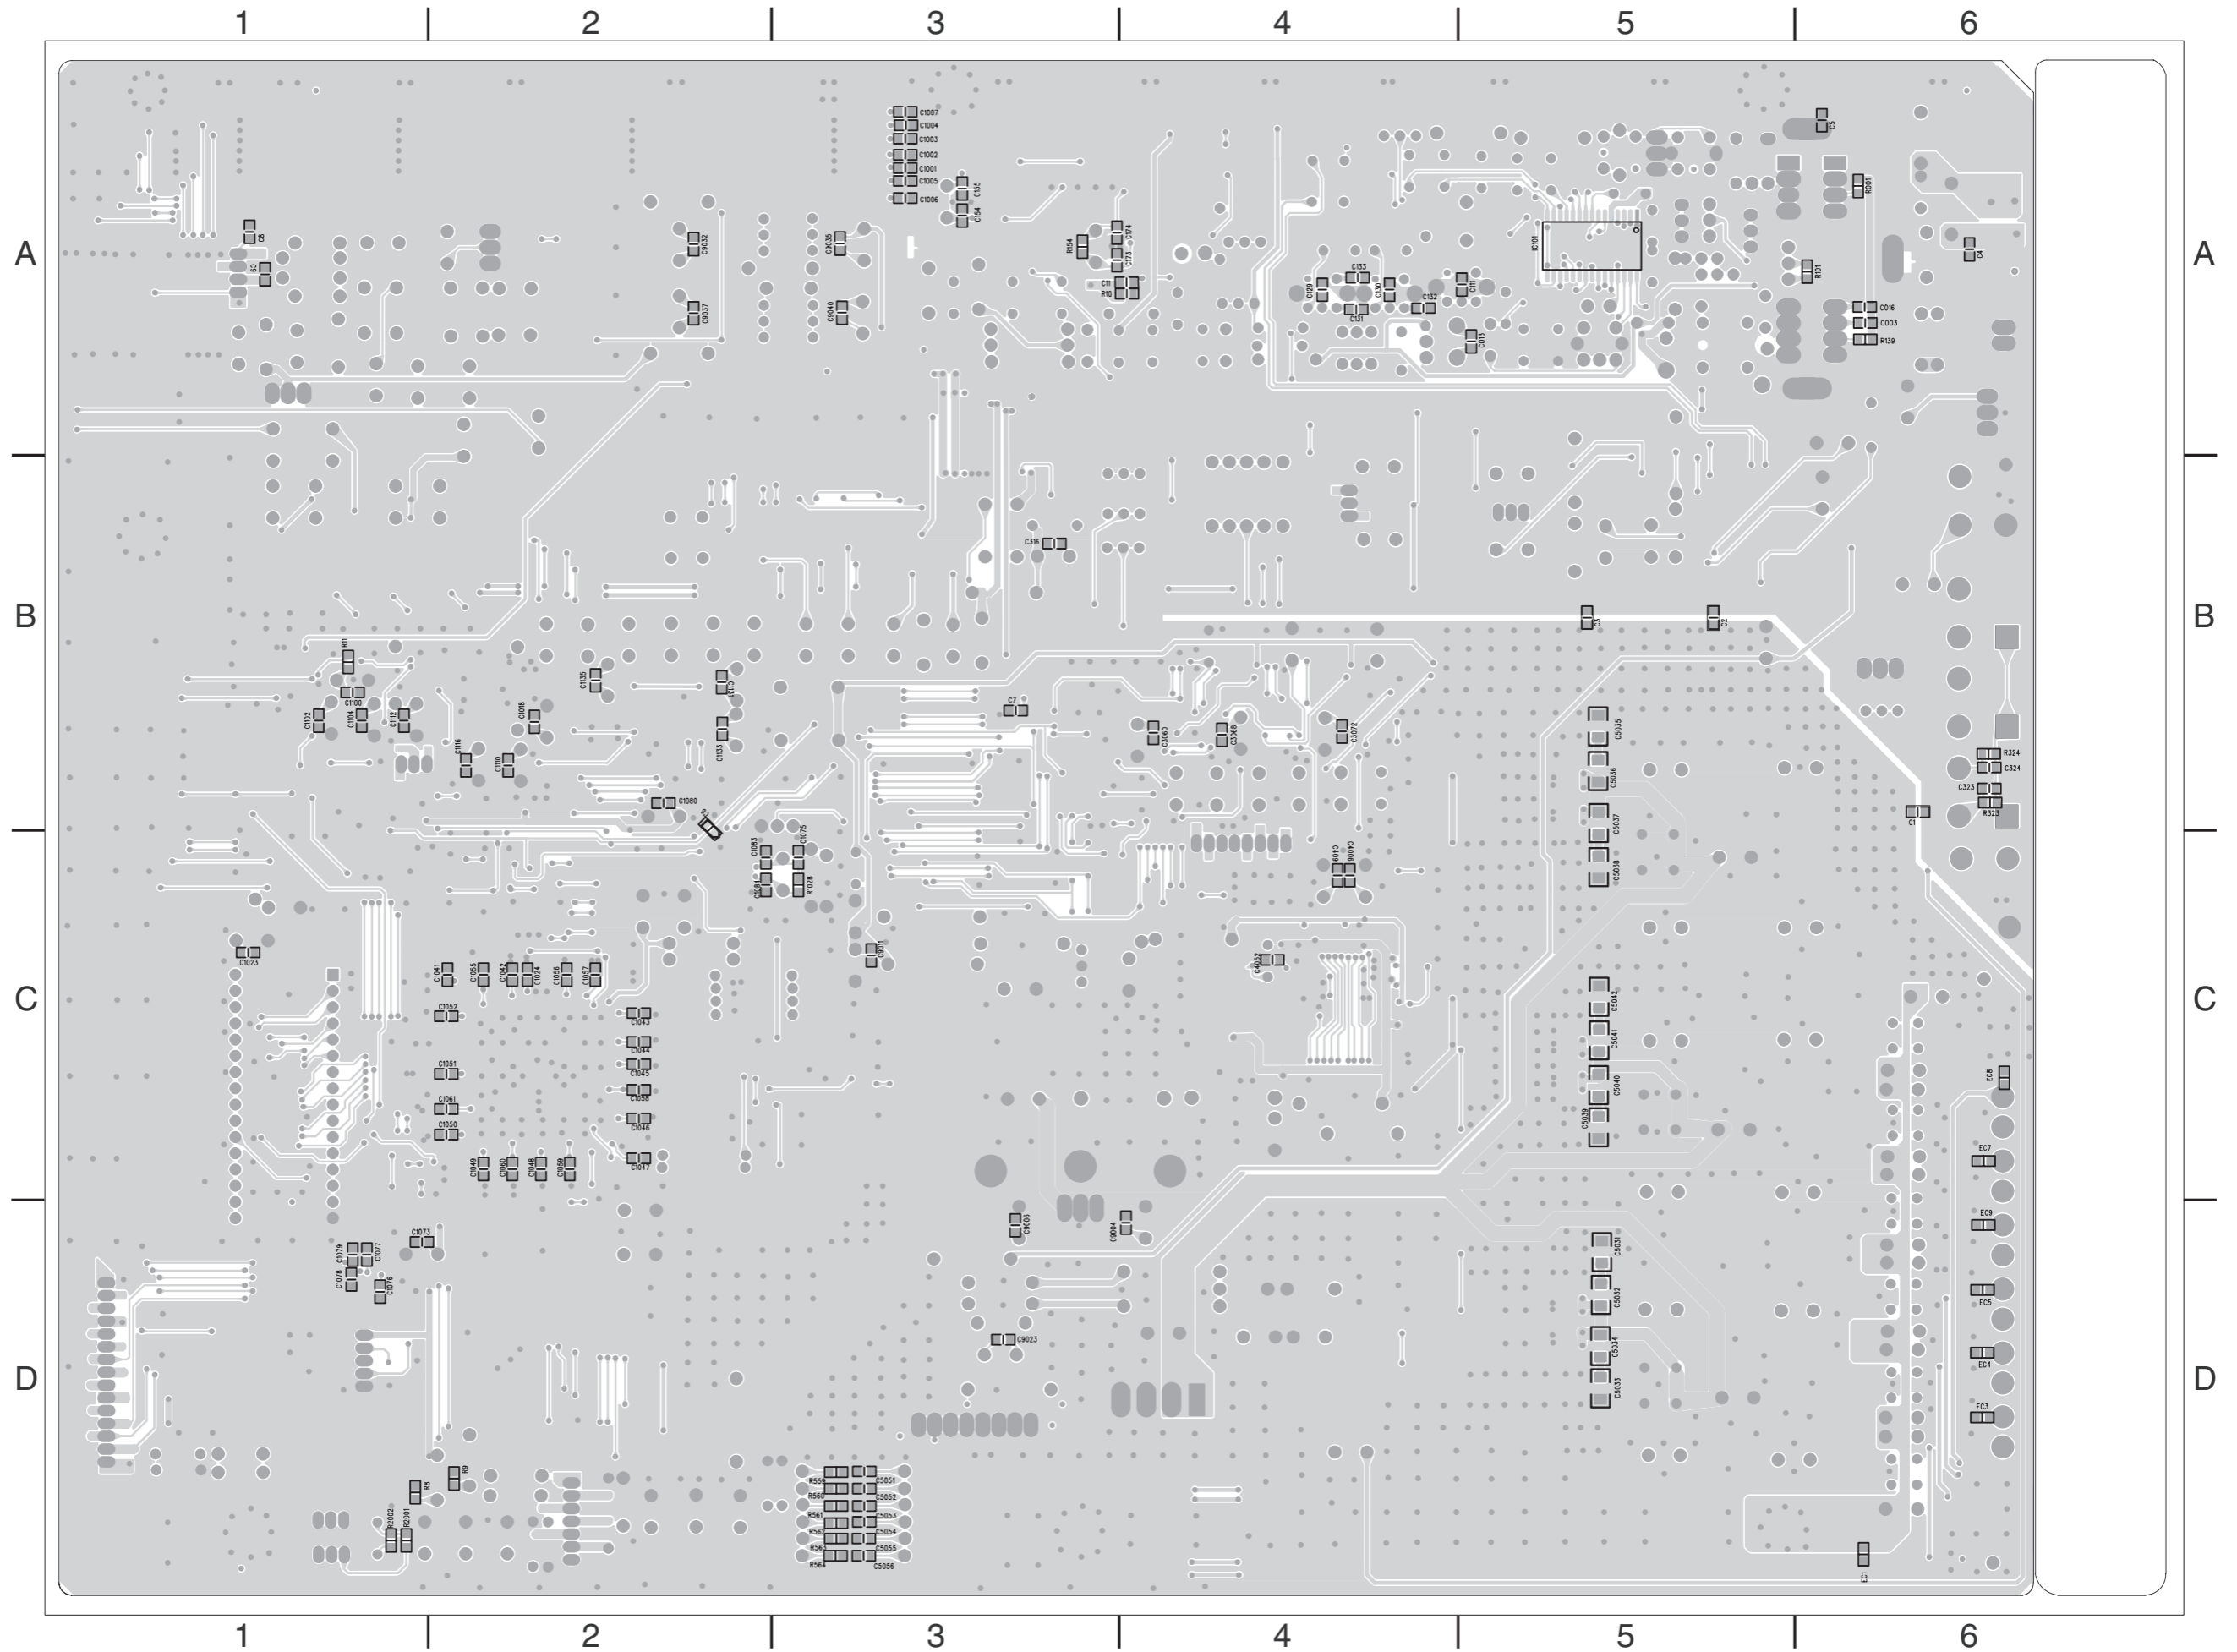

ELECTRICAL PARTSLIST - MAIN BOARD**- MISCELLANEOUS -**

CN001 9965 000 15855 CONNECTOR S2B-XH-A 2 P
CN1001 9965 000 15895 CONNECTOR 5P
CN202 9965 000 17357 CONNECTOR 15P
CN203 9965 000 15900 CONNECTOR 3P
CN3001 9965 000 15859 CONNECTOR 4P

CN501 9965 000 17358 CONNECTOR 7P
CN904 9965 000 17359 CONNECTOR B8B-XH-A 8P
CN905 9965 000 17360 CONNECTOR 4P
CN906 9965 000 15900 CONNECTOR 3P
JK002 9965 000 17361 FEMALE TYPE ID1.44MM

JK302 9965 000 17362 JACK DLR1130
JK303 9965 000 17363 RCA JACK 1P W/GND
JK304 9965 000 17364 AXIAL JACK 6P
JK305 9965 000 17365 JACK 2P W/GND STAND
JK501 9965 000 17366 JACK 12P

RB101 0000 000 00000 3 PIN 200mm UL2547#28
RB3002 9965 000 17367 CONNECTOR 8P
EF002 9965 000 14228 TUNER PACK

- CAPACITORS -

TC001 9965 000 15865 COND TRIM 3 - 10 PF NP0
TC002 9965 000 15866 COND TRIM 4.2 - 20 PF N450

- RESISTORS -

R9012 Δ 9965 000 12521 1R 1/4W 5%
R9039 Δ 9965 000 12521 1R 1/4W 5%
R907 Δ 9965 000 12521 1R 1/4W 5%
RA1 Δ 9965 000 12486 4*33R 1/10W 5%
RA1005 Δ 9965 000 12486 4*33R 1/10W 5%

RA1006 Δ 9965 000 12486 4*33R 1/10W 5%
RA1007 Δ 9965 000 12486 4*33R 1/10W 5%
RA1009 Δ 9965 000 12486 4*33R 1/10W 5%
RA1010 Δ 9965 000 12486 4*33R 1/10W 5%
RA1011 Δ 9965 000 12486 4*33R 1/10W 5%

RA1013 Δ 9965 000 12486 4*33R 1/10W 5%
RA1016 Δ 9965 000 12487 4*10R 1/10W 5%
RA1017 Δ 9965 000 12487 4*10R 1/10W 5%
RA1018 Δ 9965 000 12488 4*4.7KR 1/10W 5%
RA1019 Δ 9965 000 12487 4*10R 1/10W 5%

RA1020 Δ 9965 000 12488 4*4.7KR 1/10W 5%
RA1021 Δ 9965 000 12486 4*33R 1/10W 5%
RA1022 Δ 9965 000 12486 4*33R 1/10W 5%
RA1023 Δ 9965 000 12486 4*33R 1/10W 5%
VR102 Δ 4822 051 20392 3K90 5% 0,1W

- COILS & FILTERS -

CF101 9965 000 17368 10.7 MHZ

- COILS & FILTERS -

CF102 9965 000 15868 CER FILTER 10.7 MHZ
CF103 9965 000 15869 CER FILTER 450 KHZ
FB1001 9965 000 17369 100R AT 100MHZ
FB1002 9965 000 17369 100R AT 100MHZ
FB9001 9965 000 12470 BEAD FERITE 100R/at100MHZ

FB9002 9965 000 12470 BEAD FERITE 100R/at100MHZ
FB9003 9965 000 12470 BEAD FERITE 100R/at100MHZ
FB9004 9965 000 12470 BEAD FERITE 100R/at100MHZ
L1003 9965 000 15871 INDUCTOR 10UH 10%
L1004 9965 000 15871 INDUCTOR 10UH 10%

L1009 9965 000 15871 INDUCTOR 10UH 10%
L1010 9965 000 15871 INDUCTOR 10UH 10%
L1012 9965 000 15871 INDUCTOR 10UH 10%
L102 9965 000 15871 INDUCTOR 10UH 10%
L103 9965 000 15872 COIL 39 MH

L104 9965 000 15871 INDUCTOR 10UH 10%
L151 9965 000 15871 INDUCTOR 10UH 10%
L153 9965 000 15871 INDUCTOR 10UH 10%
L154 9965 000 15871 INDUCTOR 10UH 10%
L2030 9965 000 16695 30UH 15% 1KHz 0.25V 2A

L2031 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L2032 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L2034 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L2036 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L2037 9965 000 16695 30UH 15% 1KHz 0.25V 2A

L2038 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L2045 9965 000 16692 20UH D0.5MM 4P
L301 9965 000 15871 INDUCTOR 10UH 10%
L302 9965 000 15871 INDUCTOR 10UH 10%
L403 9965 000 17369 100R at 100MHz

L404 9965 000 17369 100R at 100MHz
L500 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L501 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L502 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L503 9965 000 16695 30UH 15% 1KHz 0.25V 2A

L504 9965 000 16695 30UH 15% 1KHz 0.25V 2A
L507 9965 000 16692 20UH D0.5MM 4P
L508 9965 000 16692 20UH D0.5MM 4P
L509 9965 000 16692 20UH D0.5MM 4P
L512 9965 000 16692 20UH D0.5MM 4P

L515 9965 000 16692 20UH D0.5MM 4P
L9031 9965 000 15871 INDUCTOR 10UH 10%
L9032 9965 000 15871 INDUCTOR 10UH 10%
T001 9965 000 15880 OSC COIL SUMIDA S-8N
T002 9965 000 15874 ANT OSC AM 4-6:10T 1-3:86T

T003 9965 000 17370 108UH (796 KHZ) COIL
T101 9965 000 15877 BIAS COIL 78 KHZ
T102 9965 000 15875 AM IFT 455KHZ Q=130
T103 9965 000 15878 BIAS COIL 16 KHZ
T104 9965 000 15878 BIAS COIL 16 KHZ

ELECTRICAL PARTSLIST - MAIN BOARD**- COILS & FILTERS -**

T105 9965 000 15879 FM IFT 10.7MHZ Q=60 MIN
XL1001 9965 000 17371 27.0000MHZ +/-20PPM
XL151 9965 000 17372 4.332 MHZ
XL152 9965 000 15881 CRYSTAL 4.5 MHZ

- DIODES -

D001 4822 130 30621 1N4148
D002 4822 130 30621 1N4148
D003 4822 130 30621 1N4148
D004 4822 130 30621 1N4148
D1001 4822 130 30621 1N4148

D1003 4822 130 30621 1N4148
D101 4822 130 30621 1N4148
D3001 4822 130 30621 1N4148
D3002 4822 130 30621 1N4148
D3003 4822 130 30621 1N4148

D302 4822 130 30621 1N4148
D501 4822 130 30621 1N4148
D502 4822 130 30621 1N4148
D503 4822 130 30621 1N4148
D504 4822 130 30621 1N4148

D505 4822 130 30621 1N4148
D506 4822 130 30621 1N4148
D507 4822 130 30621 1N4148
D508 4822 130 30621 1N4148
VD001 4822 130 81673 1SV149

VD002 4822 130 81673 1SV149
ZD1013 9965 000 17373 23.6-24.7V 0.5W
ZD1014 9965 000 17374 2.9-3.1V 0.5W
ZD3001 4822 130 34233 BZX79-B5V1
ZD3002 4822 130 34233 BZX79-B5V1

ZD3003 4822 130 34233 BZX79-B5V1
ZD3004 4822 130 34233 BZX79-B5V1
ZD301 4822 130 34167 BZX79-B6V2
ZD302 4822 130 34167 BZX79-B6V2
ZD9001 9965 000 17375 11.9-12.4V 0.5W

- IC & TRANSISTORS -

IC1001 9965 000 17376 IC 39SF020 27C020-70
IC1003 9965 000 17377 IC ES4008 DECODER
IC1004 9965 000 15883 IC TC74HC04AFN
IC1007 9965 000 15884 IC AT24C02N-10SI-2.7
IC1008 9965 000 17378 IC 1MX16Y3VTW-7
IC1009 9965 000 15885 IC WM8746 6CH D/A
IC101 9965 000 01369 LA1837 FM/AM IF/MPX IC
IC1011 9965 000 17379 IC SN74HCT244DW
IC1012 9965 000 17379 IC SN74HCT244DW
IC1013 9965 000 17380 IC AK4112BVF

- IC & TRANSISTORS -

IC1015 9965 000 17381 IC WM8738ED
IC151 9965 000 17382 IC LC72720NM
IC152 4822 209 15778 LC72131M
IC3001 9965 000 12510 TC4052BFN CHIP
IC3002 9965 000 12510 TC4052BFN CHIP

IC3002 9965 000 15886 IC RC4558D
IC3004 9965 000 15889 IC WM8739 2CH A/D
IC3005 9965 000 15889 IC WM8739 2CH A/D
IC3006 9965 000 15889 IC WM8739 2CH A/D
IC3007 9965 000 17379 IC SN74HCT244DW

IC3008 9965 000 17379 IC SN74HCT244DW
IC3009 9965 000 17383 IC STA308
IC301 9965 000 17384 IC TP5228
IC302 9965 000 17385 IC PT2259
IC304 9965 000 15886 IC RC4558D

IC305 9965 000 15886 IC RC4558D
IC306 9965 000 15886 IC RC4558D
IC307 9965 000 15886 IC RC4558D
IC308 9965 000 15886 IC RC4558D
IC310 9965 000 15886 IC RC4558D

IC501 9965 000 14154 STA505 50W X2
IC502 9965 000 14154 STA505 50W X2
IC503 9965 000 14154 STA505 50W X2
IC551 9965 000 15886 IC RC4558D
IC9001 9965 000 12512 BA05T ROHM

IC9003 9965 000 17386 IC BO33D-3.3
IC9004 9965 000 17387 IC TL431
Q001 4822 130 63173 2SK192AY
Q1001 4822 130 41651 2SC2001L
Q1002 4822 130 41198 2SC945P

Q101 4822 130 41595 2SC1675L
Q102 4822 130 41595 2SC1675L
Q103 4822 130 63876 2SA733R
Q104 4822 130 41198 2SC945P
Q105 4822 130 41198 2SC945P


Q3001 4822 130 43818 2SC2878-A
Q301 4822 130 41198 2SC945P
Q3010 4822 130 41651 2SC2001L
Q3011 4822 130 41198 2SC945P
Q302 4822 130 43818 2SC2878-A

Q303 4822 130 43818 2SC2878-A
Q304 4822 130 43818 2SC2878-A
Q305 4822 130 63876 2SA733R
Q306 4822 130 63876 2SA733R
Q9031 4822 130 41198 2SC945P

Q9032 4822 130 63876 2SA733R
Q9033 4822 130 41198 2SC945P
Q9034 4822 130 63876 2SA733R

Note: Only these parts mentioned in the list are normal service parts.

EXPLODED DRAWING

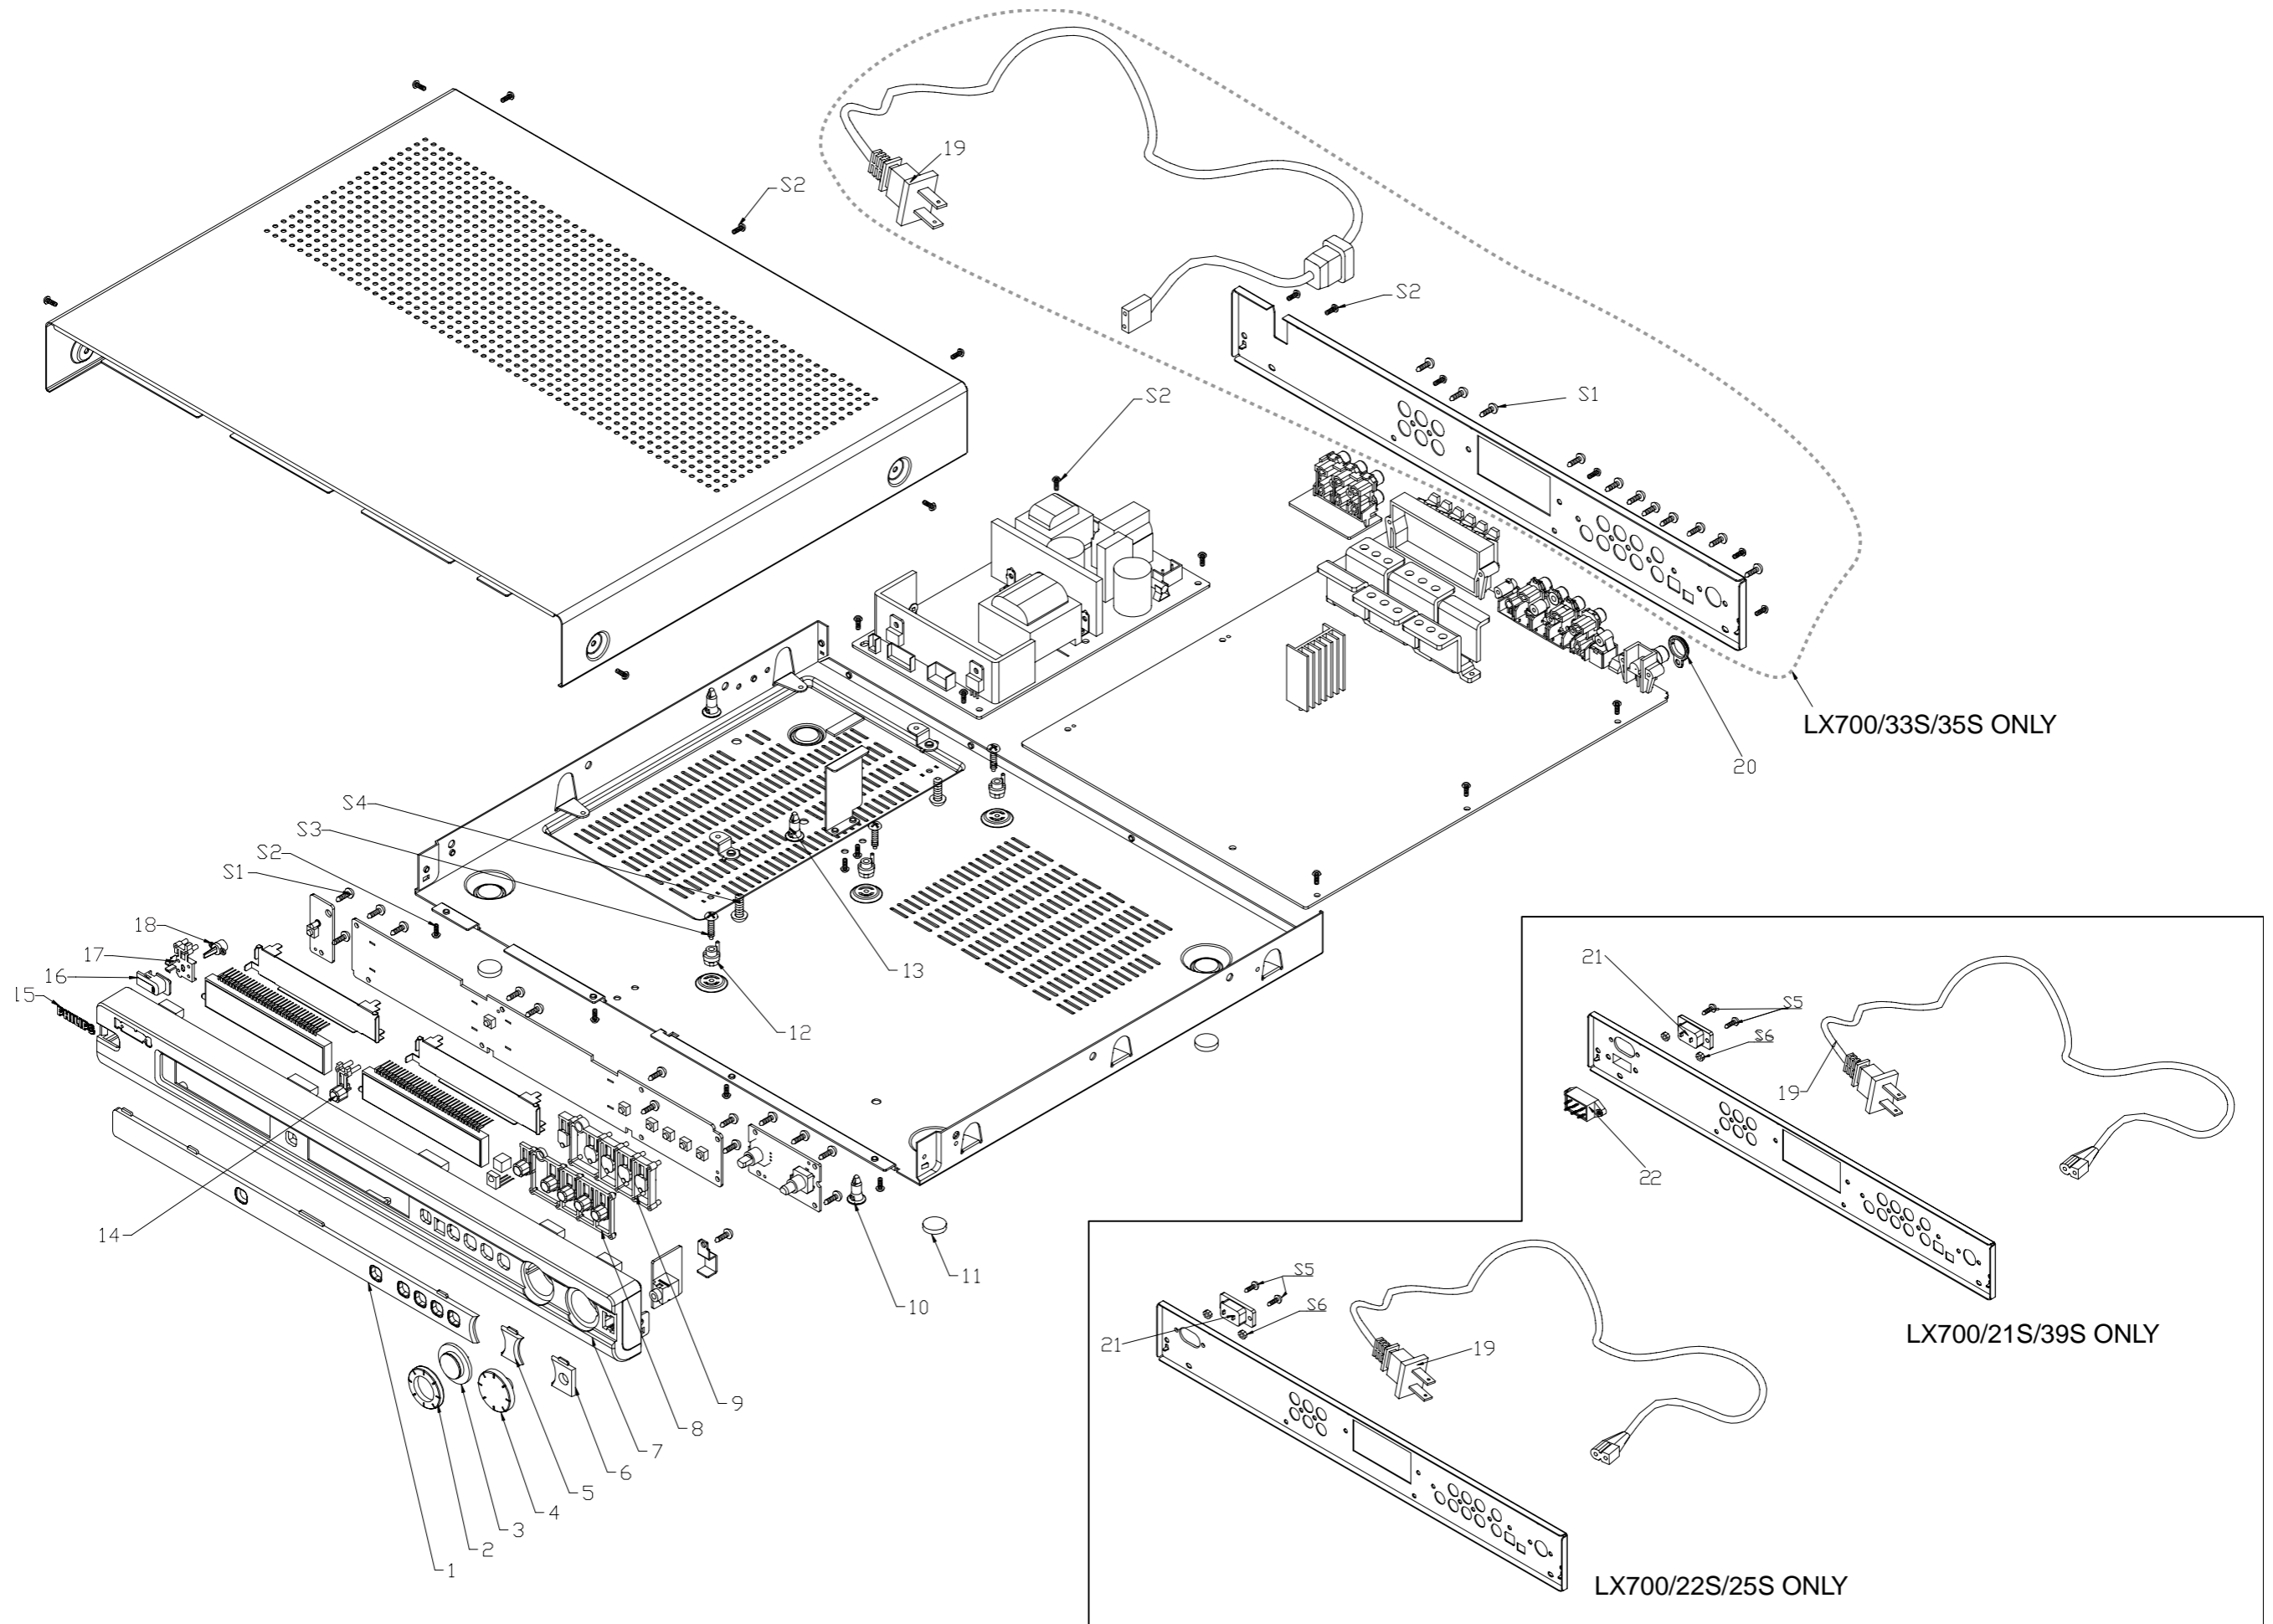

MECHANICAL & ACCESSORIES PARTSLIST

1	9965 000 17343	DISPLAY LENS
2	9965 000 17344	SOURCE LENS
3	9965 000 17340	SOURCE KNOB
4	9965 000 17336	VOLUME KNOB
5	9965 000 17346	LENS-2
6	9965 000 17347	LENS-3
7	9965 000 17335	FRONT CABINET
8	9965 000 17338	FUNCTION KEY
9	9965 000 17339	FUNCTION KEY BRACKET
10	9965 000 17354	SPACER
11	9965 000 17349	RUBBER FOOT
12	9965 000 17356	PLASTIC BRACKET
13	9965 000 17355	SPACER
14	9965 000 17337	SURROUND KEY
15	9965 000 12424	PHILIPS LOGO
16	9965 000 17342	POWER KEY COVER
17	9965 000 17341	POWER KEY
18	9965 000 17345	LED LENS
19	△9965 000 15983	MAINS CORD /21S/22S
19	△9965 000 17457	MAINS CORD /25S
20	9965 000 12441	FM JACK HOLDER
21	△9965 000 17353	AC SOCKET
22	△9965 000 16339	VOLTAGE SELECTOR /21S
	9965 000 17348	REMOTE CONTROL
	9965 000 17350	IFU
	9965 000 17351	SUBWOOFER ASS'Y
	9965 000 17352	SAT SPK ASSY
	9965 000 14636	RCA CABLE
	4822 303 50063	FM AERIAL
	2422 549 45067	AM FRAME AERIAL

Note: Only these parts mentioned in the list are normal service parts.