


Service Manual

**CIRCUIT DESCRIPTIONS
REPAIR & ADJUSTMENTS**

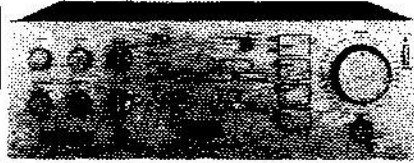

**ORDER NO.
ARP-344-0**

STEREO AMPLIFIER

A-90

• This service manual is applicable to the KU type.

CONTENTS

1. SPECIFICATIONS	2	8. SCHEMATIC DIAGRAM	27
2. FRONT PANEL FACILITIES	3	9. ELECTRICAL PARTS LIST	33
3. BLOCK DIAGRAM	5	10. ADJUSTMENTS	40
4. CIRCUIT DESCRIPTIONS	7	11. SAFETY INFORMATION	41
5. PARTS LOCATION	10	12. PACKING	42
6. EXPLODED VIEWS AND PARTS LIST	13		
7. P.C. BOARDS CONNECTION DIAGRAM	19		

RECEIVED SEP - 7 1983

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. 1925 E. Dominguez St., Long Beach, California 90810 U.S.A.
PIONEER ELECTRONIC (EUROPE) N.V. Keetbengleem 1, 2740 Beveren, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia

1. SPECIFICATIONS

Amplifier Section

Continuous Average Power Output is 200 watts* per channel, min., at 8 ohms from 20 Hertz to 20,000 Hertz with no more than 0.002 % total harmonic distortion.**

Continuous Power Output at 1kHz (both channel driven)

T. H. D. 0.002%, 8 ohms 220watts per channel

Total Harmonic Distortion (20 Hertz to 20,000 Hertz, 8 ohms)

continuous rated power output

. **No more than 0.002%

100 watts per channel power output

. **No more than 0.002%

Intermodulation Distortion (50 Hertz: 7,000 Hertz = 4 : 1, 8 ohms)

continuous rated power output

. No more than 0.002%

Damping Factor (20 Hertz to 20,000 Hertz, 8 ohms)

. 100

Input (Sensitivity/Impedance)

PHONO MM 2.5mV/50 kilohms

PHONO MC 150 μ V/100 ohms, 33 ohms

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2

. 150 mV/50 kilohms

Phono Overload Level (T.H.D. 0.008%, 1,000Hz)

PHONO MM 300mV

PHONO MC 18mV

Output Level/Impedance

TAPE REC 1, 2 150mV/2.2 kilohms

Frequency Response

PHONO MM (RIAA Equalization)

. 20Hz to 100,000Hz \pm 0.2dB

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2

. 5Hz to 100,000Hz \pm $\frac{0}{-3}$ dB

Tone Control

BASS \pm 6dB (100Hz) at 200Hz Position

. Turnover frequency: 100Hz/200Hz/400Hz

TREBLE \pm 6dB (10kHz) at 4kHz Position

Turnover frequency: 2kHz/4kHz/8kHz

Filter

LOW (SUBSONIC) 15Hz (-6dB/oct.)

Hum and Noise (IHF, short circuited A network)

PHONO MM 89dB

PHONO MC 74dB

TUNER, CD/AUX1, AUX2, TAPE PLAY 1, 2 . . . 113dB

Muting -20dB

Miscellaneous

Power Requirements 120V, 50/60Hz

Power Consumption 350 W (UL)

Dimensions 420(W) x 150(H) x 420(D) mm

16-9/16(W) x 5-7/8(H) x 16-9/16(D) in

Weight (without package) 19.6kg (43 lb 3 oz)

Furnished Parts

Operating Instructions 1


**Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier.*

***Measured by Shibasoku 725 Automatic Distortion Analyzer.*

NOTE:

Specifications and design subject to possible modification without notice.

2. FRONT PANEL FACILITIES

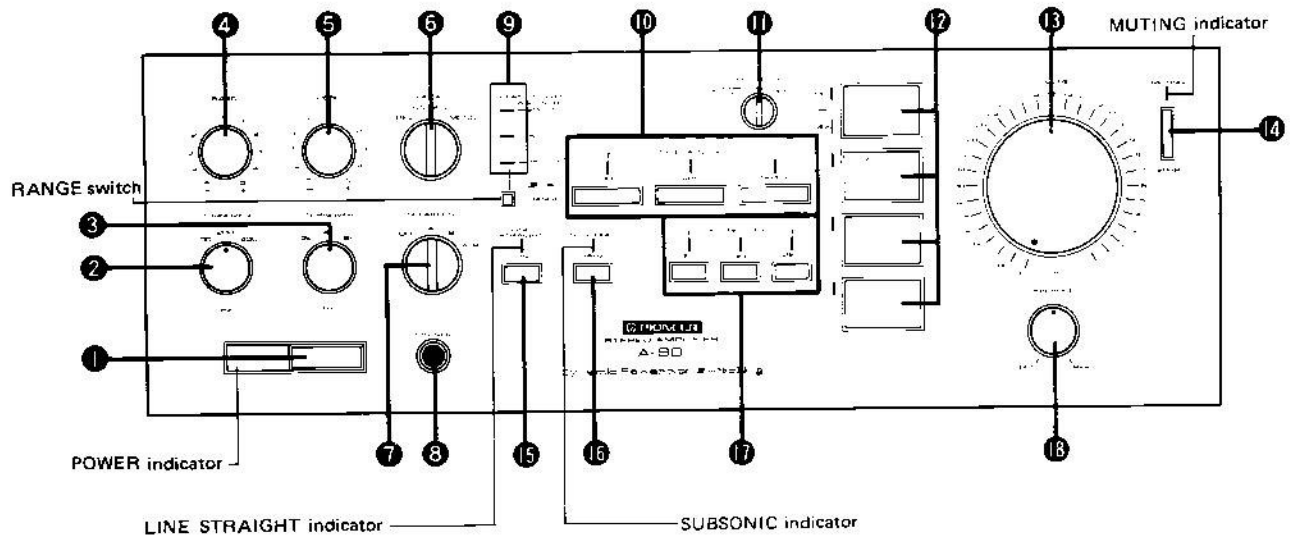

1 POWER SWITCH

Power is supplied to the stereo amplifier when the switch is depressed, and the power indicator changes from red to green. The power is turned off when the switch is released to the OFF position.

2 BASS TURNOVER CONTROL

This is used to select the frequency at which the BASS control starts to have an effect on the tone quality when it is used for adjustment.

- 400 Allows the frequency band below 400Hz to be adjusted.
- 200 Allows the frequency band below 200Hz to be adjusted.
- 100 Allows the frequency band below 100Hz to be adjusted.

3 TREBLE TURNOVER CONTROL

This is used to select the frequency at which the TREBLE control starts to have an effect on the tone quality when it is used for adjustment.

- 2k Allows the frequency band above 2kHz to be adjusted.
- 4k Allows the frequency band above 4kHz to be adjusted.
- 8k Allows the frequency band above 8kHz to be adjusted.

4 BASS CONTROL

This is used to adjust the BASS (low frequency range) sound. When the control is turned clockwise, the level of sound below the frequency selected by the BASS TURN-OVER control is emphasised. Conversely, when the control is turned counter-clockwise (⤴) from the "0" position, the level of sound below the frequency selected by the BASS TURN-OVER control is attenuated.

NOTE:
The control does not operate if the LINE STRAIGHT switch is ON.

5 TREBLE CONTROL

This is used to adjust the TREBLE (high frequency range) sound. When the control is turned clockwise, the level of sound above the frequency selected by the TREBLE TURN-OVER control is emphasised. Conversely, when the control is turned counter-clockwise (⤴) from the "0" position, the level of sound above the frequency selected by the TREBLE TURN-OVER control is attenuated.

NOTE:
The control does not operate if the LINE STRAIGHT switch is ON.

6 MODE SELECTOR

This is used to select the mode.

- REV Set here to shunt the left channel and right channel stereo input signals and listen in stereo.
- STEREO Set here for ordinary stereo listening.
- MONO Set here to mix the left and right channel stereo input signals and hear them in mono through both the left and right speakers.

NOTE:
The MODE selector does not function when the LINE STRAIGHT switch is in ON position.

7 SPEAKER SWITCHES

- OFF There is no output signal from either A or B output terminals.
- A Sound is heard from the speakers connected to SPEAKERS A terminals.
- B Sound is heard from the speakers connected to SPEAKERS B terminals.
- A + B Sound is heard from the speakers connected to both SPEAKERS A and B terminals.

8 PHONES JACKS

Connect the plug on your headphones to this jack. To listen to a program through the headphones, turn the SPEAKER switches to OFF.

9 PEAK POWER WATTS/8Ω INDICATOR

This indicates the output level at 6 stages, when speakers with a nominal impedance of 8 ohm are connected to the SPEAKERS terminals. (When the SPEAKER switches are OFF, it does not light up)

The RANGE SWITCH functions as follows

- : When released, it indicates the high level output (200, 50, 15) in watts.
- : When depressed, it indicates the low level output (5, 1, 0.3) in watts.

10 TAPE MONITOR SWITCHES

Used to play back a tape or monitor a recording.

- TAPE 1** Depress to play back a tape or monitor a recording on the tape deck connected to TAPE 1 PLAY terminals.
- TAPE 2** Depress to play back a tape or monitor a recording on the tape deck connected to TAPE 1 PLAY terminals.
- OFF** Depress if not playing back a tape or monitoring a recording.

NOTE:

*Simultaneous playback or monitoring on TAPE 1 and TAPE 2 is not possible.
Always be careful to depress the TAPE MONITOR switch properly.
If the switch is not depressed, both of the indicators for TAPE 1 and TAPE 2 light up and no sound is heard.*

11 PHONO SELECTOR

To play a record on the turntable, adjust either MC or MM depending on the cartridge being used.
When using an MC (Moving Coil) Cartridge, position at MC (100Ω or 33Ω).

12 FUNCTION SWITCH

This is used to select the program source. At the left of each switch is a FUNCTION indicator, which lights up when the corresponding function has been selected.

- PHONO** Depress for playing records on a turntable connected to the PHONO terminals.
- TUNER** Depress for listening to a broadcast on a tuner connected to the TUNER terminals.
- CD/AUX1** Depress for listening to the sound from a stereo component connected to the CD/AUX1 jacks.
- AUX2** Depress for listening to the sound from a stereo component connected to the AUX2 jacks.

13 VOLUME CONTROL

This is used to adjust the volume of sound heard through the speakers or headphones. The scale shows the attenuation of the dB display. No sound is heard when the control is set at "∞". Turn slowly in a clockwise direction (⌚).

14 MUTING – 20dB SWITCH

The volume is attenuated by 20dB when this switch is depressed to the ON position (MUTING indicator lights up). The switch can be used effectively when the stylus descends onto the record during record play, when the sound is to be turned down temporarily and when you want to adjust the sound precisely as you listen to a program source under low sound level conditions.

15 LINE STRAIGHT SWITCH

When the switch is depressed to OFF position (the LINE STRAIGHT indicator goes out), the signal from the input jacks passes through the Balance mode and the tone control circuits and the tone quality can be adjusted using the TREBLE and BASS controls.

When the switch is depressed once again to ON position (LINE STRAIGHT indicator lights up), the signal from the input jacks is sent directly to the Power Amplifier, without passing through the balance mode and tone control circuits and a flat frequency is obtained.

16 SUBSONIC FILTER SWITCH

When the switch is depressed to the ON position, the subsonic filter with the 15Hz cut off frequency operates. The subsonic filter attenuates frequencies lower than 15Hz with a 6dB/oct slope, and can be used, therefore, to suppress the ultra-low range noise, which is generated by record warp and other factors. This noise cannot actually be heard by the ear, but it can cause intermodulation distortion and even damage to the speaker systems. When playing badly warped records, this switch can be used to good effect.

17 TAPE COPY SWITCHES




Use these switches when copying a tape, using 2 tape decks.

- 1 ► 2 Depress when copying a tape (recording) from tape deck 1 to 2.
- 2 ► 1 Depress when copying a tape (recording) from tape deck 2 to 1.
- OFF Depress when not copying.
Leave in the OFF position normally.

18 BALANCE CONTROL

Used to adjust the balance of sound from the left and right channels. To increase the volume from the right channel, turn in a clockwise direction from the centre (⌚). To increase the volume from the left channel, turn in a counter-clockwise direction from the center (⌚). The control does not function if the LINE STRAIGHT switch is ON.

3. BLOCK DIAGRAM

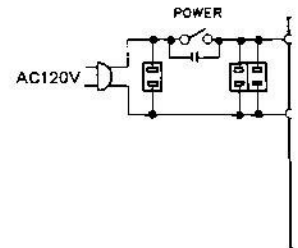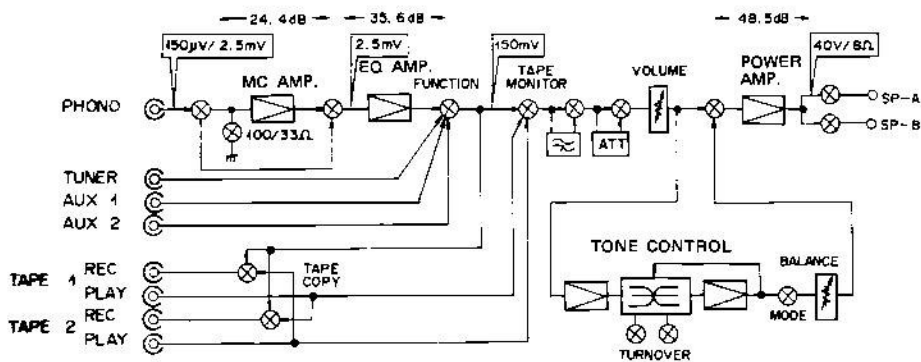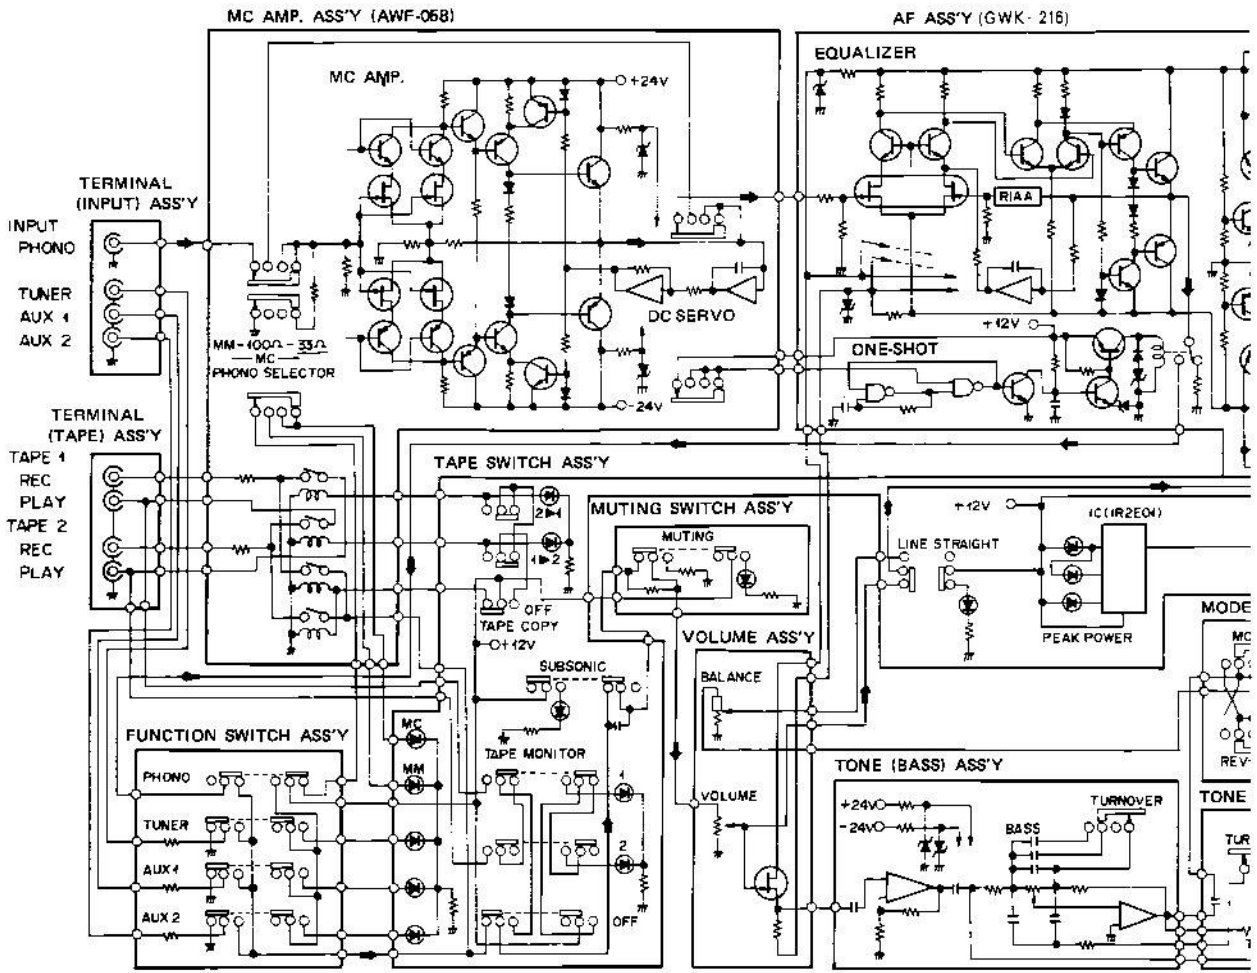

A

B

C


D

5

1

2

3

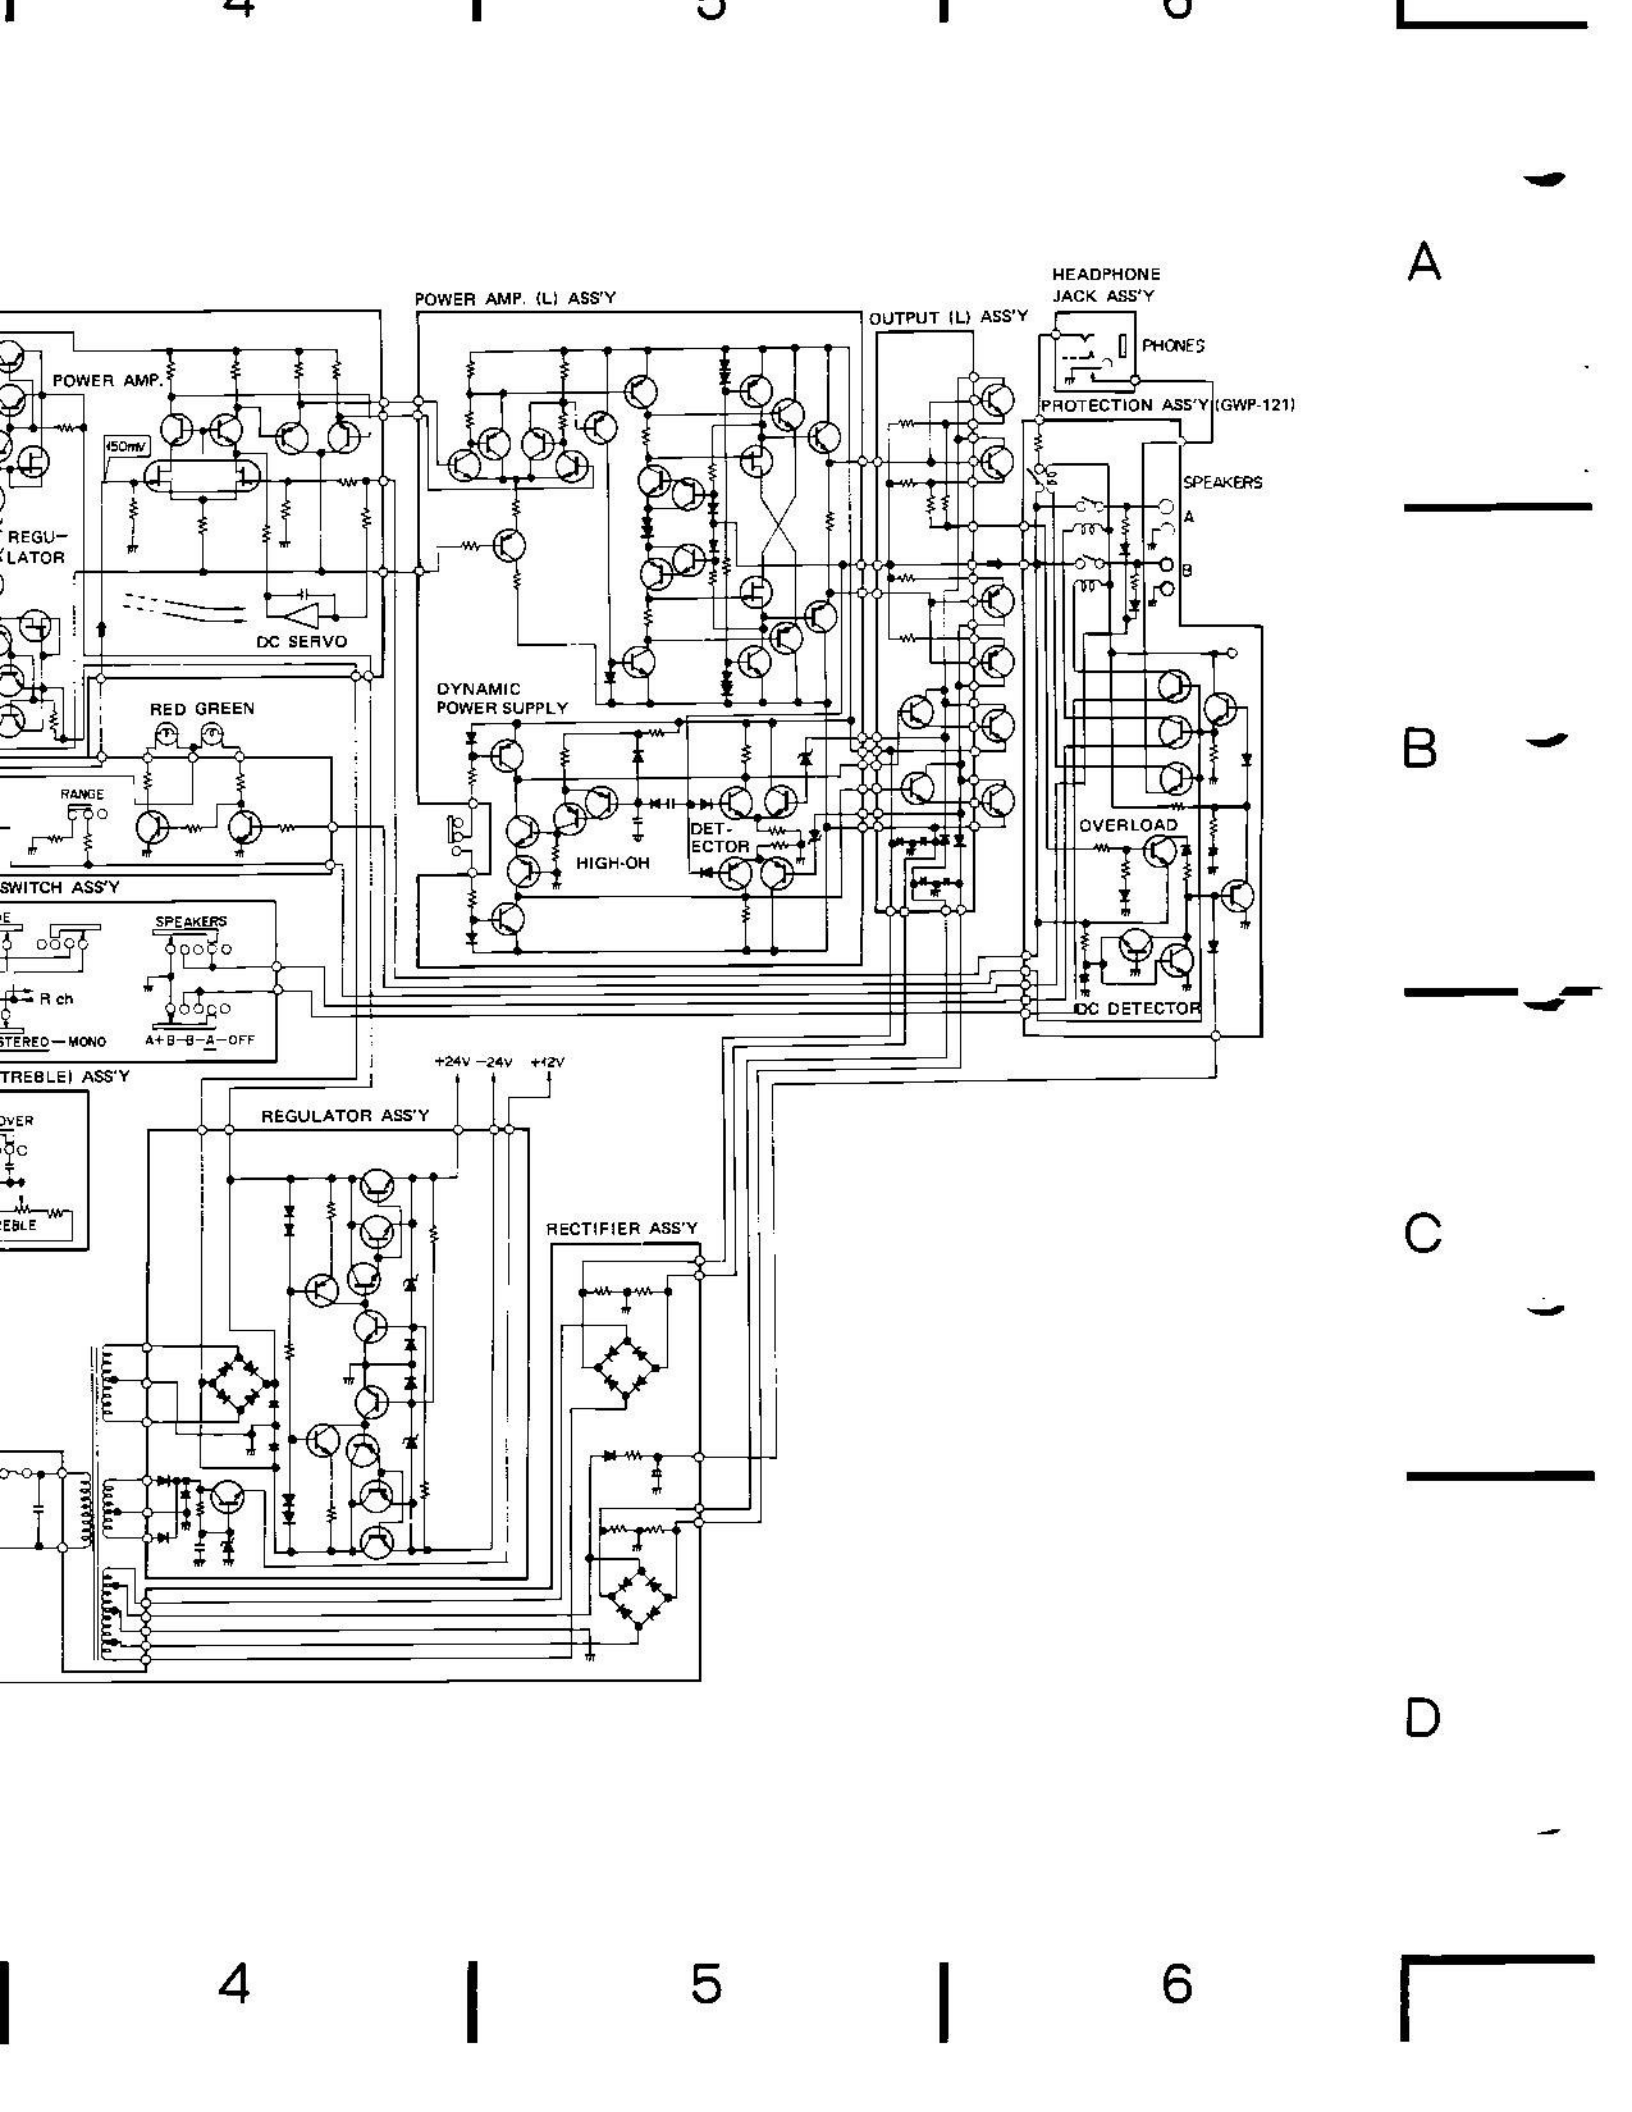

4

5

6

A

B

C

D

4. CIRCUIT DESCRIPTIONS

4.1 OUTLINE OF MAIN CIRCUITS

MC Head Amplifier

This is an input-parallel positive/negative DC amplifier with DC servo controlling the stage 3 bias circuit to prevent deterioration in the signal-to-noise ratio when the signal level is very low. The amplifier gain is 24.4dB and the S-to-N ratio is 74dB (150 μ V input).

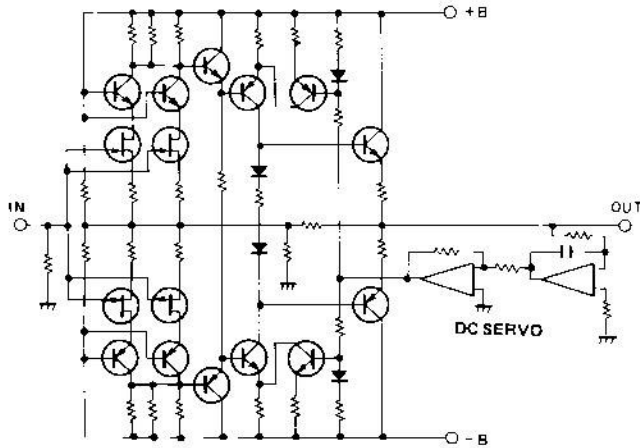


Fig. 4-1 MC head amplifier

Equalizer Amplifier

The use of an input stage FET and DC servo control has eliminated the need for input/output coupling capacitors. Amplifier gain is 35.6dB (1kHz).

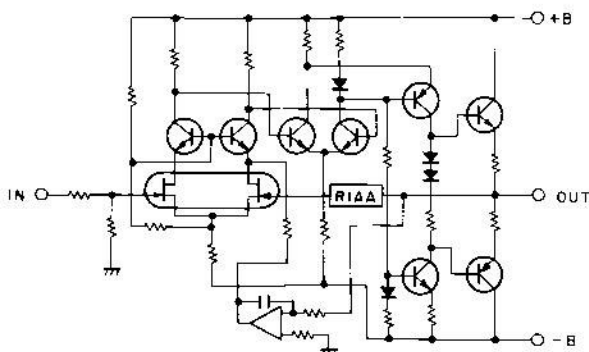


Fig. 4-2 Equalizer amplifier

Phono System Muting Circuit

Transient noise generated when the power is switched on and off, and the noise generated when the PHONO SELECTOR is switched are muted by a relay type muting circuit in the equalizer amplifier output (see Fig. 4-3).

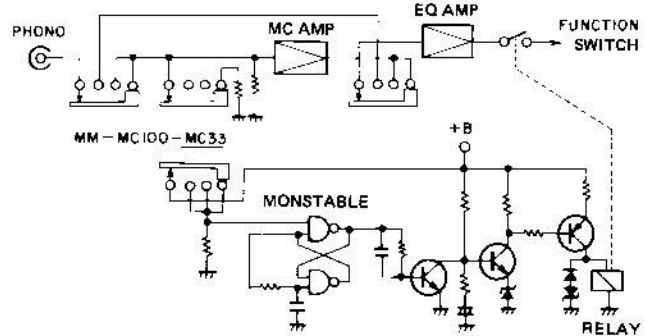


Fig. 4-3 Phono system muting circuit

Tone Control

NFB type tone control circuit with separate 3-step switchable turnover frequencies for low and high frequency regions.

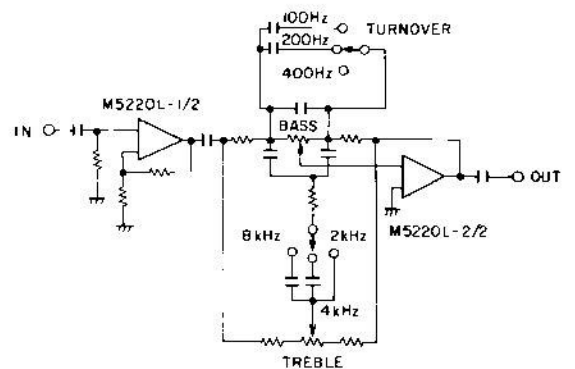


Fig. 4-4 Tone control

Line Straight Circuit

The LINE STRAIGHT switch in the A-90 simplifies the signal path by bypassing the tone control circuit, the mode switching circuit, and the balance control circuit. (See Fig. 4-5).

Power Amplifier

The A-90 features high efficiency with a dynamic power supply system, high-speed bias servo control non-switching mechanism, and a first stage FET differential input and DC servo control DC amplifier system.

The FET buffer circuit between the voltage amplifier and power amplifier stages further reduces distortion and lessens the effects due to the load. (see Fig. 4-6).

The advantages of inserting the FET buffer between stages are enumerated below.

- (1) The power amplifier stage is set to constant voltage, thereby suppressing non-linearity in the hfe factor of the power transistor.
- (2) High loop gain stability unaffected by changes in the load.
- (3) Big reduction in the open-loop output impedance.
- (4) Power transistor driven at very low impedance, thereby reducing the effects of the storage carrier, and enabling high-speed operation.
- (5) With the very high load impedance at the predriver stage, distortion is minimal at high gain in this stage.

Protector Circuit

Standard protector circuit with bridge type overload detector, DC voltage detector, delayed relay action when the power is switched on, and rapid relay action when the power is switched off. Furthermore, a muting relay is also used in speaker switching. (see Fig. 4-7).

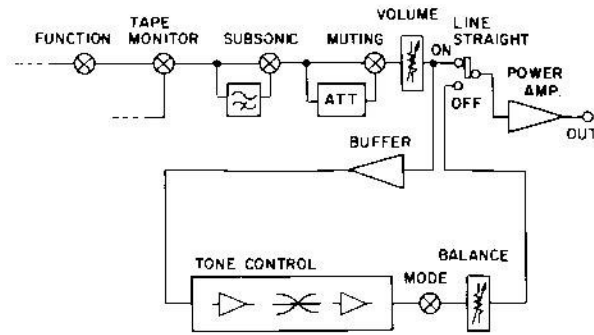


Fig. 4-5 LINE STRAIGHT circuit

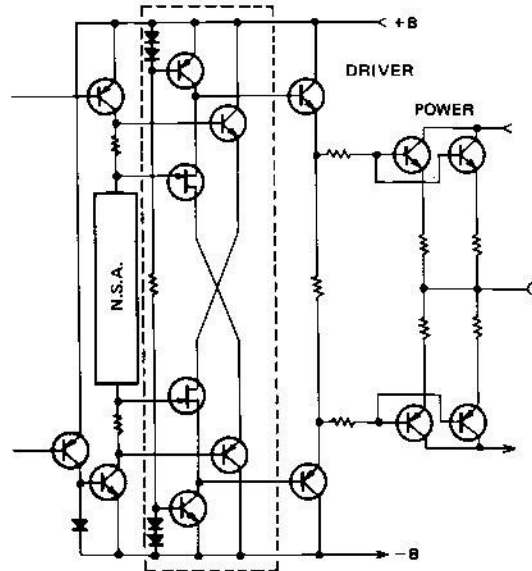


Fig. 4-6 FET Buffer

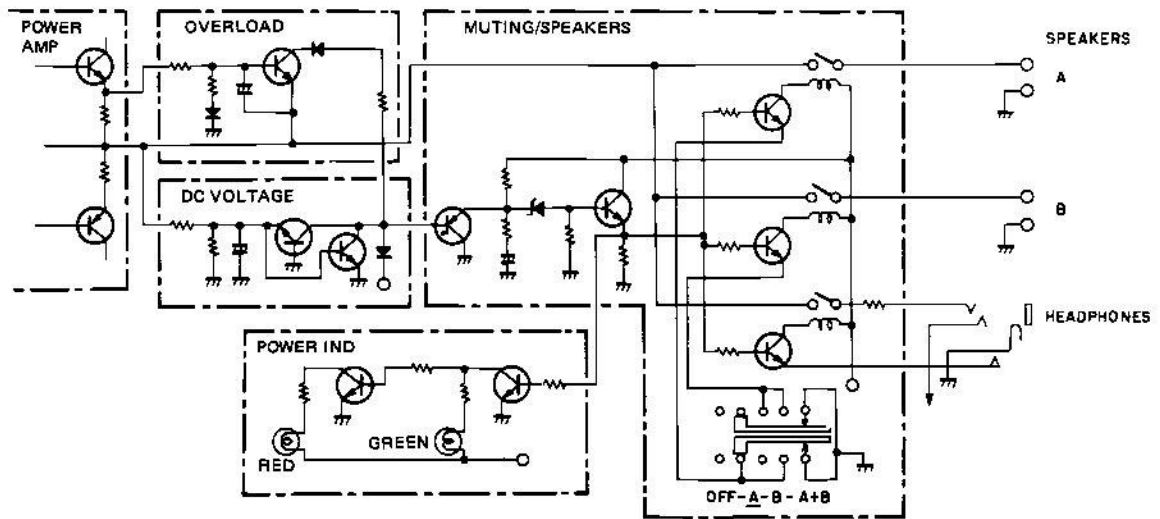


Fig. 4-7 Protector circuit

4.2 DYNAMIC POWER SUPPLY CIRCUIT

The dynamic power supply system featured in the final stage of the A-90 power amplifier varies the voltage applied to the power transistor in accordance to the signal level. The result is reduced heat loss and higher efficiency.

Operating Principles

The basic circuitry is outlined in Fig. 4-8. There are two power lines, V_H and V_L . The signal output v_a is compared with final stage power voltage v_a by differentiator, v_a being obtained by controlling V_H . With the v_a input applied to the differentiator being offset by E_s (several volts), the v_a waveform is traced, v_a being several volts larger than v_o . If, however, v_o is less than $V_L - E_s$, v_a is fixed at the V_L level (see Fig. 4-9).

The purpose of the high-region ON circuit is to avoid irregularities from occurring where v_a can no longer follow v_o at high signal frequencies, and to prevent high-speed continuous operation in the control transistor. That is, when high frequency signals appear at the output, the control transistors (Q3 and Q4) are turned fully on, and v_a is fixed at the V_H level.

A-90 Dynamic Power Supply Circuit

The overall circuit structure is outlined in Fig.4-10. V_L is fixed so as to obtain the rated output (200W) for a 4Ω load, and the high region ON circuit is designed to operate at frequencies above 3kHz. The SPEAKER IMPEDANCE switch set to the $4\Omega \sim 6\Omega$ position fixes the power supply to the final stage transistor at the V_L level.

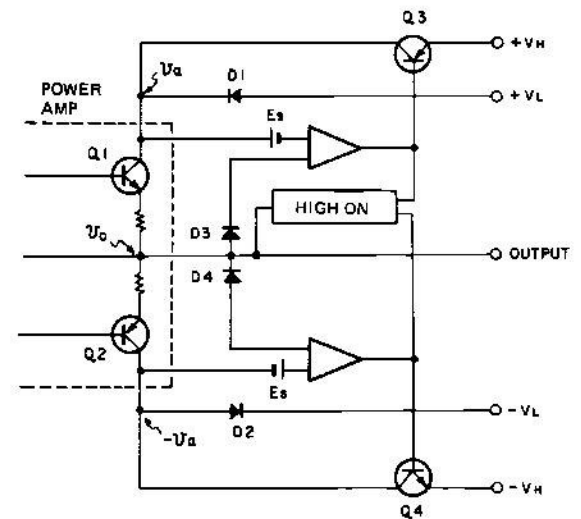


Fig. 4-8 Basic circuitry

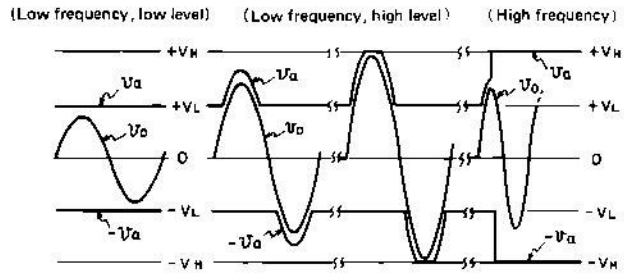


Fig. 4-9 Operating waveforms

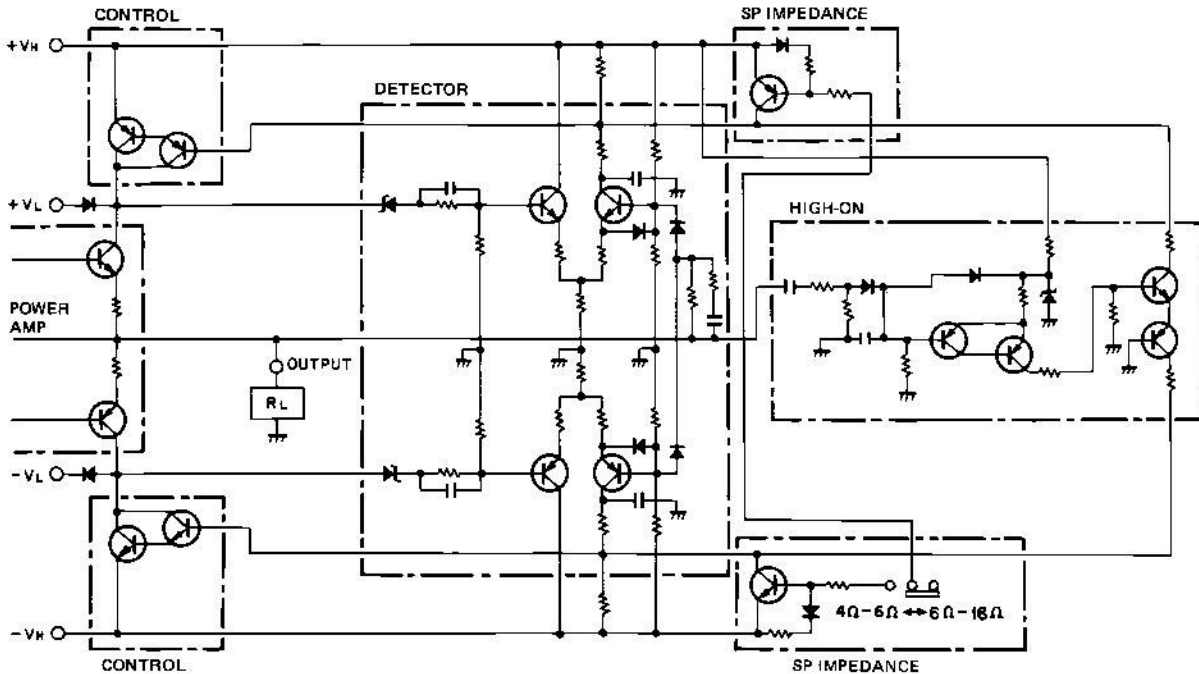



Fig. 10 Dynamic power supply circuit

5. PARTS LOCATION


NOTES:

- *Parts without part number cannot be supplied.*
- *The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *For your Parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .*
 $\star\star$ *GENERALLY MOVES FASTER THAN \star .*
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.


Front Panel

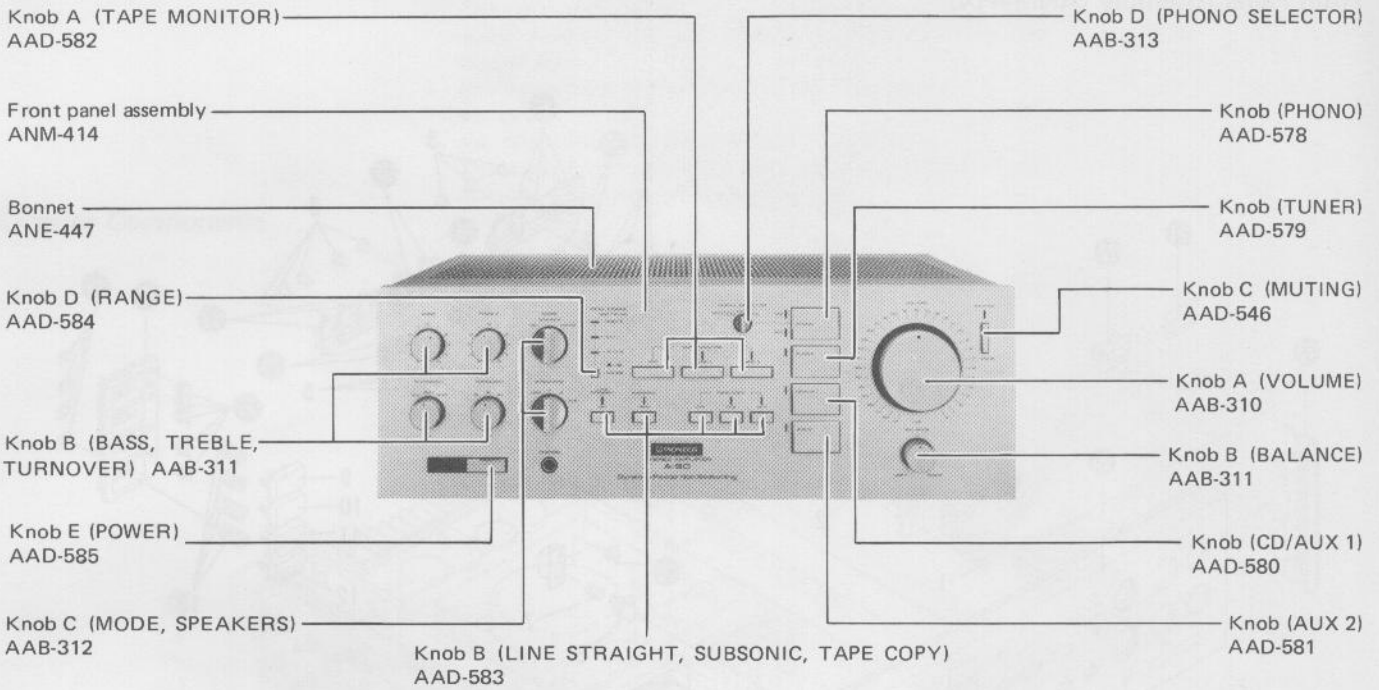


Front View

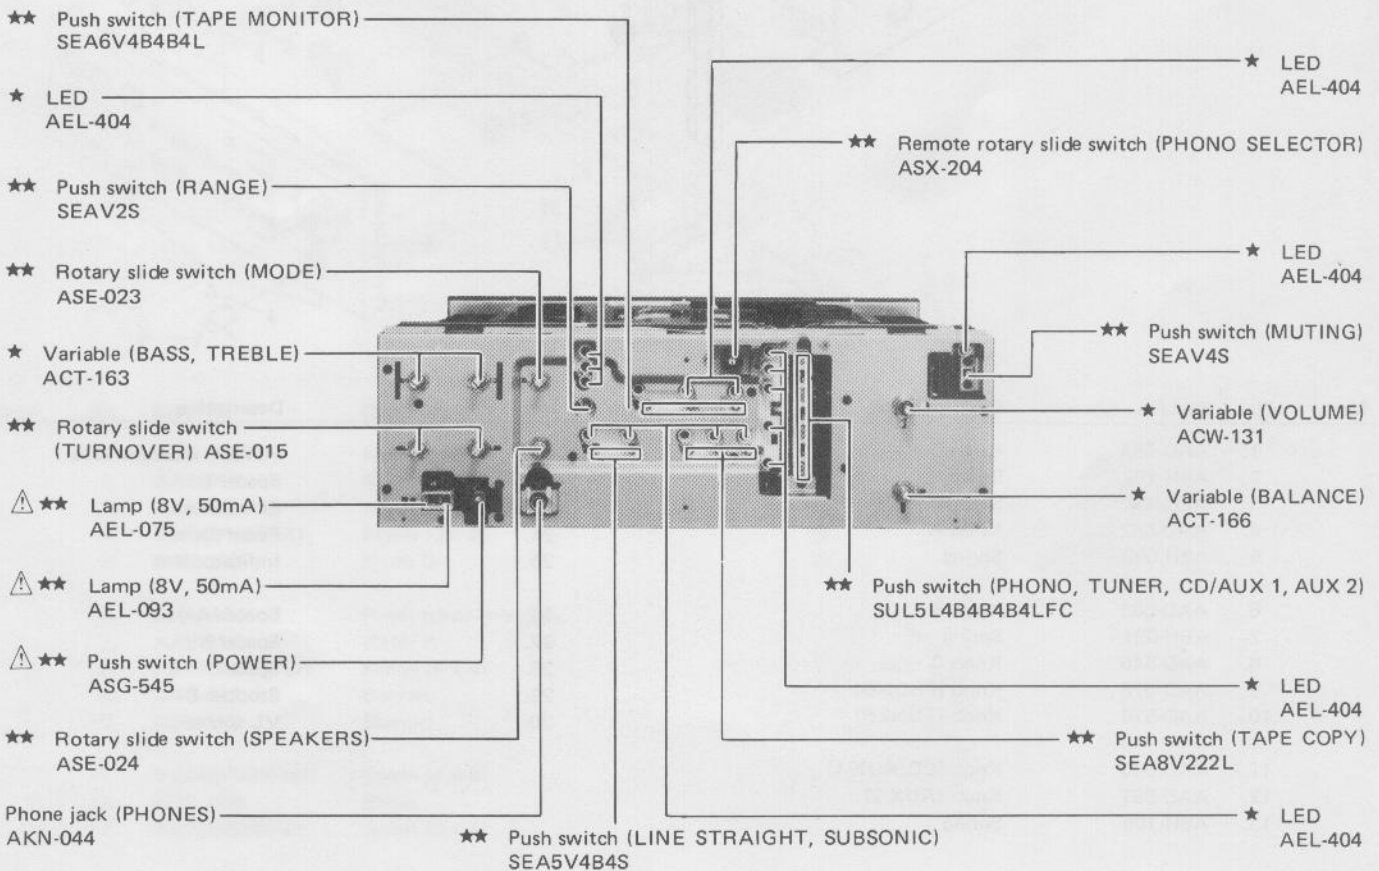


Top View

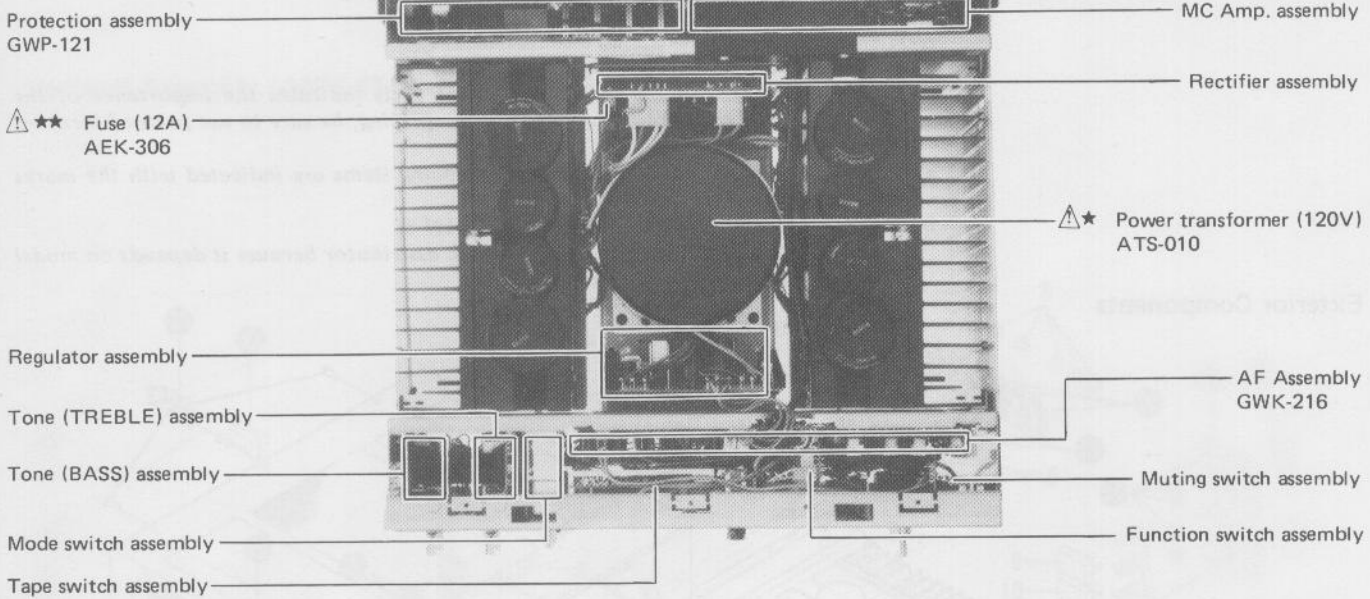

Bottom View

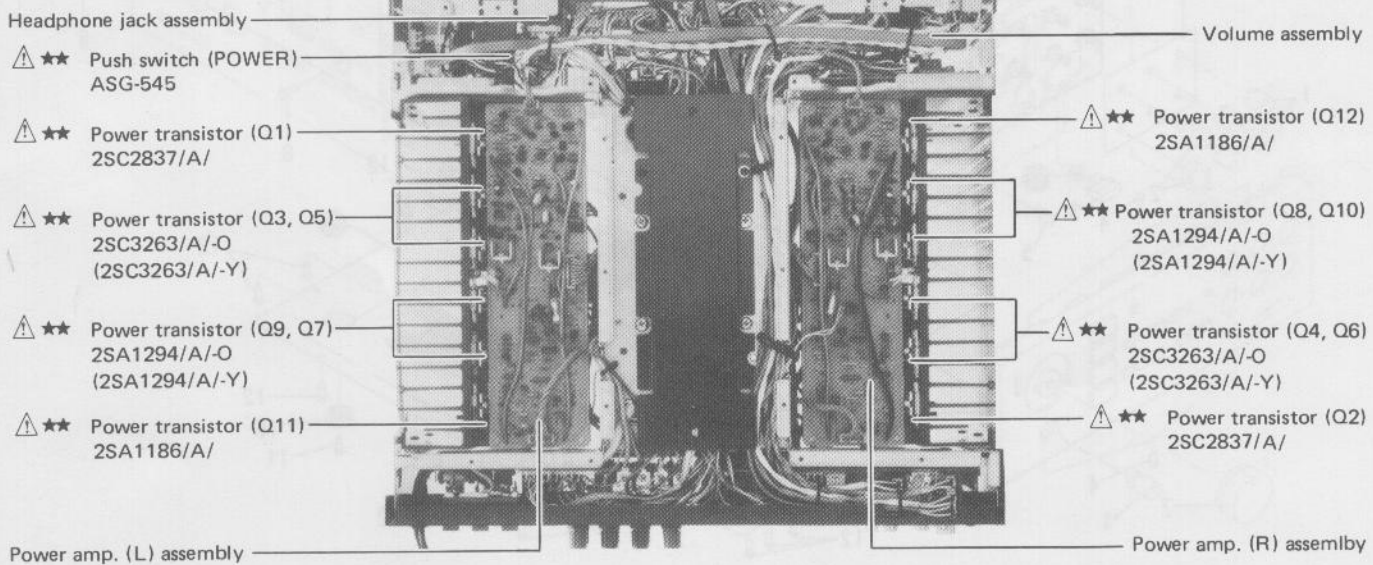

Rear Panel

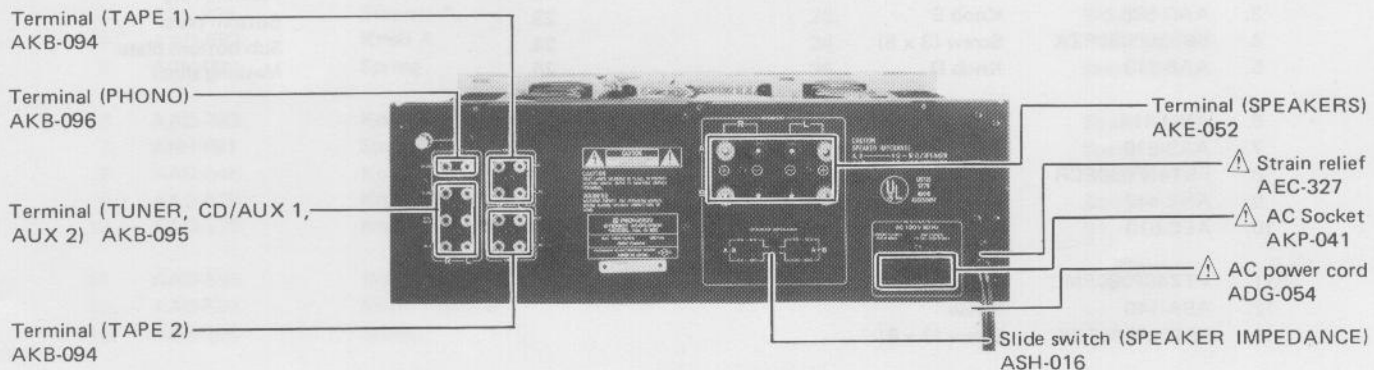


6. EXPLODED VIEWS AND PARTS LIST

NOTES:


- Parts without part number cannot be supplied.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks $\star\star$ and \star .
 $\star\star$ GENERALLY MOVES FASTER THAN \star .
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Exterior Components

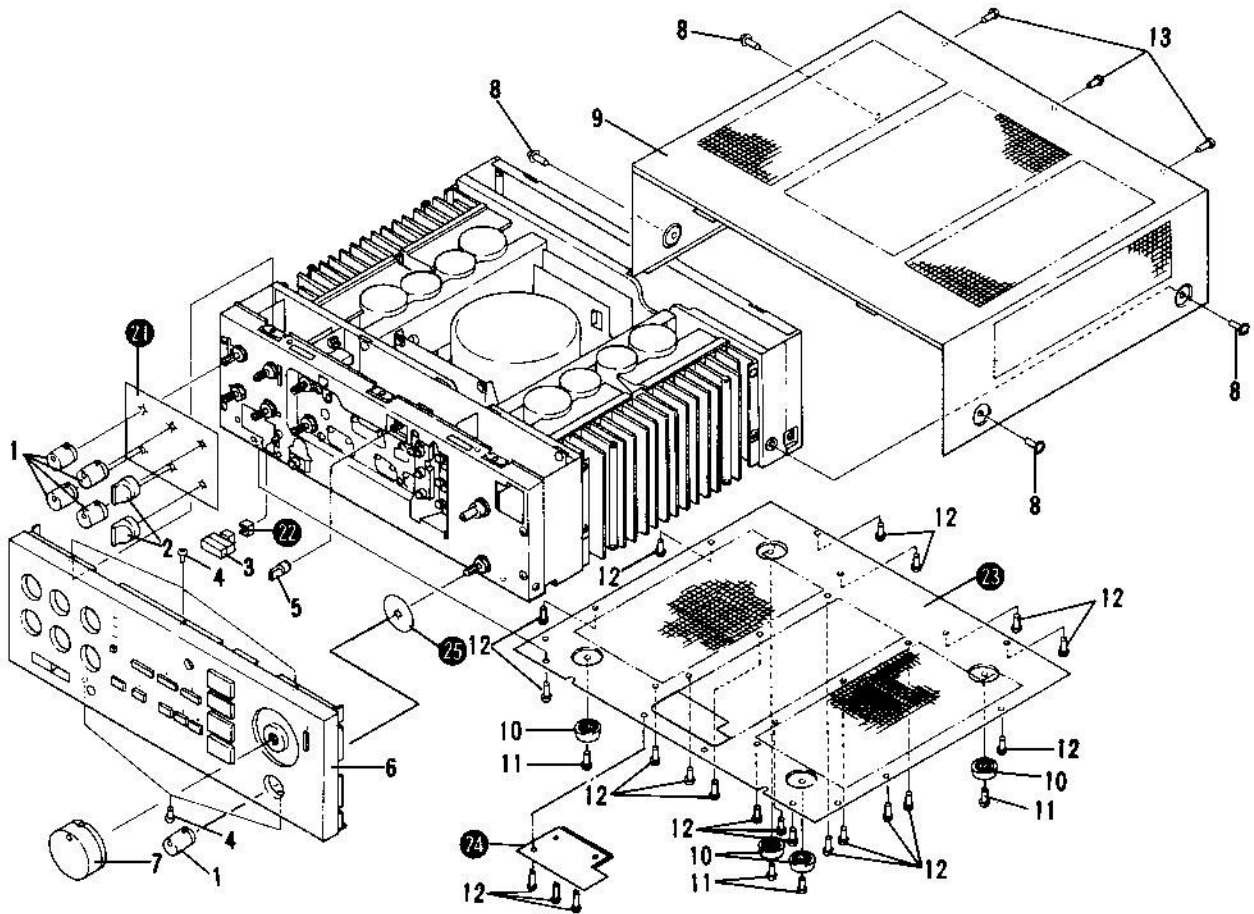

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	AAB-311	Knob B	21.			Masking sheet A
	2.	AAB-312	Knob C	22.			Flexible ring
	3.	AAD-585	Knob E	23.			Bottom plate
	4.	BBT30P080FZK	Screw (3 x 8)	24.			Sub bottom plate
	5.	AAB-313	Knob D	25.			Masking sheet
	6.	ANM-414	Front panel assembly				
	7.	AAB-310	Knob A				
	8.	FBT40P080FCR	Screw (4 x 8)				
	9.	ANE-447	Bonnet				
	10.	AEC-613	Bumper				
	11.	VTZ40P080FMC	Screw (4 x 8)				
	12.	ABA-140	Screw				
	13.	BBT30P080FZK	Screw (3 x 8)				

Front Panel Assembly (ANM-414)

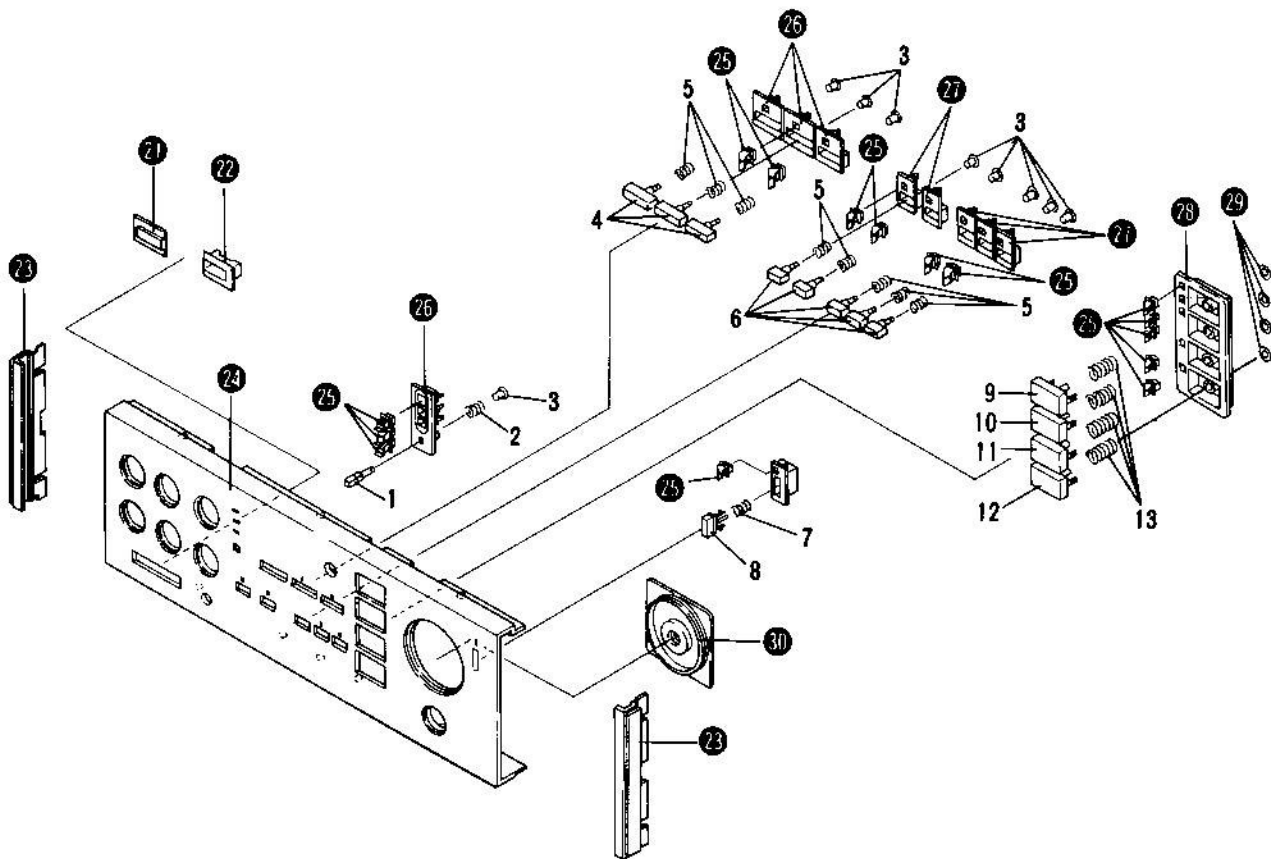


Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	AAD-584	Knob D		21.		POWER indicator lens
	2.	ABH-102	Spring		22.		Spacer E
	3.	AEC-936	Stopper A		23.		Side panel
	4.	AAD-582	Knob A		24.		Front panel
	5.	ABH-099	Spring		25.		Indicator lens
	6.	AAD-583	Knob B		26.		Spacer A
	7.	ABH-091	Spring		27.		Spacer B
	8.	AAD-546	Knob C		28.		Spacer
	9.	AAD-578	Knob (PHONO)		29.		Stopper B
	10.	AAD-579	Knob (TUNER)		30.		V.L spacer
	11.	AAD-580	Knob (CD/AUX 1)				
	12.	AAD-581	Knob (AUX 2)				
	13.	ABH-100	Spring				

A

B

C


D

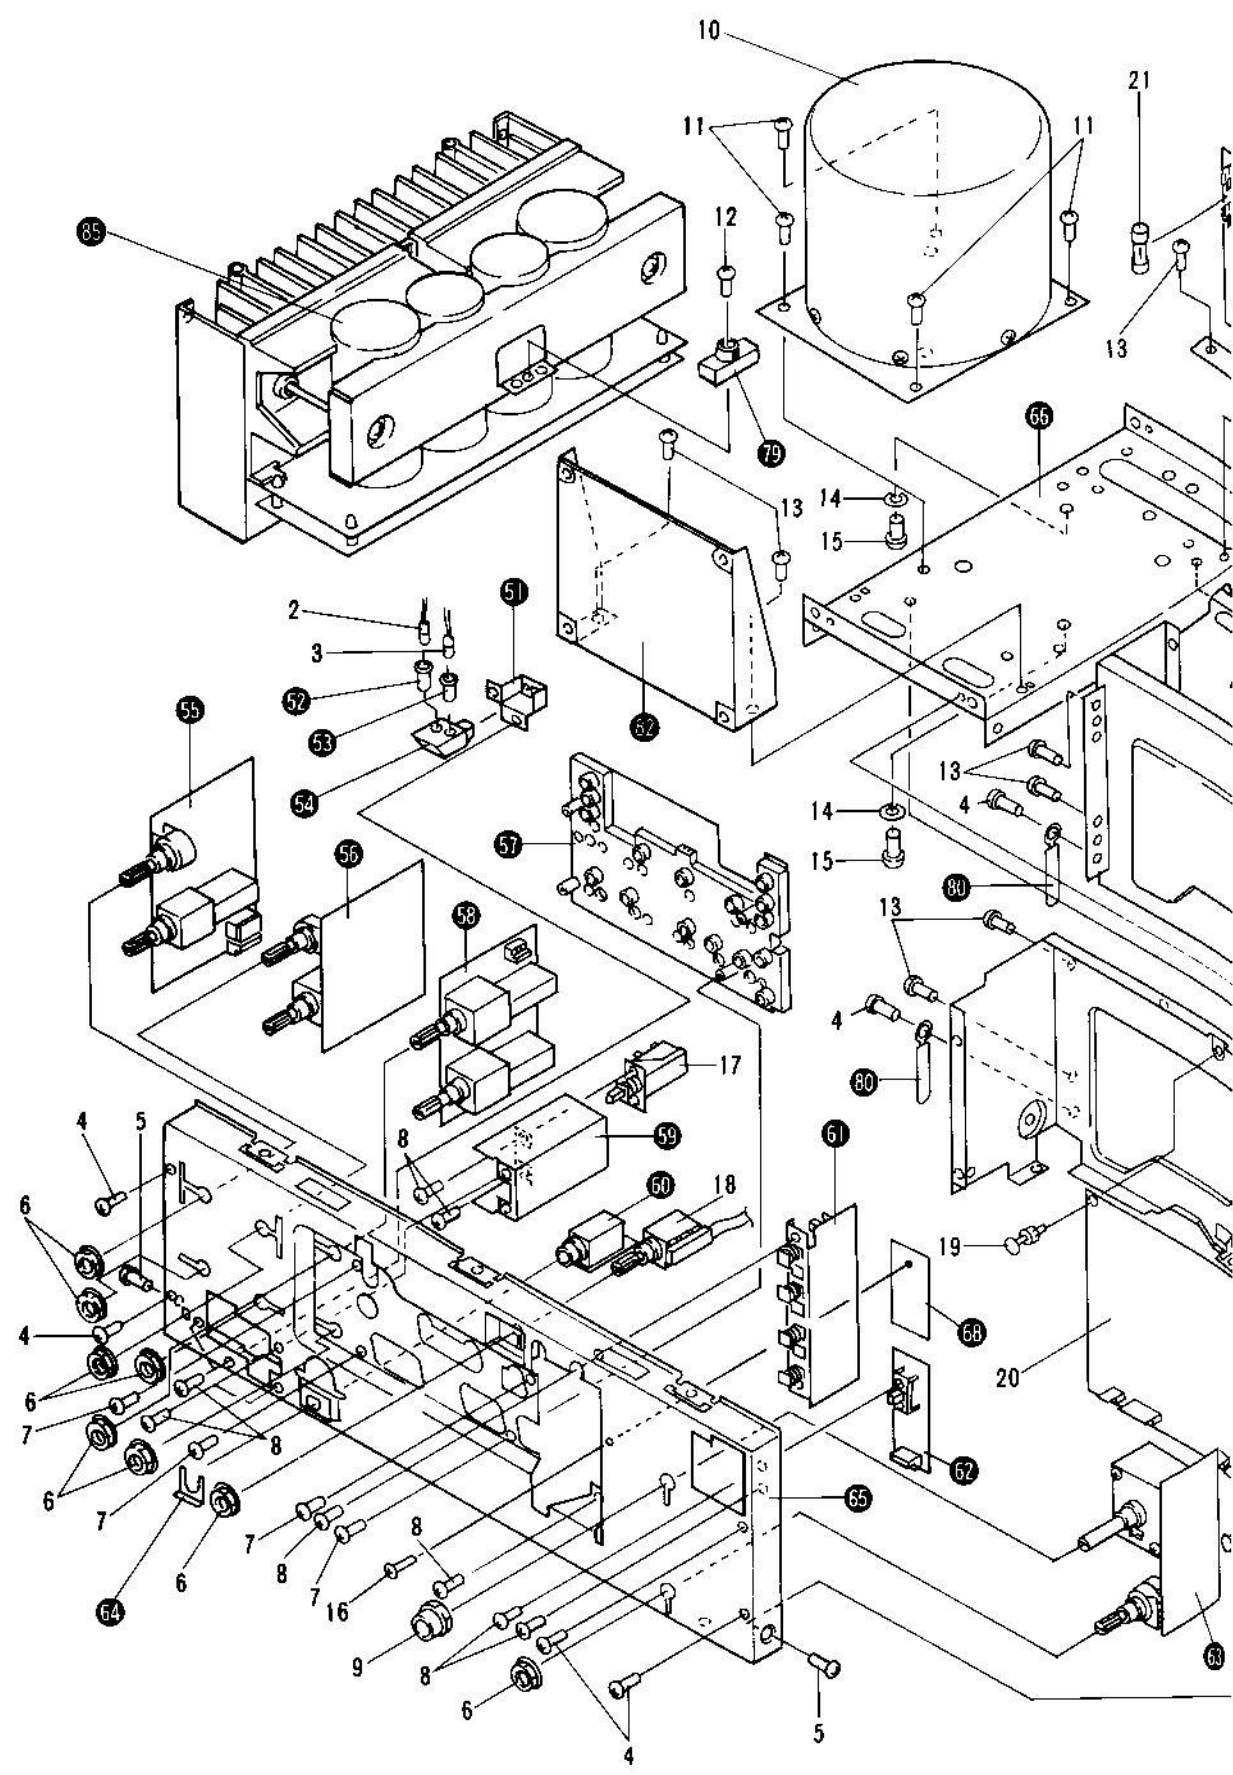

1

2

3

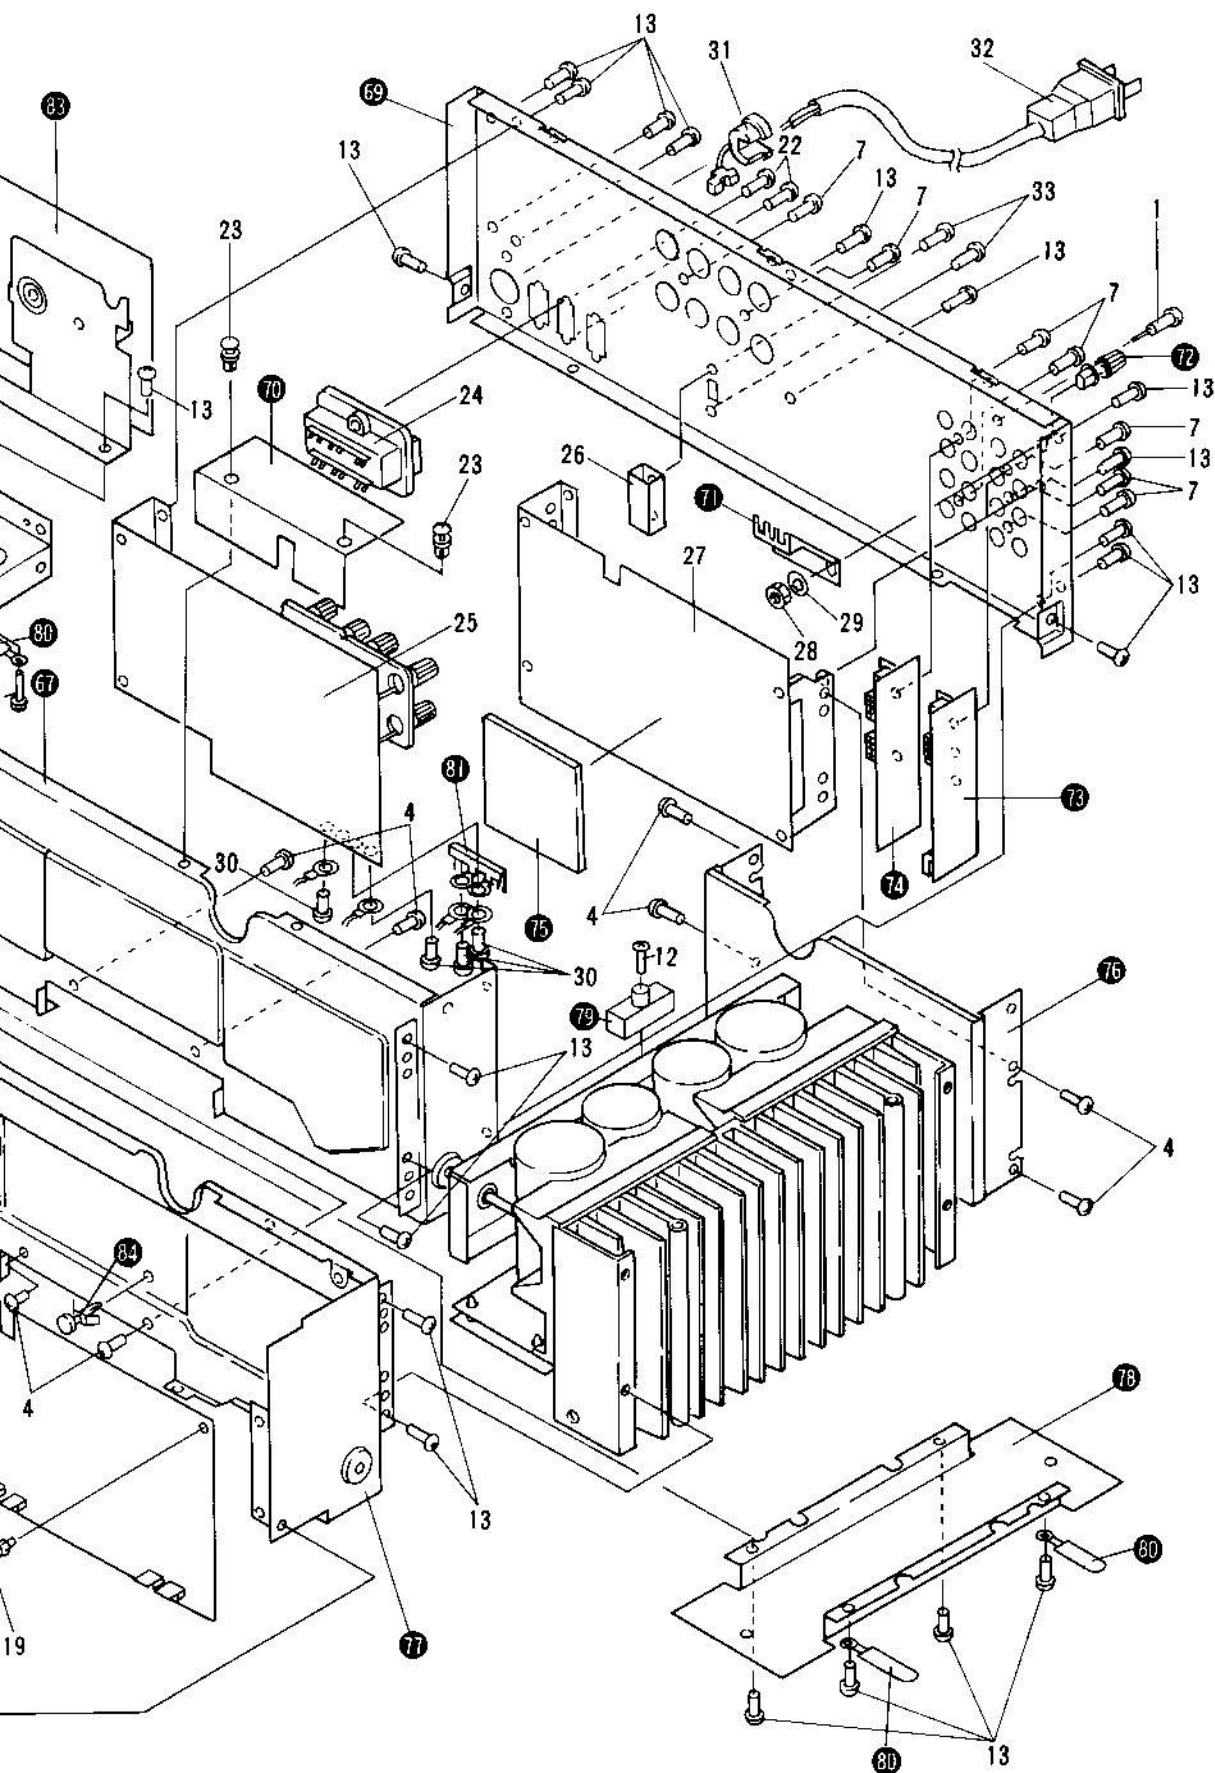

A

B

C

C

4


5

6

16

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	ABA-176	Screw		51.		Rubber holder
△★★	2.	AEL-075	Lamp (white lead)		52.		Lamp cap (green)
△★★	3.	AEL-093	Lamp (black lead)		53.		Lamp cap (red)
	4.	VBT30P080FZK	Screw (3 x 8)		54.		Lamp holder A
	5.	CBZ30P080FZK	Screw (3 x 8)		55.		Tone (BASS) assembly
	6.	ABN-048	Nut		56.		Tone (TREBLE) assembly
	7.	BBT30P100FZK	(Screw 3 x 10)		57.		Tape switch assembly
	8.	BMZ30P060FZK	(Screw 3 x 6)		58.		Mode switch assembly
	9.	ABN-028	Nut		59.		Power switch holder
△★	10.	ATS-010	Power transformer (120V)		60.		Headphone jack assembly
	11.	VTZ40P080FZK	Screw (4 x 8)		61.		Function switch assembly
	12.	VBZ30P100FZK	Screw (3 x 10)		62.		Muting switch assembly
	13.	BBT30P080FZK	Screw (3 x 8)		63.		Volume assembly
	14.	WS50FMC	Washer		64.		Mounting plate
	15.	BMZ50P100FMC	Screw (5 x 10)		65.		Panel stay
	16.	VBT30P080FZK	Screw (3 x 8)		66.		Transformer frame
△★★	17.	ASG-545	Push switch (POWER)		67.		Rear frame
★★	18.	ASX-204	Remote rotary switch		68.		Servo regulator assembly
	19.	AEC-384	Rivet		69.		Rear panel
	20.	GWK-216	AF assembly		70.		Shielding plate
△★★	21.	AEK-306	Fuse (12A)		71.		Grounding terminal
	22.	MTZ30P100FKZ	Screw (3 x 10)		72.		Terminal (GND)
	23.	AEC-471	Rivet		73.		Terminal (INPUT) assembly
△	24.	AKP-041	AC socket		74.		Terminal (TAPE) assembly
	25.	GWP-121	Protection assembly		75.		Cushion
	26.	ASH-016	Slide switch		76.		Shielding case
	27.	AWF-058	MC amp. assembly		77.		Front frame
	28.	B71-010	Nut		78.		Wire guide
	29.	WG70FUC	Washer		79.		Terminal
	30.	PMZ30P060SAD	Screw (3 x 6)		80.		Binder
△	31.	AEC-327	Strain relief		81.		Grounding plate
△	32.	ADG-054	AC power cord		82.		Regulator assembly
	33.	VMT30P060FZK	Screw (3 x 6)		83.		Rectifier assembly
					84.		Spacer
					85.		Heat sink assembly

Heat Sink Assembly

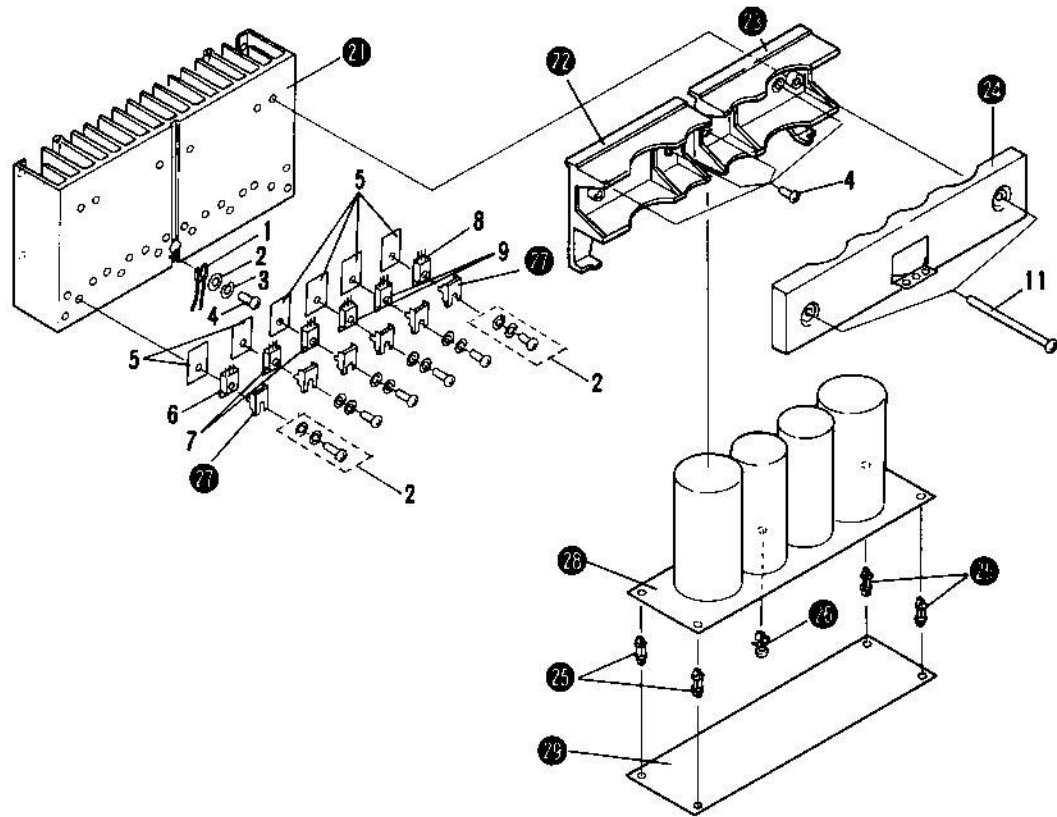


Mark	No.	Part No.	Description
★	1.	STV2H	Varistor (Part of 29)
	2.	ABA-276	Screw
	3.	
	4.	VBZ30P100FZK	Screw (3 x 10)
	5.	AEC-818	Insulator
⚠★★	6.	2SC2837/A/	Power transistor
⚠★★	7.	2SC3263/A/-O* (2SC3263/A/-Y*)	Power transistor
⚠★★	8.	2SA1294/A/-O* (2SA1294/A/-Y*)	Power transistor
⚠★★	9.	2SA1186/A/	Power transistor
		*hfe must have the same value.	
	11.	PMZ40P800FZB	Screw (4 x 80)
	21.		Heat sink
	22.		Capacitor holder B
	23.		Capacitor holder A
	24.		Capacitor holder C
	25.		PCB holder
	26.		Spacer
	27.		Transistor holder
	28.		Output (L) assembly (L ch)
			Output (R) assembly (R ch)
	29.		Power amp. (L) assembly (L ch)
			Power amp. (R) assembly (R ch)


7. P.C.BOARDS CONNECTION DIARAM

TERMINAL (TAPE) ASS'Y

A

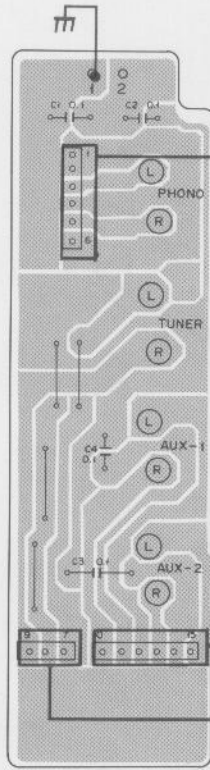


B

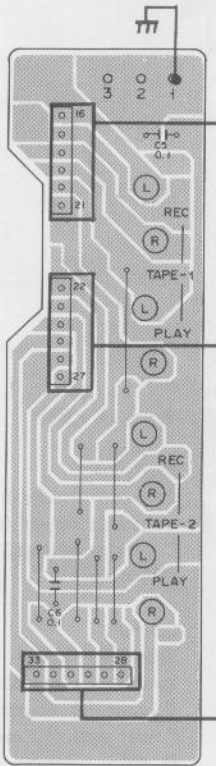


C

D

TERMINAL (INPUT) ASS'Y

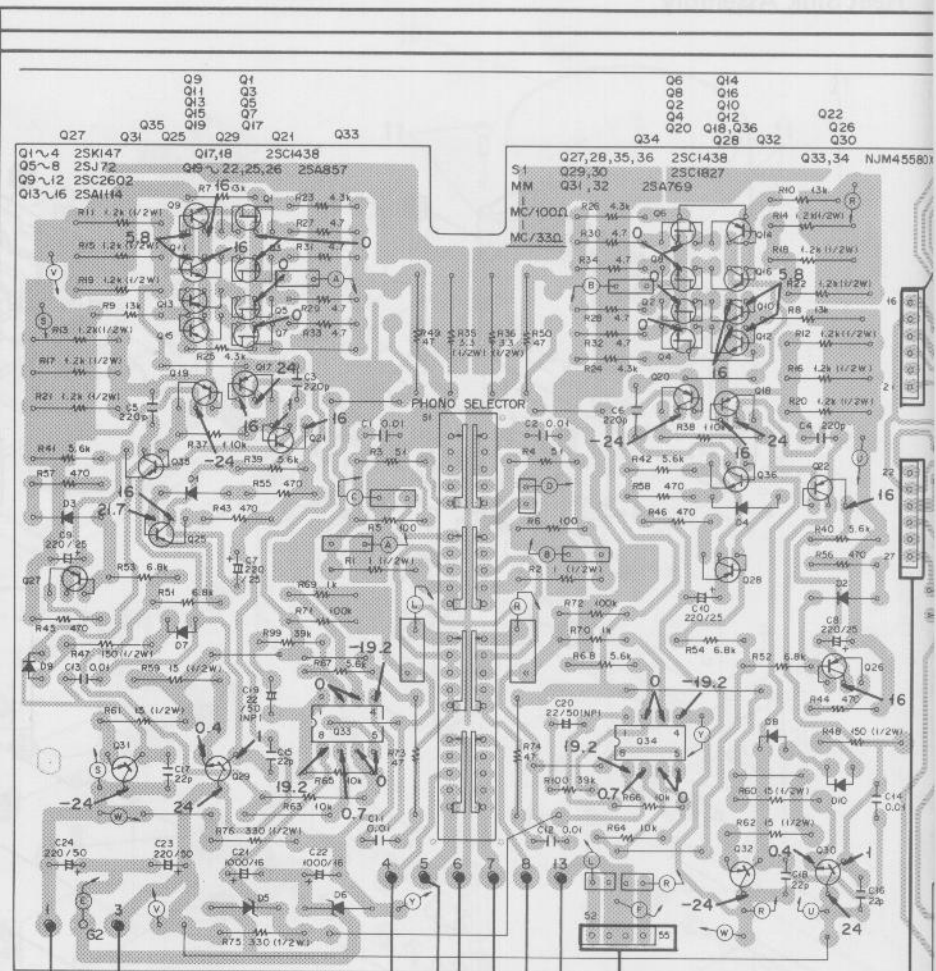


MC AMP ASS'Y AWF-058

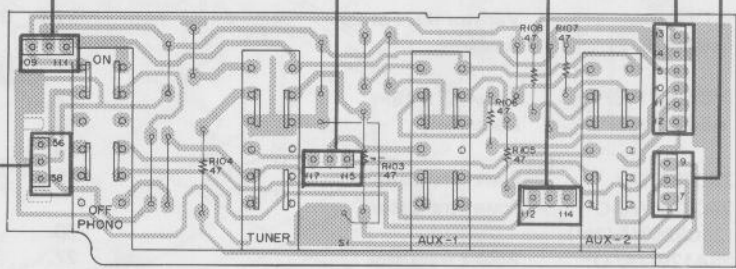


FUNCTION SWITCH ASS'Y

AF ASS'Y GWK-216




MUTING SWITCH ASS'Y

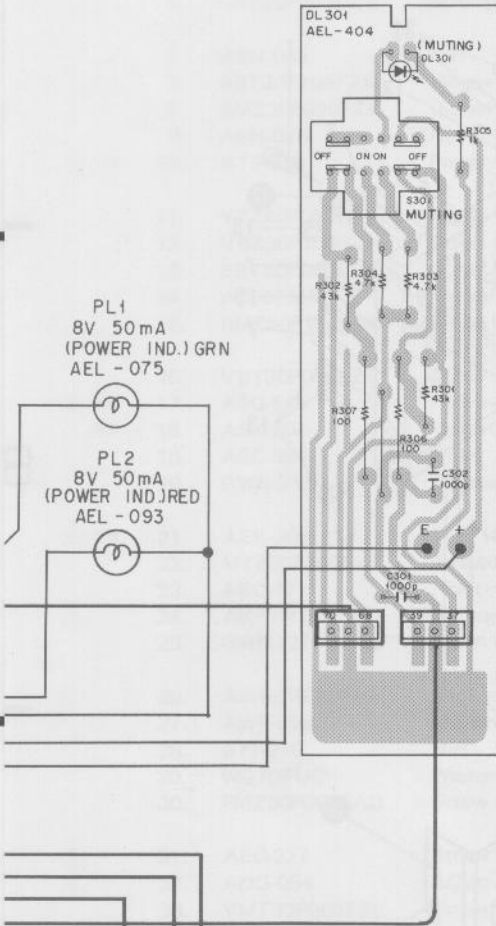

SERVO REGULATOR ASS'Y

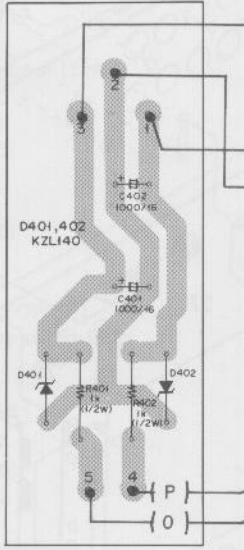


Q116 Q112 Q108 Q110 Q104 Q102,106 Q118 Q114 Q117 Q119 Q115 Q105 Q101

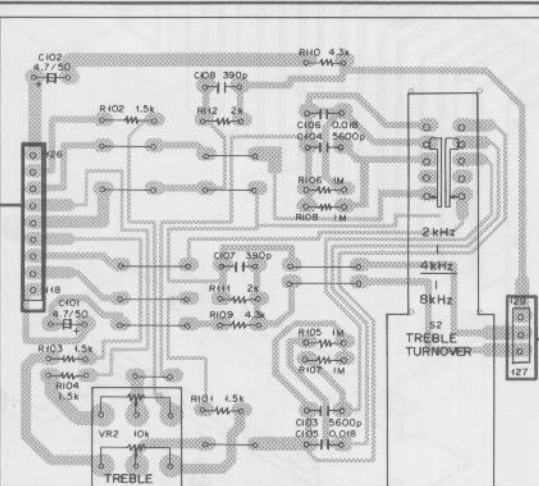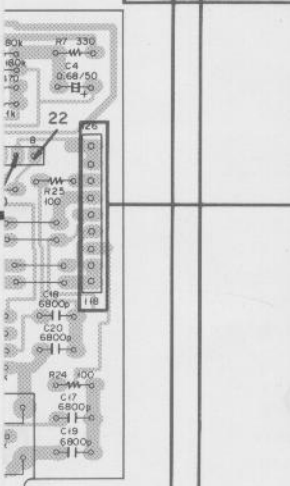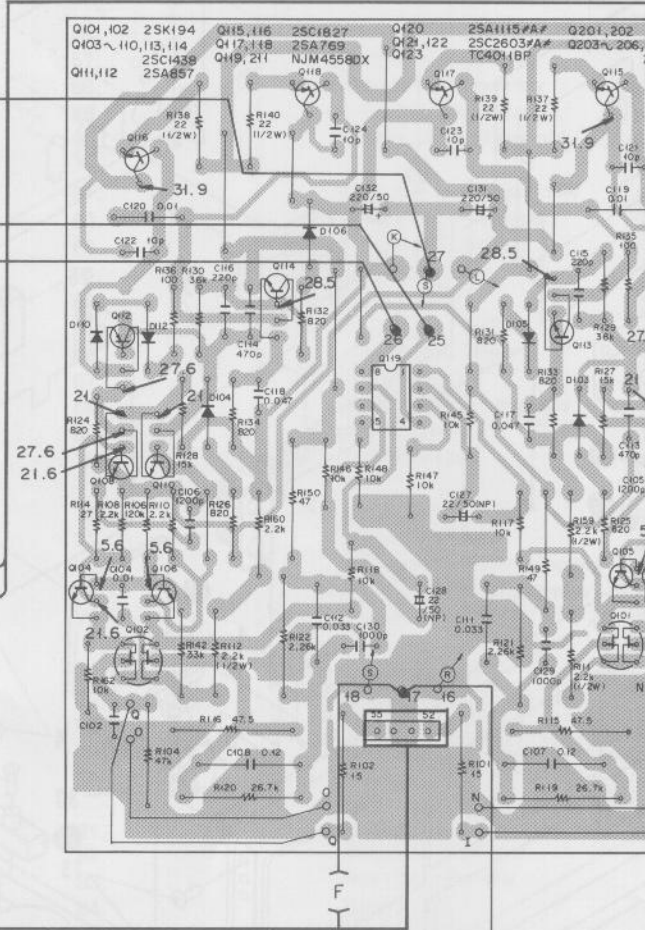

TONE TREBLE ASS'Y



MODE SWITCH ASS'Y

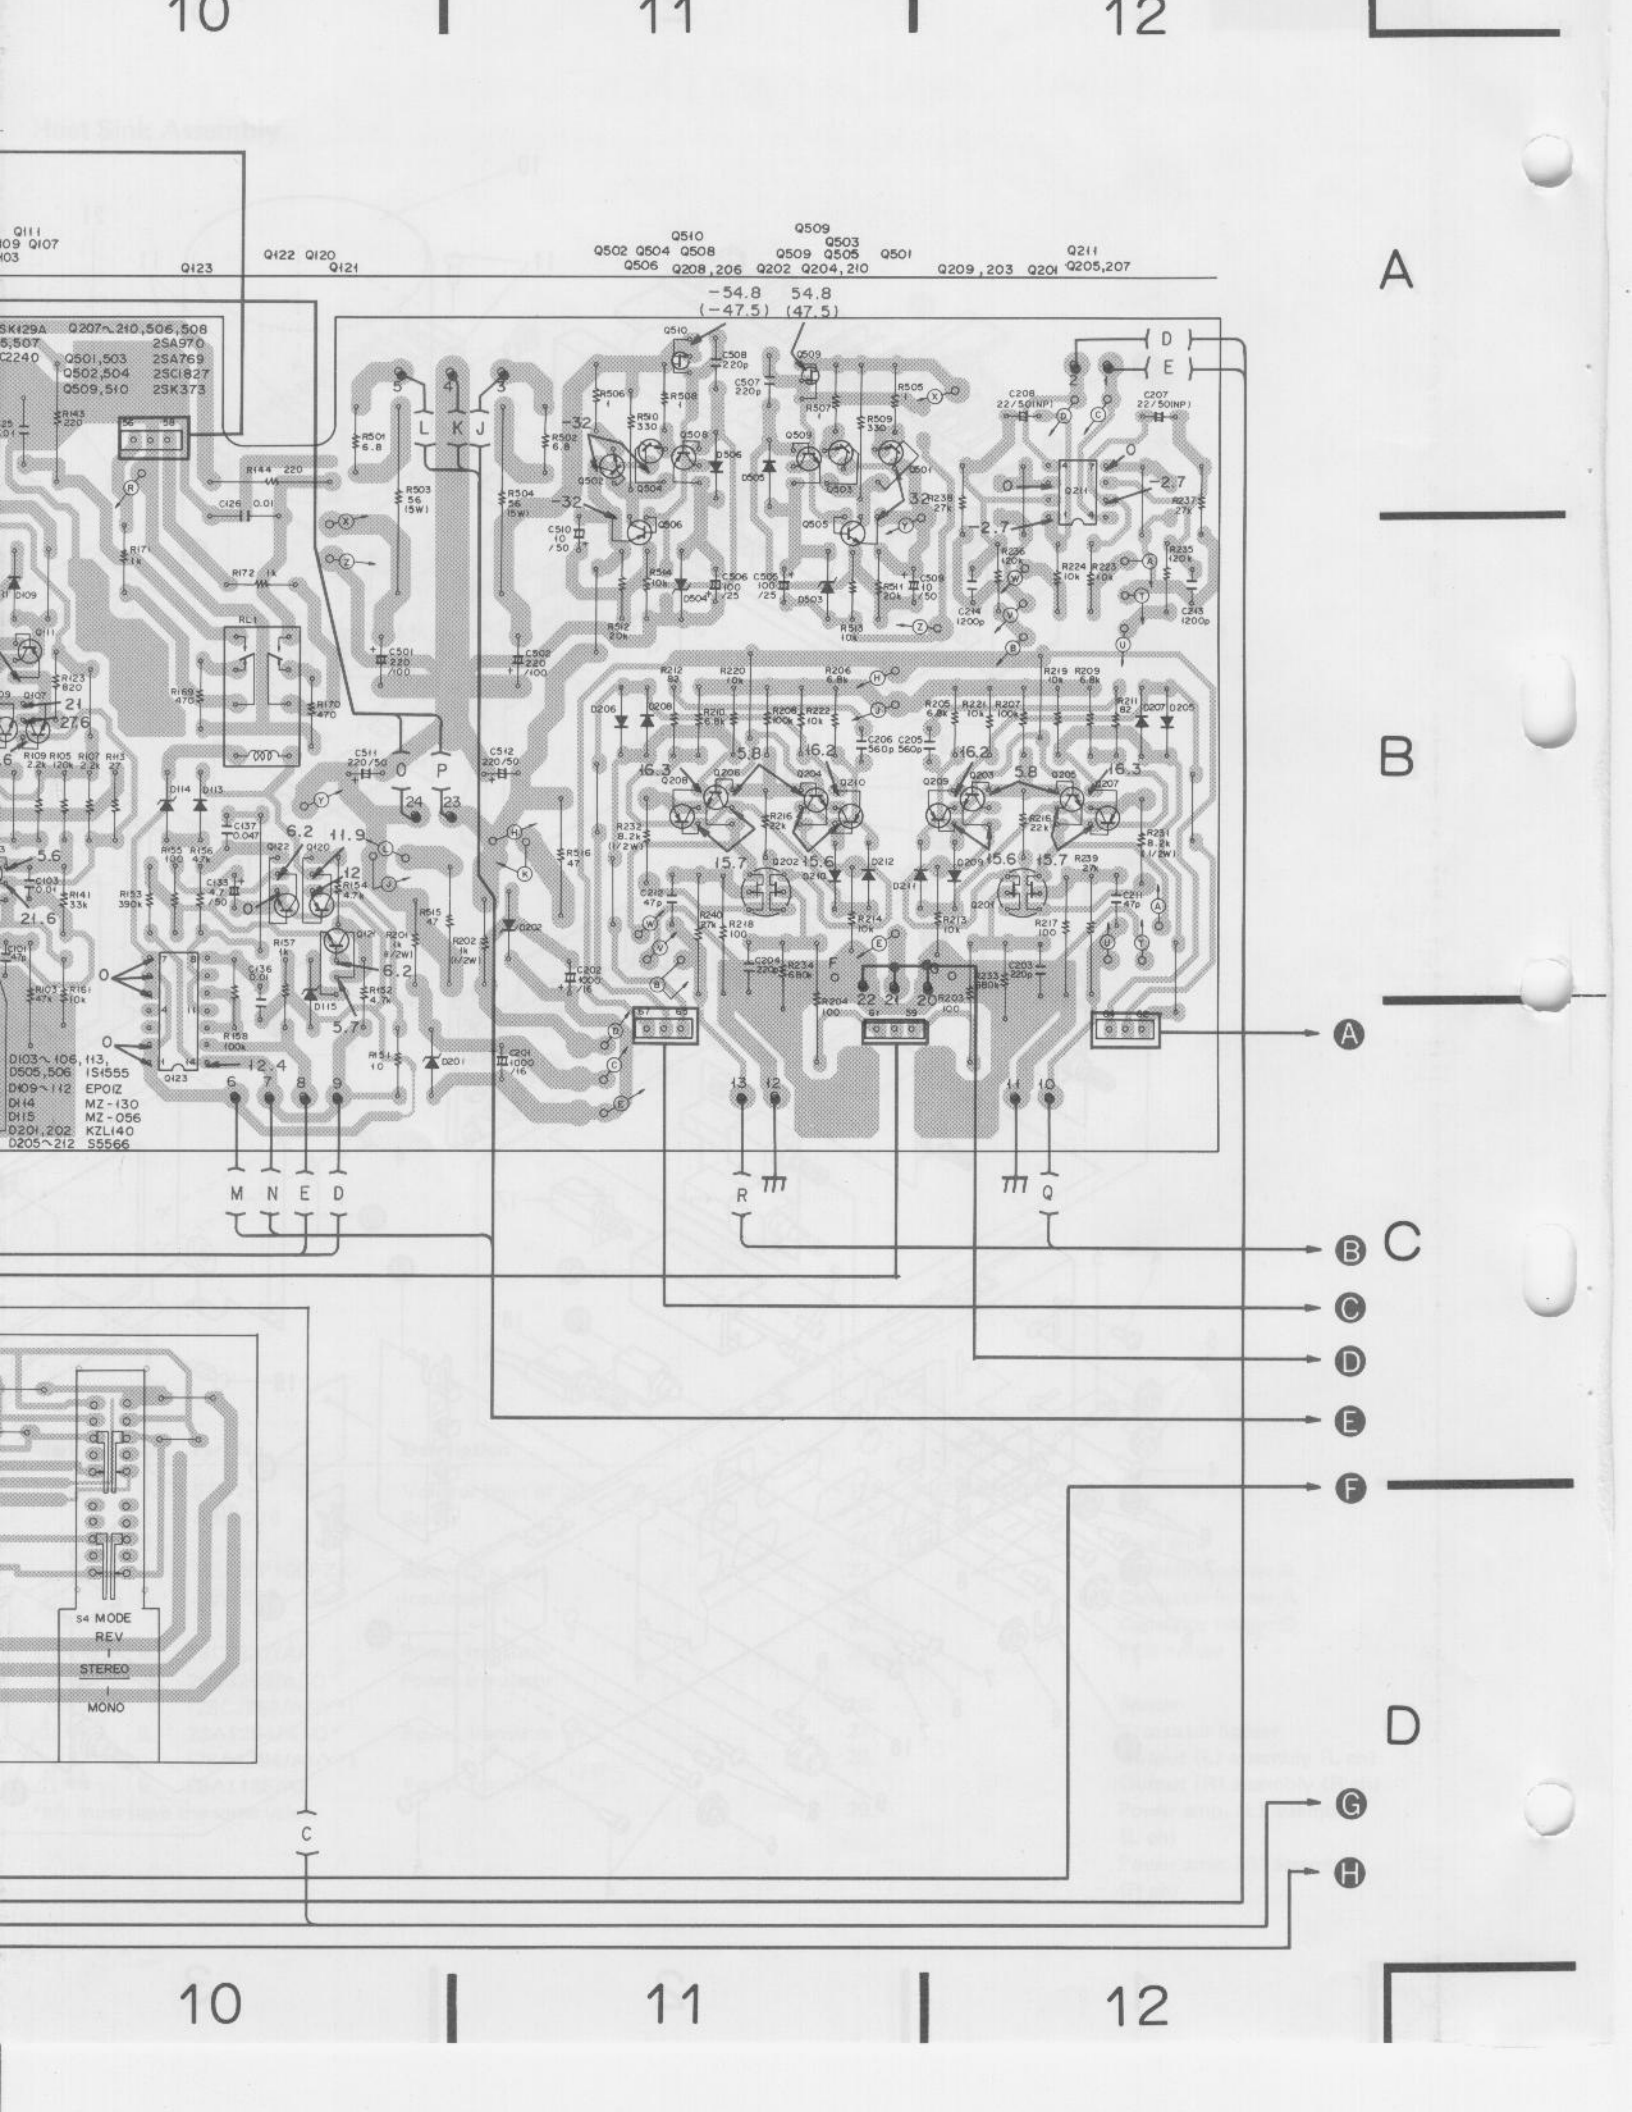

POWER (L) ASS'Y

OUTPUT (L) ASS'Y

A
B
C
D
E
F
G
H

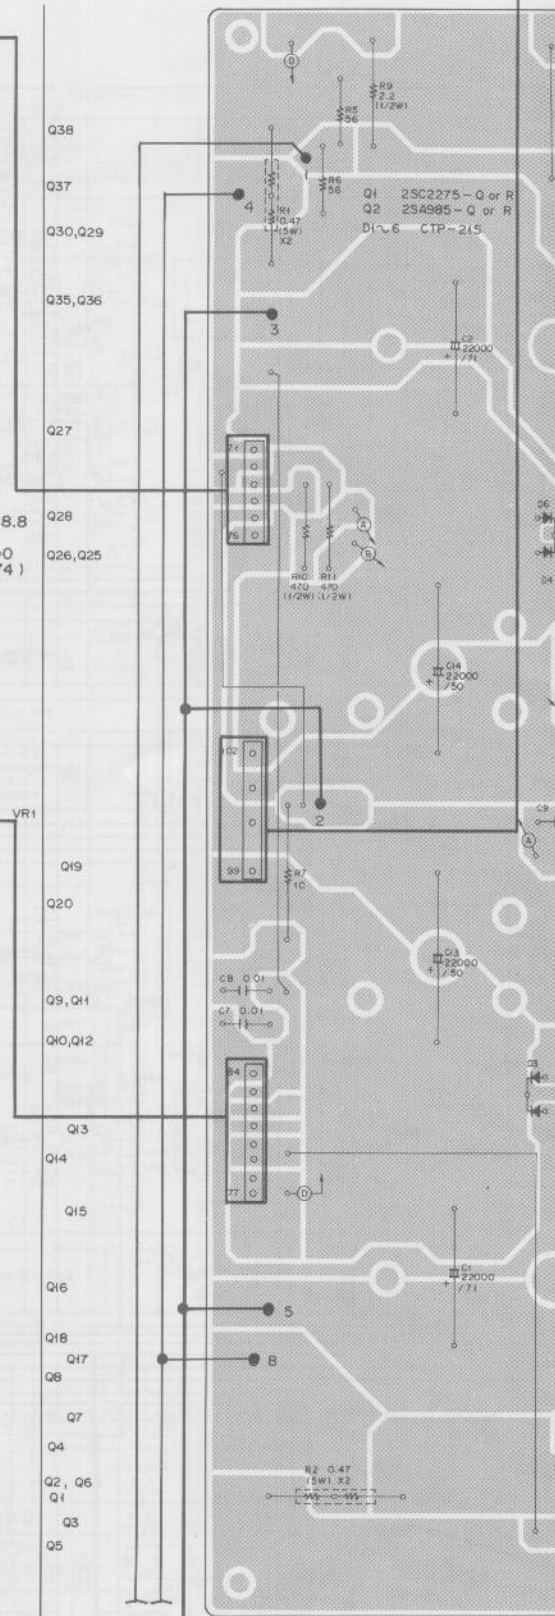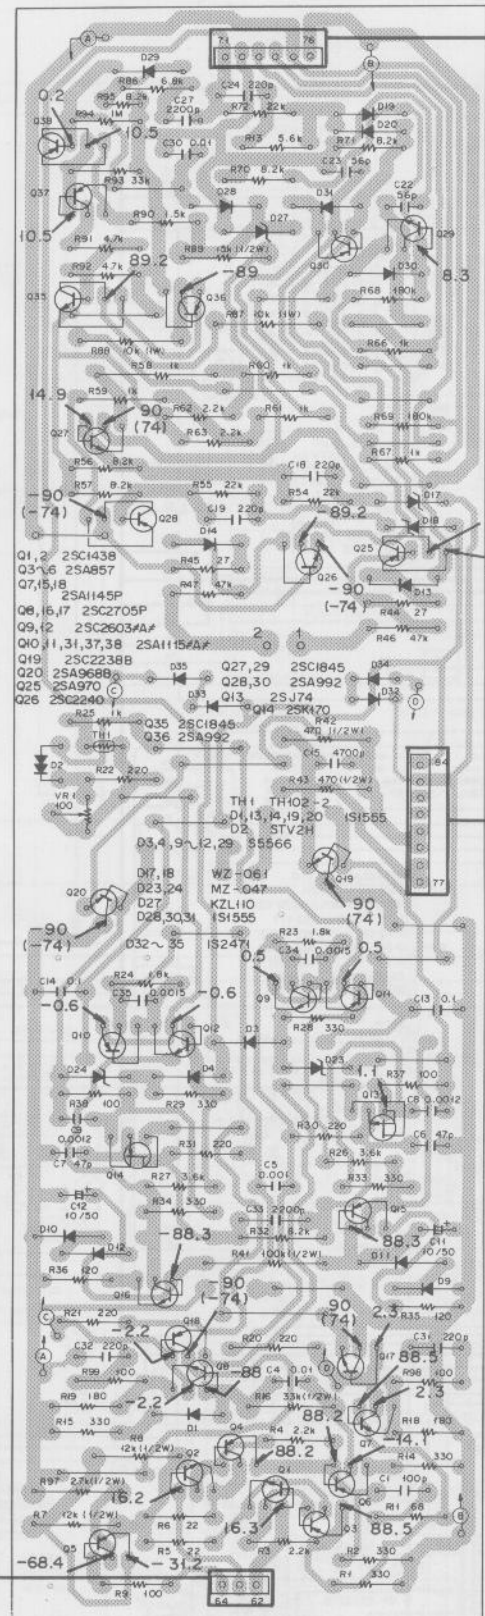


1 2 3


Q1,2 2SC2837 #A #
 Q3~6 2SC3263 #A #
 Q7~10 2SA1294 #A #
 Q11,12 2SA1186 #A #

OUTPUT (R) ASS'Y

POWER (R) ASS'Y

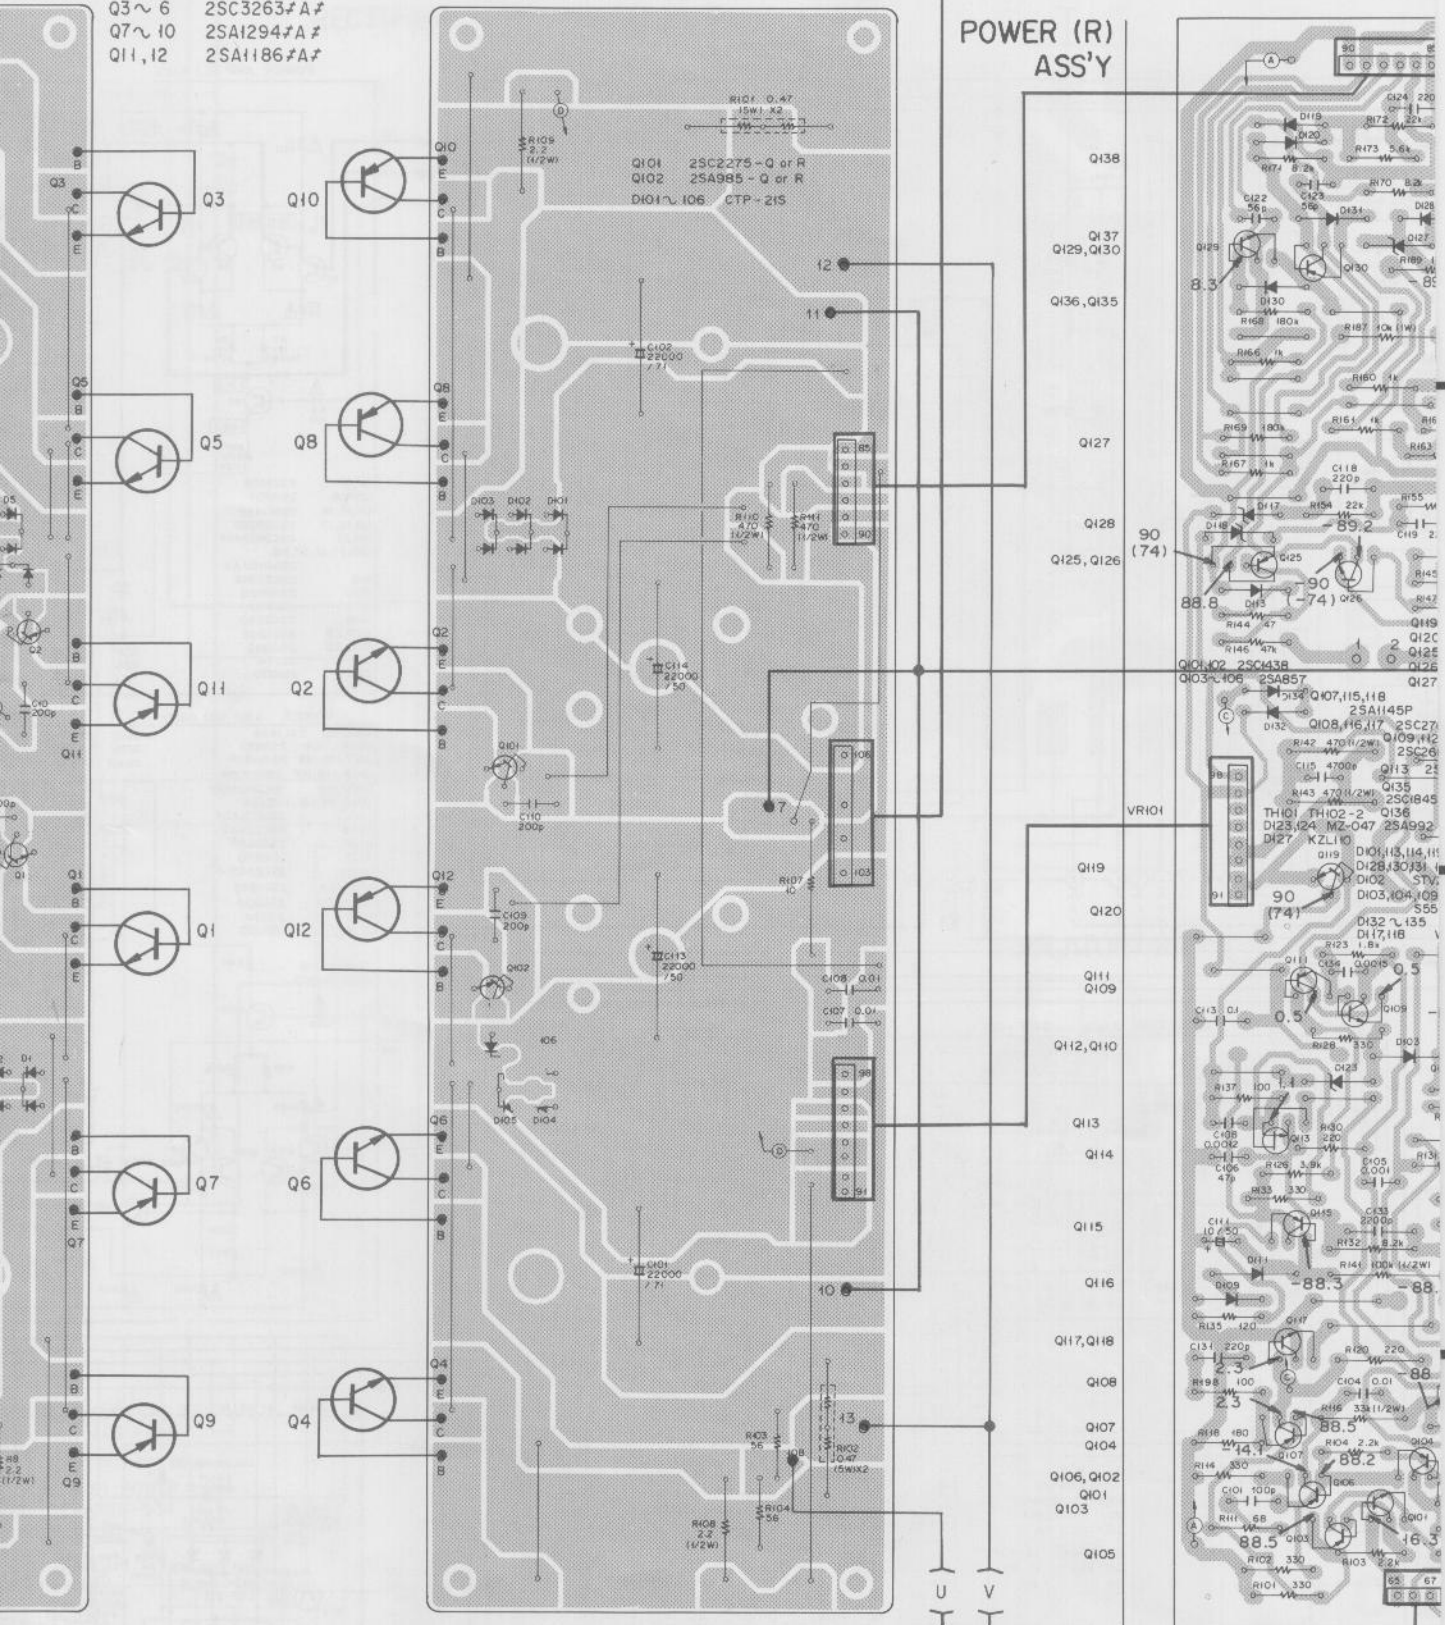


RECTIFIER ASS'Y

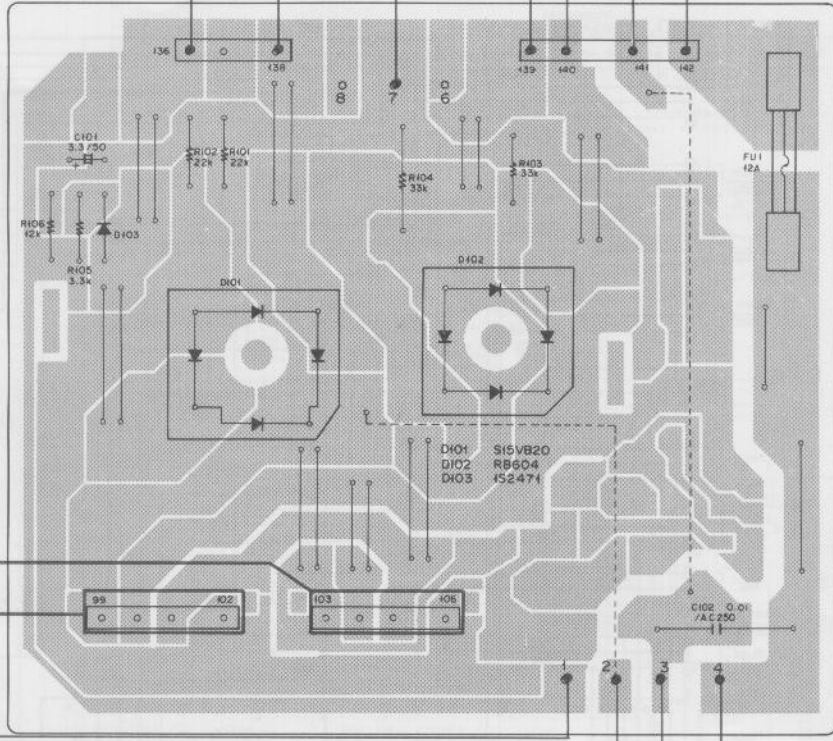

A


B

REGULATOR ASS'Y

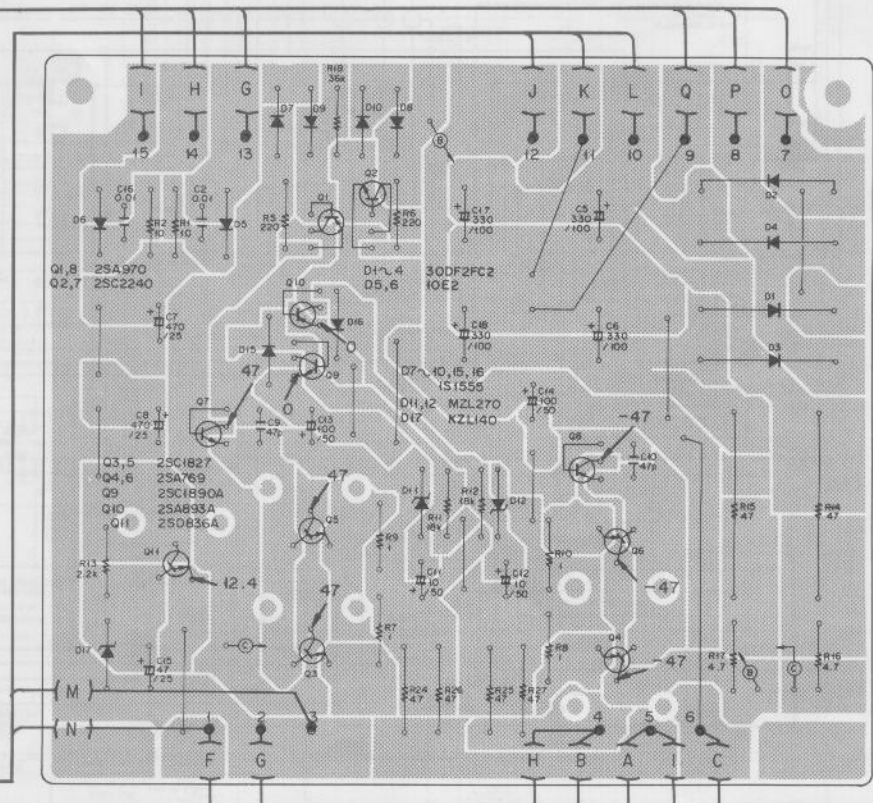


C

D

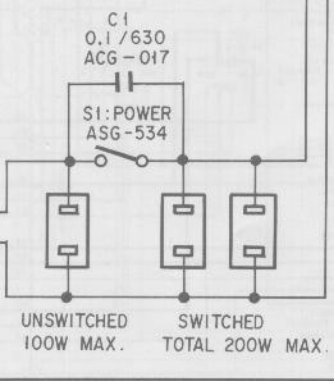

- Q1, Q2
- Q10
- Q9
- Q7
- Q8
- Q5
- Q6
- Q11
- Q3
- Q4

8. SCHEMATIC DIAGRAM

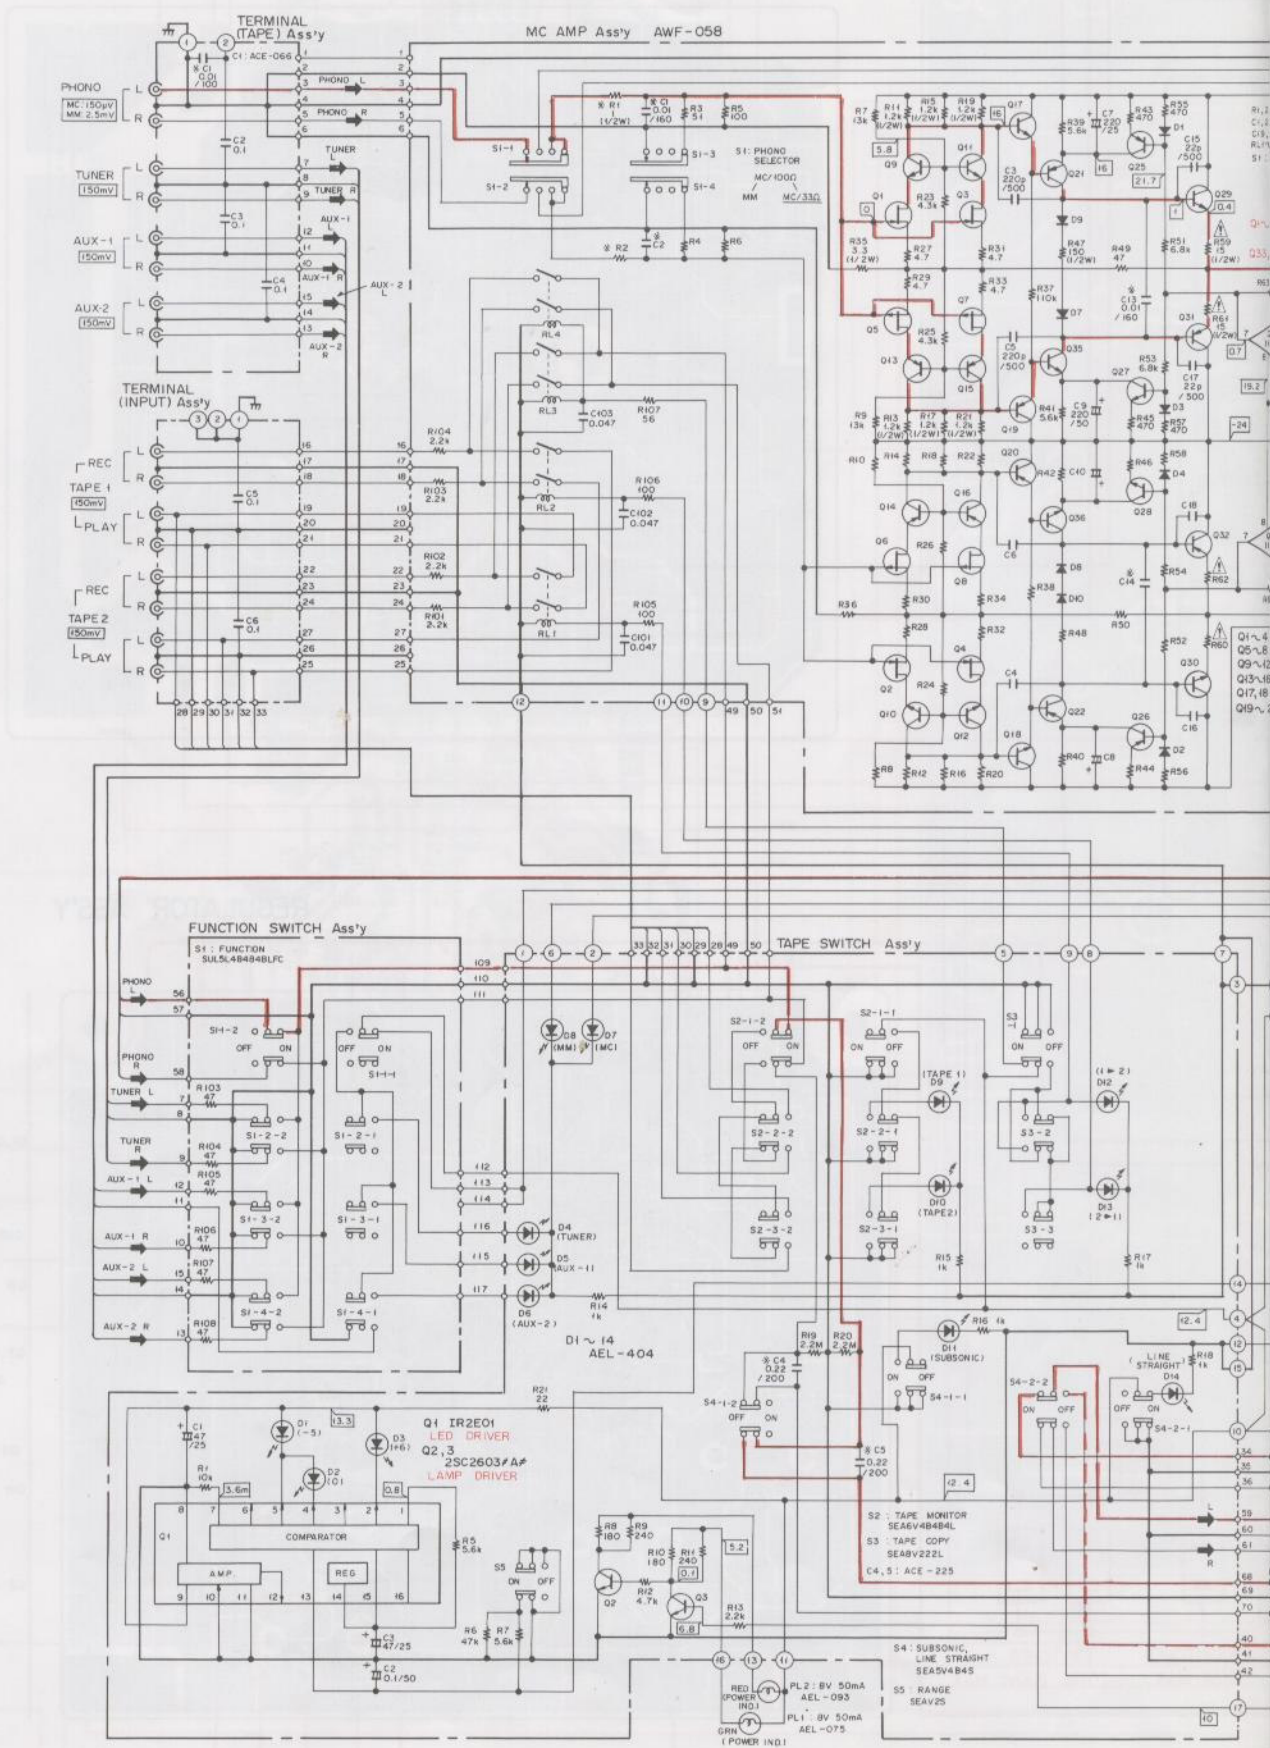

A


B


C

D

NOTE:

The indicated semiconductors are representative ones only. Other alternative semiconductors may be used and are listed in the parts list.

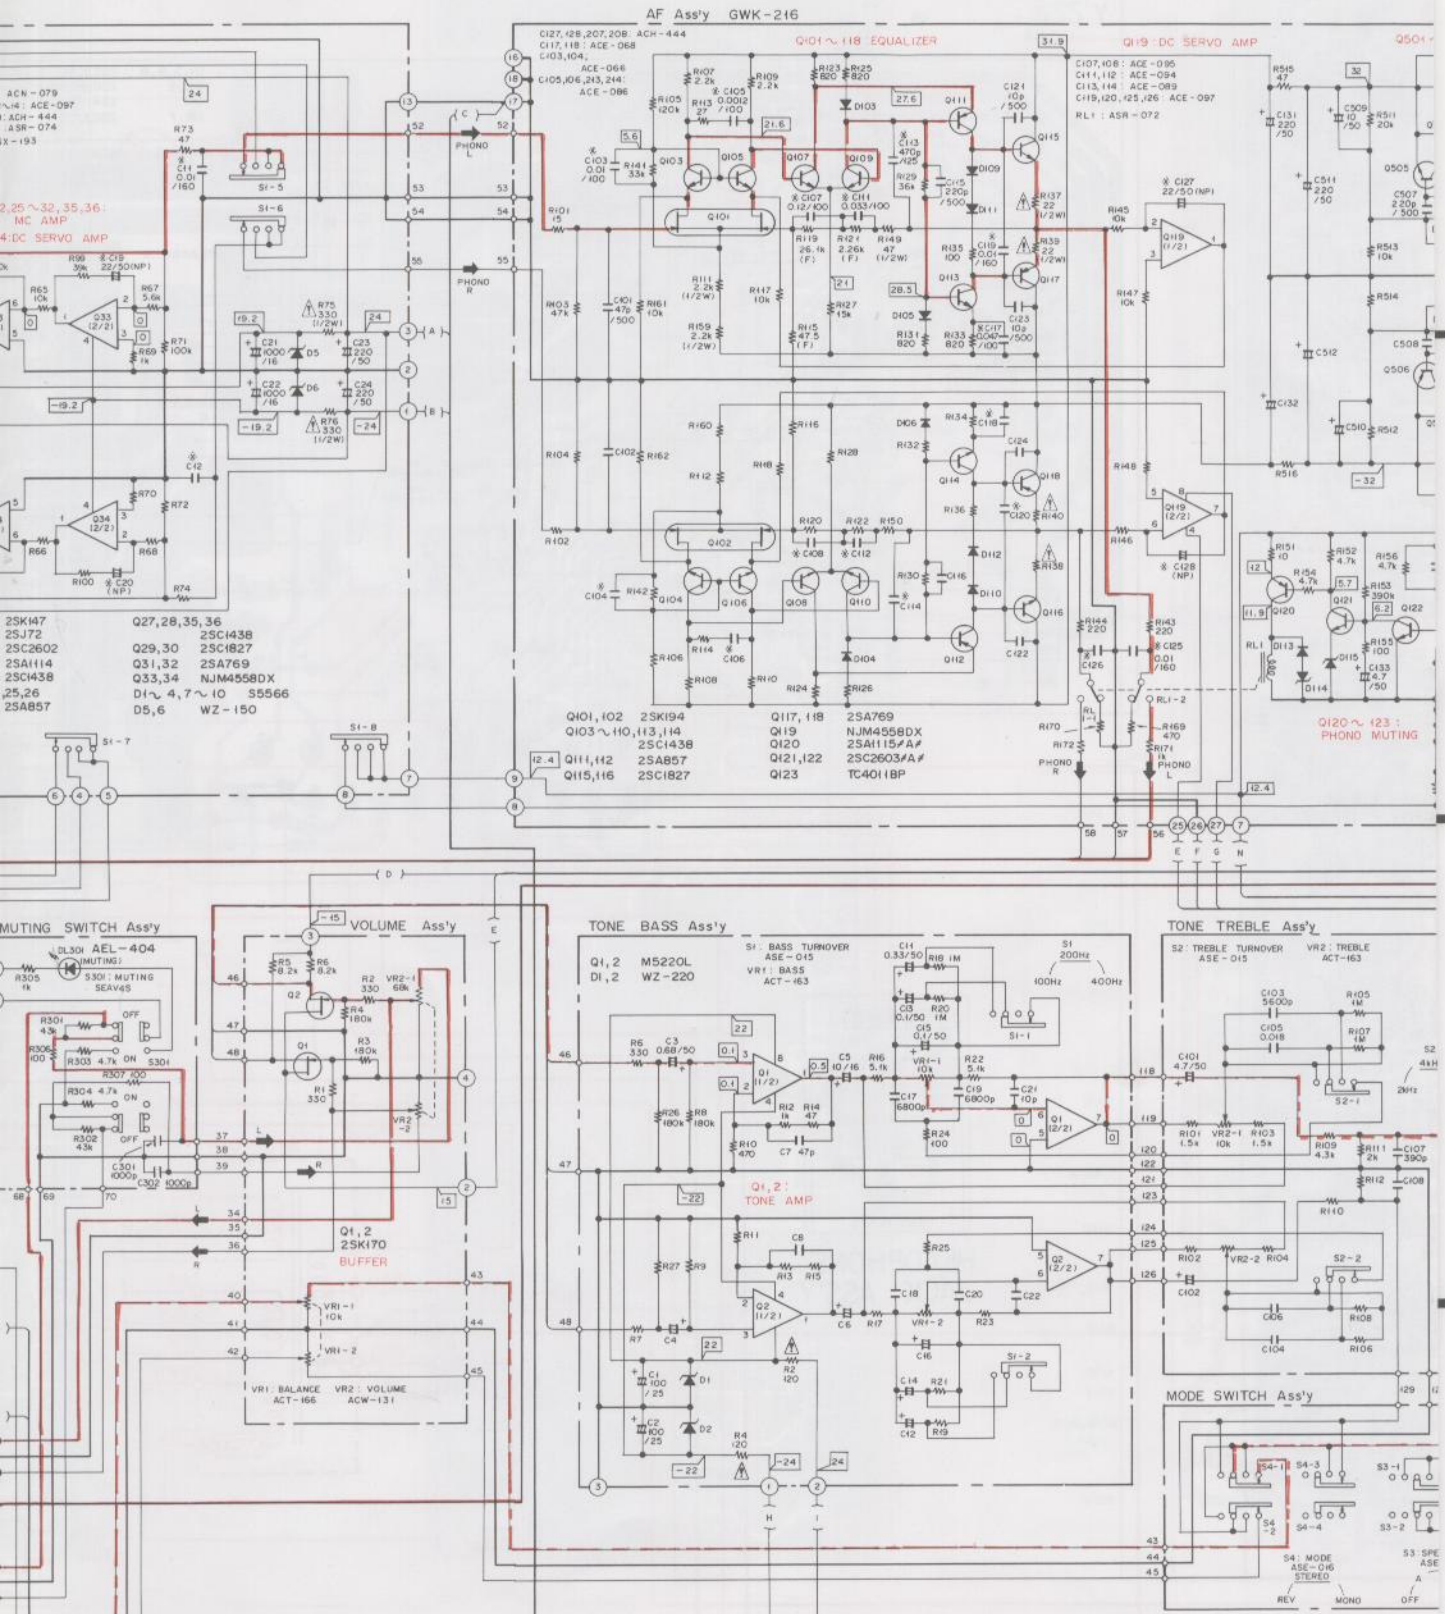



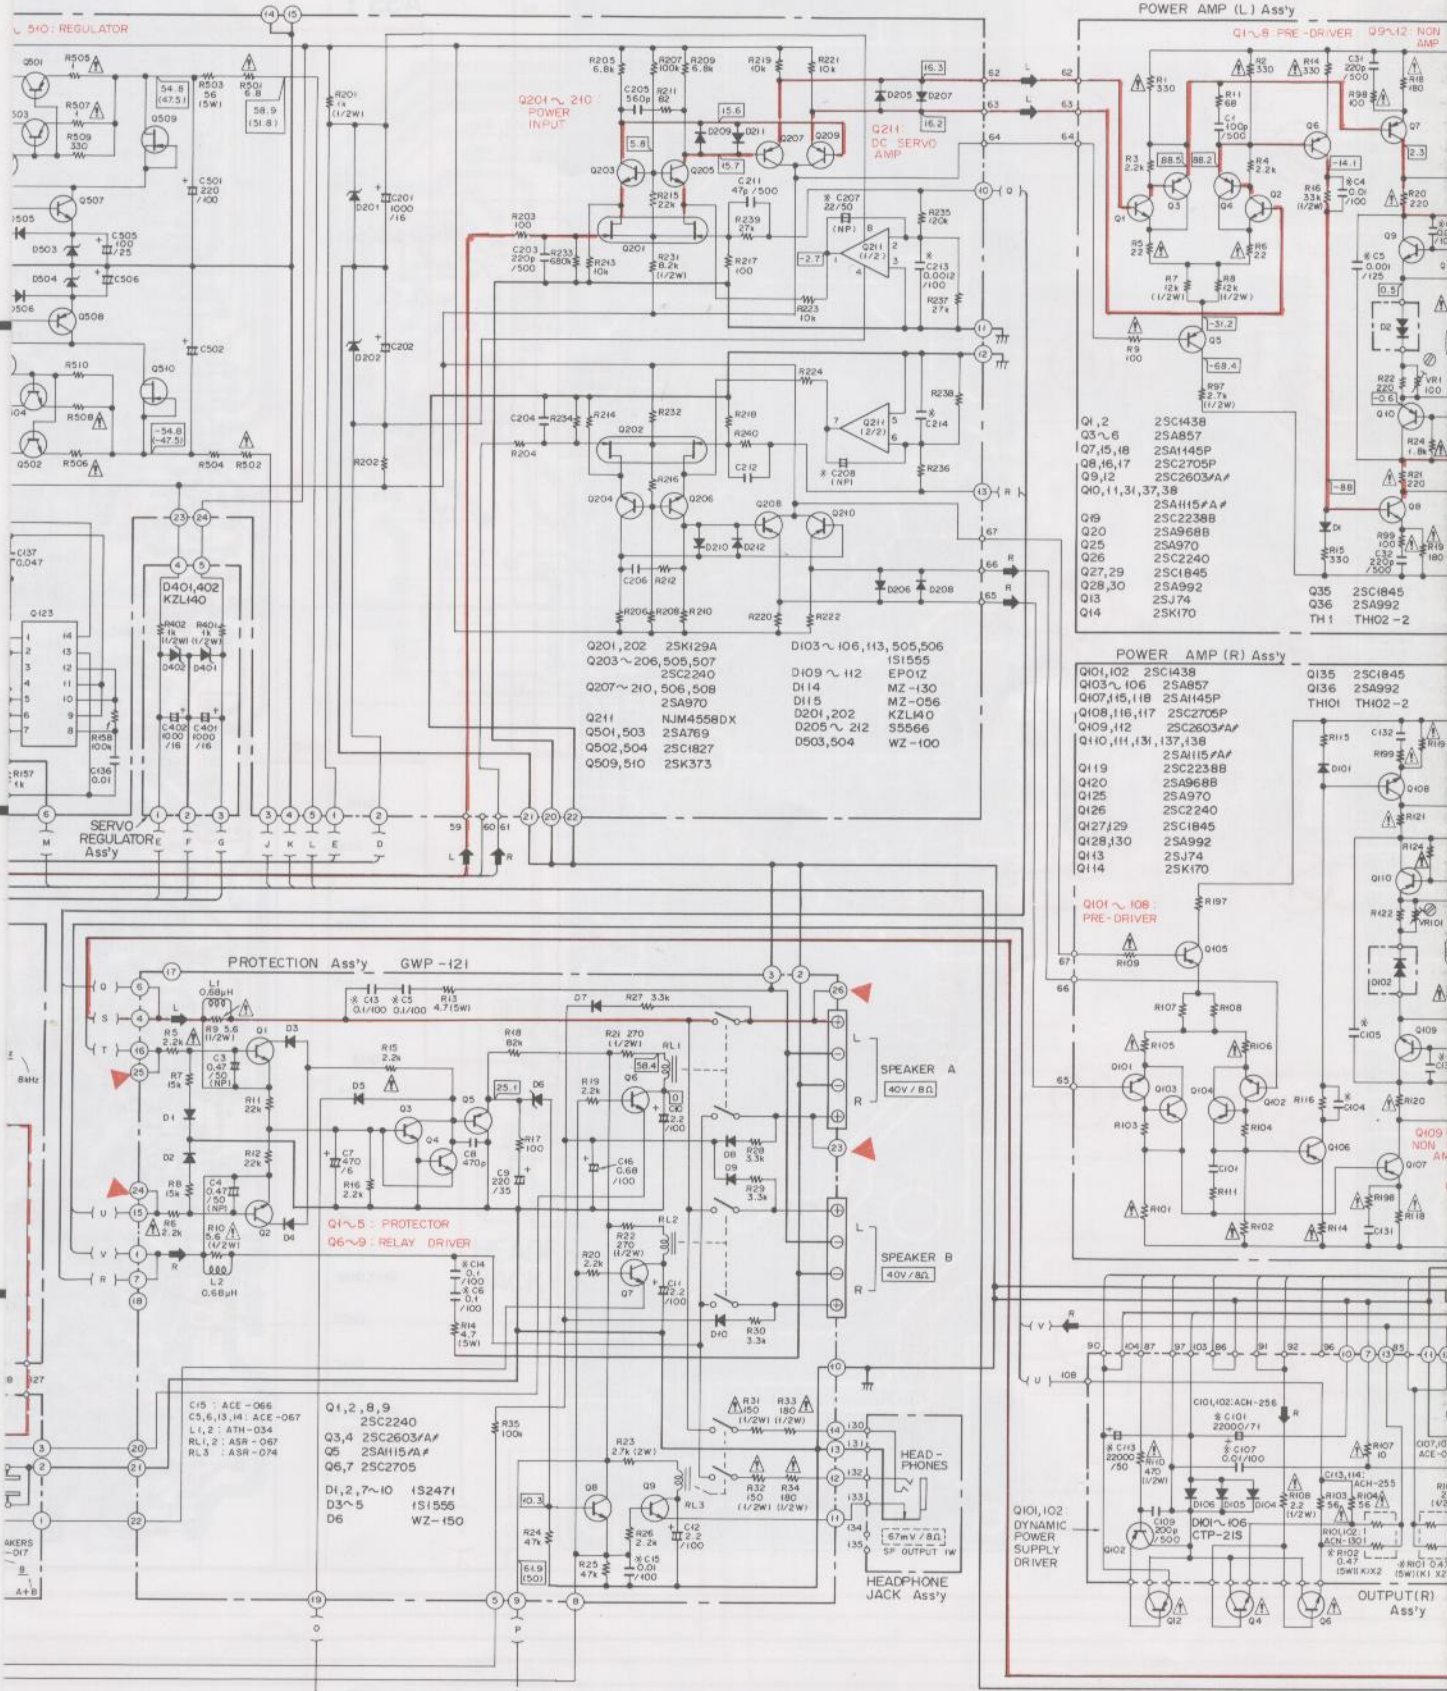


- Q201, 202 2SK129A
 Q203~206, 505, 507 2SC2240
 Q207~210, 506, 508 2SA970
 Q211 NJM4558DX
 Q501, 503 2SA769
 Q502, 504 2SC1827
 Q509, 510 2SK373
- D103~106, 113, 505, 506 ISI555
 D109~112 EPO1Z
 D114 MZ-130
 D115 MZ-056
 D201, 202 KZL140
 D205~212 35966
 D503, 504 WZ-100

- Q1, 2 2SC1438
 Q3~6 2SA857
 Q7, 15, 18 2SA1145P
 Q8, 16, 17 2SC2705P
 Q9, 12 2SC2603A/F
 Q10, 11, 31, 37, 38 2SA115A/F
 Q19 2SC2238B
 Q20 2SA968B
 Q25 2SA970
 Q26 2SC2240
 Q27, 29 2SC1845
 Q28, 30 2SA992
 Q13 2SJ174
 Q14 2SK170
- Q15 2SC1845
 Q16 2SA992
 TH1 TH02-2

- Q101, 102 2SC1438
 Q103~106 2SA857
 Q107, 115, 118 2SA1145P
 Q108, 116, 117 2SC2705P
 Q109, 112 2SC2603A/F
 Q110, 114, 131, 137, 138 2SA115A/F
 Q119 2SC2238B
 Q120 2SA968B
 Q125 2SA970
 Q126 2SC2240
 Q127, 29 2SC1845
 Q128, 130 2SA992
 Q13 2SJ174
 Q14 2SK170
- Q135 2SC1845
 Q136 2SA992
 TH01 TH02-2

- C15 ACE-066
 C5, 6, 15, 141 ACE-067
 L1, 2 ATH-034
 RL1, 2 ASR-097
 RL3 ASR-074
- Q1, 2, 8, 9 2SC2240
 Q3, 4 2SC2603A/F
 Q5 2SA115A/F
 Q6, 7 2SC2705
- D1, 2, 7~10 IS2471
 D3~5 ISI555
 D6 WZ-150

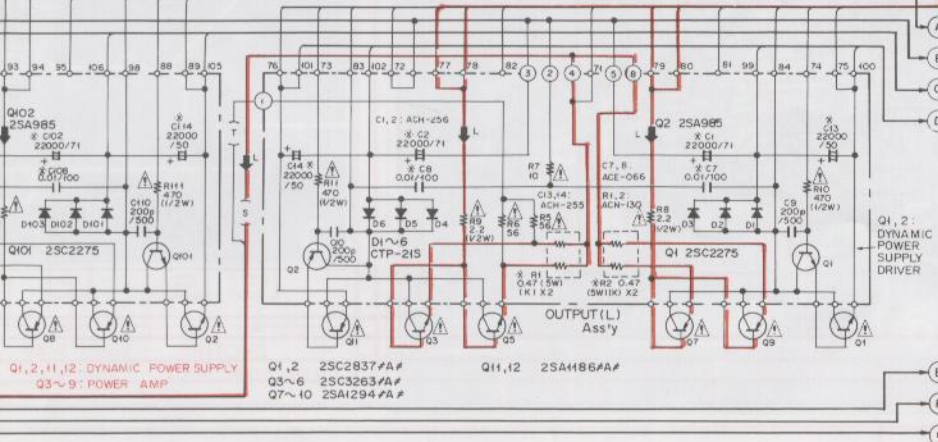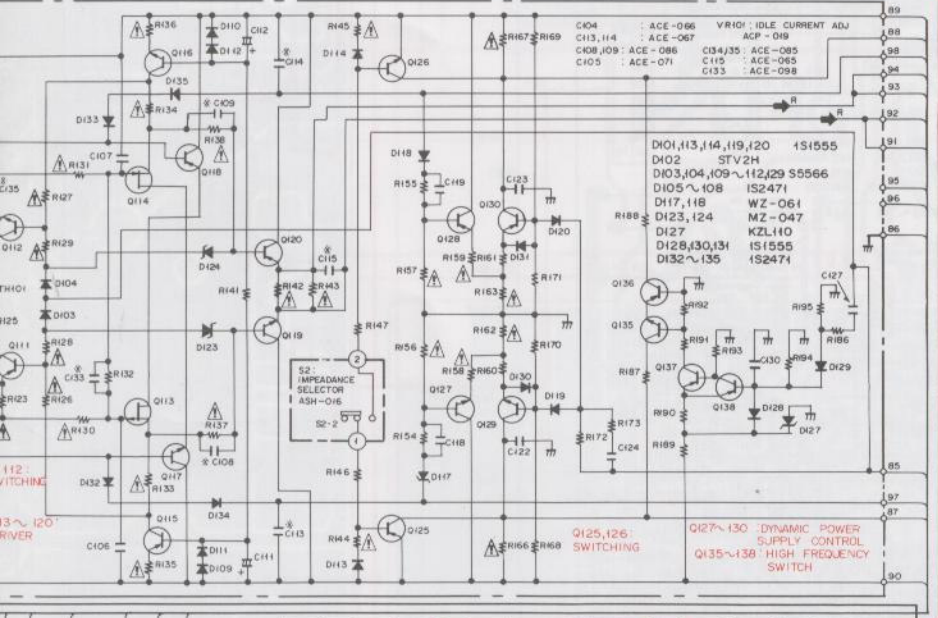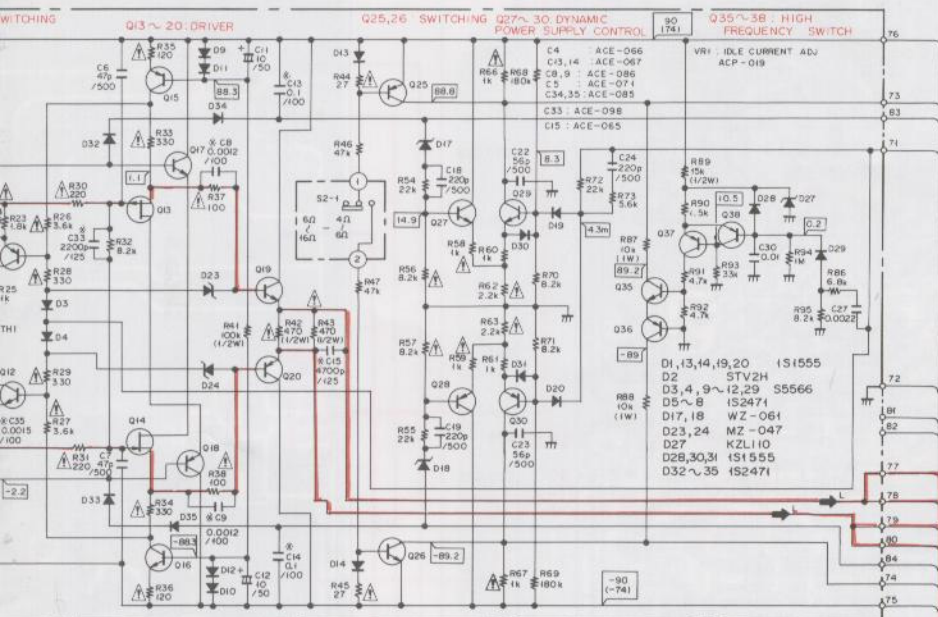

A

B


C

D

1. RESISTORS:
Indicated in Ω , 4W, $\frac{1}{2}$ W, $\pm 5\%$ tolerance unless otherwise noted k; k Ω , M; M Ω . IFI; 1%, (G); $\pm 2\%$, (K); -10%, (M); $\pm 20\%$ tolerance
2. CAPACITORS:
Indicated in capacity (μ F/voltage (V) unless otherwise noted p, pF. Indication without voltage is 50V except electrolytic capacitor.
3. VOLTAGE, CURRENT:
V: Signal voltage at (200W-200W, 8 Ω) output (1kHz)
V: DC voltage (V) at no input signal
Value in () is DC voltage at rated power.


4. OTHERS:
: Signal route.
: Adjusting point.
The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
*: marked capacitors and resistors have parts numbers.
This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

- SWITCHES.
- OUTSIDE OF PC BOARD
S4: POWER ON - OFF
S2: IMPEDANCE SELECTOR 4~6 Ω - 6~16 Ω
MC AMP Assy
S1: PHONO SELECTOR MC/33 Ω - MC/100 Ω - MM
FUNCTION SWITCH Assy
S1-1: FUNCTION PHONO ON - OFF
1-2: FUNCTION TUNER ON - OFF
1-3: FUNCTION AUX 1 ON - OFF
1-4: FUNCTION AUX 2 ON - OFF
TAPE SWITCH Assy
S2-1: TAPE MONITOR OFF ON - OFF
2-2: TAPE MONITOR 1 ON - OFF
2-3: TAPE MONITOR 2 ON - OFF
S3-1: TAPE COPY OFF ON - OFF
3-2: TAPE COPY 1 \times 2 ON - OFF
3-3: TAPE COPY 2 \times 2 ON - OFF
S4-1: SUBSONIC ON - OFF
4-2: LINE STRAIGHT ON - OFF
S5: RANGE ON - OFF
TONE BASS Assy
S1: BASS TURNOVER 100Hz - 200Hz - 400Hz
TONE TREBLE Assy
S2: TREBLE TURNOVER 2kHz - 4kHz - 8kHz
MODE SWITCH Assy
S3: SPEAKERS OFF - A - B - A + B
S4: MODE REV - STEREO - MONO
MUTING SWITCH Assy
S301: MUTING (-20dB) ON - OFF
- The underlined indicates the switch position.

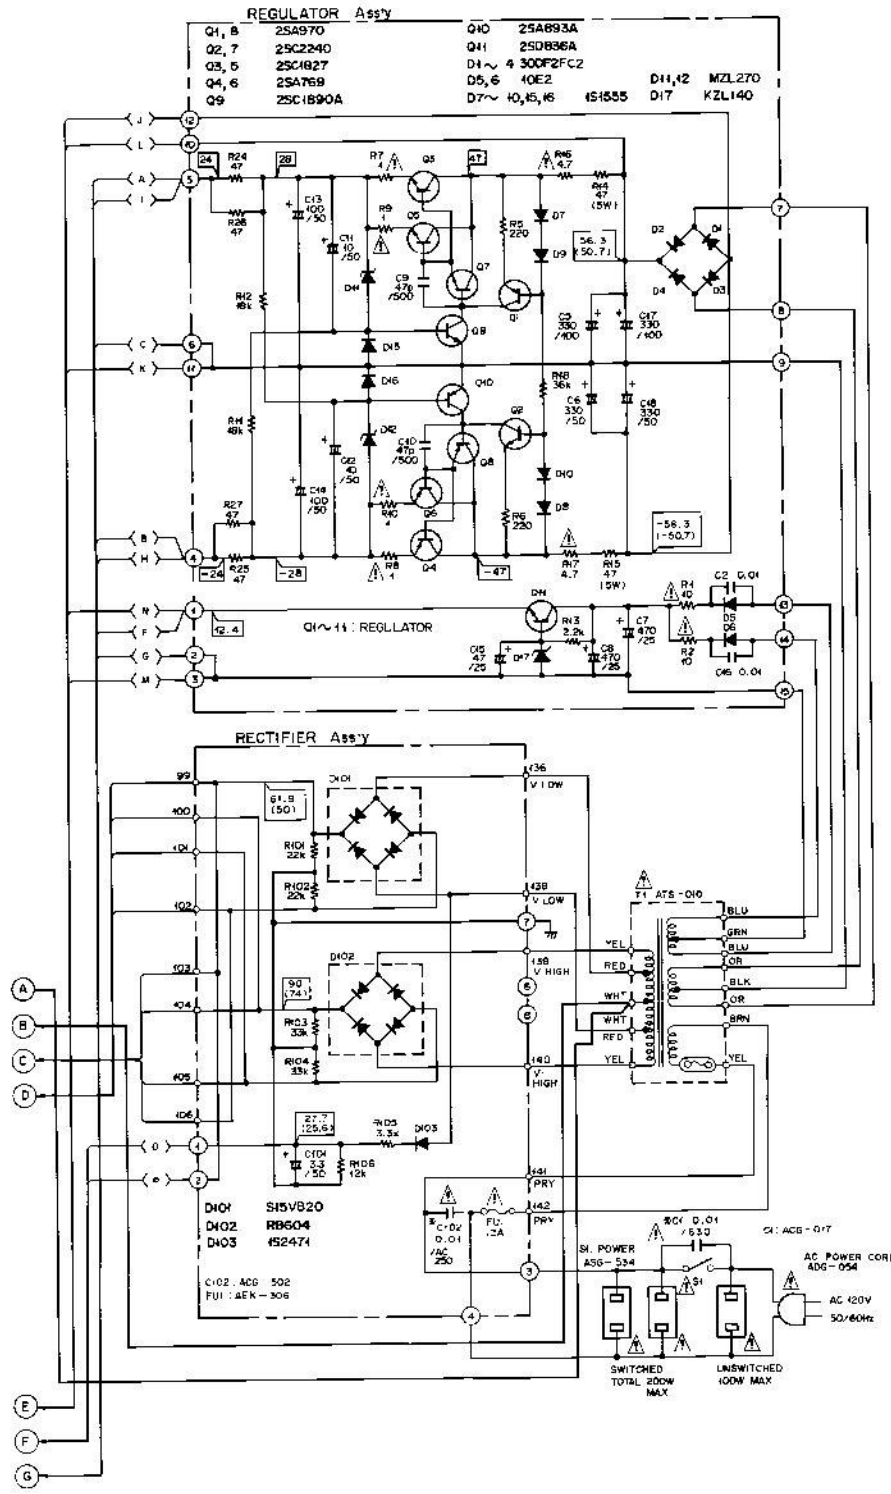


External Appearances of Transistors and IC's


2SC2837/A/
2SC3263/A/
2SA1294/A/
2SA1186/A/

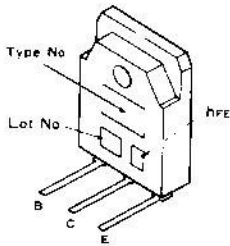


2SA1115/A/
2SC2603/A/

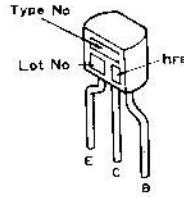


2SA992
2SC1845

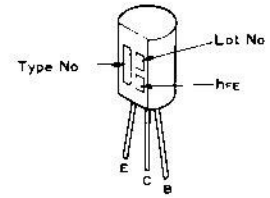


2SK170
2SJ74

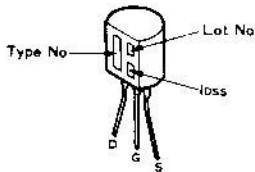


TC4011BP

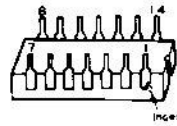


2SC2275
2SA985

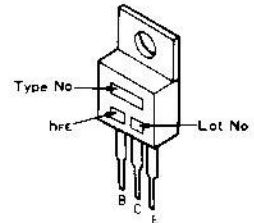


2SK147
2SJ72

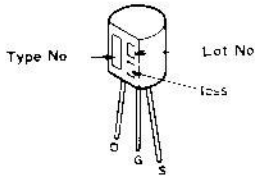


2SK129A

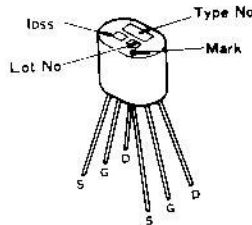


2SC1890A
2SA893A

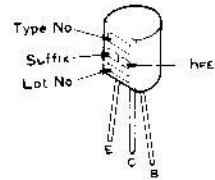


2SA857
2SC1438

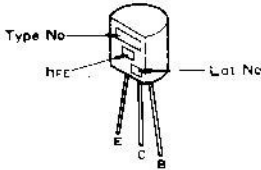


2SK194

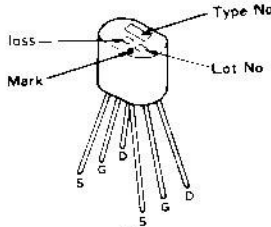


2SA769
2SC1827

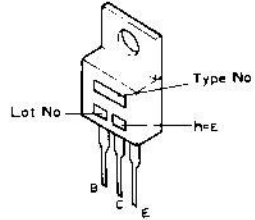


2SA1114
2SC2602

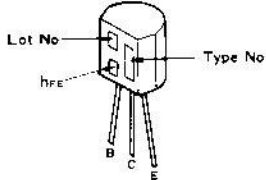


2SC2240
2SA970
2SC2705

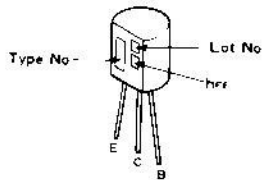


2SK373

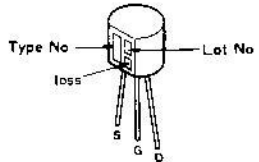


NJM4558DX




M5220L

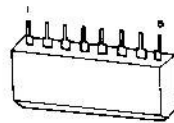


2SA1145P
2SC2705P

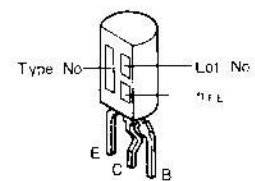

1R2E01

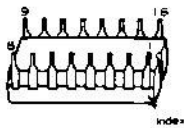

2SA968B
2SC2238B
2SD836A

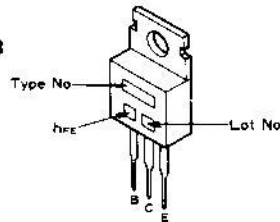

9. ELECTRICAL PARTS LIST

NOTES:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω 56 × 10¹ 561 RD½PS 561J

47kΩ 47 × 10³ 473 RD½PS 473J

0.5Ω 0R5 RN2H 0R5K

1Ω 010 RS1P 010K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ 562 × 100 5621 RN½SR 5621F

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks **★★** and **★**.
★★ GENERALLY MOVES FASTER THAN ★.
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

Miscellaneous Parts List

P.C. BOARD ASSEMBLIES

Mark	Part No.	Symbol & Description
	AWF-058	MC amp. assembly
	GWK-216	AF assembly
	GWP-121	Protection assembly
	AWH-121	Power amp. assembly
	non supply	Power amp (L) assembly
	non supply	Power amp (R) assembly
	AWR-244	Power supply assembly
	non supply	Rectifier assembly
	non supply	Regulator assembly
	AWR-243	Output assembly
	non supply	Output (L) assembly
	non supply	Output (R) assembly
	AWS-160	Switch assembly
	non supply	Tape switch assembly
	non supply	Function switch assembly
	AWG-088	Tone control assembly
	non supply	Tone (BASS) assembly
	non supply	Tone (TREBLE) assembly
	non supply	Mode switch assembly
	non supply	Headphone jack assembly
	non supply	Muting switch assembly
	non supply	Servo regulator assembly
	non supply	Terminal (TAPE) assembly
	non supply	Terminal (INPUT) assembly
	non supply	Volume assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
Δ ★★	2SC2837/A/	Q1, Q2
Δ ★★	2SC3263/A/-O* (2SC3263/A/-Y*)	Q3 - Q6
Δ ★★	2SA1294/A/-O* (2SA1294/A/-Y*)	Q7 - Q10
Δ ★★	2SA1186/A/	Q11, Q12

*hfe must have the same value.

SWITCHES

Mark	Part No.	Symbol & Description
Δ ★★	ASG-545	S1 Push switch (POWER)
★★	ASH-016	S2 Slide switch (IMPEDANCE)
★★	ASX-204	Remote slide switch

OTHERS

Mark	Part No.	Symbol & Description
Δ ★★	AEK-306	FU1 Fuse (15A)
Δ ★★	AEL-075	PL1 Lamp (8V, 50mA)
Δ ★★	AEL-093	PL2 Lamp (8V, 50mA)
Δ ★	ATS-010	T1 Power transformer (120V)
Δ	ACG-017	C1 Ceramic (0.01/630V)
Δ	AKP-041	AC socket
Δ	ADG-054	AC power cord
Δ	AEC-327	Strain relief

Regulator Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	2SA970	Q1, Q8
★★	2SA769	Q4, Q6
★★	2SC2240	Q2, Q7
★★	2SC1827	Q3, Q5
★★	2SC1890A	Q9
★★	2SA893A	Q10
★★	2SD836A	Q11
★	KZL140	D17
★	10E2	D5, D6
★	30DF2FC-2	D1 - D4
★	MZL 270	D11, D12
★	1S1555 (US1035)	D7 - D10, D15, D16

CAPACITORS

Mark	Part No.	Symbol & Description
	CEYA 100M 50	C7, C8
	CEXA 101M 50	C9, C10
	CEXA 331M 100	C1, C2, C3, C4
	CMA 470J 500	C5, C6
	CKDYB 103K 50	C11, C12
	CEA 470M 25L	C15
	CEA 471M 25L	C13, C14

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
△	RD1/4PMFL100J	R1, R2
	RT5B 470K	R14, R15
	RDH1/4P470J	R24 - R27
△	RFA1/4PS4R7J	R16, R17
△	RD1/4PMF010J	R7 - R10
	RD1/4PM □□□ J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
	VBZ30P080FZK	Screw (3 x 8)

Power amp. (L) Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★	1S1555	D1, D13, D14, D19, D20, D28, D30, D31
★	S5566	D3, D4, D9 - D12, D29
★	1S2471	D32 - D35
★	MZ-047	D23, D24
★	WZ-061	D17, D18
★	STV2H	D2
★	KZL110	D27
★★	2SK170	Q14
★★	2SJ74	Q13
★★	2SC1845	Q27, Q29, Q35
★★	2SA992	Q28, Q30, Q36
★★	2SA1145P	Q7, Q15, Q18
★★	2SC2705P	Q8, Q16, Q18
★★	2SA1115/A/	Q10, Q11, Q13, Q38
★★	2SC2603/A/	Q9, Q12
★★	2SC2240-BL	Q26
★★	2SA970	Q25
★★	2SC1438	Q1, Q2
★★	2SA857	Q3 - Q6
★★	2SA968B	Q20
★★	2SC2238B	Q19
★★	TH102-2	TH1

CAPACITORS

Mark	Part No.	Symbol & Description
	CEYA 100M 25	C11, C12
	ACE-066	C4 Mylar (0.01/100V)
	ACE-067	C13, C14 Mylar (0.1/100V)
	ACE-086	C8, C9 Mylar (0.0012/100V)
	ACE-071	C5 Polystyrene (1000p/125V)
	CMA 470J 500	C6, C7
	CMA 221J 500	C18, C19, C24, C31, C32
	CMA 101J 500	C1
	ACE-085	C34, C35 Mylar (0.0015/100V)
	ACE-098	C33 Polystyrene (2200p/125V)

Mark	Part No.	Symbol & Description
	ACE-065	C15 Polystrene (4700p/125V)
	CQMA 222K 50	C27
	CQMA 103K 50	C30
	CCDSL 560K 500	C22, C23

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
⚠	ACP-019	VR1 Semi-fixed (100)
⚠	RF1/4PS □□□J	R9, R18 – R21, R30, R31, R33 – R38, R44, R45, R98, R99
⚠	RF1/2PS □□□J	R42, R43
	RS IP 103J	R87, R88
⚠	RD1/4PMFL □□□J	R1, R2, R5, R6, R14, R66, R67
⚠	RD1/4PMF □□□J	R23–R29, R32, R56–R59
		R62, R63
	RD1/2PS □□□J	R7, R8, R16, R41, R89, R97
	RD1/4PM □□□J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
	VBZ30P080FMC	Screw (3 x 8)

Output (R) Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	2SC2275	Q101
★★	2SA985	Q102
★	CTP-21S	D101 – D106

CAPACITORS

Mark	Part No.	Symbol & Description
	ACH-256	C101, C102 Electrolytic (22000/71V)
	ACH-255	C113, C114 Electrolytic (22000/50V)
	ACE-066	C107, C108 Mylar (0.01/100V)
	CMA 201J 500	C109, C110

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	ACN-130	R101, R102 Wire wound (0.47/5W x 2)
⚠	RF1/4PS □□□J	R105 – R107
⚠	RF1/2PS □□□J	R108 – R111

OTHERS

Mark	Part No.	Symbol & Description
	PMZ30P060BK1	Screw (3 x 6)

Tone (BASS) Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	M5220L	Q1, Q2
★	WZ-220	D1, D2

SWITCHES

Mark	Part No.	Symbol & Description
★★	ASE-015	S1 Rotary slide switch (BASS TURNOVER)

CAPACITORS

Mark	Part No.	Symbol & Description
	CEA 101M 25L	C1, C2
	CEANL R68M 50	C3, C4
	CEANL 100M 16	C5, C6
	CEANL 0R1M 50	C13 – C16
	CEANL R33M 50	C11, C12
	CQMA 682J 50	C17, C20
	CCDSL 100D 50	C21, C22
	CCDSL 470J 50	C7, C8

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
★	ACT-163	VR1 Volume (100k, BASS)
⚠	RD1/4PMFL □□□J	R2, R4
	RD1/8PM □□□J	Other resistors

Muting Switch Assembly

Mark	Part No.	Symbol & Description
★	AEL-404	D301 (LED Red)
★★	SEAV4S	S301 Push switch (MUTING)
	CQSA 102J 50	C301, C302
	RD1/4PM □□□J	R301 – R307

Mode Switch Assembly

Mark	Part No.	Symbol & Description
★★	ASE-024	S3 Rotary slide switch (SPEAKERS)
★★	ASE-023	S4 Rotary slide switch (MODE)

Headphone Jack Assembly

Mark	Part No.	Symbol & Description
	AKN-044	Phone jack (PHONES)

Function Switch Assembly

Mark	Part No.	Symbol & Description
★★	SUL5L4B4B4LFC RD1/8PM470J	Push switch (FUNCTION) R103 - R108

Terminal (INPUT) Assembly

Mark	Part No.	Symbol & Description
	ACE-066 CQMLA 104K 50	C1 Mylar (0.01/100V) C2 - C4
	AKB-096 AKB-095	Terminal (PHONO) Terminal (TUNER, AUX)

Tone (TREBLE) Assembly

SWITCHES

Mark	Part No.	Symbol & Description
★★	ASE-015	S2 Rotary slide switch (TREBLE TURNOVER)

CAPACITORS

Mark	Part No.	Symbol & Description
	CEANL 4R7M 50 CQMA 562J 50 CQMA 183J 50 CKDYB 391K 50	C101, C102 C103, C104 C105, C106 C107, C108

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
★	ACT-163 RD1/8PM 000J	VR2 Volume (10k, TREBLE) R101 - R112

Volume Assembly

Mark	Part No.	Symbol & Description
★★	2SK170	Q1, Q2
★	ACT-166	VR1 Volume (10k, BALANCE)
★	ACW-131 RD1/4PM 000J	VR2 Volume (68k, VOLUME) R1 - R6

Terminal (TAPE) Assembly

Mark	Part No.	Symbol & Description
	CQMLA 104K 50 AKB-094	C5, C6 Terminal (TAPE)

Protection Assembly (GWP-121)

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	2SC2240	Q1, Q2, Q8, Q9
★★	2SC2705	Q6, Q7

Mark	Part No.	Symbol & Description
★★	2SC2603/A/	Q3, Q4
★★	2SA1115/A/	Q5
★	1S2471	D1, D2, D7 - D10
★	1S1555 (1S2076)	D3 - D5
★	WZ-150	D6

CAPACITORS

Mark	Part No.	Symbol & Description
	ACE-066 ACE-067	C15 Mylar (0.01/100V) C5, C6, C13, C14 Mylar (0.1/100V)
	CEANP R47M 50 CEA 2R2M 100L CEA 471M 6L	C3, C4 C10 - C12 C7
	CEA 221M 35L CEA R68M 100L CKDYB 471K 50	C9 C16 C8

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
△	RD1/2PSF5R6J RS2P272J RT5B4R7K	R9, R10 R23 R13, R14
△	RD1/2PSF151F RD1/4PMF222J	R31 - R34 R5, R6, R15
	RD1/2PS271J RD1/4PM 000J	R21, R22 Other resistors

OTHERS

Mark	Part No.	Symbol & Description
★★	ASR-067	RL1, RL2 Relay
★★	ASR-074	RL3 Relay
	ATH-034	L1, L2 AF choke coil
	AKE-052 VBZ30P080FZK PMZ30P060SAD	Terminal (SPEAKERS) Screw (3 x 8) Screw (3 x 6)

Rectifier Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
△ ★	S15VB20	D101
△ ★	RB604	D102
★	IS2471	D103

CAPACITORS

Mark	Part No.	Symbol & Description
△	CEA 3R3M 50L ACG-502	C101 C102 Ceramic (0.01/AC 125V)

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	RD1/4PM □□□J	R101 – R106

OTHERS

Mark	Part No.	Symbol & Description
	VBZ30P200FZK	Screw (3 x 20)

Output (L) Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	2SC2275	Q1
★★	2SA985	Q2
★	CTP-21S	D1 – D6

CAPACITORS

Mark	Part No.	Symbol & Description
	ACH-256	C1, C2 Electrolytic (22000/71V)
	ACH-255	C13, C14 Electrolytic (22000/50V)
	ACE-066	C7, C8 Mylar (0.01/100V)
	CMA 201J 500	C9, C10

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	ACN-130	R1, R2 Wire wound (0.47/5W x 2)
⚠	RF1/4PS □□□J	R5 – R7
⚠	RF1/2PS □□□J	R8 – R11

OTHERS

Mark	Part No.	Symbol & Description
	PMZ30P060BK1	Screw (3 x 6)

MC amp. Assembly (AWF-058)

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	2SK147-V1	Q1 – Q4
★★	2SJ72-V2	Q5 – Q8
★★	2SA857	Q19 – Q22, Q25, Q26
★★	2SA769	Q31, Q32
★★	2SA1114	Q13 – Q16

Mark	Part No.	Symbol & Description
★★	2SC1438	Q17, Q18, Q27, Q28, Q35, Q36
★★	2SC1827	Q29, Q30
★★	2SC2602	Q9 – Q12
★★	NJM4558DX	Q33, Q34
★	S5566	D1 – D4, D7 – D10
★	WZ-150	D5, D6

CAPACITORS

Mark	Part No.	Symbol & Description
	ACE-097	C1, C2, C11 – C14 Polystyrene (0.01/160V)
	ACH-444	C19, C20 Electrolytic (2.2/50V, NP)
	CEXA 102M 16	C21, C22
	CEYA 221M 25	C7 – C10
	CEXA 221M 50	C23, C24
	CKDYF 473Z 50	C101, C103
	CMA 220J 500	C15 – C18
	CMA 221J 500	C3 – C6

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	ACN-079	R1, R2 Carbon (1/1/2W)
	RDH1/4P □□□J	R49, R50, R73, R74
⚠	RD1/2PSF □□□J	R59 – R62, R75, R76
	RD1/2PS □□□J	R11 – R22, R35, R36, R47, R48
	RD1/4PM □□□J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
★★	ASR-074	RL1 – RL4 Relay
★★	ASX-193	S1 Remote slide switch (PHONO SELECTOR)
	VBZ30P080FZK	Screw (3 x 8)

Tape Switch Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	IR2E01	Q1
★★	2SC2603/A/	Q2, Q3
★	AEL-404	D1 – D4 (LED Red)

SWITCHES

Mark	Part No.	Symbol & Descriptions
★★	SEA6V4B4B4L	S2 Push switch (TAPE MONITOR)
★★	SEA8V222L	S3 Push switch (TAPE COPY)

Mark	Part No.	Symbol & Description
★★	SEA5V4B4S	S4 Push switch (LINE STRAIGHT, SUBSONIC)
★★	SEAV2S	S5 Push switch (RANGE)

CAPACITORS

Mark	Part No.	Symbol & Description
	CEA 470M 25L	C1, C3
	CEA 0R1M 50L	C2
	ACE-225	C4, C5 Metallized mylar (0.22/200V)

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	RD1/4PM □□□J	R8 - R11, R14 - R20
	RD1/8PM □□□J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
	VMZ30P060FMC	Screw (3 x 6)

Power amp. (R) Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★	1S1555	D101, D113, D114, D119, D120, D128, D130, D131
★	S6566	D103, D104, D109 - D112, D129
★	1S2471	D132 - D135
★	MZ-047	D123, D124
★	WZ-061	D117, D118
★	STV2H	D102
★	KZL110	D127
★★	2SK170-BL	Q114
★★	2SJ74-BL	Q113
★★	2SC1845	Q127, Q129, Q135
★★	2SA992	Q128, Q130, Q136
★★	2SA1145P	Q107, Q115, Q118
★★	2SC2705P	Q108, Q116, Q117
★★	2SA1115/A/	Q110, Q111, Q137, Q138
★★	2SC2603/A/	Q109, Q112
★★	2SC2240	Q126
★★	2SA970	Q125

Mark	Part No.	Symbol & Description
★★	2SC1438	Q101, Q102
★★	2SA857	Q103 - Q106
★★	2SA968B	Q120
★★	2SC2238B	Q119
★★	TH102-2	TH101

CAPACITORS

Mark	Part No.	Symbol & Description
	CEYA 100M 25	C111, C112
	ACE-066	C104 Mylar (0.01/100V)
	ACE-067	C113, C114 Mylar (0.1/100V)
	ACE-086	C108, C109 Mylar (0.0012/100V)
	ACE-071	C105 Polystyrene (1000p/125V)
	CMA 470J 500	C106, C107
	CMA 221J 500	C118, C119, C124, C131, C132
	CMA 101J 500	C101
	ACE-085	C134, C135 Mylar (0.0015/100V)
	ACE-098	C133 Polystyrene (2200p/125V)
	ACE-065	C115 Polystyrene (4700p/125V)
	CQMA 222K 50	C127
	CQMA 103K 50	C130
	CCDSL 560K 500	C122, C123

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	ACP-019	VR101 Semi-fixed (100)
△	RF1/4PS □□□J	R109, R118 - R121, R130, R131, R133 - R138, R144, R145, R198, R199
△	RF1/2PS □□□J	R142, R143
△	RS1P103J	R187, R188
△	RD1/4PMFL □□□J	R101, R102, R105, R106, R114, R166, R167
△	RD1/4PMF □□□J	R123-R129, R132, R156- R159, R162, R163
	RD1/2PS □□□J	R107, R108, R126, R141, R189, R197
	RD1/4PM □□□J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
	VBZ30P080FMC	Screw (3 x 8)

AF Assembly (GWK-216)

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★★	TC4011BP	Q123
★★	NJM4558DX	Q119, Q211
★★	2SC2240	Q203 – Q206, Q505, Q507
★★	2SC1438	Q103 – Q110, Q113, Q114,
★★	2SC2603/A/	Q121, Q122
★★	2SC1827	Q115, Q116, Q502, Q504
★★	2SA970	Q207 – Q210, Q506, Q508
★★	2SA1115/A/	Q120
★★	2SA857	Q111, Q112
★★	2SK129A	Q201, Q202
★★	2SK194	Q101, Q102
★★	2SA769	Q117, Q118, Q501, Q503
★★	2SK373-Y	Q509, Q510
★	1S1555	D103 – D106, D113, D505, D506
★	S5566	D205 – D212
★	MZ-056	D115
★	MZ-130	D114
★	EP01Z	D109 – D112
★	WZ-100	D503, D504
★	KZL140	D201, D202

CAPACITORS

Mark	Part No.	Symbol & Description
	ACH-444	C127, C128, C207, C208 Electrolytic (22/50V, NP)
	CEYA 100M 50	C509, C510
	CEYA 101M 25	C505, C506
	CEAYA 102M 16	C201, C202
	CEXA 221M 50	C131, C132, C511, C512
	CEXA 221M 100	C501, C502
	ACE-068	C117, C118 Mylar (0.047/100V)
	ACE-066	C103, C104 Mylar (0.01/100V)
	ACE-086	C105, C106, C213, C214 Mylar (0.0012/100V)
	ACE-095	C107, C108 Polypropylene (0.12/100V)
	ACE-094	C111, C112 Polypropylene (0.033/100V)

Mark	Part No.	Symbol & Description
	ACE-097	C119, C120, C125, C126 Polystyrene (0.01/160V)
	ACE-071	C129, C130 Polystyrene (0.001/125V)
	ACE-089	C113, C114 Polystyrene (470p/125V)
	CMA 221J 500	C115, C116, C203, C204, C507, C508
	CMA 470J 500	C101, C102, C211, C212
	CMA 100D 500	C121 – C124
	CEANL 4R7M 50	C133
	COSH 561J 50	C205, C206
	CKDYF 103Z 50	C136
	CKDYF 473Z 50	C137

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	RDH1/4P □□□□ F	R115, R116, R119 – R122
	RDH1/4P □□□ J	R101, R102, R143, R144, R149, R150, R203, R204, R217, R218, R171, R172, R515, R516
⚠	RT5B 560K	R503, R504
⚠	RF1/4PM6R8J	R501, R502
⚠	RD1/2PSF 220J	R137 – R140
	RD1/2PS □□□ J	R111, R112, R159, R160, R201, R202, R231, R232
⚠	RD1/4PMF 010J	R505, R508
	RD1/4PM □□□ J	Other resistors

OTHERS

Mark	Part No.	Symbol & Description
★★	ASR-072	RL1 Relay

Servo Regulator Assembly

SEMICONDUCTORS

Mark	Part No.	Symbol & Description
★	KZL140	D401, D402

CAPACITORS

Mark	Part No.	Symbol & Description
	CEYA 102M 16	C401, C402

RESISTORS

Note: When ordering resistors, convert the resistance value into code form, and then rewrite the part no. as before.

Mark	Part No.	Symbol & Description
	RD1/2PS102J	R401, R402


10. ADJUSTMENTS

Idle Current Adjustment

1. Turn the VOLUME control down to minimum volume, and switch the LINE STRAIGHT switch on.
2. Rotate VR1 and VR101 counter clockwise.
3. Switch the power on with no input and no load applied to the unit.
4. Adjust VR1 to obtain a reading of 25mV ~ 30mV between TP25 (+) and TP26 (-). (L ch)
5. Adjust VR101 to obtain a reading of 25mV ~ 30mV between TP24 (+) and TP23 (-). (R ch)
6. Readjust after aging for at least 30 minutes.

Reference:

Center DC output voltage tolerance: $0V \pm 50mV$.

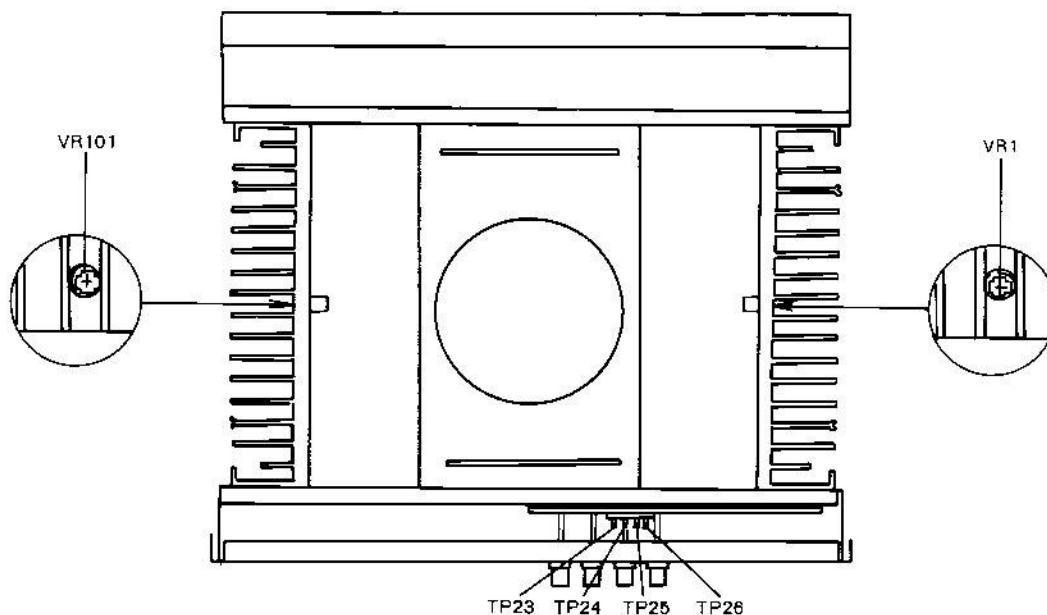


11. SAFETY INFORMATION

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

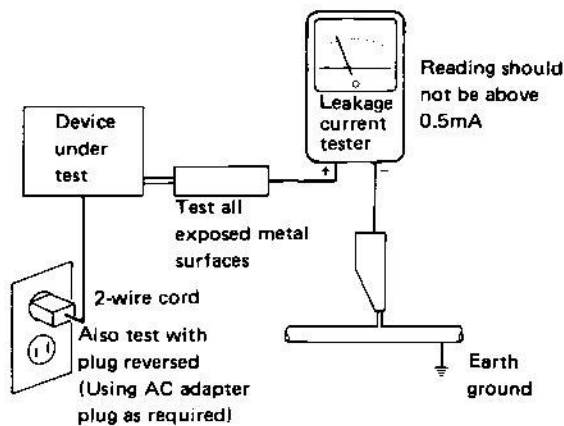

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

12. PACKING

PACKING

11

Idl

1.

2.

3.

4

5

€

!

(

Mark	No.	Part No.	Description
	1.	AHA-328	Side pad L
	2.	ARB-561	Operating instructions (English)
	3.	AHA-329	Side pad R
	4.	AHC-067	Wrapping case
	5.	AHE-205	Packing case

