

SERVICE MANUAL

STEREO AMPLIFIER **SANSUI AU-5500**



Sansui

SANSUI ELECTRIC CO., LTD.

This service manual is designed for service engineers to repair, adjust, maintain and order the replacement parts of the AU-5500 correctly. When ordering the parts, use the stock number and parts name specifically referring to the Parts Locations & Parts Lists. For general usage and maintenance of the unit, please refer to the Operating Instructions attached with the unit.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	SPECIFICATIONS	2
2.	BLOCK DIAGRAM AND VALUE OF EACH LEVEL	3
3.	ADJUSTMENT	4
3-1.	Driver Circuit Board Adjustment	4
4.	PARTS LOCATIONS AND PARTS LISTS	5
4-1.	F-2091 Equalizer & Power Supply Circuit Board	5, 6
4-2.	F-2098 Accessory Switch Circuit Board	6
4-3.	F-2414 Tone Control Circuit Board	7
4-4.	F-2415 Accessory Switch Circuit Board	8
4-5.	F-2099 Volume Circuit Board	8
4-6.	F-2097B Driver & Power Supply Circuit Board	9, 10
4-7.	Other Parts (Front Side)	10
4-8.	Other Parts (Top Side)	11
4-9.	Other Parts (Bottom Side)	11
5.	TROUBLESHOOTING CHART	12
5-1.	Troubleshooting on Power Supply Section	12
5-2.	Troubleshooting on Audio Section	12
6.	SCHEMATIC DIAGRAM	13
7.	REPLACEMENT OF POWER TRANSISTORS	14
8.	PACKING LIST	14
9.	ACCESSORY PARTS LIST	14


1. SPECIFICATIONS

POWER OUTPUT (at rated distortion)
 CONTINUOUS RMS POWER OUTPUT
 32 Watts per channel × 2
 (both channels driven)
 LOAD IMPEDANCE.....8Ω
 POWER BAND.....20 to 20,000Hz
 TOTAL HARMONIC DISTORTION
 less than 0.15% (from AUX)
 Music power (IHF).....130W (4Ω 1,000Hz)
 90W (8Ω 1,000Hz)
 Continuous rms power output...35+35W (8Ω 1,000Hz)
 INTERMODULATION DISTORTION (at rated power
 output 70Hz: 7,000Hz=4: 1 SMPTE method)
 OVERALL.....less than 0.2%
 PREAMPLIFIER ONLY....less than 0.1%
 POWER (MAIN) AMPLIFIER ONLY
 less than 0.1%
 FREQUENCY RESPONSE (at 1 Watt output)
 OVERALL.....10 to 35,000Hz ± 0.5 dB
 POWER (MAIN) AMPLIFIER ONLY
 5 to 35,000Hz ± 0.5 dB
 EQUALIZATION (RIAA curve)
 30 to 15,000Hz ± 0.5 dB
 DAMPING FACTOR.....30 (8Ω)
 INPUT SENSITIVITY AND INPEDANCE
 (1KHz, for rated power output)
 PHONO.....2.5mV 50KΩ
 (Max. input capability: 300mV at 0.2% total
 harmonic distortion)
 TUNER.....100mV 50KΩ
 AUX-1 & -2.....100mV 50KΩ
 TAPE DECK-1 & -2 (Pin Jacks)....100mV 50KΩ
 TAPE DECK-1 (DIN Socket).....100mV 50KΩ
 MAIN IN.....800mV 50KΩ
 OUTPUT LEVEL (1KHz)
 TAPE DECK-1 & -2 (Pin Jacks)....100mV
 TAPE DECK-1 (DIN Socket).....30mV
 PRE OUT.....800mV
 (Max. output level: 4V at 0.5% total harmonic
 distortion)
 CHANNEL SEPARATION (1KHz, at rated power output)
 PHONO.....better than 50dB
 TUNER.....better than 55dB
 AUX-1 & -2.....better than 55dB
 TAPE DECK-1 & -2.....better than 55dB
 MAIN IN.....better than 60dB
 HUM AND NOISE (IHF)
 PHONO.....better than 70dB
 TUNER.....better than 85dB
 AUX-1 & -2.....better than 85dB
 TAPE DECK-1 & -2.....better than 85dB
 MAIN IN.....better than 100dB

SWITCHES AND CONTROLS
 BASS (± 5 steps)..... ± 13 dB at 50Hz
 MIDRANGE (± 5 steps).. ± 5 dB at 1KHz
 TREBLE (± 5 steps)..... ± 13 dB at 15KHz
 LOUDNESS (Volume Control: -30dB)
 +10dB at 50Hz
 +8dB at 10KHz
 LOW FILTER.....-3dB at 70Hz (6dB/oct.)
 HIGH FILTER.....-3dB at 7KHz (6dB/oct.)
 MUTING.....-20dB
 OTHERS
 TRANSISTORS.....30
 ICs.....2
 DIODES.....14
 ZENER DIODES.....2
 LED.....1
 POWER REQUIREMENTS...100, 117, 220, 240V, 50/60Hz
 POWER CONSUMPTION...70W (rated), 210W (max.)
 DIMENSIONS.....434mm (17 1/8") W
 130mm (5 1/8") H
 315mm (12 7/16") D
 WEIGHT.....10.4Kg (22.9 lbs) Net,
 12.1Kg (26.7 lbs) Packed

* Design and specifications subject to change without notice for improvements.

2. BLOCK DIAGRAM AND VALUE OF EACH LEVEL

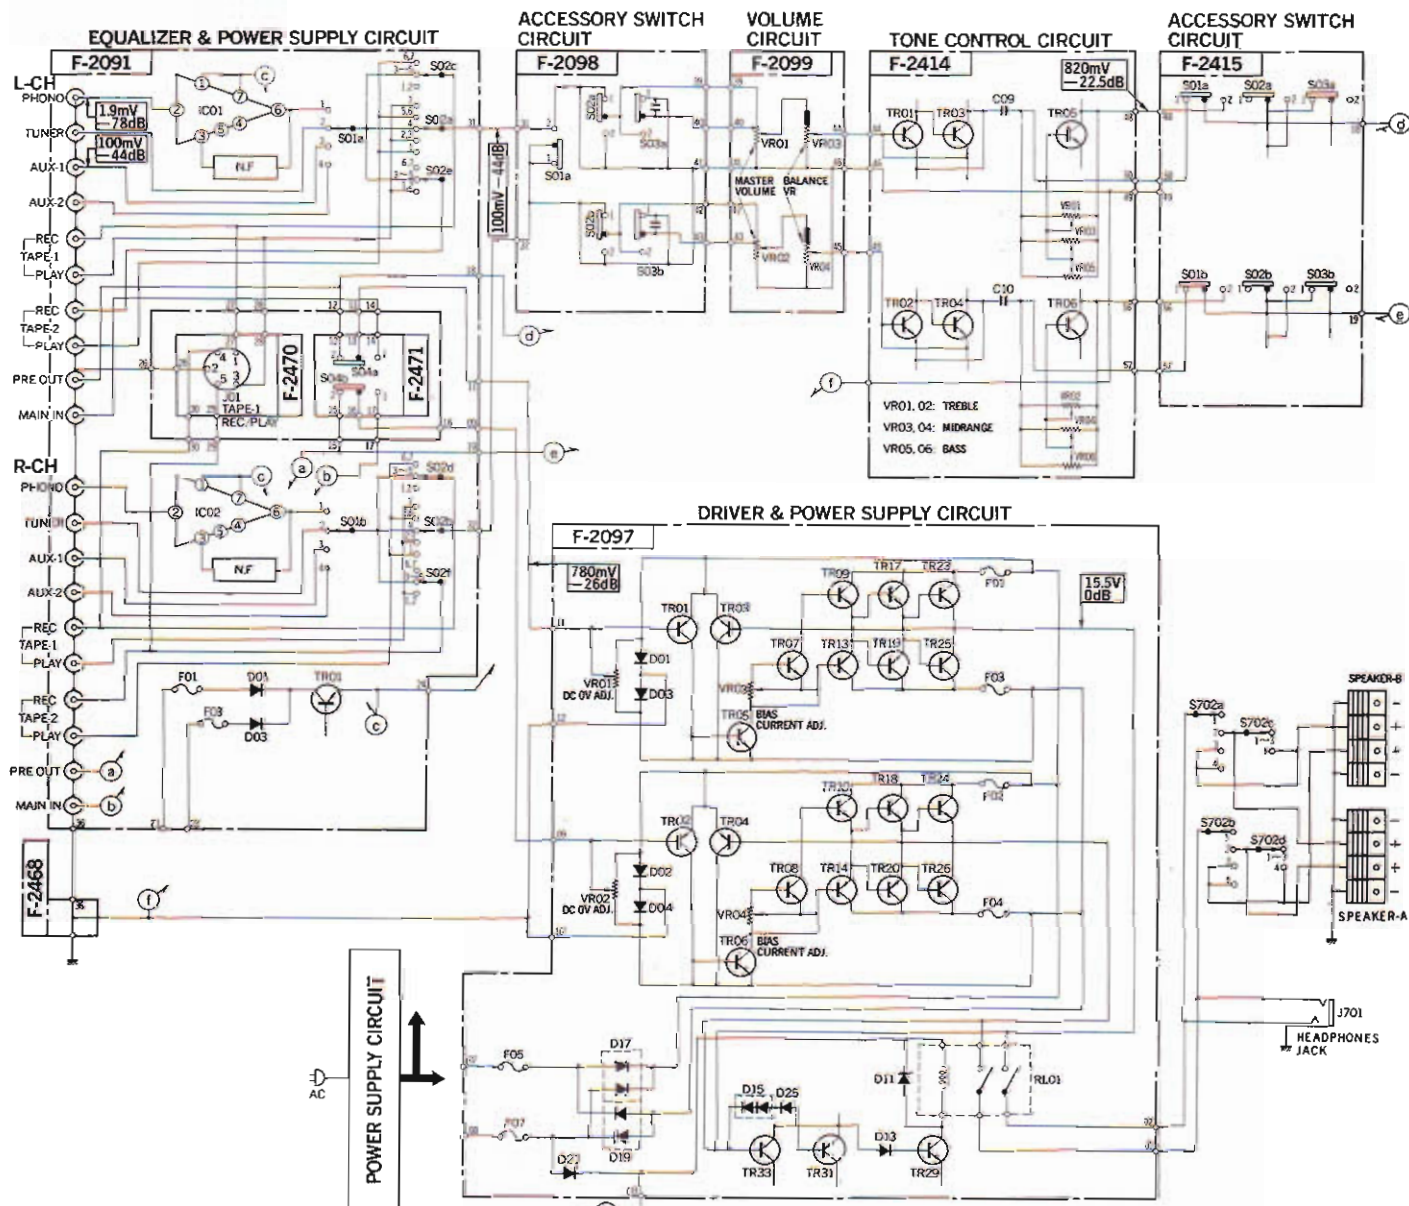

- | | | | |
|---|--|---|--|
| <p>S01a,b: SELECTOR(F-2091)</p> <ol style="list-style-type: none"> 1. PHONO 2. TUNER 3. AUX.1 4. AUX.2 <p>S02a-f: TAPE PLAY(F-2091)</p> <ol style="list-style-type: none"> 1. COPY 1 ▶ 2 DECK-2 2. COPY 1 ▶ 1 DECK-1 3. DECK.1 4. SOURCE 5. DECK.2 6. COPY 2 ▶ 1 DECK-2 7. COPY 2 ▶ 1 DECK-1 | <p>S01a : MODE(F-2098)</p> <ol style="list-style-type: none"> 1. STEREO 2. MONO <p>S02a,b: MUTING(F-2098)</p> <ol style="list-style-type: none"> 1. OUT 2. -20dB <p>S03a,b: LOUDNESS(F-2098)</p> <ol style="list-style-type: none"> 1. OUT 2. IN | <p>S01a,b: TONE(F-2415)</p> <ol style="list-style-type: none"> 1. DEFEAT 2. IN <p>S02a,b: HIGH FILTER(F-2415)</p> <ol style="list-style-type: none"> 1. OUT 2. IN <p>S03a,b: LOW FILTER(F-2415)</p> <ol style="list-style-type: none"> 1. OUT 2. IN | <p>S04a,b: PRE-MAIN(F-2091)</p> <ol style="list-style-type: none"> 1. SEPARATED 2. CONNECTED <p>S701 : POWER</p> <ol style="list-style-type: none"> 1. OFF 2. ON <p>S702a-d: SPEAKERS</p> <ol style="list-style-type: none"> 1. OFF 2. A 3. B 4. A+B |
|---|--|---|--|

Condition of Level Measuring

*Value of each level in block diagram was measured by the followings.

1. MASTER VOLUME controlMaximum
2. BASS, MIDRANGE, TREBLE & BALANCE volume controlsCenter
3. TONE & FILTER switch control.....IN
4. InputPHONO-1 1.9mV 1kHz Sine Wave

AUX-1, 2 100mV 1kHz Sine Wave (output impedance of 600Ω at an audio oscillator)

5. Output15.5V (30W) 8Ω

Note: Each voltage value is for reference and measured by a VTVM. In some recorders, the actual voltage value is in minor difference from the reference value.

3. ADJUSTMENT

3-1. Driver Circuit Board Adjustment (See Figs 3-1 and 3-2)

- Note:
1. Confirm the AC power supply voltage.
 2. MASTER VOLUME Minimum
 3. SPEAKER Selector A
 4. Make the SP terminals free (no load).
 5. For adjustment, run the unit for more than 3 minutes after the power is switched ON.
 6. Room temperature should be 18~28°C (65~83°F) for bias current adjustment.

STEP	SUBJECT	EQUIPMENT	MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
1	DC 0V L-ch	DC volt meter	SP terminal L-ch (See Fig. 3-2)	F-2097B VR01	0V ± 10mV	◦ Turn volumes of VR03, VR04 Counter clock wise
2	DC 0V R-ch	Same as above	SP terminal R-ch (See Fig. 3-2)	F-2097B VR02	Same as above	
3	Bias current L-ch	DC milliammeter	F-2097B F01 (See Fig. 3-1)	F-2097B VR03	25 ± 10mA	◦ Step down meter's range accordingly
4	Bias current R-ch	Same as above	F-2097B F02 (See Fig. 3-1)	F-2097B VR04	Same as above	

Fig. 3-1



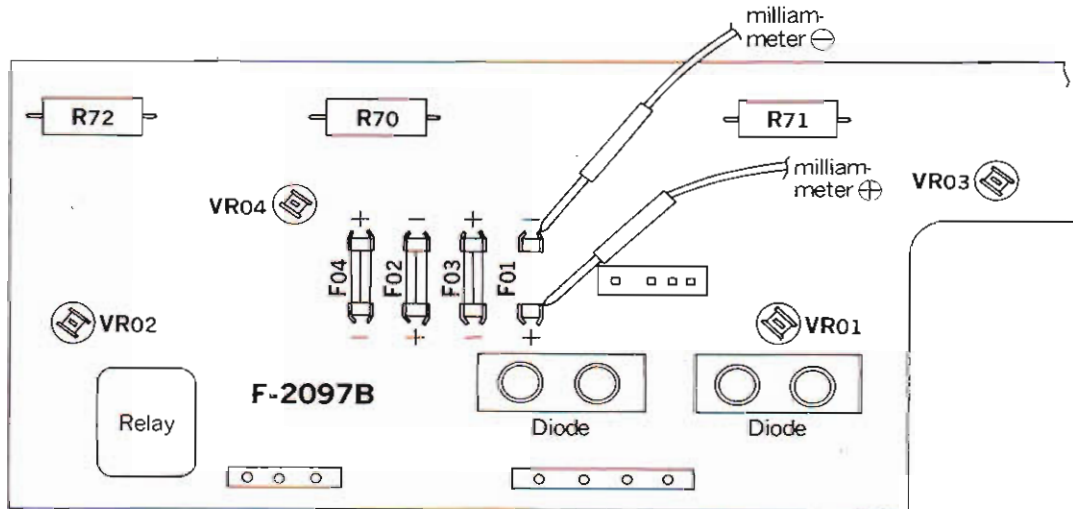


Fig. 3-2

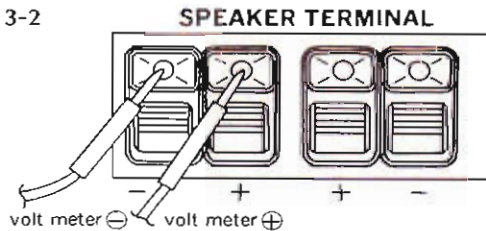


4. PARTS LOCATIONS AND PARTS LISTS


4-1. F-2091 Equalizer & Power Supply Circuit Board (Stock No. 7550590 Complete Circuit Board F-2091)
Conductor Side

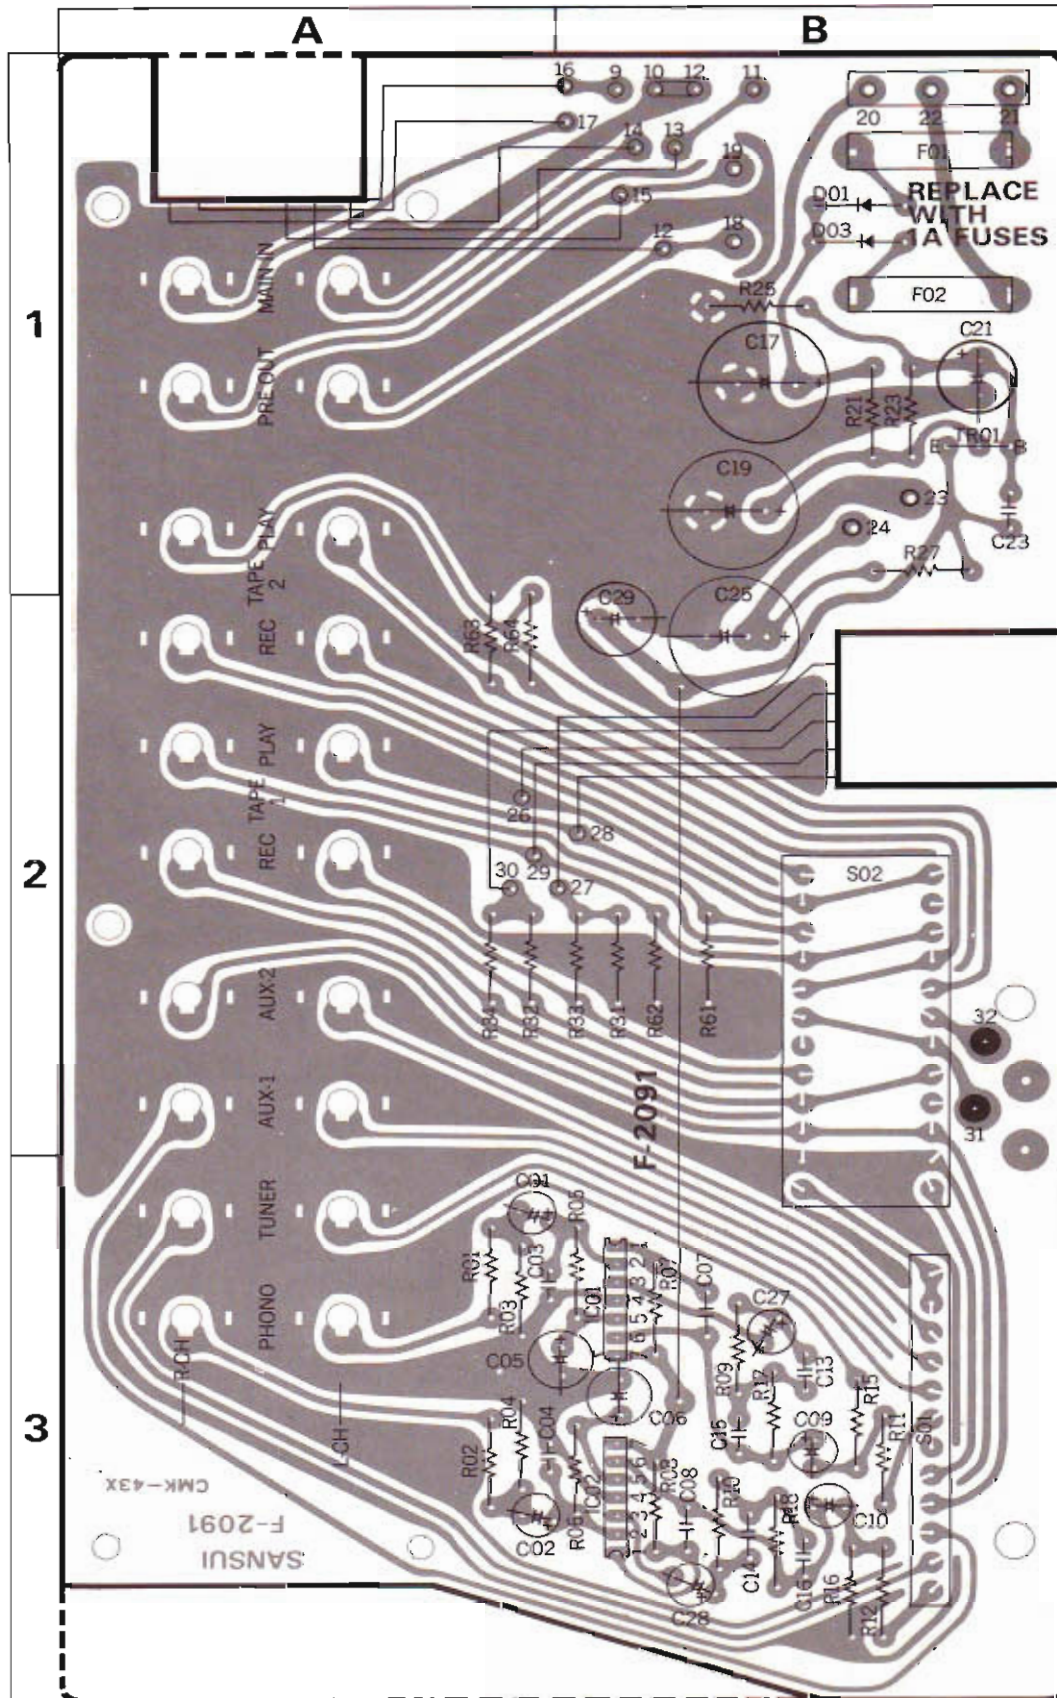


2SC1364

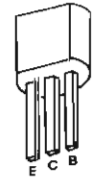

BA312

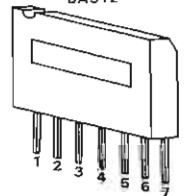

10D-1

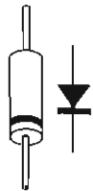


Parts List

Parts No.	Stock No.	Description	Position	
TR01	0306132	2SC1364 (7) Transistor	1 B	
IC01, 02	0360190	BA312 IC	3 B	
D01, 02	0310340	10D-1 Diode	1 B	
C01, 02	0519105	2.2 μ F 50V E.C.	3 A	
C03, 04	0660470	47pF 50V C.C.	3 A	
C05, 06	0510470	47 μ F 6.3V E.C.	3 A, 3 B	
C07, 08	0660220	22pF 50V C.C.	3 B	
C09, 10	0519103	0.47 μ F 50V E.C.	3 B	
C13, 14	0600686	0.068 μ F 50V M.C.	3 B	
C15, 16	0620222	2200pF 50V P.C.	3 B	
C17, 18	0515331	330 μ F } 50V E.C.	1 B	
C21	0515101		100 μ F } 1 B	
C23	0660471	470 μ F 50V C.C.	1 B	
C25	0514221	220 μ F 35V E.C.	2 B	
C27, 28	0515109	1 μ F 50V E.C.	3 B	
R01, 02	0107152	1.5k Ω } $\frac{1}{4}$ W C.R.	3 A	
R03, 04	0107154		150k Ω } 3 A	
R05, 06	0107683		68k Ω } 3 B	
R07, 08	0107394		390k Ω } 3 B	
R09, 10	0107684		680k Ω } 3 B	
R11, 12	0107121		120 Ω } 3 B	
R15, 16	0107104		100k Ω } 3 B	
R17, 18	0107333		33k Ω } 3 B	
R21	0107820		82 Ω } 1 B	
R23	0107682		6.8k Ω } 1 B	
R25	0107333		33k Ω } 1 B	
R27	0107331		330 Ω } 1 B	
R31, 32	0107104		100k Ω } 2 B, 2 A	
R33, 34	0107224		220k Ω } 2 B, 2 A	
R61-64	0107474		470k Ω } 2 B, 2 A	
R601, 602	0104221		220 Ω 1W C.R.	
R909, 910	0107824		820k Ω } $\frac{1}{4}$ W C.R.	
R936, 936	0107102	1k Ω } $\frac{1}{4}$ W C.R.		
S01	1101540	SRE-1-2-4	Rotary Switch } 3 B	
S02	1102560	SRE-2-6-7		2, 3 B
F01, 03	0430830	1A Fuse	1 B	
	2310150	Fuse Holder		
	2430250	Pin Jack		

4-2. F-2098 Accessory Switch Circuit Board

(Stock No. 7592170 Complete Circuit Board F-2098)

Conductor Side

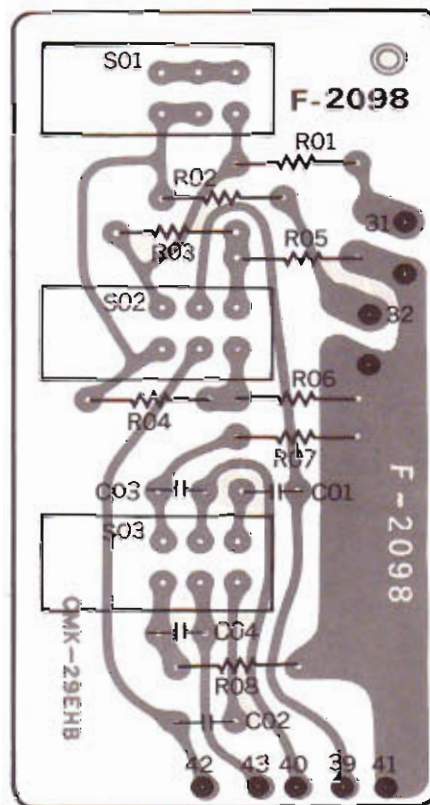

Parts List

Parts No.	Stock No.	Description	
C01, 02	0660391	390 pF 50V C.C.	
C03, 04	0601227	0.022 μ F 50V M.C.	
R01, 02	0107103	10k Ω } $\frac{1}{4}$ W C.R.	
R03, 04	0107474		470k Ω }
R05, 06	0107823		82k Ω }
R07, 08	0107223		22k Ω }
S01-03	1170340	SX15-5 Lever Switch	


Abbreviations

C.R.	: Carbon Resistor	BP.E.C.	: Bi-Polar Electrolytic Capacitor
S.R.	: Solid Resistor	C.C.	: Ceramic capacitor
Ce.R.	: Cement Resistor	Mi.C.	: Mica Capacitor
M.R.	: Metallized Film Resistor	O.C.	: Oil Capacitor
M.C.	: Mylar Capacitor	P.C.	: Polystyrene Capacitor
E.C.	: Electrolytic Capacitor	T.C.	: Tantalum Capacitor

4-3. F-2414 Tone Control Circuit Board

(Stock No. 7560830 Complete Circuit Board F-2414)

Conductor Side

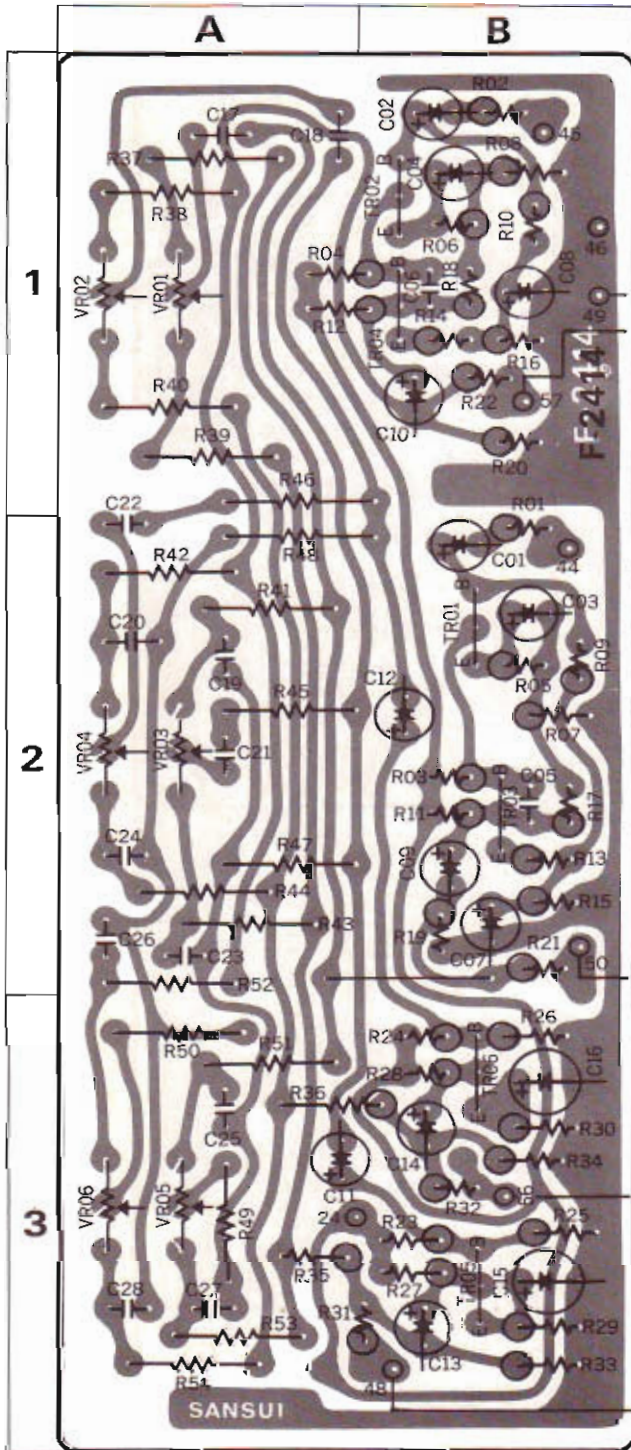

Parts List

Parts No.	Stock No.	Description	Position		
TR01, 02	0306071	2SC1313® (G)	} Transistor	2 B . 1 B	
TR03, 04	0306071	2SC1313® (G)		2 B . 1 B	
TR05, 06	0306071	2SC1313® (G)		3 B	
C01, 02	0519105	2.2µF 50V	} E.C.	2 B . 1 B	
C03, 04	0510470	47µF 6.3V		2 B . 1 B	
C05, 06	0660330	33pF 50V	C.C.	2 B . 1 B	
C07, 08	0510470	47µF 6.3V	E.C.	2 B . 1 B	
C09, 10	0519001	10µF 25V	E.C.	2 B . 1 B	
C11, 12	0519101	1µF 50V	E.C.	2 B	
C13, 14	0519001	10µF 25V	E.C.	3 B	
C15, 16	0510101	100µF 6.3V	E.C.	3 B	
C17, 18	0601226	0.0022µF	} 50V M.C.	1 A	
C19, 20	0601686	0.0068µF		2 A	
C21, 22	0601476	0.0047µF		2 A	
C23, 24	0601686	0.0068µF		2 A	
C25, 26	0601686	0.0068µF		3 A . 2 A	
C27, 28	0601686	0.0068µF		3 A	
R01, 02	0106332	3.3kΩ		} ¼W C.R. (E.I.R.)	2 B . 1 B
R03, 04	0106683	68kΩ			2B . 1A . B
R05, 06	0106102	1kΩ	2 B . 1 B		
R07, 08	0106332	3.3kΩ	2 B . 1 B		
R09, 10	0106334	330kΩ	2 B . 1 B		
R11, 12	0106472	4.7kΩ	2B . 1A . B		
R13, 14	0106221	220Ω	2 B . 1 B		
R15, 16	0106122	1.2kΩ	2 B . 1 B		
R17, 18	0106333	33kΩ	2 B . 1 B		
R19, 20	0106104	100kΩ	2 B . 1 B		
R21, 22	0106101	100Ω	2 B . 1 B		
R23, 24	0106224	220kΩ	3 B		
R25, 26	0106333	33kΩ	3 B		
R27, 28	0106562	5.6kΩ	3 B		
R29, 30	0106102	1kΩ	3 B		
R31, 32	0106221	220Ω	3A . B . 3B		
R33, 34	0106104	100kΩ	3 B		
R35, 36	0106101	100Ω	3A . 2A . B		
R37, 38	0107272	2.7kΩ	} ¼W C.R.	1 A	
R39, 40	0107272	2.7kΩ		1 A	
R41, 42	0107472	4.7kΩ		2 A	
R43, 44	0107472	4.7kΩ		2 A	
R45, 46	0107273	27kΩ		2 A . 1 A	
R47, 48	0107223	22kΩ		2 A	
R49, 50	0107222	2.2kΩ		3 A	
R51, 52	0107822	8.2kΩ		3 A . 2 A	
R53, 54	0107822	8.2kΩ		3 A	
VR01, 02	1015111	50kΩ (B) × 2		TREBLE Volume	1 A
VR03, 04	1015111	50kΩ (B) × 2	MIDRANGE Volume	2 A	
VR05, 06	1015111	50kΩ (B) × 2	BASS Volume	3 A	


2SC1313



4-4. F-2415 Accessory Switch Circuit Board


(Stock No. 7592150 Complete Circuit Board F-2415)

Conductor Side

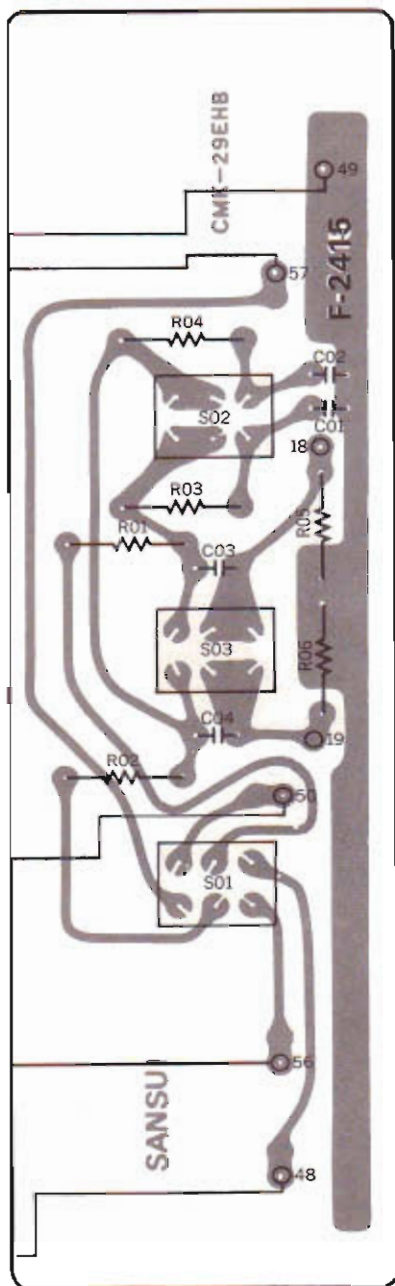

4-5. F-2099 Volume Circuit Board

Conductor Side

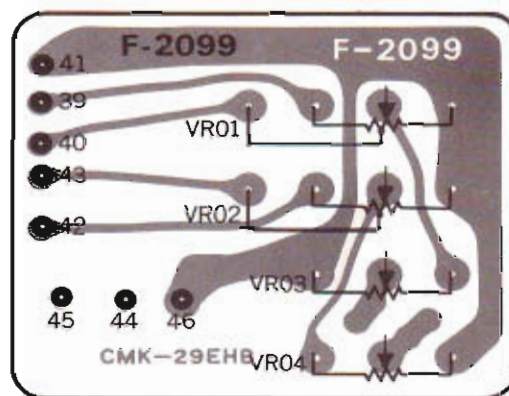

Parts List

Parts No.	Stock No.	Description
VR01-04	1060320	250kΩ (MN, B) × 4 Volume

Parts List

Parts No.	Stock No.	Description	
C01, 02	0601686	0.0068μF } 50V M.C.	
C03, 04	0601477		0.047μF
R01, 02	0107332	3.3kΩ } 1/4W C.R.	
R03, 04	0107824		820kΩ
R05, 06	0107104		100kΩ
S01-03	1170340	SX15-5 Lever Switch	



Abbreviations:

C.R.	: Carbon Resistor	BP.E.C.:	Bi-Polar Electrolytic Capacitor
S.R.	: Solid Resistor	C.C.	: Ceramic capacitor
Ce.R.	: Cement Resistor	Mi.C.	: Mica Capacitor
M.R.	: Metallized Film Resistor	O.C.	: Oil Capacitor
M.C.	: Mylar Capacitor	P.C.	: Polystyrene Capacitor
E.C.	: Electrolytic Capacitor	T.C.	: Tantalum Capacitor

4-6. F-2097B Driver & Power Supply Circuit Board

Conductor Side

(Stock No. 7570920 Complete Circuit Board F-2097B)

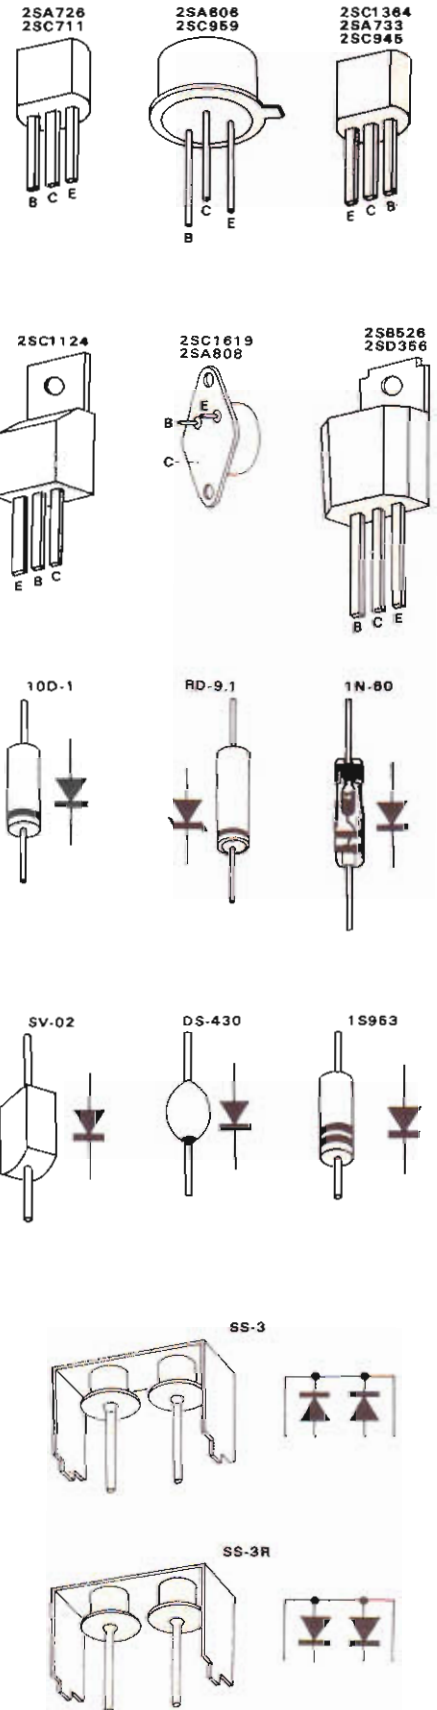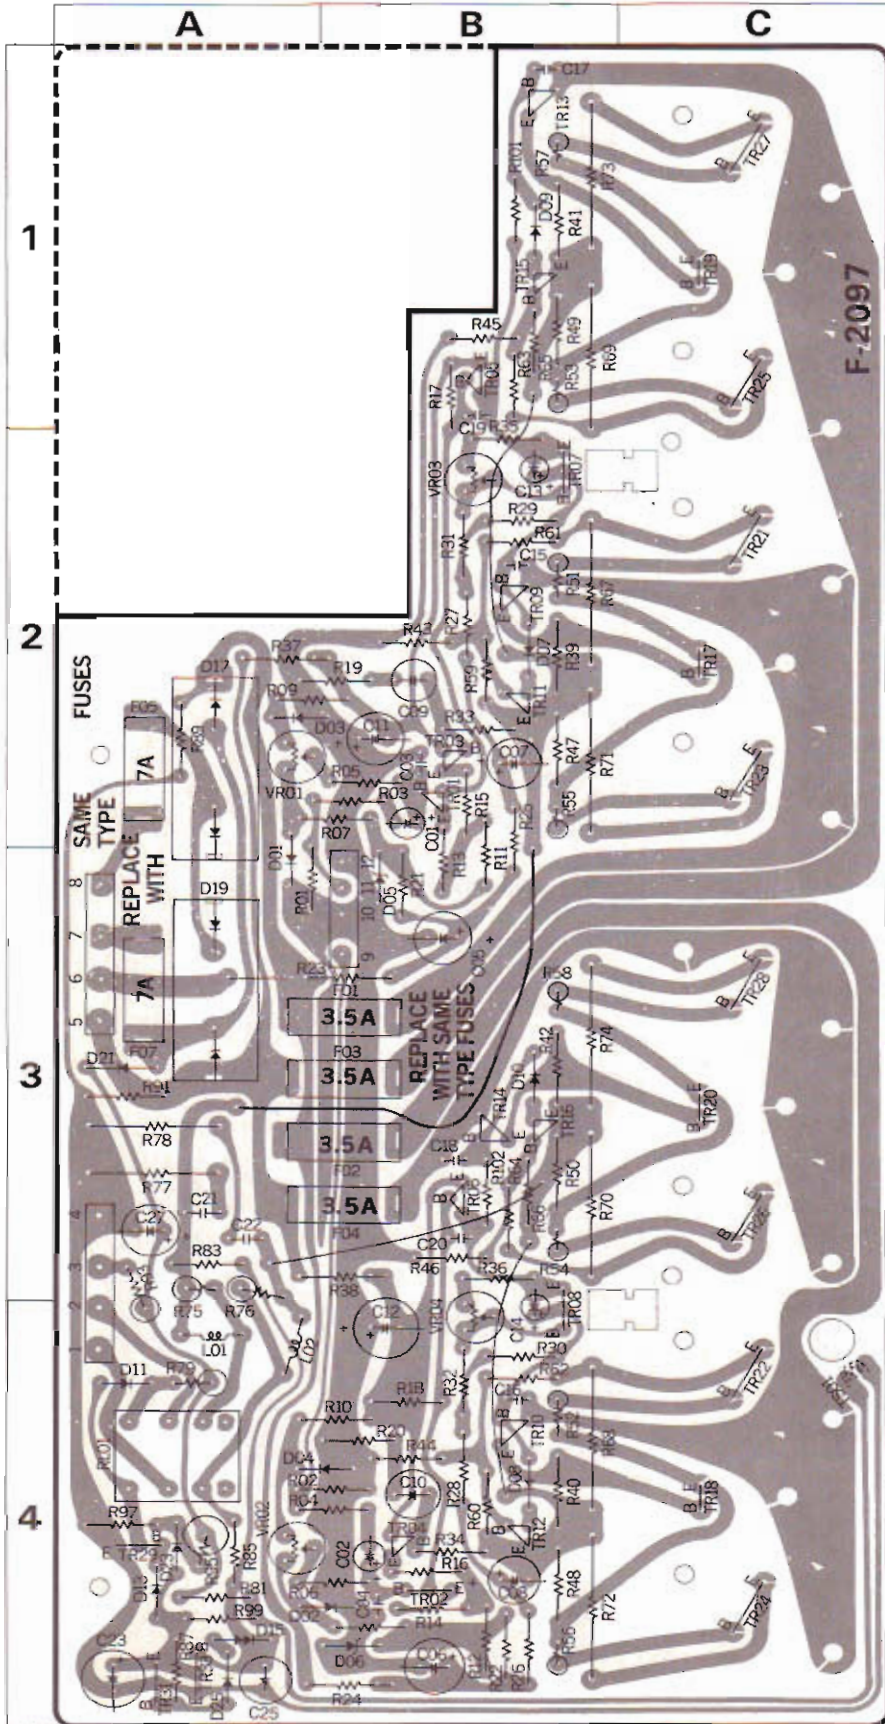

Parts List


Parts No.	Stock No.	Description	Position
TR01, 02	0300470, 1	2SA726 (F, G)	2 B . 4 B
TR03, 04	0300470, 1	2SA726 (F, G)	2 B . 4 B
TR05, 06	0300590, 1	2SC1124 (1, 2)	1 B . 3 B
TR07, 08	0305731-3	2SC711 (E, F, G)	2 B . 3, 4B
TR09, 10	0305742, 3	2SC959 (L, K)	2 B . 4 B
TR13, 14	0300212, 3	2SA606 (L, K)	1 B . 3 B
TR17, 18	0308450-2	2SD356 (C, D, E)	2 C . 4 C
TR19, 20	0303280-2	2SB526 (C, D, E)	1 C . 3 C
TR23, 24	0306192	2SC1619 (O)	2 C . 4 C
TR25, 26	0300632	2SA808 (O)	1 C . 3 C
TR29	0306130-2	2SC1364 (5, 6, 7)	4 A
TR31	0300510-2	2SA733 (P, Q, R)	4 A
TR33	0305950-2	2SC945 (R, Q, P)	4 A
} Transistor			
D01, 02	0340090	DS-430	2,3A,4A,B
D03, 04	0340090	DS-430	2A,B,4A,B
D05, 06	0316230	RD-9.1E(B)	3 B . 4 B
D11	0310340	10D-1	4 A
D13	0311050	1S953	4 A
D15	0310490	SV-02	4 A
D17	0311310	SS-3	2 A
D19	0311320	SS-3R	3 A
D21	0310340	10D-1	3 A
D23	0310331	1N60	4 A
D25	0340090	DS-430	4 A
} Diode			
TS01	0320110	TS3-85A Thermistor	
C01, 02	0519105	2.2 μ F 50V E.C.	2 B . 4 B
C03, 04	0660470	47pF 50V C.C.	2 B . 4 B
C05, 06	0515101	100 μ F } 50V E.C.	3 A . 4 B
C07, 08	0515330	33 μ F } 50V E.C.	2 B . 4 B
C09, 10	0530470	47 μ F 6.3V E.C.	2 B . 4 B
C11, 12	0515101	100 μ F } 50V E.C.	2 B . 4 B
C13, 14	0515109	1 μ F } 50V E.C.	2 B . 4A, B
C15, 16	0660100	10pF } 50V C.C.	2 B . 4 B
C17, 18	0660100	10pF } 50V C.C.	1 B . 3 A
C19, 20	0660220	22pF } 50V C.C.	1 B . 3 A
C21, 22	0601687	0.068 μ F 50V M.C.	3 A
C23	0510471	470 μ F 6.3V E.C.	4 A
C25	0531101	100 μ F 10V E.C.	4 A
C27	0515330	33 μ F 50V E.C.	3 A
C901	0601106	0.001 μ F 50V M.C.	
R01, 02	0107474	470k Ω	3 A . 4A,B
R03, 04	0107103	10k Ω	2A,B,4A,B
R05, 06	0107104	100k Ω	2 B . 4A,B
R07, 08	0107822	8.2k Ω	2A, B . 4 B
R09, 10	0107393	39k Ω	2A,B,4A,B
R11, 12	0107562	5.6k Ω	2, 3B . 4 B
R13, 14	0107100	10 Ω	2, 2B . 4 B
R15, 16	0107100	10 Ω	2 B . 4 B
R17, 18	0107102	1k Ω	1, 2 B . 4B
R19, 20	0107272	2.7k Ω	2A, B . 4B
R21, 22	0103222	2.2k Ω	3 B . 4 B
R23, 24	0103181	180 Ω	3A,B,4A,B
R25, 26	0103821	820 Ω	2,3 B . 4 B
R27, 28	0103392	3.9k Ω	2 B . 4 B
R29, 30	0107470	47 Ω	2 B . 4 B
R31, 32	0107682	6.8k Ω	2 B . 4 B
R33, 34	0107563	56k Ω	2 B . 4 B
R35, 36	0107122	1.2k Ω	2 B . 3 B
R37, 38	0103101	100 Ω	2A,B,3AB
R39, 40	0103102	1k Ω	2 B . 4 B

Parts No.	Stock No.	Description	Position
R41, 42	0103102	1k Ω $\frac{1}{2}$ W C.R.	1 B . 3 B
R47, 48	0103221	220 Ω	2 B . 4 B
R49, 50	0103221	220 Ω	1 B . 3 B
R51, 52	0103100	10 Ω } $\frac{1}{2}$ W C.R.	
R53, 54	0103100	10 Ω } $\frac{1}{2}$ W C.R.	1 B . 3 B
R55, 56	0103100	10 Ω } $\frac{1}{2}$ W C.R.	2 B . 4 B
R69, 70	0133478	0.47 Ω } 3W Ce.R.	1,2 B . 3B
R/1, 72	0133478	0.47 Ω } 3W Ce.R.	2 B . 4 B
R75, 76	0104479	4.7 Ω 1W C.R.	3 A
R77, 78	0105100	10 Ω 2W C.R.	3 A
R79	0104180	180 Ω 1W C.R.	4 A
R81	0107823	82k Ω	4 A
R83	0107823	82k Ω	3 A
R85	0107104	100k Ω } $\frac{1}{4}$ W C.R.	4 A
R87	0107473	47k Ω } $\frac{1}{4}$ W C.R.	4 A
R89	0103562	5.6k Ω } $\frac{1}{2}$ W C.R.	2 A
R91	0103562	5.6k Ω } $\frac{1}{2}$ W C.R.	3 A
R93	0105182	1.8k Ω } 2W C.R.	3, 4 A
R95	0105182	1.8k Ω } 2W C.R.	4 A
R97	0107221	220 Ω } $\frac{1}{4}$ W C.R.	4 A
R99	0107223	22k Ω } $\frac{1}{4}$ W C.R.	4 A
R909	0107102	1k Ω } $\frac{1}{4}$ W C.R.	
RL01	1150251	RABK-2B Relay	4 A
L101, 102	4290210	2.5 μ H Micro Inductor	4 A, B
VR01, 02	1035110	4.7k Ω (B) } Semi Variable	2 A
VR03, 04	1035070	1k Ω (B) } Resistor	2 B . 3, 4B
F01-04	0433680	3.5A Quick Acting Fuse	3 A, B
F05, 07	0430920	7A Power Fuse	2 A, 3 A
	5937070	Heat Sink	
	2310150	Fuse Holder	

Abbreviations

C.R.	: Carbon Resistor	BP.E.C.:	Bi-Polar Electrolytic Capacitor
S.R.	: Solid Resistor	C.C.	: Ceramic capacitor
Ce.R.	: Cement Resistor	Mi.C.	: Mica Capacitor
M.R.	: Metallized Film Resistor	O.C.	: Oil Capacitor
M.C.	: Mylar Capacitor	P.C.	: Polystyrene Capacitor
E.C.	: Electrolytic Capacitor	T.C.	: Tantalum Capacitor

4-7. Other Parts (Front Side)

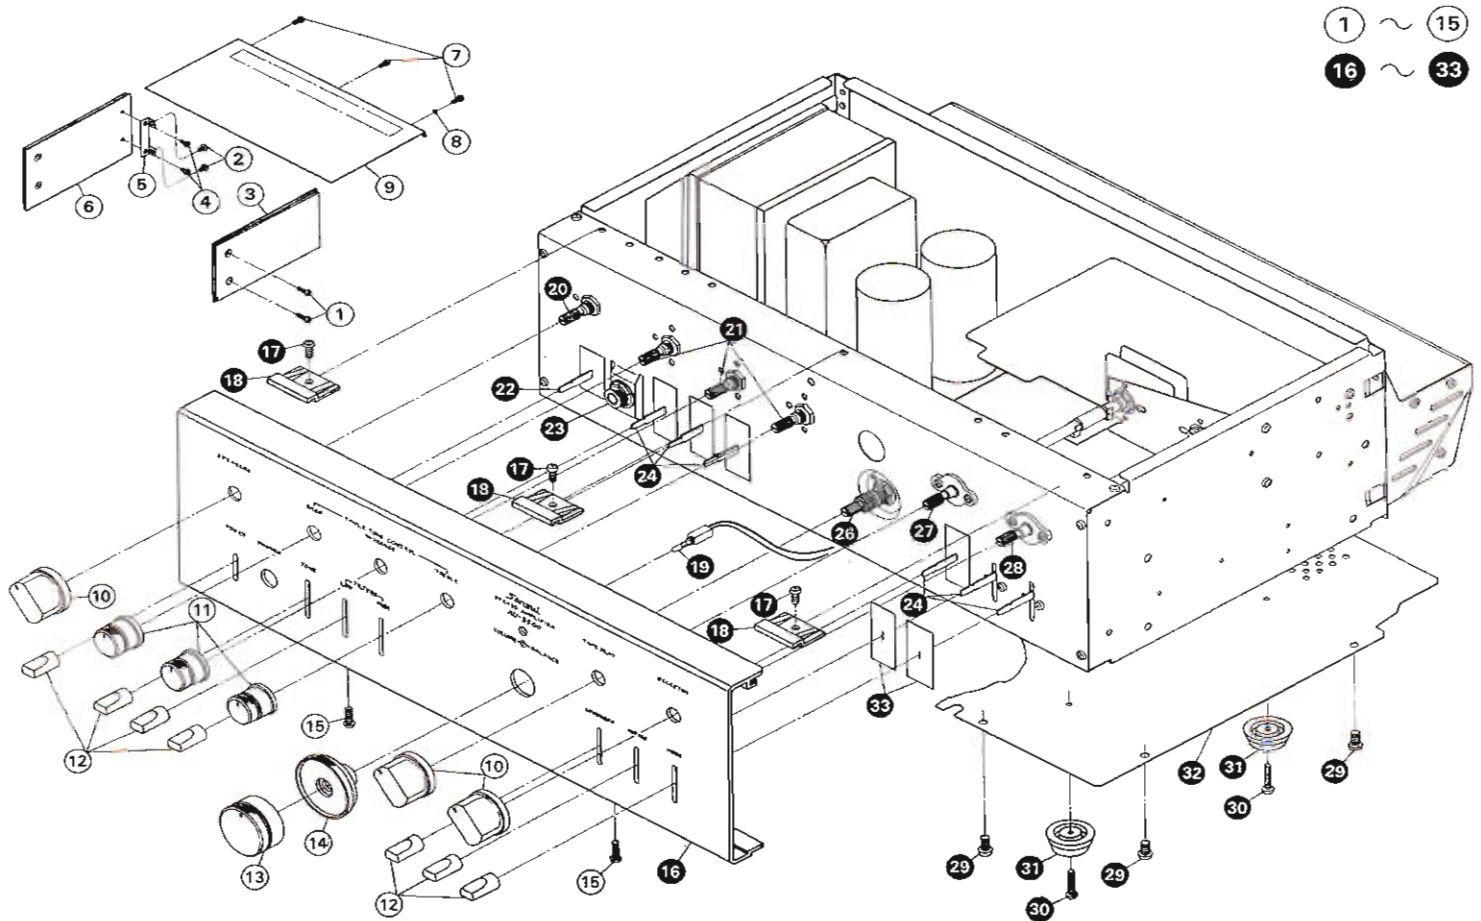


Parts List

Parts No.	Stock No.	Description
1	5101161	Binding Head Screw, M4×6
2	5109222	Binding Head Tapping Screw, M3×8
3	5309270	Side Panel (Right)
4	5109121	Binding Head Tapping Screw, M3×6
5	5269830	Side Panel Retainer
6	5309260	Side Panel (Left)
7	5109222	Binding Head Tapping Screw, M3×8
8	5122540	Toothed Lock Washer (External), 3φ
9	5006340	Metal Bonnet
10	5317880	S-5 Type Knob
11	5318041	S-5 Type Knob (Tone Control)
12	5326460	E-1 Type Knob (Lever Switch)
13	5318001	W0-3 Type Knob (Volume)
14	5318080	U-5 Type Knob (Balance)
15	5109222	Binding Head Tapping Screw, M3×8
16	{ 5309230 5269800	Front Panel Holder (Light Emitted Diode)

Parts No.	Stock No.	Description
17	5109222	Binding Head Tapping Screw, M3×8
18	5269880	Stopper (Front Panel)
19	7726080	Light Emitted Diode (SDB-501A-RD)
20	1101560, 1	Rotary Switch Y-1-4-4 (Speakers)
21	1015111	50kΩ (B)×2 Tone Control Volume
22	1170330	Lever Switch (Power)
23	2430190	Headphones Jack
24	1170340	Lever Switch
26	1060320	250kΩ·(MN, B)×4 Volume, Balance Volume
27	1102560	Rotary Switch SRE-2-6-7 (Tape Play)
28	1101540	Rotary Switch SRE-1-2-4 (Selector)
29	5109222	Binding Head Tapping Screw, M3×8
30	5166520	Washer Head Tapping Screw, M3×12
31	5516940	Foot
32	5058221	Bottom Plate
33	5047460	Masking (Lever Switch)

4-8. Other Parts (Top Side)

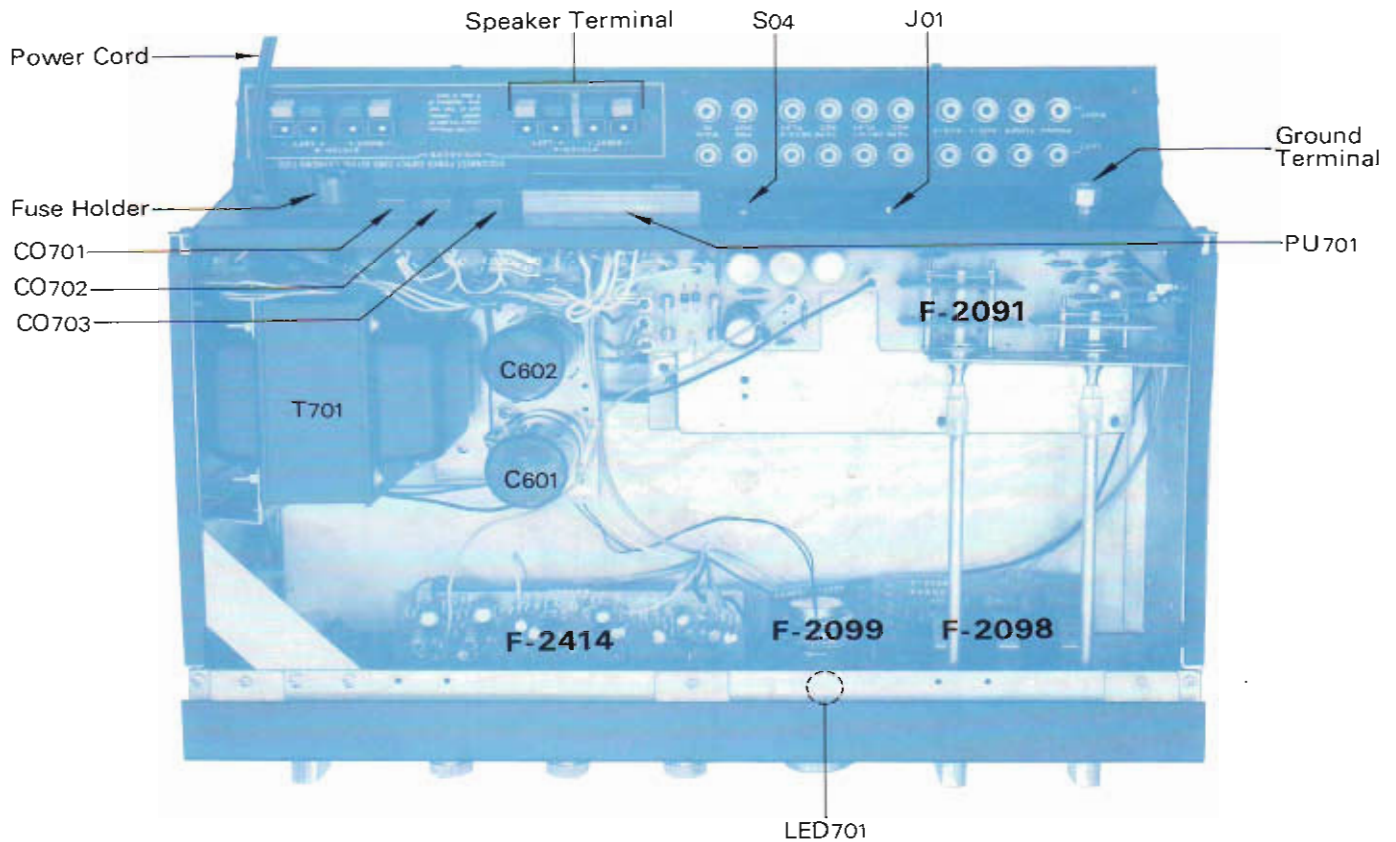


Parts List

Parts No.	Stock No.	Description
C601	0559332	4700 μ F } 50V E.C.
C602	0559332	
LED701	7727080	SDB-501A-RD Light Emitted Diode
J01	2090030	DIN Jack
S04	1110280	Slide Switch
CO701	2450050	} AC Outlet
CO702	2450050	
CO703	2450050	
F701	0431270	4A Power Fuse (100~117V)
	0431240	2A Power Fuse (220~240V)
	2300060	Fuse Holder

Parts No.	Stock No.	Description
PU701	2410080	Voltage Selector, socket
	2410090	Voltage Selector, plug
T701	4002130	Power Transformer
	2290100	4P Speaker Terminal
	3800020	Power Cord (KP-200)
	2230050	Ground Terminal

4-9. Other Parts (Bottom Side)

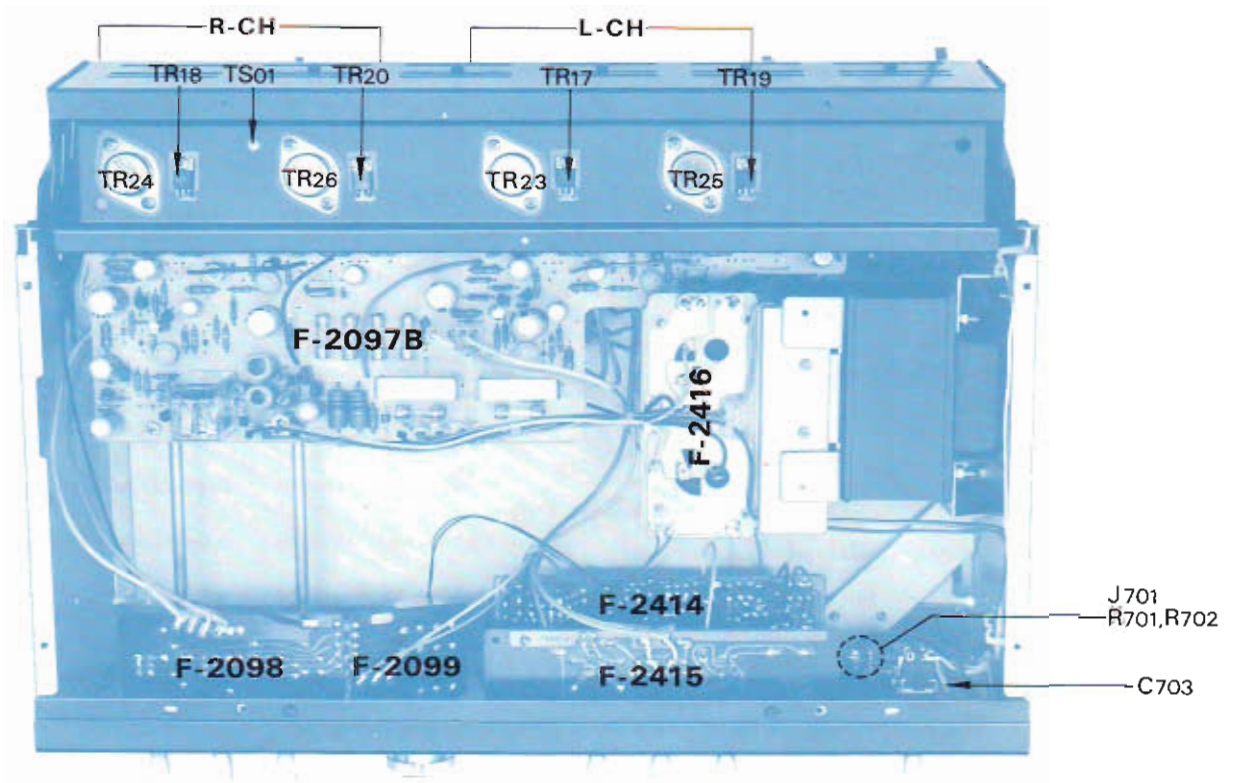

Parts List

Parts No.	Stock No.	Description
TR17	0308450-2	2SD356 (C,D,E)
TR18	0308450-2	2SD356 (C,D,E)
TR19	0303280-2	2SB526 (C,D,E)
TR20	0303280-2	2SB526 (C,D,E)
TR23	0306190	2SC1619 (0)
TR24	0306190	2SC1619 (0)
TR25	0300620	2SA808 (0)
TR26	0300620	2SA808 (0)
TS01	0320110	TS3-85A Thermistor
C703	0659801	0.01 μ F 1.4kV C.C.
R701	0104221	220 Ω } 1W C.R.
R702	0104221	220 Ω }
J701	2430190	Headphones Jack

Abbreviations:

C.R.	: Carbon Resistor
S.R.	: Solid Resistor
Ce.R.	: Cement Resistor
M.R.	: Metallized Film Resistor
M.C.	: Mylar Capacitor
E.C.	: Electrolytic Capacitor
BP.E.C.	: Bi-Polar Electrolytic Capacitor
C.C.	: Ceramic capacitor
Mi.C.	: Mica Capacitor
O.C.	: Oil Capacitor
P.C.	: Polystyrene Capacitor
T.C.	: Tantalum Capacitor

5. TROUBLESHOOTING CHART

5-1. Troubleshooting on power Supply Section

Symptom	Check Point	Cause
1. No power supplied to each section		
1-1. Indicator lamp for power not lighted		<ul style="list-style-type: none"> 1. Power supply cord open 2. Imperfect contact of power switch, S701 3. Power fuse, F701 open 4. Defective power transformer, T701 5. F07 on F2097B open 6. Defective D21 on F-2097B 7. Imperfect contact of voltage selector
1-2. Indicator lamp for power lighted		
	1) $\pm 35V$ not supplied to collector on each power transistor (+35V, TR23, TR24, -35V, TR25, TR26)	<ul style="list-style-type: none"> 8. F05 or F07 on F2097B open 9. Defective D17 or D19 on F-2097B
	2) +24V not supplied to terminal 24 on F-2091	<ul style="list-style-type: none"> 10. Defective power transformer, T701 11. F01 or F03 on F-2091 open 12. Defective D01 or D03 on F-2091 13. Defective TR01 on F-2091


5-2. Troubleshooting on Audio Section

1. Quick acting fuse open


1-1. After replacement, F01 (F02) on F-2097B open again		<ul style="list-style-type: none"> 1. Defective TR23 (TR24) on F-2097B 2. Defective TR09 TR17 (TR10 or TR18) on F-2097B
1-2. After replacement, F03 (F04) on F-2097B open again		<ul style="list-style-type: none"> 3. Defective TR25 (TR26) on F-2097B 4. Defective TR13 or TR19 (TR14 or TR20) on F-2097B 5. Defective TR05 (TR06) on F-2097B
1-3. After replacement, fuse not open		
1) Bias current adjustable		6. Set the bias current to +25mV by VR03 (VR04) on F-2097B (refer to 3. ADJUSTMENT)
2) Bias current not adjustable		<ul style="list-style-type: none"> 7. Defective VR03 (VR04) on F-2097B 8. Defective TR05 or TR07 (TR06 or TR08) on F-2097B
3) Center voltage adjustable		9. Set the center voltage to 0V by VR01 (VR02) on F-2097B (refer to 3. ADJUSTMENT)
4) Center voltage not adjustable		<ul style="list-style-type: none"> 10. Defective VR01 (VR02) on F-2097B 11. Defective TP01 or TR03 (TR02 or TR04) on F-2097B 12. Defective D01 or D03 (D02 or D04) on F-2097B

Symptom	Check Point	Cause
2. TUNER or AUX inoperative		
2-1. Both channels inoperative		<ul style="list-style-type: none"> 1. Defective relay, RL01 on F-2097B 2. Imperfect contact of SPEAKERS switch, S702a, c (S702b, d) 3. Defective TR29, TR31 or TR33 on F-2097B 4. Defective D13, D15 or D25 on F-2097B 5. Defective Power Supply Section
2-2. One channel inoperative		
* Set MODE switch to MONO		
1) Inoperative channel reverses		<ul style="list-style-type: none"> 6. Tuner connected from this set has faulty 7. Imperfect contact of SELECTOR switch, S01a (S01b) 8. Imperfect contact of TAPE PLAY switch, S02a (S02b)
2) Inoperative channel not reverses		
* Set TONE & FILTER switch to DEFEAT		
2-1) The inoperative channel becomes operating		9. Defective TR05 (TR06) on F-2414
2-2) The inoperative channel is still not operating		<ul style="list-style-type: none"> 10. Defective TR01 or TR03 (TR02 or TR04) on F-2414 11. Imperfect contact of HIGH FILTER switch, S02a (S02b) 12. Imperfect contact of LOW FILTER switch, S03a (S03b) 13. Imperfect contact of PRE-MAIN switch, S04a (S04b) 14. Defective Driver & Power Supply Circuit Board
3. PHONO inoperative		
3-1. Both channels inoperative		1. Refer to 2-1. of 2. Both channels inoperative
3-2. One channel inoperative		
* Set MODE switch to MONO		
1) Inoperative channel reverses		<ul style="list-style-type: none"> 2. Turntable connected from this set has faulty 3. Imperfect contact of SELECTOR switch, S01a (S02b) 4. Imperfect contact of TAPE PLAY switch, S02a (S02b) 5. Defective IC01 (IC02) on F-2091
2) Inoperative channel not reverses		6. Refer to 2-2. of 2. One channel inoperative

6. SCHEMATIC DIAGRAM

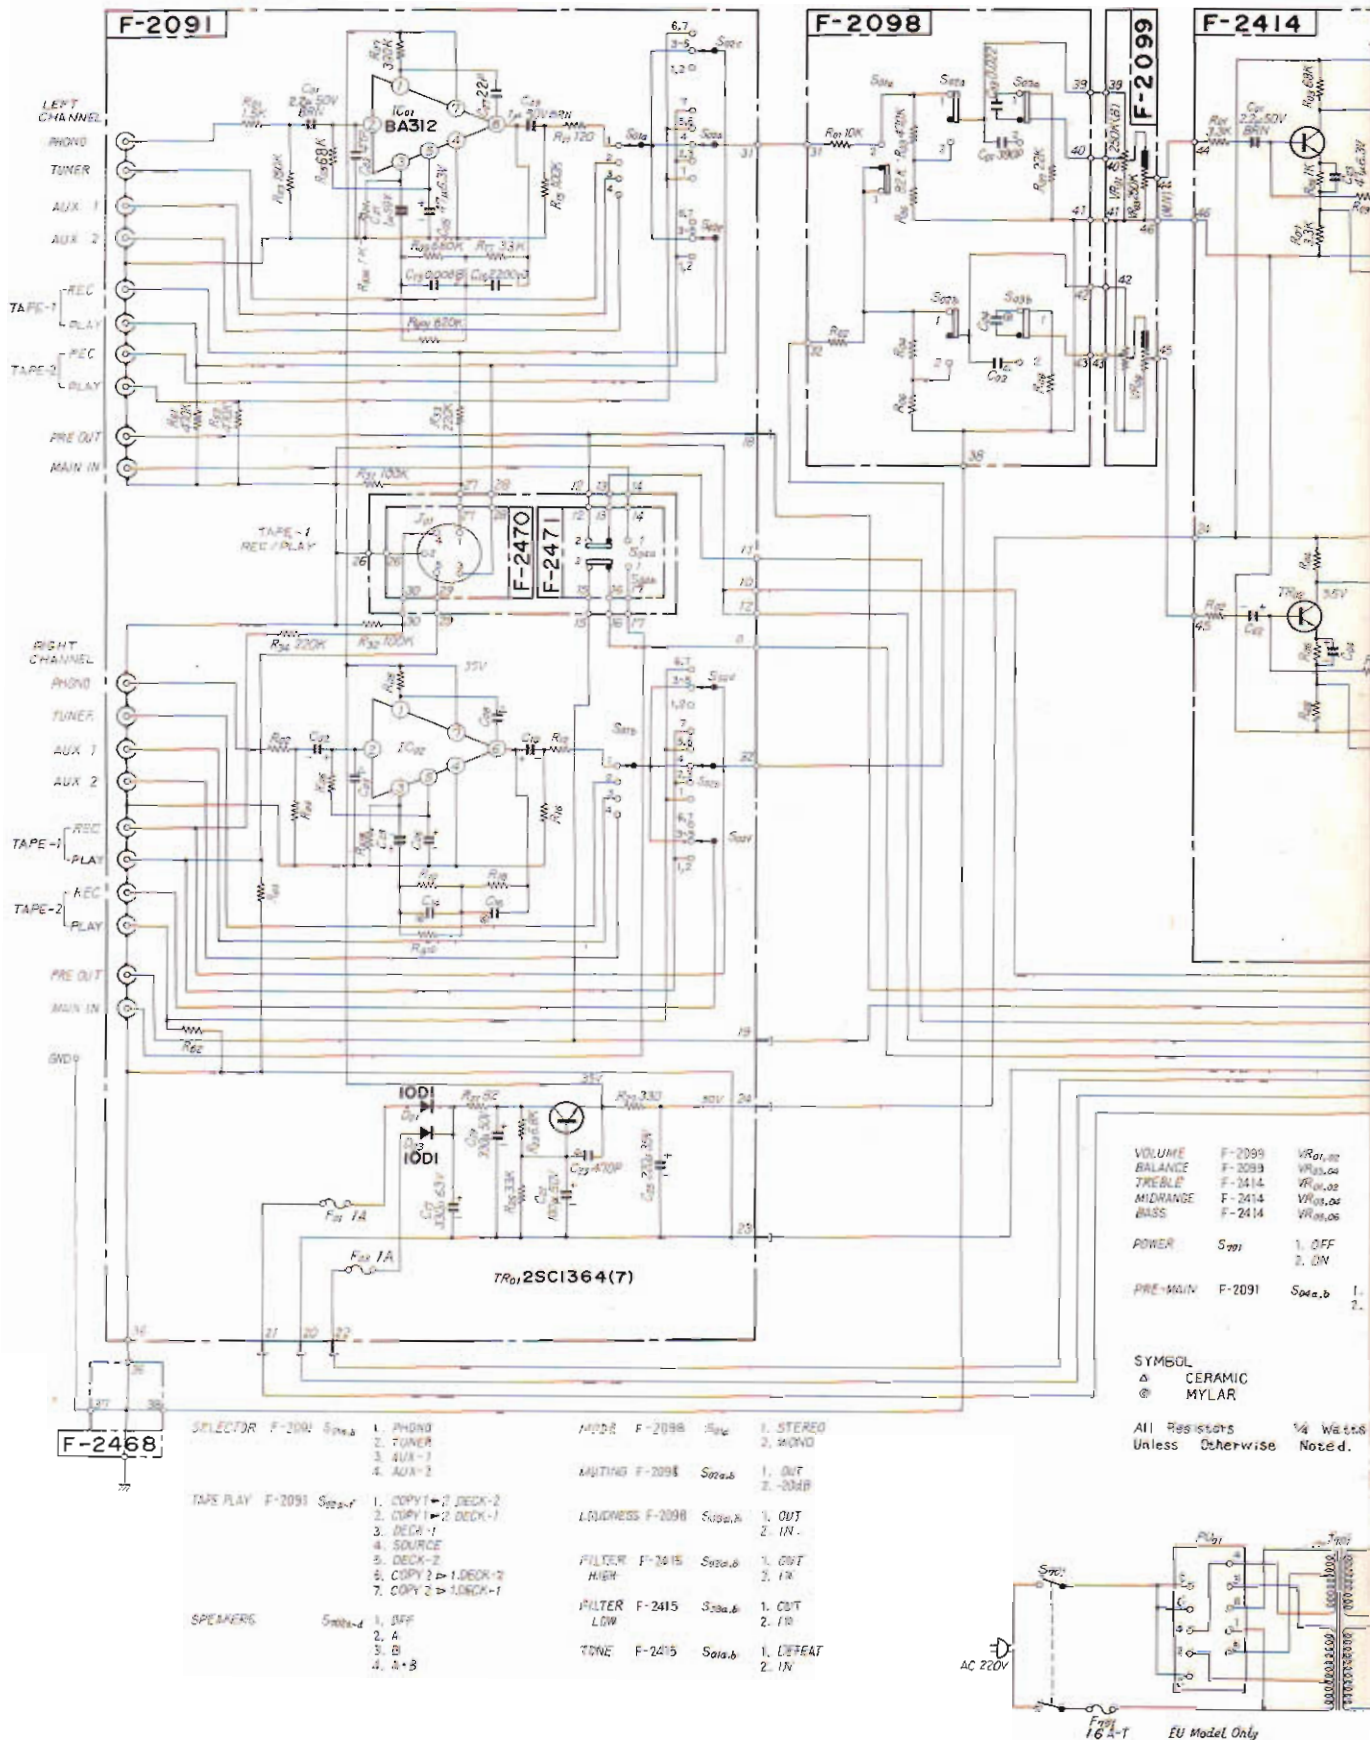

* Design and specifications subject to change without notice for improvements.

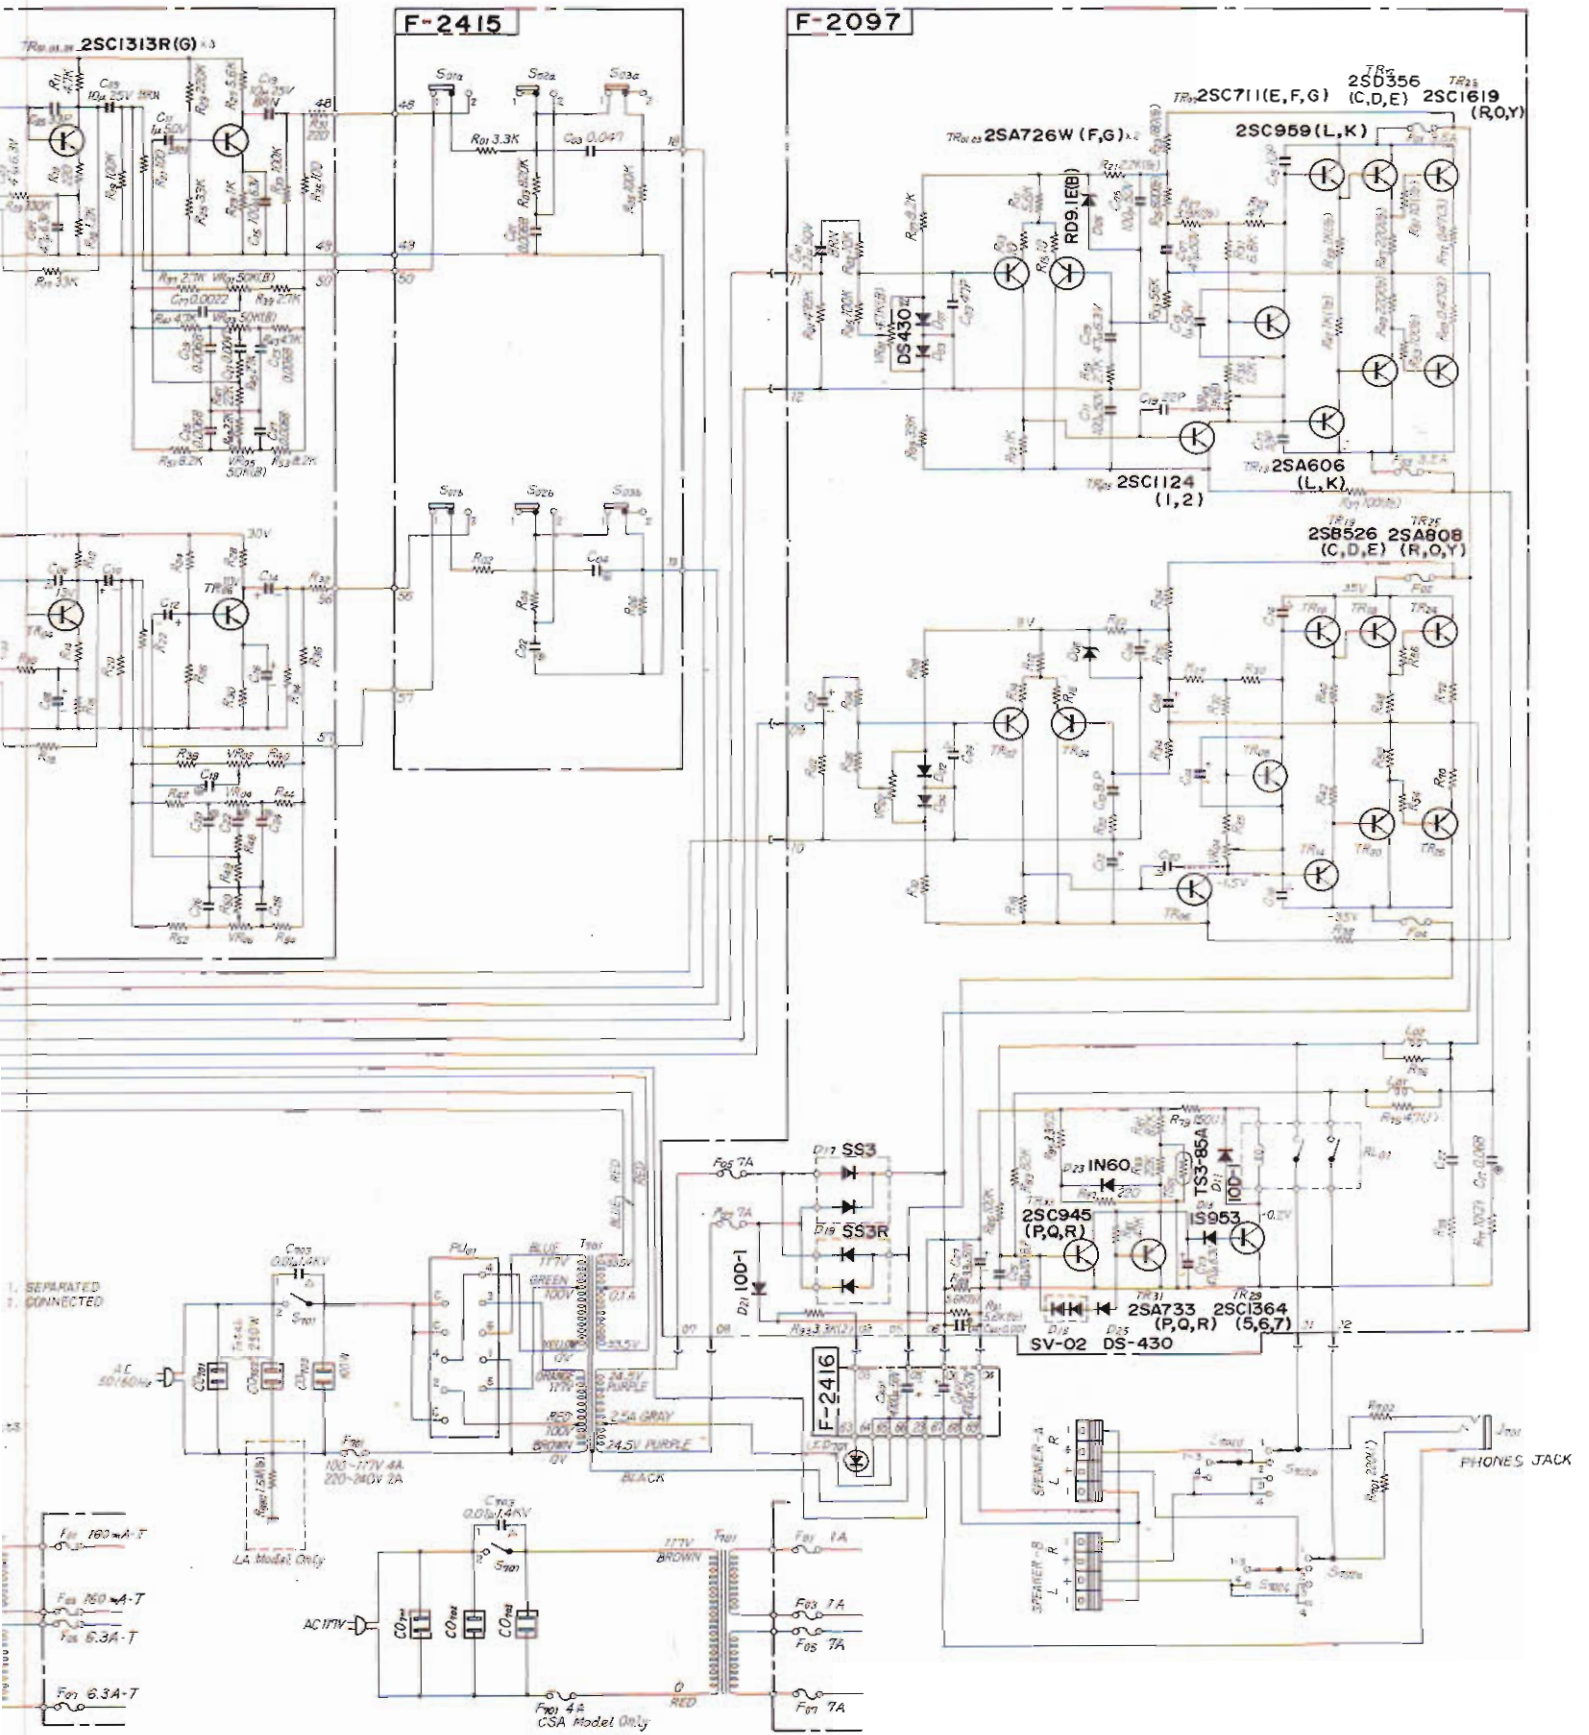

7. REPLACEMENT OF POWER TRANSISTORS

- 1) Remove 4 pcs-screws installing on left (or right) side panel.
- 2) Remove 11 pcs-screws installing on bottom plate.
- 3) Remove all connectors and screws, ① and ② (See Fig. 7-1) installing on F-2097B.
- 4) Remove screw, ③, ④, ⑤ and ⑥ (See Fig. 7-2) installing heat sink.
- 5) Remove driver & power supply circuit board ass'y (F-2097B), then replace the transistors with new ones.

Fig. 7-1



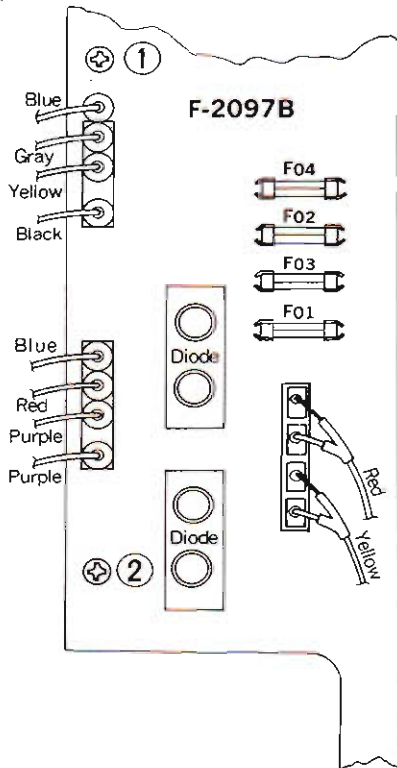


Fig. 7-2

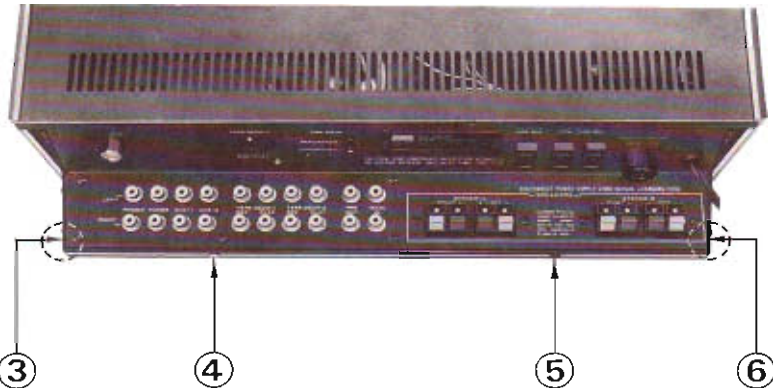

8. PACKING LIST

Parts No.	Stock No.	Description
1	9027810	Stylofoam Packing
2	9116152	Vinyl Cover
3	9008111	Carton Case

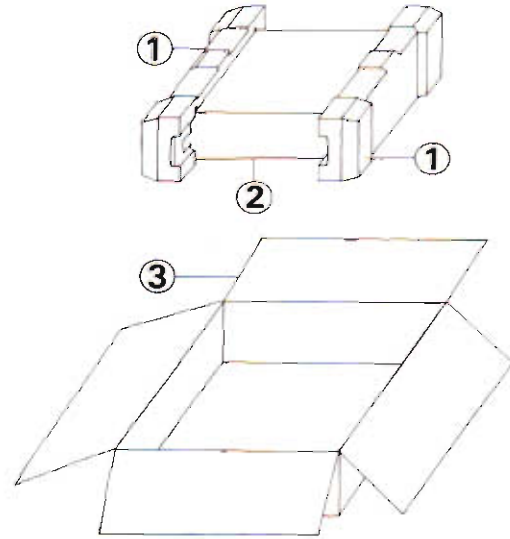

9. ACCESSORY PARTS LIST

Stock No.	Description
0433680	3.5A Quick Acting Fuse
5066250	Pin Plug Cover
9208290	Operating Instructions
9228290	Operating Instruction Sheet