

# Service Manual

Direct Drive Automatic Turntable System

Revise

## SL-7

[E], [EK], [XL],  
[EB], [EG], [EF], [XA]

## SL-7(K)

[E], [EK], [XL],  
[EB], [EG], [XA]



\* The colors of this model include silver and Black. The black type model is provided with (K) in the Service Manual.

#### Areas

- \* [E] is available in Scandinavia.
- \* [EK] is available in United Kingdom.
- \* [XL] is available in Australia.
- \* [EB] is available in Belgium.
- \* [EG] is available in European.
- \* [EF] is available in France.
- \* [XA] is available in Asia, Latin America, Middle East and Africa.

#### NOTES:

1. This revised service manual includes the points of change from SL-7/K service manual (Order No. SD8009-1781), and the related printed circuit board diagram and adjusting method.
2. For the servicing of Model SL-7, use this revised service manual.
3. SL-7/K service manual (Order No. SD8009-1781) must be disused.

**SPECIFICATIONS** Specifications subject to change without notice.  
Weight and dimensions shown are approximate.

#### ■ General

<b>Power supply:</b>	~ 110-120/220-240V, 50/60 Hz DC 12V (DC input jack)
<b>Power consumption:</b>	20 W (AC) 6W (DC)
<b>Dimensions:</b> (W x H x D)	31.5 x 8.8 x 31.5 cm (12-1/2" x 3-1/2" x 12-1/2")
<b>Weight:</b>	7 kg (15.4 lbs.)

#### ■ Turntable section

<b>Type:</b>	Quartz direct drive Automatic turntable Auto start/Auto lead-in Auto return Auto stop Repeat play Auto speed select Auto size select 2-speed search functions Record presence detection
<b>Drive method:</b>	Direct drive
<b>Motor:</b>	Brushless DC motor
<b>Drive control method:</b>	Quartz-phase-locked control

<b>Turntable platter:</b>	Aluminum die-cast Diameter 30 cm (12 inches)
<b>Turntable speeds:</b>	33-1/3 rpm and 45 rpm Auto speed select (Manual selection possible) within $\pm 0.002\%$
<b>Speed deviation:</b>	0.012% WRMS*
<b>Wow and flutter:</b>	0.025% WRMS (JIS C5521) $\pm 0.035\%$ peak (IEC 98A Weighted)

\* Measured by obtaining signal from built-in frequency generator of motor assembly.


<b>Rumble:</b>	-56 dB (IEC 98A Unweighted) -78 dB (IEC 98A Weighted)
----------------	----------------------------------------------------------

#### ■ Tonearm section


<b>Type:</b>	Dynamic balanced type Linear tracking tonearm 4-pivot gimbal suspension
<b>Effective length:</b>	10.5 cm (4-1/8")
<b>Tracking error angle:</b>	Within $\pm 0.1^\circ$
<b>Effective mass:</b>	9 g (including cartridge)
<b>Resonance frequency:</b>	12 Hz
<b>Tonearm drive motor:</b>	Coreless DC motor

IC101 (AN6635)

IC201 (AN6680)

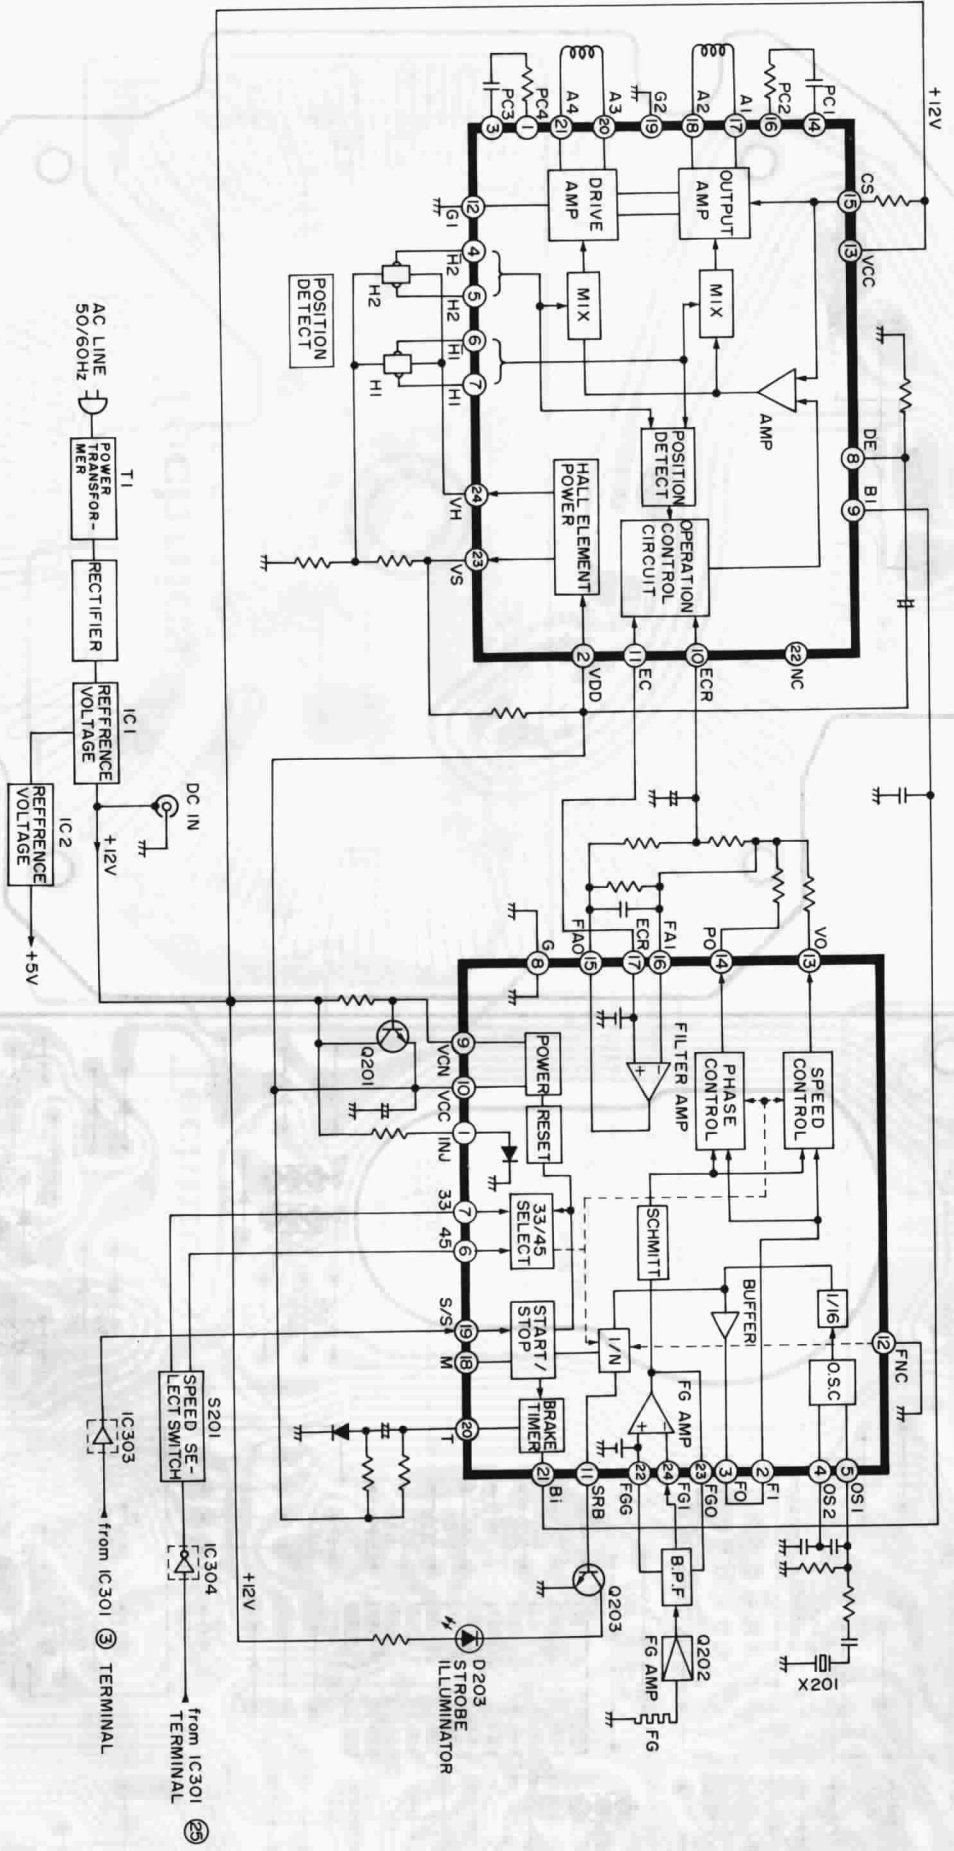



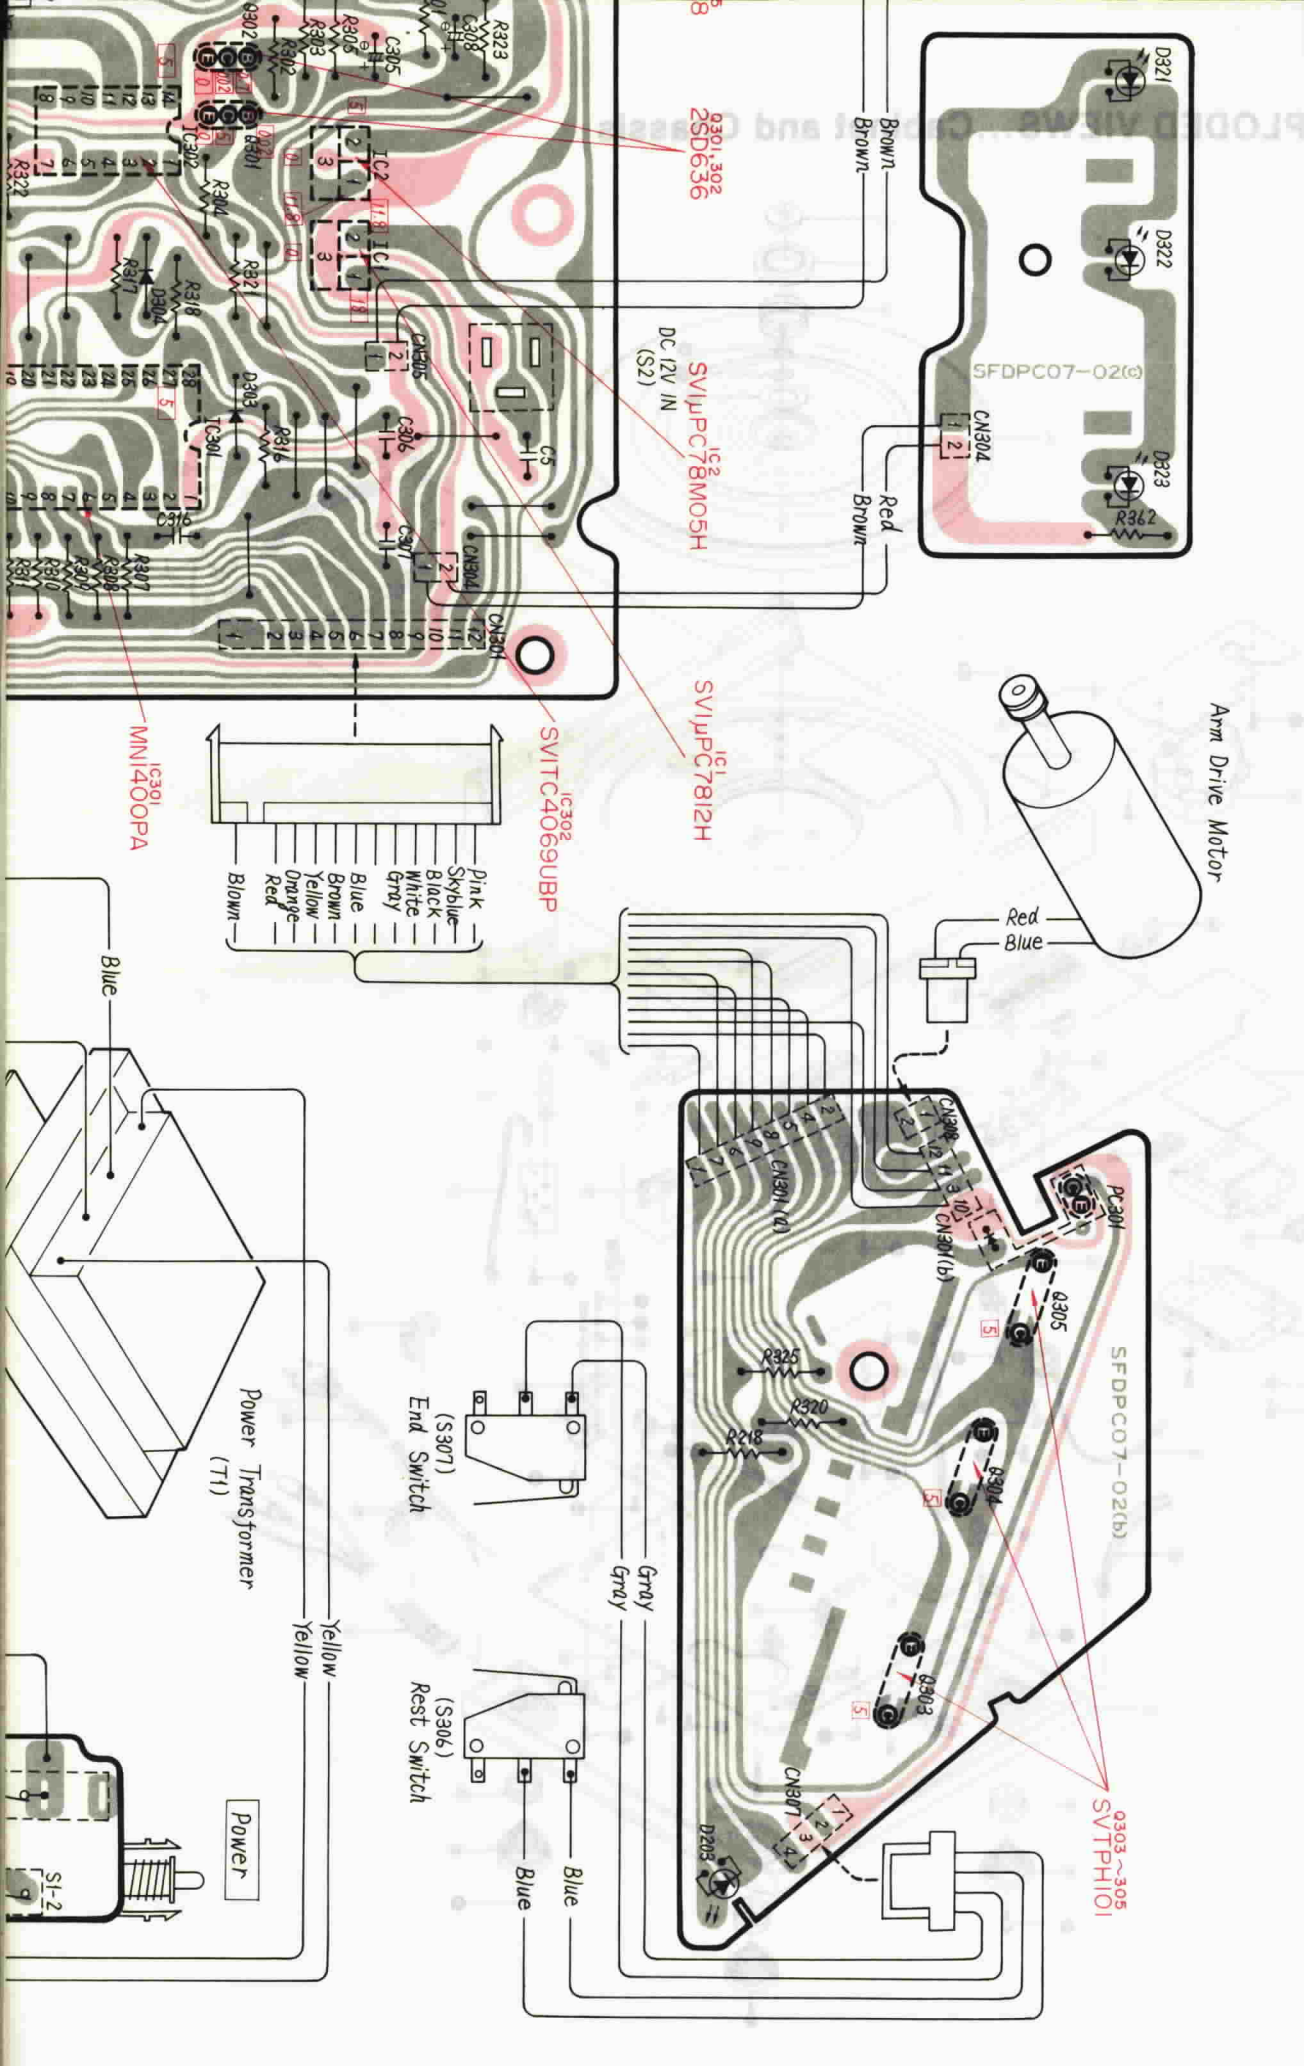

Arm Drive Motor



Red  
Blue



0303 ~ 305  
SVTPH101

DC 12V IN (S2)

SV1JPC78I2H

SV1JPC4069UBP

MNI400PA

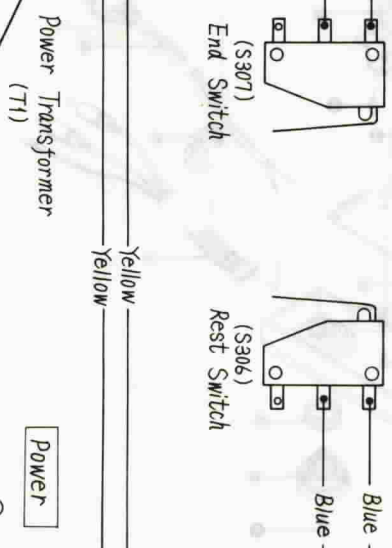
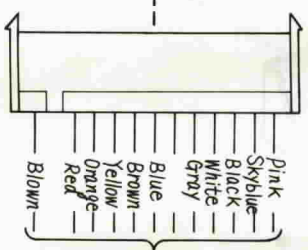


Power Transformer (T1)

Yellow



Power

SI-2

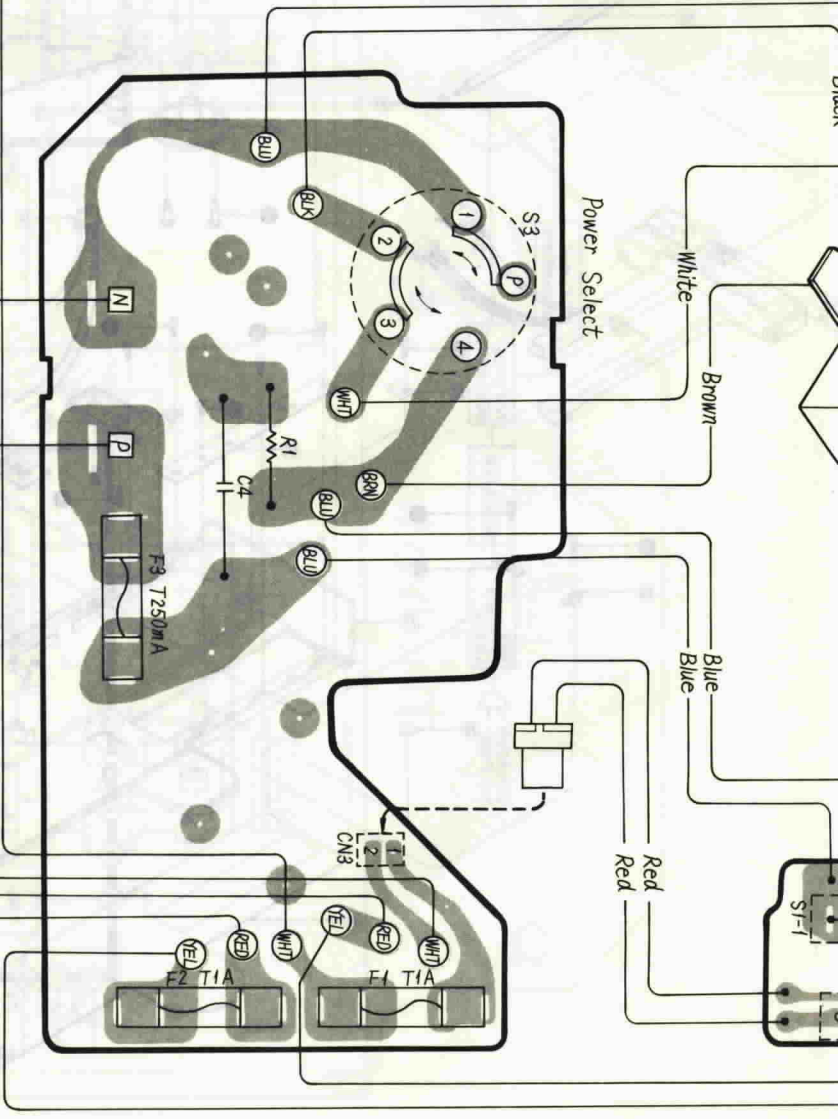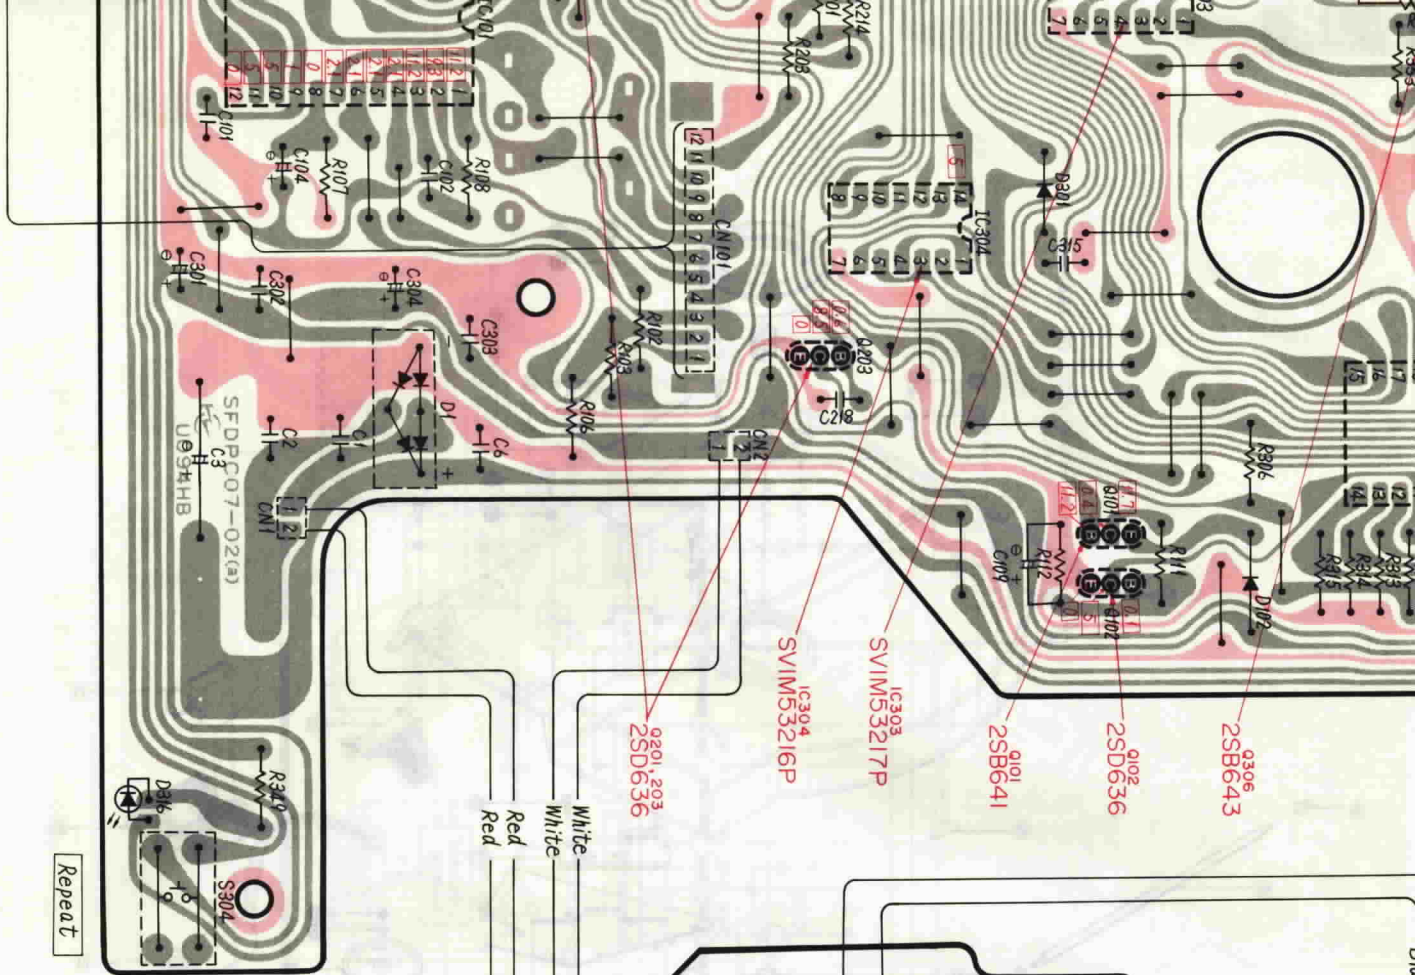

AC LINE  
 110~120/220~240V  
 (50/60Hz)

Repeat

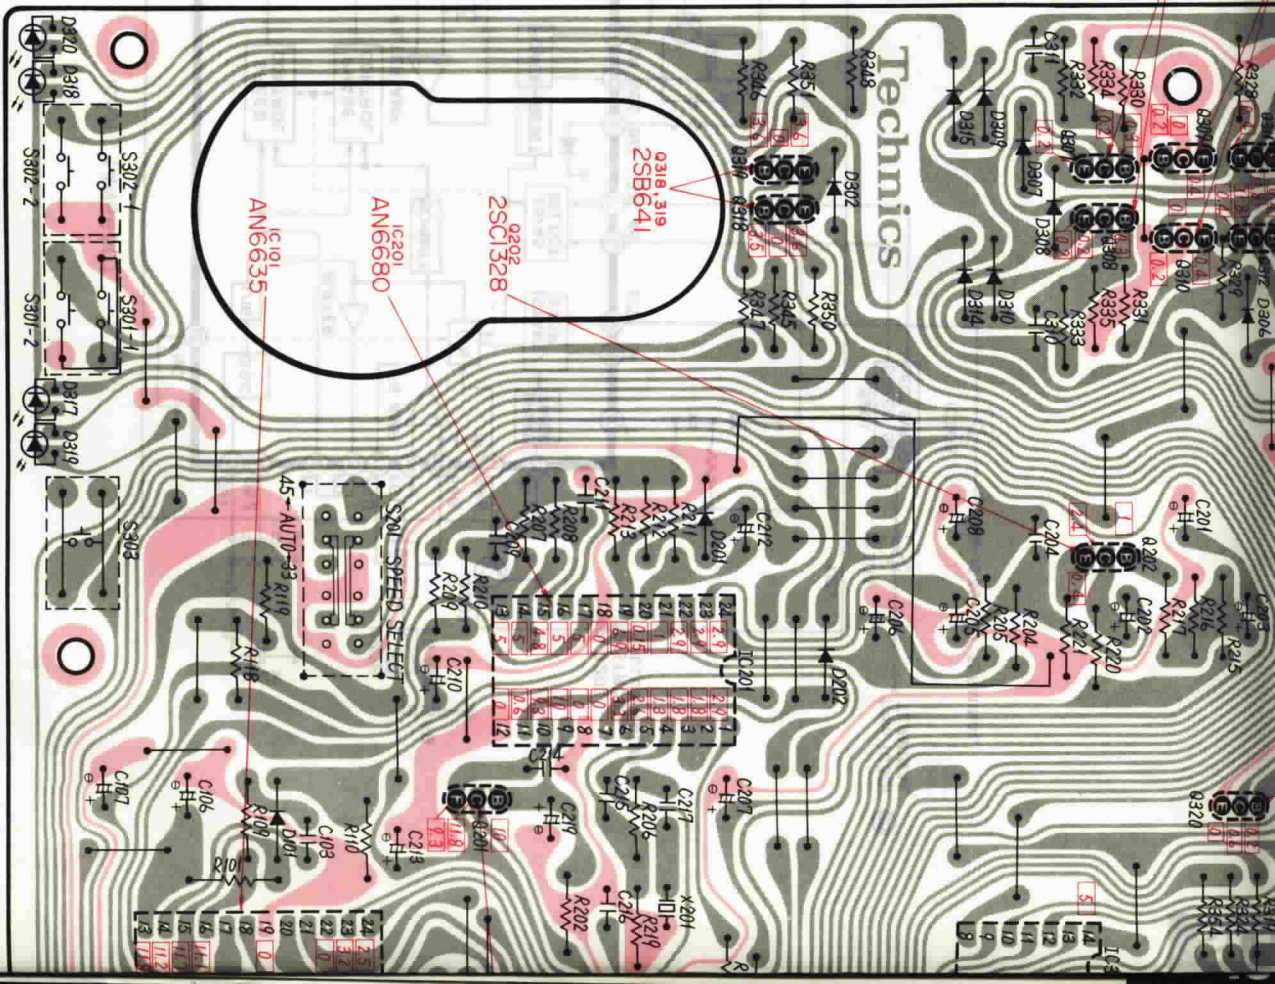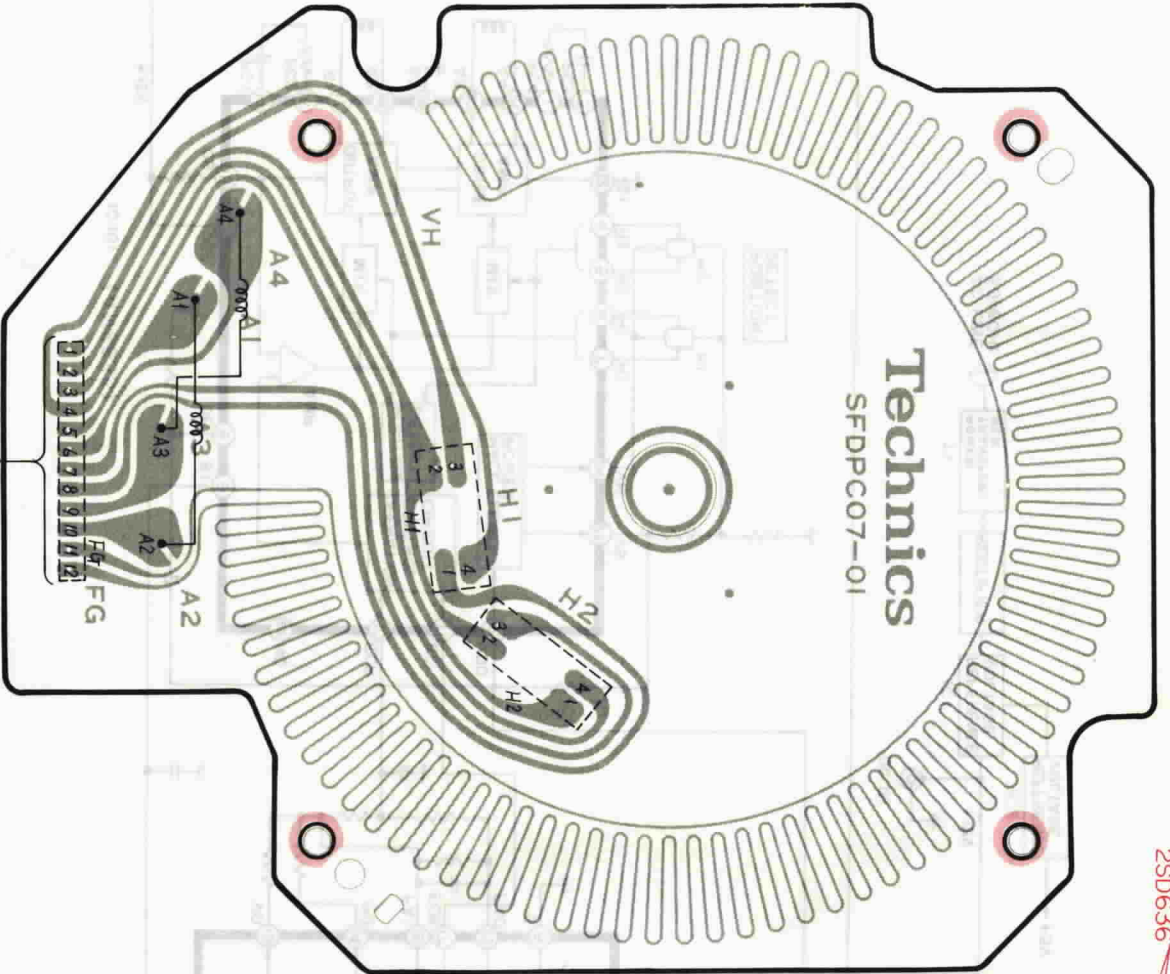








OFFSET ADJUSTMENT

SERVO GAIN ADJUSTMENT

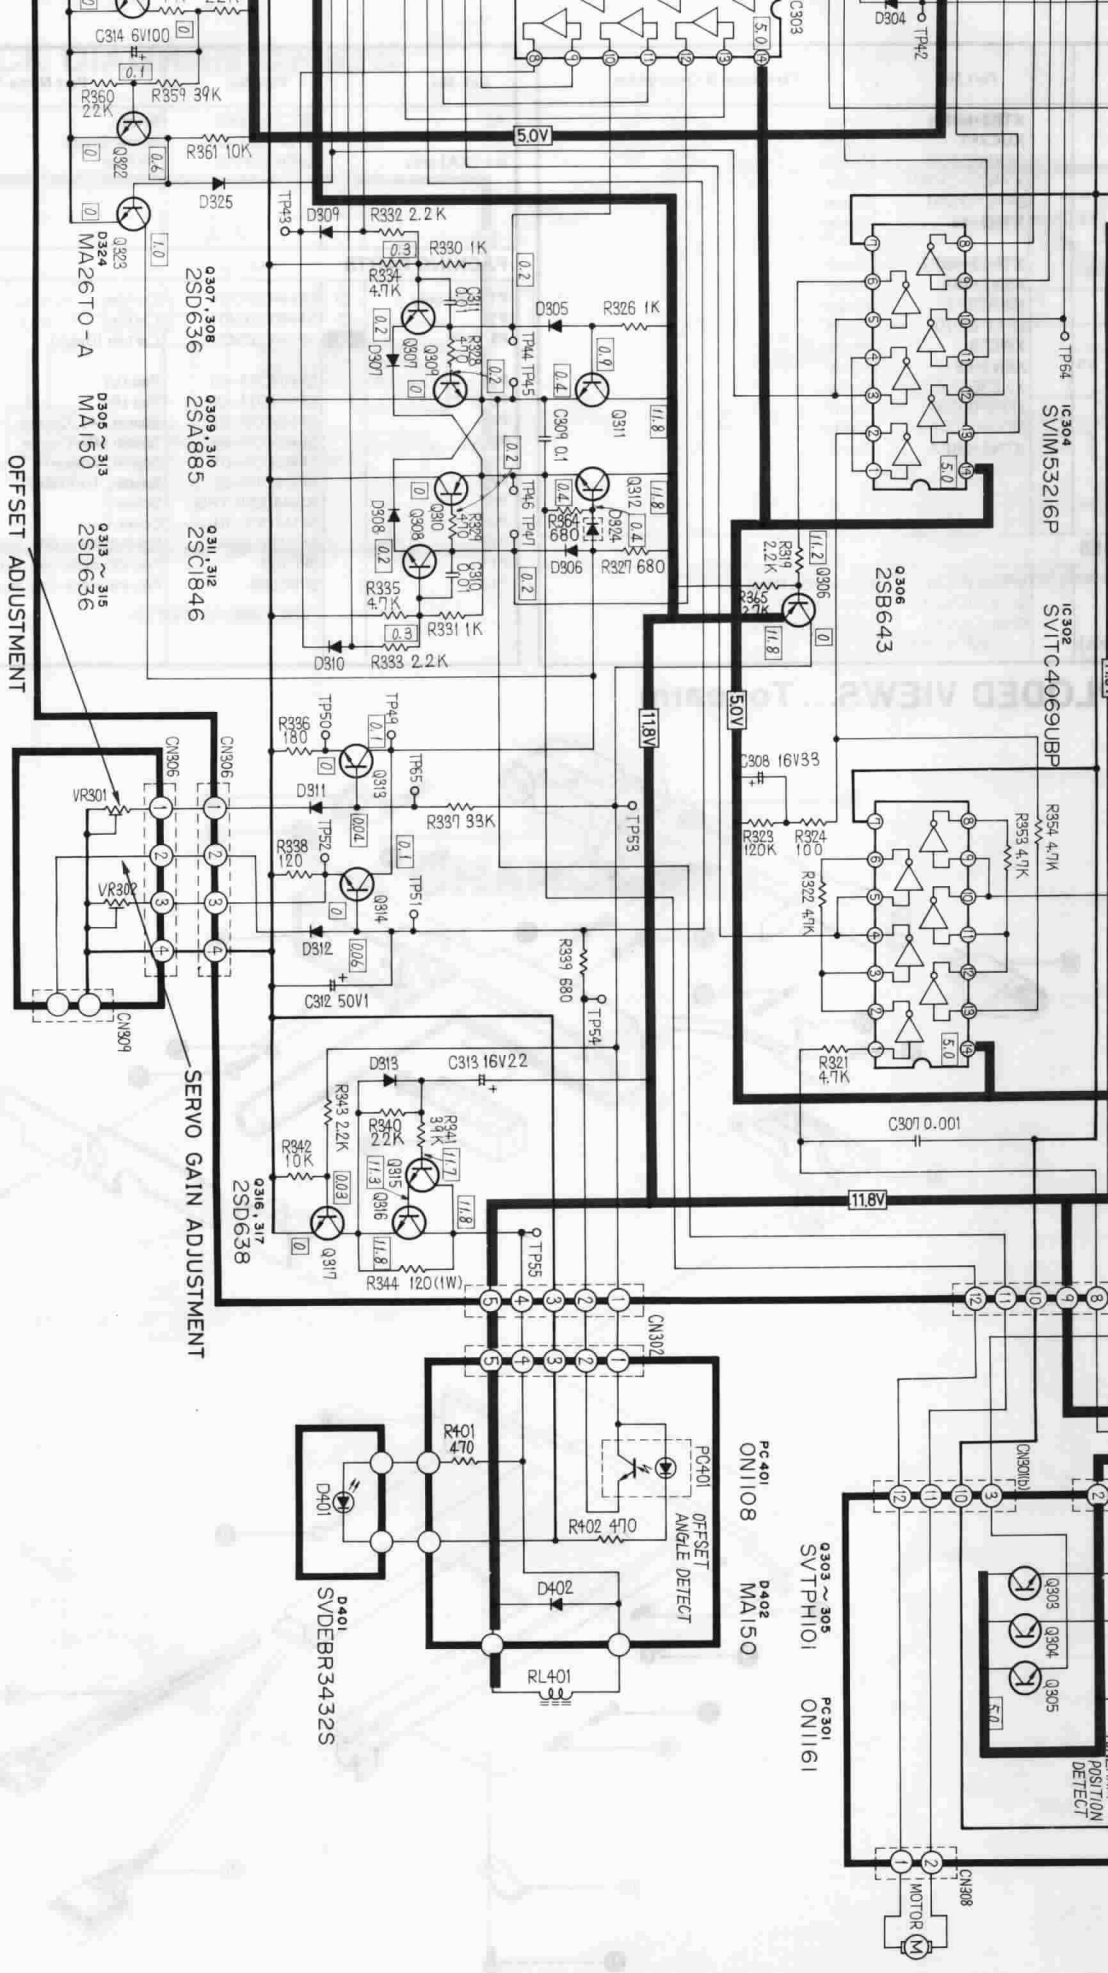

C314 5V100  
R350 22K  
R359 39K  
R361 10K  
Q302  
D325  
Q324  
MA26TO-A  
Q305  
MA150  
Q313 ~ 315  
2SD636

Q307, 308 2SD636  
Q309, 310 2SA885  
Q311, 312 2SC1846

Q306 2SB643

IC304 SVMIM53216P

IC302 SVTTC4069UBP

R354 4.7K  
R353 4.7K  
R322 4.7K

C308 16V33

C307 0.001

11.8V

11.8V

C316 16V22  
R343 22K  
R344 120(1W)

PC401 ON1108

D402 MA150


Q303 ~ 305 SVTPH101

PC301 ON1161

D401 SVDEBR3432S

POSITION DETECT

MOTOR

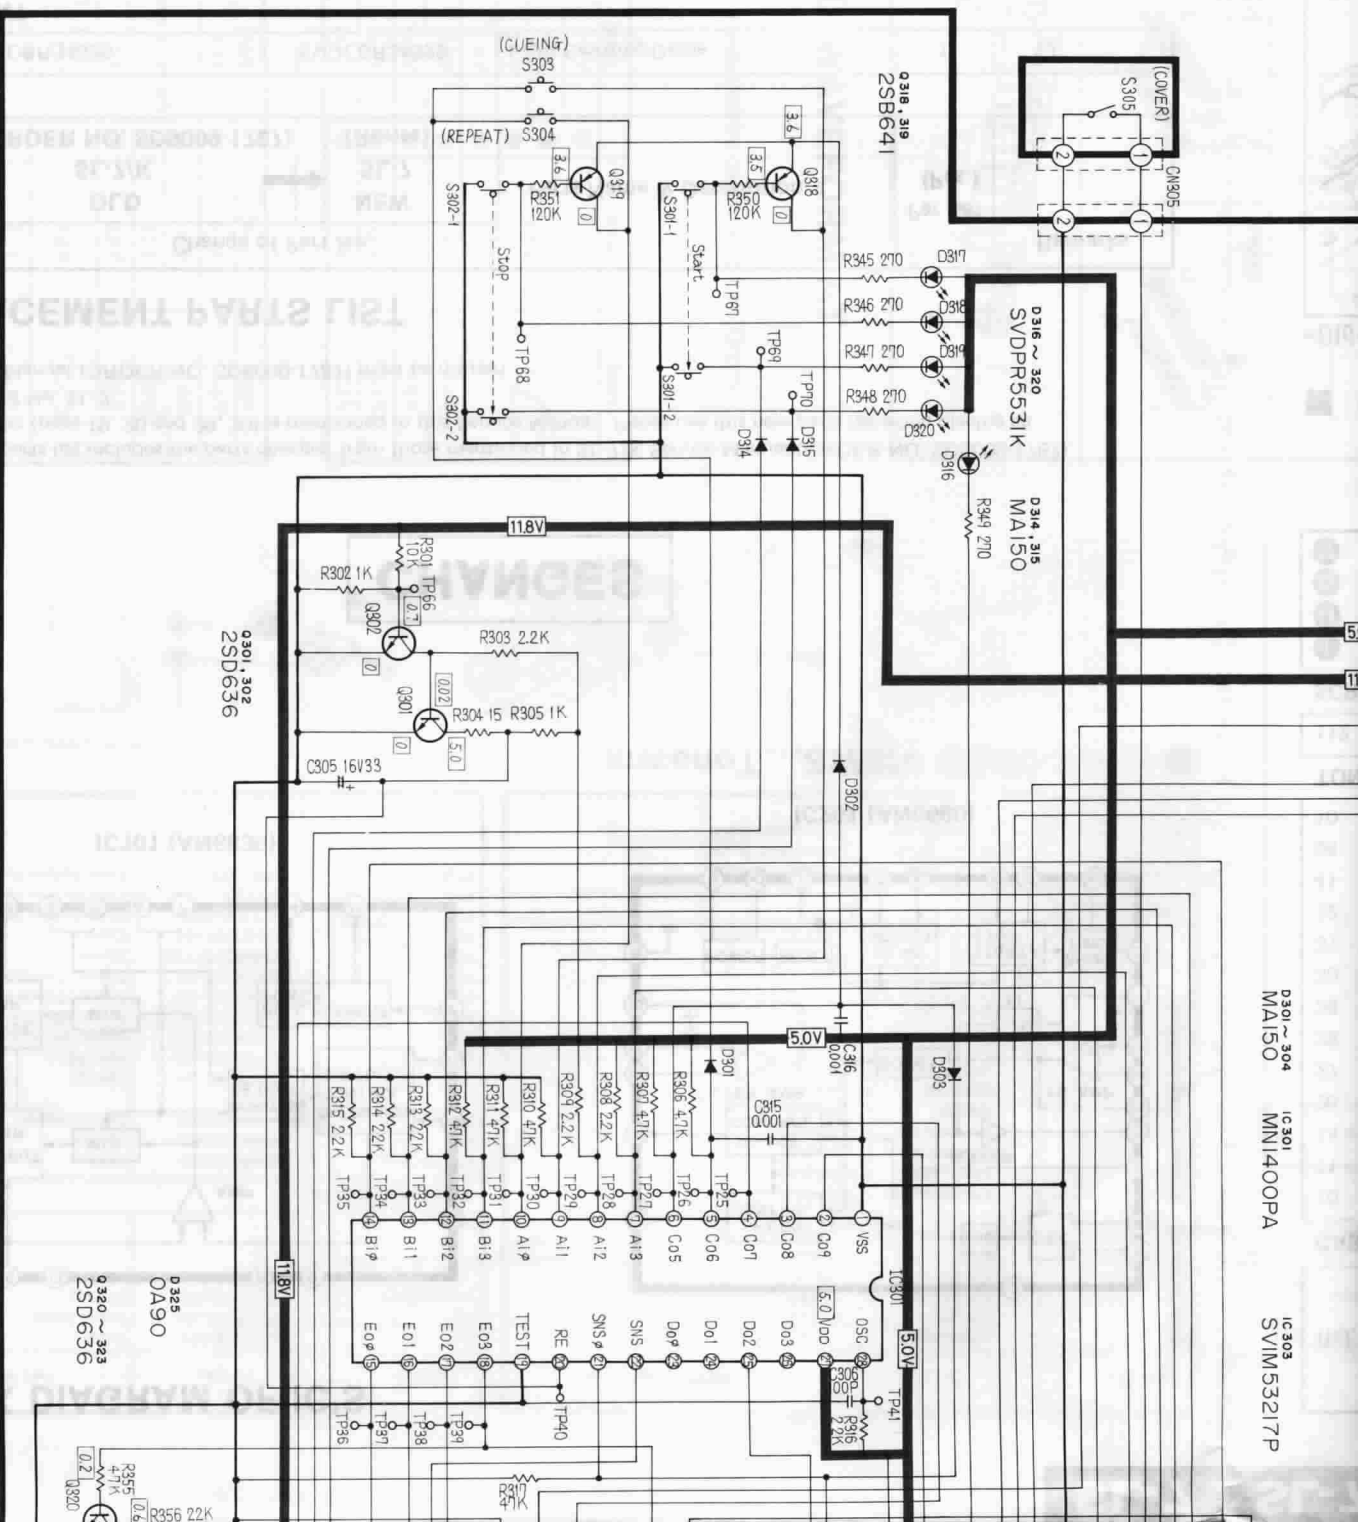

D301 ~ 304  
MA150

IC301  
MNI400PA

IC303  
SVIM53217P

D316 ~ 320  
SVDDR5531K

D314 ~ 315  
MA150

D318 ~ 319  
2SB641

D301, 302  
2SD636

D325  
0A90

D320 ~ 323  
ZSD636

(CUEING)  
S303

(REPEAT)  
S304

S302-1


Stop

S302-2

Start

S301-1

S301-2

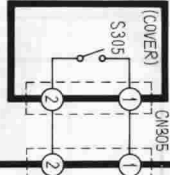

5.0V

11.8V

5.0V

11.8V

5.0V



R356 22K

5000µF


5000µF

5000µF

5000µF

5000µF

5000µF

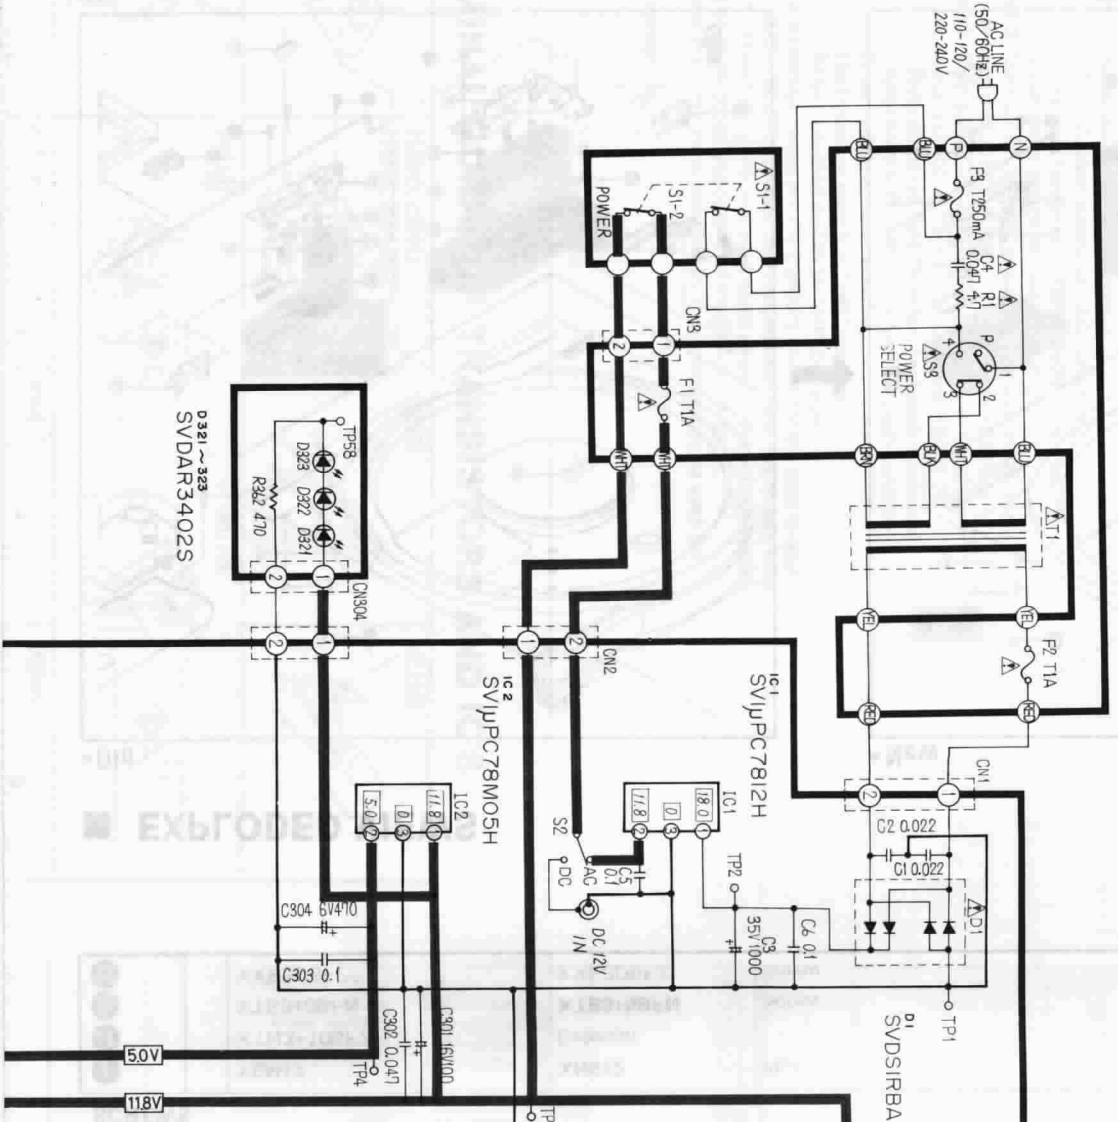


D321~323  
SVDAR3402S

D1  
SVDS1RBA20Z

D202  
2SC1328

IC201  
AN6680

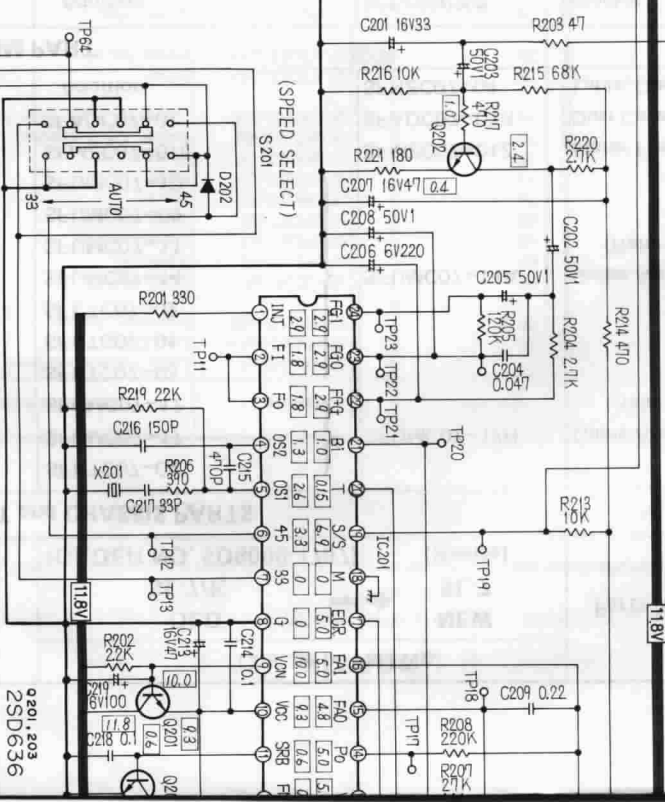

D202  
MA150

D301~304  
MA150

IC301  
MN1400PA

IC303  
SVM53217P

D201, 203  
2SD636

## How to remove the surface plate

When adjusting the auto start or return position, remove the surface plate according to the following procedure.

1. Close the upper cabinet.
2. Loosen the surface plate by using a flat head screw driver. (See photo 11.)

**Note:** The surface plate is secured with double-sided adhesive tape. So, slowly remove the surface plate with care not to scratch the plate.

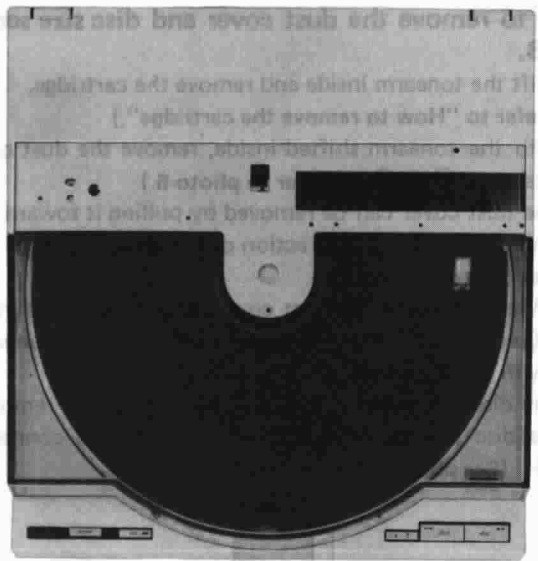


Photo 11

## How to set the tonearm drive rope

If the rope is disengaged or when setting a new rope, follow the procedure below.

1. Remove the dust cover and disc size sensor. (Refer to "How to remove the dust cover and disc size sensor P.C.B.")
2. Remove the E-ring (46) and washer (47) of the arm drive drum, and then remove the drive wheel. (See photo 12.)
3. Turn over the arm drive drum, and set the rope in order of ① ~ ③ as shown in Fig. 8-A.
4. Holding the rope being set over the arm drive drum, set up the drive drum and rope in order of ④ ~ ⑤ as shown in Fig. 8-B.
5. After setting the rope, turn the worm gear by hand to adjust the tonearm and rope retainer and then secure the part.
6. Make sure that the tonearm moves when the worm gear is turned by hand.
7. Attach the E-ring (46) and washer (47). (See photo 12.)

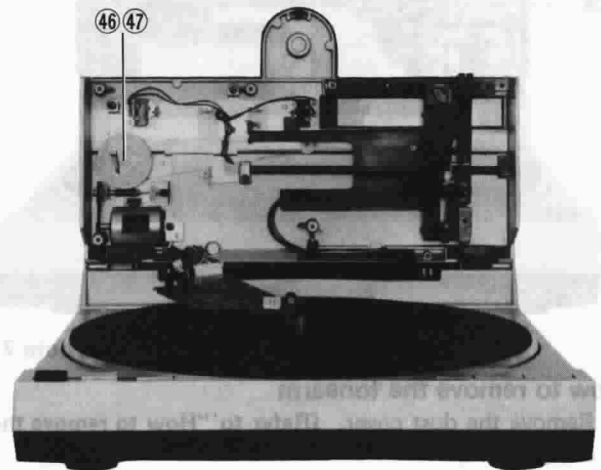


Photo 12

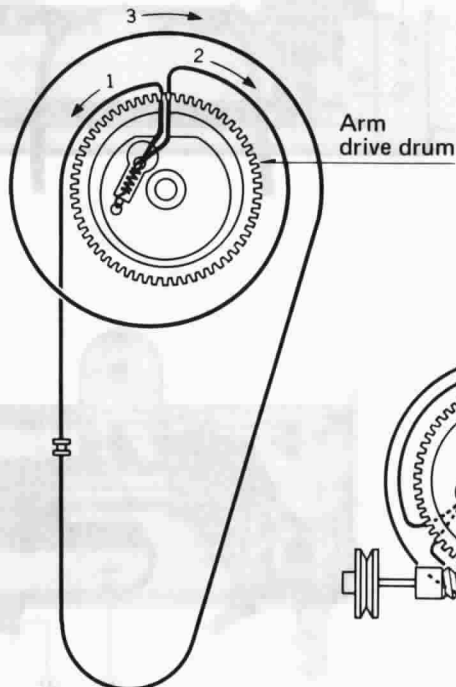


Fig. 8-A

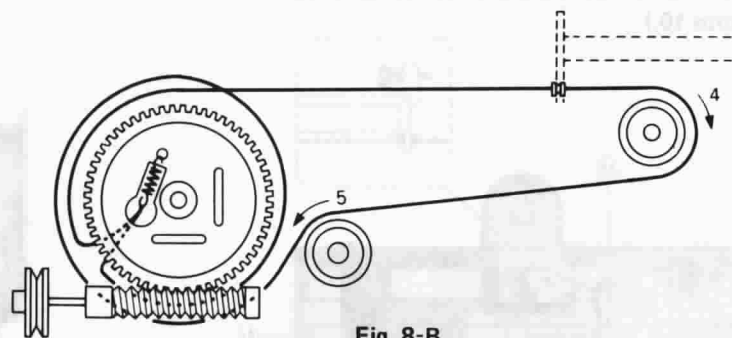


Fig. 8-B


## DESCRIPTION OF CONNECTOR

There are two types of connectors used in this unit: one is directly soldered to the printed circuit board, and the other is of insertion type.

**Note:** That soldered connectors cannot be pulled out.

The types of connectors and their positions are shown

**Fig. 9.**

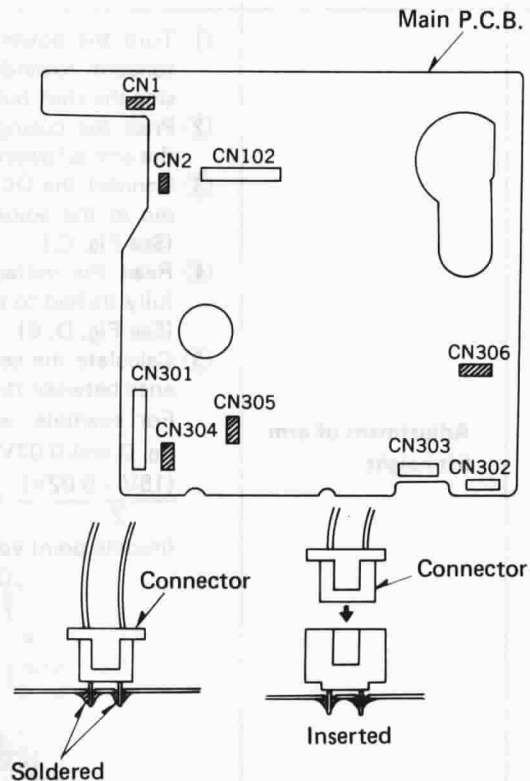


**Fig. 9**

## REPLACEMENT OF HALL ELEMENT

When replacing the Hall element of the stator fram, be sure to place it with the marking side up as shown **Fig. 10.**

\* The leg position is not specified provided that the marking side is up.

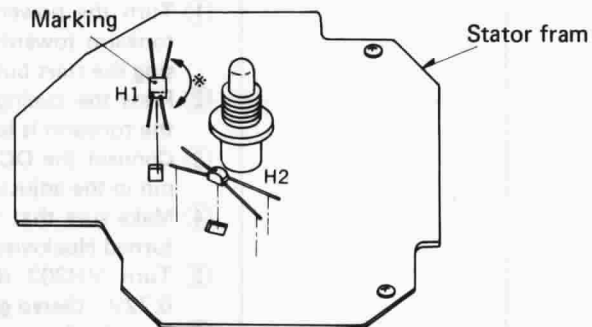

**Fig. 10**


**Adjustment of auto start and auto return position**

**Auto start position**

(Be sure to use a 30cm disc for the adjustment.)

1. Remove the surface plate. (Refer to "How to remove the surface plate".)
2. Make sure that the tonearm is at the start position (tonearm rest position)
3. Make the adjustment by turning the auto start position adjust screw. (See photo 13.)
  - If the tonearm lowers after passing over the start position. . . . . Turn the adjust screw clockwise
  - If the tonearm lowers before reaching the start position. . . . . Turn the adjust screw counterclockwise.
4. After the adjustment, remember to lock the adjust screw with bond.

Adjustment of auto return

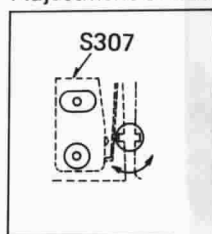

Adjustment of auto start

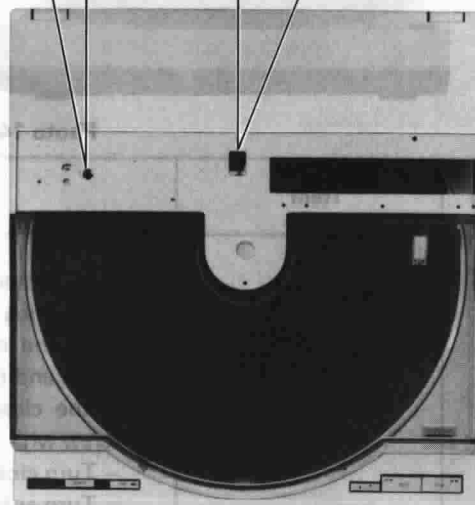
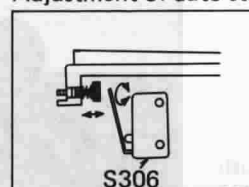


Photo 13

**Auto return position**

(Be sure to use a 17cm disc for the adjustment.)

1. Remove the surface plate. (Refer to "How to remove the surface plate".)
2. Make the adjustment by inserting a flat head screwdriver into the adjusting hole. (See photo 13.)
  - If the tonearm returns before the end of the play . . . . . Turn the screwdriver clockwise.
  - If the tonearm does not return even after the end of the play. . . . . Turn the screwdriver counterclockwise.

**Adjustment for the stylus pressure (See Fig. 11.)**

Stylus pressure is normally set to 1.25 grams but may be raised or lowered by  $\pm 0.25$  grams. It may be necessary to increase stylus pressure when playing records cut at high levels, or when room temperature is low, or when the unit easily picks up external vibrations. This will help prevent distortion and groove-skipping. To adjust stylus pressure, turn either way, as shown in the diagram. The screw is coupled to the graduated ring.

**Note:** Do not turn the stylus pressure adjustment screw further than the set limits (1.5 g ~ 1.0 g)

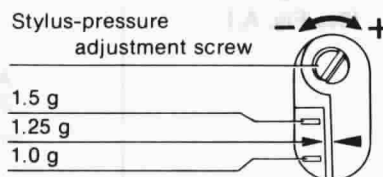


Fig. 11

**Offset adjustment of tonearm and servo gain**

After repair of the tonearm and arm drive circuit, make the adjustment according to the following procedure.

**Tools and equipment used**

1. DC Voltmeter or tester
2. 1mm pitch record
3. Flat head screwdriver (small)
4. Philips head screwdriver (small)
5. Hexagon wrench (1.5M)

**Condition of the set**

1. Remove the dust cover and surface plate. (Refer to "Disassembly instructions".)
2. Set the disc size select knob to the 30cm position.
3. Turn the cover switch (S305) "on" by pressing it with tape. (See photo 14.)
4. Remove the label on the rear cover. (See photo 15.)
5. Completely open the upper cabinet and make sure that the tonearm operates when the start button is pressed.

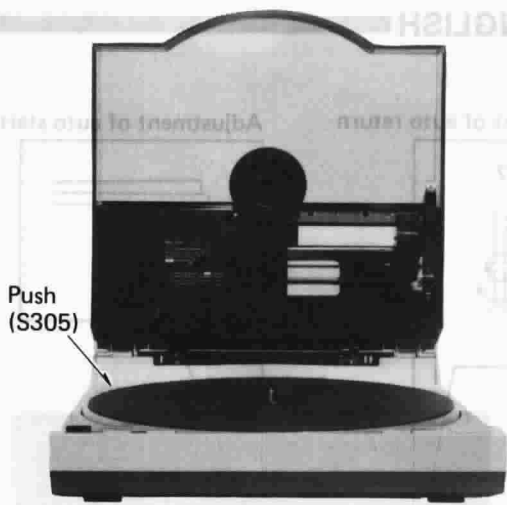


Photo 14









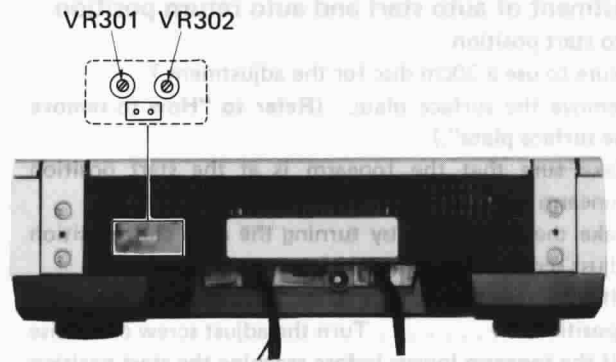


Photo 15

Step	Item	Adjustment method
1	<p><b>Adjustment of arm lift height</b> (See Fig. A.)</p>	<ol style="list-style-type: none"> <li>① Turn the power switch "on" and move the tonearm towards the center of disc by pressing the start button.</li> <li>② Press the cueing button to check that the clearance between the cartridge stylus and the guide rail is about 26mm.</li> <li>③ If the clearance is incorrect, adjust the lift height by turning the adjusting screw with a flat head screwdriver.               <ul style="list-style-type: none"> <li>– Turn clockwise when excessive (&gt; 26mm).</li> <li>– Turn anticlockwise when insufficient (&lt; 26mm).</li> </ul> </li> </ol> <p><b>Note:</b> The lift height adjusting screws of the replacement tonearm is completely tightened up. So, loosen the adjusting screw before making the above adjustment.</p> 
2	<p><b>Offset angle adjustment of tonearm</b> (See Fig. B.)</p>	<ol style="list-style-type: none"> <li>① Turn the power switch "on" and move the tonearm towards the center of disc by pressing the start button.</li> <li>② Make sure that the arm center is aligned with the V groove of the lift lever.</li> <li>③ Make sure that the arm base is in parallel with the arm. (Check the clearance between (A) and (B) in Fig. B.)</li> <li>④ If the arm base is not in parallel with the arm, adjust it by turning the offset angle adjusting screw.</li> </ol> 

Step	Item	Adjustment method
3	Adjustment of arm lift height	<p>① Turn the power switch "on" and move the tonearm towards the center of disc by pressing the start button.</p> <p>② Press the cueing button and make sure that the arm is lowered.</p> <p>③ Connect the DC Voltmeter to the connector pin in the adjusting hole of the rear cover. (See Fig. C.)</p> <p>④ Read the voltage values with the tonearm fully shifted to the right and left respectively. (See Fig. D, E)</p> <p>⑤ Calculate the center voltage from the difference between the two voltage values.  For example, when the voltage is 15V in fig. D and 0.02V in fig. E then  <math display="block">\frac{15V - 0.02V}{2} + 0.02V = 7.49V</math> (middle point voltage)</p> <p>⑥ Set the tonearm to the center position, and turn the adjusting screw of the arm base by a hex-agon wrench until the center voltage is achieved. (See Fig. E.)</p>    

4	Servo gain and offset adjustment	<p><b>Adjustment, removing the dust cover:</b> (See Fig. G.)</p> <p>① Turn the power switch "on" and move the tonearm towards the center of disc by pressing the start button.</p> <p>② Press the cueing button and make sure that the tonearm is lowered.</p> <p>③ Connect the DC Voltmeter to the connector pin in the adjusting hole of the rear cover.</p> <p>④ Make sure that VR301 has been completely turned clockwise.</p> <p>⑤ Turn VR302 until the DC Voltmeter indicates 0.72V. (Servo gain adjustment)</p> <p>⑥ Play the 1mm-pitch record on the turntable.</p> <p>⑦ Turn VR301 until the DC Voltmeter indicates 0.6V. (Offset adjustment)</p> <p><b>Adjustment without removing the dust cover:</b> (See Fig. H.)</p> <p>① Put a record on the turntable.</p> <p>② Open the dustcover 1 or 2cm, turn the power switch "on" and lower the tonearm. (In this case, do not allow the stylus to touch the disc.)</p> <p>③ Connect the DC Voltmeter to the connector pin in the adjusting hole of the rear cover.</p> <p>④ Make sure that VR301 has been completely turned clockwise.</p> <p>⑤ Turn VR302 until the DC Voltmeter indicates 0.72V. (Servo gain adjustment)</p> <p>⑥ Put a 1mm-pitch record on the turntable, close the dust cover, and play the record.</p> <p>⑦ Turn VR301 until the DC Voltmeter indicates 0.6V. (Offset adjustment)</p>  
---	----------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

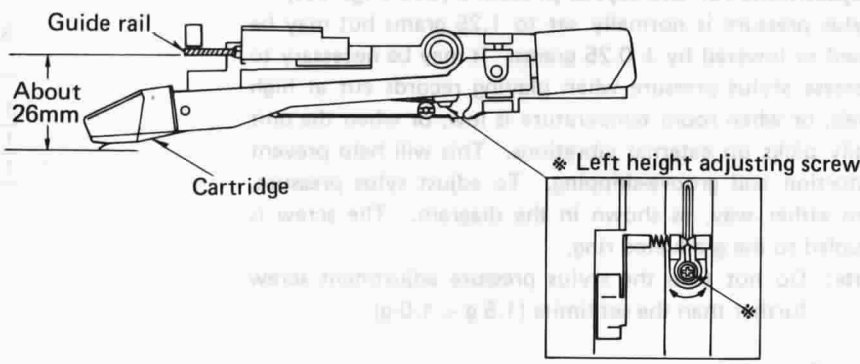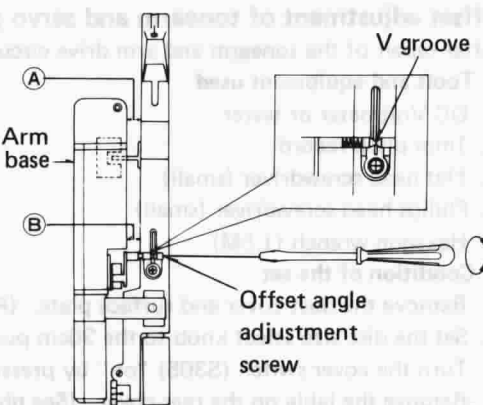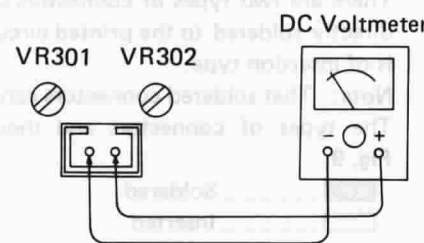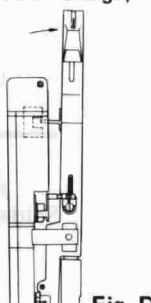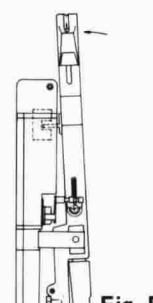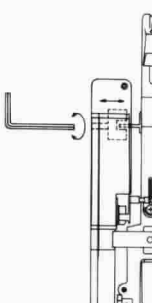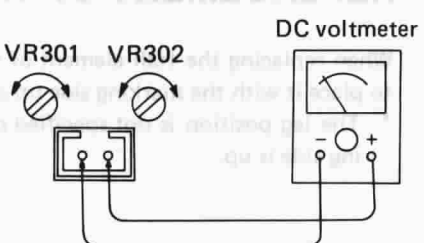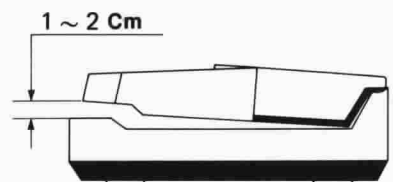

### Justierung der Auto-start-und Auto-Rückkehr-Position

#### Auto-Start-Position

(Für die Justierung ist eine 30cm-Schallplatte zu verwenden.)

1. Die Deckplatte abnehmen. (Siehe "Entfernen der Deckplatte".)
2. Überprüfen, daß der Tonarm in der Start-Position ist (Tonearm-Ruheposition.)
3. Die Justierung durch Drehen der Auto-Start-Position-Justierschraube vornehmen. (Siehe Foto 13.)

- Wenn der Tonarm nach Überschreiten der Start-Position (zu spät) abgesenkt wird, die Justierschraube im Uhrzeigersinn drehen.
  - Wenn der Tonarm vor dem Erreichen der Start-Position (zu früh) abgesenkt wird, die Justierschraube entgegen dem Uhrzeigersinn drehen.
4. Nach erfolgter Justierung muß die Justierschraube mit Lack gesichert werden.

#### Auto-Rückkehr-Position

(Für die Justierung ist eine 17cm-Schallplatte zu verwenden.)

1. Die Deckplatte abnehmen. (Siehe "Entfernen der Deckplatte".)
2. Zum Durchführen der Justierung, einen Flachkopf-Schraubenzieher in das Justierloch einführen. (Siehe Foto 13.)

- Wenn der Tonarm vor dem Ende des Abspielens zurückkehrt, den Schraubenzieher im Uhrzeigersinn drehen.
- Wenn der Tonarm nach dem Ende des Abspielens nicht zurückkehrt, den Schraubenzieher entgegen dem Uhrzeigersinn drehen.

### Justieren Sie die Auflagekraft in dem folgenden Fällen

(Siehe Abb. 11.)

Die normale Auflagekraft beträgt 1.25g, doch kann sie um  $\pm 0.25g$  gesenkt oder erhöht werden.

Es könnte notwendig sein, die Auflagekraft zu erhöhen, wenn Platten abgespielt werden, die bei hohem Pegel geschnitten wurden, wenn die Raumtemperatur tief ist, oder wenn der Plattenspieler externer Vibration ausgesetzt ist. Dies hilft dabei, Verzerrung und Überspringen der Rillen zu vermeiden.

Zum Justieren der Auflagekraft kann die Schraube nach links oder rechts gedreht werden, wie in der Skizze gezeigt. Die Schraube ist mit dem gradierten Ring gekoppelt.

#### Anmerkung:

Drehen Sie die Auflagekraft-Justierschraube nie weiter, als bis zu den Begrenzungen (1.5 g ~ 1.0 g)

### Reibungswinkel-Justierung des Tonearms und der Servo-Verstärkung

Nach der Reparatur des Tonarms und der Tonarm-Antriebsschaltung, sind die folgenden Justierungen durchzuführen.

#### Benötigte Werkzeuge und Instrumente

1. Gleichstrom voltmeter oder Prüfaerät.
2. Platte mit 1mm-Rillenabstand
3. Flachkopf-Schraubenzieher (klein)
4. Kreuzkopf-Schraubenzieher (Philips) (klein)
5. Sechskant-Schlüssel (1.5M)

#### Zustand des Gerätes

1. Die Staubabdeckung und die Plattentellerauflage entfernen. (Siehe "Service-Methode".)
2. Den Plattengröße-Wahlschalter in die 30cm-Position stellen.
3. Den Deckelschalter (S305) durch Drücken mit Band einschalten. (Siehe Foto 14.)
4. Das Etikett an der Rückseite entfernen. (Siehe Foto 15.)
5. Das obere Gehäuse vollständig öffnen und überprüfen, daß der Tonarm funktioniert, wenn die Start-Taste gedrückt wird.

Schritt	Einstellgegenstand	Justiermethode
1	<b>Justierung der Tonarm-Lifthöhe (Siehe Abb. A)</b>	<p>① Den Netzschalter einschalten und den Tonarm durch Drücken der Start-Taste gegen die Plattenmitte bewegen.</p> <p>② Die Lifttaste drücken und überprüfen, daß der Abstand zwischen der Tonabnehmer-Nadelspitze und Führungsschiene ca. 26mm beträgt.</p> <p>③ Falls der Abstand nicht korrekt ist, die Lifthöhe durch Drehen der Justierschraube mit einem Flachkopf-Schraubenzieher justieren.</p> <p>– Bei zu großem Abstand: im Uhrzeigersinn drehen (&gt; 26mm).</p> <p>– Bei zu kleinem Abstand: entgegen dem Uhrzeigersinn drehen (&lt; 26mm).</p> <p><b>Anmerkung:</b> Die Lifthöhe-Justierschraube des Ersatztonarms ist vollständig angezogen. Die Justierschraube ist daher vor dem Durchführen obiger Justierung zu lösen.</p>
2	<b>Reibungswinkel-Justierung des Tonarms (Siehe Abb. B)</b>	<p>① Den Netzschalter einschalten und den Tonarm durch Drücken der Start-Taste gegen die Plattenmitte bewegen.</p> <p>② Überprüfen, daß die Tonarmmitte mit der V-Kerbe des Liftachse übereinstimmt.</p> <p>③ Überprüfen, daß der Tonarmträger parallel zum Tonarm ist. (Den Abstand zwischen ① und ② Abb. B. überprüfen.)</p> <p>④ Falls der Tonarmträger nicht parallel zum Tonarm ist, durch Drehen der Reibungswinkel-Justierschraube justieren.</p>
3	<b>Justierung der Tonarm-Empfindlichkeit</b>	<p>① Den Netzschalter einschalten und den Tonarm durch Drücken der Start-Taste gegen die Plattenmitte bewegen.</p> <p>② Die Lifttaste drücken und überprüfen, daß der Tonarm abgesenkt wird.</p> <p>③ Den Gleichstromvoltmeter an den Steckerstift im Justierloch der Rückseite anschließen. <b>(Siehe Abb. C)</b></p> <p>④ Die Spannungswerte bei der Position des Tonarms ganz rechts, bzw. ganz links, ablesen. <b>(Siehe Abb. D und E)</b></p> <p>⑤ Vom Unterschied zwischen den beiden Spannungswerten die Mittelspannung berechnen. Zum Beispiel, wenn die Spannung in Abb. D 15V, und in Abb. E), 0.02V beträgt:  <math display="block">\frac{(15V - 0.02V)}{2} + 0.02V = 7.49V</math> <b>(Mittelpunkt-Spannung)</b></p> <p>⑥ Den Tonarm in die Mittelposition stellen, und die Justierschraube der Armbasis mit dem Sechskantschlüssel drehen, bis die Mittenspannung erreicht wird. <b>(Siehe Abb. F)</b></p>
4	<b>Servo-Verstärkungs- und Reibungswinkel-Justierung</b>	<p><b>Justierung mit Entfernen der Staubabdeckung: (Siehe Abb. G)</b></p> <p>① Den Netzschalter einschalten, und den Tonarm durch Drücken der Start-Taste gegen die Plattenmitte bewegen.</p> <p>② Die Lifttaste drücken und überprüfen, daß der Tonarm abgesenkt wird.</p> <p>③ Den Gleichstromvoltmeter an den Steckerstift im Justierloch an der Rückseite anschließen.</p> <p>④ Überprüfen, daß VR301 bis zum Anschlag im Uhrzeigersinn gedreht worden ist.</p> <p>⑤ VR302 drehen, bis der Gleichstromvoltmeter 0.72V anzeigt. <b>(Servo-Verstärkungs-Justierung)</b></p> <p>⑥ Die Platte mit 1mm-Rillenabstand auf dem Plattenspieler abspielen.</p> <p>⑦ VR301 drehen, bis der Gleichstromvoltmeter 0.6V anzeigt. <b>(Ausgleichsjustierung)</b></p> <p><b>Justierung ohne Entfernen der Staubabdeckung: (Siehe Abb. H)</b></p> <p>① Eine Schallplatte auf den Plattenteller auflegen.</p> <p>② Die Staubabdeckung 1 oder 2cm öffnen, den Netzschalter einschalten, und den Tonarm absenken. (In diesem Fall darauf achten, daß Abtastnadel die Platte nicht berührt.)</p> <p>③ Den Gleichstromvoltmeter an den Steckerstift im Justierloch an der Rückseite anschließen.</p> <p>④ Überprüfen, daß VR301 bis zum Anschlag im Uhrzeigersinn gedreht worden ist.</p> <p>⑤ VR302 drehen, bis der Gleichstromvoltmeter 0.72V anzeigt. <b>(Servo-Verstärkungs-Justierung)</b></p> <p>⑥ Die Platte mit 1mm-Rillenabstand auf den Plattenteller auflegen, die Staubabdeckung schließen, und die Platte abspielen.</p> <p>⑦ VR301 drehen, bis der Gleichstromvoltmeter 0.6V anzeigt. <b>(Ausgleichsjustierung)</b></p>

## Mise au point du positionnement du démarrage automatique et de retour automatique

### Positionnement du démarrage automatique

(S'assurer d'utiliser un disque de 30cm pour la mise au point.)

1. Retirer la plaque de surface. **(Se référer à "Comment enlever la plaque de surface.")**
2. S'assurer que le bras de lecture est sur la position de démarrage (position de l'accoudeur du bras de lecture).
3. Exécuter la mise au point en tournant la vis de réglage de positionnement du démarrage automatique. **(Voir la photo 13.)**

- Si le bras de lecture s'abaisse en franchissant la position de démarrage, tourner la vis de réglage dans le sens des aiguilles d'une montre.
- Si le bras de lecture s'abaisse avant d'atteindre la position de démarrage, tourner la vis de réglage dans le sens inverse des aiguilles d'une montre.
- 4. Après la mise au point, se rappeler de bloquer la vis de réglage.

### Positionnement du retour automatique

(S'assurer d'utiliser un disque de 17cm pour la mise au point.)

1. Retirer la plaque de surface. **(Se référer à "Comment enlever la plaque de surface.")**
2. Exécuter la mise au point en introduisant un tournevis à tête plate dans l'orifice de réglage. **(Voir photo 13.)**

- Si le bras de lecture revient avant la fin de l'audition, tourner le tournevis dans le sens des aiguilles d'une montre.
- Si le bras de lecture ne revient pas, même après la fin de l'audition, tourner le tournevis dans le sens inverse des aiguilles d'une montre.

## Mettre au point la force verticale d'appui de la pointe de lecture dans les cas suivants. (Voir Fig. 11)

La force verticale d'appui de la pointe de lecture est normalement réglée sur 1.25 gramme, mais elle peut être augmentée ou diminuée de  $\pm 0.25$  gramme.

Il pourra être nécessaire d'augmenter la force verticale d'appui de la pointe lorsqu' on joue des disques enregistrés à des niveaux élevés, ou lorsque la température de la pièce est trop basse, ou encore lorsque l'appareil capte facilement des vibrations extérieures.

Cela aidera à empêcher une distorsion et un sautillerment des sillons. Pour régler cette force verticale d'appui de la pointe de lecture, tourner la vis de réglage d'un côté ou de l'autre, comme il est montré sur le schéma. La vis est couplée avec la bague graduée.

### Nota:

Ne pas tourner la vis de réglage de la force verticale d'appui de la pointe de lecture plus que les limites de réglage admissibles (1.5 ~ 1.0 g).

## Mise au point du décalage du bras de lecture et de l'amplification servomécanique

Après la révision du bras de lecture et du circuit d'entraînement du bras, exécuter la mise au point suivante selon la procédure ci-dessous:

### Outils et équipement à utiliser

1. DC VTVM ou vérificateur
2. Disque de 1mm d'écart
3. Tournevis à tête plate (petit)
4. Tournevis à tête plate Philips (petit)
5. Clef hexagonal (1.5M)

### Condition du réglage

1. Retirer le couvercle de protection et la plaque de surface. **(Se référer à la "Méthode de réglage.")**
2. Placer la manette sélectrice de diamètre du disque sur la position de 30cm.
3. Mettre en marche le commutateur du couvercle (S305) en appuyant dessus avec un ruban. **(Voir photo 14.)**
4. Retirer l'étiquette sur l'arrière du couvercle. **(Voir photo 15.)**
5. Ouvrir complètement le boîtier supérieur et s'assurer que le bras de lecture fonctionne lorsqu' on appuie sur la touche de démarrage.

Étape	Article	Méthode de réglage
1	<b>Mise au point de la hauteur d'élévation (Voir Fig. A.)</b>	<p>① Mettre en marche l'interrupteur d'alimentation et déplacer le bras de lecture vers le centre du disque en appuyant sur la touche de démarrage.</p> <p>② Appuyer sur la touche de pose/relevage pour vérifier si l'intervalle entre la pointe de lecture de la cellule pick-up et le rail de guidage est d' à peu près 26 mm.</p> <p>③ Si l'intervalle n'est pas suffisant, ajuster la hauteur d'élévation en tournant la vis de réglage avec un tournevis à tête plate.</p> <p>–Tourner dans le sens des aiguilles d'une montre si l'intervalle est excessif (&gt; 26 mm).</p> <p>–Tourner dans le sens inverse des aiguilles d'une montre lorsque l'intervalle est insuffisant (&lt; 26 mm).</p> <p><b>Nota:</b> La vis de réglage de la hauteur d'élévation du bras de lecture de rechange est serrée à fond. Aussi, desserrer la vis de réglage avant de faire la mise au point ci-dessus.</p>
2	<b>Mise au point de l'angle de décalage du bras de lecture (Voir Fig. B.)</b>	<p>① Mettre en marche l'interrupteur d'alimentation et déplacer le bras de lecture vers le centre du disque en appuyant sur la touche de démarrage.</p> <p>② S'assurer que le centre du bras soit aligné avec l'encoche en V de la tige d'élévation.</p> <p>③ S'assurer que le socle du bras est parallèle au bras. (Vérifier l'intervalle entre A et B, dans la Fig. B.)</p> <p>④ Si le socle du bras n'est pas parallèle au bras, l'ajuster en tournant la vis de réglage de l'angle de décalage.</p>
3	<b>Mise au point de la sensibilité du bras</b>	<p>① Mettre en marche l'interrupteur d'alimentation et déplacer le bras de lecture vers le centre du disque en appuyant sur la touche de démarrage.</p> <p>② Appuyer sur la touche de pose/relevage et s'assurer que le bras est abaissé.</p> <p>③ Brancher la DC VTVM à la broche du connecteur dans l'orifice de mise au point du couvercle arrière. (Voir la Fig. C.)</p> <p>④ Observer les valeurs de la tension avec le bras de lecture complètement orienté vers la droite puis vers la gauche. (Voir les Figs. D et E.)</p> <p>⑤ Calculer la tension moyenne provenant de la différence entre les deux valeurs de tension. Par exemple, lorsque la tension est de 15V dans la Fig. D et de 0.02V dans la Fig. E, puis:</p> $\frac{(15V - 0.02V)}{2} + 0.02V = 7.49V$ <p>(tension du point médian).</p> <p>⑥ Placer le bras de lecture sur la position du centre et tourner la vis de réglage du socle du bras avec une clef hexagonale jusqu' à ce que la tension médiane soit obtenue. (Voir Fig. F.)</p>
4	<b>Mise au point du décalage et de l'amplification servomécanique</b>	<p><b>Ajustement en retirant le couvercle de protection. (Voir Fig. G.)</b></p> <p>① Mettre en marche l'interrupteur d'alimentation et déplacer le bras de lecture vers le centre du disque en appuyant sur la touche de démarrage.</p> <p>② Appuyer sur la touche de pose/relevage et s'assurer que le bras de lecture est abaissé.</p> <p>③ Brancher le DC VTVM à la broche du connecteur dans l'orifice de mise au point du couvercle arrière.</p> <p>④ S'assurer que VR301 a été entièrement tourné dans le sens des aiguilles d'une montre.</p> <p>⑤ Tourner VR302 jusqu' à ce que le DC VTVM indique 0.72V. (Mise au point de l'amplification servomécanique.)</p> <p>⑥ Faire jouer sur la platine un disque de 1mm d'écart.</p> <p>⑦ Tourner VR301 jusqu' à ce que la DC VTVM indique 0.6V. (Mise au point du décalage.)</p> <p><b>Ajustement sans retirer le couvercle de protection (Voir Fig. H.)</b></p> <p>① Placer un disque sur la platine.</p> <p>② Ouvrir le couvercle de protection de 1 à 2 cm, mettre en marche l'interrupteur d'alimentation et abaisser le bras de lecture. (Dans ce cas, ne pas laisser la pointe de lecture toucher le disque.)</p> <p>③ Brancher la DC VTVM à la broche du connecteur dans l'orifice de mise au point du couvercle arrière.</p> <p>④ S'assurer que VR301 a été entièrement tourné dans le sens des aiguilles d'une montre.</p> <p>⑤ Tourner VR302 jusqu' à ce que le DC VTVM indique 0.72V. (Mise au point de l'amplification servomécanique.)</p> <p>⑥ Placer un disque de 1 mm d'écart sur la platine, refermer le couvercle de protection et faire jouer le disque.</p> <p>⑦ Tourner VR301 jusqu' à ce que le DC VTVM indique 0.6V. (Mise au point de décalage.)</p>

# REPLACEMENT PARTS LIST...Electric Parts

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
  - ⚠ indicates that only parts specified by the manufacturer be used for safety.

- Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description
<b>INTEGRATED CIRCUITS</b>		
IC1 IC2 IC101 IC201 IC301 IC302 IC303 IC304	SVIUPC7812H SVIUPC78M05H AN6635 AN6680 MN1400PA SVITC4069 SVIM53217P SVIM53216P	IC, Regulator IC, Regulator IC, Drive IC, Control IC, Micro Computer IC, Inverter IC, Buffer IC, Buffer
<b>TRANSISTORS</b>		
Q101 Q102, 104 Q103, 105 Q201, 203 Q202 Q301, 302 307, 308, 313 ~ 315 320 ~ 323 Q303 ~ 305 Q306 Q309, 310 Q311, 312 Q316, 317 Q318, 319	2SB641 2SD636 2SD638 2SD636 <b>2SC1328-T</b> 2SD636  SVTPH101-Q2 2SB643 2SA885 2SC1846-R 2SD638 2SB641	Transistor Transistor Transistor Transistor Transistor Transistor  Photo Transistor Transistor Transistor Transistor Transistor Transistor
<b>DIODES</b>		
D1 D101, 103, 104 D102 D201, 202 D203 D301 ~ 315 D316 ~ 320 D321 ~ 323 D324 D325 D401 D402	⚠ SVDS1RBA20Z <b>MA162A</b> <b>20A90</b> <b>MA162A</b> SVDGD4205ALC <b>MA162A</b> SVDPR5531K SVDAR3402S <b>MA26TO-A</b> <b>20A90</b> SVDEBR3432S <b>MA162A</b>	Rectifier Diode Diode Diode Light Emitting Diode, Strobe Diode Light Emitting Diode Light Emitting Diode, Record Size Select Diode Diode Light Emitting Diode Diode
<b>PHOTO INTERRUPTERS</b>		
PC301 PC302	ON1161 ON1108	Photo Interrupter Photo Interrupter
<b>HALL ELEMENT</b>		
H1, H2	H-300A	Hall Element
<b>CRYSTAL</b>		
X201	SVQU306115	Crystal
<b>RELAY</b>		
RL1 RL401	SFDSC07-01 SFDZC07-01E	Relay, Muting Plunger, Cueing
<b>SWITCHES</b>		
S1-1 S1-2 S3 S201 S301, 302 S303, 304 S305 S306, 307	⚠ SFDSS55GLS ⚠ SFDSTWM9901 ⚠ SFDSHXW01317 SFDSC10-01 EVQQBR08K EVQQXR04K ESB6247 SFDSA252461	Switch, Power Switch, Power Switch, Power Select Switch, Speed Select Switch, Start & Stop Switch, Repeat & Cueing Switch, Cover Switch, End & Rest Detect

Ref. No.	Part No.	Part Name & Description
<b>VARIABLE RESISTORS</b>		
VR301 VR302	EVNMOAA00B14 EVNMOAA00B13	Offset Adjustment, 10kΩ (B) Servo Gain Adjustment, 1kΩ (B)
<b>FUSE</b>		
F1, 2 F3	⚠ XBA2C10TR0 ⚠ XBAS2C025T1A	Fuse, 1A Fuse, 250mA
<b>POWER TRANSFORMER</b>		
T1	⚠ SLT66PS1E	Power Transformer
<b>RESISTORS</b>		
R1 R101 R102 R103 R106 R107 R108, 109 R110 R111 R112, 113  R115 R116 R117 R118 R119 R201 R202 R203 R204 R205  R206 R207 R208 R209 R210 R211 R212 R213 R214 R215  R216 R217 R218 R219 R220 R221 R301 R302 R303 R304  R305 R306, 307 R308, 309 R310, 311 R312 R313, 314 R315, 316 R317 R318 R319  R320 R321, 322 R323 R324	⚠ ERD50TJ4R7 ERX1ANJ1R5 ERD25FJ562 ERD25FJ152 ERD25FJ271 ERD25TJ563 ERD25FJ101 ERD25TJ473 ERD25TJ123 ERD25FJ222  ERD25TJ223 ERD25TJ393 ERG1ANJ470 ERD25FJ102 ERD25TJ563 ERD25FJ331 ERD25FJ222 ERD25FJ470 ERD25FJ272 ERD25TJ124  ERD25FJ391 ERD25TJ273 ERD25TJ224 ERD25TJ823 ERD25FJ392 ERD25TJ563 ERD25TJ223 ERD25FJ103 ERD25FJ471 ERD25TJ683  ERD25FJ103 ERD25FJ471 ERD25FJ181 ERD25TJ223 ERD25FJ272 ERD25FJ181 ERD25FJ103 ERD25FJ102 ERD25FJ222 ERD25FJ150  ERD25FJ102 ERD25FJ472 ERD25FJ222 ERD25TJ473 ERD25FJ472 ERD25TJ223 ERD25TJ223 ERD25TJ473 ERD25FJ472 ERD25FJ222 ERD25FJ103 ERD25FJ472	Carbon, 4.7Ω, 1/2W, ± 5% Metallic, 1.5Ω, 1W, ± 5% Carbon, 5.6kΩ, 1/4W, ± 5% Carbon, 1.5kΩ, 1/4W, ± 5% Carbon, 270Ω, 1/4W, ± 5% Carbon, 56kΩ, 1/4W, ± 5% Carbon, 100Ω, 1/4W, ± 5% Carbon, 47kΩ, 1/4W, ± 5% Carbon, 12kΩ, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5%  Carbon, 22kΩ, 1/4W, ± 5% Carbon, 39kΩ, 1/4W, ± 5% Metal Oxide, 47Ω, 1W, ± 5% Carbon, 1kΩ, 1/4W, ± 5% Carbon, 56kΩ, 1/4W, ± 5% Carbon, 330Ω, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 47Ω, 1/4W, ± 5% Carbon, 2.7kΩ, 1/4W, ± 5% Carbon, 120kΩ, 1/4W, ± 5%  Carbon, 390Ω, 1/4W, ± 5% Carbon, 27kΩ, 1/4W, ± 5% Carbon, 220kΩ, 1/4W, ± 5% Carbon, 82kΩ, 1/4W, ± 5% Carbon, 3.9kΩ, 1/4W, ± 5% Carbon, 56kΩ, 1/4W, ± 5% Carbon, 22kΩ, 1/4W, ± 5% Carbon, 10kΩ, 1/4W, ± 5% Carbon, 470Ω, 1/4W, ± 5% Carbon, 68kΩ, 1/4W, ± 5%  Carbon, 10kΩ, 1/4W, ± 5% Carbon, 470Ω, 1/4W, ± 5% Carbon, 180Ω, 1/4W, ± 5% Carbon, 22kΩ, 1/4W, ± 5% Carbon, 2.7kΩ, 1/4W, ± 5% Carbon, 180Ω, 1/4W, ± 5% Carbon, 10kΩ, 1/4W, ± 5% Carbon, 1kΩ, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 15Ω, 1/4W, ± 5%  Carbon, 1kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 47kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 22kΩ, 1/4W, ± 5% Carbon, 22kΩ, 1/4W, ± 5% Carbon, 47kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 2.2kΩ, 1/4W, ± 5% Carbon, 10kΩ, 1/4W, ± 5% Carbon, 4.7kΩ, 1/4W, ± 5% Carbon, 120kΩ, 1/4W, ± 5% Carbon, 100Ω, 1/4W, ± 5%

## ■ Cartridge section

<b>Type:</b>	Moving magnet stereo cartridge One point suspension system
<b>Magnet:</b>	Samarium cobalt (Sm-Co)
<b>Cantilever:</b>	Pure boron pipe
<b>Magnetic circuit:</b>	All laminated core
<b>Frequency response</b>	10 Hz to 50 kHz 20 Hz to 35 kHz $\pm$ 3 dB 20 Hz to 10 kHz $\pm$ 1 dB
<b>Output voltage:</b>	2.5 mV at 1 kHz 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz, 10 cm/s. zero to peak 45° velocity [DIN 45 500])

<b>Channel separation:</b>	More than 22 dB at 1 kHz
<b>Channel balance:</b>	Within 1.8 dB at 1kHz
<b>Recommended load impedance</b>	47 k $\Omega$ ~ 100 k $\Omega$
<b>Compliance (dynamic):</b>	12 x 10 <sup>-6</sup> cm/dyne at 100 Hz
<b>Vertical tracking angle:</b>	20°
<b>Stylus pressure range:</b>	1.25 $\pm$ 0.25 g (12.5 $\pm$ 2.5mN)
<b>Stylus tip:</b>	0.3 x 0.7 mil (7.5 x 18 $\mu$ m) Elliptical stylus
<b>Weight:</b>	6.0 g (cartridge only)
<b>Replacement stylus:</b>	EPS-202ED

## TECHNISCHE DATEN

Änderungen der technischen Daten vorbehalten.

Die angegebenen Gewichts- und Abmessungsdaten sind circa Werte.

### ■ Allgemeine Daten

<b>Stromversorgung:</b>	~ 110-120/220-240V, 50/60 Hz Wechselstrom 12V Gleichstrom (Ausgestattet mit Gleichstrom-Eingangsbuchse)
<b>Leistungsaufnahme:</b>	20 W (Wechselstrom) 6 W (Gleichstrom)
<b>Abmessungen (B x H x T):</b>	31.5 x 8.8 x 31.5 cm
<b>Gewicht:</b>	7 kg

### ■ Plattenspieler

<b>Type:</b>	Quarz-Direktantrieb Automatischer Plattenspieler Auto-Start/Auto-Zuführung Rückführautomatik Stop-Automatik Wiederhol-Betrieb Automatische Drehzahlwahl Automatische Plattengrößewahl 2-Geschwindigkeiten- Suchfunktionen Plattenpräsenz-Registrierung
<b>Antrieb:</b>	Direktantrieb
<b>Motor:</b>	Kollektorloser Gleichstrommotor
<b>Antriebsregel-Methode:</b>	Quarz-Steuerung (QPL)
<b>Plattenteller:</b>	Aluminium-Druckguß Durchmesser 30 cm
<b>Plattenteller- Drehzahlen:</b>	33-1/3 und 45 U/min Automatische Drehzahlwahl (manuelle Wahl möglich)
<b>Drehzahlabweichung: Gleichlaufschwankungen:</b>	Innerhalb $\pm$ 0.002% 0.012% WRMS* 0.025% WRMS (JIS C5521) $\pm$ 0.035% Spitze (IEC 98A bewertet)

\* Gemessen anhand von Signalen vom eingebauten Frequenz-generator des Motorbauteils.

<b>Rumpel-Fremdspannungsabstand:</b>	-56 dB (IEC 98A unbewertet)
<b>Rumpel-Geräuschspannungsabstand:</b>	-78 dB (IEC 98A bewertet)

### ■ Tonarm

<b>Type:</b>	Dynamisch ausbalancierter Tangential-Tonarm mit Kardan- aufhängung mit 4-Punkt-Drehlager
<b>Effektive Länge:</b>	105 mm
<b>Spurfehlwinkel:</b>	Innerhalb $\pm$ 0.1°
<b>Effektive Masse:</b>	9 g (einschließlich Tonabnehmer)
<b>Resonanzfrequenz:</b>	12 Hz
<b>Tonarm-Antriebsmotor:</b>	Kernloser Gleichstrommotor

### ■ Tonabnehmer

<b>Type:</b>	Stereo-Magnet-Tonabnehmer mit Einpunkt-Aufhängungssystem
<b>Magnet:</b>	Samarium-Kobalt (SM-Co)
<b>Nadelträger:</b>	Röhre aus reinem Bor
<b>Magnetkreis:</b>	Ganzlamellenkern
<b>Frequenzgang:</b>	10 Hz bis 50 kHz 20 Hz bis 35 kHz $\pm$ 3 dB 20 Hz bis 10 kHz $\pm$ 1 dB
<b>Ausgangsspannung:</b>	2.5mV bie 1 kHz 5 cm/s. Null-zu-Spitze, lateral (7 mV bie 1kHz 10cm/s. Null-zu- Spitze, 45° [DIN 45 500])
<b>Kanalernnung:</b>	Mehr als 22 dB bei 1kHz
<b>Kanalabweichung:</b>	Innerhalb 1.8 dB bei 1 kHz
<b>Empfohlene Endimpedanz:</b>	47k $\Omega$ ~ 100k $\Omega$
<b>Nachgiebigkeit (dynamisch):</b>	12 x 10 <sup>-6</sup> cm/dyn bei 100 Hz
<b>Vertikaler Spurwinkel:</b>	20°
<b>Auflagekraft- Einstellbereich:</b>	1.25 $\pm$ 0.25 g (12.5 $\pm$ 2.5mN) 0.3 x 0.7 Mil (7.5 x 18 $\mu$ m)
<b>Nadelspitze:</b>	Elliptisch geschliffene
<b>Gewicht:</b>	6.0 g (nur Tonabnehmer)
<b>Ersatznadel:</b>	EPS-202ED

Ref. No.	Part No.	Part Name & Description
R325	<b>ERD25FJ681</b>	Carbon, 680Ω, 1/4W, ± 5%
R326	<b>ERD25FJ102</b>	Carbon, 1kΩ, 1/4W, ± 5%
R327	<b>ERD25FJ681</b>	Carbon, 680Ω, 1/4W, ± 5%
R328, 329	<b>ERD25FJ471</b>	Carbon, 470Ω, 1/4W, ± 5%
R330, 331	<b>ERD25FJ102</b>	Carbon, 1kΩ, 1/4W, ± 5%
R332, 333	<b>ERD25FJ222</b>	Carbon, 2.2kΩ, 1/4W, ± 5%
R334, 335	<b>ERD25FJ472</b>	Carbon, 4.7kΩ, 1/4W, ± 5%
R336	<b>ERD25FJ181</b>	Carbon, 180Ω, 1/4W, ± 5%
R337	<b>ERD25TJ333</b>	Carbon, 33kΩ, 1/4W, ± 5%
R338	<b>ERD25FJ121</b>	Carbon, 120Ω, 1/4W, ± 5%
R339	<b>ERD25FJ681</b>	Carbon, 680Ω, 1/4W, ± 5%
R340	<b>ERD25TJ223</b>	Carbon, 22kΩ, 1/4W, ± 5%
R341	<b>ERD25TJ393</b>	Carbon, 39kΩ, 1/4W, ± 5%
R342	<b>ERD25FJ103</b>	Carbon, 10kΩ, 1/4W, ± 5%
R343	<b>ERD25FJ222</b>	Carbon, 2.2kΩ, 1/4W, ± 5%
R344	<b>ERG1ANJ121</b>	Metal Oxide, 120Ω, 1W, ± 5%
R345, 346	<b>ERD25FJ271</b>	Carbon, 270Ω, 1/4W, ± 5%
R347, 348	<b>ERD25FJ271</b>	Carbon, 270Ω, 1/4W, ± 5%
R349	<b>ERD25FJ271</b>	Carbon, 270Ω, 1/4W, ± 5%
R350, 351	<b>ERD25TJ124</b>	Carbon, 120kΩ, 1/4W, ± 5%
R353, 354	<b>ERD25FJ472</b>	Carbon, 4.7kΩ, 1/4W, ± 5%
R355	<b>ERD25TJ473</b>	Carbon, 47kΩ, 1/4W, ± 5%
R356, 357	<b>ERD25TJ223</b>	Carbon, 22kΩ, 1/4W, ± 5%
R358	<b>ERD25FJ102</b>	Carbon, 1kΩ, 1/4W, ± 5%
R359	<b>ERD25TJ393</b>	Carbon, 39kΩ, 1/4W, ± 5%
R360	<b>ERD25TJ223</b>	Carbon, 22kΩ, 1/4W, ± 5%
R361	<b>ERD25FJ103</b>	Carbon, 10kΩ, 1/4W, ± 5%
R362	<b>ERD25FJ471</b>	Carbon, 470Ω, 1/4W, ± 5%
R364	<b>ERD25FJ681</b>	Carbon, 680Ω, 1/4W, ± 5%
R365	<b>ERD25FJ272</b>	Carbon, 2.7kΩ, 1/4W, ± 5%
R401, 402	<b>ERD25FJ471</b>	Carbon, 470Ω, 1/4W, ± 5%
<b>CAPACITORS</b>		
C1, 2 C3	ECKD1H223PF <b>ECEB1VS102</b>	Ceramic, 0.022μF, 50V, ± 100% Electrolytic, 1000μF, 35V
<b>C4</b> [EG],[EB],[EF],[XA]	Δ ECQE2A473MZ	Polyester, 0.047μF, 250V, ± 20%
<b>C4</b> [XL],[E],[EK]	Δ ECNC4A473MD	Ceramic, 0.047μF, 450V, ± 20%


Ref. No.	Part No.	Part Name & Description
C5, 6	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%
C101, 102	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%
C103	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%
C104, 105	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V
C106	<b>ECEA1ES470</b>	Electrolytic, 47μF, 25V
C107	<b>ECEA5023R3</b>	Electrolytic, 3.3μF, 50V
C108	<b>ECEA1ES101</b>	Electrolytic, 100μF, 25V
C109	<b>ECEA1ES101</b>	Electrolytic, 100μF, 25V
C201	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V
C202, 203	<b>ECEA5021</b>	Electrolytic, 1μF, 50V
C204	ECQM1H473KZ	Polyester, 0.047μF, 50V ± 10%
C205	<b>ECEA5021</b>	Electrolytic, 1μF, 50V
C206	<b>ECEA1AS221</b>	Electrolytic, 220μF, 10V
C207	<b>ECEA1ES470</b>	Electrolytic, 47μF, 25V
C208	<b>ECEA5021</b>	Electrolytic, 1μF, 50V
C209	ECQV05224JZ	Polyester, 0.22μF, 50V, ± 5%
C210	<b>ECEA2524R7</b>	Electrolytic, 4.7μF, 25V
C211	ECQV05224JZ	Polyester, 0.22μF, 50V, ± 5%
C212	<b>ECEA1ES101</b>	Electrolytic, 100μF, 25V
C213	<b>ECEA1ES470</b>	Electrolytic, 47μF, 25V
C214	ECKF1E104ZV	Ceramic, 0.1μF, 25V, ± 80%
C215	ECCD1H471K	Ceramic, 470pF, 50V, ± 10%
C216	ECCD1H151K	Ceramic, 150pF, 50V, ± 10%
C217	ECCD1H330K	Ceramic, 33pF, 50V, ± 10%
C218	ECKF1E104ZV	Ceramic, 0.1μF, 25V, ± 80%
C219	<b>ECEA1ES101</b>	Electrolytic, 100μF, 25V
C301	<b>ECEA1ES101</b>	Electrolytic, 100μF, 25V
C302	ECQM1H473KZ	Polyester, 0.047μF, 50V ± 10%
C303	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%
C304	<b>ECEA0JS471</b>	Electrolytic, 470μF, 6.3V
C305	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V
C306	ECCD1H101K	Ceramic, 100pF, 50V, ± 10%
C307	ECQM1H102KZ	Polyester, 0.001μF, 50V, ± 10%
C308	<b>ECEA1CS330</b>	Electrolytic, 33μF, 16V
C309	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%
C310, 311	ECQM1H103KZ	Polyester, 0.01μF, 50V, ± 10%
C312	<b>ECEA5021</b>	Electrolytic, 1μF, 50V
C313	<b>ECEA1ES220</b>	Electrolytic, 22μF, 25V
C314	<b>ECEA1AS101</b>	Electrolytic, 100μF, 10V
C315, 316	ECKD1H102KB	Ceramic, 0.001μF, 50V, ± 10%

**Areas**


- \* [E] is available in Scandinavia.
- \* [EK] is available in United Kingdom.
- \* [XL] is available in Australia.
- \* [EB] is available in Belgium.
- \* [EG] is available in European.
- \* [EF] is available in France.
- \* [XA] is available in Asia, Latin America, Middle East and Africa.

IC101 (AN6635)

IC201 (AN6680)

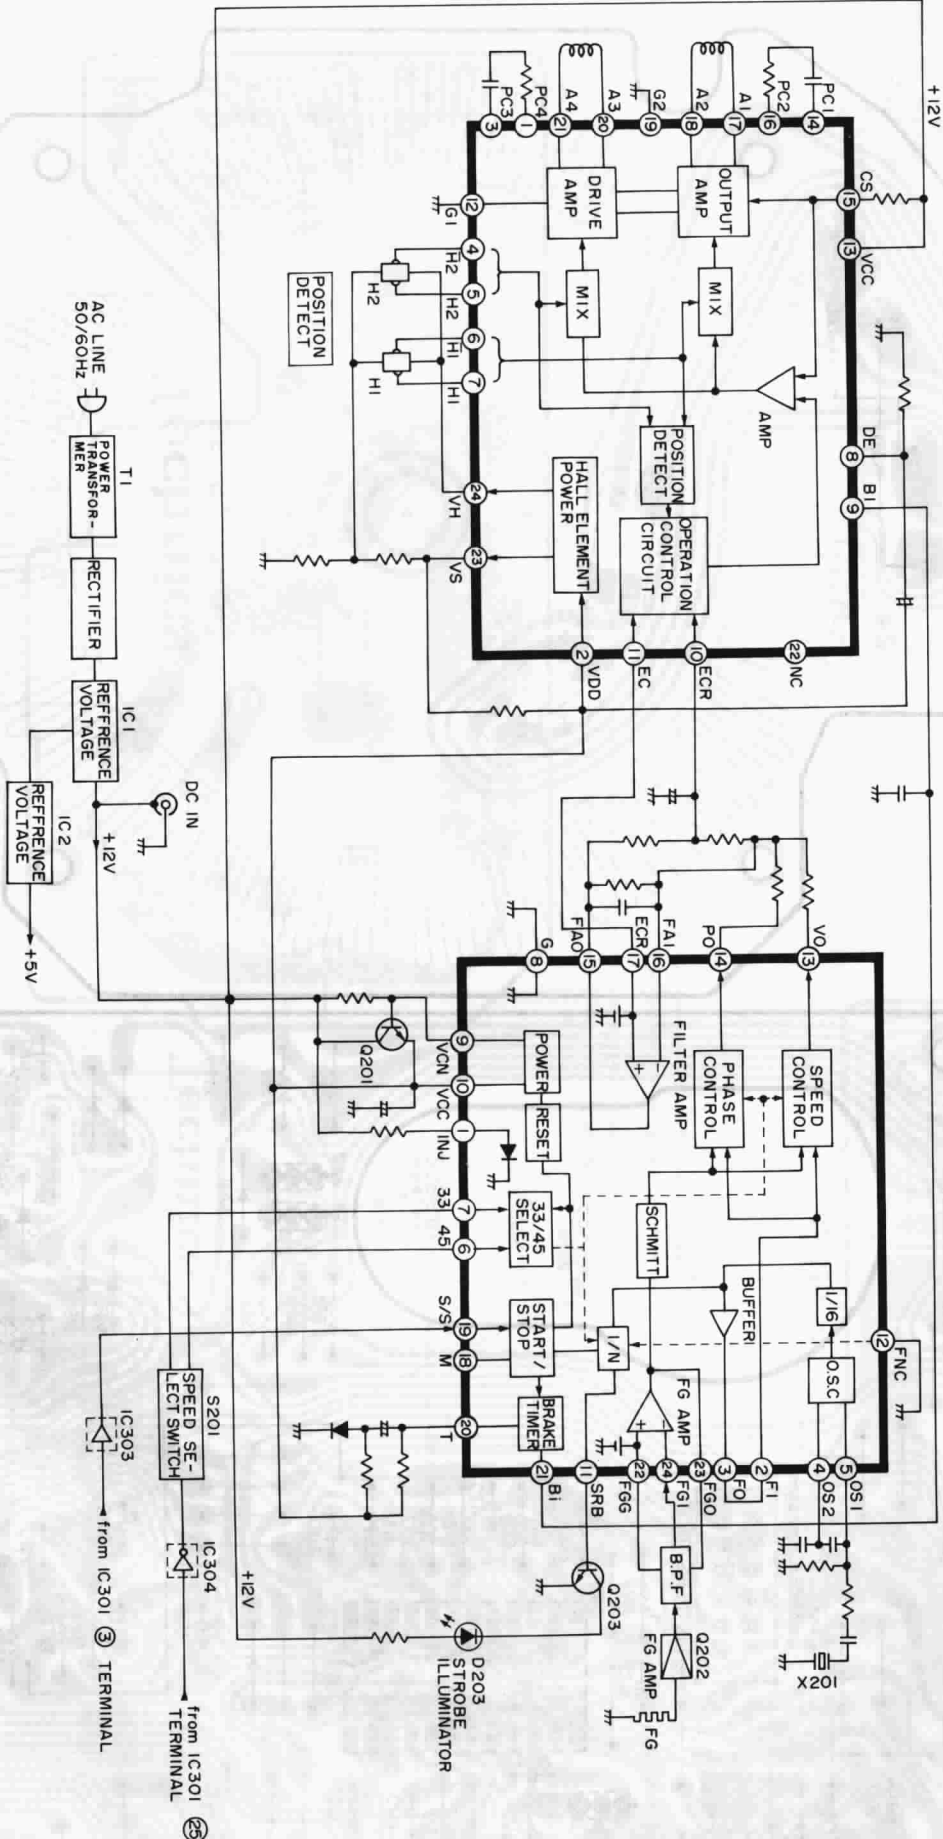



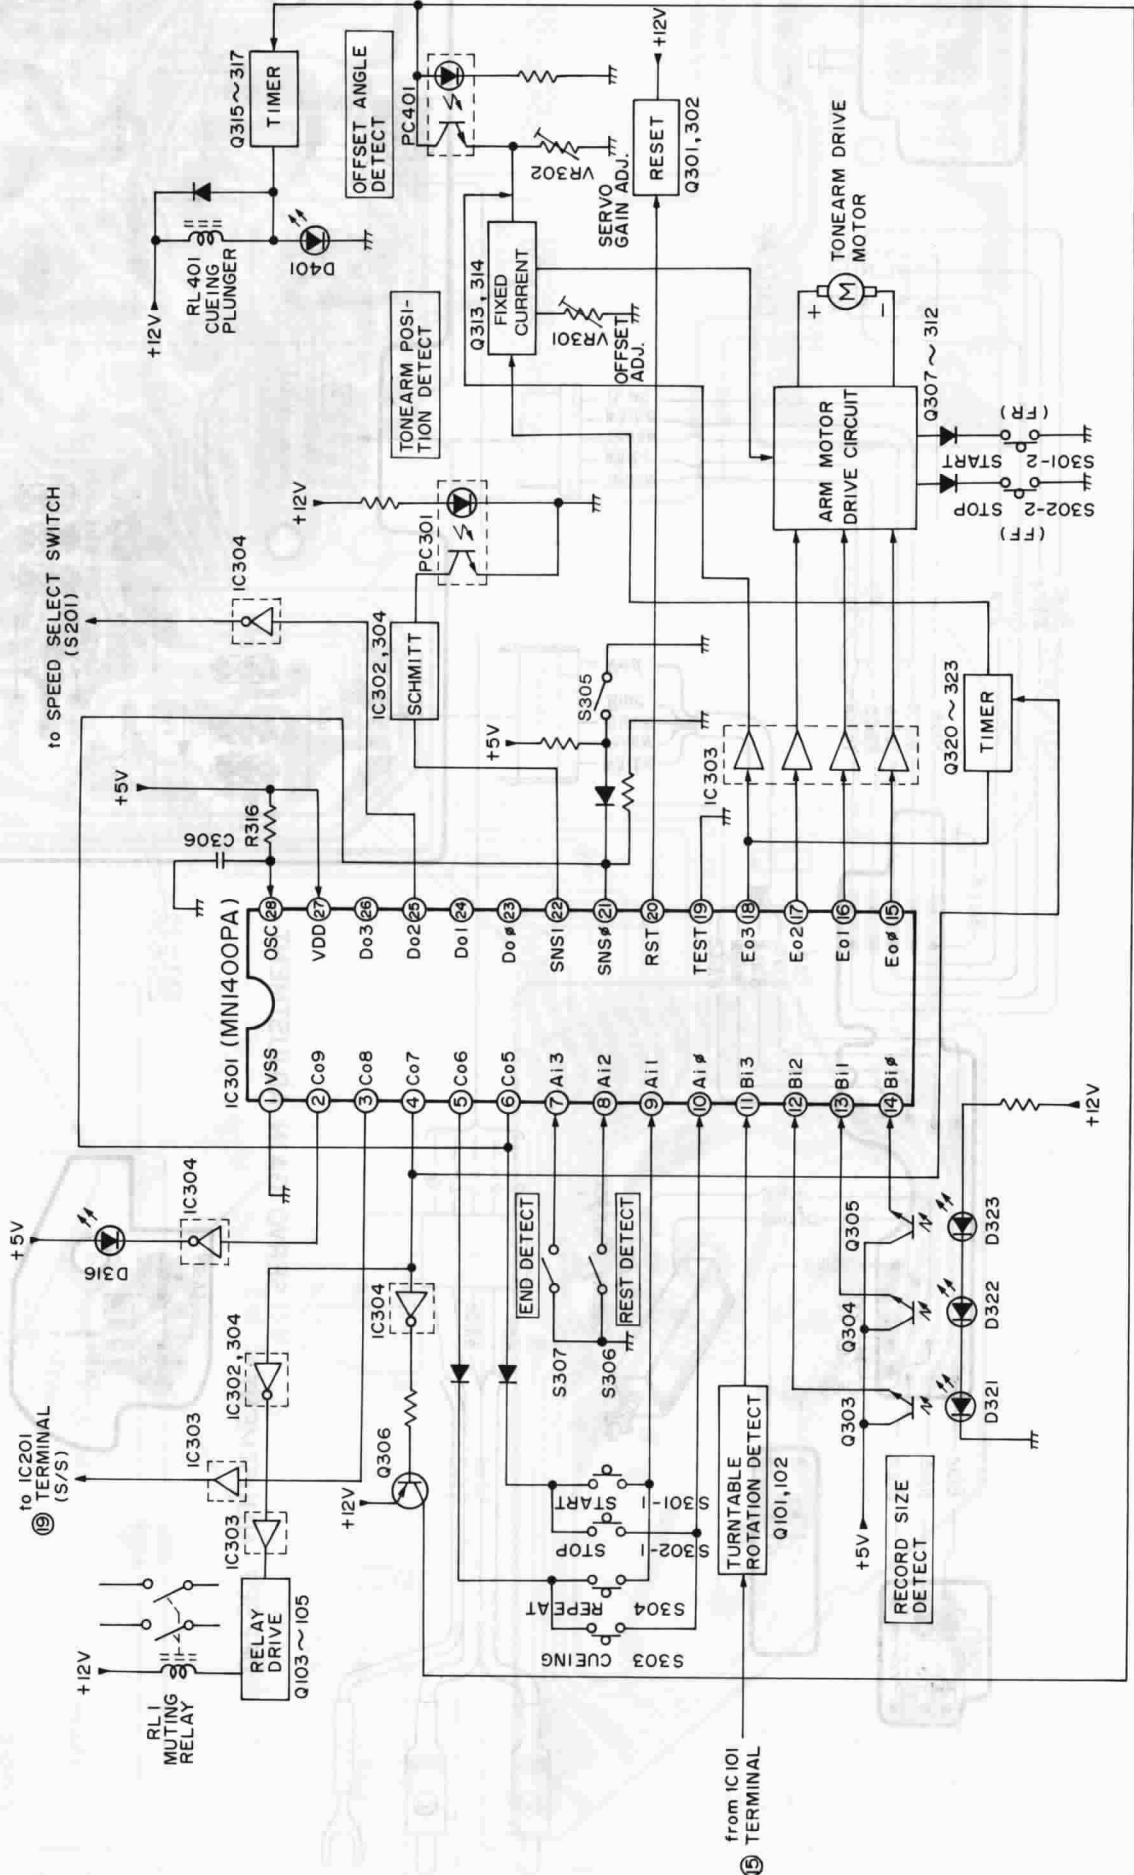

to SPEED SELECT SWITCH (S201)

to IC201 TERMINAL (S/S)

from IC101 TERMINAL

(F) S301-2 START  
(F) S302-2 STOP

RECORD SIZE DETECT

TURNTABLE ROTATION DETECT

END DETECT  
REST DETECT

TIMER

OFFSET ANGLE DETECT

TONEARM POSITION DETECT

SCHMITT

Q302, 304

Q303, 304

Q103 ~ 105

Q101, 102

FIXED CURRENT

Q313, 314

Q304, 305

Q303, 304

Q303, 304

Q307 ~ 312

RESET

Q301, 302

Q305

Q303, 304

Q303, 304

Q320 ~ 323

ARM MOTOR DRIVE CIRCUIT

ARM MOTOR DRIVE

Q307 ~ 312

Q303, 304

Q303, 304

Q320 ~ 323

TIMER

Q320 ~ 323

Q303, 304

Q303, 304

Q303, 304

Q320 ~ 323

ARM MOTOR

Q307 ~ 312

Q303, 304

Q303, 304

Q303, 304

Q320 ~ 323

Q307 ~ 312

Q320 ~ 323


Q303, 304


Q303, 304

Q303, 304

Q320 ~ 323

# EXPLODED VIEWS...Cabinet and Chassis

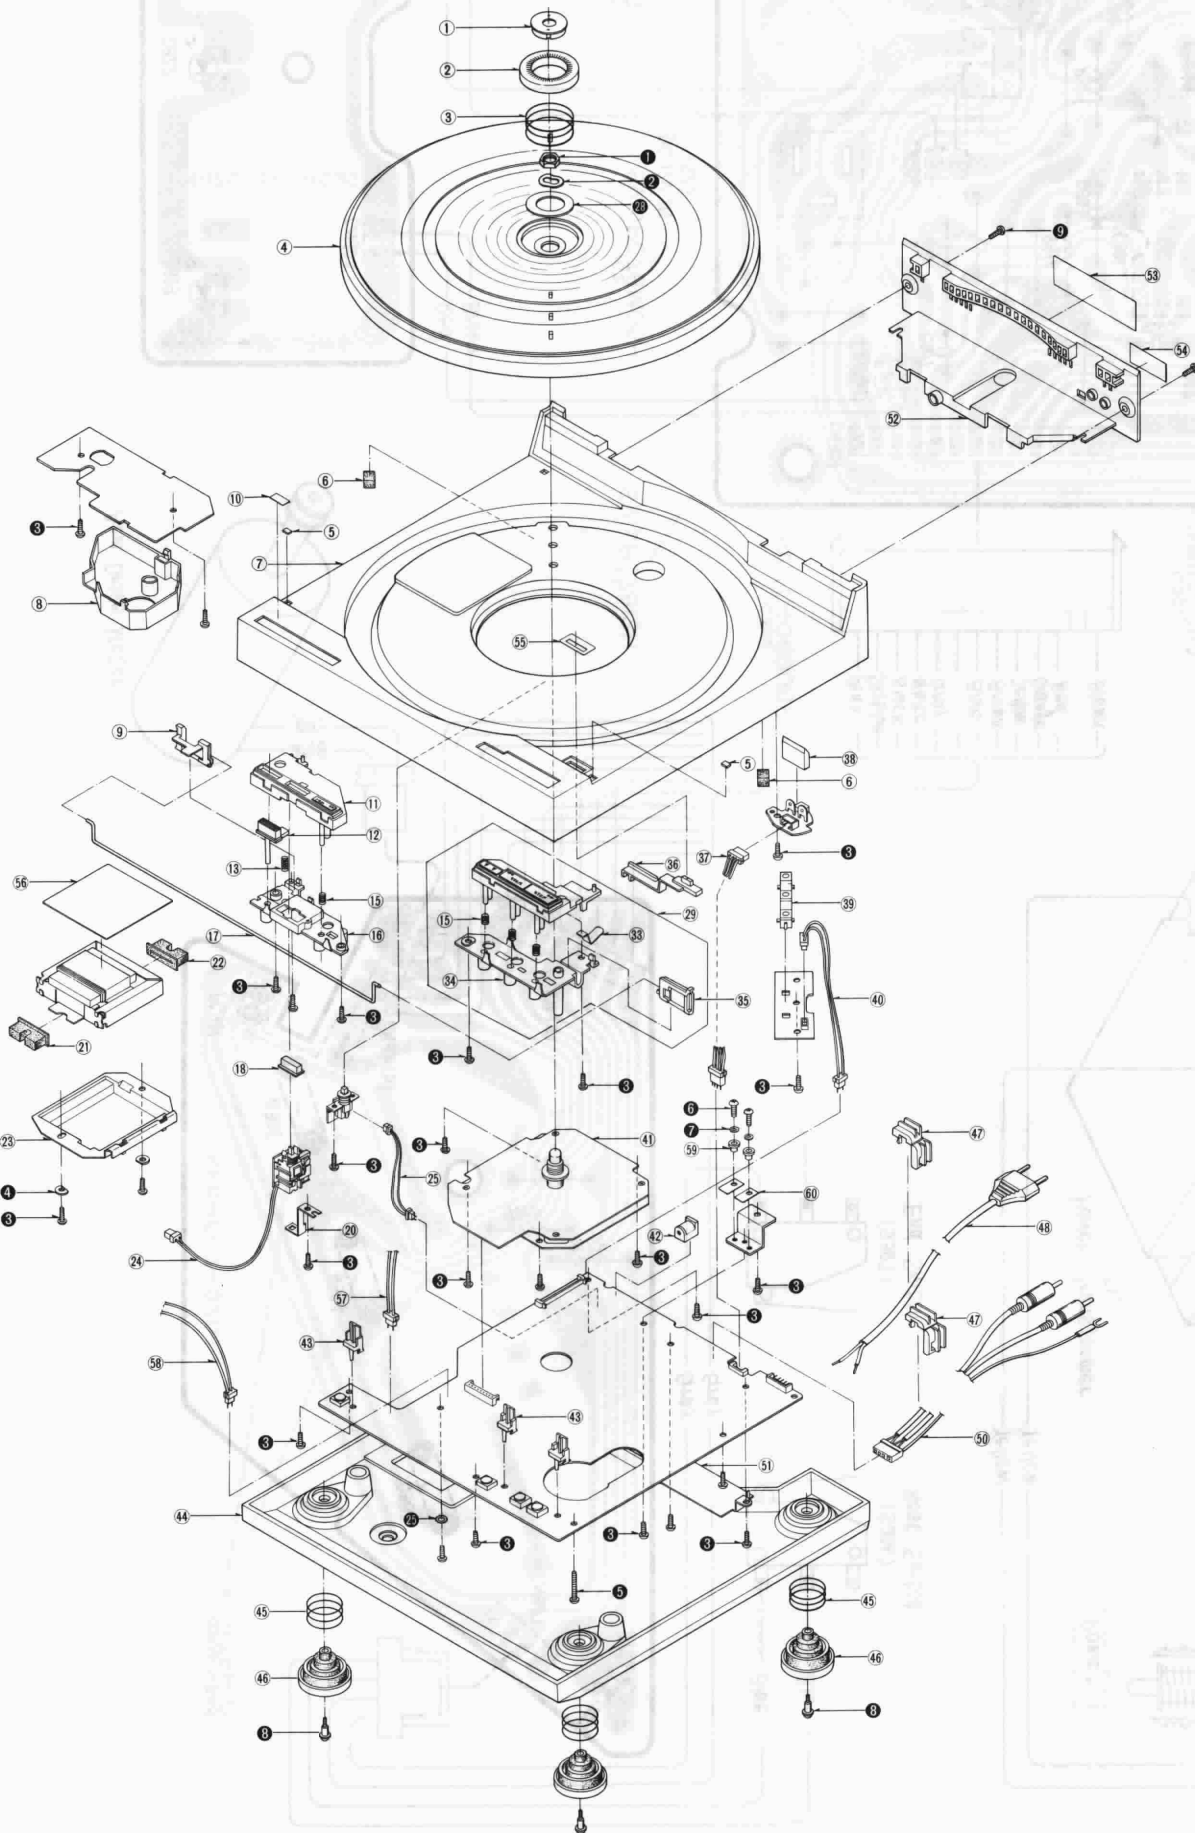

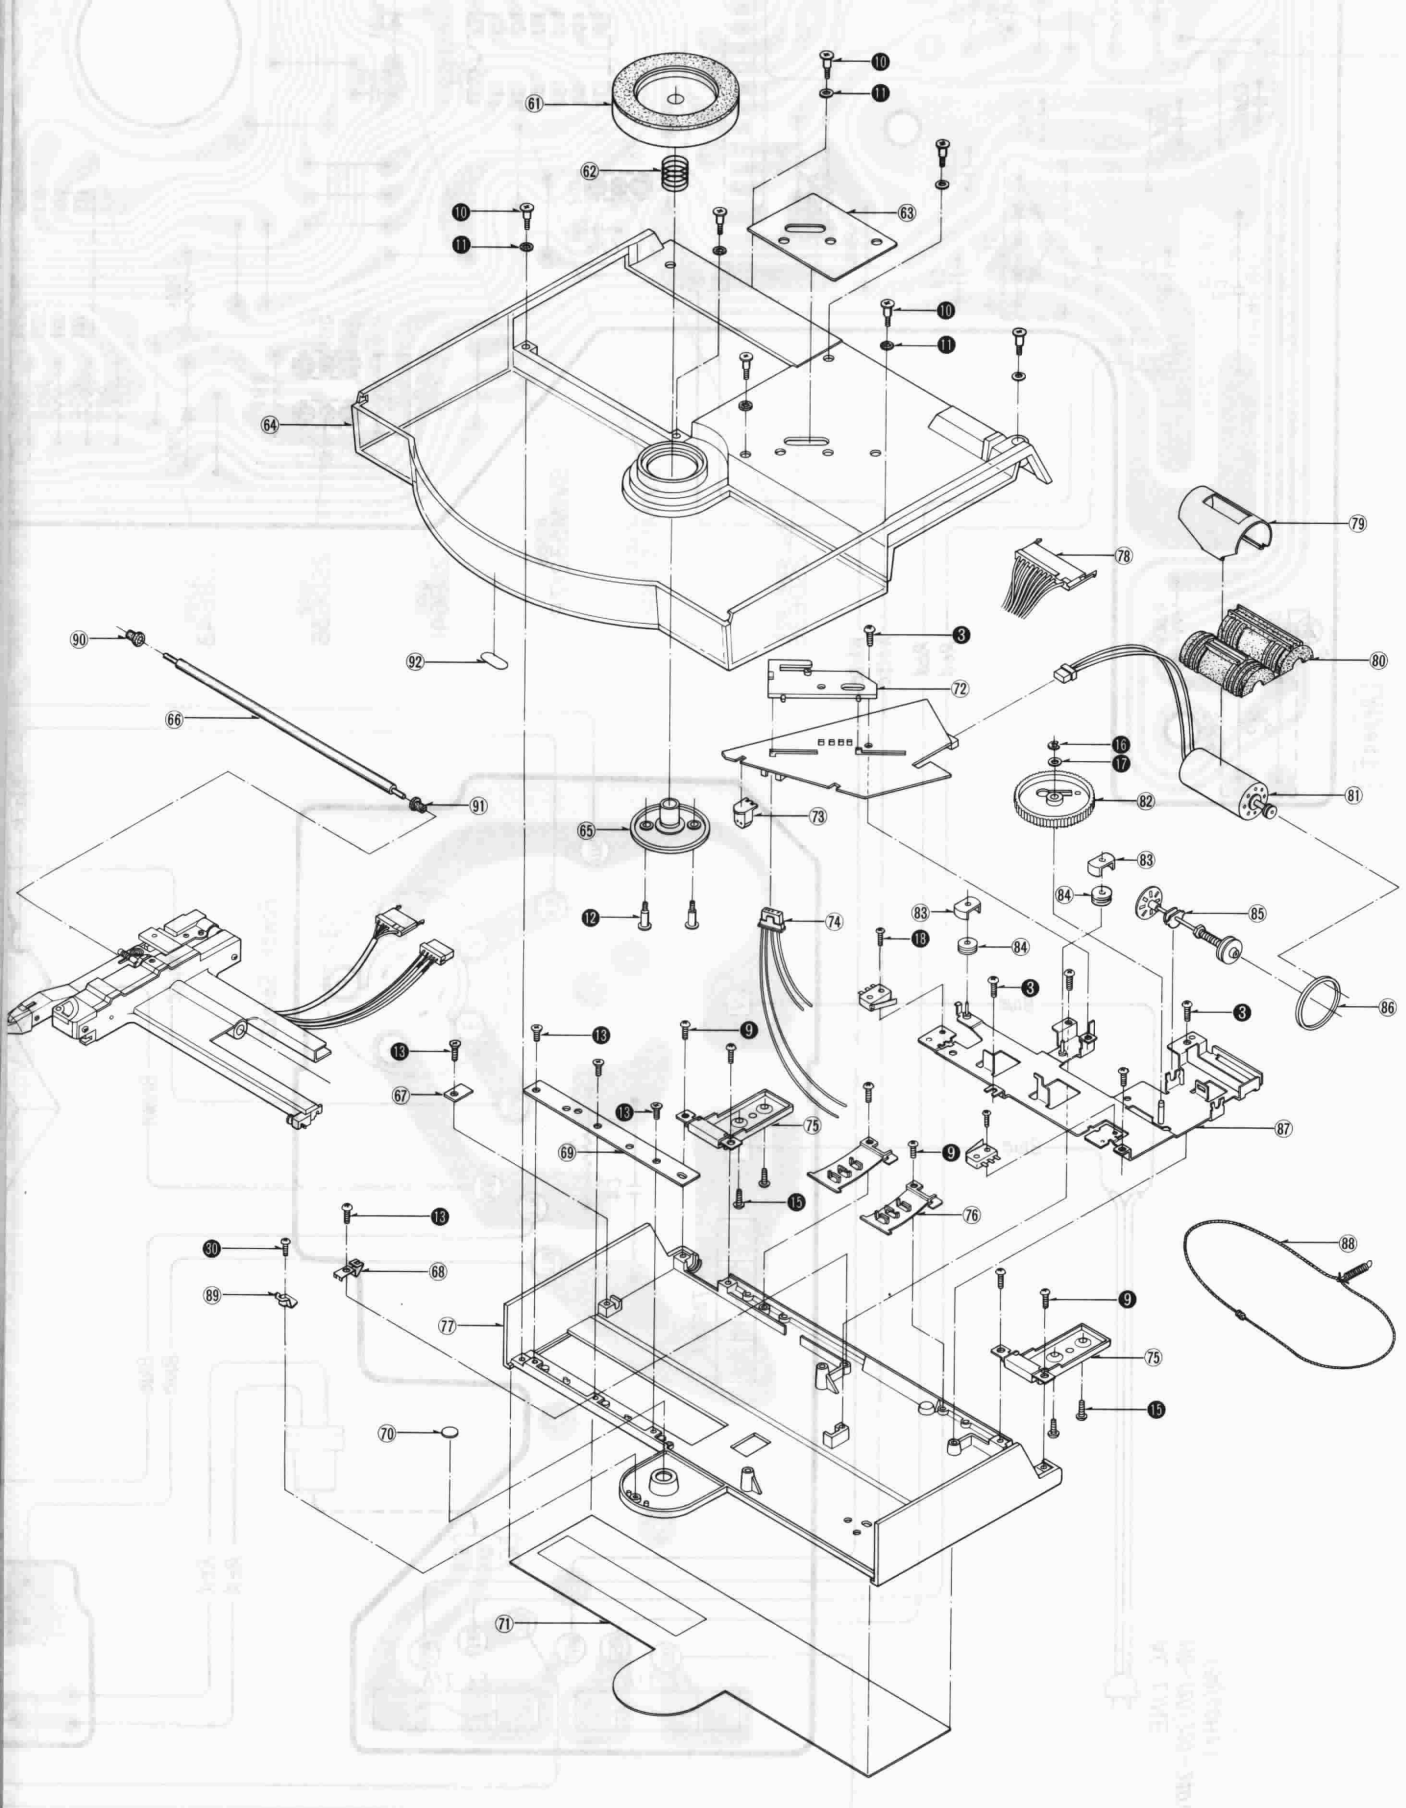

# REPLACEMENT PARTS LIST...Cabinet & Chassis Parts

- Notes:**
- Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
  - △ indicates that only parts specified by the manufacturer be used for safety.
  - Ⓚ-marked parts are used for black type only, while ○-marked parts are for silver type only.
  - Parts other than Ⓚ and ○-marked are used for both black and silver types.
  - Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Black type model No : SL-7 (K)

Ref. No.	Part No.	Part Name & Description
<b>CABINET and CHASSIS PARTS</b>		
1	SFUMC10-02	Supporter, 45 Adaptor
2	SFUMC10-01	45 Adaptor
3	SFQAC10-01	Spring, 45 Adaptor
4	SFTEC07-01A	Turntable
5	SFGCC07-02	Cushion, Dust Cover
6	SFGZC07-01	Spacer
7	○ SFACC07-01	Cabinet
7	Ⓚ SFACC07-21	Cabinet (Black)
8	SFUMC07X01	Cover, Power P.C.B.
9	SFUMC07-06	Guide (L), Lock Rod
10	SFNZC07-04	Label, Open
11	SFUMC07-17R	Guide, Power Switch
12	SFUMC07-04	Knob, Lock
13	SFQAC07-01	Spring, Lock
15	SFQAC07-02	Spring
16	SFUMC07-18	Guide (B), Power Switch
17	SFQSC07-01	Rod, Lock
18	SFKTC07-05	Knob, Power
20	SFUPC07-05	Bracket, Power Switch
21	SFGCC07-03	Cushion (A), Power Transformer
22	SFGCC07-06	Cushion (B), Power Transformer
23	SFUMC07-07	Cover, Power Transformer
24	SFDLC07-03E	Connector, 2 pin (with Wire)
25	SFDJC07-06E	Connector, 2 pin (with Wire)
29	SFUMC07-14A	Guide Ass'y, Operation
33	SFQPC07-01	Spacer, Lock Guide
34	SFUMC07-15	Guide (B), Operation
35	SFUMC07-05	Guide (R), Lock Rod
36	SFKTC07-06	Knob, Speed Select
37	SFDJC07-04E	Connector, 4 Pin (with Wire)
38	SFUMC07-21	Cover, VR301 & 302
39	SFUMC10-48	Spacer, Record Size L.E.D.
40	SFDJC07-05E	Connector, 2 Pin (with Wire)
41	SFMZC07-01Z	Stator Frame Ass'y
42	SFDJHEC0470	DC Terminal
43	SFUMC07-13	Spacer, L.E.D.
44	SFAUC07-01	Bottom Board
45	SFQCC07-01	Spring, Audio Insulator
46	SFGAC07-01E	Audio Insulator
47	SFUM190-11	Clamper, AC Cord
48	△ SJA88	AC Cord
48 [EK] only	△ QFC1205M	AC Cord
48 [XL] only	△ QFC1208M	AC Cord
50	SFDHC07-01A	Phono Cord
51	SFUPC07-05	Plate, Shield
52	SFUMC07-03	Cover, Rear
53 [E] only	SFNNC07S01	Name Plate
53 [EK], [XL]	SFNNC07G01	Name Plate
53 [EG] only	SFNNC07N01	Name Plate
53 [EB], [EF]	SFNNC07J01	Name Plate
53 [XA] only	SFNNC07X01	Name Plate
54	SFNZC07-03	Lable, Adjustment
55	○ SFNZC07-01	Lable, Speed Select
55	Ⓚ SFNZC07-21	Lable, Speed Select (Black)
56	SFUPC07-10	Plate, Power Transformer
57	SFDLC07-02E	Connector, 2 Pin (with Wire)
58	SFDLC07-01E	Connector, 2 Pin (with Wire)
59	SFDBC07-01	Spacer, IC1 & IC2
60	SFDCC07-01	Spacer, IC1 & IC2
61	SFKDC07-01E	Supporter, Record
62	SFQAC07-03	Spring

Ref. No.	Part No.	Part Name & Description
63	SFNZC07M01	Lable, Record Size Select
64	SFADC07-01R	Dust Cover
65	SFUMC10-08E	Supporter, Record
66	SFXJC07-01	Guide Rail (A)
67	SFUPC07-04	Supporter
68	SFUPC07-07	Clamper, Wire
69	SFUPC07-03	Guide Rail (B)
70	SFXWC10-03	Spacer
71	SFKKC07-01	Panel
72	SFUMC07-16	Shutter
73	SFUMC10-48	Spacer, L.E.D. (Strobe)
74	SFDJC10-02E	Connector, 4 pin (with Wire)
75	○ SFATC07-01A	Hinge
75	Ⓚ SFATC07-21A	Hinge (Black)
76	SFUMC07-19	Guide, Wire
77	○ SFACC07-02	Cabinet, Lid
77	Ⓚ SFACC07-22	Cabinet, Lid (Black)
78	SFDJC07-01E	Connector, 12 pin
79	SFUPC07-02	Cover, Motor
80	SFGCC07-01	Cushion, Motor
81	SFMHC10-01E	Motor Ass'y
82	SFUMC10-05	Drum, Arm Drive
83	SFUMC07-22	Stopper
84	RDR20-3	Pulley
85	SFXZC07-01R	Worm Ass'y
86	SFBGC10-01	Belt
87	SFUPC07-01E	Plate, Arm Drive
88	SFUZC07-05E	Lope
89	SFUPC07-08	Bracket, Dust Cover
90	SFGCC07-05	Cushion (B), Guide Rail (A)
91	SFGCC07-04	Cushion (A), Guide Rail (A)
92	SFNZC07-06	Lable, Push
<b>TONARM PARTS</b>		
101	SFPAM00701A	Tonearm Ass'y
102	EPCP202CBK	Cartridge
	EPS202ED	Stylus
103	SFPSC00701A	Pointer Ass'y
104	SFPKD00701E	Arm Base
105	SFDZC07-01E	Plunger Ass'y (PL401)
106	SFPJL0C,01A	Lift Ass'y
107	SFPSP00704	Spring, Lift
108	SFPKD00702	Cover, Arm Base
109	SFPSP00706	Spring
110	SFDJC07-03E	Connector, Phono (with Wire)
111	SFDJC07-02E	Connector, 5 pin (with Wire)
112	SFPZB00702	Bracket
<b>SCREWS, WASHERS and CIRCLIPS</b>		
①	XNS12	Nut
②	SFXWC10-01	Washer
③	XTV3+8BFN	Screw
④	XWT3	Washer
⑤	XTN3+35B	Screw
⑥	XSN3+6S	Screw
⑦	XWA3B	Washer
⑧	SFXGQ20-01	Screw
⑨	XTN3+8BFZ	Screw
⑩	SFXGC07-01	Screw
⑪	SFXWC07-01	Washer
⑫	SFXGC10-02	Screw
⑬	XTS26+6JFZ	Screw

## SPECIFICATIONS

Les spécifications sont susceptibles d'être modifiées sans préavis.

Le poids et les dimensions donnés sont approximatifs.

### ■ Généralités

<b>Alimentation:</b>	Alternatif 110-120/220-240V, 50/60 Hz 12V C.C. (Equippée d'un jack d'entrée C.C.)
<b>Consommation:</b>	20 W (C.A.) 6 W (C.C.)
<b>Dimensions: (L x H x P)</b>	31.5 x 8.8 x 31.5 cm
<b>Poids:</b>	7 kg

### ■ Platine de lecture

<b>Type:</b>	Entraînement direct à quartz Platine automatique Départ automatique/Entrée automatique Retour automatique Arrêt automatique Audition répétée Sélecteur de vitesse automatique Sélecteur de diamètre automatique Fonctions exploratrices à 2 vitesses Détection de la présence d'un disque
--------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### ■ Système d'entraînement:

<b>Entraînement direct:</b>	Entraînement direct
<b>Moteur:</b>	Moteur C.C. sans balai
<b>Groupe de réglage:</b>	Réglage d'accrochage de phase par quartz
<b>Plateau de lecture:</b>	Aluminium moulé sous pression Diamètre 30 cm
<b>Vitesses de rotation:</b>	33-1/3 et 45 t/p.m. Sélecteur de vitesse automatique (Sélection manuelle possible)
<b>Déviations de la vitesse:</b>	En deçà de $\pm 0.002\%$

### ■ Pleurage et scintillement:

<b>Pleurage et scintillement:</b>	0.012% de valeur efficace* 0.025% de valeur efficace (JIS C5521) $\pm 0.035\%$ de crête (IEC 98A Pondéré)
-----------------------------------	-----------------------------------------------------------------------------------------------------------------------

\* Mesuré par l'obtention d'un signal provenant du générateur de fréquences incorporé de l'ensemble du moteur.

<b>Ronflement:</b>	-56 dB (IEC 98A Non pondéré) -78 dB (IEC 98A Pondéré)
--------------------	----------------------------------------------------------

### ■ Bras de lecture

<b>Type:</b>	Bras de lecture d'alignement linéaire de type à équilibre dynamique avec suspension à la cardan à 4 pivots
<b>Longueur effective:</b>	105 mm
<b>Angle d'erreur de piste:</b>	En deçà de $\pm 0.1^\circ$
<b>Masse réelle:</b>	9 g (y compris la cellule pick-up)
<b>Fréquence de résonance:</b>	12 Hz
<b>Moteur d'entraînement du bras de lecture:</b>	Moteur sans noyau C.C.

### ■ Cellule pick-up

<b>Type:</b>	Cellule pick-up stéréo à aimant mobile Système de suspension ponctuelle Samarium-Cobalt (SM-Co)
<b>Aimant:</b>	Tube à bore pur
<b>Porte-à-faux:</b>	Tube à bore pur
<b>Circuit magnétique:</b>	Noyau entièrement feuilleté
<b>Réponse en fréquence:</b>	10 Hz à 50 kHz 20 Hz à 35 kHz $\pm 3$ dB 20 Hz à 10 kHz $\pm 1$ dB
<b>Tension de sortie:</b>	2.5 mV à 1 kHz; 5 cm/s. zéro à vitesse latérale de crête (7 mV à 1 kHz; 10 cm/s., zéro à vitesse 45° de crête [DIN 45 500]) Plus de 22 à 1 kHz

### ■ Séparation de canal:

<b>Equilibrage des canaux:</b>	En deçà de 1.8 dB à 1 kHz
<b>Impédance de charge recommandée:</b>	47k $\Omega$ ~ 100k $\Omega$
<b>Elasticité (dynamique):</b>	12 x 10 <sup>-6</sup> cm/dyne à 100 Hz
<b>Angle d'alignement vertical:</b>	20°
<b>Plage de la force verticale:</b>	1.25 $\pm$ 0.25 gramme (12.5 $\pm$ 2.5mN)
<b>Extrémité de la pointe de lecture:</b>	0.3 x 0.7 mil (7.5 x 18 $\mu$ m) Forme elliptique
<b>Poids:</b>	6.0 grammes (cellule seule)
<b>Remplacement de la pointe de lecture:</b>	EPS-202ED

## ■ CONTENTS

	Page
LOCATION OF CONTROLS . . . . .	4, 5
FEATURES . . . . .	6
DISASSEMBLY INSTRUCTIONS . . . . .	7 ~ 10
DESCRIPTION OF CONNECTOR . . . . .	11
REPLACEMENT OF HALL ELEMENT . . . . .	11
ADJUSTMENT (ENGLISH) . . . . .	12 ~ 14
JUSTIERUNG (DEUTSCH) . . . . .	15, 16

	Page
REGLAGES (FRANÇAIS) . . . . .	17, 18
REPLACEMENT PARTS LIST . . . . .	19, 20, 29, 30
BLOCK DIAGRAM . . . . .	21, 22
PRINTED CIRCUIT BOARD WIRING VIEW . . . . .	23, 24
EXPLODED VIEWS . . . . .	25, 26, 30
SCHEMATIC DIAGRAM . . . . .	27, 28
BLOCK DIAGRAM OF IC'S . . . . .	31
CHANGES . . . . .	31, 32


Ref. No.	Part No.	Part Name & Description
15	<b>XTB3+6BFN</b>	Screw
16	<b>XUC3FT</b>	Circlip
17	SFXW551D2	Washer
18	XYN23+C10BN	Screw
19	SFPEV00701	Screw
20	<b>XTN3+4B</b>	Screw
21	<b>XTN23+6BFZ</b>	Screw
22	<b>XSN2+4BV</b>	Screw
23	<b>XWA2BFZ</b>	Washer
24	SFPTN00702	Screw
25	<b>XWC3B</b>	Washer
26	<b>XSN3+8S</b>	Screw
27	XXE3D6FZ	Screw
28	SFSP00706	Screw
29	SFXWC10-05	Washer
30	<b>XTN3+6BFZ</b>	Screw

ACCESSORIES		
A1 [E] only	SFNUC07S01	Instruction Book
A1 [EK] only	SFNUC07G01	Instruction Book
A1 [EG],[EF], [EB],[XL],[XA]	SFNUC07X01	Instruction Book


Ref. No.	Part No.	Part Name & Description
A2	SFCZB30001	Brush
A3	SFWTC07-01	Screw Driver
A4 [XA] only	SFDK119118	2P Plug

PACKING PARTS		
P1 [EF] only	○ SFHPC07C01	Carton
P1	○ SFHPC07M01	Carton
P1	☒ SFHPC07M21	Carton (Black)
P2	SFHHC07-01	Pad (L)
P3	SFHHC07-02	Pad (R)
P4	SFHSC07-02	Spacer (A), Corner
P5	SFHSC07-03	Spacer (B), Corner
P6	SFHSC07-01	Spacer, Tonearm
P7	SFHSC10-01	Spacer, Turntable
P8	XSN4D20FYBS	Screw
P9	SFHZC07-01	Cover
P10	SFYH45X60	Polyethylene Bag, Unit
P11	SPP189	Polyethylene Bag, Cord
P12	SPB1083	Polyethylene Bag, Accessory


## EXPLODED VIEWS... Tonearm

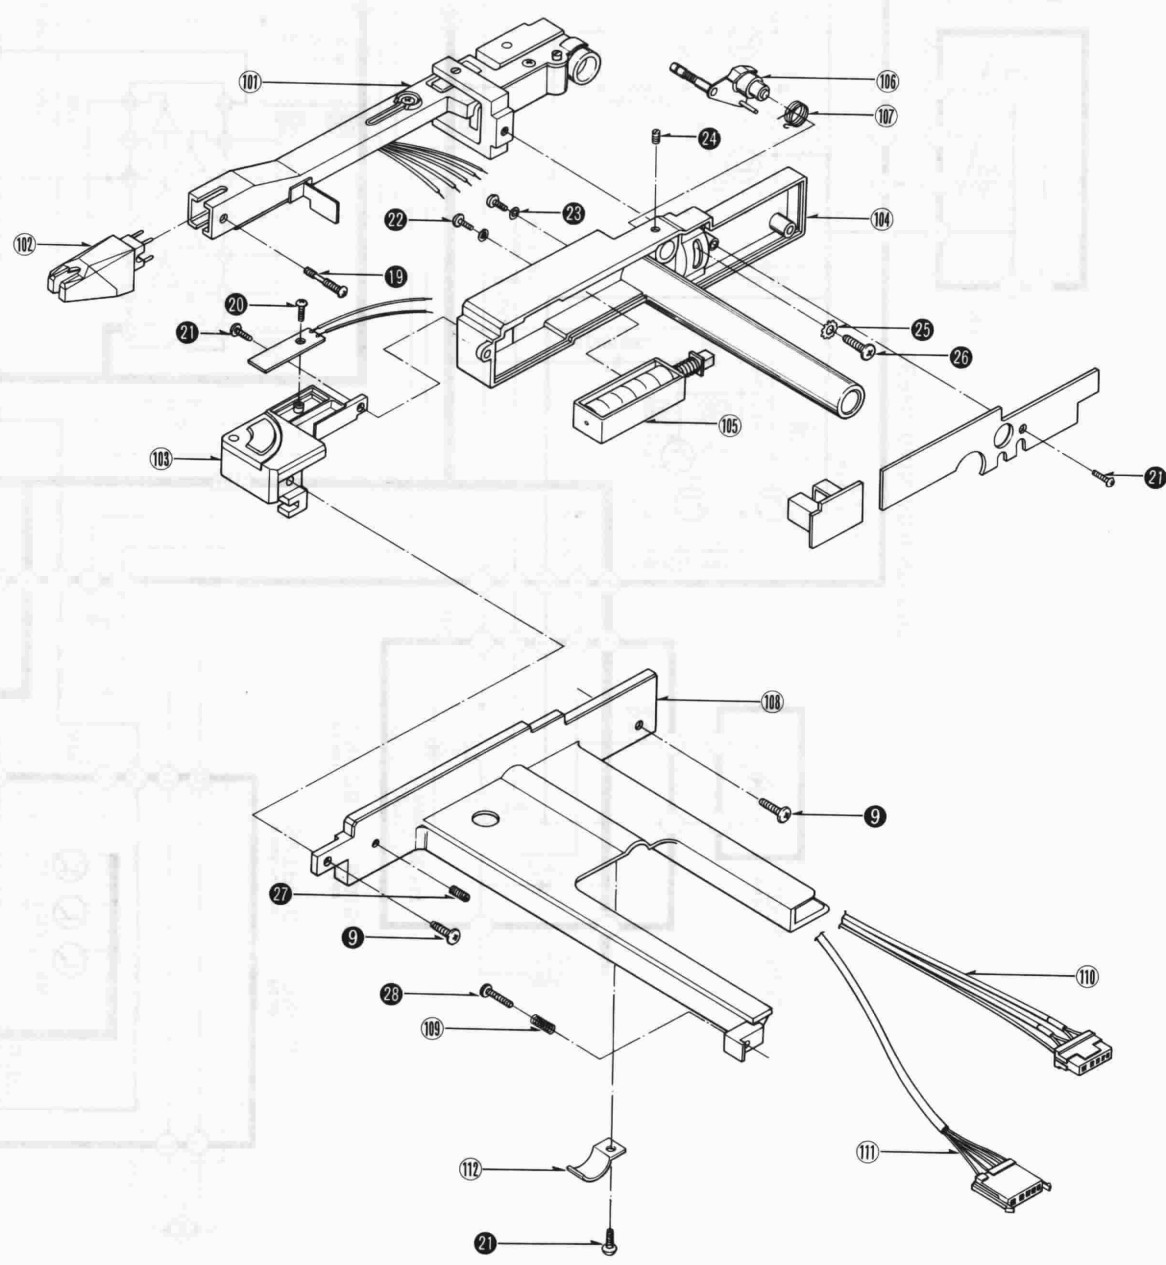

# ■ BLOCK DIAGRAM OF IC'S

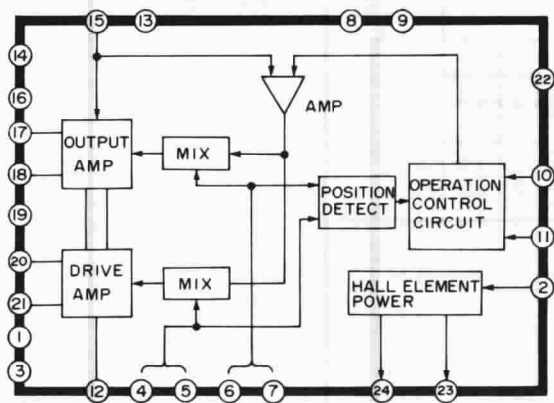

IC101 (AN6635)

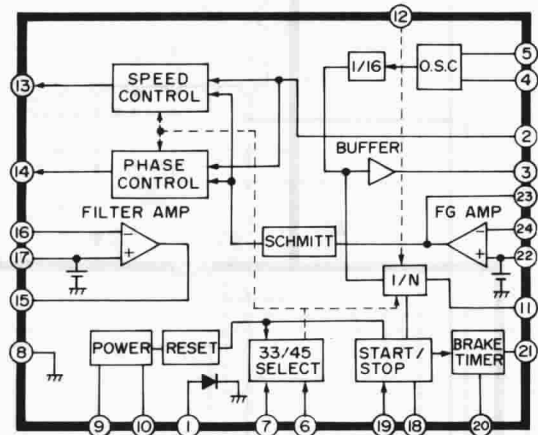

IC201 (AN6680)

## CHANGES

**Notes:**

1. This change of parts list includes the parts changed from those mentioned in SL-7/K Service Manual (ORDER NO. SD8009-1787).
2. The new parts list (page 19, 20 and 29, 30) is mentioned in this Service Manual. Please use this new parts list when placing an order for parts of No. SL-7.
3. SL-7/K Service Manual (ORDER NO. SD8009-1787) must be disused.

# ■ REPLACEMENT PARTS LIST

Ref. No.	Change of Part No.		Parts Name & Description	Per Set (Pcs.)	Remarks
	OLD SL-7/K (ORDER NO. SD8009-1787)	NEW SL-7 (Revise)			
<b>DIODES</b>					
D401	SVDBR3432S	SVDEBR3432S	Light Emitting Diode	1	○
<b>HALL ELEMENT</b>					
H1, 2	H-3000A	H-300A	Hall Element	2	○
<b>SWITCHES</b>					
S1-1	△ SFDSS55GL	SFDSS55GLS	Switch, Power	1	○
S1-2	△ SFDSTW9901	SFDSTWM9901	Switch, Power	1	○
S306, 307	SFDSAHA251461	SFDSAHA252461	Switch, End & Rest Detect	2	○
<b>RESISTOR</b>					
R211	ERD25TJ683	ERD25TJ563	Carbon, 5.6kΩ, 1/4W, ± 5%	1	
<b>CAPACITORS</b>					
C6	ECKF1E104ZV	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%	1	
C303	ECKF1E104ZV	ECQM1H104KZ	Polyester, 0.1μF, 50V, ± 10%	1	

Ref. No.	Change of Part No.		Parts Name & Description	Per Set (Pcs.)	Remarks
	OLD SL-7/K (ORDER NO. SD8009-1787)	NEW SL-7 (Revise)			

### CABINET and CHASSIS PARTS

10	SFKTC07-04	}	SFUMC07-17R	Guide Ass'y, Power Switch (Refer No. ⑪)	1	○
11	SFUMC07-17					
14	SFUMC07-12					
26	SFKTC07-03					
27	SFKTC07-01	}	SFUMC07-14A	Guide Ass'y, Operation (Refer No. ⑲)	1	○
28	SFKTC07-02					
29	SFUMC07-14					
30	SFUMC07-11					
31	SFUMC07-09	}	SFMZC07-01Z	Stator Frame Ass'y	1	○
32	SFUMC07-10					
41	SFMZC07-01E					
64	SFADC07-01					
10	Addition		SFNZC07-04	Lable, Open	1	○

### TONARM PART


112	Addition	SFPZB00702	Bracket	1	○
-----	----------	------------	---------	---	---

### SCREWS


①	XSN12	<b>XNS12</b>	Nut	1	WDD
⑭	XTN3+10BFZ	Deletion		0	
⑮	XTB3+8BFN	<b>XTB3+6BFN</b>	Screw	4	WDD
⑳	XXE3D6FZS	<b>XXE3D6FZ</b>	Screw	1	

## EXPLODED VIEWS

•Old

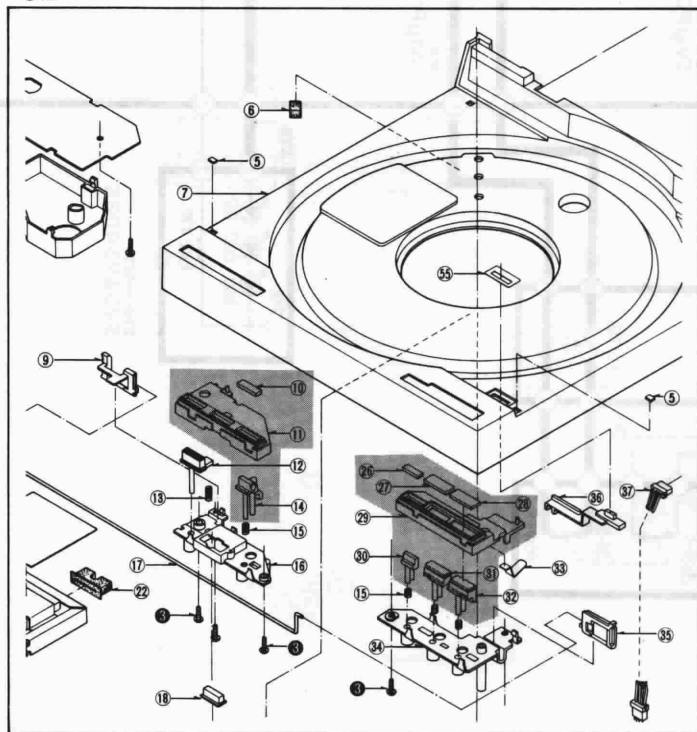



•New

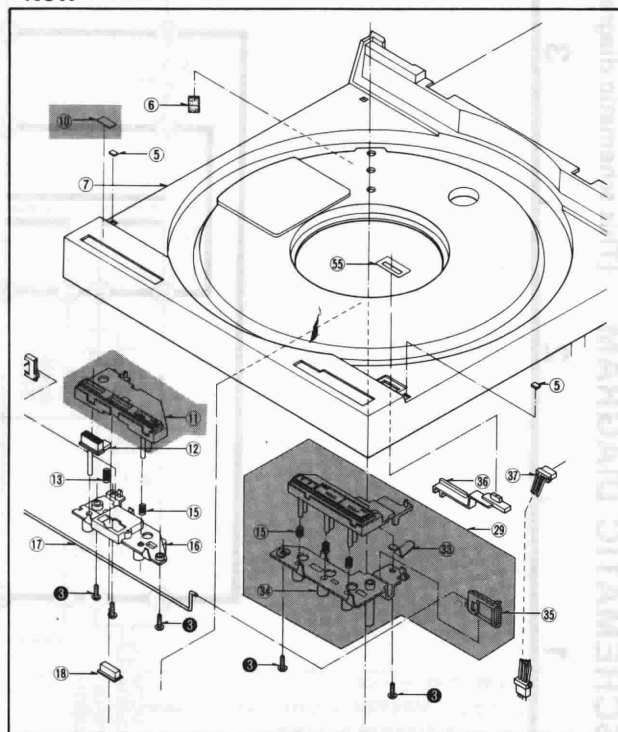

The part of shading areas are changed parts.



# LOCATION OF CONTROLS

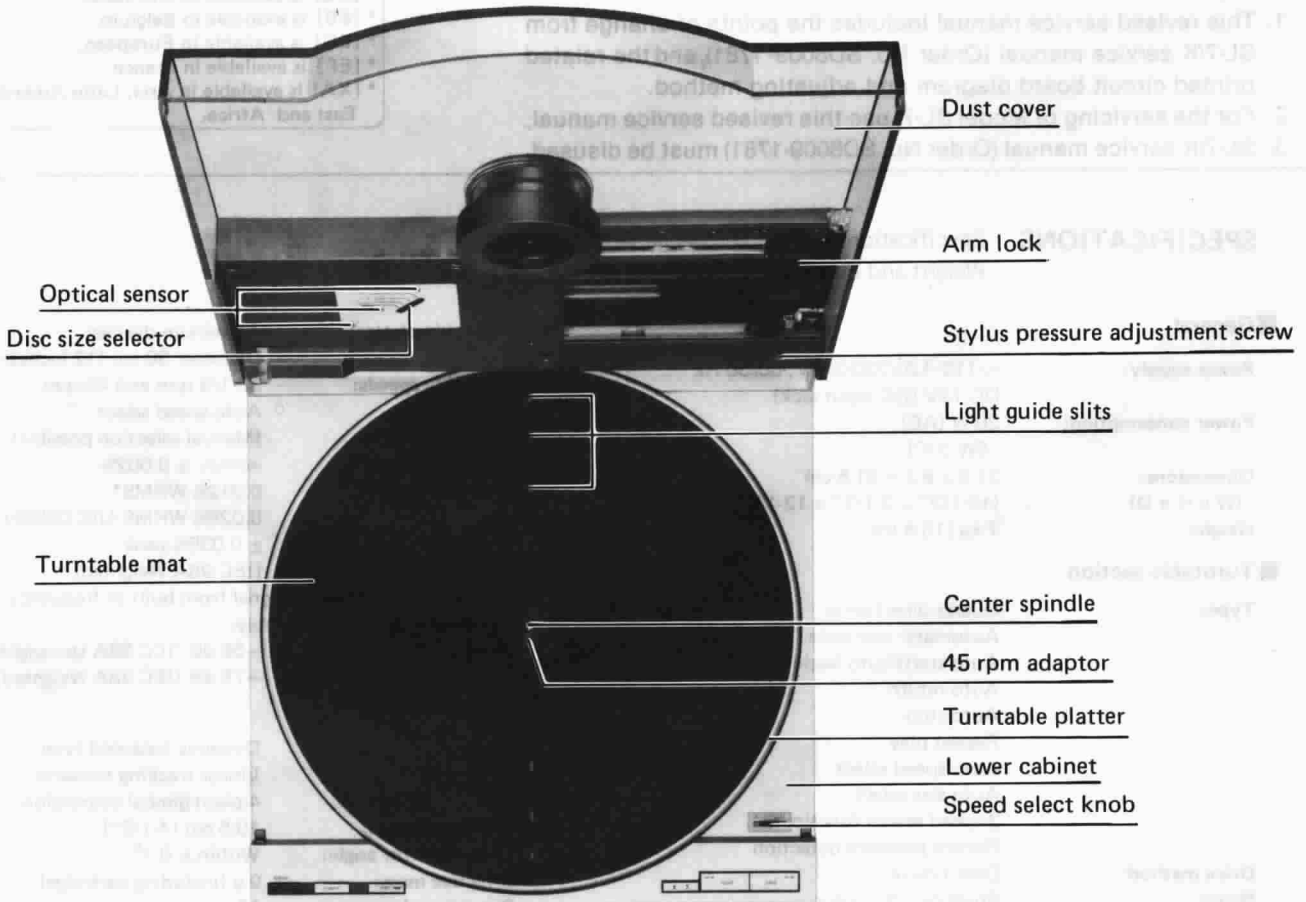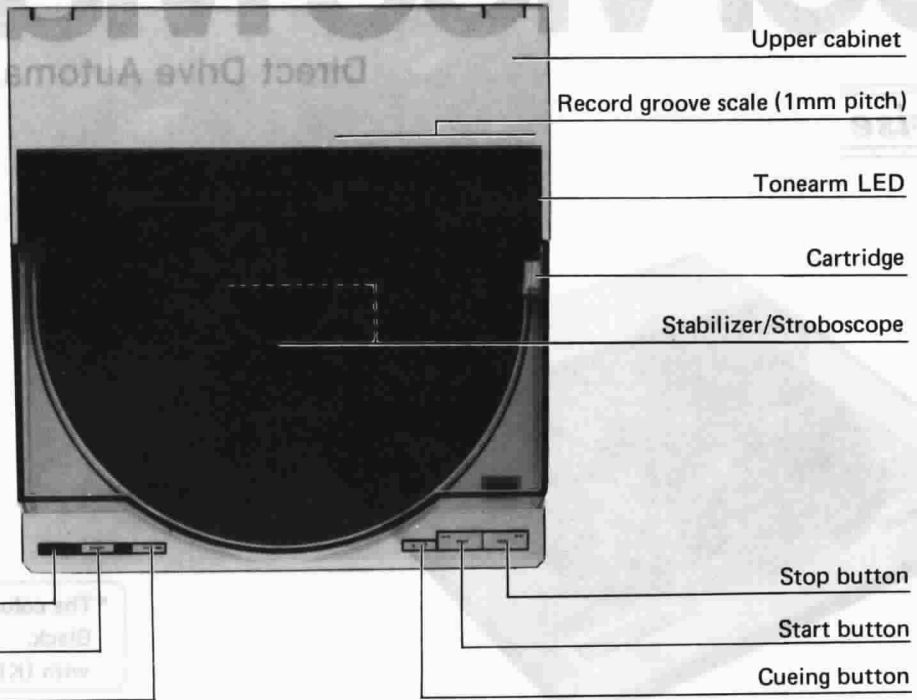

Hinge



Phono Cord

Insulator

AC Cord

DC input jack (for DC power supply)


Power select switch (S3)

Power switch (S1-1, 1-2)

Power P.C.B.

Power transformer (T1)

Cover switch (S305)

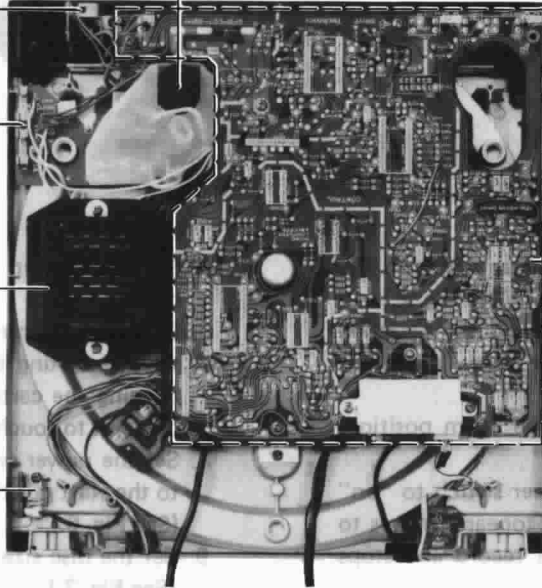

Main P.C.B.

End detect switch (S307)


Rest detect switch (S306)

Record size select shutter

Arm drive drum

Arm drive motor

Tonearm

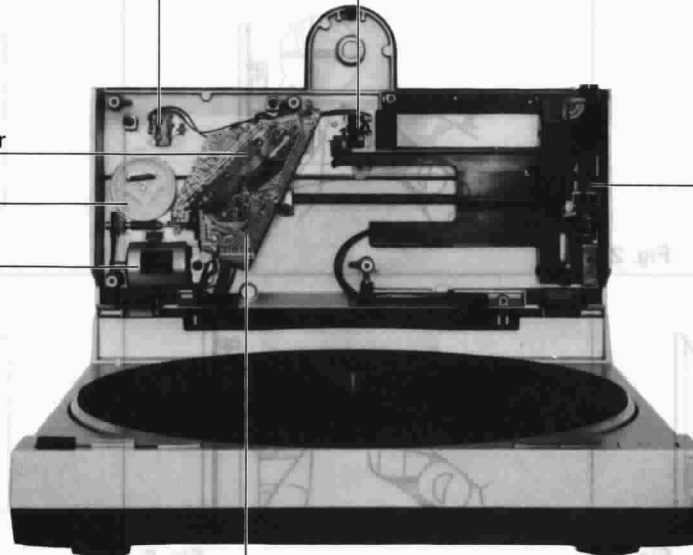

Disc size sensor P.C.B.

# ■ FEATURES

## 1. High performance direct drive unit the size of a record jacket

The SL-7 consists of an upper and lower cabinet. The upper cabinet is made of precision aluminum diecast to assure a high degree of accuracy and includes the linear tracking tonearm, tracking control circuitry and optical sensor.

The lower cabinet, made of zinc diecast to give the unit sufficient mass, holds Technics' original integral rotor/platter direct drive motor and its control circuitry. It's hard to believe that it all fits in a unit the size of a record jacket.

## 2. Just put on a record and press the start button.

Thanks to the optical sensor and microcomputer, both record size and record speed are detected automatically so all you have to do is press the start button to begin play.

At the end of the record, the tonearm automatically rises and returns to the start position.

When there is no record on the turntable, the tonearm does not move, so there is no danger of harming the stylus accidentally.

## 3. Dynamic balanced linear tracking tonearm employs optical sensor and groove deflection angle detection for extremely stable and accurate tracking

The linear tracking tonearm moves across the record surface in the same way as the cutter head used to make the record in the first place. Therefore there is virtually no tracking error or skating force.

Located by the stylus is an optical sensor that detects tracking conditions by means of groove deflection angle. Based on this information, tonearm movement is controlled to maintain optimum tracking at all times.

Because the tonearm is dynamically balanced, the turntable can be played horizontally or vertically.

## 4. Complete multi-function control capability.

Besides the simple, basic operating procedure described above, you also have complete selective control over all tonearm and turntable functions.

## 5. A precision coreless DC motor is used for tonearm drive to assure quiet and accurate control.

The coreless DC motor and slide bearing of minimum friction assure extremely precise tonearm movement.

A 4-point pivot bearing gimbal suspension developed by Technics reduces friction and raises sensitivity while contributing to smooth tracking ability.

## 6. MM cartridge with pure boron pipe cantilever and excellent physical characteristics for faithful sound reproduction

The SL-7 is equipped with the Technics developed EPC-100CMK2 cartridge with pure boron pipe cantilever, the first in the world. Boron greatly reduces the effective mass of the moving system while the one-point suspension system provides an accurately defined point of support. Technics original cartridge technology is employed throughout this cartridge to give you the rich, realistic sound you've always wanted.

## 7. Other advanced features:

- Technics' original integral rotor-platter structure combines motor rotor and platter for more stable performance.
- Full cycle detection FG servo with quartz phase locked control assures unbeatable rotational accuracy.
- Dial scale and tonearm LED indicator on outside of upper cabinet make it easy to check on tonearm position.
- Record stabilizer and stroboscope built-in.
- 45 rpm single-play adaptor is located in turntable platter for pop-up convenience.
- Can be run on either AC or DC (12V) current. DC adaptor optionally available for car battery use.

# DISASSEMBLY INSTRUCTIONS

## How to remove the bottom board and main P.C.B.

1. Turn over the unit and put it on a soft cloth cushion or the like so as not to damage the cabinet or the dust cover.
2. Remove the setscrews ① ~ ④ of the insulator and bottom board. Then the bottom board can be removed. (See photo 1.)
3. Remove the rear cover setscrews ⑤ and ⑥ to remove the rear cover. (See photo 2.)
4. Remove the setscrews ⑦ ~ ⑮ and connectors ⑯ ~ ⑰ of the main P.C.B.. Then the main P.C.B. can be removed. (See photo 3.)

\*When installing the main P.C.B. on the unit, make sure that the connector ⑱ (CN102) is engaged with the pin of the stator from.

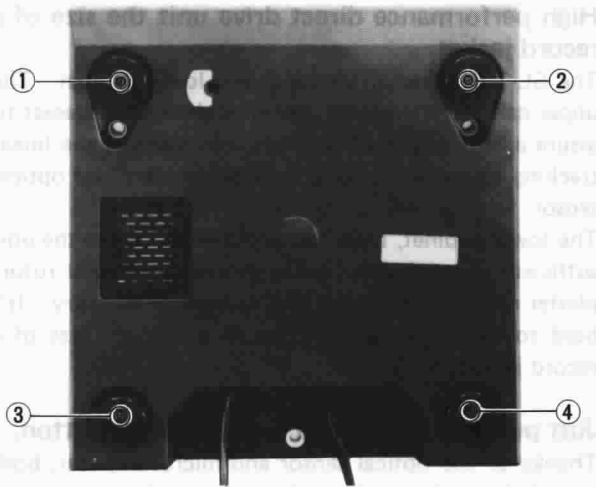


Photo 1

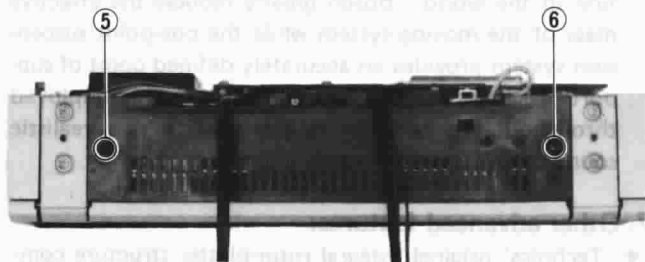


Photo 2

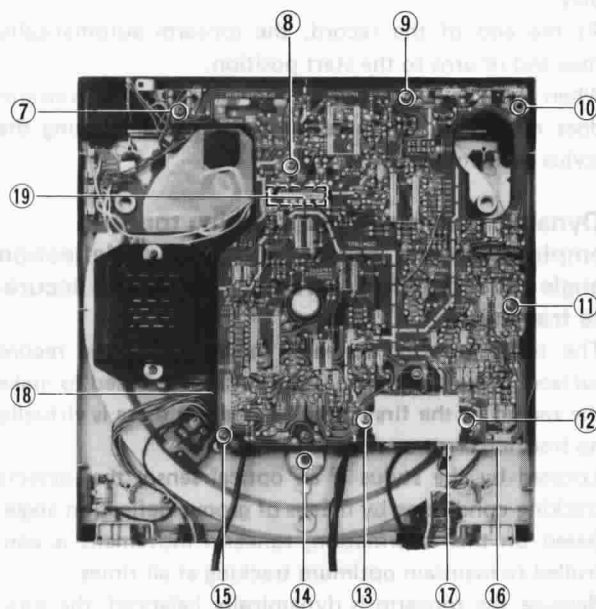


Photo 3

## How to remove the turntable

1. Holding the turntable by hand, remove the adapter 45 by turning it counterclockwise. (See photo 4.)
2. Remove the nut ⑳, washers ㉑ and ㉒ used to secure the turntable. (See Fig. 1.)
3. Set 3mm screw into the two holes provided near the center spindle of the turntable, and then lift the screws with both hands to remove the turntable. (See Fig. 1.)

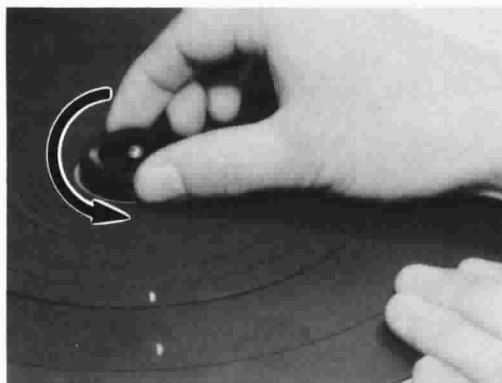


Photo 4

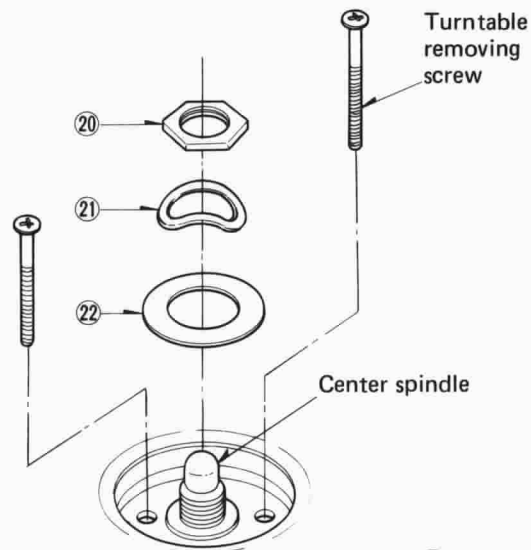


Fig. 1

### How to remove the stator frame

1. Remove the turntable. (Refer to "How to remove the turntable".)
2. Remove the main P.C.B. (Refer to "How to remove the bottom board and main P.C.B.".)
3. The stator frame can be removed by removing the set-screws 23 ~ 26. (See photo 5.)

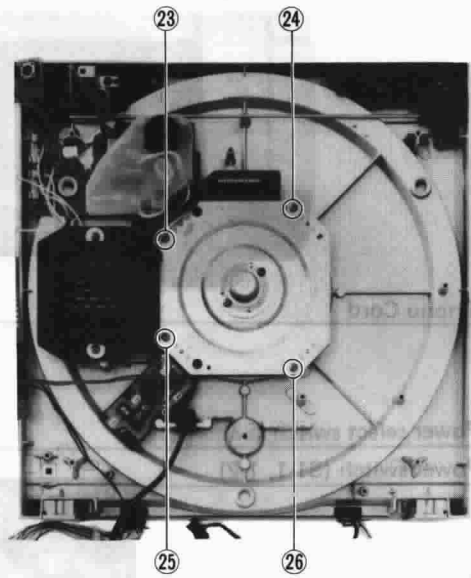


Photo 5

### How to remove the cartridge

1. Open the upper cabinet and turn the arm lock in the direction of arrow to lock the tonearm. (See Fig. 2.)
2. Loosen the cartridge setscrew by using the attached screwdriver. (Completely loosen the screw until it is feed as shown in Fig. 3.)
3. Set the disc size selector knob to the 25cm position. (See Fig. 4.)
4. Close the upper cabinet, set the power switch to "on" and push the start button, then the tonearm moves to the guide groove position for 25cm record and stops there.
5. Set the power switch to "off" and open the upper cabinet.
6. Draw out the cartridge. (See Fig. 5.)
7. When inserting the cartridge again, completely insert it aligning the cartridge pin to the connector while taking care not to touch the stylus.
8. Set the power switch to "on" to shift the tonearm back to the start position and then tighten the setscrew. (See Fig. 6.)
9. Set the disc size selector knob back to the **auto** position. (See Fig. 7.)

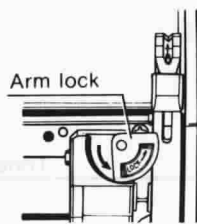


Fig. 2

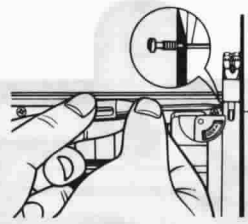


Fig. 3

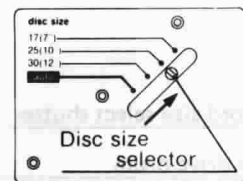


Fig. 4

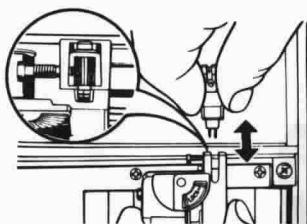


Fig. 5

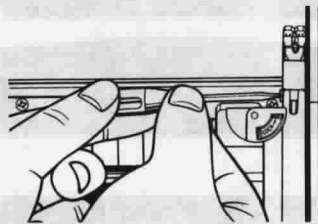


Fig. 6

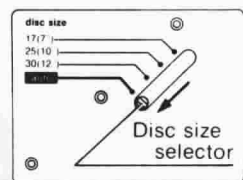


Fig. 7

## How to remove the dust cover and disc size sensor P.C.B.

1. Shift the tonearm inside and remove the cartridge.  
(Refer to "How to remove the cartridge".)
2. With the tonearm shifted inside, remove the dust cover setscrews 27 ~ 33. (Refer to photo 6.)
3. The dust cover can be removed by pulling it toward you while lifting it in the direction of the arrow.  
(See photo 6.)  
\*When removing the dust cover, be sure to lift it in the direction of the arrow because the part 34 is engaged with the dustcover.
4. The disc size sensor P.C.B. can be removed by removing the disc size sensor P.C.B. setscrew 35 and connector 36. (See photo 7.)

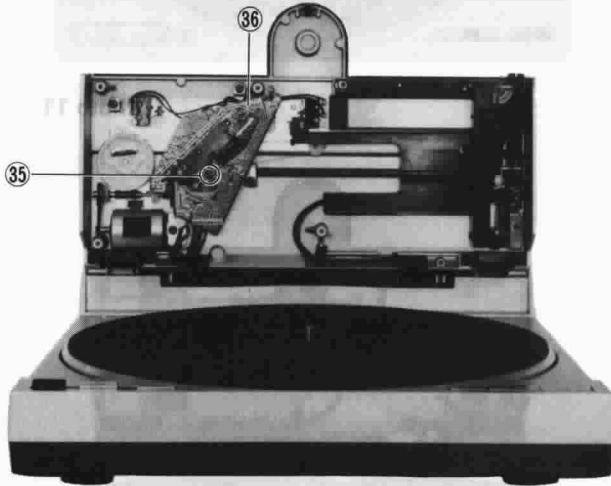


Photo 7

## How to remove the tonearm

1. Remove the dust cover. (Refer to "How to remove the dust cover".)
2. Remove the bottom board and rear cover, and connectors 16 ~ 18. (Refer to "How to remove the bottom board and main P.C.B.".)
3. Remove the hinge setscrews 37 ~ 40. Then the upper cabinet can be removed. (See photo 8.)
4. Remove the clamps 41 and 42 which secure the two connectors of the tonearm, and remove the disc size sensor P.C.B.
5. Remove the tonearm rope retaining part setscrews 43 and 44. Then the tonearm unit can be removed.  
(See photo 10.)

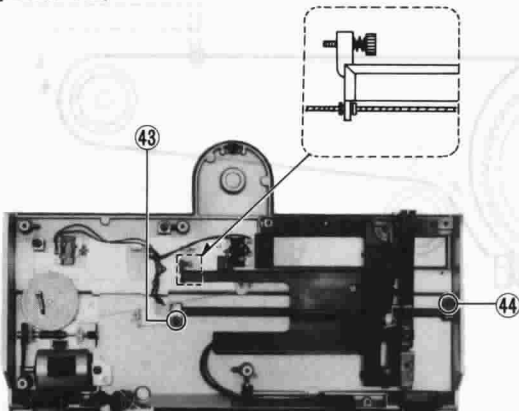


Photo 10

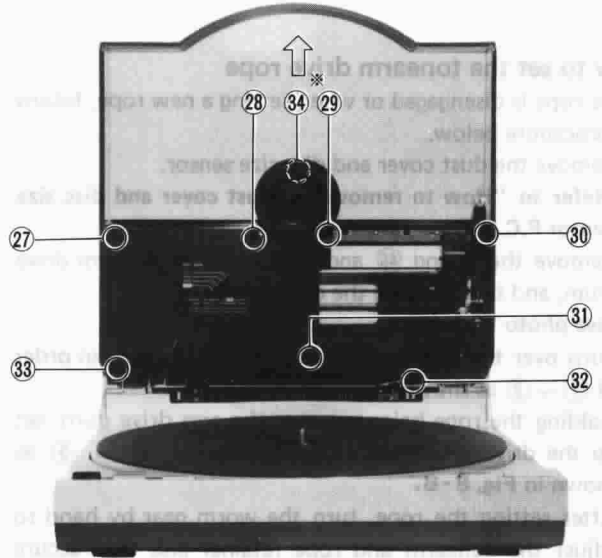
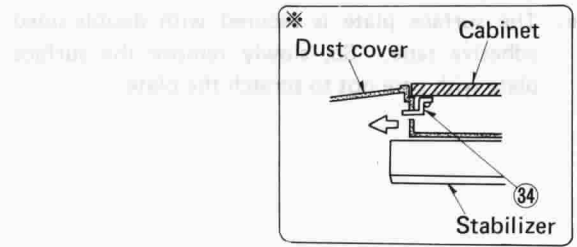


Photo 6

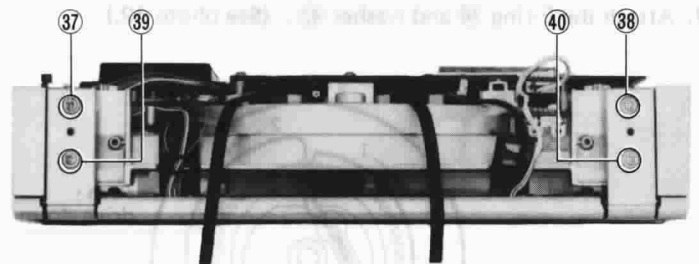


Photo 8






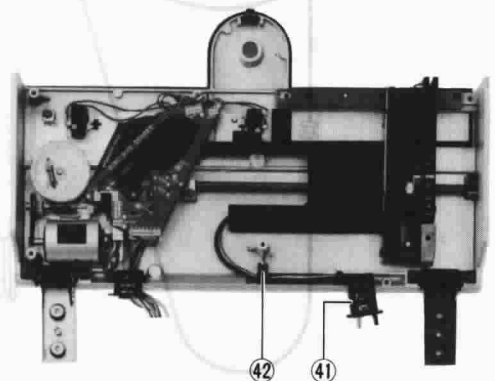



Photo 9

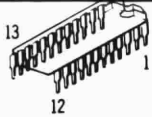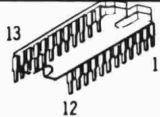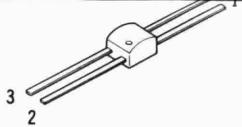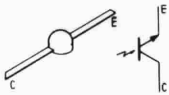

SVIM53217P  
SVIM53216P  
SVITC4069UBP

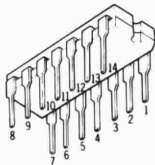

MN1400PA

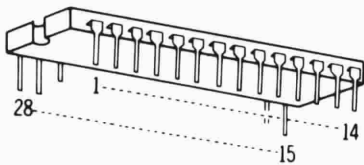

## REFERENCE VOLTAGE AND WAVEFORM AT EACH IC TERMINAL (PIN)

This indicated voltage values and waveform are measured by oscilloscope at 33rpm rotation.





### IC101 (AN6635)

	Stop	Start		Stop	Start		Stop	Start
①	11.2 V	11.2 V	⑨	0 V	1.0 V	⑰	0.6 V	
②	9.3 V	9.3 V	⑩	7.8 V	5.0 V	⑱		
③	11.2 V	11.2 V	⑪	5.0 V	5.0 V	⑳		
④	2.0 V	2.1 V	⑫	0 V	0 V	㉑		
⑤	2.0 V	2.1 V	⑬	11.8 V	11.8 V	⑲	0 V	0 V
⑥	2.0 V	2.1 V	⑭	11.2 V	11.2 V	㉒	0 V	0 V
⑦	2.1 V	2.1 V	⑮	11.8 V	11.7 V	㉓	3.2 V	3.2 V
⑧	0 V	0 V	⑯	11.2 V	11.1 V	㉔	2.5 V	2.5 V






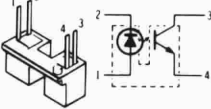
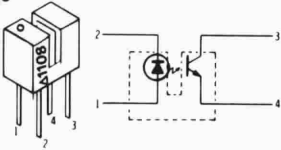
### IC201 (AN6680)

	Stop	Start		Stop	Start		Stop	Start
①	2.4 V	2.4 V	⑩	9.3 V	9.3 V	⑰	5.0 V	5.0 V
②		Same as at left	⑪		Same as at left	⑱	0 V	0 V
③			⑫	0 V		⑲	0.1 V	6.9 V
④		Same as at left	⑬	0.15 V		⑳	5.0 V	0.2 V
⑤			⑭			㉑	0.1 V	0.2 V
⑥	3.3 V	3.3 V	⑮			㉒	3.1 V	2.9 V
⑦	0 V	0 V	⑯	8.0 V		㉓	3.1 V	2.9 V
⑧	0 V	0 V	⑰	1.9 V	5.0 V	㉔	2.7 V	2.9 V

## NOTES:

1. **S1-1, S1-2:** Power switch in "on" position.
2. **S2:** AC – DC select switch in "AC" position.
3. **S3:** Power select switch in "220 – 240V" position.
4. **S201:** Speed select switch in "auto" position.
5. **S301-1, 301-2:** Start switch in "off" position. (not push condition).  
 \*◀◀... Moves inward (S301-1) ◀◀... Moves faster (S301-2)
6. **S302-1, 302-2:** Stop switch in "off" position. (not push condition).  
 \*▶▶... Moves outward (S302-1) ▶▶... Moves faster (S302-2)
7. **S303:** Cueing switch in "off" position (not push condition).
8. **S304:** Repeat switch in "off" position. (not push condition).
9. **S305:** Cover switch in "off" position.
10. **S306:** Start position switch in "off" position.
11. **S307:** Return position switch in "off" position.
12.  Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values depending on the internal impedance of the DC circuit tester.
13.  indicates that only parts specified by the manufacturer be used for safety.
14.  +  voltage line.

## ■ TERMINAL GUIDE OF TRANSISTORS AND IC'S

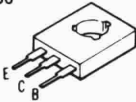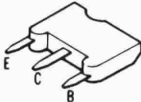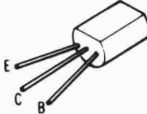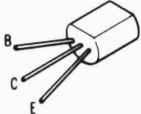2SC1846 2SC886 	2SB643, 2SB641 2SB636, 2SD638 	2SC1328 	2SC2385 
SVIUPC7812H SVIUPC78M05H 	ON1161 		ON1108 
SVTPH101	H-300A 4	AN6635 24	AN6680 24