



TOSHIBA

STEREO AMPLIFIER

SB-M22

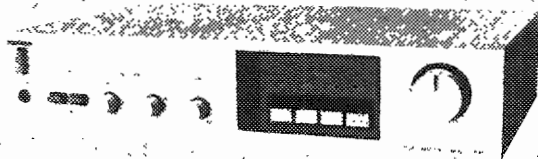

TE Model

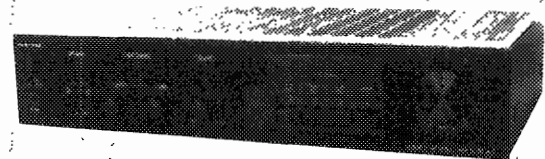


TA Model

SPECIFICATIONS

<p>■ General</p> <p>Power supply: AC 220V, 50 Hz (TE, FR) AC 240V, 50 Hz (TU, AY) AC 110 - 127/220 - 240V, 50/60 Hz (VF)</p> <p>Power consumption: 280W (TE, FR) 170W (TU, AY) 120W (TA, TC) 80W (VF)</p> <p>Weight: 4.7 kg</p> <p>Dimensions: 420(W) x 89(H) x 279(D)mm</p>		<p>Frequency response: 10 Hz ~ 100 kHz (± 3 dB) 30 Hz ~ 20 kHz ± 0.5 dB (RIAA equ.)</p> <p>Power band width (IHF): 10 Hz ~ 75 kHz (0.2% THD)</p> <p>Load impedance: 4Ω ~ 16Ω (TE, FR, VF) 8Ω ~ 16Ω (TU, AY, TA, TC)</p> <p>S/N (IHF A Network): 100 dB (TUNER/AUX) 73 dB (PHONO)</p> <p>Input sensitivity/impedance: PHONO 2.5mV/47kΩ TUNER 150 mV/27kΩ AUX/TAPE 150 mV/27kΩ</p> <p>Output level: TAPE REC 150 mV/3.3kΩ</p> <p>Tone control: BASS: (at 100 Hz) ± 9 dB TREBLE: (at 10 kHz) ± 9 dB</p> <p>Loudness control: + 9 dB (at 100 Hz, -30 dB)</p> <p>Phono overload level: 150mV (0.05% THD)</p>
<p>■ Amplifier</p> <p>Continuous power output:</p> <p>60 Hz ~ 12.5 kHz both ch. driven: 40W + 40W (8Ω IEC) (TE, FR, TU, AY, VF)</p> <p>20 Hz ~ 20 kHz both ch. driven: 35W + 35W (8Ω) (TA, TC)</p> <p>Total harmonic distortion:</p> <p>at rated output: 0.7% (TE, FR, TU, AY, VF) at rated output: 0.09% (TA, TC) at 1/2 rated output, 1 kHz: 0.03%</p>		

Specifications are subject to change without notice.

TE, FR, TU, AY, TA, TC, VF
 PRINTED IN JAPAN 22905296 April, 1984 

CONTENTS

1. PANEL FACILITIES	3
2. DISASSEMBLY INSTRUCTIONS	4
3. ELECTRICAL PART LOCATIONS (TE, FR, TU, AY Model)	5
4. SCHEMATIC DIAGRAM (TE, FR, TU, AY Model)	5
5. ELECTRICAL PARTS LOCATIONS (TA, TC, VF Model)	7
6. SCHEMATIC DIAGRAM (TA, TC, VF Model)	8
7. IDLE CURRENT ADJUSTMENTS	9
8. BLOCK DIAGRAM	9
9. EXPLODED VIEW CABINET	10
10. CABINET PARTS LIST	11
11. PARTS LIST	12 to 14

10. CABINET PARTS LIST

Symbol No.	Part No.	Description
		TE, FR, TU, AY, VF ~ (Silver) TA, TC ~ (Black)
301	22825341	Panel Ass'y (TE, TU, AY, VF)
301	22825342	Panel Ass'y (FR)
301	22825359	Panel Ass'y (TA, TC)
304	22824460	Knob Ass'y, Power (Silver)
304	22827003	Knob Ass'y, Power (Black)
305	22826413	Knob, Main Volume (Silver)
305	22884545	Knob, Main Volume (Black)
306	22826430	Knob, Treble/Bass (Silver)
306	22884541	Knob, Treble/Bass (Black)
307	22884517	Knob Ass'y, TAPE/CD/ TUNER/PHONO (Silver)
307	22824010	Knob Ass'y, TAPE/CD/ TUNER/PHONO (Black)
308	22884518	Knob, Speaker (Silver)
308	22884564	Knob, Speaker (Black)
309	22826431	Knob, Balance (Silver)
309	22826433	Knob, Balance (Black)
310	22884521	Knob, Loudness (Silver)
310	22884546	Knob, Loudness (Black)
312	22841391	Top Cover (TE, AY, FR)
312	22841043	Top Cover (TU, VF)
312	22841499	Top Cover (TA, TC)
313	22841437	Jack Plate (TE)
313	22841439	Jack Plate (TU, AY)
313	22841438	Jack Plate (FR)
313	22841441	Jack Plate (TA, TC)
313	22841440	Jack Plate (VF)
314	22848041	Cord Bush
315	22828090	Foot, Left
316	22821091	Foot, Right
317	22705026	Plastic Rivet, $\phi 3 \times 6$ mm
318	22701482	Screw, $\phi 3 \times 6$ mm, PAN
319	22707327	Screw, $\phi 3 \times 8$ mm, BID Tapping
320	22707911	Screw, $\phi 3 \times 8$ mm, BID Tapping, Black
321	22701237	Screw, $\phi 3 \times 6$ mm
323	22707269	Screw, $\phi 4 \times 10$ mm, Tapping
324	22708058	Screw, Ground

Symbol No.	Part No.	Description

11. PARTS LIST

CAUTION:

The \triangle mark, the symbol No. circled with rectangle in the schematic diagram and the shaded area in the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list.

Symbol No.	Part No.	Description	Symbol No.	Part No.	Description																																																									
IC'S, TRANSISTORS & DIODES			AMPLIFIER UNIT																																																											
AMPLIFIER UNIT			CAPACITORS																																																											
IC1	22117271	IC, LA6458SS	D = $\pm 0.5\text{pF}$, J = $\pm 5\%$, K = $\pm 10\%$, M = $\pm 20\%$, Z = $-20 \sim +80\%$, P = $-0 \sim +100\%$ ABBREVIATIONS: CD = Ceramic Disk, EL = Electrolytic, MY = Mylar, PP = Polypropylene																																																											
Q1, 2, 3, 4	22117256	Transistor, 2SA992-F/E	AMPLIFIER UNIT																																																											
Q5, 6, 7, 8	22117262	Transistor, 2SC1845-F/E	C1, 2	22362221	CD, 220pF, 50V, J (TE, FR, TU, AY)																																																									
Q9, 10	22117284	Transistor, 2SC1845-E	C1, 2	22362101	CD, 100pF, 50V, J (VF)																																																									
Q11, 12	22117321	Transistor, 2SC3244-D/E	C3, 4	22448339	EL, 3.3mfd, 50V																																																									
Q13, 14	22117320	Transistor, 2SA1284-D/E	C5, 6	22349222	CD, 2200pF, 50V, J (TE, FR, TU, AY)																																																									
Q15, 16	22117257	Transistor, 2SA1102-O/Y (TE, FR, AY, VF)	C5, 6	22362101	CD, 100pF, 50V, K (VF)																																																									
Q15, 16	22117341	Transistor, 2SA1104-O/Y (TU)	C7, 8	22483470	EL, 47mfd, 10V																																																									
Q17, 18	22117265	Transistor, 2SC2577-O/Y (TE, FR, AY, VF)	C9, 10	22371332	MY, 3300pF, 50V, J																																																									
Q17, 18	22117342	Transistor, 2SC2579-O/Y (TU)	C11, 12	22371123	MY, 0.012mfd, 50V, J																																																									
Q21	22117262	Transistor, 2SC1845-F/E	C13, 14	22488339	EL, 3.3mfd, 50V																																																									
D6, 7	22115882	Diode, 1S2076A	C15, 16	22446100	EL, 10mfd, 25V																																																									
D8	22115894	Diode, W06B	<table border="1"> <thead> <tr> <th>Symbol No.</th> <th>Part No.</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>S01</td> <td>22196329</td> <td>Push Switch, Power</td> </tr> <tr> <td>S02</td> <td>22196336</td> <td>Slide Switch, Voltage (VF)</td> </tr> <tr> <td>F1</td> <td>22144474</td> <td>Fuse, T1, 5A, 250V (TE, FR, TU, AY)</td> </tr> <tr> <td>F1</td> <td>22144529</td> <td>Fuse, 3A, 250V (TA, TC)</td> </tr> <tr> <td>F1</td> <td>22144475</td> <td>Fuse, 1.5A, 250V, (VF)</td> </tr> <tr> <td>F2</td> <td>22144476</td> <td>Fuse, 3A, 250V (VF)</td> </tr> <tr> <td>J02</td> <td>22198061</td> <td>Jack, 4P, Tape Deck Terminals</td> </tr> <tr> <td>J04</td> <td>22198054</td> <td>Jack, 6P, Input Terminals</td> </tr> <tr> <td>J05</td> <td>22198056</td> <td>Jack, Headphones, $\phi 6$</td> </tr> <tr> <td>J07</td> <td>22162522</td> <td>Speaker Terminals 8P</td> </tr> <tr> <td>J08</td> <td>22189040</td> <td>AC Outlet (TA, TC, VF)</td> </tr> <tr> <td>EP01</td> <td>22176286</td> <td>Power Cord (TE, FR)</td> </tr> <tr> <td>EP01</td> <td>22176628</td> <td>Power Cord (TU)</td> </tr> <tr> <td>EP01</td> <td>22176588</td> <td>Power Cord (AY)</td> </tr> <tr> <td>EP01</td> <td>22176573</td> <td>Power Cord (TA, TC)</td> </tr> <tr> <td>EP01</td> <td>22176608</td> <td>Power Cord (VF)</td> </tr> <tr> <td>EP02</td> <td>22165036</td> <td>Fuse Holder (TE, TU, FR, AY, TA, TC)</td> </tr> <tr> <td>EP03</td> <td>22165093</td> <td>Fuse Holder (VF)</td> </tr> </tbody> </table>			Symbol No.	Part No.	Description	S01	22196329	Push Switch, Power	S02	22196336	Slide Switch, Voltage (VF)	F1	22144474	Fuse, T1, 5A, 250V (TE, FR, TU, AY)	F1	22144529	Fuse, 3A, 250V (TA, TC)	F1	22144475	Fuse, 1.5A, 250V, (VF)	F2	22144476	Fuse, 3A, 250V (VF)	J02	22198061	Jack, 4P, Tape Deck Terminals	J04	22198054	Jack, 6P, Input Terminals	J05	22198056	Jack, Headphones, $\phi 6$	J07	22162522	Speaker Terminals 8P	J08	22189040	AC Outlet (TA, TC, VF)	EP01	22176286	Power Cord (TE, FR)	EP01	22176628	Power Cord (TU)	EP01	22176588	Power Cord (AY)	EP01	22176573	Power Cord (TA, TC)	EP01	22176608	Power Cord (VF)	EP02	22165036	Fuse Holder (TE, TU, FR, AY, TA, TC)	EP03	22165093	Fuse Holder (VF)
Symbol No.	Part No.	Description																																																												
S01	22196329	Push Switch, Power																																																												
S02	22196336	Slide Switch, Voltage (VF)																																																												
F1	22144474	Fuse, T1, 5A, 250V (TE, FR, TU, AY)																																																												
F1	22144529	Fuse, 3A, 250V (TA, TC)																																																												
F1	22144475	Fuse, 1.5A, 250V, (VF)																																																												
F2	22144476	Fuse, 3A, 250V (VF)																																																												
J02	22198061	Jack, 4P, Tape Deck Terminals																																																												
J04	22198054	Jack, 6P, Input Terminals																																																												
J05	22198056	Jack, Headphones, $\phi 6$																																																												
J07	22162522	Speaker Terminals 8P																																																												
J08	22189040	AC Outlet (TA, TC, VF)																																																												
EP01	22176286	Power Cord (TE, FR)																																																												
EP01	22176628	Power Cord (TU)																																																												
EP01	22176588	Power Cord (AY)																																																												
EP01	22176573	Power Cord (TA, TC)																																																												
EP01	22176608	Power Cord (VF)																																																												
EP02	22165036	Fuse Holder (TE, TU, FR, AY, TA, TC)																																																												
EP03	22165093	Fuse Holder (VF)																																																												
D9, 10	22115539	Diode, RD18E-B2																																																												
D11, 12	22115886	Diode, GP20DL																																																												
D13, 14																																																														
INDICATORS UNIT																																																														
D1, 2	22115971	Diode, LN21CPH, LED, RED																																																												
D3, 4, 5	22119045	Diode, LN31YCPH, LED UMBER																																																												
ELECTRICAL PARTS																																																														
L1, 2	22210188	Coil (TE, TU, FR, AY)																																																												
\triangle T1	22224266	Power Transformer (TE, FR)																																																												
\triangle T1	22224267	Power Transformer (TU)																																																												
\triangle T1	22224268	Power Transformer (AY)																																																												
\triangle T1	22224366	Power Transformer (TA, TC)																																																												
\triangle T1	22224269	Power Transformer (VF)																																																												
S1	22196331	Push Switch, Function TAPE/CD/TUNER/PHONO																																																												
S2	22196332	Push Switch, Loudness																																																												
S3	22196491	Push Switch, Speaker A/B																																																												

Symbol No.	Part No.	Description
C17, 18, 19, 20, 21, 22	22349561	CD, 560pF, 50V, K (TE, FR, TU, AY)
C23, 24	22371333	MY, 0.033mfd, 50V, J
C25, 26	22488109	EL, 1mfd, 50V
C27, 28	22362221	CD, 220pF, 50V, J
C29, 30	22486100	EL, 10mfd, 25V
C31, 32	22487101	EL, 100mfd, 35V (TE, FR, TU, AY, VF)
C31, 32	22488101	EL, 100mfd, 50V (TA, TC)
C33, 34	22362271	CD, 270pF, 50V, J
C35, 36	22349102	CD, 1000pF, 50V, K
C37, 38	22361220	CD, 22pF, 50V, J
C39, 40	22446100	EL, 10mfd, 25V
C41, 42	22483470	EL, 47mfd, 10V
C43, 44	22486330	EL, 33mfd, 25V
C45, 46	22321240	MY, 0.12mfd, 50V, J (TE, FR, TU, AY)
C45, 46	22371563	MY, 0.056mfd, 50V, J (VF)
C47, 48	22321240	MY, 0.12mfd, 50V, J (TE, FR, TU, AY)
C49, 50	22371333	MY, 0.033mfd, 50V, J
C51, 52	22371682	MY, 6800pF, 50V, J
C53, 54	22371683	MY, 0.068mfd, 50V, J
C55, 56	22371153	MY, 0.015mfd, 50V, J
C59, 60	22361220	CD, 22pF, 50V, J (TE, FR, TU, AY)
C61, 62	22447479	EL, 4.7mfd, 35V
C65, 66, 67, 68, 69, 70, 71, 72	22349472	CD, 4700pF, 50V, K (TE, FR, TU, AY)
C107, 108	22485100	EL, 10mfd, 25V
C109, 110	22440644	EL, 4700mfd, 44V
C111, 112	22342103	CD, 0.01mfd, 50V, Z
C113	22447220	EL, 22mfd, 35V
C114	22487330	EL, 33mfd, 35V
C115	22447470	EL, 47mfd, 35V
C117	22447220	EL, 22mfd, 35V
C301	22342103	CD, 0.01mfd, 50V, Z
△ C302	22340147	CD, 0.01mfd, 400V, P (TE, FR, TU, AY)
OTHERS		
△ C01	22340147	CD, 0.01mfd, 400V, P (TA, TC)
△ C01	22340172	CD, 0.01mfd, 250V, Z (VF)

Symbol No.	Part No.	Description
RESISTORS		
All resistors are carbon film, 1/4W, ±5% unless otherwise noted. 1K ohm = 1000 ohm		
AMPLIFIER UNIT		
R1, 2	22545102	1K ohm (TE, FR, TU, AY)
R1, 2	22545100	10 ohm (VF)
R3, 4	22545101	100 ohm (TE, FR, TU, AY)
R3, 4	22545100	10 ohm (VF)
R5, 6	22545473	47K ohm
R7, 8	22540695	430 ohm
R9, 10	22545223	22K ohm
R11, 12	22545274	270K ohm
R13, 14	22545683	68K ohm
R15, 16	22545332	3.3K ohm
R17, 18	22545101	100 ohm
R25, 26	22545822	8.2K ohm
R27, 28	22545102	1K ohm
R29, 30	22545104	100K ohm
R31, 32	22545272	2.7K ohm
R33, 34	22545272	2.7K ohm
R35, 36	22545682	6.8K ohm
R37, 38	22545103	10K ohm
R39, 40	22545682	6.8K ohm
R41, 42	22545221	220 ohm
R43, 44	22545151	150 ohm
R45, 46	22545820	82 ohm
R47, 48	22540731	13K ohm
R49, 50	22540714	240K ohm
R51, 52	22545184	180K ohm
R53, 54	22545103	10K ohm
R55, 56	22545472	4.7K ohm
R57, 58	22540699	20K ohm
R59, 60	22540697	910 ohm
R61, 62	22545683	68K ohm
R63, 64	22545823	82K ohm
R65, 66	22545181	180 ohm
R67, 68	22545181	180 ohm
R69, 70, 71, 72	22570596	0.22 ohm, 5W, Wire Wound
R73, 74	22570250	10 ohm, 1W, Metal Oxide Film
R75, 76	22545272	2.7K ohm
R77, 78	22540696	750 ohm
R79, 80	22540731	13K ohm
R81, 82	22545242	2.4K ohm
R83, 84	22545229	2.2 ohm (TE, FR, TU, AY)
R85, 86	22570267	270 ohm, 1W, Metal Oxide Film
R91, 92	22540733	1.1K ohm
R93, 94, 95, 96	22545100	10 ohm (TE, FR, TU, AY)

TOSHIBA

Consumer Product Service Bulletin

PRODUCT: Audio

FILE NO.: AU87-026


MODEL: SB-M22

DATE: April 1987

SYMPTOM: Incorrect idling current of the sound output.

CORRECTIVE

ACTION: The circuit has been modified, as illustrated below, to correct the idling current of the sound output since Nov. 1984 production (Serial No. 4Y*****)

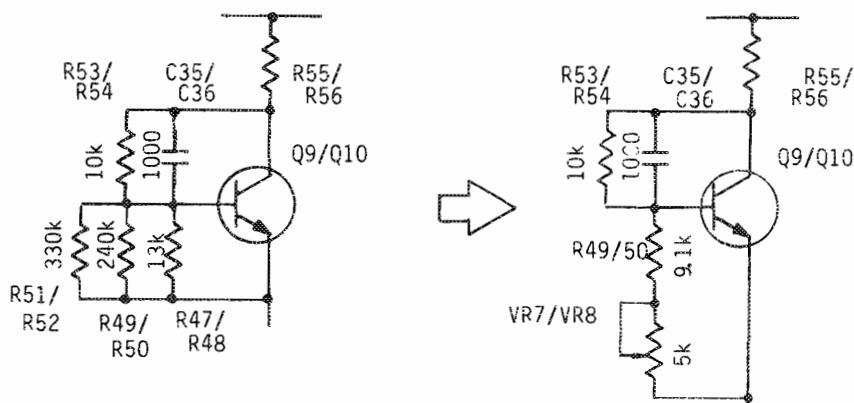

<u>LOCATION NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
R49/50	22540748	Resistor, 9.1k, 1/8W
VR7/VR8	22658602	Variable Resistor, 5k

Adjustment Procedure
(Left Channel)

- * Adjust VR7 so that idle current is 50mA (Voltage 22mV)
(Right Channel)
- * Adjust VR8 so that idle current is 50 mA (Voltage 22mV)
between TP-13 and tp-15.

TOSHIBA AMERICA INC.

CONSUMER PRODUCT


82 TOTOWA ROAD, WAYNE, N.J. 07470

IN TOUCH WITH TOMORROW

PAGE 1 / 1

6. SCHEMATIC DIAGRAM

(TA, TC, VF Model)

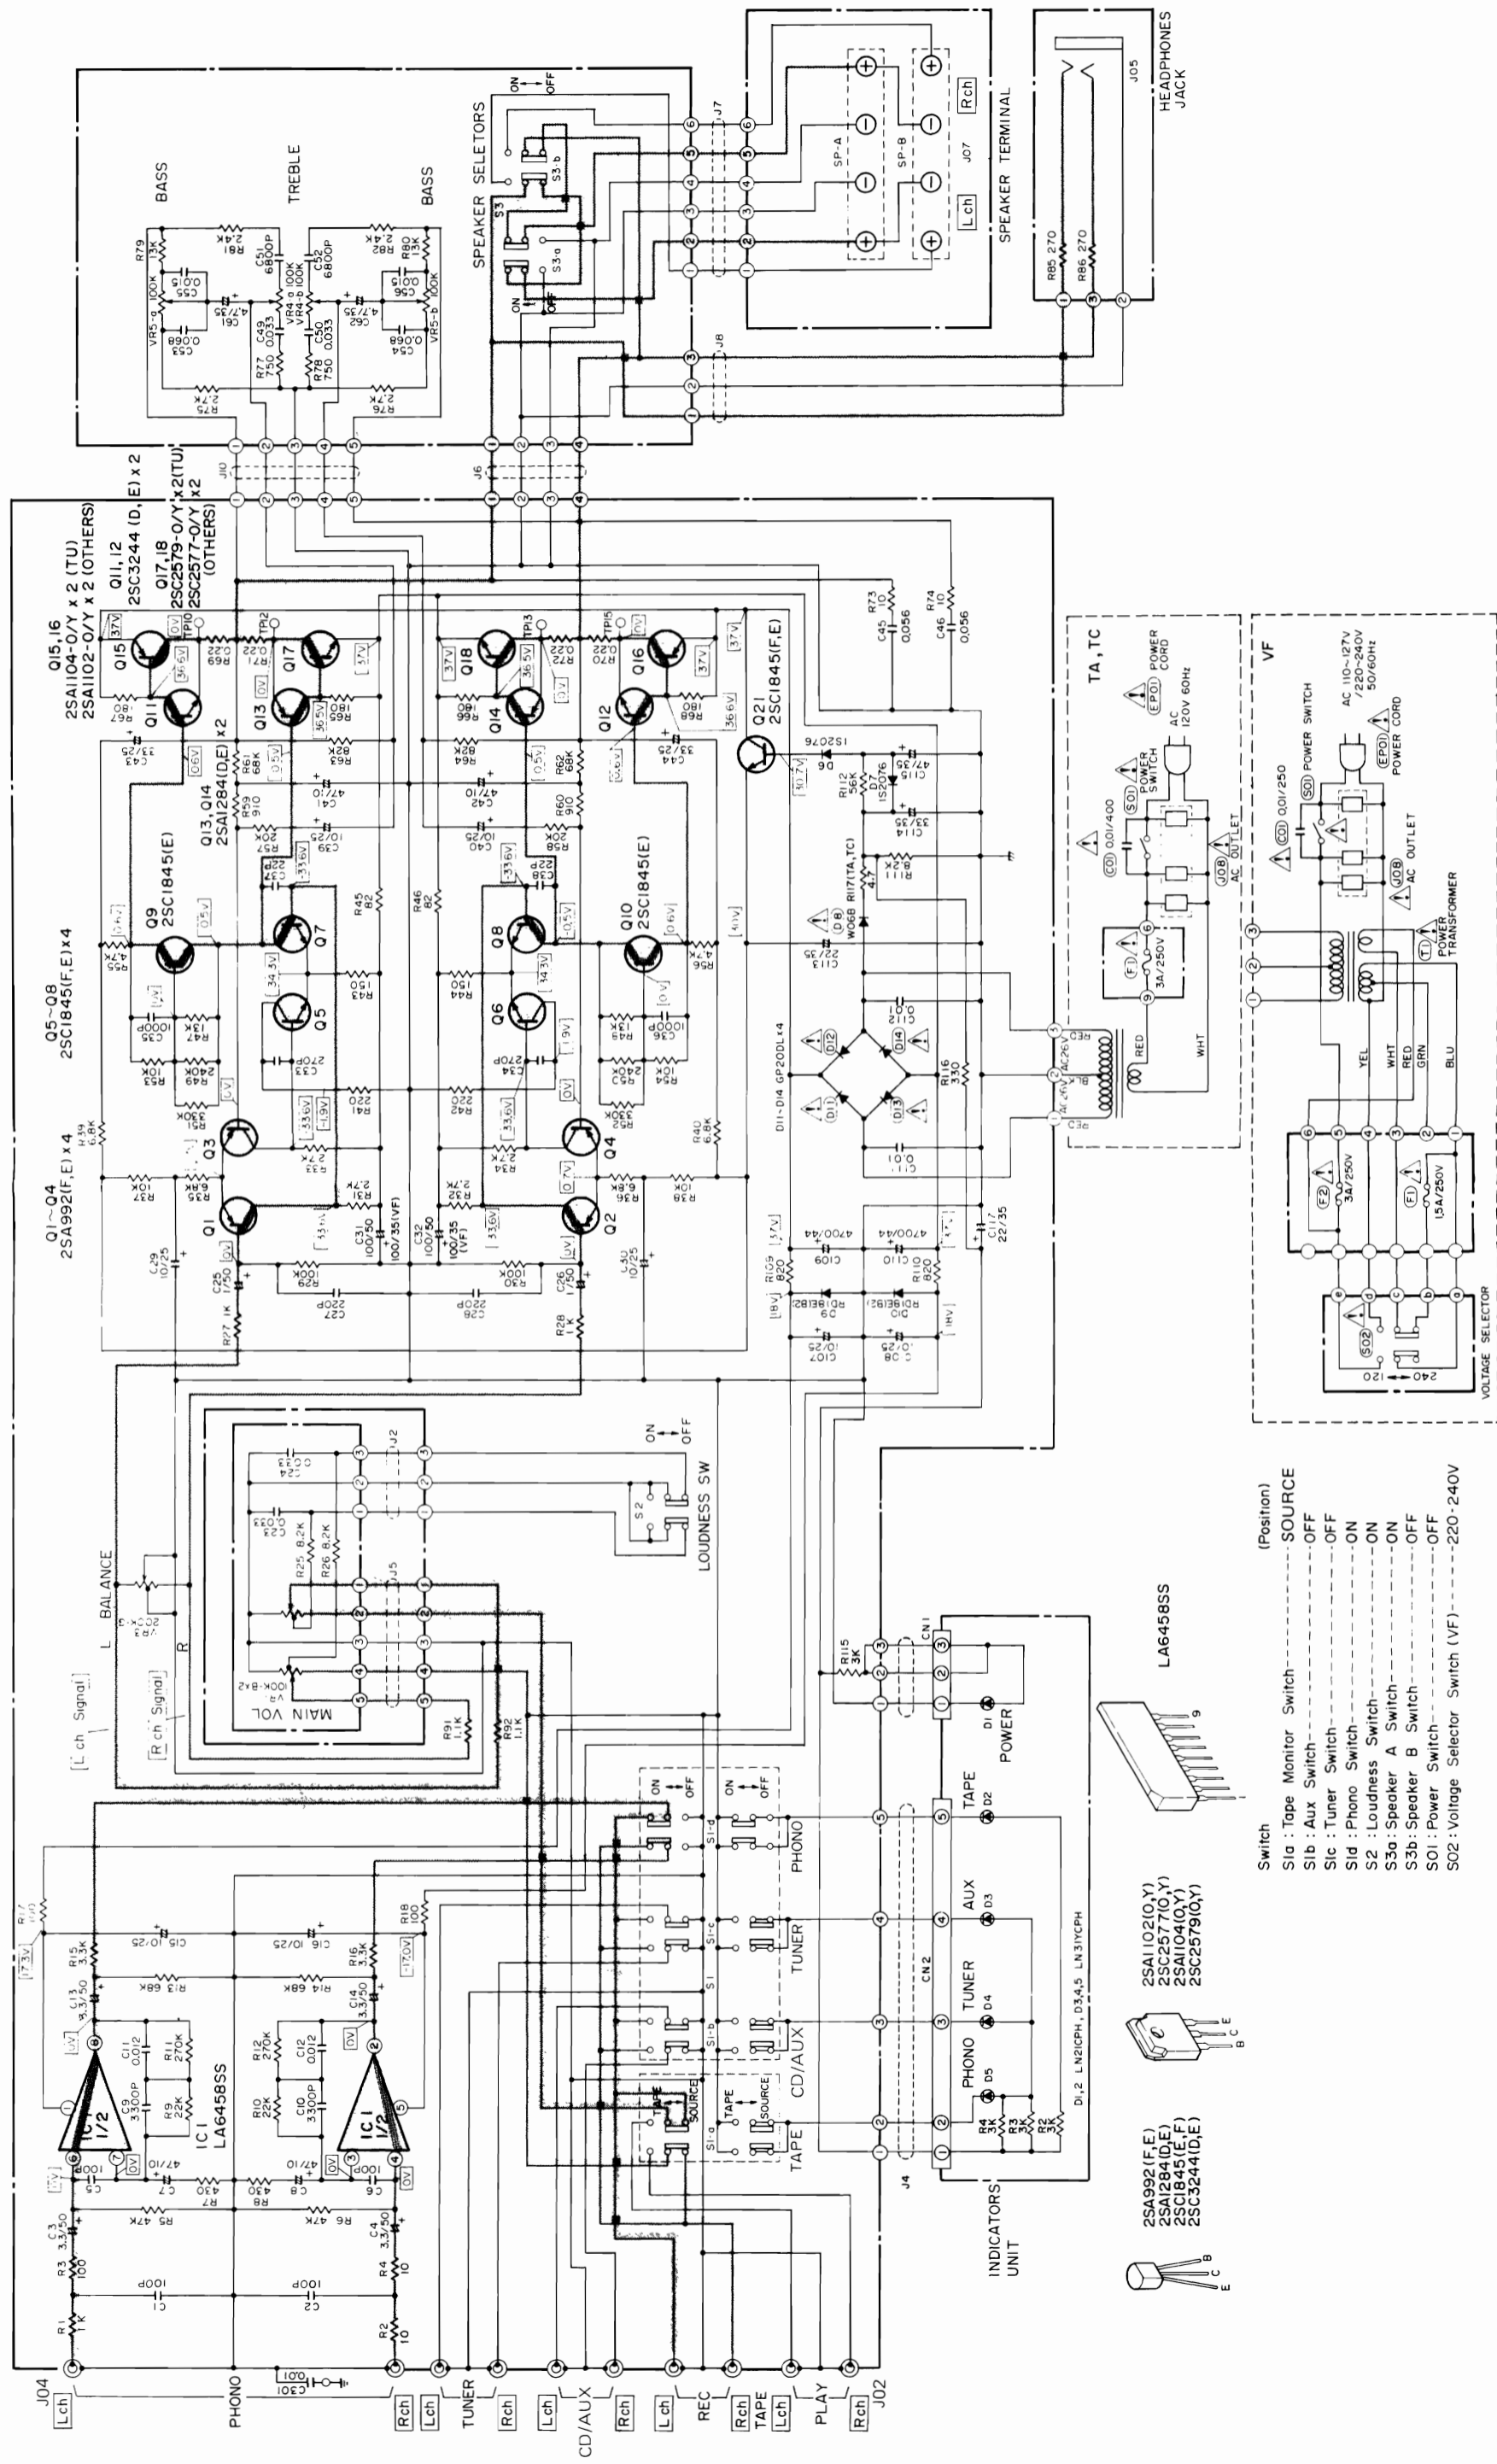

- Switch (Position) SOURCE
- S1a : Tape Monitor Switch ----- OFF
 - S1b : Aux Switch ----- OFF
 - S1c : Tuner Switch ----- ON
 - S1d : Phono Switch ----- ON
 - S2 : Loudness Switch ----- ON
 - S3a : Speaker A Switch ----- ON
 - S3b : Speaker B Switch ----- OFF
 - S01 : Power Switch ----- OFF
 - S02 : Voltage Selector Switch (VF) ----- 220-240V

Figure 14 CAUTION:
 The Δ mark, the symbol No. circled with oval in the schematic diagram and the shaded area in the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list.

7. IDLE CURRENT ADJUSTMENTS

(Left Channel)

Adjust the equivalent resistance value of R47, R49 and R51 so that idle current is 50 mA (voltage 22 mV) between TP10 and TP12 of TEST POINTS.

(Right Channel)

Adjust the equivalent resistance value of R48, R50 and R52 so that idle current is 50 mA (voltage 22 mV) between TP13 and TP15 of TEST POINTS.

As you adjust equivalent resistance value smaller, idle current will increase, and as you adjust equivalent resistance value bigger, idle current will decrease.

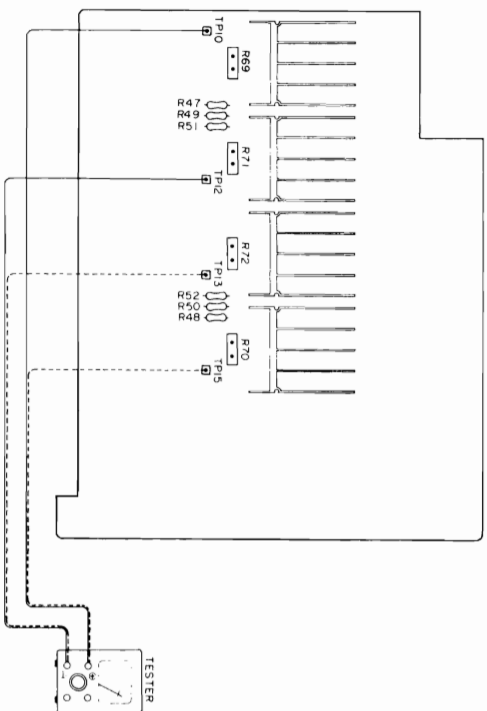


Figure 15

8. BLOCK DIAGRAM

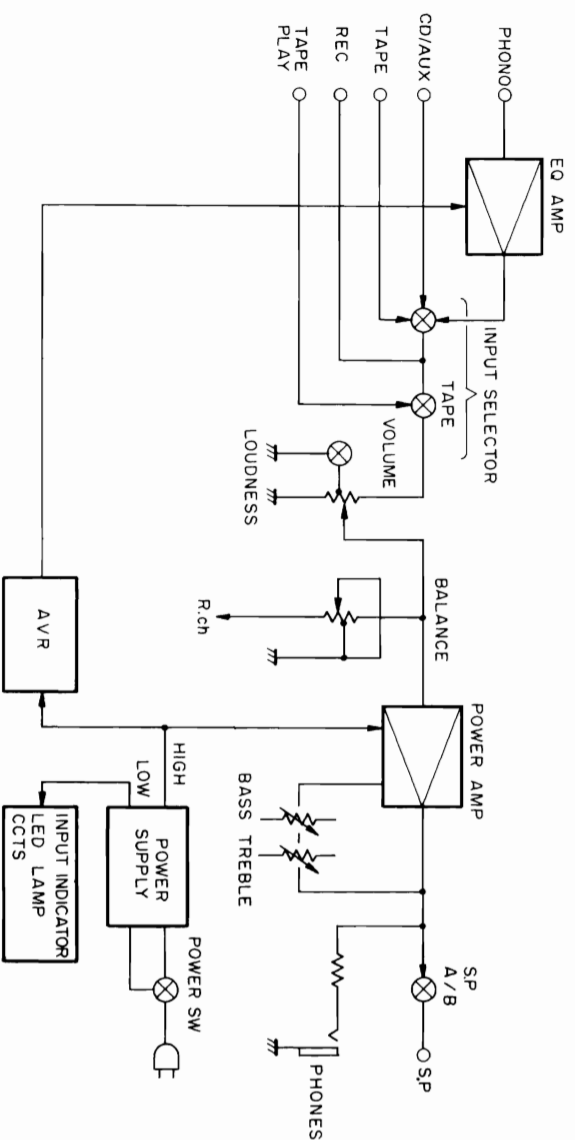


Figure 16

9. EXPLODED VIEW CABINET


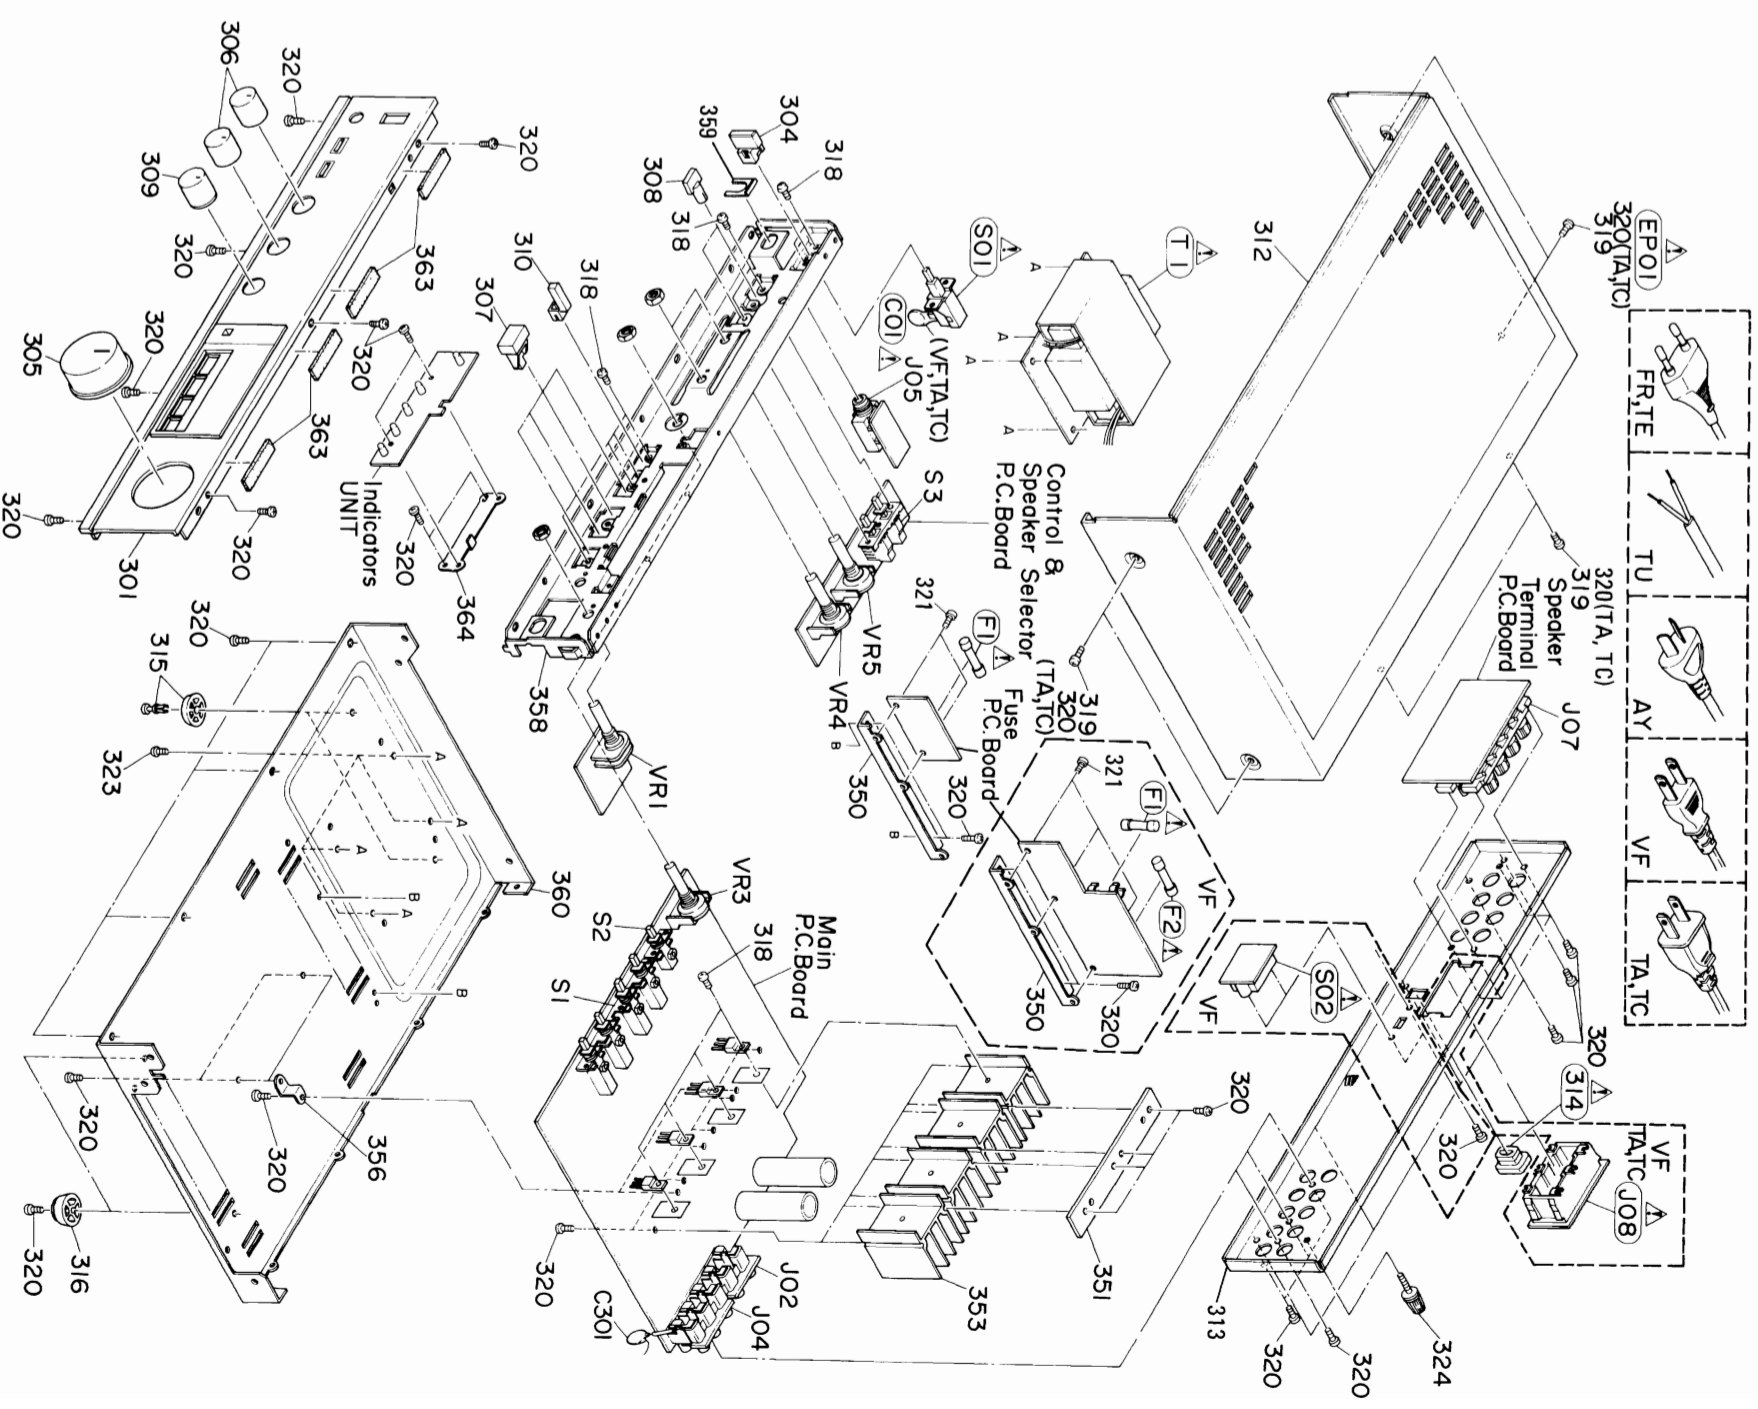


Figure 17 NOTE: Parts excluded in the parts list are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering they items.

4. SCHEMATIC DIAGRAM

(TE, FR, TU, AY Model)

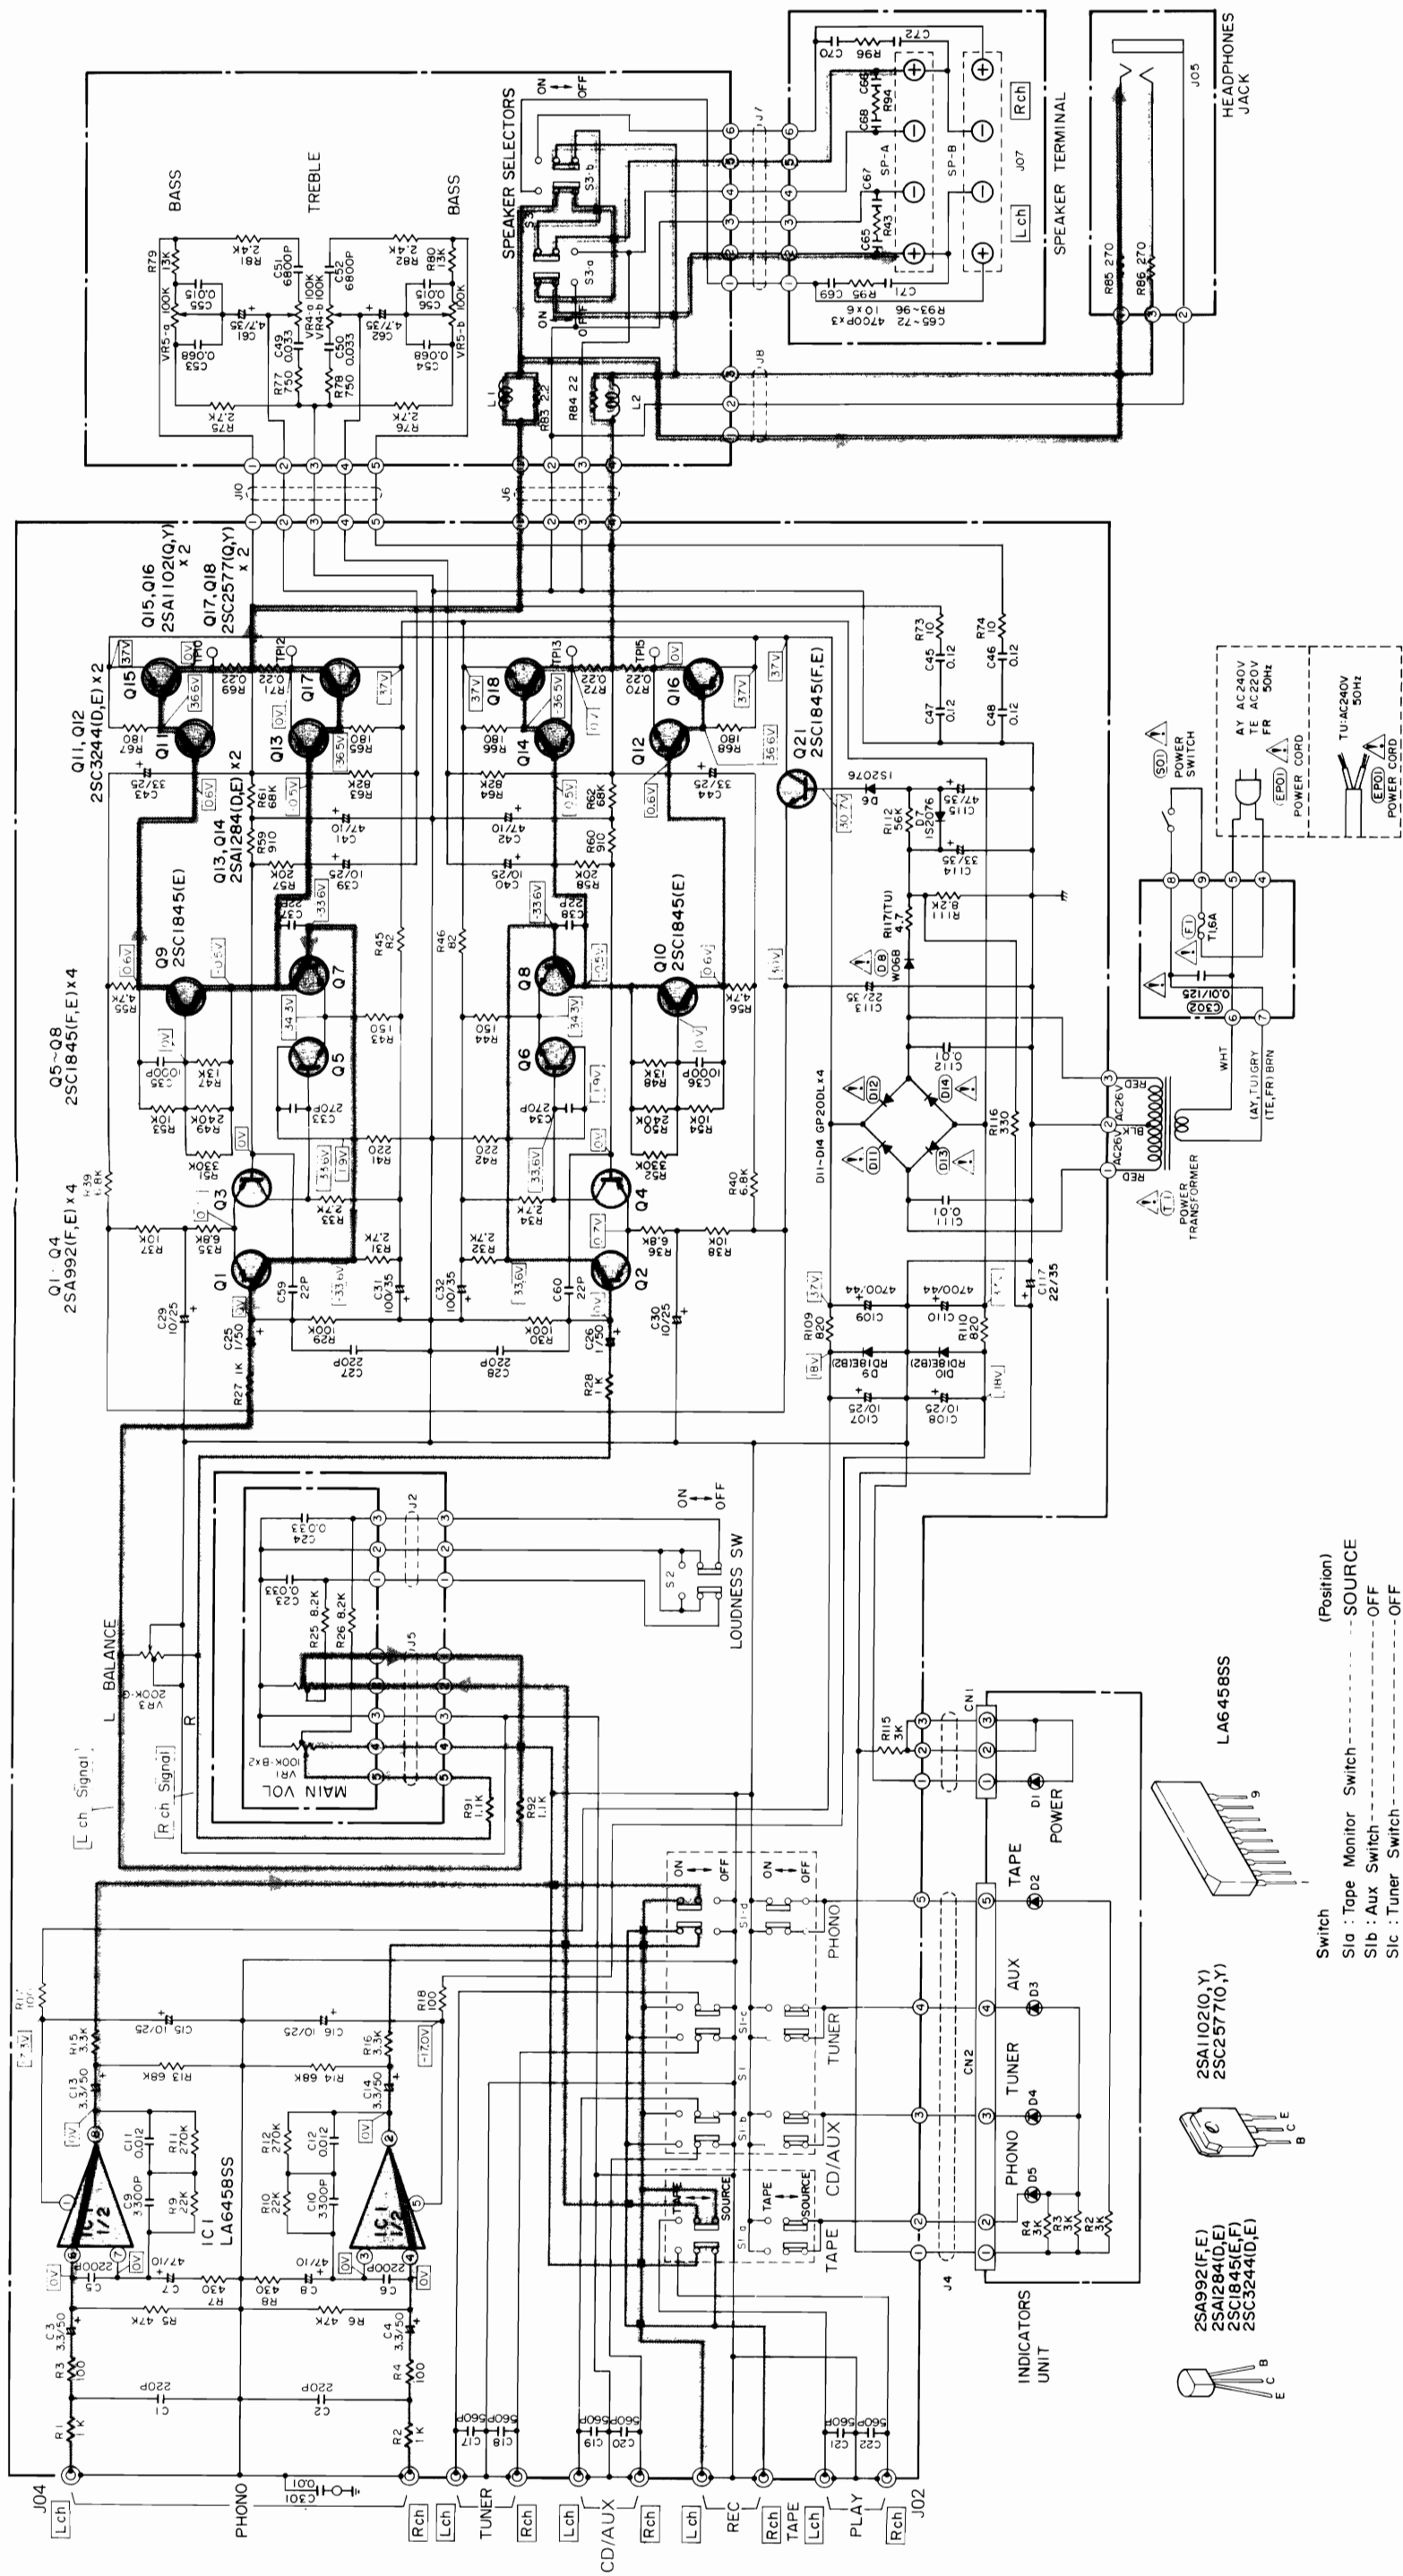

- Switch (Position)
- S1a : Tape Monitor Switch ----- SOURCE
 - S1b : Aux Switch ----- OFF
 - S1c : Tuner Switch ----- OFF
 - S1d : Phono Switch ----- ON
 - S2 : Loudness Switch ----- ON
 - S3a : Speaker A Switch ----- ON
 - S3b : Speaker B Switch ----- OFF
 - S01 : Power Switch ----- OFF

Figure 12

CAUTION: The Δ mark, the symbol No. circled with oval in the schematic diagram and the shaded area in the parts list designate components which have special characteristics important for safety and should be replaced only with types identical or those in the original circuit or specified in the parts list.

5. ELECTRICAL PARTS LOCATIONS

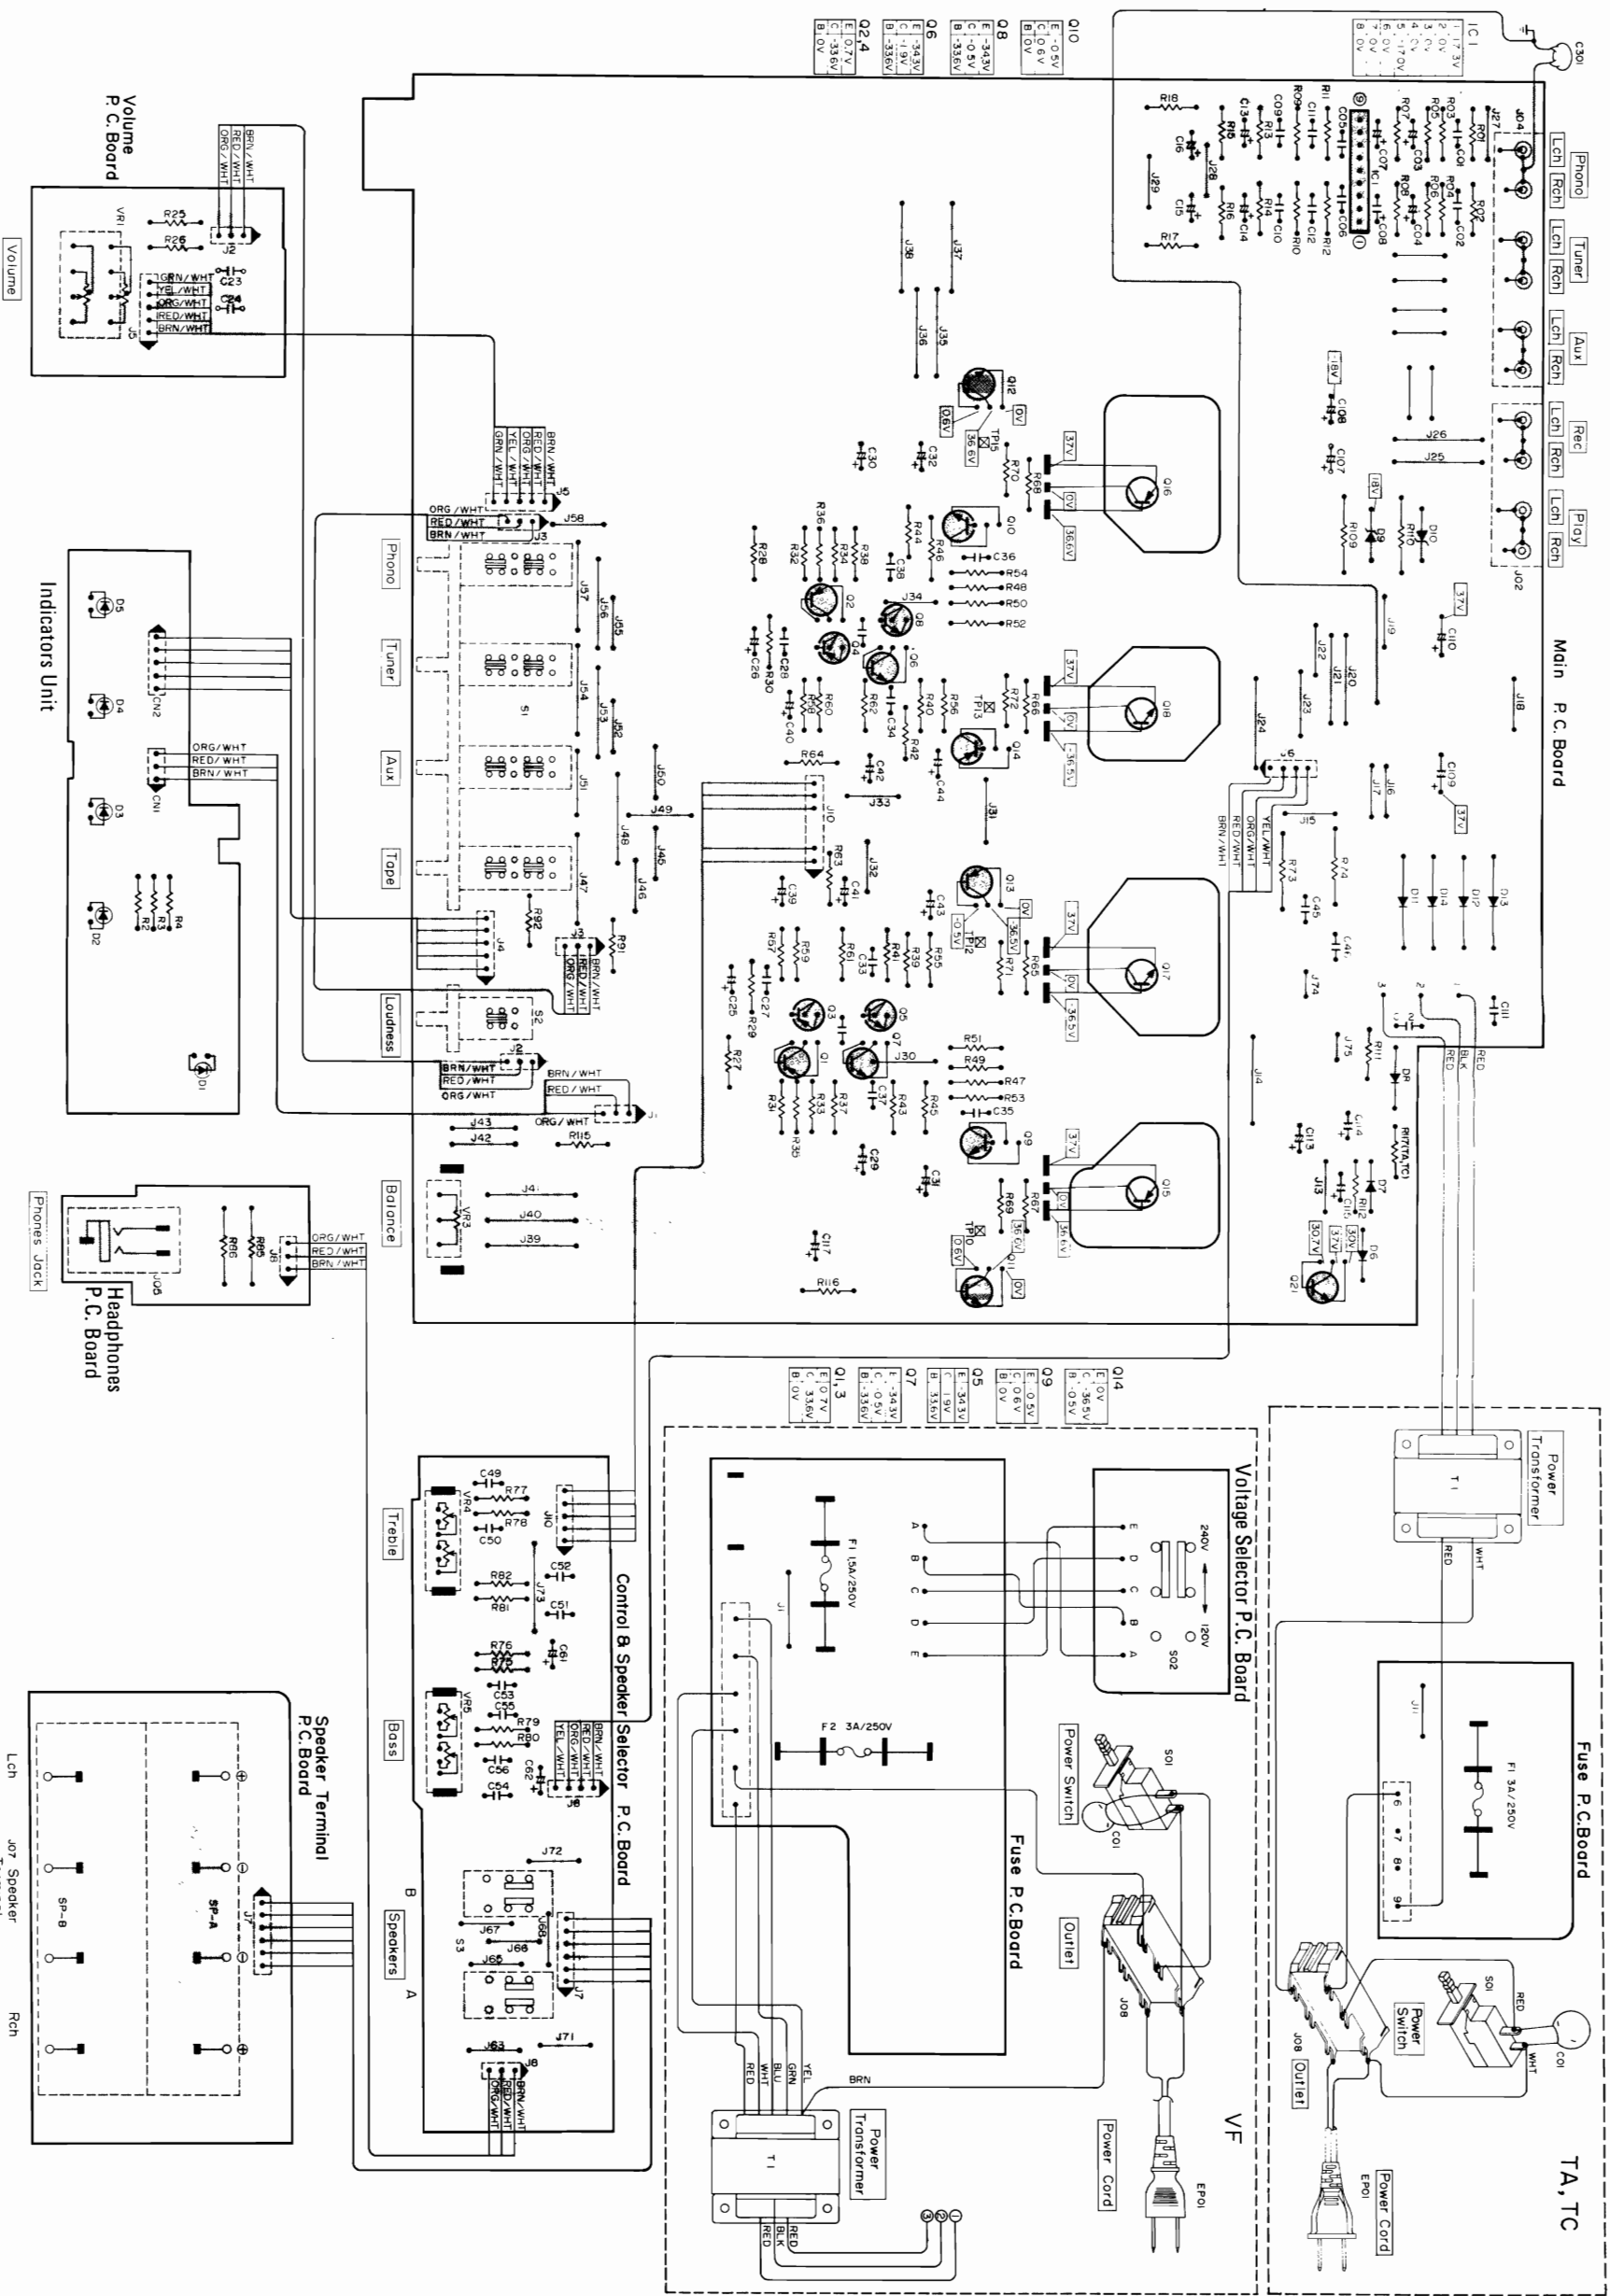


Figure 13

1. PANEL FACILITIES

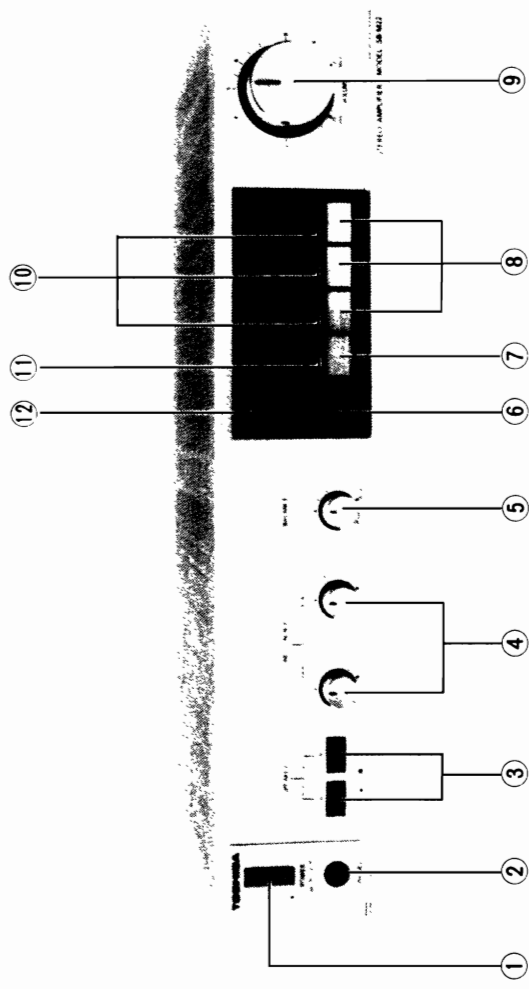


Figure 1

- | | |
|----------------------------|--------------------------|
| ① POWER switch | ⑦ TAPE monitor switch |
| ② PHONES jack | ⑧ FUNCTION selectors |
| ③ SPEAKERS selectors | ⑨ VOLUME control |
| ④ BASS and TREBLE controls | ⑩ FUNCTION indicators |
| ⑤ BALANCE control | ⑪ TAPE monitor indicator |
| ⑥ LOUDNESS switch | ⑫ POWER indicator |

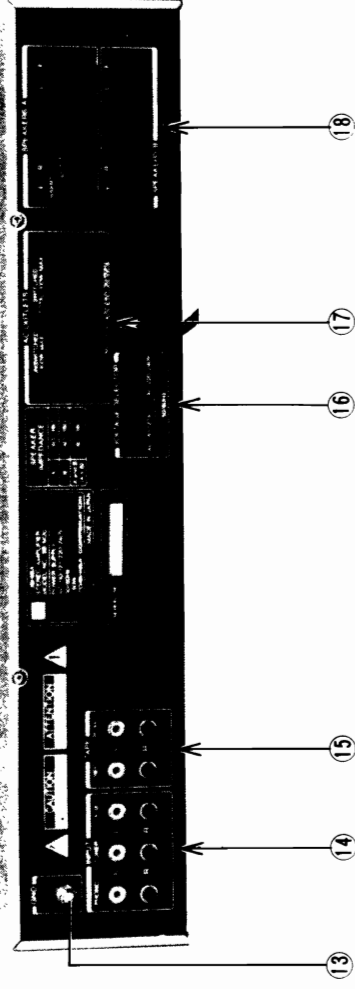


Figure 2

- | | |
|-----------------------------------|------------------------------|
| ⑬ Ground terminal | ⑯ VOLTAGE SELECTOR (VF Only) |
| ⑭ INPUT terminals | ⑰ AC OUTLETS (TA, TC, VF) |
| ⑮ TAPE DECK terminals (PIN Jacks) | ⑱ SPEAKER terminals |

2. DISASSEMBLY INSTRUCTIONS

TOP COVER REMOVAL
1. Remove six screws **A** ($\phi 3 \times 8\text{mm}$), **B** ($\phi 3 \times 8\text{mm}$) and **C** ($\phi 3 \times 8\text{mm}$), and the top cover can be removed from the unit. (See Figure 3, 4 and 5)

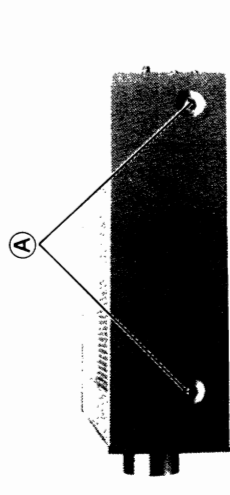


Figure 3

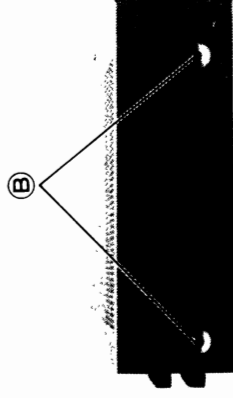


Figure 4

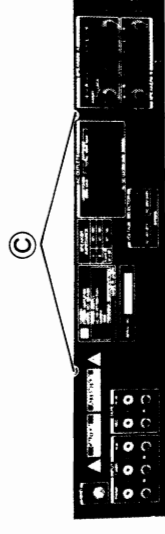


Figure 5

FRONT PANEL REMOVAL
1. Remove the top cover. (See Figure 3, 4 and 5)
2. Remove seven screws **D** ($\phi 3 \times 8\text{mm}$) and **E** ($\phi 3 \times 8\text{mm}$), and the front panel can be removed from the unit. (See Figure 6 and 7)

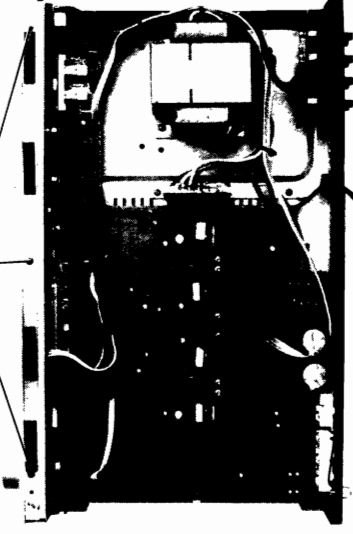


Figure 6

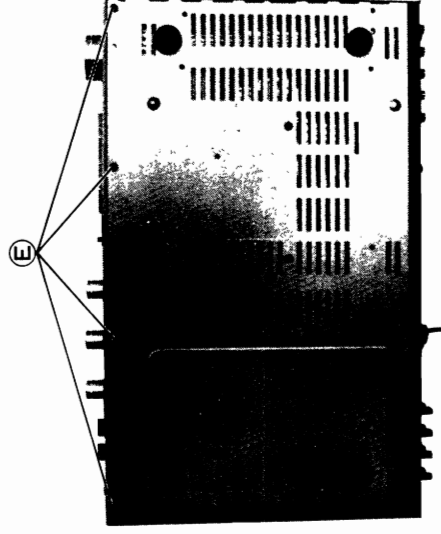


Figure 7

P.C. BOARD REMOVAL
1. Remove the top cover and front panel.
2. Remove four knobs **F**, six screws **G** ($\phi 3 \times 6\text{mm}$), **H** ($\phi 3 \times 8\text{mm}$) and nut **I**. (See Figure 8)
3. Remove nine screws **J** ($\phi 3 \times 8\text{mm}$), **K** ($\phi 3 \times 8\text{mm}$) and the jack plate, then the P.C. Board can be removed from the unit. (See Figure 8, 9 and 10)

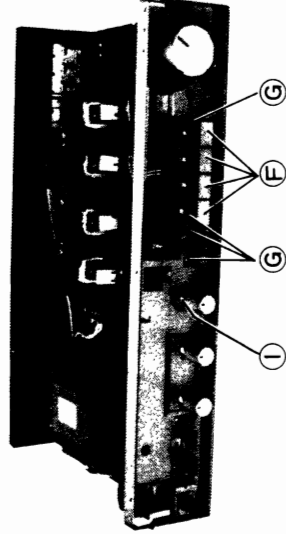


Figure 8

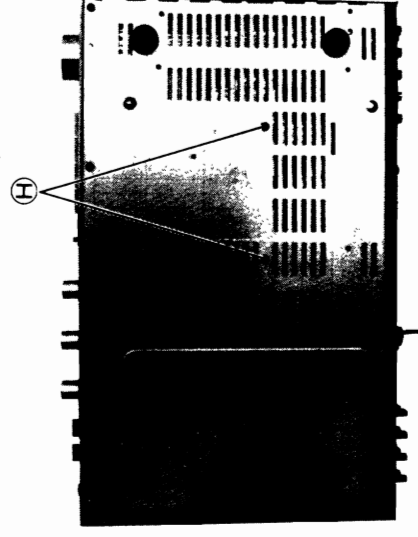


Figure 9

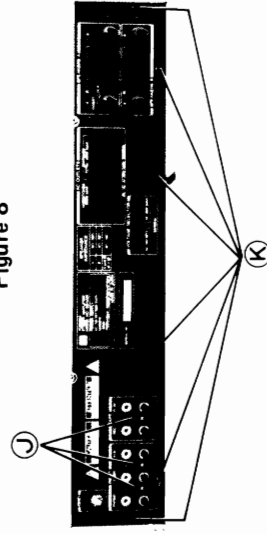


Figure 10

3. ELECTRICAL PARTS LOCATIONS

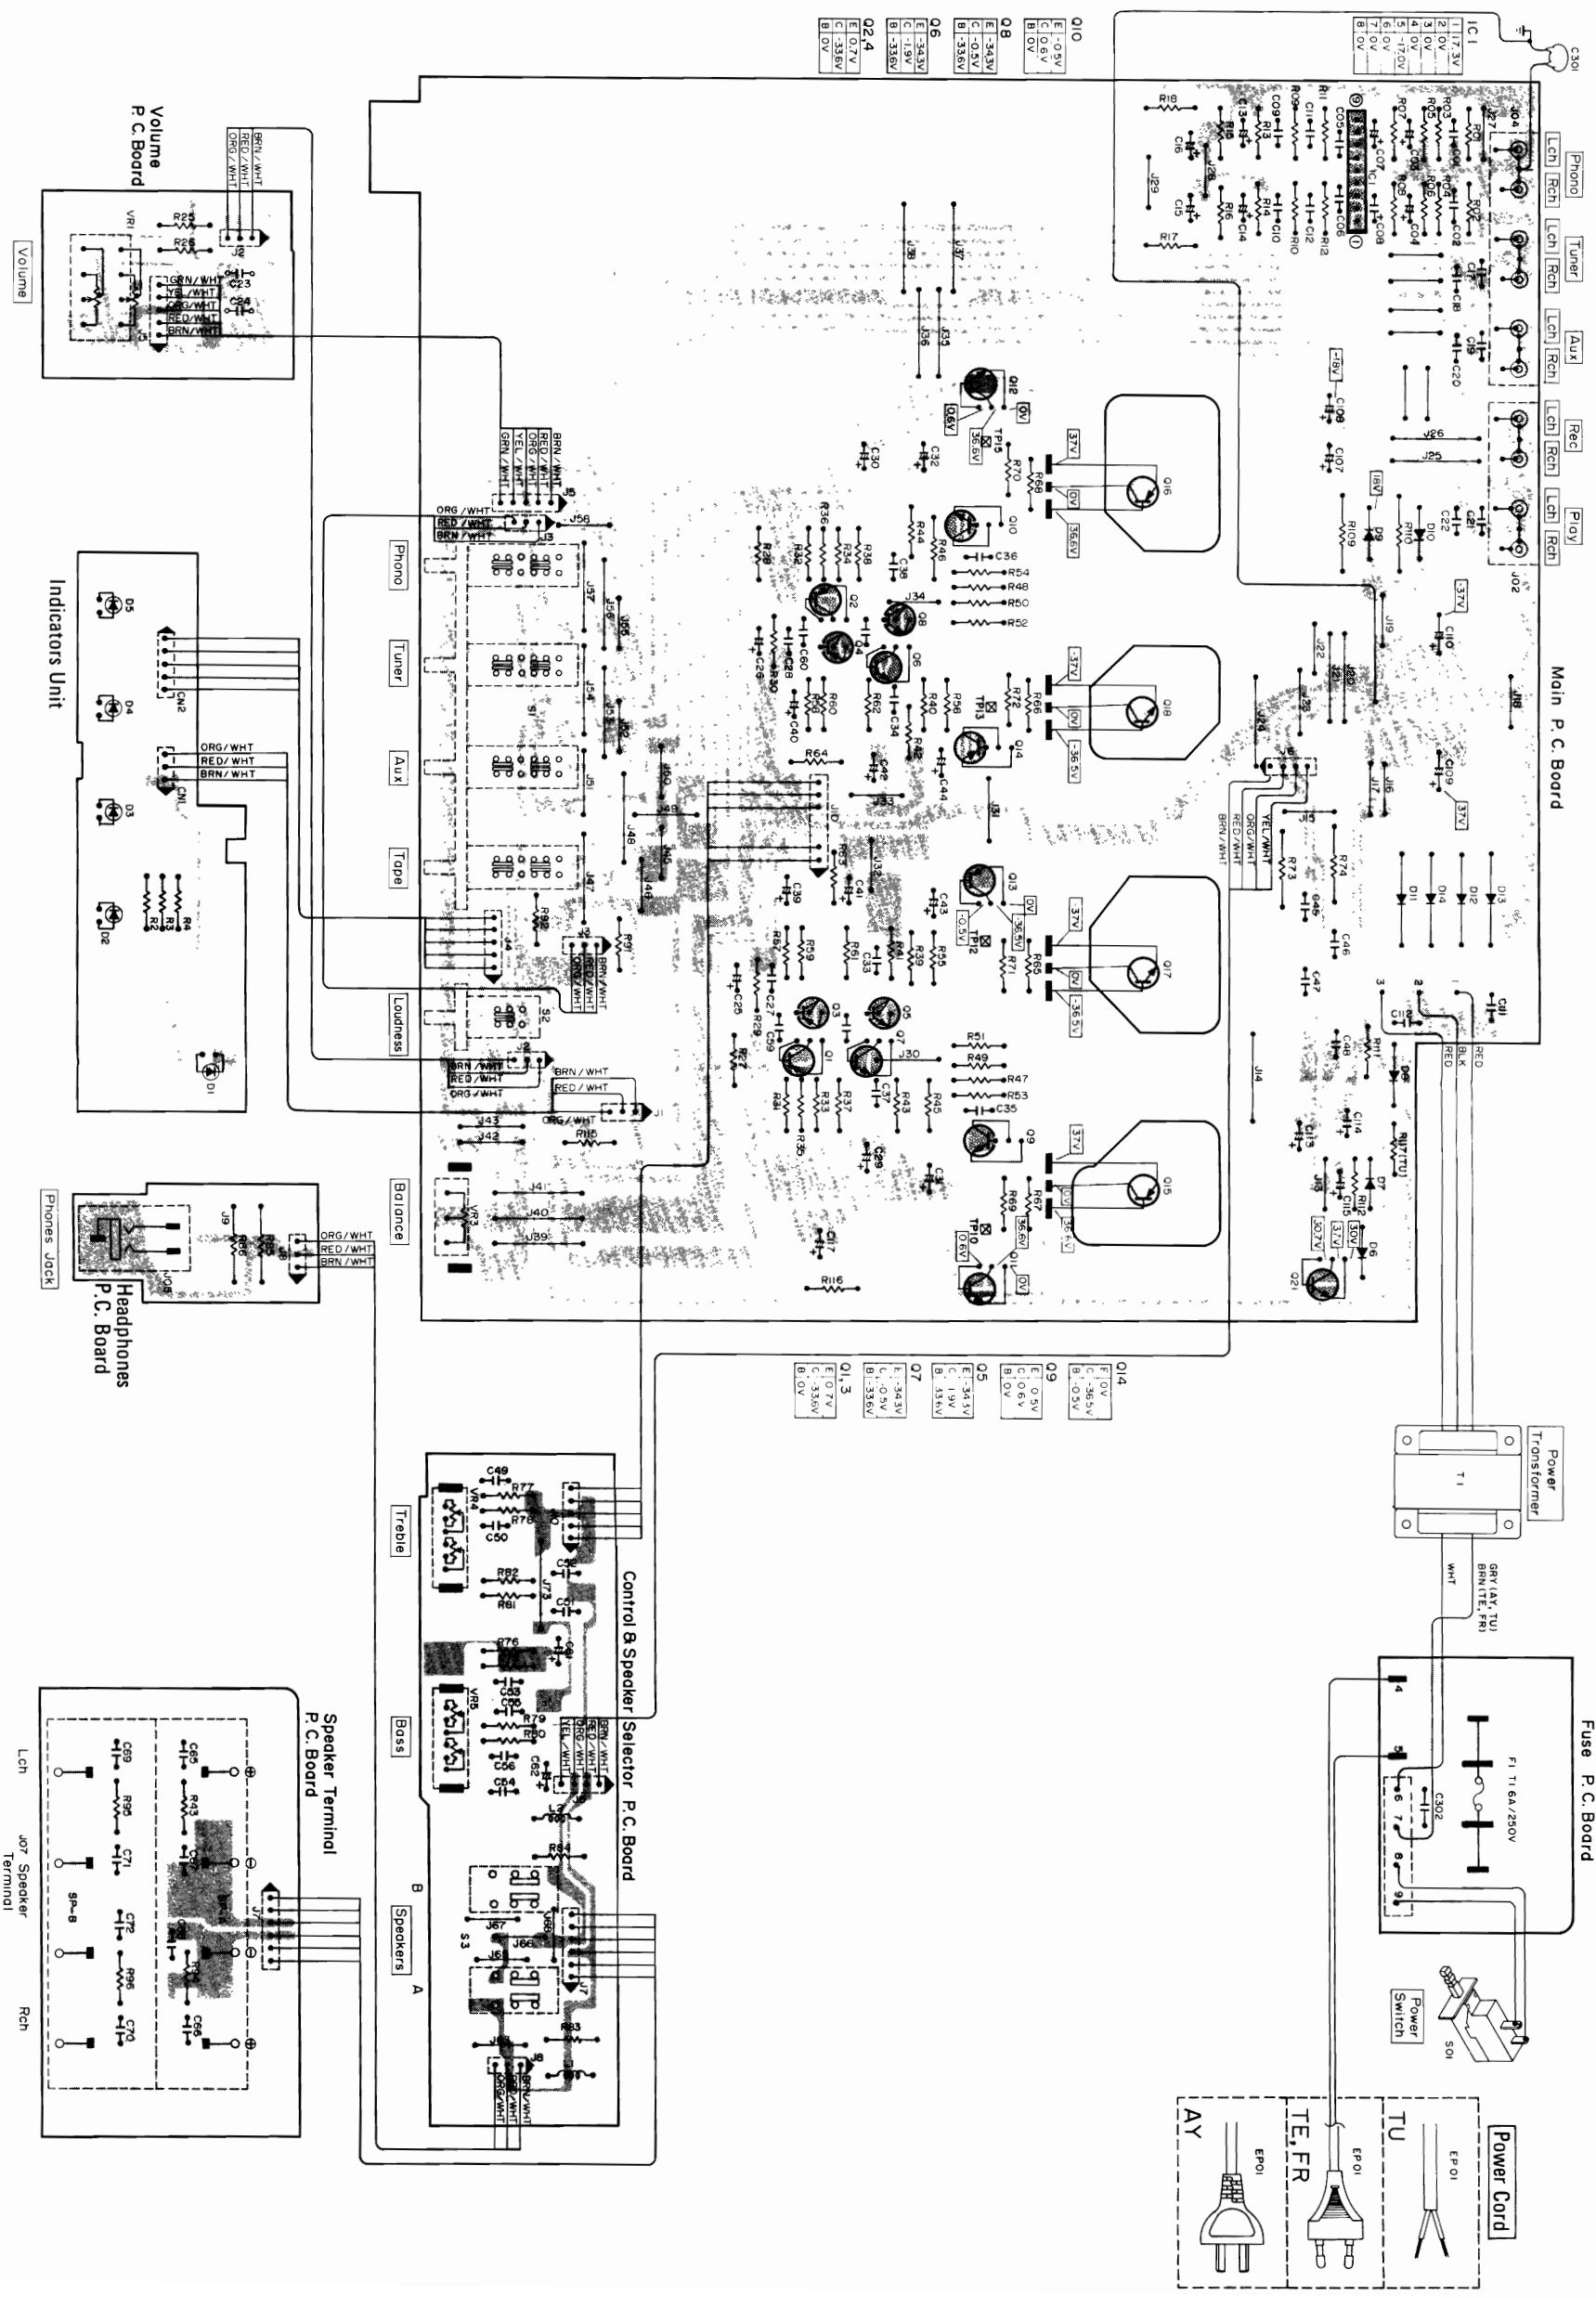


Figure 11