

CD RECEIVER


KDC-W4031/Y  
KDC-W409/Y  
KDC-W431GY  
KDC-W4531/Y  
KDC-WF431A

# SERVICE MANUAL


# KENWOOD

© 2004-12 PRINTED IN JAPAN  
B53-0230-00 (N) 1813


PANEL ASSY  
KDC-W4031/Y (A64-3455-02)

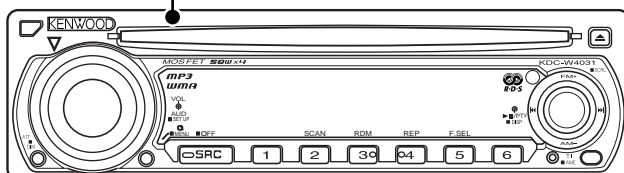


PANEL ASSY  
KDC-W409/Y (A64-3456-02)

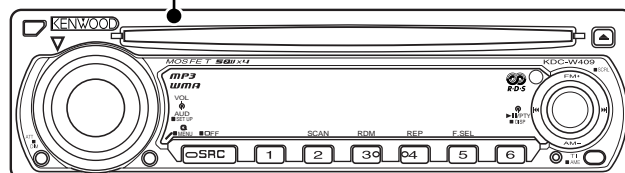


PANEL ASSY  
KDC-W431GY (A64-3457-02)

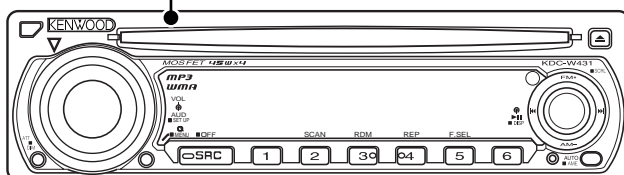

PANEL ASSY  
KDC-W4531/Y (A64-3454-02)

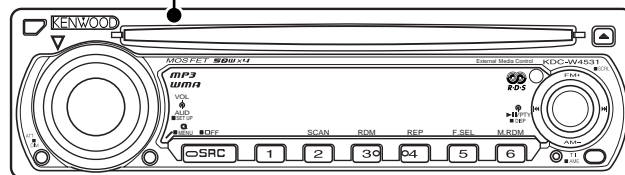


PANEL ASSY  
KDC-WF431A (A64-3466-02)

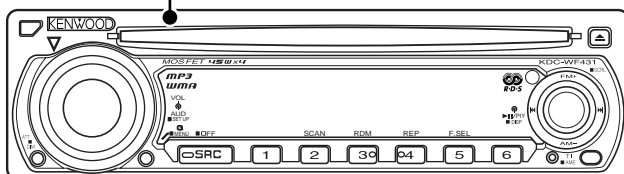


## SPARE TDF PANEL

MAIN UNIT NAME	TDF PARTS No.	TDF NAME
KDC-W4031/Y	Y33-2140-60	TDF-W4531
KDC-W409/Y	Y33-2140-65	TDF-W409
KDC-W431GY	Y33-2140-61	TDF-W431GY
KDC-W4531/Y	Y33-2140-60	TDF-W4531
KDC-WF431A	Y33-2140-63	TDF-WF431


LEVER  
(D10-4589-04) x2

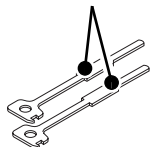


DC CORD  
(E30-6413-05)

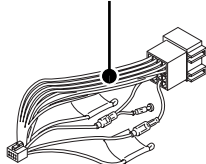

PLASTIC CABINET ASSY  
(A02-2736-03)

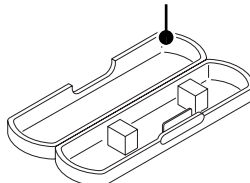


MOUNTING HARDWARE ASSY  
(J21-9716-03)

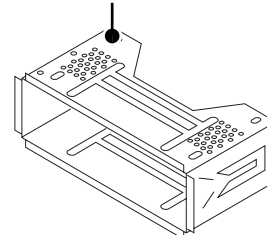

ANTENNA ADAPTOR  
(T90-0523-05)



\* ESCUTCHEON  
(B07-xxxx-xx)

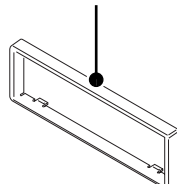


\* Depends on the model. Refer to the parts list.

This product uses Lead Free solder.



## BLOCK DIAGRAM

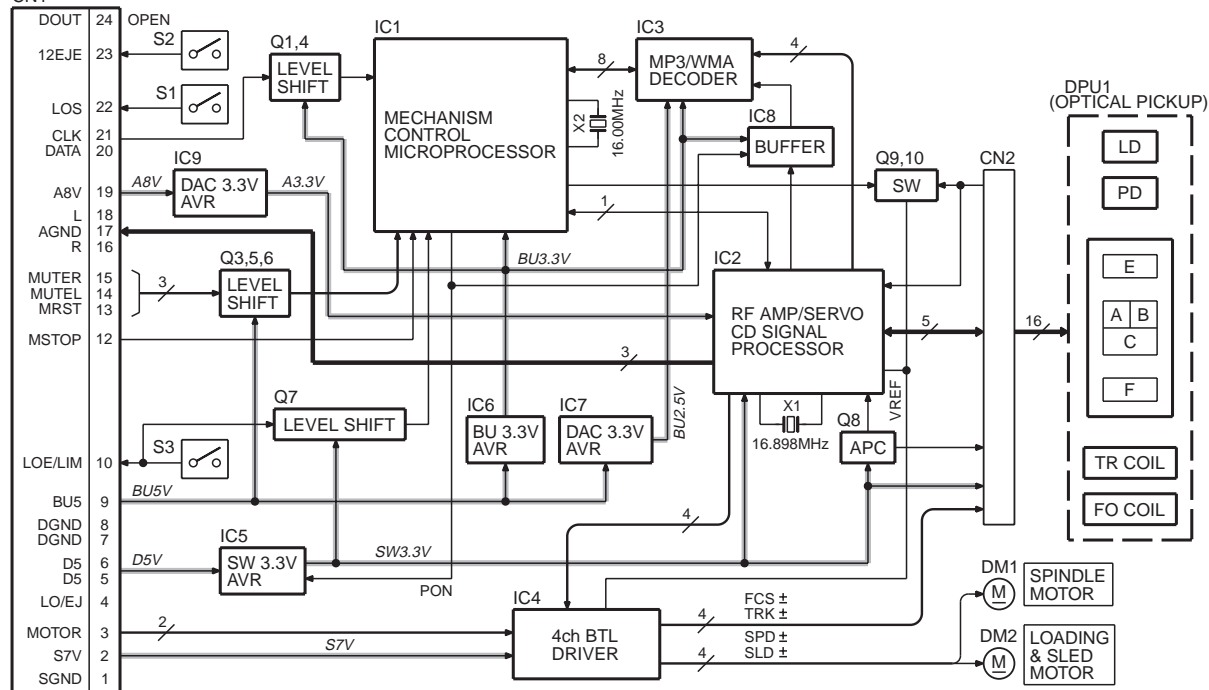

## COMPONENTS DESCRIPTION

### ● ELECTRIC UNIT (X34-3402-7x)

Ref. No.	Application / Function	Operation / Condition
IC1	SYSTEM $\mu$ -COM	System control.
IC3	POWER SUPPLY	DC5Vx2, 7.9Vx1, 8.1Vx1, 10.3V, P.CON, P-ANT output.
IC4	POWER IC	Audio signal amplifier.
IC6	MUTE LOGIC	Mute control.
IC7	RDS DECODER	RDS decode.
IC8	RESET	"L" when detection voltage goes below 3.6V.
IC10	E-VOL & TUNER	E-VOL, Tuner, Stereo decode.
IC11	E2PROM	Saves and writes tuner adjustment data.
IC15	VFD REGULATOR	11.3V output voltage for LED and VFD.
Q51	SERGE DET	"ON" when the base goes "H".
Q52	BU DET	"ON" when the base goes "H".
Q53	ACC DET	"ON" when the base goes "H".
Q71	SERVO+B CONTROL SW	"ON" when the base goes "H".
Q72,73	SERVO+B AVR	Output voltage level : 7.5V.
Q74	IC3 CONTROL SW	"ON" when the base goes "H" (Output voltage : 10.3V).
Q151	PANEL 5V SW	"ON" when the base goes "L".
Q155	DSI ILLUMI SW	"ON" when the base goes "L".
Q252	IC4 STBY SW	"ON" when the base goes "L".
Q330	Q351, 352 MUTE DRIVER	"ON" when the base goes "L".
Q351	Lch PRE MUTE SW	Pre-output is muted when the base goes "H".
Q352	Rch PRE MUTE SW	Pre-output is muted when the base goes "H".
Q501	AM RF AMP	Adjusts for AM-RF gain.

### ● CD PLAYER UNIT (X32-5500-00)

Ref. No.	Application / Function	Operation / Condition
IC1	MECHANISM CONTROL MICROPROCESSOR	Focusing, tracking, sled and spindle servo processing. Automatic adjustment (Focusing, tracking, gain, offset and balance) operations. Digital signal processing (DSP, PLL, sub-codes, CIRC error correction, audio data interpolation) operations, and microcomputer function.
IC2	RF AMP/SERVO CD SIGNAL PROCESSOR	Generation of RF signal based on the signals from the APC circuit and pickup, and generation of servo error (Focusing error and tracking error) signals. Detection of dropout, anti-shock, track crossing and off-track conditions, included gain control function during CD-RW.
IC3	MP3/WMA DECODER	
IC4	4ch BTL DRIVER	Focusing coil, tracking coil, spindle motor and sled motor driver, disc loading and eject operation.
IC5	SW 3.3V AVR	
IC6	BU 3.3V AVR	3.3V power supply for back-up.
IC7	BU 2.5V AVR	2.5V power supply for back-up.

## COMPONENTS DESCRIPTION

Ref. No.	Application / Function	Operation / Condition
IC8	SELECTOR (SERIAL DATA)	Serial audio data switch.
IC9	DAC 3.3V AVR	3.3V power supply for IC2.
Q1	LEVEL SHIFT	3.3V to 5.0V.
Q3~7	LEVEL SHIFT	3.3V to 5.0V.
Q8	AUTOMATIC POWER CONTROL	LD driver.
Q9,10	SWITCH	Switch for anticipation sub-beam delay.

### ● SWITCH UNIT (X16-2932-7x)

Ref. No.	Application / Function	Operation / Condition
IC1	VFD DRIVER	
IC3	REMOTE SENSOR	
Q1	GREEN LED SW	“ON” when the base goes “H”.
Q2	RED LED SW	“ON” when the base goes “H”.
Q21	PAN SW5V	“ON” when the base goes “H”.

## MICROCOMPUTER’S TERMINAL DESCRIPTION

### ● SYSTEM $\mu$ -COM : IC1 on X34- (ELECTRIC UNIT)

Pin No.	Active (H/L)	Pin Name	I/O	Application	Processing Operation
1		DC ERR	I	DC offset detection input	
2		LINE MUTE	I	Phone detection	NAVI MUTE : Over 2.5V, TEL MUTE : Below 1V
3		ROTARY CW	I	Rotary encoder input	
4		AVSS	-		
5		TUN TYPE1	I	E-VOL setting switch	Refer to “TUN TYPE” on the TRUTH TABLE
6		TUN TYPE2	I	E-VOL setting switch	Refer to “TUN TYPE” on the TRUTH TABLE
7		AVREF1	-		
8		VFD DATAF	I	Data input from VFD driver	
9		VFD DATAS	O	Data output to VFD driver	
10		VFD CLK	O	Clock output to VFD driver	

## MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Active (H/L)	Pin Name	I/O	Application	Processing Operation
11	L	VFD RST	O	Reset output to VFD driver	Display OFF, Key reset, TDF panel OFF : L Display ON, Key scan : H
12		VFD CE	O	Chip enable output to VFD driver	
13		ROTARY CCW	I	Rotary encoder input	
14	L	TDF DET	I	TDF panel detection	TDF panel OFF : H, TDF panel ON : L
15		PWIC BEEP	O	Beep output	
16		LX DATA S	I	Data from slave unit	
17		LX DATA M	O	Data to slave unit	
18		LX CLK	I/O	LX-BUS clock	
19		RDS AFSL	O	Tuner RDS mute output	Refer to "RDS AFSL" on the TRUTH TABLE
20	L	TUN ADJ	I	For adjusting IC10	Adjustment=H, PS1-1,2=L, PS1-3=Hi-Z, PS2-1,2=Hi-Z, TUN DATA, CLK=Hi-Z
21		TUN SD	I	Tuner search stop output	H : Station exists, L : Station does not exist
22	H	LX RST	O	Hard reset to slave unit	H : Reset, L : Normal condition
23	H	LX CON	O	Start-up request to slave unit	H : Slave unit ON, L : Slave unit OFF
24		LX REQ M	O	Communication request to slave unit	
25		AUD SDA	I/O	Volume + tuner I2C data input and output	
26		AUD SCL	I/O	Volume + tuner I2C clock input and output	
27	H	PWIC STBY	O	Power IC standby output	Power IC ON : H, Power IC OFF : L
28	H	VOL MUTE	O	E-VOL mute output	L : Mute OFF, Hi-Z : Mute ON
29	L	PWIC MUTE	O	Power IC mute output	Power OFF : L, Standby : L, Tel mute : L
30		TUN FANC OUT	O	Tuner block (inside the $\mu$ -com) check	OK : L, NG : H
31		RESET2	O	Mute for reset	Output L
32		RDS DATA	I	RDS decoder data input	
33		VSS1	-		
34		RDS QUAL	I	RDS decoder QUAL input	
35	L	ACC DET	I	ACC detection	ACC exists : L, ACC does not exist : H
36	L	BU DET	I	Momentary power-down detection	BU exists : L BU does not exist (Momentary power-down) : H
37		NC	-		
38		PS2-2	O	Power supply control output	Refer to "POWER IC CONTROL" on the TRUTH TABLE
39		PS2-1	O	Power supply control output	Refer to "POWER IC CONTROL" on the TRUTH TABLE
40		PS1-1	O	Power supply control output	Refer to "POWER IC CONTROL" on the TRUTH TABLE
41		PS1-2	O	Power supply control output	Refer to "POWER IC CONTROL" on the TRUTH TABLE
42		PS1-3	O	Power supply control output	Refer to "POWER IC CONTROL" on the TRUTH TABLE
43,44		NC	-		
45		CD MUTE	I	CD mute request	L : Mute request
46	L	CD MSTOP	O	CD mecha $\mu$ -com stop	H : mecha $\mu$ -com operates, L : mecha $\mu$ -com is stopped
47		CD LOE LIM SW	I	CD detection (chucking switch)	H : Loading is finished, L : Disc does not exist

## MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Active (H/L)	Pin Name	I/O	Application	Processing Operation
48		CD LOEJ	I/O	CD motor control	Refer to "CD MECHA CONTROL OPERATION" on the TRUTH TABLE
49		CD MOTOR	O	CD motor control	Refer to "CD MECHA CONTROL OPERATION" on the TRUTH TABLE
50		NC	-		
51	L	CD MRST	O	CD mecha $\mu$ -com reset	H : Normal condition, L : Reset
52		CD SCL	I/O	CD mecha I2C clock output	
53		CD DISC12 SW	I	12cm CD detection	
54		CD LOS SW	I	CD loading detection	
55		CD SDA	I/O	CD mecha I2C data input and output	
56		OEM DISP CE	I/O	External display chip enable	External display
57		OEM DISP CLK	I/O	External display clock	External display
58		OEM DISP DATA	I/O	External display chip data	External display
59		DSI	O	DSI control	DSI ON : H, DSI OFF : L, TDF DET=H (DSI blinks)
60	L	RESET	I		
61		NC	-		
62	L	PON FL	O	VFD power supply ON	VFD ON : H, VFD OFF : L TDF DET H (DSI blinks) : L, TDF DET L : H
63		KEY REQ	I	Communication request from VFD driver	L : Key input
64		RDS CLK	I	RDS decoder clock input	
65		REMOTE	I	Remote control input	
66		LX REQ S	I	Communication request from slave unit	
67		VSS0	-		
68		VDD1	-		
69		X2	-		
70		X1	-		
71		TEST	-		
72		XT2	-		
73		XT1	-		
74		VDD0	-		
75		AVDD	-		
76~78		TYPE 3~TYPE 1	I	Destination switch	
79		RDS NOISE	I	Tuner quality (Noise) input	
80		TUN SMETER	I	Tuner S-meter input	

# MICROCOMPUTER'S TERMINAL DESCRIPTION

## ● TRUTH TABLE

### • TUN TYPE

	TYPE 1	TYPE 2
General models commercially-designated as pure KENWOOD brand (Initial value)	L	L
Initial value setting	L	L

### • RDS AFSL (AF search)

High	Normal condition communication (IC10 side : High) (Quality time constant long / Stereo Decoder PLL : Not hold)
Low	AF search (IC10 side : Middle) (Quality time constant short / Stereo Decoder PLL : Hold)

### • POWER SUPPLY IC (IC3) CONTROL

SEL1 (Pin No. 11)

PS1-2	PS1-3	PS2-1	ILLUMI	P-CON	P-ANT
L	L	L	OFF	OFF	OFF
L	L	H	ON	OFF	OFF
H	L	H	ON	ON	OFF
H	H	H	ON	ON	ON

SEL2 (Pin No. 12)

PS1-1	PS2-2	AUDIO	SW5	AM
L	L	OFF	OFF	OFF
H	L	ON	ON	OFF
H	H	ON	ON	ON

### • CD MECHA CONTROL OPERATION

CD LOEJ	CD MOTOR	CD MECHA OPERATION
L	H	Load
H	H	Eject
Hi-Z	L	Stop
Hi-Z	H	Brake

# MICROCOMPUTER'S TERMINAL DESCRIPTION

## ● CD MECHANISM $\mu$ -COM : IC1 on X32- (CD PLAYER UNIT)

Pin No.	Active (H/L)	Pin Name	I/O	Application	Processing Operation
1		VREFL	-	Reference power supply input terminal for ADC (L).	GND
2		AVSS	-	GND terminal for ADC.	GND
3		AVCC	-	Power supply terminal for ADC.	Back-up 3.3V
4		NC	-		
5	L	20RST	O	Reset control (Decoder).	L : Reset, H : Normal condition
6		20ACK	I	Acknowledge signal input (Decoder).	
7		20STBY	O	Standby control (Decoder).	H : Standby, L : Normal condition
8,9		NC	-		
10		20INT	I	Interrupt signal input (Decoder).	
11		FOGUP	I	Focus gain-up interrupt.	H : Focus gain-up, L : Normal condition
12		LZM	I	0 bit mute detection (Lch).	L : MUTE OFF, H : MUTE ON
13		RZM	I	0 bit mute detection (Rch).	L : MUTE OFF, H : MUTE ON
14,15		NC	-		
16	L	20CS	O	Chip select signal output (Decoder).	
17	L	20LP	O	Latch pulse signal output (Decoder).	
18		20TXD0	I/O	Data output for serial data (Decoder).	Input condition is kept except in output condition.
19		20RXD0	I	Data input for serial data (Decoder).	
20		20SCLK0	O	Clock output for serial data (Decoder).	
21		DSPTXD1	O	Data output for serial data (DSP).	
22		DSPRXD1	I	Data input for serial data (DSP).	
23		DSPSCLK1	O	Clock output for serial data (DSP).	
24		AM0	-	ROM mode selection terminal.	H : Normal condition, L : External ROM mode
25		DVCC	-	Back-up 3.3V.	
26		X2	O	Resonator terminal.	16MHz
27		DVSS	-	GND.	
28		X1	I	Resonator terminal.	16MHz
29		AM1	I	"H" condition is fixed.	Back-up 3.3V
30	L	RESET	I	Reset detection.	L : Reset, H : Normal condition
31~34		NC	-		
35	L	DSPSTB	O	Data strobe signal output (DSP).	
36		DSPA0	O	Command/Parameter identification signal output (DSP).	H : Parameter data output, L : Command data output
37	L	DSPRST	O	Reset control (DSP).	
38		DSPINT	I	Interrupt signal input (DSP).	H : Interrupt
39		NC	-		
40		SEARCH	O	Search condition output.	H : Search, L : Normal condition
41		LOE/LIM SW	I	Loading-end detection/Pick-up inner circumference detection	H : Inner circumference
42~49		NC	-		



## MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Active (H/L)	Pin Name	I/O	Application	Processing Operation
50		FLAGIN	I	C2Err impossibility detection.	L : Correction is possible. H : Correction is impossible.
51~61		NC	-		
62		DVSS	-	GND.	
63	L	NMI	I	Non-maskable interrupt request.	
64		DVCC	-	Power supply terminal.	
65~77		NC	-		
78		NC/BOOT	I	Mask : Not connected. Flash : For writing (Active "L").	L : Write, H : Nomal condition
79,80		NC	-		
81		POND3.3	O	Digital 3.3V power-on control terminal.	H : POWER ON
82	L	MUTEL	O	Lch audio mute control.	
83	L	MUTER	O	Rch audio mute control.	
84		SDA	I/O	I2C data (Main $\mu$ -com).	
85		SCL	I/O	I2C clock (Main $\mu$ -com).	
86	L	MSTOP	I	Stand-by comeback interrupt.	L : Stop, H : Stop is released.
87		NC	-		
88	L	DMUTE	O	Driver mute.	L : MUTE ON, H : MUTE OFF
89		DVCC	-	Power supply terminal.	
90		NC	-		
91		DVSS	-	GND.	
92,93		NC	-	GND.	
94		MSEL	I	Memory capacity switching terminal.	H : Capacity size down, L : Capacity size up
95		NC	-	GND.	
96		ASEL	I	Audio output polarity switch.	H : Reverse output, L : Non-reverse output
97		CHSEL	I	Changer destination terminal.	H : Changer, L : Other source
98		SEL0	I	$\mu$ -com destination terminal 0.	
99		SEL1	I	$\mu$ -com destination terminal 1.	
100		VREFH	I	Reference power supply input terminal for ADC (H).	Back-up 3.3V

## TEST MODE

### How to enter the test mode

While simultaneously press PRESET "1" key and PRESET "3" key, press "RESET" button.

### How to release the test mode

Press "RESET" button. (The release cannot be achieved in the conditions of POWER OFF and ACC OFF.)

### Initial conditions of the test mode

- The source is "STANDBY".
- The displays all lit up.
- The volume is at -10dB (The display shows "30".)
- LOUD is "OFF".
- CRSC is "OFF".
- SYSTEM Q is "NATURAL".
- BEEP is sounded at all time with the key depressed for less than 1 second.

### Special displays when all indicator lights are lighted

When "PRESET" keys are pressed while all indicators for the STANDBY sources are lighted, the following displays will appear.

PRESET "1" key	<ul style="list-style-type: none"> <li>• Version display (8 digits : month, date, hour, minute) (Display) : x x x x x x x x</li> </ul>
PRESET "2" key	<ul style="list-style-type: none"> <li>• Serial number display (8 digits) (Display) : x x x x x x x x</li> </ul>
PRESET "3" key	<ul style="list-style-type: none"> <li>• When pressed for less than 1 second : POWER ON time display (STANDBY source time is not counted.) (Display) : PON x x x x x MAX 60,000 (hours)</li> <li>* The display is cleared by pressing the key for more than 2 seconds.</li> </ul>
PRESET "4" key	<ul style="list-style-type: none"> <li>• When pressed for less than 1 second : CD operation time display (Display) : PLY x x x x x MAX 60,000 (hours)</li> <li>* The display is cleared by pressing the key for more than 2 seconds.</li> </ul>

PRESET "5" key	<ul style="list-style-type: none"> <li>• When pressed for less than 1 second : CD EJECT number display (Display) : EJC x x x x x MAX 60,000 (times)</li> <li>* The display is cleared by pressing the key for more than 2 seconds.</li> </ul>
PRESET "6" key	<ul style="list-style-type: none"> <li>• When pressed for less than 1 second : Panel open/close number display (Display) : PNL x x x x x MAX 600,000 (times)</li> <li>* The display is cleared by pressing the key for more than 2 seconds.</li> </ul>
"FM" key	<ul style="list-style-type: none"> <li>• ROM CORRECTION version display (Display) Effective : ROM _ Rxxx (x : number) Not effective (When not able to read) : ROM _ R _ _ _ Not effective (When version is different) : ROM _ R***</li> </ul>
"AM" key	<ul style="list-style-type: none"> <li>• IC10 adjustment status (Refer to "ADJUSTMENT" on the following page.) (Display) Adjustment complete : E2P _ OK _ _ Adjustment not completed : E2P _ ER _ _ Communication error : I2C _ ER _ _</li> <li>* When other than "E2P _ OK _ _", Pin No. 30 will become "H".</li> </ul>
"◀◀" key	<ul style="list-style-type: none"> <li>• Mechanism error detection status</li> <li>• Communication error → Error No. 1 → Error No. 2 → Error No. 3 → Communication error (Error No. 1 is the most recent error.) (Display) Communication OK : I2C _ OK _ _ Communication error : I2C _ NG _ _ Not detected : ERR _ n _ _ _ (n : 1~3) Detected : ERR _ n-* (* : error code)</li> <li>* The display is cleared by pressing the key for more than 2 seconds.</li> </ul>

## SPECIAL MODE

### ● Security (KDC-W4531/W4531Y only)

#### • How to enter the forced POWER ON mode

While “— — —” is being displayed, while simultaneously pressing “Q” key and “4” key, press “RESET” button. With this, it is possible to turn the power on for 30 minutes only.

#### • How to register the security code on the “Car Audio Passport” sheet after replacing E2PROM (IC11)

1. Enter the test mode. (Refer to “How to enter the test mode”.)
2. In the test mode, press “MENU” key to enter the MENU mode.  
When “SECURITY” is displayed, press “▶|” key (for less than 1 second) to enter the security registration mode.
3. Input the security code, using “FM” / “AM” / “◀◀” / “▶▶” keys.  
“FM” key : number up / “AM” key : number down  
“▶▶” key : cursor to right / “◀◀” key : cursor to left
4. After inputting the code, press “▶|” key for 3 seconds or more which causes “RE-ENTER” to be displayed. This is for “confirming” the code. Use the method in above No. “3” to re-enter the code.
5. Then, press “▶|” key for 3 seconds or more, which will display “APPROVED”. This completes the security code registration.
6. Release the test mode. (Refer to “How to release the test mode”.)

\* All clear cannot be used to clear the security code.

### ● DC offset error detection confirmation mode

Confirmation mode :

While depressing PRESET “3” key and PRESET “6” key simultaneously, press on the “RESET” button.

(Display) Detected : DC \_ ERR \_ \_

Not detected : DC \_ OK \_ \_ \_

- \* By pressing “TI” or “AUTO” key while “DC \_ ERR \_ \_” is being displayed, detection status is cleared. This will result in the display of “DC \_ OK \_ \_ \_”.

Release Method : Press “RESET” button.

### ● Mechanism memory clear confirmation mode

Confirmation mode :

While depressing “ATT” key and “Q” key simultaneously, press “RESET” button.

(Display) : MEM \_ CLR \_

- \* 2 seconds after the confirmation mode boots up, Mechanism memory clear as a result is displayed.

(Display) Clear status display normal completion

: CD \_ O \_ \_ \_

Clear status display abnormal completion

: CD \_ X \_ \_ \_

Release Method : Press “RESET” button.

## ADJUSTMENT

After replacing the following parts, adjust as follows.

REPLACED PARTS		ADJUSTMENT ITEMS		
Ref. No.	Function / Parts name	1st AM MIX	2nd AM MIX	FM antenna
IC10	E-VOL & TUNER	YES	YES	YES
IC11	E2PROM	YES	YES	YES
L507	VCO COIL	YES	YES	YES
L508	1st AM MIX IFT	YES	-	-
L509	2nd AM MIX IFT	-	YES	-
L518	FM ANTENNA COIL	-	-	YES
D504	VARIABLE CAPACITANCE DIODE	YES	YES	YES
D506	VARIABLE CAPACITANCE DIODE	YES	YES	YES
X501	CRYSTAL RESONATOR	YES	YES	YES

### ● 1st AM MIX / 2nd AM MIX ADJUSTMENT

ADJUSTMENT POINT : L508 (1st AM MIX) / L509 (2nd AM MIX)

VOLTAGE VALUE CHECK POINT : S-METER check land (X34-)  
Adjust so that S-METER voltage value becomes maximum.

#### • SG setting

DESTINATION	FREQUENCY	MODULATION	ANTENNA INPUT
Europe	999kHz	OFF	35dBμV (EMF)
Except Europe	1000kHz	OFF	35dBμV (EMF)

### ● FM ANTENNA ADJUSTMENT

ADJUSTMENT POINT : L518


VOLTAGE VALUE CHECK POINT : S-METER check land (X34-)  
Adjust so that S-METER voltage value becomes maximum.

#### • SG setting


DESTINATION	FREQUENCY	MODULATION	ANTENNA INPUT
Europe	87.5MHz	OFF	5dBμV (LOAD) or 11dBμV (EMF)
Except Europe	87.9MHz	OFF	5dBμV (LOAD) or 11dBμV (EMF)



### PC BOARD (FOIL SIDE VIEW)

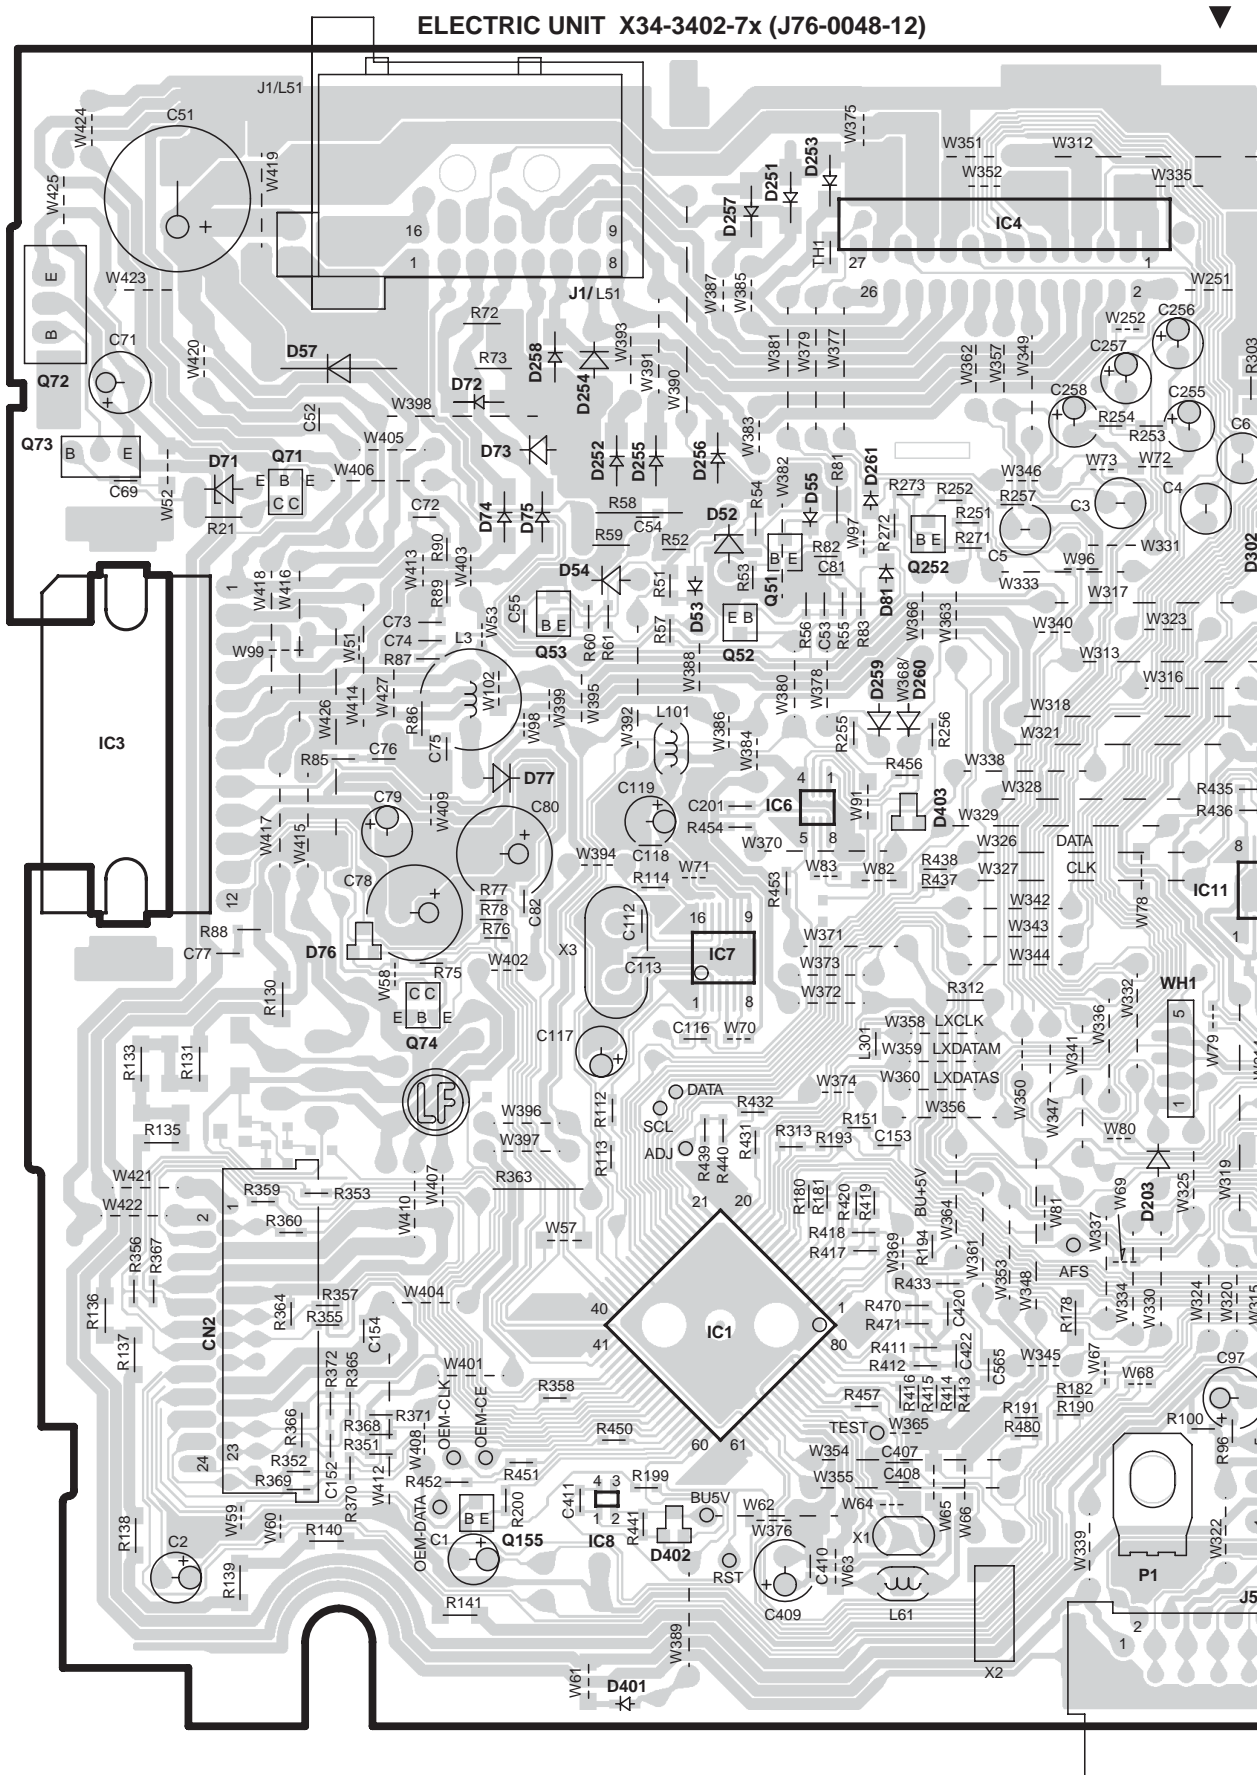



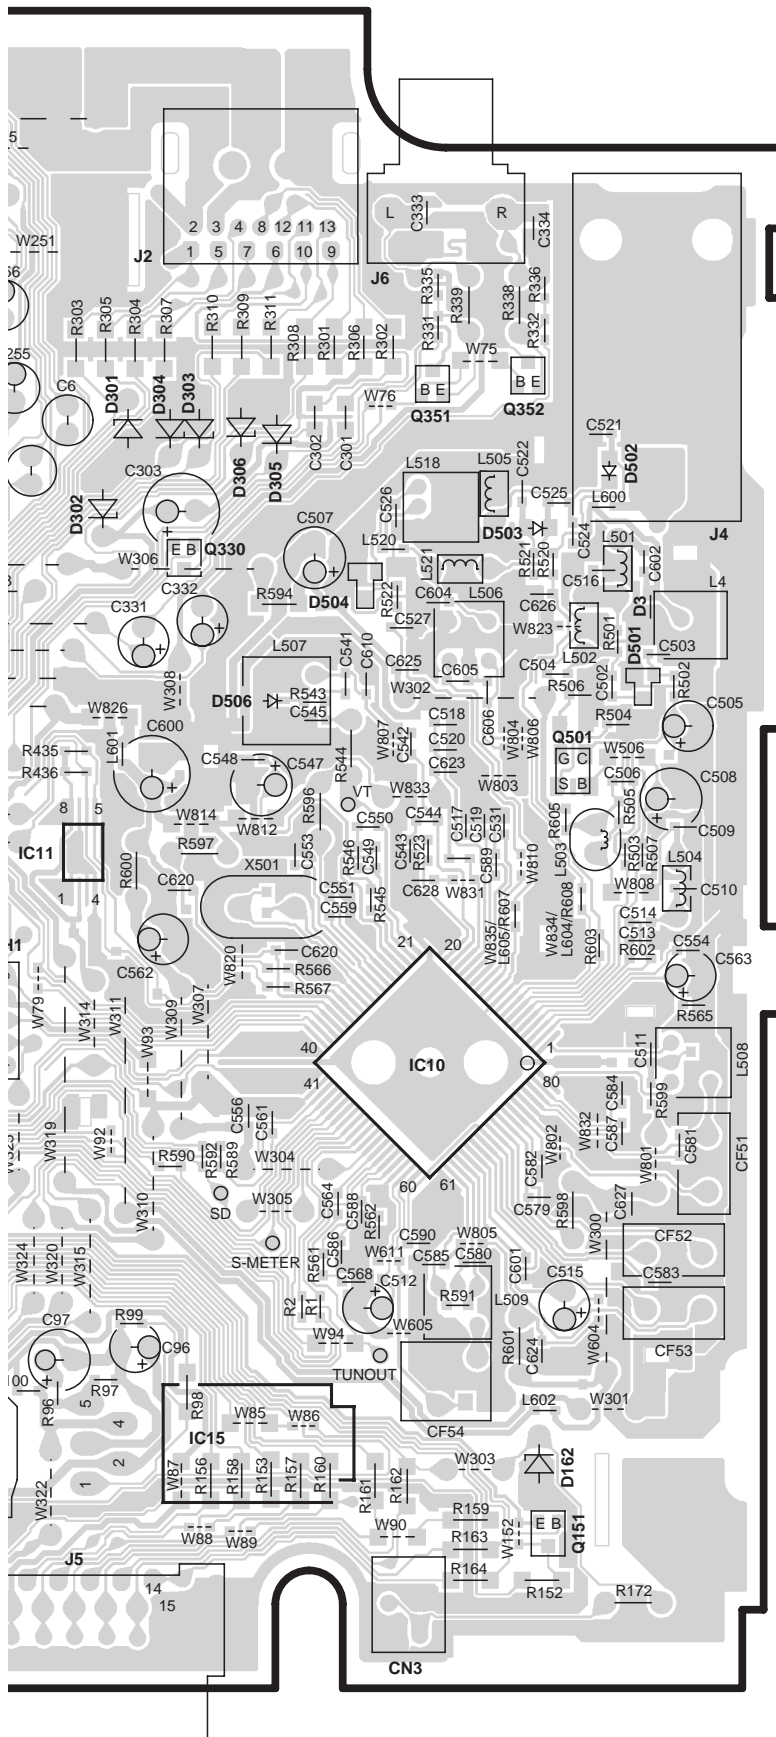

X34-3402-7x


Ref. No.	Address
IC1	6I
IC3	4G
IC4	2J
IC6	4I
IC7	4I
IC8	6H
IC10	5L
IC11	4K
IC15	6K
Q51	3I
Q52	3I
Q53	3H
Q71	3G
Q72	2F
Q73	3F
Q74	5H
Q151	6L
Q155	6H
Q252	3I
Q330	3K
Q351	3L
Q352	3L
Q501	4L

Refer to the schematic diagram for the values of resistors and capacitors.

KDC-W4031/W4031Y/W409/W409Y  
KDC-W431GY/W4531/W4531Y/WF431A

# PC BOARD (COMPONENT SIDE VIEW)

CD PLAYER UNIT X32-5500-00 (J74-1552-12)

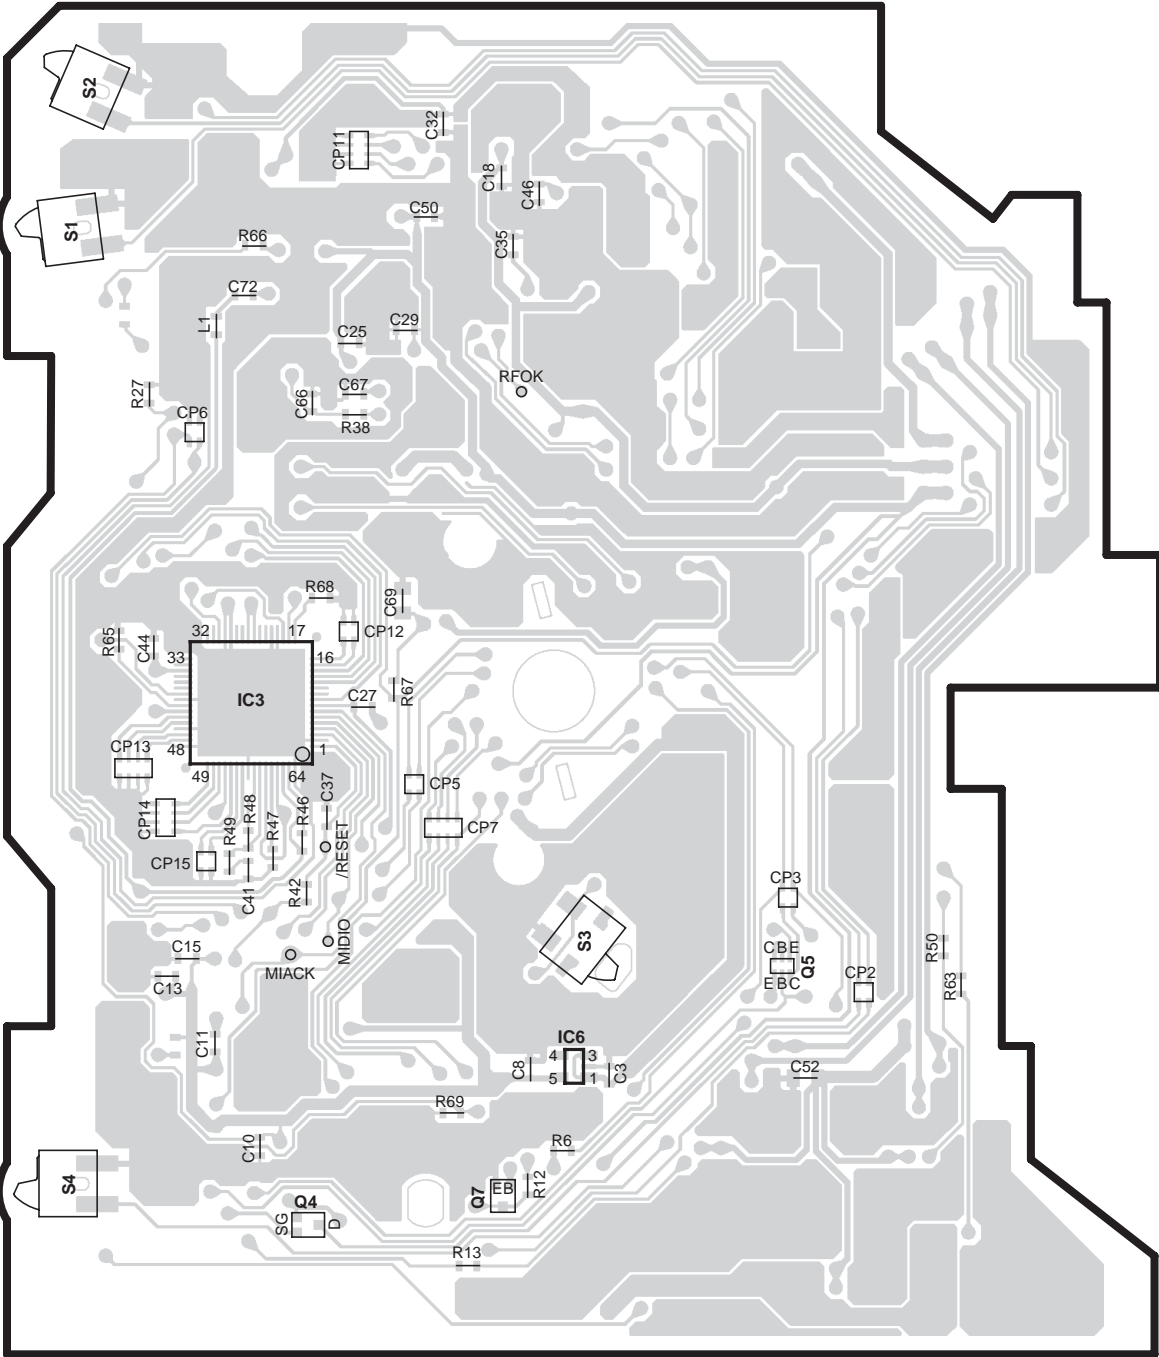

X32-5500-00


Ref. No.	Address
IC3	4Q
IC6	5R
Q4	5Q
Q5	5S
Q7	5R

Refer to the schematic diagram for the values of resistors and capacitors.



## PC BOARD (FOIL SIDE VIEW)


CD PLAYER UNIT X32-5500-00 (J74-1552-12)

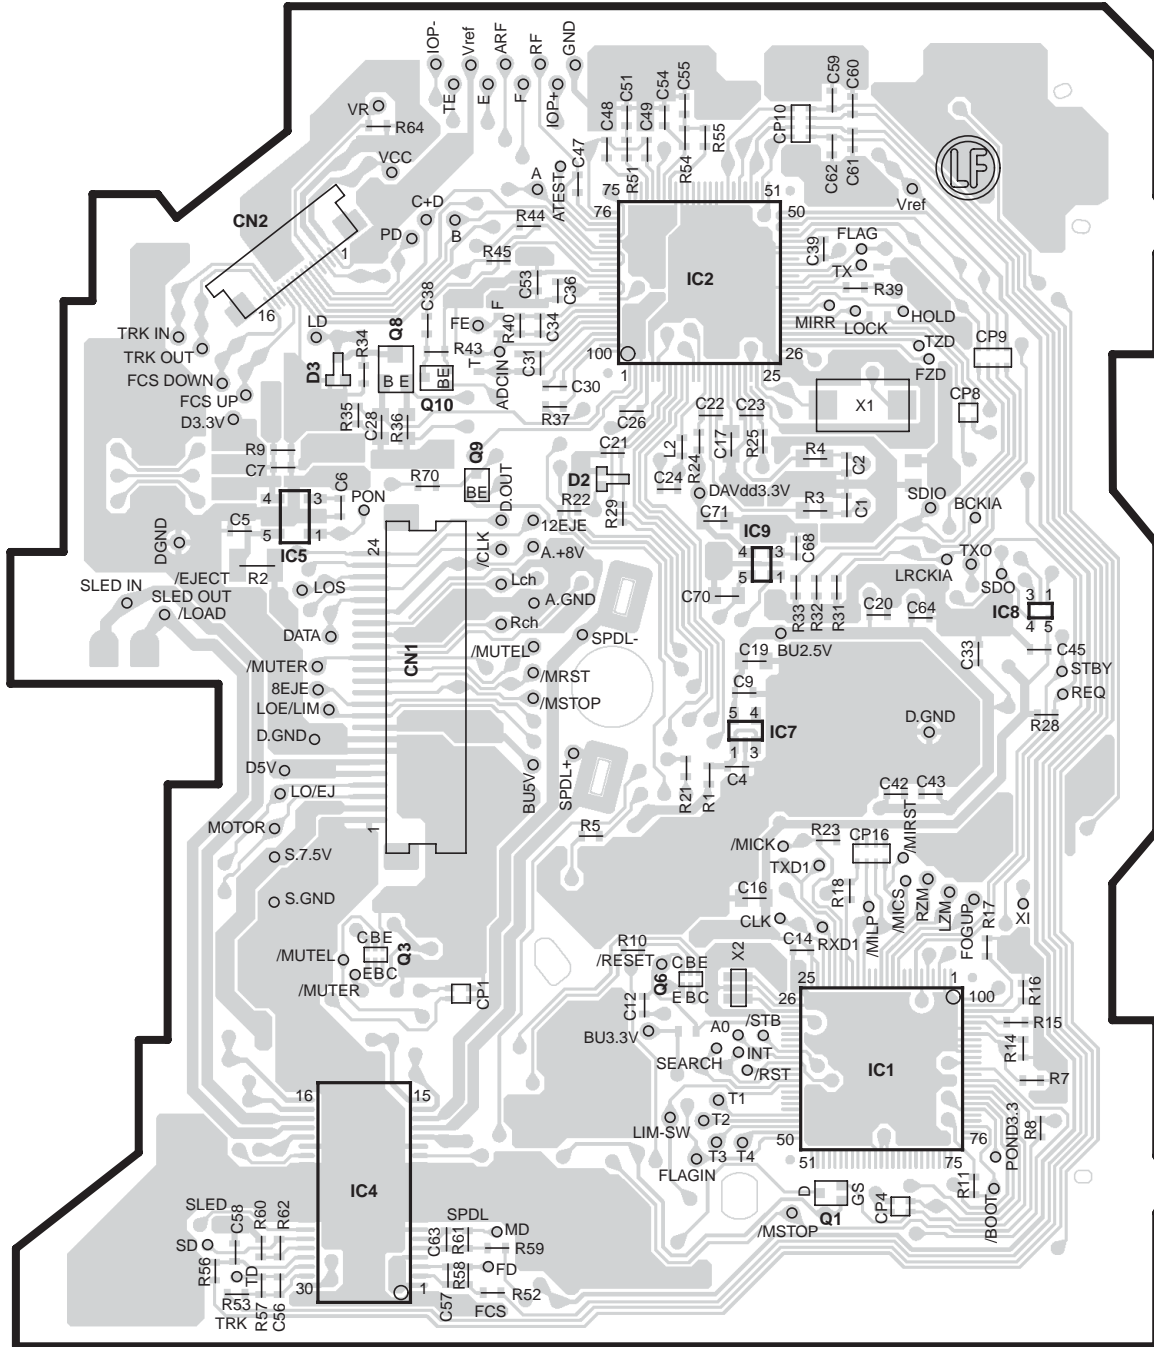


X32-5500-00


Ref. No.	Address	Ref. No.	Address
IC1	5X	Q1	5X
IC2	2W	Q3	5V
IC4	5V	Q6	5W
IC5	3V	Q8	2V
IC7	4W	Q9	3V
IC8	3X	Q10	3V
IC9	3W		

Refer to the schematic diagram for the values of resistors and capacitors.

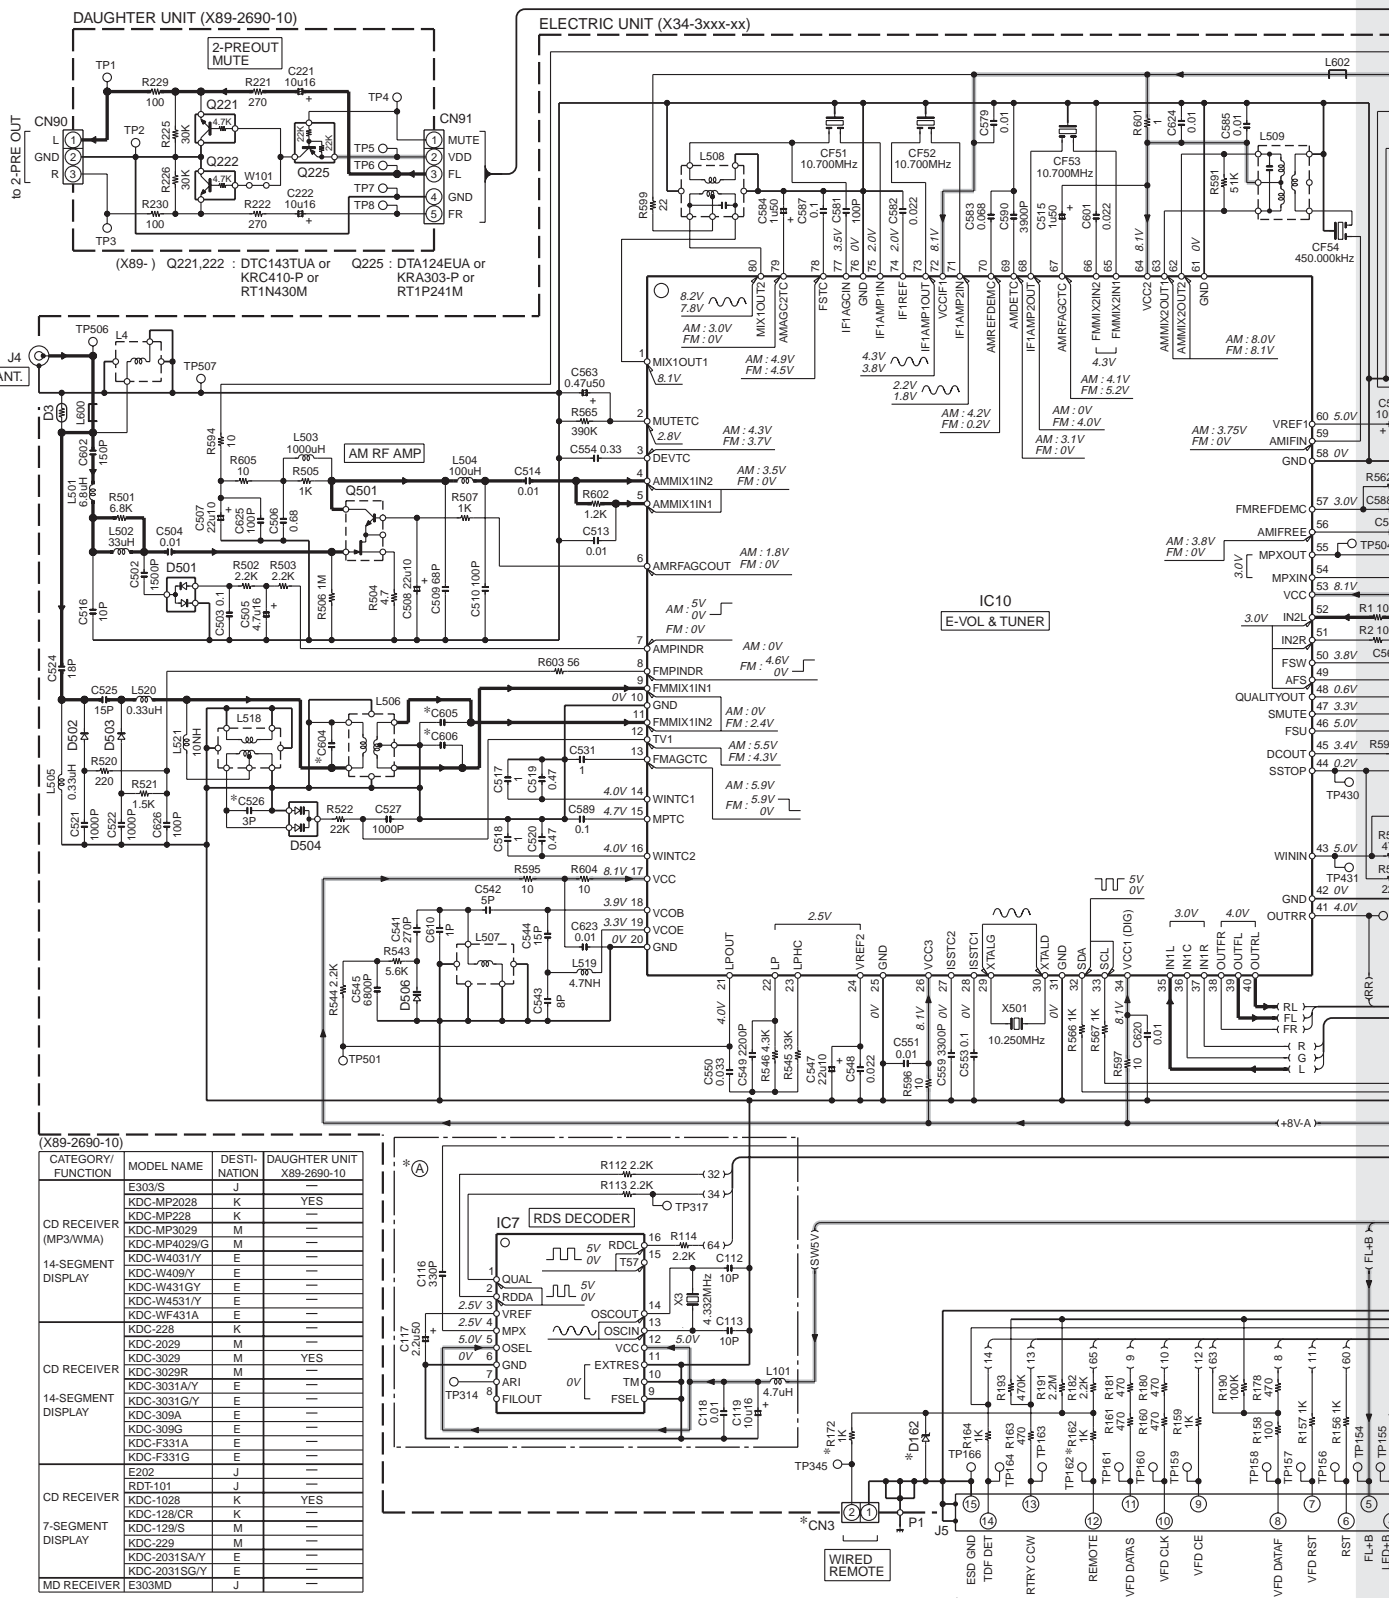

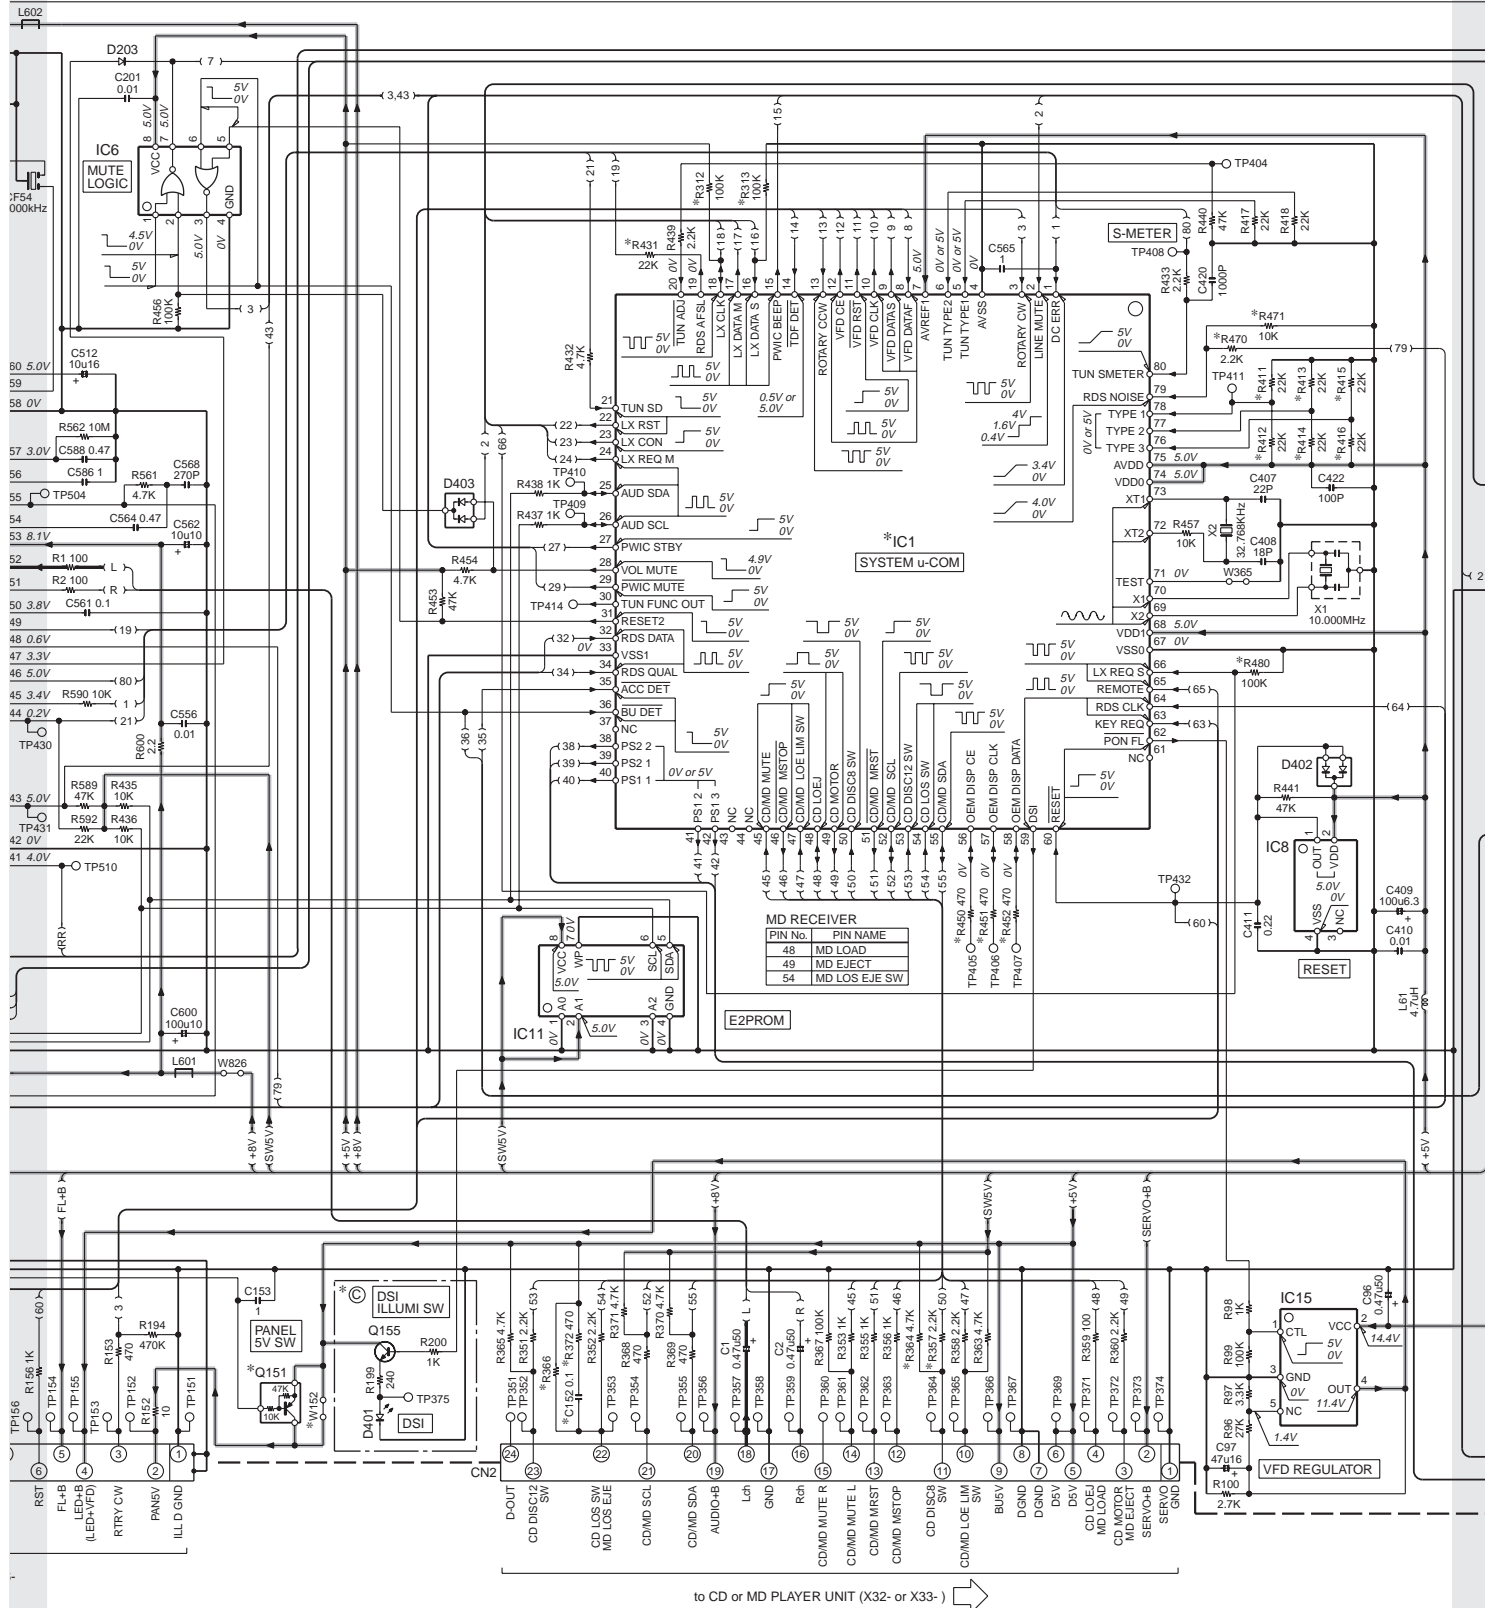


2SB1565




DTA114EE  
DTC143TUA  
2SA1576A  
2SC4617




2SD1858



2SC4081



DTA124EUA

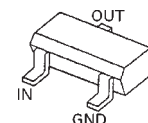



(X34-3xxx-xx)

CATEGORY/ FUNCTION	MODEL NAME	DESTI- NATION	X34-340x-xx	X34-341x-xx	X34-365x-xx	Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	C73	C81	C152	C255	C333, 334	C526	C604	C605, 606	CN3	D72, 74	D81	D162	D260	Q151	IC1
CD RECEIVER (MP3/WMA)	E303/S	J	0-01	-	-	-	YES	YES	YES	YES	YES	YES	-	33u	-	YES	68P	6P	-	YES	YES	YES	YES	YES	784225GC256A
	KDC-MP2028	K	0-10	-	-	-	YES	YES	YES	YES	YES	YES	-	33u	-	-	47P	1P	-	YES	YES	YES	YES	YES	784225GC256A
	KDC-MP228	K	0-11	-	-	-	YES	YES	YES	YES	YES	YES	-	33u	-	-	47P	1P	-	YES	YES	YES	YES	YES	784225GC256A
	KDC-MP3029	M	0-22	-	-	-	-	YES	YES	-	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC256A
	KDC-MP4029/G	M	0-21	-	-	-	YES	YES	YES	YES	YES	YES	-	33u	-	-	47P	1P	-	YES	YES	YES	YES	YES	784225GC256A
14-SEGMENT DISPLAY	KDC-W4031/Y	E	-	-	-	YES	YES	YES	YES	-	-	YES	-	33u	YES	-	47P	1P	YES	YES	YES	YES	YES	YES	784225GC256A
	KDC-W409/Y	E	2-72	-	-	-	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	-	YES	YES	-	-	YES	784225GC256A
	KDC-W431GY	E	2-73	-	-	-	-	YES	YES	YES	YES	-	YES	-	10u	YES	-	47P	1P	-	YES	YES	YES	YES	784225GC256A
	KDC-W4531/Y	E	2-71	-	-	-	YES	YES	YES	YES	-	YES	-	33u	YES	-	47P	1P	YES	YES	YES	YES	YES	YES	784225GC256A
	KDC-WF431A	E	2-74	-	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC256A
CD RECEIVER	KDC-228	K	-	0-10	-	-	-	YES	YES	YES	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC257A
	KDC-2029	M	-	-	0-22	-	-	YES	YES	YES	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC257A
	KDC-3029	M	-	-	0-23	-	-	YES	YES	YES	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC257A
	KDC-3029R	M	-	-	0-21	YES	-	YES	YES	YES	-	YES	-	10u	YES	-	47P	1P	-	YES	YES	YES	-	YES	784225GC257A
	KDC-3031A/Y	E	-	2-71	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
14-SEGMENT DISPLAY	KDC-3031G/Y	E	-	2-72	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
	KDC-309A	E	-	2-71	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
	KDC-309G	E	-	2-72	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
	KDC-F331A	E	-	2-73	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
	KDC-F331G	E	-	2-74	-	YES	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	YES	YES	YES	YES	-	YES	784225GC257A
CD RECEIVER	E202	J	-	-	0-00	-	-	YES	-	-	YES	-	-	10u	-	YES	68P	6P	-	-	-	-	-	-	784225GC258A
	RDT-101	J	-	-	0-01	-	-	YES	-	-	YES	-	-	10u	-	YES	68P	6P	-	-	-	-	-	-	784225GC258A
	KDC-1028	K	-	0-11	-	-	-	YES	YES	-	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC258A
	KDC-128/CR	K	-	0-12	-	-	-	YES	YES	-	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC258A
	KDC-129/S	M	-	-	0-25	-	-	YES	YES	-	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	YES	-	YES	784225GC258A
7-SEGMENT DISPLAY	KDC-229	M	-	-	0-24	-	-	YES	YES	-	YES	YES	-	10u	-	-	47P	1P	-	YES	YES	-	-	YES	784225GC258A
	KDC-2031SA/Y	E	-	2-75	-	-	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	-	YES	YES	-	-	YES	784225GC258A
	KDC-2031SG/Y	E	-	2-76	-	-	-	YES	YES	-	-	YES	-	10u	YES	-	47P	1P	-	YES	YES	-	-	YES	784225GC258A
	E303MD	J	0-02	-	-	-	-	-	-	-	YES	YES	YES	YES	10u	-	YES	68P	6P	-	-	YES	-	-	784225GC259A

CATEGORY/ FUNCTION	MODEL NAME	DESTI- NATION	X34-340x-xx	X34-341x-xx	X34-365x-xx	IC4	R72	R81	R82	R83	R89	R162	R172	R251	R255	R256	R257	R312, 313,480	R357, 364	R366	R372	R411	R412	R413	R414
CD RECEIVER (MP3/WMA)	E303/S	J	0-01	-	-	E-TDA7560A	YES	YES	47K	100K	YES	YES	-	33K	220	22K	30K	YES	YES	4.7K	-	-	YES	-	YES
	KDC-MP2028	K	0-10	-	-	E-TDA7560A	YES	YES	22K	47K	YES	YES	YES	33K	220	22K	30K	YES	-	4.7K	-	YES	-	YES	-
	KDC-MP228	K	0-11	-	-	E-TDA7560A	YES	YES	22K	47K	YES	YES	YES	33K	220	22K	30K	YES	-	4.7K	-	YES	-	YES	-
	KDC-MP3029	M	0-22	-	-	TB2904HQ	YES	YES	22K	47K	YES	YES	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	YES	-
	KDC-MP4029/G	M	0-21	-	-	E-TDA7560A	YES	YES	22K	47K	YES	YES	-	33K	220	22K	30K	YES	-	4.7K	-	YES	-	-	YES
14-SEGMENT DISPLAY	KDC-W4031/Y	E	-	-	-	E-TDA7560A	YES	YES	22K	47K	-	YES	YES	33K	220	22K	30K	-	-	4.7K	-	-	YES	YES	-
	KDC-W409/Y	E	2-72	-	-	TB2904HQ	YES	YES	22K	47K	-	-	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	-	YES
	KDC-W431GY	E	2-73	-	-	TB2904HQ	YES	YES	22K	47K	-	-	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	-	YES
	KDC-W4531/Y	E	2-71	-	-	E-TDA7560A	YES	YES	22K	47K	-	YES	YES	33K	220	22K	30K	YES	-	4.7K	-	-	YES	YES	-
	KDC-WF431A	E	2-74	-	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
CD RECEIVER	KDC-228	K	-	0-10	-	TB2903HQ	YES	YES	22K	47K	YES	YES	YES	150K	330	150K	12K	YES	-	4.7K	-	YES	-	YES	-
	KDC-2029	M	-	-	0-22	TB2903HQ	YES	YES	22K	47K	YES	YES	-	150K	330	150K	12K	YES	-	4.7K	-	YES	-	YES	-
	KDC-3029	M	-	-	0-23	TB2903HQ	YES	YES	22K	47K	YES	YES	-	150K	330	150K	12K	YES	-	4.7K	-	-	YES	-	YES
	KDC-3029R	M	-	-	0-21	TB2903HQ	YES	YES	22K	47K	-	YES	-	150K	330	150K	12K	YES	-	4.7K	-	-	YES	-	YES
	KDC-3031A/Y	E	-	2-71	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
14-SEGMENT DISPLAY	KDC-3031G/Y	E	-	2-72	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	KDC-309A	E	-	2-71	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	KDC-309G	E	-	2-72	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	KDC-F331A	E	-	2-73	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	KDC-F331G	E	-	2-74	-	TB2904HQ	YES	YES	22K	47K	-	YES	YES	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
CD RECEIVER	E202	J	-	-	0-00	TB2903HQ	-	-	47K	-	YES	-	-	150K	330	150K	12K	-	YES	4.7K	-	-	YES	-	YES
	RDT-101	J	-	-	0-01	TB2904HQ	-	-	47K	-	YES	-	-	150K	330	150K	12K	-	YES	4.7K	-	-	YES	-	YES
	KDC-1028	K	-	0-11	-	TB2903HQ	YES	YES	22K	47K	YES	YES	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	YES	-
	KDC-128/CR	K	-	0-12	-	TB2904HQ	YES	YES	22K	47K	YES	YES	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	YES	-
	KDC-129/S	M	-	-	0-25	TB2904HQ	YES	YES	22K	47K	YES	-	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	-	YES
7-SEGMENT DISPLAY	KDC-229	M	-	-	0-24	TB2903HQ	YES	YES	22K	47K	YES	-	-	150K	330	150K	12K	-	-	4.7K	-	YES	-	-	YES
	KDC-2031SA/Y	E	-	2-75	-	TB2904HQ	YES	YES	22K	47K	-	-	-	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	KDC-2031SG/Y	E	-	2-76	-	TB2904HQ	YES	YES	22K	47K	-	-	-	150K	330	150K	12K	-	-	4.7K	-	-	YES	YES	-
	E303MD	J	0-02	-	-	TB2904HQ	-	YES	47K	100K	YES	-	-	150K	330	150K	7.5K	YES	-	100K	YES	-	YES	-	YES


CATEGORY/ FUNCTION	MODEL NAME	DESTI- NATION	X34-340x-xx	X34-341x-xx	X34-365x-xx	R415	R416	R431, 470	R450- 452	R471	W51	W152	W251, 346,368	W252	WH1
CD RECEIVER (MP3/WMA)	E303/S	J	0-01	-	-	YES	-	-	-	YES	-	-	-	YES	-
	KDC-MP2028	K	0-10	-	-	YES	-	-	YES	YES	-	-	-	YES	YES
	KDC-MP228	K	0-11	-	-	YES	-	-	YES	YES	-	-	-	YES	-
14-SEGMENT DISPLAY	KDC-MP3029	M	0-22	-	-	-	YES	-	-	YES	-	-	YES	-	-
	KDC-MP4029/G	M	0-21	-	-	YES	-	-	-	YES	-	-	-	YES	-
	KDC-W4031/Y	E	-	-	-	-	YES	YES	-	-	YES	-	-	-	-
	KDC-W409/Y	E	2-72	-	-	-	YES	YES	-	-	YES	-	-	YES	-
	KDC-W431G/Y	E	2-73	-	-	-	YES	-	-	YES	-	-	YES	-	-
	KDC-W4531/Y	E	2-71	-	-	YES	-	YES	-	-	YES	-	-	YES	-
	KDC-WF431A	E	2-74	-	-	-	YES	YES	-	-	YES	-	YES	-	-
	KDC-F331G	E	-	-	-	-	-	-	-	-	-	-	-	-	-
CD RECEIVER	KDC-228	K	-	0-10	-	YES	-	-	YES	YES	-	-	YES	-	-
	KDC-2029	M	-	-	0-22	-	YES	-	-	YES	-	-	YES	-	-
14-SEGMENT DISPLAY	KDC-3029	M	-	-	0-23	-	YES	-	-	YES	-	-	YES	-	YES
	KDC-3029R	M	-	-	0-21	YES	-	YES	-	-	YES	-	YES	-	-
	KDC-3031A/Y	E	-	2-71	-	-	YES	YES	-	-	YES	-	YES	-	-
	KDC-3031G/Y	E	-	2-72	-	YES	-	YES	-	-	YES	-	YES	-	-
	KDC-309A	E	-	2-71	-	-	YES	YES	-	-	YES	-	YES	-	-
	KDC-309G	E	-	2-72	-	YES	-	YES	-	-	YES	-	YES	-	-
	KDC-F331A	E	-	2-73	-	-	YES	YES	-	-	YES	-	YES	-	-
	KDC-F331G	E	-	2-74	-	YES	-	YES	-	-	YES	-	YES	-	-
CD RECEIVER	E202	J	-	-	0-00	-	YES	-	-	-	YES	-	-	YES	-
	RD1-101	J	-	-	0-01	-	YES	-	-	YES	-	-	YES	-	-
	KDC-1028	K	-	0-11	-	-	YES	-	-	YES	-	-	YES	-	YES
	KDC-128/CR	K	-	0-12	-	-	YES	-	-	YES	-	-	YES	-	-
	KDC-129/S	M	-	-	0-25	-	YES	-	-	YES	-	-	YES	-	-
	KDC-229	M	-	-	0-24	-	YES	-	-	YES	-	-	YES	-	-
	KDC-2031SA/Y	M	-	2-75	-	-	YES	-	-	YES	YES	-	YES	-	-
	KDC-2031SG/Y	E	-	2-76	-	YES	-	-	-	YES	-	-	YES	-	-
MD RECEIVER	E303MD	J	0-02	-	-	YES	-	-	-	YES	-	YES	YES	-	-




ANODE CONNECTION

PIN NAME	3GA,3GB	2G	1GA,1GB
P1	—	col (Downside)	S1
P2	2d	2d	2d
P3	1d	1d	1d
P4	2n	2n	2n
P5	1n	1n	1n
P6	2p	2p	2p
P7	1p	1p	1p
P8	2r	2r	2r
P9	1r	1r	1r
P10	2e	2e	2e
P11	1e	1e	1e
P12	2c	2c	2c
P13	1c	1c	1c
P14	2g	2g	2g
P15	1g	1g	1g
P16	2m	2m	2m
P17	1m	1m	1m
P18	2f	2f	2f
P19	1f	1f	1f
P20	2a	2a	2a
P21	1a	1a	1a
P22	2h	2h	2h
P23	1h	1h	1h
P24	2j	2j	2j
P25	1j	1j	1j
P26	2k	2k	2k
P27	1k	1k	1k
P28	2b	2b	2b
P29	1b	1b	1b
P30	col (Upside)	S2	
P31	—	S3	
P32	—	S4	
P33	—	S5	
P34	—	S6	
P35	col	Dp	S7
P36	3d	3d	S8
P37	3n	3n	S9
P38	3p	3p	S10
P39	3r	3r	PTY
P40	3e	3e	IN
P41	3c	3c	ST
P42	3g	3g	ch
P43	3m	3m	d
P44	3f	3f	e
P45	3b	3b	c
P46	3k	3k	g
P47	3j	3j	f
P48	3h	3h	b
P49	3a	3a	a

SWITCH UNIT (X16-293x-xx)

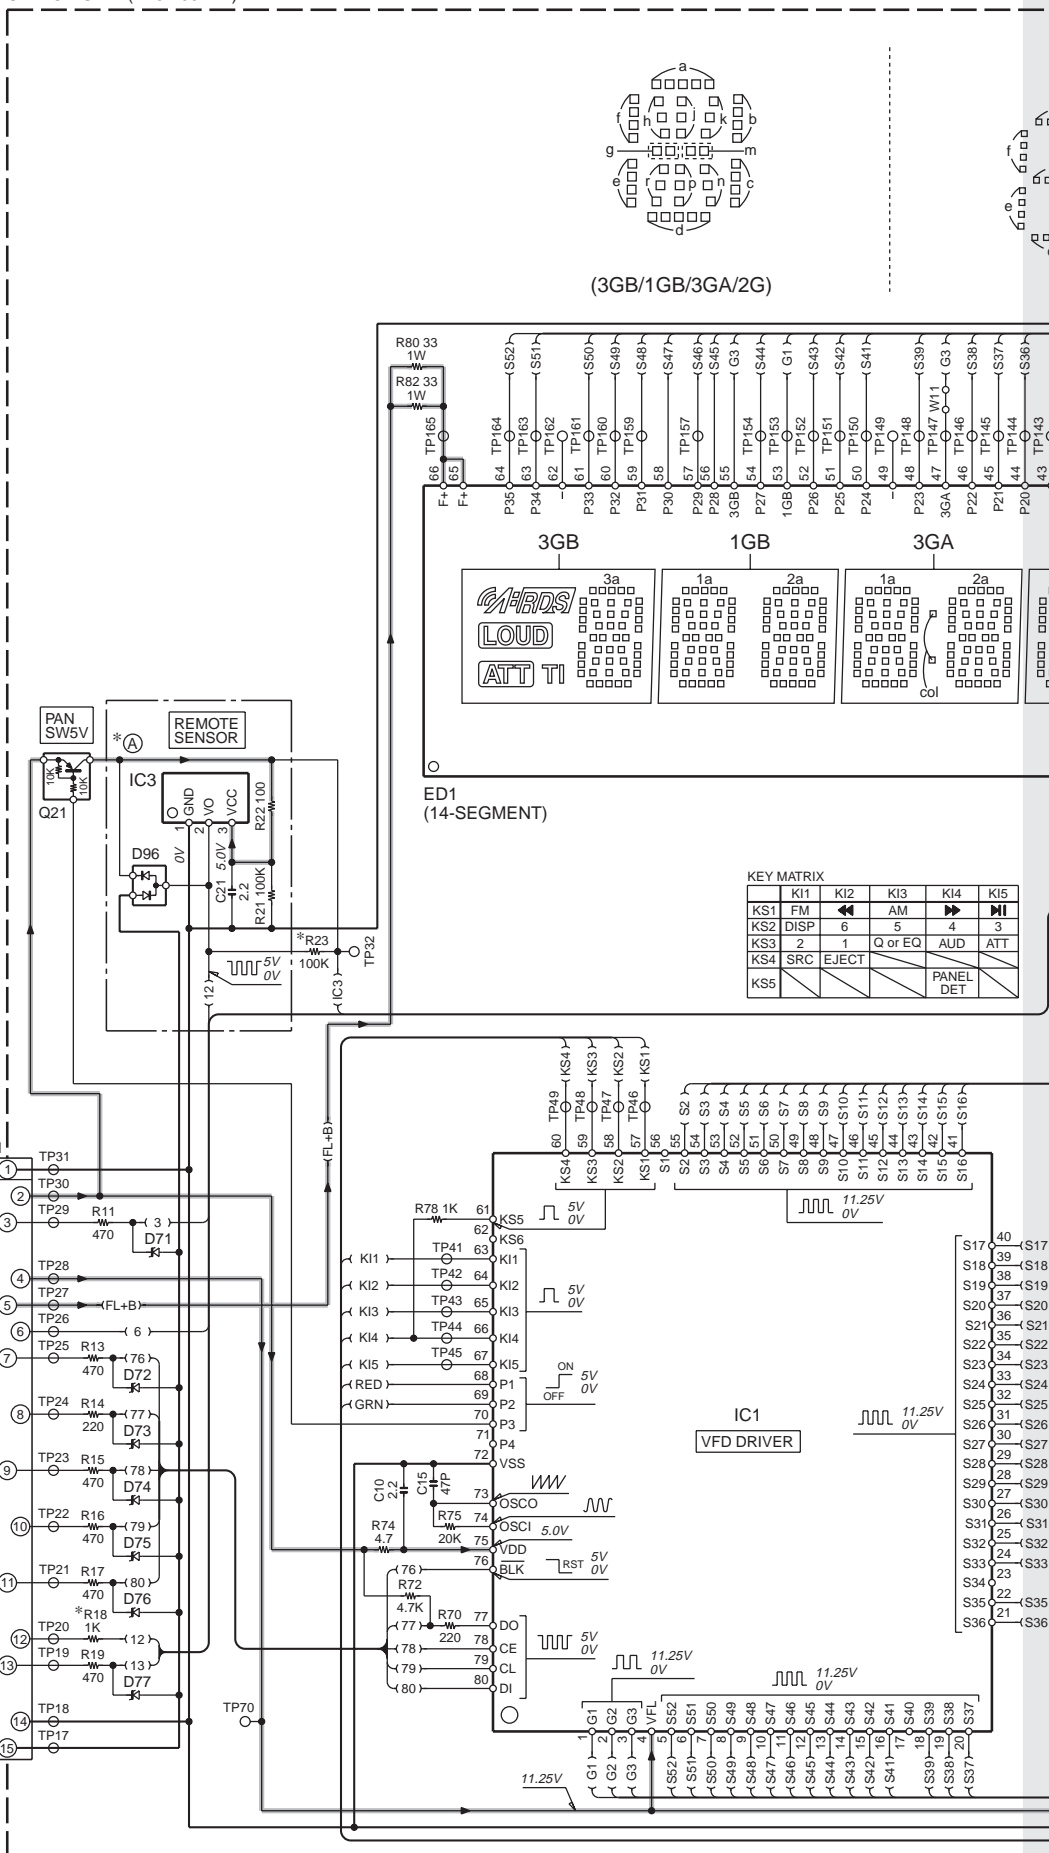

# KDC-W4031/W4031Y/W409/W409Y KDC-W431GY/W4531/W4531Y/WF431A

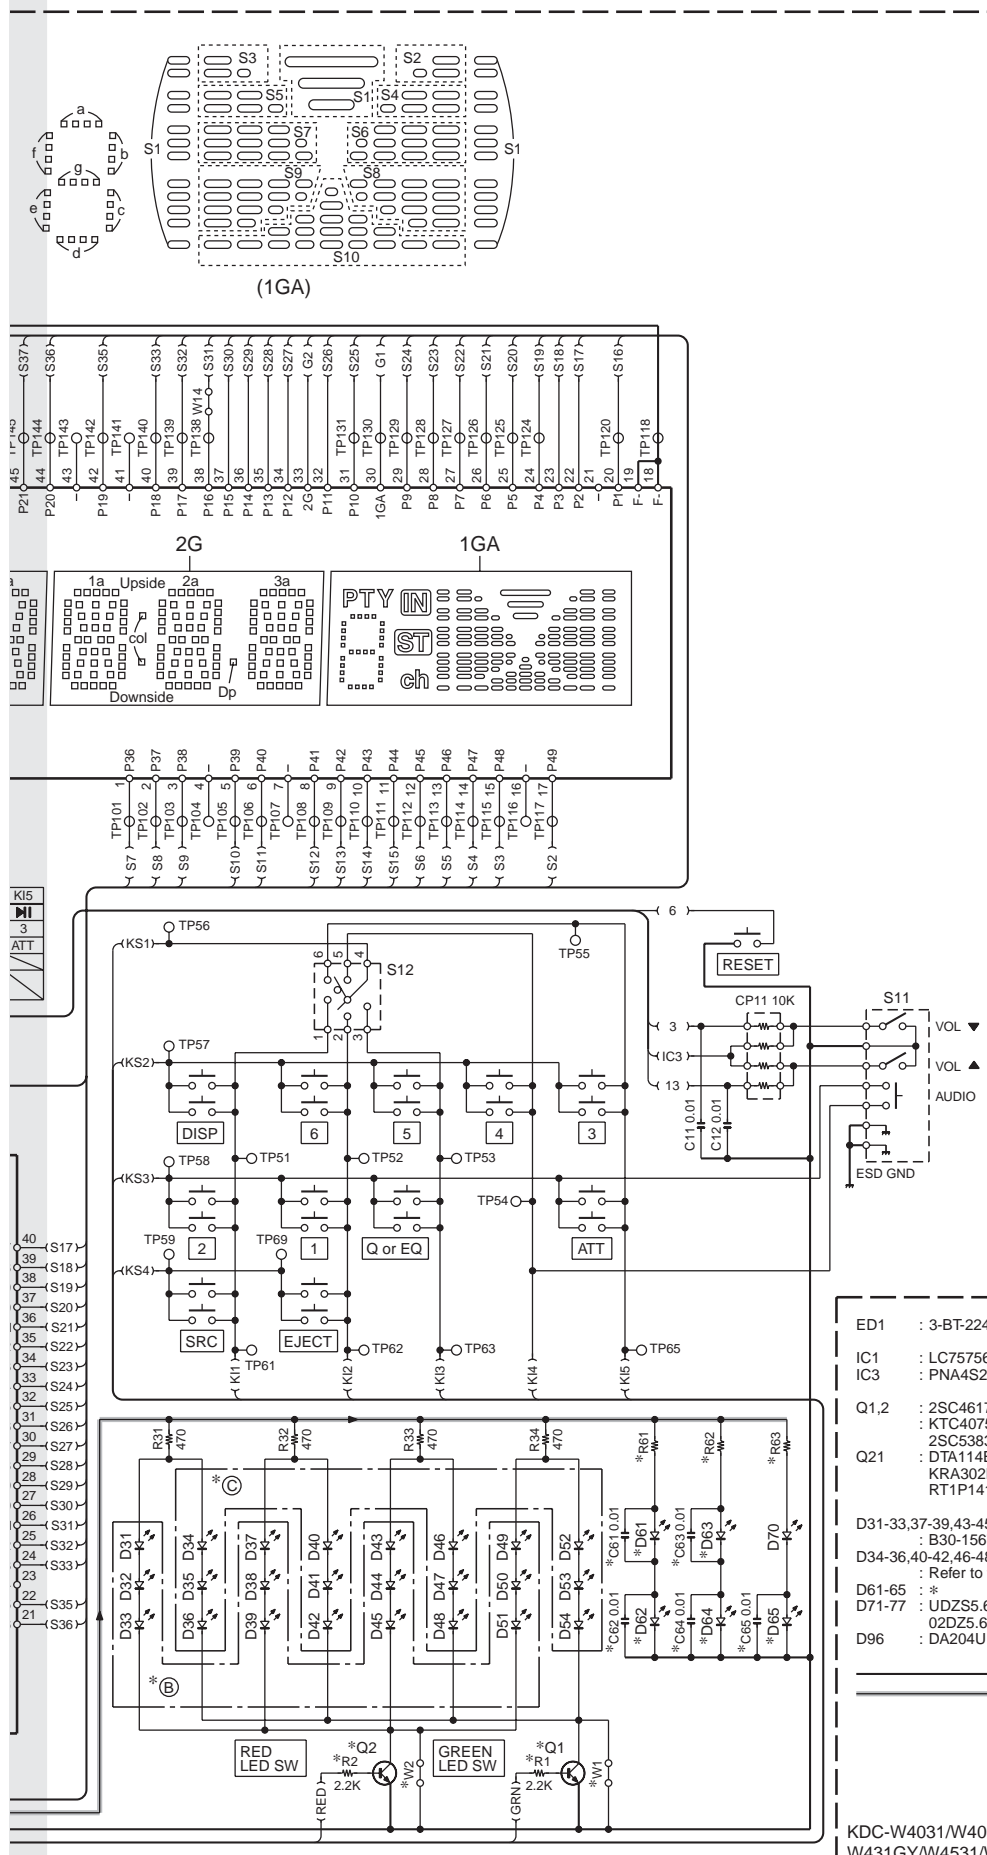

**CAUTION :** For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).

⚠ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

- DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.

MODEL NAME	DEST. NATION	UNIT No.	(A)	(B)	(C)	C61-65	D61-65	Q1,2	R1,2	R18	R23	R61	R62	R63	W1	W2
E303/S	J	0-01	YES	—	YES	YES	B30-1729-05	—	—	—	—	—	—	—	—	—
KDC-IP2028	K	0-10	YES	YES	YES	YES	B30-1729-05	—	—	—	—	—	—	—	—	—
KDC-IP3029	M	0-23	YES	—	YES	—	B30-1533-05	—	—	—	—	—	—	—	—	—
KDC-IP4029G	M	0-21	YES	—	YES	—	B30-1729-05	—	—	—	—	—	—	—	—	—
KDC-W4031Y	E	2-72	—	YES	YES	YES	B30-1729-05	YES	YES	YES	YES	YES	YES	YES	YES	YES
KDC-W409Y	E	2-74	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-W431GY	E	2-74	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-W4531Y	E	2-71	YES	YES	YES	YES	B30-1729-05	YES	YES	YES	YES	YES	YES	YES	YES	YES
KDC-WF431A	E	2-75	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-228	K	0-22	YES	YES	YES	YES	B30-1567-05	—	—	—	—	—	—	—	—	—
KDC-2029	M	0-23	YES	—	YES	—	B30-1533-05	—	—	—	—	—	—	—	—	—
KDC-3029	M	0-22	YES	YES	YES	YES	B30-1567-05	—	—	—	—	—	—	—	—	—
KDC-3029R	M	0-22	YES	YES	YES	YES	B30-1567-05	—	—	—	—	—	—	—	—	—
KDC-3031A/Y	E	2-73	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-3031GY	E	2-74	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-309A	E	2-73	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-309G	E	2-74	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-F331A	E	2-73	—	—	—	—	—	—	—	—	—	—	—	—	—	—
KDC-F331G	E	2-74	—	—	—	—	—	—	—	—	—	—	—	—	—	—
MD RECEIVER E303MD	J	0-02	—	—	—	—	—	—	—	—	—	—	—	—	—	—

ED1 : 3-BT-224N

IC1 : LC75756W

IC3 : PNA4S22M

Q1,2 : 2SC4617 or  
KTC4075EP(Y,GR or  
2SC5383(E,F)

Q21 : DTA114EE or  
KRA302E-P or  
RT1P141U

D31-33,37-39,43-45,49-51,70  
: B30-1567-05 (COLOR:RED)

D34-36,40-42,46-48,52-54  
: Refer to the parts list.

D61-65 : \*

D71-77 : UDZS5.6B or  
02DZ5.6F-Y

D96 : DA204U

— GND LINE  
— +B LINE


KDC-W4031/W4031Y/W409/W409Y/  
W431GY/W4531/W4531Y/WF431A (2/2)

CD PLAYER UNIT (X32-5500-00)





KDC-W4031/W4031Y/W409/W409Y  
KDC-W431GY/W4531/W4531Y/WF431A

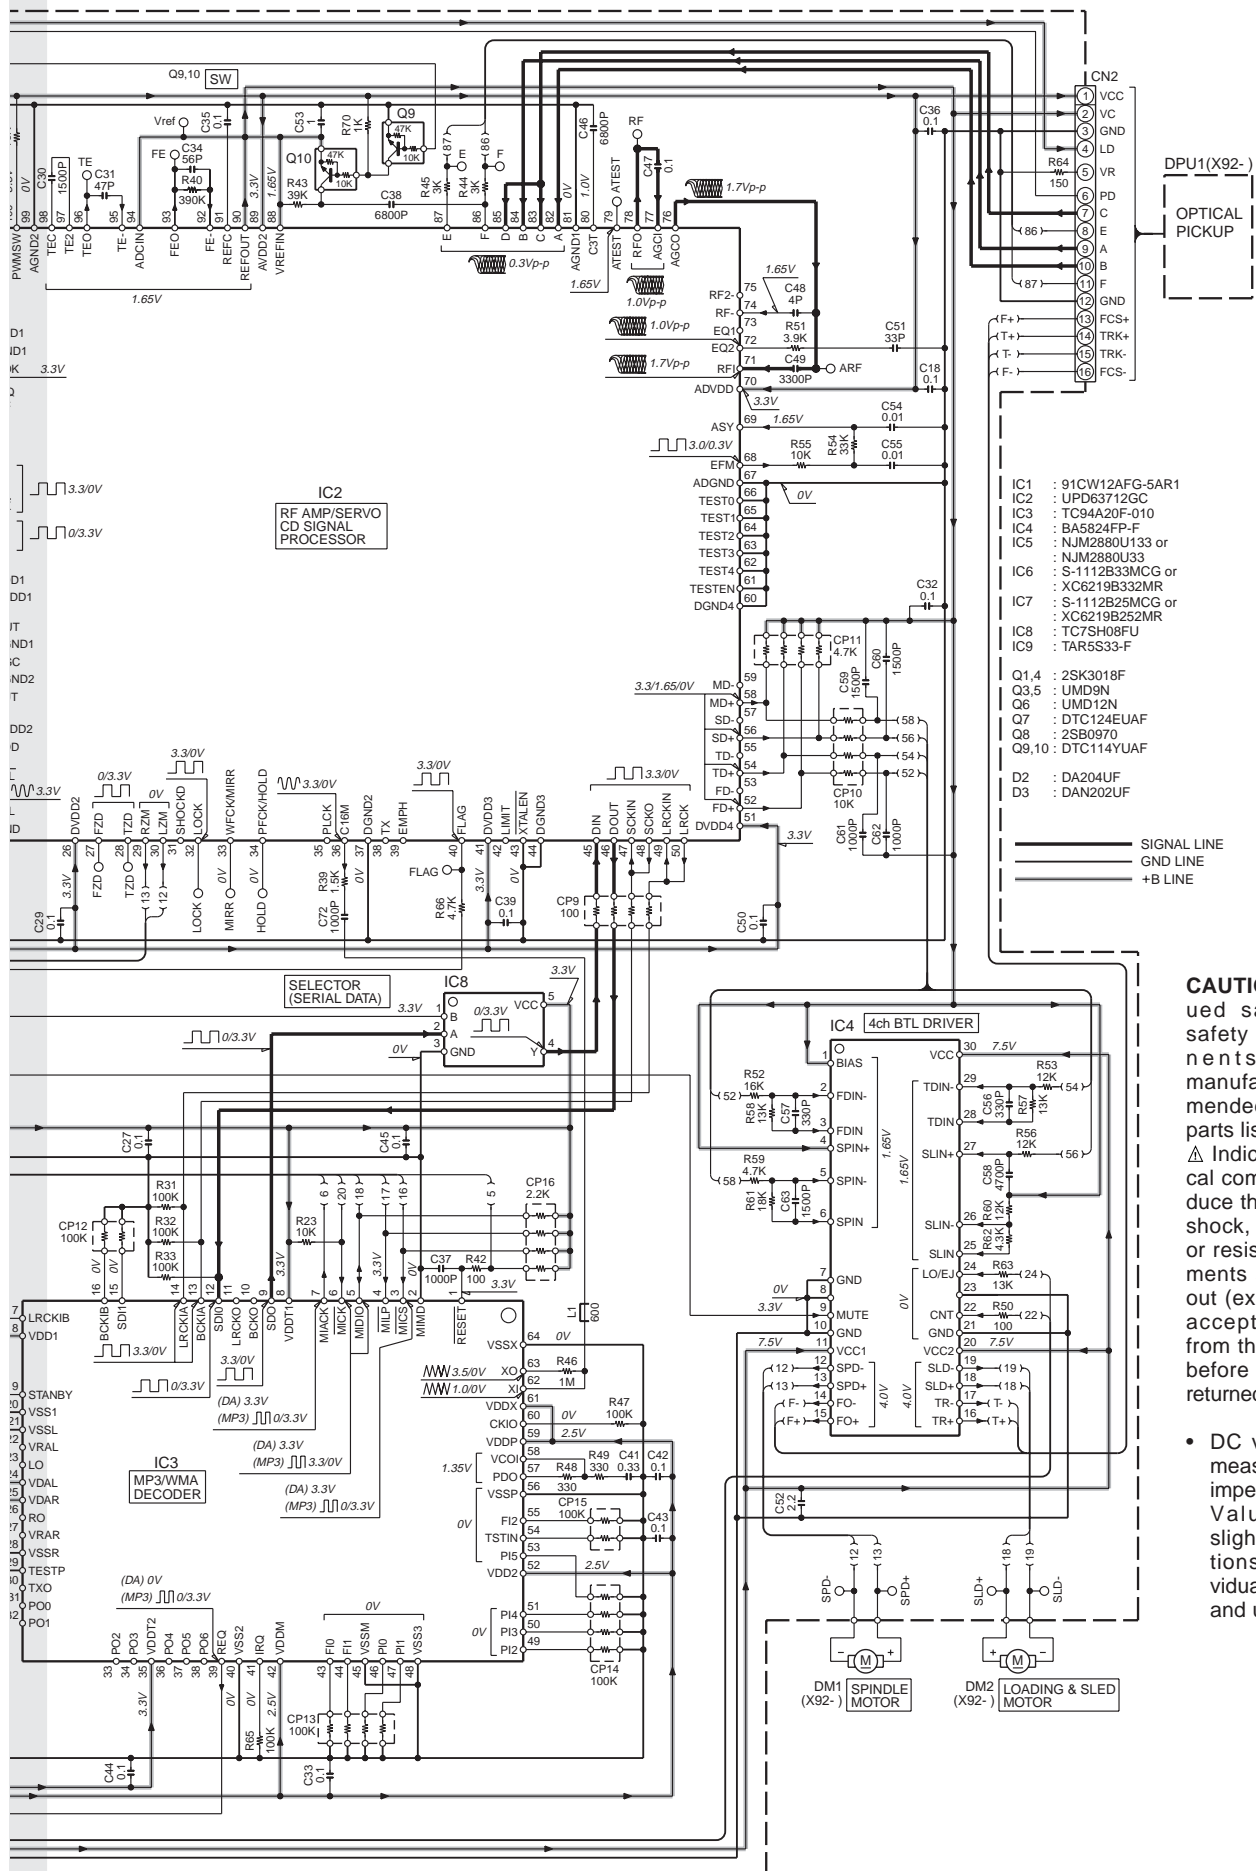

**CAUTION :** For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).  
△ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

- DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.





PARTS LIST

\* New parts  
Parts without **Parts No.** are not supplied.  
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.  
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-W4031/W4031Y/W409/W409Y/W431GY/W4531/W4531Y/WF431A					
201	1C	*	A02-2736-03	PLASTIC CABINET ASSY	
204	2C		A22-2863-13	SUB PANEL ASSY	
206	2C	*	A46-1815-01	REAR COVER	
207	1D	*	A52-0804-12	TOP PLATE	
PA1	3C	*	A64-3454-02	PANEL ASSY	EE7
PA1	3C	*	A64-3455-02	PANEL ASSY	E1E8
PA1	3C	*	A64-3456-02	PANEL ASSY	E2E9
PA1	3C	*	A64-3457-02	PANEL ASSY	E3
PA1	3C	*	A64-3466-02	PANEL ASSY	E6
-			B46-0100-50	WARRANTY CARD	EE1E2
-			B46-0100-50	WARRANTY CARD	E6
-			B46-0182-14	ID CARD	E1E2E6
-			B46-0606-04	ID CARD	E3E8E9
-			B46-0612-14	ID CARD	EE7
-		*	B64-2932-00	INST. MANUAL (ENGLISH)	EE1E2
-		*	B64-2932-00	INST. MANUAL (ENGLISH)	E3E7E8
-		*	B64-2932-00	INST. MANUAL (ENGLISH)	E9
-		*	B64-2933-00	INST. MANUAL (FRE, GER)	EE1E2
-		*	B64-2933-00	INST. MANUAL (FRE, GER)	E6
-		*	B64-2934-00	INST. MANUAL (DUT, ITA)	EE1E2
-		*	B64-2935-00	INST. MANUAL (SPA, POR)	EE1E2
-		*	B64-2936-00	INST. MANUAL (RUSSIAN)	E3E7E8
-		*	B64-2936-00	INST. MANUAL (RUSSIAN)	E9
-		*	B64-2939-00	INST. MANUAL (POL, CZE, HUN)	E8
-		*	B64-2940-00	INST. MANUAL (CRO, SLO)	E8
209	1C	*	B07-3122-01	ESCUTCHEON	EE1E3
209	1C	*	B07-3122-01	ESCUTCHEON	E6E7E8
209	1C	*	B07-3123-01	ESCUTCHEON	E2E9
210	3C	*	B19-2304-03	LIGHTING BOARD	
213	3C		B43-1518-04	BADGE	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	2C		D21-2329-04	SHAFT	
226	3C	*	E29-2027-02	CONDUCTIVE RUBBER	
229	2D	*	E30-6402-05	CORD WITH CONNECTOR	EE1E2
229	2D	*	E30-6402-05	CORD WITH CONNECTOR	E6E7E8
229	2D	*	E30-6402-05	CORD WITH CONNECTOR	E9
△ DC1	1C	*	E30-6413-05	DC CORD	
△ DC1	1C	*	E30-6427-05	DC CORD	
FC1	2D	*	E39-0718-05	FLAT CABLE	
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C	*	G01-3244-04	COMPRESSION SPRING	
-		*	H10-4919-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	E7E8E9
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	EE1E2
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E3E6

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-3298-03	ITEM CARTON CASE (KDC-W4531)	E
-		*	H54-3299-03	ITEM CARTON CASE (KDC-W4031)	E1
-		*	H54-3300-03	ITEM CARTON CASE (KDC-W409)	E2
-		*	H54-3301-03	ITEM CARTON CASE (KDC-W431GY)	E3
-		*	H54-3310-03	ITEM CARTON CASE (KDC-W4531Y)	E7
-		*	H54-3311-03	ITEM CARTON CASE (KDC-W4031Y)	E8
-		*	H54-3312-03	ITEM CARTON CASE (KDC-W409Y)	E9
-		*	H54-3361-03	ITEM CARTON CASE (KDC-WF431A)	E6
241	3C	*	J19-7046-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
251	3C	*	K24-4279-04	PUSH KNOB (AUTO or TI)	
252	3C	*	K24-4280-04	PUSH KNOB (EJECT)	
253	3C	*	K24-4281-04	PUSH KNOB (RELEASE)	
254	3C	*	K25-1689-03	PUSH KNOB (ATT/Q)	
255	3C	*	K25-1690-02	PUSH KNOB (SRC/PRESET/RESET)	E3E6
255	3C	*	K25-1691-02	PUSH KNOB (SRC/PRESET/RESET)	EE1E2
255	3C	*	K25-1691-02	PUSH KNOB (SRC/PRESET/RESET)	E7E8E9
257	3C	*	K29-7132-03	KNOB ASSY (VOL)	
259	3C	*	K29-7134-03	KNOB BASE (FM/AM)	
261	3C	*	K29-7139-03	KEY TOP (FM/AM)	EE1E2
261	3C	*	K29-7139-03	KEY TOP (FM/AM)	E7E8E9
261	3C	*	K29-7140-03	KEY TOP (FM/AM)	E3E6
A	2C		N29-0205-04	RETAINING RING (1.5)	
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
D	3D	*	N83-3005-48	PAN HEAD TAPTITE SCREW	
E	2D	*	N86-2610-48	BINDING HEAD TAPTITE SCREW	
268	1C		T90-0523-05	ANTENNA ADAPTOR	
268	1C		T90-0534-05	ANTENNA ADAPTOR	
DME1	1D		X92-4850-00	MECHANISM ASSY	
SWITCH UNIT (X16-2932-7x)					
D31-33			B30-1567-05	LED (RED)	EE1E2
D31-33			B30-1567-05	LED (RED)	E6E7E8
D31-33			B30-1567-05	LED (RED)	E9
D34-36			B30-1533-05	LED (PG)	EE1E2
D34-36			B30-1533-05	LED (PG)	E3E7E8
D34-36			B30-1533-05	LED (PG)	E9
D37-39			B30-1567-05	LED (RED)	EE1E2
D37-39			B30-1567-05	LED (RED)	E6E7E8
D37-39			B30-1567-05	LED (RED)	E9
D40-42			B30-1533-05	LED (PG)	EE1E2
D40-42			B30-1533-05	LED (PG)	E3E7E8
D40-42			B30-1533-05	LED (PG)	E9
D43-45			B30-1567-05	LED (RED)	EE1E2
D43-45			B30-1567-05	LED (RED)	E6E7E8
D43-45			B30-1567-05	LED (RED)	E9
D46-48			B30-1533-05	LED (PG)	EE1E2
D46-48			B30-1533-05	LED (PG)	E3E7E8
D46-48			B30-1533-05	LED (PG)	E9
D49-51			B30-1567-05	LED (RED)	EE1E2
D49-51			B30-1567-05	LED (RED)	E6E7E8
D49-51			B30-1567-05	LED (RED)	E9

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

28 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.



## PARTS LIST

## SWITCH UNIT (X16-2932-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
D52-54			B30-1533-05	LED (PG)	EE1E2
D52-54			B30-1533-05	LED (PG)	E3E7E8
D52-54			B30-1533-05	LED (PG)	E9
D61-65		*	B30-1533-05	LED (PG)	E3
D61-65		*	B30-1729-05	LED (BLUE)	EE1E2
D61-65		*	B30-1729-05	LED (BLUE)	E6E7E8
D61-65		*	B30-1729-05	LED (BLUE)	E9
D70			B30-1567-05	LED (RED)	
C10			CK73GB0J225K	CHIP C 2.2UF K	
C11,12			CK73GB1H103K	CHIP C 0.010UF K	
C15			CC73GCH1H470J	CHIP C 47PF J	
C21			CK73FB1A225K	CHIP C 2.2UF K	EE7
C61-65			CK73GB1H103K	CHIP C 0.010UF K	EE1E2
C61-65			CK73GB1H103K	CHIP C 0.010UF K	E6E7E8
C61-65			CK73GB1H103K	CHIP C 0.010UF K	E9
J1		*	E59-0840-05	RECTANGULAR PLUG	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	EE1E2
R1,2			RK73GB2A222J	CHIP R 2.2K J 1/10W	E7E8E9
R1,2			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R11			RK73GB2A471J	CHIP R 470 J 1/10W	
R13			RK73GB2A471J	CHIP R 470 J 1/10W	
R14			RK73GB2A221J	CHIP R 220 J 1/10W	
R15-17			RK73GB2A471J	CHIP R 470 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A471J	CHIP R 470 J 1/10W	EE7
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A101J	CHIP R 100 J 1/10W	EE7
R23			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2E3
R23			RK73GB2A104J	CHIP R 100K J 1/10W	E6E8E9
R31-34			RK73FB2B471J	CHIP R 470 J 1/8W	
R61			RK73EB2E621J	CHIP R 620 J 1/4W	E3
R61,62			RK73EB2E301J	CHIP R 300 J 1/4W	EE1E2
R61,62			RK73EB2E301J	CHIP R 300 J 1/4W	E6E7E8
R61,62			RK73EB2E301J	CHIP R 300 J 1/4W	E9
R62,63			RK73EB2E561J	CHIP R 560 J 1/4W	E3
R63			RK73EB2E471J	CHIP R 470 J 1/4W	EE1E2
R63			RK73EB2E471J	CHIP R 470 J 1/4W	E6E7E8
R63			RK73EB2E471J	CHIP R 470 J 1/4W	E9
R70			RK73GB2A221J	CHIP R 220 J 1/10W	
R72			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R74			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R75			RK73GB2A203J	CHIP R 20K J 1/10W	
R78			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R80		*	RK73SB3A330J	CHIP R 33 J 1W	
R82		*	RK73SB3A330J	CHIP R 33 J 1W	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	E3
W2			R92-1252-05	CHIP R 0 OHM J 1/16W	E6
W11			R92-1252-05	CHIP R 0 OHM J 1/16W	
W14			R92-1252-05	CHIP R 0 OHM J 1/16W	
S12			S70-0106-05	TACT SWITCH	
S11		*	T99-0457-05	ROTARY ENCODER	

Ref. No.	Add	New	Parts No.	Description	Destination
D71-77			UDZS5.6B	ZENER DIODE	
D71-77		*	02DZ5.6F-Y	ZENER DIODE	EE7
D96			DA204U	DIODE	
ED1		*	3-BT-224N	FLUORESCENT INDICATOR TUBE	
IC1		*	LC75756W	MOS-IC	
IC3			PNA4S22M	ANALOGUE IC	EE7
Q1,2		*	KTC4075EP(Y,GR)	TRANSISTOR	EE1E2
Q1,2		*	KTC4075EP(Y,GR)	TRANSISTOR	E7E8E9
Q1,2			2SC4617	TRANSISTOR	EE1E2
Q1,2			2SC4617	TRANSISTOR	E7E8E9
Q1,2		*	2SC5383(E,F)	TRANSISTOR	EE1E2
Q1,2		*	2SC5383(E,F)	TRANSISTOR	E7E8E9
Q21			DTA114EE	DIGITAL TRANSISTOR	
Q21		*	KRA302E-P	DIGITAL TRANSISTOR	
Q21			RT1P141U	TRANSISTOR	
CD PLAYER UNIT (X32-5500-00)					
C1,2			CK73GB1H222K	CHIP C 2200PF K	
C3,4			CK73GB0J105K	CHIP C 1.0UF K	
C5			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7-9			CK73GB0J105K	CHIP C 1.0UF K	
C10-15			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73FB0J475K	CHIP C 4.7UF K	
C17			CK73FB0J106M	CHIP C 10UF M	
C18			CK73GB1C104K	CHIP C 0.10UF K	
C19			CK73FB0J475K	CHIP C 4.7UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C22,23			CK73GB0J105K	CHIP C 1.0UF K	
C24-27			CK73GB1C104K	CHIP C 0.10UF K	
C28			CK73FB0J106M	CHIP C 10UF M	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32,33			CK73GB1C104K	CHIP C 0.10UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1C104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73GB1A334K	CHIP C 0.33UF K	
C42-45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1C104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J105K	CHIP C 1.0UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CK73GB1H331K	CHIP C 330PF K	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59,60			CK73GB1H152K	CHIP C 1500PF K	
C61,62			CK73GB1H102K	CHIP C 1000PF K	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A

E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

## PARTS LIST

## CD PLAYER UNIT (X32-5500-00)

Ref. No.	Added	New	Parts No.	Description	Destination
C63			CK73GB1H152K	CHIP C 1500PF K	
C64			CK73GB1C104K	CHIP C 0.10UF K	
C66			CC73GCH1H120J	CHIP C 12PF J	
C67			CC73GCH1H180J	CHIP C 18PF J	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73FB1A225K	CHIP C 2.2UF K	
C70			CK73FB1A105K	CHIP C 1.0UF K	
C71			CK73FB0J106M	CHIP C 10UF M	
C72			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2083-05	FLAT CABLE CONNECTOR	
CN2			E41-2068-05	FLAT CABLE CONNECTOR	
CN2			E41-2085-15	FLAT CABLE CONNECTOR	
L1,2			L92-0386-05	CHIP FERRITE	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
X2			L78-0896-05	RESONATOR (16.00MHZ)	
CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73GB2A100J	CHIP R 10 J 1/10W	
R2			R92-3494-05	CHIP R 5.6 F 1/2W	
R3,4			RK73FB2B331J	CHIP R 330 J 1/8W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RN73GH1J223D	CHIP R 22K D 1/16W	
R7			RK73GB2A104J	CHIP R 100K J 1/10W	
R8			RN73GH1J393D	CHIP R 39K D 1/16W	
R9			RK73GB2A104J	CHIP R 100K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14-17			RK73GB2A104J	CHIP R 100K J 1/10W	
R18			RK73GB2A101J	CHIP R 100 J 1/10W	
R21-23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24,25			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R27			RK73GB2A104J	CHIP R 100K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A221J	CHIP R 220 J 1/10W	
R39			RK73GB2A152J	CHIP R 1.5K J 1/10W	

Ref. No.	Added	New	Parts No.	Description	Destination
R40			RK73GB2A394J	CHIP R 390K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	
R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A151J	CHIP R 150 J 1/10W	
R65			RK73GB2A104J	CHIP R 100K J 1/10W	
R66			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R67			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R68,69			RK73GB2A104J	CHIP R 100K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204UF	DIODE	
D3			DAN202UF	DIODE	
IC1			91CW12AFG-5AR1	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	
IC3			TC94A20F-010	MOS-IC	
IC4			BA5824FP-F	ANALOGUE IC	
IC5			NJM2880U133	ANALOGUE IC	
IC5			NJM2880U33	ANALOGUE IC	
IC6			S-1112B33MCG	ANALOGUE IC	
IC6			XC6219B332MR	ANALOGUE IC	
IC7			S-1112B25MCG	ANALOGUE IC	
IC7			XC6219B252MR	ANALOGUE IC	
IC8			TC7SH08FU	MOS-IC	
IC9			TAR5S33-F	ANALOGUE IC	
Q1			2SK3018F	FET	
Q3			UMD9N	TRANSISTOR	
Q4			2SK3018F	FET	
Q5			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EUAF	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9,10			DTC114YUAF	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3402-7x)					
D401			B30-1567-05	LED (RED)	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-3402-7x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C1,2			CD04AT1HR47M	ELECTRO 0.47UF 50WV		C503			CK73GB1C104K	CHIP C 0.10UF K	
C3-6			C90-5684-05	ELECTRO 0.22UF 50WV		C504			CK73GB1H103K	CHIP C 0.010UF K	
C3-6		*	C90-6735-05	ELECTRO 0.22UF 50WV		C505			CD04AT1C4R7M	ELECTRO 4.7UF 16WV	
C51			C90-5683-05	ELECTRO 3300UF 16WV	E3E6	C506			CK73GB1A684K	CHIP C 0.68UF K	
C51		*	C90-6746-05	ELECTRO 3300UF 16WV	EE1E2	C507,508			CD04AT1A220M	ELECTRO 22UF 10WV	
C51		*	C90-6746-05	ELECTRO 3300UF 16WV	E7E8E9	C509			CC73GCH1H680J	CHIP C 68PF J	
C52,53			CK73GB1H102K	CHIP C 1000PF K		C510			CC73GCH1H101J	CHIP C 100PF J	
C54,55			CK73GB1H103K	CHIP C 0.010UF K		C512			CD04AT1C100M	ELECTRO 10UF 16WV	
C69			CK73GB1A474K	CHIP C 0.47UF K		C513,514			CK73GB1H103K	CHIP C 0.010UF K	
C71			CD04AS1C470M	ELECTRO 47UF 16WV		C515			CD04AT1H010M	ELECTRO 1UF 50WV	
C72			CK73GB1H104K	CHIP C 0.10UF K		C516			CC73GCH1H100D	CHIP C 10PF D	
C74-77			CK73GB1C104K	CHIP C 0.10UF K		C517,518			CK73FB1C105K	CHIP C 1.0UF K	
C78		*	CD04AT1E101M	ELECTRO 100UF 25WV		C519,520			CK73FB1C474K	CHIP C 0.47UF K	
C79			CD04AS1A220M	ELECTRO 22UF 10WV		C521,522			CC73GCH1H102J	CHIP C 1000PF J	
C80		*	CD04AT1E101M	ELECTRO 100UF 25WV		C524			CC73GCH1H180J	CHIP C 18PF J	
C81			CK73GB1H103K	CHIP C 0.010UF K		C525			CC73GCH1H150J	CHIP C 15PF J	
C82			CK73GB1E223K	CHIP C 0.022UF K		C527			CC73GCH1H102J	CHIP C 1000PF J	
C82			CK73GB1H223K	CHIP C 0.022UF K		C531			CK73FB1C105K	CHIP C 1.0UF K	
C96			CD04AS1HR47M	ELECTRO 0.47UF 50WV		C541			CC73GCH1H271J	CHIP C 270PF J	
C97			CD04AS1C470M	ELECTRO 47UF 16WV		C542			CC73GCH1H050C	CHIP C 5.0PF C	
C112,113			CC73GCH1H100D	CHIP C 10PF D	EE1E2	C543			CC73GCH1H080D	CHIP C 8.0PF D	
C112,113			CC73GCH1H100D	CHIP C 10PF D	E6E7E8	C544			CC73GCH1H150J	CHIP C 15PF J	
C112,113			CC73GCH1H100D	CHIP C 10PF D	E9	C545			CK73GB1H682K	CHIP C 6800PF K	
C116			CC73GCH1H331J	CHIP C 330PF J	EE1E2	C547			CD04AT1A220M	ELECTRO 22UF 10WV	
C116			CC73GCH1H331J	CHIP C 330PF J	E6E7E8	C548			CK73GB1E223K	CHIP C 0.022UF K	
C116			CC73GCH1H331J	CHIP C 330PF J	E9	C548			CK73GB1H223K	CHIP C 0.022UF K	
C117			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	EE1E2	C549			CK73GB1H222K	CHIP C 2200PF K	
C117			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	E6E7E8	C550			CK73GB1E333K	CHIP C 0.033UF K	
C117			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	E9	C550			CK73GB1H333K	CHIP C 0.033UF K	
C118			CK73GB1H103K	CHIP C 0.010UF K	EE1E2	C551			CK73GB1H103K	CHIP C 0.010UF K	
C118			CK73GB1H103K	CHIP C 0.010UF K	E6E7E8	C553			CK73GB1C104K	CHIP C 0.10UF K	
C118			CK73GB1H103K	CHIP C 0.010UF K	E9	C554			CK73GB1A334K	CHIP C 0.33UF K	
C119			CD04AS1C100M	ELECTRO 10UF 16WV	EE1E2	C556			CK73GB1H103K	CHIP C 0.010UF K	
C119			CD04AS1C100M	ELECTRO 10UF 16WV	E6E7E8	C559			CK73GB1H332K	CHIP C 3300PF K	
C119			CD04AS1C100M	ELECTRO 10UF 16WV	E9	C561			CK73FB1H104K	CHIP C 0.10UF K	
C153			CK73GB0J105K	CHIP C 1.0UF K		C562			CD04AT1A100M	ELECTRO 10UF 10WV	
C201			CK73GB1H103K	CHIP C 0.010UF K		C563			CD04AT1HR47M	ELECTRO 0.47UF 50WV	
C255			CD04AS1A330M	ELECTRO 33UF 10WV	EE1E2	C564			CK73GB1A474K	CHIP C 0.47UF K	
C255			CD04AS1A330M	ELECTRO 33UF 10WV	E7E8E9	C565			CK73FB1C105K	CHIP C 1.0UF K	
C255			CD04AS1C100M	ELECTRO 10UF 16WV	E3E6	C568			CC73GCH1H271J	CHIP C 270PF J	
C256			CD04AS1H010M	ELECTRO 1UF 50WV		C579			CK73GB1H103K	CHIP C 0.010UF K	
C257			CD04AT1H010M	ELECTRO 1UF 50WV		C581			CC73GCH1H101J	CHIP C 100PF J	
C258			CD04AS1H010M	ELECTRO 1UF 50WV		C582			CK73GB1E223K	CHIP C 0.022UF K	
C301,302			CK73FB1C474K	CHIP C 0.47UF K	EE7	C582			CK73GB1H223K	CHIP C 0.022UF K	
C303			CD04AT1A470M	ELECTRO 47UF 10WV	EE7	C583			CK73GB1C683K	CHIP C 0.068UF K	
C331,332			CD04AT1C100M	ELECTRO 10UF 16WV		C583			CK73GB1H683K	CHIP C 0.068UF K	
C333,334			CC73GCH1H681J	CHIP C 680PF J		C584			CD04AT1H010M	ELECTRO 1UF 50WV	
C407			CC73GCH1H220J	CHIP C 22PF J		C585			CK73GB1H103K	CHIP C 0.010UF K	
C408			CC73GCH1H180J	CHIP C 18PF J		C586			CK73GB0J105K	CHIP C 1.0UF K	
C409			CD04AS0J101M	ELECTRO 100UF 6.3WV		C587			CK73GB1C104K	CHIP C 0.10UF K	
C410			CK73GB1H103K	CHIP C 0.010UF K		C588			CK73GB1A474K	CHIP C 0.47UF K	
C411			CK73GB1A224K	CHIP C 0.22UF K		C589			CK73GB1C104K	CHIP C 0.10UF K	
C420			CC73GCH1H102J	CHIP C 1000PF J		C590			CK73GB1H392K	CHIP C 3900PF K	
C422			CC73GCH1H101J	CHIP C 100PF J		C600			CD04AT1A101M	ELECTRO 100UF 10WV	
C502			CK73GB1H152K	CHIP C 1500PF K		C601			CK73GB1E223K	CHIP C 0.022UF K	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y  
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3402-7x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C601 C602 C604 C605,606 C610			CK73GB1H223K CC73GCH1H151J CC73GCH1H470J CC73GCH1H010C CC73GCH1H010C	CHIP C 0.022UF K CHIP C 150PF J CHIP C 47PF J CHIP C 1.0PF C CHIP C 1.0PF C		W401-410 W412-427 W801 W830			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	
C620 C623,624 C625,626			CK73GB1H103K CK73GB1H103K CC73GCH1H101J	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 100PF J		CF51-53 CF54 L3 L4 L51		*	L72-0805-05 L72-0804-05 L33-1978-05 L33-2260-05 L33-1988-05	CERAMIC FILTER (10.7MHZ) CERAMIC FILTER (450KHZ) CHOKE COIL (22UH) CHOKE COIL (52UH) CHOKE COIL ASSY (140UH)	
CN2 CN3 CN3 J1		*	E41-2244-05 E41-0941-05 E41-0941-05 E41-0941-05 E58-0991-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE	EE1E2 E6E7E8 E9	L61 L101 L101 L101 L501			L40-4795-91 L40-4795-91 L40-4795-91 L40-4795-91 L40-6891-58	SMALL FIXED INDUCTOR (4.7UH, J) SMALL FIXED INDUCTOR (4.7UH, J) SMALL FIXED INDUCTOR (4.7UH, J) SMALL FIXED INDUCTOR (4.7UH, J) SMALL FIXED INDUCTOR (6.8UH)	EE1E2 E6E7E8 E9
J2 J4 J5 J6 P1		*	E56-0855-05 E04-0326-05 E58-0992-05 E63-0898-05 E23-0745-05	CYLINDRICAL RECEPTACLE RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE PIN JACK TERMINAL	EE7	L502 L503 L504 L505 L506			L40-3301-58 L40-1021-56 L40-1011-58 L40-3381-58 L31-0977-15	SMALL FIXED INDUCTOR (33UH) SMALL FIXED INDUCTOR (1UH) SMALL FIXED INDUCTOR (100UH) SMALL FIXED INDUCTOR (0.33UH) FM-RF COIL	
W251 W300-302 W300-311 W300-311 W300-324			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E3E6 E3 E1E2E6 E8E9 EE7	L507 L508 L509 L518 L519		*	L32-0941-15 L30-0776-15 L30-0777-15 L31-0976-15 L40-4763-72	FM OSCILLATING COIL FM IFT AM IFT FM-RF COIL SMALL FIXED INDUCTOR (4.7NH)	
W304-311 W313-324 W313-324 W326-329 W326-337			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E3 E1E2E3 E6E8E9 E3 E1E2E6	L520 L521 L600 L601,602 X1		*	L40-3381-58 L40-1073-72 L92-0607-05 L92-0397-05 L78-0879-05	SMALL FIXED INDUCTOR (0.33UH) SMALL FIXED INDUCTOR (10NH) CHIP FERRITE CHIP FERRITE RESONATOR (10.000MHZ)	
W326-337 W326-345 W331-337 W339-341 W339-341			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E8E9 EE7 E3 E1E2E3 E6E8E9	X2 X3 X3 X3 X501			L77-2793-05 L77-2002-05 L77-2002-05 L77-2002-05 L77-2077-05	CRYSTAL RESONATOR (32.768KHZ) CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (10.250MHZ)	EE1E2 E6E7E8 E9
W345 W345 W345-347 W346,347 W347			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E1E2E8 E9 E6 E3 E1E2E8	F G H J	2D 2D 2D 3D	*	N80-3010-48 N83-3005-48 N83-3020-48 N86-2606-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
W347 W347-366 W349-353 W349-353 W355-357			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E9 EE7 E1E2E3 E6E8E9 E1E2E3	R1,2 R21 R51 R52 R53			RK73GB2A101J RD14BB2C152J RK73FB2B683J RK73GB2A393J RK73GB2A104J	CHIP R 100 J 1/10W RD 1.5K J 1/6W CHIP R 68K J 1/8W CHIP R 39K J 1/10W CHIP R 100K J 1/10W	
W355-357 W361-366 W361-366 W368-372 W368-399			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	E6E8E9 E1E2E3 E6E8E9 E3 E6	R54 R55,56 R57 R58 R59			RK73FB2B203J RK73GB2A103J RK73GB2A223J RD14DB2H332J RD14BB2C333J	CHIP R 20K J 1/8W CHIP R 10K J 1/10W CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W RD 33K J 1/6W	
W369-376 W369-376 W374-393 W378-399 W378-399			E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE JUMPER WIRE	EE1E2 E7E8E9 E3 EE1E2 E7E8E9	R60 R61 R72,73 R75-78 R81			RK73GB2A103J RK73GB2A223J RD14BB2C472J RK73GB2A103J RD14BB2C103J	CHIP R 10K J 1/10W CHIP R 22K J 1/10W RD 4.7K J 1/6W CHIP R 10K J 1/10W RD 10K J 1/6W	
W395-399			E31-0001-00	JUMPER WIRE	E3	R82			RK73GB2A223J	CHIP R 22K J 1/10W	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

△ Indicates safety critical components.



## PARTS LIST

## ELECTRIC UNIT (X34-3402-7x)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R83			RK73GB2A473J	CHIP R 47K J 1/10W		R272			RK73GB2A103J	CHIP R 10K J 1/10W	
R85			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R273			RK73GB2A474J	CHIP R 470K J 1/10W	
R86			RK73EB2E1R0J	CHIP R 1.0 J 1/4W		R301,302			RK73EB2E100J	CHIP R 10 J 1/4W	EE7
R87,88			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	EE7
R90			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R304,305			RK73EB2E472J	CHIP R 4.7K J 1/4W	EE7
R96			RK73GH2A273D	CHIP R 27K D 1/10W		R306			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	EE7
R97		*	RK73GH2A332D	CHIP R 3.3K D 1/10W		R307-309			RK73EB2E472J	CHIP R 4.7K J 1/4W	EE7
R98			RK73EB2E102J	CHIP R 1.0K J 1/4W		R310,311			RK73EB2E101J	CHIP R 100 J 1/4W	EE7
R99			RK73GB2A104J	CHIP R 100K J 1/10W		R312			RD14BB2C104J	RD 100K J 1/6W	EE7
R100			RK73GB2A272J	CHIP R 2.7K J 1/10W		R313			RK73GB2A104J	CHIP R 100K J 1/10W	EE7
R112-114			RK73GB2A222J	CHIP R 2.2K J 1/10W	EE1E2	R331,332			RK73GB2A271J	CHIP R 270 J 1/10W	
R112-114			RK73GB2A222J	CHIP R 2.2K J 1/10W	E6E7E8	R335,336			RK73GB2A303J	CHIP R 30K J 1/10W	
R112-114			RK73GB2A222J	CHIP R 2.2K J 1/10W	E9	R338,339			RD14BB2C101J	RD 100 J 1/6W	
R130,131			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R351,352			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R133			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R353			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R135-140			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R355,356			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R141			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R358			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R152			RK73EB2E100J	CHIP R 10 J 1/4W		R359			RK73GB2A101J	CHIP R 100 J 1/10W	
R153			RK73EB2E471J	CHIP R 470 J 1/4W		R360			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R156,157			RK73EB2E102J	CHIP R 1.0K J 1/4W		R363			RD14BB2C472J	RD 4.7K J 1/6W	
R158			RK73EB2E101J	CHIP R 100 J 1/4W		R365			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R159			RK73EB2E102J	CHIP R 1.0K J 1/4W		R366			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R160,161			RK73EB2E471J	CHIP R 470 J 1/4W		R367			RK73GB2A104J	CHIP R 100K J 1/10W	
R162			RK73EB2E102J	CHIP R 1.0K J 1/4W	EE1E2	R368,369			RK73GB2A471J	CHIP R 470 J 1/10W	
R162			RK73EB2E102J	CHIP R 1.0K J 1/4W	E6E7E8	R370,371			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R162			RK73EB2E102J	CHIP R 1.0K J 1/4W	E9	R411			RK73GB2A223J	CHIP R 22K J 1/10W	E3
R163			RK73EB2E471J	CHIP R 470 J 1/4W		R412			RK73GB2A223J	CHIP R 22K J 1/10W	E6
R164			RK73EB2E102J	CHIP R 1.0K J 1/4W		R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	EE1E2
R172			RD14BB2C102J	RD 1.0K J 1/6W	EE1E2	R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	E7E8E9
R172			RD14BB2C102J	RD 1.0K J 1/6W	E6E7E8	R414			RK73GB2A223J	CHIP R 22K J 1/10W	E3E6
R172			RD14BB2C102J	RD 1.0K J 1/6W	E9	R415			RK73GB2A223J	CHIP R 22K J 1/10W	EE7
R178			RK73EB2E471J	CHIP R 470 J 1/4W		R416-418			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2E3
R180,181			RK73GB2A471J	CHIP R 470 J 1/10W		R416-418			RK73GB2A223J	CHIP R 22K J 1/10W	E6E8E9
R182			RK73GB2A222J	CHIP R 2.2K J 1/10W		R417,418			RK73GB2A223J	CHIP R 22K J 1/10W	EE7
R190			RK73GB2A104J	CHIP R 100K J 1/10W		R431			RK73GB2A223J	CHIP R 22K J 1/10W	EE1E2
R191			RK73GB2A225J	CHIP R 2.2M J 1/10W		R431			RK73GB2A223J	CHIP R 22K J 1/10W	E6E8E9
R193,194			RK73GB2A474J	CHIP R 470K J 1/10W		R431			RK73GB2A223J	CHIP R 22K J 1/10W	E9
R199			RK73GB2A241J	CHIP R 240 J 1/10W		R432			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R200			RK73GB2A102J	CHIP R 1.0K J 1/10W		R433			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R251			RK73GB2A154J	CHIP R 150K J 1/10W	E3E6	R435,436			RK73GB2A103J	CHIP R 10K J 1/10W	
R251			RK73GB2A333J	CHIP R 33K J 1/10W	EE1E2	R437,438			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R251			RK73GB2A333J	CHIP R 33K J 1/10W	E7E8E9	R439			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R252			RK73GB2A473J	CHIP R 47K J 1/10W		R440,441			RK73GB2A473J	CHIP R 47K J 1/10W	
R253			RK73GB2A432J	CHIP R 4.3K J 1/10W		R453			RK73GB2A473J	CHIP R 47K J 1/10W	
R254			RK73GB2A100J	CHIP R 10 J 1/10W		R454			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R255			RK73GB2A221J	CHIP R 220 J 1/10W	EE1E2	R456			RK73GB2A104J	CHIP R 100K J 1/10W	
R255			RK73GB2A221J	CHIP R 220 J 1/10W	E7E8E9	R457			RK73GB2A103J	CHIP R 10K J 1/10W	
R255			RK73GB2A331J	CHIP R 330 J 1/10W	E3E6	R470			RK73GB2A222J	CHIP R 2.2K J 1/10W	EE1E2
R256			RK73GB2A154J	CHIP R 150K J 1/10W	E3E6	R470			RK73GB2A222J	CHIP R 2.2K J 1/10W	E6E7E8
R256			RK73GB2A223J	CHIP R 22K J 1/10W	EE1E2	R470			RK73GB2A222J	CHIP R 2.2K J 1/10W	E9
R256			RK73GB2A223J	CHIP R 22K J 1/10W	E7E8E9	R471			RK73GB2A103J	CHIP R 10K J 1/10W	E3
R257			RK73GB2A123J	CHIP R 12K J 1/10W	E3E6	R480			RK73GB2A104J	CHIP R 100K J 1/10W	EE7
R257			RK73GB2A303J	CHIP R 30K J 1/10W	EE1E2	R501			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R257			RK73GB2A303J	CHIP R 30K J 1/10W	E7E8E9	R502,503			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R271			RK73GB2A101J	CHIP R 100 J 1/10W		R504			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3402-7x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R505 R506 R507 R520 R521			RK73GB2A102J RK73GB2A105J RK73GB2A102J RK73GB2A221J RK73GB2A152J	CHIP R 1.0K J 1/10W CHIP R 1.0M J 1/10W CHIP R 1.0K J 1/10W CHIP R 220 J 1/10W CHIP R 1.5K J 1/10W		W87 W88,89 W90,91 W92 W93			R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	E3
R522 R543 R544 R545 R546			RK73GB2A223J RK73GB2A562J RD14BB2C222J RK73GB2A333J RK73GB2A432J	CHIP R 22K J 1/10W CHIP R 5.6K J 1/10W RD 2.2K J 1/6W CHIP R 33K J 1/10W CHIP R 4.3K J 1/10W		W93,94 W93,94 W93,94 W96-98 W99			R92-2053-05 R92-2053-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	EE1E2 E6E7E8 E9
R561 R562 R565 R566,567 R589			RK73GB2A472J RK73GB2A106J RK73GB2A394J RK73GB2A102J RK73GB2A473J	CHIP R 4.7K J 1/10W CHIP R 10M J 1/10W CHIP R 390K J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W		W102 W252 W252 W506 W604,605			R92-2053-05 R92-1252-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W	EE1E2 E7E8E9
R590 R591 R592 R594 R595-597			RK73GB2A103J RK73GB2A513J RK73GB2A223J RK73EB2E100J RD14BB2C100J	CHIP R 10K J 1/10W CHIP R 51K J 1/10W CHIP R 22K J 1/10W CHIP R 10 J 1/4W RD 10 J 1/6W		W611 W802 W804-807 W808 W810			R92-1252-05 R92-1252-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W	
R599 R600 R601 R602 R603			RK73GB2A220J RD14BB2C2R2J RD14BB2C1R0J RK73GB2A122J RK73GB2A560J	CHIP R 22 J 1/10W RD 2.2 J 1/6W RD 1.0 J 1/6W CHIP R 1.2K J 1/10W CHIP R 56 J 1/10W		W812 W814 W820 W823 W826			R92-2053-05 R92-2053-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	
R604,605 W51 W52 W53 W57			RK73GB2A100J R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 10 J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	EE1E2	D3 D52 D53 D53 D54		*	IMSA-6801-E MAZ4068N-M UDZS6.8B 02DZ6.8F-Y MAZ4068N-M	SURGE ABSORBER ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
W57 W57 W58-60 W61-63 W64			R92-2053-05 R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W	E6E7E8 E9	D55 D57 D71 D72 D72			1SS355 S2V60*A MAZ4082N-L D1F60-5063 1SR154-400	DIODE DIODE ZENER DIODE DIODE DIODE	
W65,66 W67-71 W67-71 W67-71 W68			R92-2053-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	EE1E2 E6E7E8 E9 E3	D73 D73 D74,75 D74,75 D76		*	AM01ZNF 10EDA20 D1F60-5063 1SR154-400 DAN202U	DIODE DIODE DIODE DIODE DIODE	
W71 W72 W73 W75 W76			R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W	E3	D76 D76 D77 D77 D81		*	KDS121-P MC2848 AM01ZNF 10EDA20 UDZS4.7B	DIODE DIODE DIODE DIODE ZENER DIODE	
W78 W79,80 W81,82 W83 W85			R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W	EE1E2	D81 D162 D162 D162 D203			02DZ4.7F-Y MAZ4062-L MAZ4062-L MAZ4062-L 1SS133	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	EE1E2 E6E7E8 E9
W85 W85 W86 W86 W86			R92-2053-05 R92-2053-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	E6E7E8 E9 EE1E2 E6E7E8 E9	D251-253 D251-253 D251-253 D251-253 D254			D1F60-5063 D1F60-5063 1SR154-400 1SR154-400 AM01ZNF	DIODE DIODE DIODE DIODE DIODE	EE1E2 E7E8E9 EE1E2 E7E8E9 EE1E2

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3402-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
D254			AM01ZNF	DIODE	E7E8E9
D254		*	10EDA20	DIODE	EE1E2
D254		*	10EDA20	DIODE	E7E8E9
D255-258			D1F60-5063	DIODE	EE1E2
D255-258			D1F60-5063	DIODE	E7E8E9
D255-258			1SR154-400	DIODE	EE1E2
D255-258			1SR154-400	DIODE	E7E8E9
D259			1SS133	DIODE	E3E6
D259,260			1SS133	DIODE	EE1E2
D259,260			1SS133	DIODE	E7E8E9
D261			1SS355	DIODE	
D301-304			MAZ4062-L	ZENER DIODE	EE7
D305,306			MAZ4068N-M	ZENER DIODE	EE7
D402,403			DAN202U	DIODE	
D402,403		*	KDS121-P	DIODE	
D402,403		*	MC2848	DIODE	
D501			RN739F	DIODE	
D502,503		*	KP2311ETR-G	DIODE	
D504		*	KV1430STL-G	VARIABLE CAPACITANCE DIODE	
D506		*	HVC383B-E	VARIABLE CAPACITANCE DIODE	
IC1		*	784225GC256A	MICROCONTROLLER IC	
IC3		*	BD4912-V4	ANALOGUE IC	EE1E2
IC4			E-TDA7560A	ANALOGUE IC	E7E8E9
IC4			E-TDA7560A	ANALOGUE IC	E3E6
IC4		*	TB2904HQ	ANALOGUE IC	
IC6			TC7W02FU-F	MOS-IC	
IC7			E-TDA7479AD	ANALOGUE IC	EE1E2
IC7			E-TDA7479AD	ANALOGUE IC	E6E7E8
IC7			E-TDA7479AD	ANALOGUE IC	E9
IC8		*	S-80836CNNB-G	MOS-IC	
IC10		*	E-TDA7516	ANALOGUE IC	
IC11		*	BR24L04FV-W	ROM IC	
IC15		*	BA00CCWT	ANALOGUE IC	
Q51-53			2SC4081	TRANSISTOR	
Q71			UMC2N	TRANSISTOR	
Q72			2SB1565(E,F)	TRANSISTOR	
Q73			2SD1858	TRANSISTOR	
Q74			UMC2N	TRANSISTOR	
Q151			DTA114YUA	DIGITAL TRANSISTOR	
Q151		*	KRA307-P	DIGITAL TRANSISTOR	
Q151			RT1P144M	TRANSISTOR	
Q155			2SC4081	TRANSISTOR	
Q252		*	KTA2014P(Y,GR)	TRANSISTOR	
Q252			2SA1576A	TRANSISTOR	
Q252		*	2SA1603A	TRANSISTOR	
Q330			DTA124EUA	DIGITAL TRANSISTOR	
Q330			KRA303-P	DIGITAL TRANSISTOR	
Q330			RT1P241M	TRANSISTOR	
Q351,352			DTC143TUA	DIGITAL TRANSISTOR	
Q351,352			KRC410-P	DIGITAL TRANSISTOR	
Q351,352			RT1N430M	TRANSISTOR	
Q501		*	HN3G01J(BL)-F	TRANSISTOR	
TH1			PRF21BE471QB2	POSITIVE RESISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
<b>MECHANISM UNIT (X92-4850-00)</b>					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-14	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5)	
K	3B		N09-6155-05	SEMS (TAPTITE SCREW) (PT2X6)	

E : KDC-W4531 E1 : KDC-W4031 E2 : KDC-W409 E3 : KDC-W431GY E6 : KDC-WF431A  
 E7 : KDC-W4531Y E8 : KDC-W4031Y E9 : KDC-W409Y  
 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

## PARTS LIST

Ref. No.	Add	New	Parts No.	Description	Destination
DM1	3B		T42-1066-04	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-04	DC MOTOR (LOADING)	
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	


Ref. No.	Add	New	Parts No.	Description	Destination

⚠ Indicates safety critical components.

## CAPACITORS


CC 45 TH 1H 220 J  
1 2 3 4 5 6

- 1 = Type ... ceramic, electrolytic, etc.  
2 = Shape ... round, square, etc.  
3 = Temp. coefficient  
4 = Voltage rating  
5 = Value  
6 = Tolerance

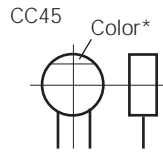

### • Capacitor value

- 010 = 1pF  
100 = 10pF  
101 = 100pF  
102 = 1000pF = 0.001μF  
103 = 0.01μF

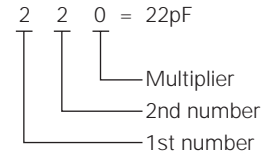

### • Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example : CC45TH = -470±60ppm/°C

### • Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10μF : -10~+50 Less than 4.7μF : -10~+75

### (Less than 10pF)

Code	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2


### • Voltage rating

2nd word 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	3150	4000	5000	6300	8000	-

## CHIP CAPACITORS

- (EX) CC 73 F SL 1H 000 J  
1 2 3 4 5 6 7  
(Chip) (CH, RH, UJ, SL)
- (EX) CK 73 F F 1H 000 Z  
1 2 3 4 5 6 7  
(Chip) (B, F)
- Refer to the table above.  
1 = Type  
2 = Shape  
3 = Dimension  
4 = Temp. coefficient  
5 = Voltage rating  
6 = Value  
7 = Tolerance

### • Dimension

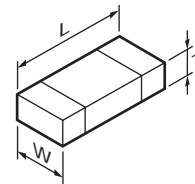

### Chip capacitor

Code	L	W	T
Empty	5.6±0.5	5.0±0.5	Less than 2.0
A	4.5±0.5	3.2±0.4	Less than 2.0
B	4.5±0.5	2.0±0.3	Less than 2.0
C	4.5±0.5	1.25±0.2	Less than 1.25
D	3.2±0.4	2.5±0.3	Less than 1.5
E	3.2±0.2	1.6±0.2	Less than 1.25
F	2.0±0.3	1.25±0.2	Less than 1.25
G	1.6±0.2	0.8±0.2	Less than 1.0
H	1.0±0.05	0.5±0.05	0.5±0.05

### Chip resistor

Code	L	W	T
E	3.2±0.2	1.6±0.2	1.0
F	2.0±0.3	1.25±0.2	1.0
G	1.6±0.2	0.8±0.2	0.5±0.1
H	1.0±0.05	0.5±0.05	0.35±0.05

## RESISTORS

### • Chip resistor (Carbon)

(EX) RD 73 E B 2B 000 J  
1 2 3 4 5 6 7  
(Chip) (B, F)

### • Carbon resistor (Normal type)

(EX) RD 14 B B 2C 000 J  
1 2 3 4 5 6 7  
(Chip) (B, F)

- 1 = Type ... ceramic, electrolytic, etc.  
2 = Shape ... round, square, etc.  
3 = Dimension  
4 = Temp. coefficient  
5 = Voltage rating  
6 = Value  
7 = Tolerance

### • Rating wattage

Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

## SPECIFICATIONS

### FM

Frequency Range (Frequency Step)  
..... 87.5MHz~108.0MHz (50kHz)  
Usable Sensitivity (S/N : 26dB) ..... 0.7 $\mu$ V/75 $\Omega$   
Quieting Sensitivity (S/N : 46dB) ..... 1.6 $\mu$ V/75 $\Omega$   
Frequency Response ( $\pm$ 3.0dB) ..... 30Hz~15kHz  
S/N ..... 65dB (MONO)  
Selectivity (DIN) .....  $\geq$ 80dB ( $\pm$ 400kHz)  
Stereo Separation ..... 35dB (1kHz)

### MW (AM)

Frequency Range (Frequency Step)  
..... 531kHz~1611kHz (9kHz)  
Usable Sensitivity (S/N : 20dB) ..... 25 $\mu$ V

### LW

Frequency Range ..... 153kHz~281kHz  
Usable Sensitivity (S/N : 20dB) ..... 45 $\mu$ V

### CD

Laser Diode ..... GaAlAs  
Digital Filter (D/A) ..... 8 Times Over Sampling  
D/A Converter ..... 1 Bit  
Spindle Speed ..... 1000rpm~400rpm (CLV. 2 times)  
Wow & Flutter ..... Below Mesurable Limit  
Frequency Response ..... 10Hz~20kHz ( $\pm$ 1dB)  
Total Harmonic Distortion ..... 0.01% (1kHz)  
S/N Ratio ..... 105dB (1kHz)  
Dynamic Range ..... 93dB  
Channel Separation ..... 85dB  
MP3 Decode ..... Compliant with MPEG-1/2 Audio Layer-3  
WMA Decode ..... Compliant with WINDOWS MEDIA AUDIO

### Preout Level / Load

KDC-W4031/W4031Y/W409/W409Y/W431GY/WF431A  
..... 2000mV/10k $\Omega$  (CD)  
KDC-W4531/W4531Y ..... 2000mV/10k $\Omega$  (CD/CD-CH)

Preout Impedance .....  $\leq$ 600 $\Omega$

### AMPLIFIER

#### Maximum Power

KDC-W4031/W4031Y/W409/W409Y/W4531/W4531Y  
..... 50W x 4  
KDC-W431GY/WF431A ..... 45W x 4

#### Power (DIN45324, +B=14.4V)

KDC-W4031/W4031Y/W409/W409Y/W4531/W4531Y  
..... 30W x 4  
KDC-W431GY/WF431A ..... 28W x 4

### STONE

Bass ..... 100Hz $\pm$ 10dB  
Middle ..... 1kHz $\pm$ 10dB  
Treble ..... 10kHz $\pm$ 10dB

### GENERAL

Operating Voltage (11V~16V allowable) ..... 14.4V  
Current Consumption ..... 10A  
Installation Size (Width) ..... 182mm  
(Height) ..... 53mm  
(Depth) ..... 155mm  
Weight ..... 1.40kg (3.1 lbs)

---

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

---

## KENWOOD CORPORATION

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

KENWOOD USA CORPORATION  
P.O. Box 22745, 2201 East Dominguez Street, Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.  
6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.  
P.O. Box 55-2791, Paitilla Plaza Credicorp Bank Panama Piso #9,  
Oficina #901 Calle 50, Panama, Rep. De Panama

KENWOOD ELECTRONICS BRASIL LTDA.  
Alameda Ministro Rocha Azevedo No. 456 Edifício Jaú,  
10° Andar Cerqueira César, Cep 01410-001 São Paulo, SP, Brasil

KENWOOD ELECTRONICS UK LTD.  
Kenwood House, Dwight Road, Watford, Herts, WD18 9EB, United Kingdom

KENWOOD ELECTRONICS DEUTSCHLAND GMBH  
Rembrücker Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.  
13, Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS BELGIUM N.V.  
Leuvensesteenweg 248J, B-1800 Vilvoorde, Belgium

KENWOOD ELECTRONICS ITALIA S.p.A.  
Via G. Sirtori 7/9, 20129 Milano, Italy

KENWOOD IBÉRICA S.A.  
Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.  
(A.C.N. 001 499 074)  
16 Giffnock Avenue, Centrecourt Estate, North Ryde, N.S.W. 2113, Australia

KENWOOD ELECTRONICS (HONG KONG) LTD.  
Unit No. 3712-3724, Tower 1, Metroplaza, No. 223 Hing Fong Road, Kwai Fong, N.T., Hong Kong

KENWOOD ELECTRONICS GULF FZE  
P.O. Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS (THAILAND) CO., LTD.  
2nd Floor, 956 Udom Vidhya Building, Rama IV Road, Silom, Bangkok, Bangkok 10500, Thailand

KENWOOD ELECTRONICS SINGAPORE PTE LTD.  
1 Ang Mo Kio Street 63, Singapore 569110

KENWOOD ELECTRONICS MALAYSIA SDN BHD  
#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1,  
46300 Petaling Jaya, Selangor, Malaysia

