


Audio Video Control Amplifier

A-SV620

Instruction Manual

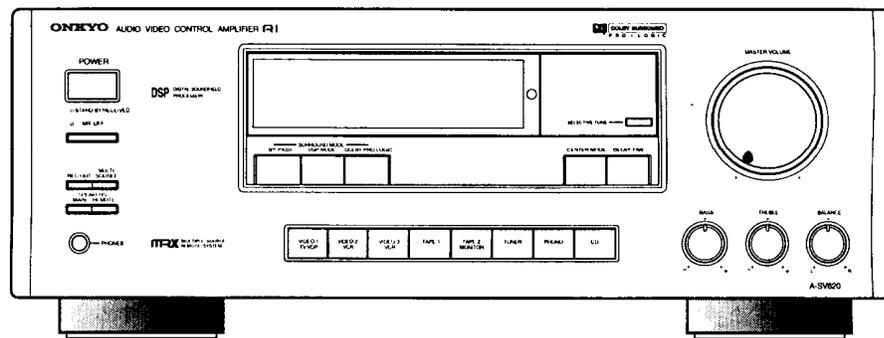

CONTENTS

Features	2	Control positions and names	12
Important Safeguards	3	Listening to your favourite source	14
Supplied accessories.....	3	Use of surround mode.....	16
Precautions	4	Recording a source.....	19
Before using this unit	4	Listening to devices connected to this unit in another room.....	21
Explanation.....	5	Trouble shooting guide	23
Making system connections	6	Specifications	23
Connection for Multiple Room Remote Control	10		

Thank you for your purchase of the Onkyo Amplifier.

Please read this manual thoroughly before making connections and turning on the power.

Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new Amplifier.

Please retain this manual for future reference.

Features

■ Powerful A/V Amplifier with Discrete Outputs

Plenty of pristine power drives your home theater system to perfection. In surround mode you get 75 watts per channel (8 ohms) to your front L/R and center speakers, plus 25 watts per channel to your L/R surround speakers.

Stereo mode: 120 watts per channel (8 ohms). Discrete output stage circuitry for all channels and heavy-duty power supplies help the A-SV620 excel at driving accurately the most demanding low-impedance speakers.

■ Dolby Pro Logic & 4 Digital Soundfields

In addition to fully digital Dolby Pro Logic (for the most accurate surround sound), the A-SV620 gives you a choice of four ambience-producing DSP surround modes (Theater, Hall, Live and Arena) so you can select the listening environment that best suits your source and your mood.

■ IPM System

Onkyo's Intelligent Power Management (IPM) system switches on the A-SV620 and automatically selects Video-1 when you turn on your TV, giving you instant surround sound.

■ Multiroom and Multisource Capability

You can listen to a CD in the bedroom while someone else enjoys the radio or any other source in the main room. *(Requires additional speakers and optional accessories. The necessary accessories may differ, depending on area where sold. Your authorized Onkyo service center has details.)*

■ RI Compatible Remote Control

Onkyo's **RI** (Remote Interactive) remote control gives you command of the major functions of virtually any Onkyo component that bears the **RI** symbol.

■ Useful Extras You'll Enjoy

- **3 Video and 6 audio inputs:** For all your present and future AV needs.
- **Heavy-duty, multiway binding posts for front L/R speakers:** They offer higher quality, more dependable, loss-free speaker connection and can easily accommodate large speaker lugs.
- **Recording selector:** You can listen to a different source while you record, or put background music on videos.
- **Selective tone control:** Boosts those low 50Hz-range bass frequencies and extends the treble range without discoloration.
- **Subwoofer Preout terminal:** Lets you easily plug in a subwoofer for low-bass excitement.
- **Motor-driven volume control:** Minimizes the possibility of signal degradation.
- **Battery-free memory backup:** Protects the memory's contents during a power outage, or when you unplug the amplifier.
- **Sleep timer:** Shuts down your system after you've gone to sleep.

FOR USA MODEL

FCC INFORMATION FOR USER

CAUTION:

Changes or modifications not expressly approved by the manufacturer for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOR CANADIAN MODEL: (POUR LE MODELE CANADIEN)

- For models having a power cord with a polarized plug.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSION FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

- Sur les modèles dont la fiche est polarisée.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

- L'INTERFERENCE, RADIO ELECTRIQUE GENEREES PAR CET APPAREIL NUMERIQUE DE TYPE B NE DEPASSE PAS LES LIMITES ENONCEES DANS LE REGLEMENT SUL LES PERTURBATIONS RADIO ELECTRIQUES, SECTION APPAREIL NUMERIQUE, DU MINISTERE DES COMMUNICATIONS

FOR EUROPEAN MODEL

- This apparatus complies with requirements of EC directive 87/308/EEC.

ATTENTION FOR BRITISH MODEL

- Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.
- **IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code:
Blue: Neutral
Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

For USA and Canada

- Manufactured under license from Dolby Laboratories Licensing Corporation.
Additionally licensed under Canadian number 1,037,877. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

“WARNING”

“TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.”

CAUTION:

“TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.”



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.


Important safeguards

1. **Read Instructions** – All the safety and operating instructions should be read before the appliance is operated.
 2. **Retain Instructions** – The safety and operating instructions should be retained for future reference.
 3. **Heed Warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
 4. **Follow Instructions** – All operating and use instructions should be followed.
 5. **Water and Moisture** – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
 6. **Carts and Stands** – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
 - 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- PORTABLE CART WARNING
- 
- S3125A
7. **Wall or Ceiling Mounting** – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
 8. **Ventilation** – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
 9. **Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
 10. **Power Sources** – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
 11. **Polarization** – If the appliance is provided with a polarized plug having one blade wider than the other, please read the following information: The polarization of the plug is a safety feature. The polarized plug will only fit the outlet one way. If the plug does not fit fully into the outlet, try reversing it. If there is still trouble, the user should seek the services of a qualified electrician. Under no circumstances should the user attempt to defeat the polarization of the plug.
 12. **Power-Cord Protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, especially near plugs, convenience receptacles, and the point where they exit from the appliance.
 13. **Cleaning** – The appliance should be cleaned only as recommended by the manufacturer.
 14. **Nonuse Periods** – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
 15. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
 16. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
 17. **Servicing** – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.


Supplied accessories

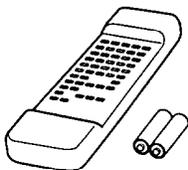

- 1 Remote control
- 2 Batteries (size AA, R6, or UM-3)

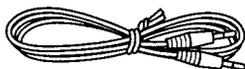

- 1 Remote control cable

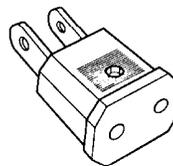

- 1 CV plug (Shape may vary according to the area where purchased.)

(Worldwide models only)

Precautions

1. Warranty Card

The serial number is written on the rear panel of this unit. Copy the serial number and model number onto your warranty card and keep it in a safe place.

2. Recording Copyright

Recording of copyrighted material for other than personal use is illegal without permission of the copyright holder.

3. AC Fuse

The fuse is located inside the chassis and is not user-serviceable. If power does not come on, contact your Onkyo authorized service station.

4. Care

From time to time you should wipe the front and rear panels and the cabinet with a soft cloth. For heavier dirt, dampen a soft cloth in a weak solution of mild detergent and water, wring it out dry, and wipe off the dirt. Following this, dry immediately with a clean cloth. Do not use rough material, thinners, alcohol or other chemical solvents or cloths since these could damage the finish or remove the panel lettering.

5. Power

WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

- Some models are designed for use only with the power supply voltage of the region where they are sold.

European and Australian models: AC 230 V, 50 Hz

U.S.A. and Canadian models: AC 120 V, 60 Hz


Worldwide model: AC 220 V/120 V switchable, 50/60 Hz

- Voltage Selector (Rear Panel)**

Worldwide models are equipped with a voltage selector to conform to local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before plugging in the unit. Models without a voltage selector can only be used in areas where the power supply is the same as that of the unit.

Setting the Voltage Selector

- Determine the proper voltage for your area: 220 V or 120 V.
- If the preset voltage is not correct for your area, insert a screwdriver into the groove in the switch. Slide the switch all the way to the right (120 V) or to the left (220 V), whichever is appropriate.

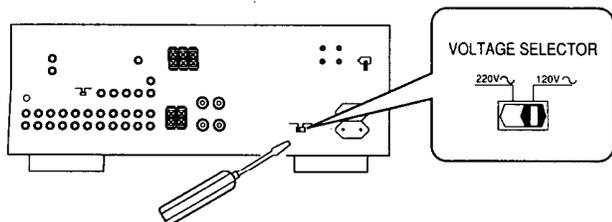

Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in order to charge the back-up system.


The memory preservation period after the unit has been unplugged varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time the unit has been unplugged. This period is shorter when the unit is exposed to a highly humid climate.

Before using this unit

1. Using the remote control

The following information will help you get optimal use from the remote control.

- Place this unit away from direct bright light, which can prevent proper operation of the remote control.
- Make sure audio rack doors do not have tinted glass. If this unit is placed behind such a door, this may prevent proper remote control operation.
- Using other remote controls in the same room as this unit's remote control may cause interference.

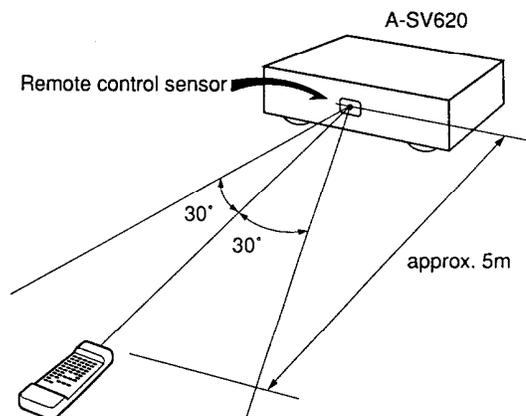


2. Regarding the batteries

Average battery life is about one year, depending upon the frequency of use and the environment (temperature and humidity) in which the remote control is used. Only use batteries of the kind specified in the table below.

Type	Voltage	Size
Manganese	1.5 V	AA, R6 or UM-3

Insert the batteries into the remote control according to the illustration.

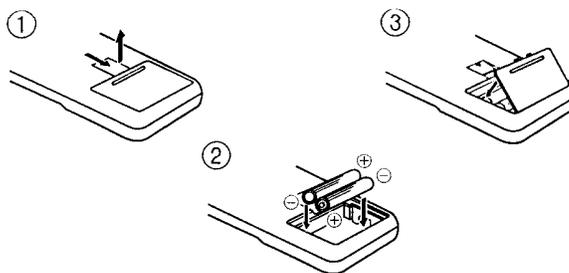

Warning

- Do not leave an expired battery in the case – it may leak or damage the remote control.
- Do not use nickel cadmium (rechargeable) batteries.
- Replace both batteries at once; do not use one old battery and one new battery.

Explanation

Surround system


Many motion pictures produced in the last decade have been released in "Dolby Stereo" sound, with music, dialogue, and panned effects coming from the 3-channel front soundstage, and surround effects and ambience emanating from the sides and rear of the theater. These four channels are encoded, or matrixed, into a two-channel DOLBY STEREO release, and decoded in the theater by a professional DOLBY STEREO MP (Motion Picture) decoder. These surround sound effects are "hidden" in the two-channel stereo movie release, and decoded in the theater by special Dolby equipment.

These same two-channel motion picture masters are used for production of stereo VHS, VHS-Hi-Fi, Beta Hi-Fi, and stereo Laser Vision discs that you can buy or rent at your video store. This unit incorporates the Digital Dolby Pro Logic Surround Circuit, which is designed to emulate the audience experience found in DOLBY STEREO theaters. Like Dolby Surround, Dolby Pro Logic Surround is capable of creating a multi-dimensional soundstage, but with the increased channel separation it gives a far greater sense of "movement" and sound localization. Just like in the theater, the addition of the active Center channel ensures that all audience members hear dialogue coming from its on-screen sources regardless of seating position.

Since this unit is equipped with Front amplifiers, Center amplifier and Rear (Surround) amplifiers, Dolby Pro Logic Surround, Theater, Hall, Live and arena effects can all be produced. You can enjoy the feeling of a movie theater or concert hall in your own room. To reproduce these effects, Rear (Surround) speakers and Center speaker are necessary. The placement of these speakers is important. You can experiment with various positions and locations to find the best placement for optimum sound quality in your room.

DSP (Digital Signal Processor)

The DSP converts the musical signal into digital form and produces reflected sound from the digital signal. This is applied to the musical signal to yield an effect approaching that of a live performance.

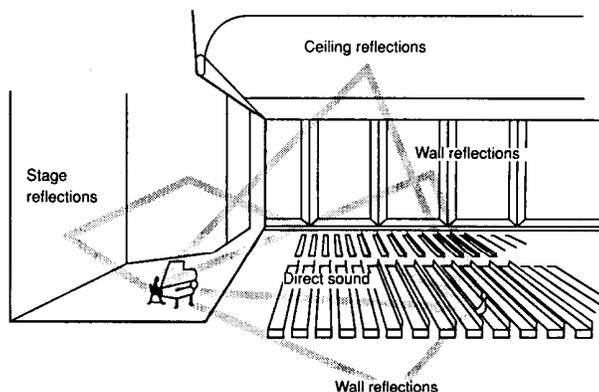

Multiple Room Remote System (mrx)

This remote system greatly increases system flexibility when it is used with Onkyo's or Xantech Corporation's Multi Room system.

1. U.S.A., Canadian and Mexican models

The following concerns Xantech Corporation's Multi Room system.

The gray terminal on the A-SV620 is the **mrx** terminal.

Used with your A-SV620 the XANTECH 480B-00 (DINKY LINK) or 780-10 (J-BOX RECEIVER) and 789-40 (CONNECTING BLOCK), and 781C-00 (AC120V POWER SUPPLY) or 782-00 (HI CURRENT POWER SUPPLY) allows you to control speakers even when you are not in the same room as the A-SV620. In addition to basic functions like speaker on-off and volume and so on, you can also control most ONKYO CD players and cassette decks that use the **RI** system. Adding an 282-00 (MINI EMITTER) allows you to control even the non-ONKYO components in your home entertainment system from a separate room.

When the 282-00 is being used to control more than one device from a distance but the infrared beams from the 282-00 remote control alone will not reach these devices, connect another 282-00 to the 789-40.

Consult your nearest Onkyo Service Center with any questions concerning Xantech Corporation's Multi Room system.

2. Models other than U.S.A., Canadian and Mexican models

The following concerns Onkyo's Multi Room system.

The green terminal on the A-SV620 is the **mrx** terminal.

The ONKYO HR-10 Remote sensor greatly increases system flexibility. Used with your A-SV620 the HR-10 allows you to control speakers even when you are not in the same room as the A-SV620. In addition to basic functions like speaker on-off and volume and so on, you can also control most ONKYO CD players, cassette decks and digital audio tape decks that use the **RI** system. Adding an HE-50 (AC) Remote Emitter allows you to control even the non-ONKYO components in your home entertainment system from a separate room.



When the HE-50 (AC) is being used to control more than one device from a distance but the infrared beams from the HE-50 (AC) remote control alone will not reach these devices, connect an HE-10 (Remote Emitter head) to the HE-50 (AC), and set it up to be aimed at the devices to be controlled.

It would be necessary to change the construction of the A-SV620 in order to switch it from an ONKYO Multi Room system to a XANTECH Multi Room system. Consult your nearest Onkyo Service Center with any questions.

XANTECH is a registered trademark of Xantech Corporation (USA).


Making system connections

- Do not plug in the power cord until all connections have been made.
- On each pair of input jacks, the lower jack (marked R) corresponds to the right channel, and the upper jack (marked L) to the left channel.
- Please refer to the instruction manual of each component when making any connections.

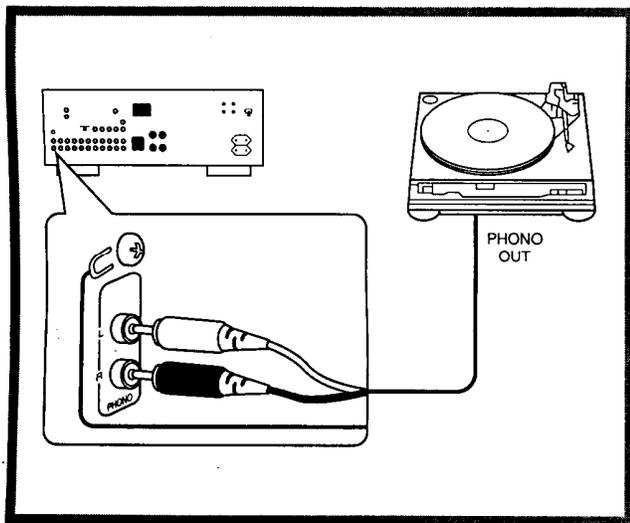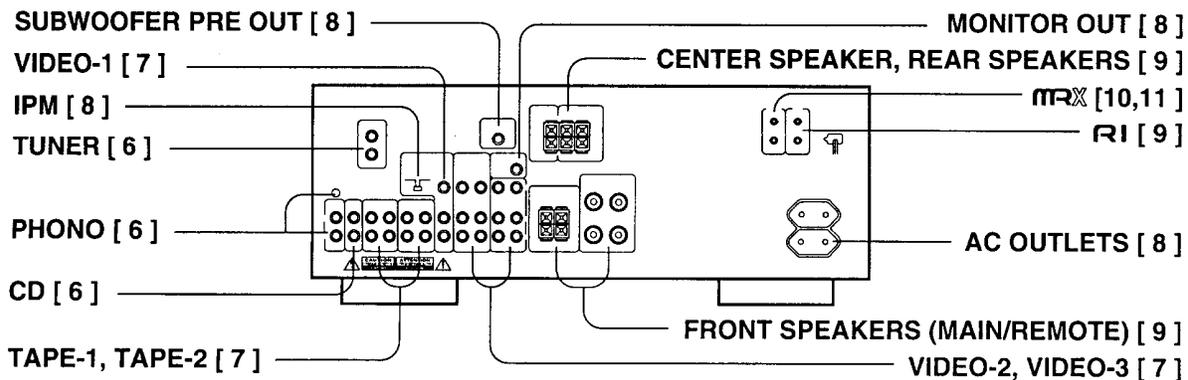

Connecting a turntable (PHONO)

Connect the output leads of the turntable to the PHONO jacks. Be sure to connect the ground (earth) lead wire from the turntable to the ground terminal (GND). Turntables not provided with GND wires do not need to be connected in this way. Place the turntable on a firm shelf or deck free from vibrations (especially those generated by the speaker system). If the turntable is permitted to pick up such unwanted vibrations, not only will the performance of the unit drop, but distortion in the bass frequencies and howling in the speakers may also occur.

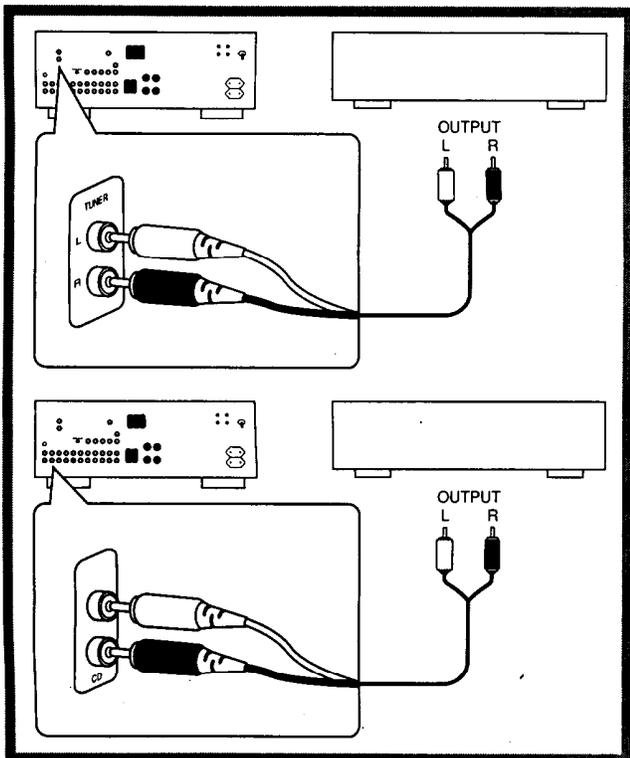


Connecting a tuner (TUNER)

Connect an FM/AM tuner to the tuner input jacks.

Connecting a CD (CD)

Connect a compact disc player to the CD input jacks.

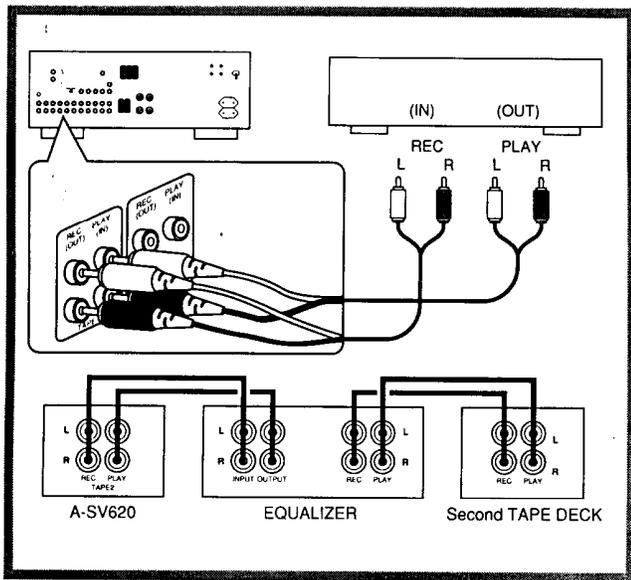


Connecting a tape deck (TAPE-1, TAPE-2)

This unit has facilities for two tape decks.

If you are using only one tape deck, connect it to the TAPE-1 jacks. If you have two tape decks, connect one to the TAPE-1 jacks and the other to the TAPE-2 jacks.

If you wish to use a graphic equalizer as well as two tape decks, connect the graphic equalizer to the TAPE-2 jacks, and connect the second tape deck to the TAPE jacks on the graphic equalizer. (See the diagram.)

Connect the OUTPUT jacks on the graphic equalizer to the TAPE-2 PLAY jacks on the A/V Tuner Amplifier, and the INPUT jacks to the TAPE-2 REC jacks as shown.

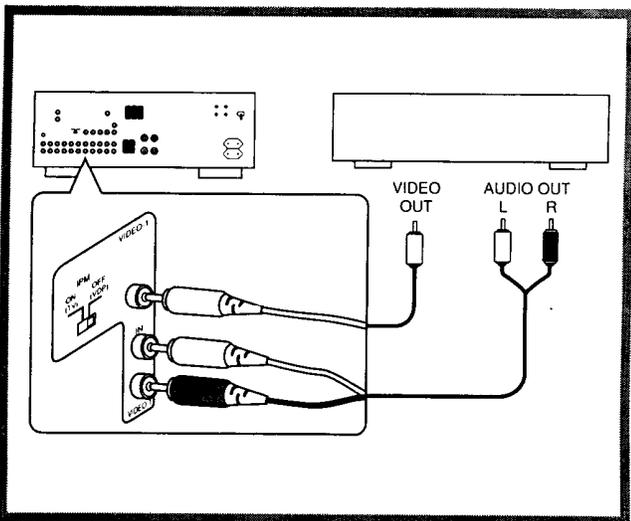


Connecting a Video Disc Player or Video Cassette Player or TV (VIDEO-1)

Connect the VIDEO output of the video disc player to this unit VIDEO-1 V "IN" jack and the audio output to the VIDEO-1 L and R "IN" jack. The VIDEO-1 jack is only for playback, there is no OUT jack. For more details, refer to the video disc player instruction manual.

NOTE:

The IPM function can operate only if a TV is connected to the VIDEO-1 jack. (See page 8.)

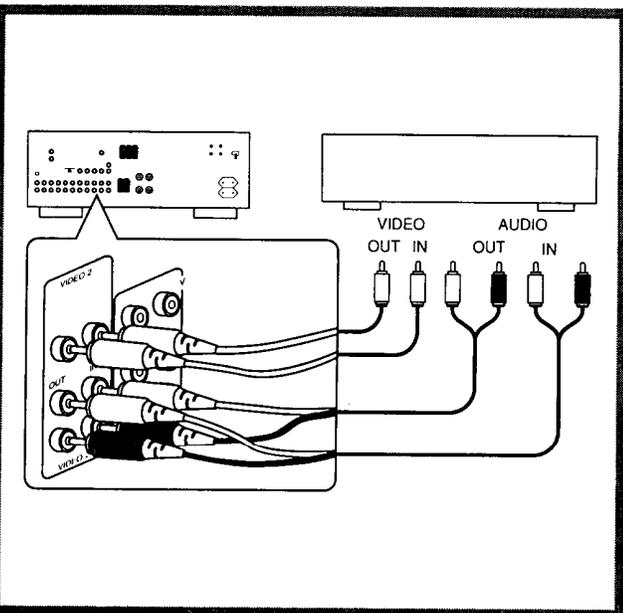


Connecting a Video Cassette Recorder (VIDEO-2 and/or VIDEO-3)

Connect the VIDEO output of the VCR to the rear panel VIDEO-2 and/or VIDEO-3 V "IN" jack and the VIDEO input of the VCR to the rear panel VIDEO-2 and/or VIDEO-3 V "OUT" jack. Then connect the audio output of the VCR to the VIDEO-2 and/or VIDEO-3 L and R "IN" jacks. Finally, connect the AUDIO input of the VCR to the VIDEO-2 and/or VIDEO-3 L and R "OUT" jacks.

- When using a playback-only VCR, you only need to make the output connections.

For more details, refer to the VCR instruction manual.

Making system connections

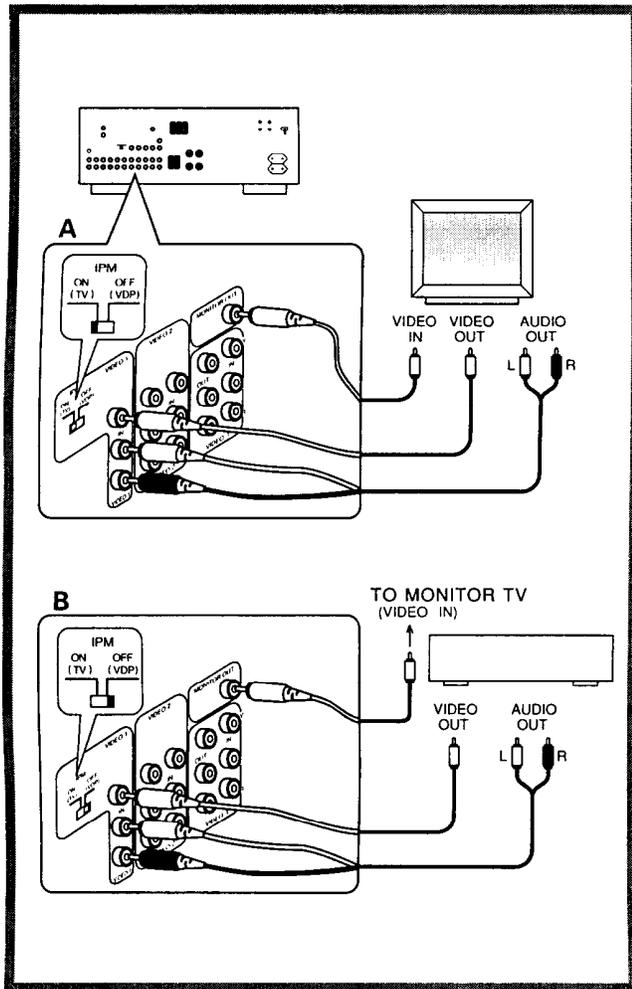

Connecting a monitor (MONITOR OUT)

1. Connect the TV VIDEO input to this unit MONITOR OUT jack. There is no need to perform an audio connection since sound will be sent directly from this unit to the speaker systems.
2. This unit does not have an RF converter. Therefore, it can be used with only a monitor TV equipped with a video input jack.
3. Interference may be caused between the TV and this unit. If this interference occurs, place this unit and the TV as far apart as possible. We do not recommend the use of a common TV/FM antenna (see antenna section).

IPM (Intelligent Power Management System)

If the TV connected to VIDEO-1 is turned on, this unit is automatically turned on and the input selector is set to VIDEO-1. The IPM system then automatically switches the unit off when the TV is switched off (provided that the input selector remains set to VIDEO-1).

A. Connection where IPM will operate


Set the IPM switch to ON. VIDEO-1 TV is displayed on the multi function display.

B. Connection where IPM will not operate

Set the IPM switch to OFF. VIDEO-1 VDP is displayed on the multi function display.


NOTES:

- This unit will automatically switch on approximately three to five seconds after the TV comes on.
- The IPM function is not operating when the TV screen remains blank, even if the TV is switched on.

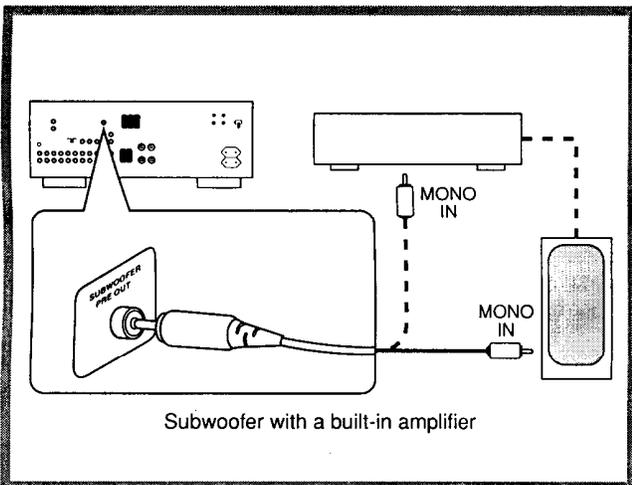

Connecting the subwoofer speaker


The SUBWOOFER PRE OUT jack can be connected to a subwoofer amplifier or to a subwoofer with a built-in amplifier. When connecting anything to the SUBWOOFER PRE OUT jack, set the SPEAKERS A button on the front panel to ON.

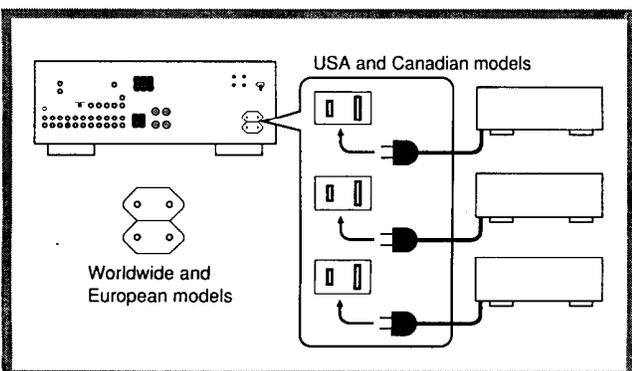

AC outlets

The SWITCHED outlet is switched on and off by the power buttons on the front panel and remote control.

The shape, number and total capacity of the AC outlets may differ according to the model and the area where the unit is purchased. Be careful that other components connected to this unit do not exceed the capacity that is printed on the rear panel above the AC outlets.

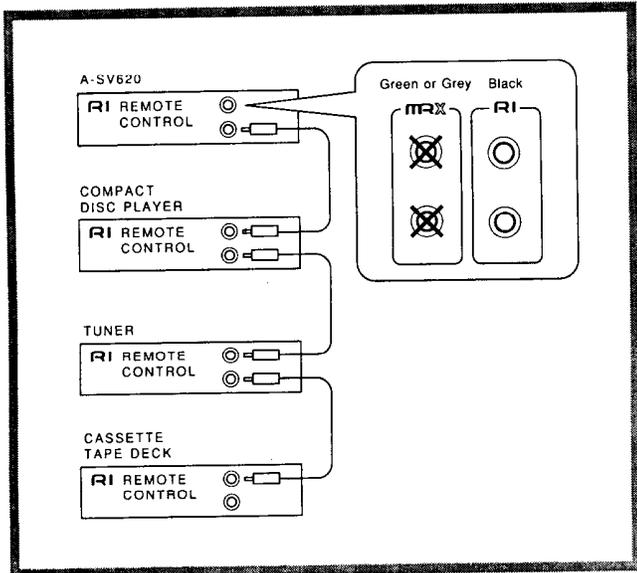

Connections for remote control


A cassette tape deck, tuner and compact disc player that have the ONKYO **RI** mark can be operated using the accessory remote control with this unit. Refer to the explanations of items ④ (Tape operation buttons) and ⑤ (CD operation buttons) on page 13. Connect a remote control cable to the black jack with the **RI** mark. Never connect it to the green or grey jack with the **MRX** mark.

Connect the remote control cable as shown left side to enable remote control operation of other components.

NOTES:

- To enable proper remote control operation, both the **RI** cable and the audio cables must be connected between units.
- This unit's remote control cannot be used to control ONKYO turntables.
- An **RI** remote control cable equipped with a 1/8" (3.5 mm) miniature 2 conductor phone plug is included with this unit and with any other component with the **RI** mark.

Connecting the front, rear and remote speakers

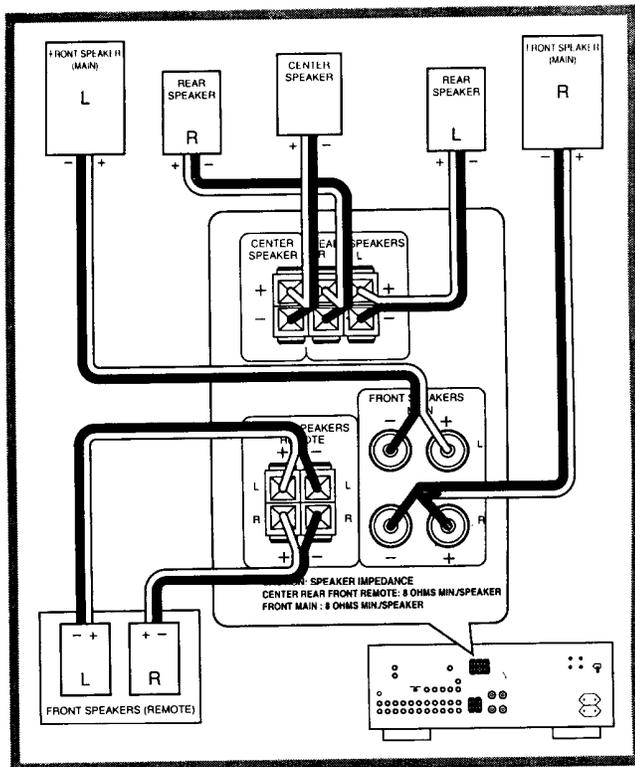

If you want to use the Surround effects, the Rear and Center speakers must be connected.

The speakers that are to be located in the same room as this unit should be connected to the MAIN speaker terminals.

Different sets of speakers that are to be located in another room (or the same room) should be connected to the REMOTE speaker terminals.

To get the full effects of the Surround processor, ensure the left and right Front MAIN and Rear speakers are not reversed.

NOTE:

Use speaker cables that have a low impedance and that are as short as possible.

SPEAKER IMPEDANCE


FRONT MAIN: 8 ohms min/speaker
 CENTER, REAR, FRONT REMOTE: 8 ohms min/speaker

Connecting the speaker cables

When using banana plugs, make sure the speaker terminal screws are screwed in firmly before inserting the banana plugs.

NOTE:

Speaker terminals on European models are not banana plug compatible.

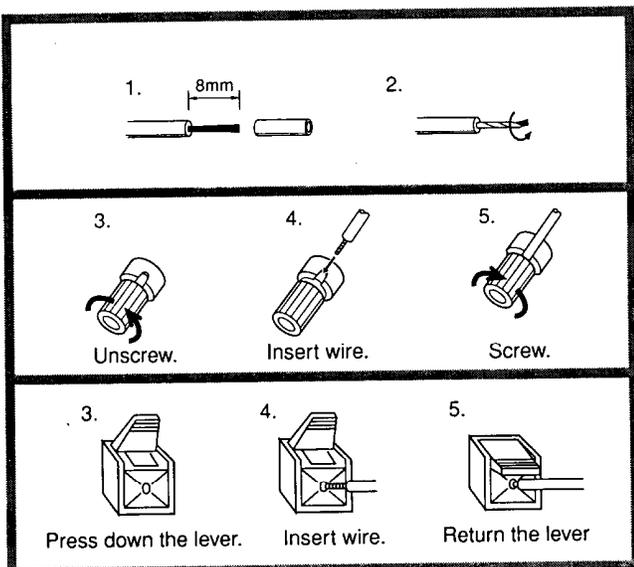


Connection for Multiple Room Remote Control


1. XANTECH CORPORATION MULTI ROOM system (For U.S.A and Canadian models)

Consult the store where this unit was purchased or an Onkyo Service Center for information concerning the connections.


In order to use the A-SV620 to control a CD player and cassette deck, both displaying ONKYO's **RI** mark, from another room, make the connections as shown in the illustration below.

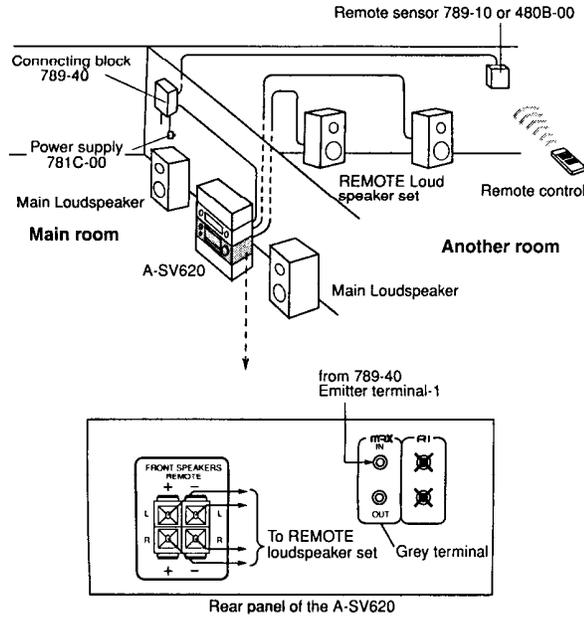

To enable remote control operation when the A-SV620 is mounted in a rack which will not permit infrared beams to pass, mount the 480B-00, 789-40 and 781C-00 outside the rack so that the signals can be picked up.

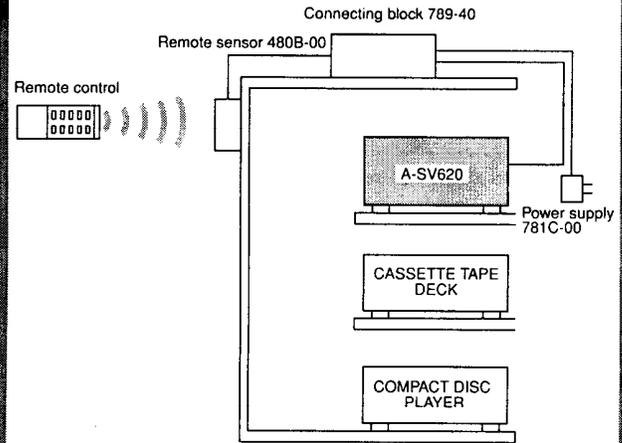

In order to use the A-SV620 to control a CD player and cassette deck, neither displaying ONKYO's **RI** mark, from another room, make the connections as shown in the illustration below. The Emitter 282-00 should also face the A-SV620.

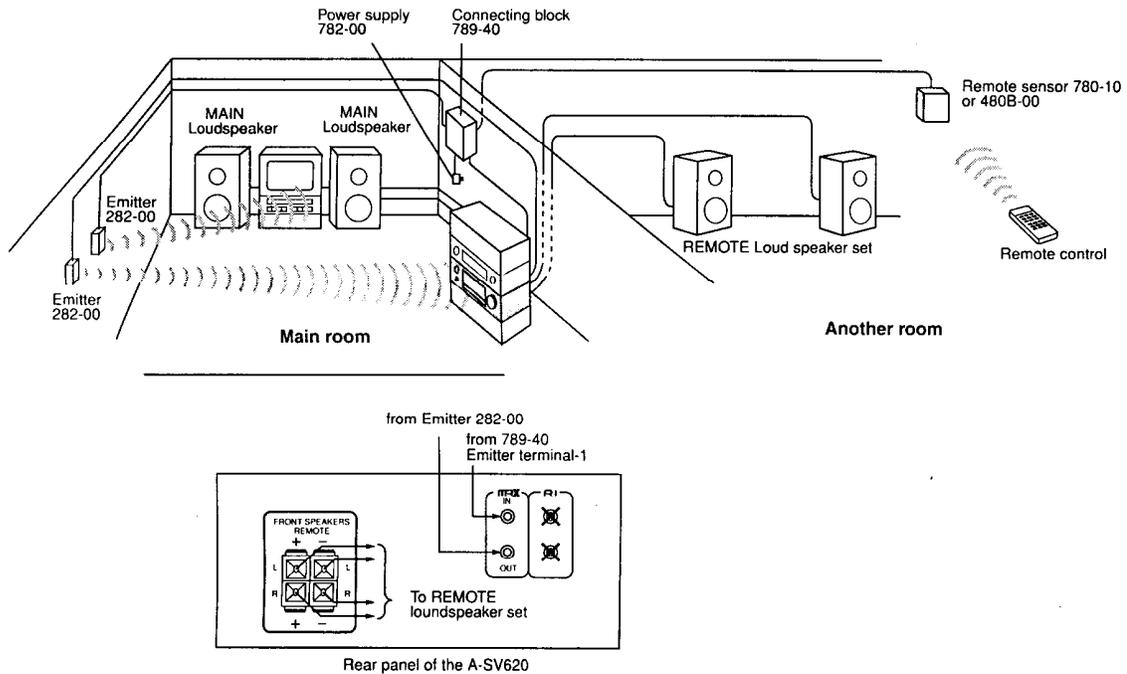


NOTES:

- Always unplug the AC power cord for the A-SV620 and multiroom system when connecting the **MRX**.
- Insert the **MRX** mini plug into the gray terminal on the rear panel of the A-SV620.

Control positions and names


For more information about buttons or controls, turn to the page number listed in the brackets after each item.

Front panel

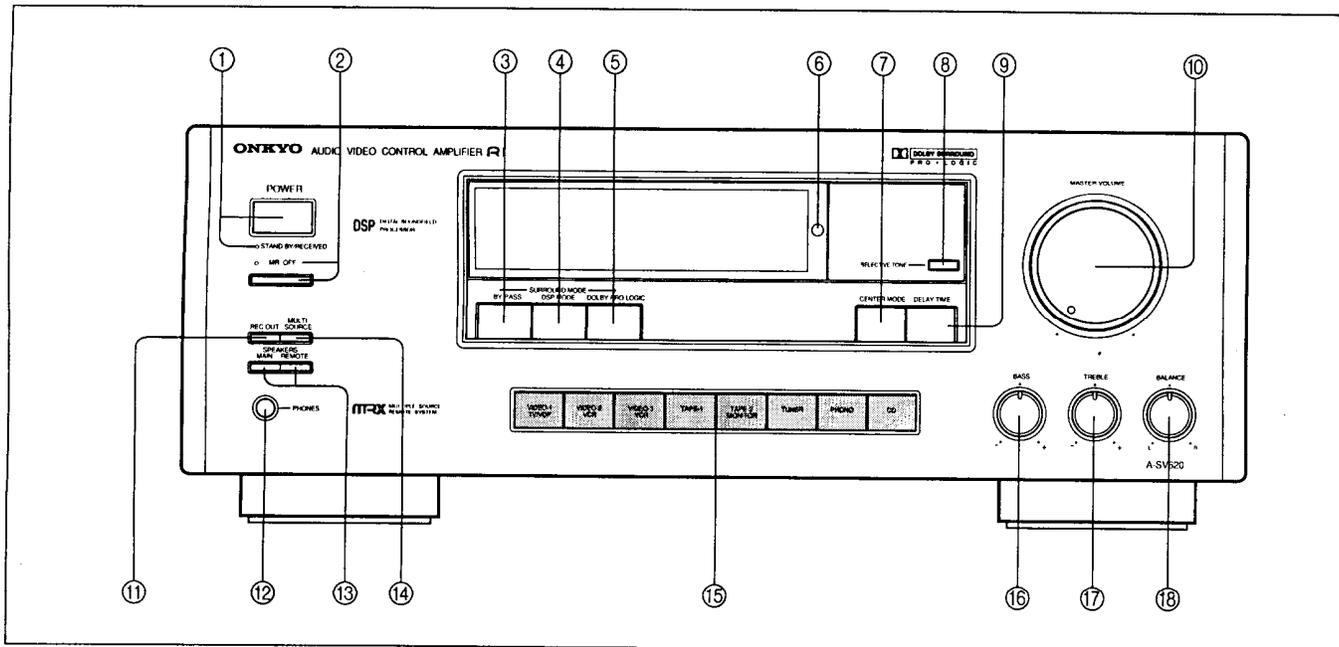


- ① Power button and stand-by received indicator (POWER) [14, 15]
- ② MR off button (MR OFF) and indicator [21, 22]
- ③ By-Pass button (BY-PASS) [17]
- ④ DSP mode button (DSP MODE) [17, 18]
- ⑤ Dolby Pro Logic button (DOLBY PRO LOGIC) [17, 18]
- ⑥ Remote control sensor [4]
- ⑦ Center mode button (CENTER MODE) [17, 18]
- ⑧ Selective tone control button (SELECTIVE TONE) [14, 15]
- ⑨ Delay time button (DELAY TIME) [17, 18]
- ⑩ Volume control knob and indicator (MASTER VOLUME) [14, 15]
- ⑪ Recording out button (REC OUT) [19, 20, 21]
- ⑫ Headphone jack (PHONES) [15]
- ⑬ Speaker selector buttons (SPEAKERS MAIN/REMOTE) [14, 15, 22]
- ⑭ Multi-source button (MULTI SOURCE) [22]
- ⑮ Input selector buttons [14, 18 – 22]
Audio selectors (CD, PHONO, TUNER, TAPE-1, TAPE-2 MONITOR)
Video selectors (VIDEO-1 TV/VDP, VIDEO-2 VCR, VIDEO-3 VCR)
- ⑯ Bass control knob (BASS) [14, 15]
- ⑰ Treble control knob (TREBLE) [14, 15]
- ⑱ Balance control knob (BALANCE) [14, 15]

Display

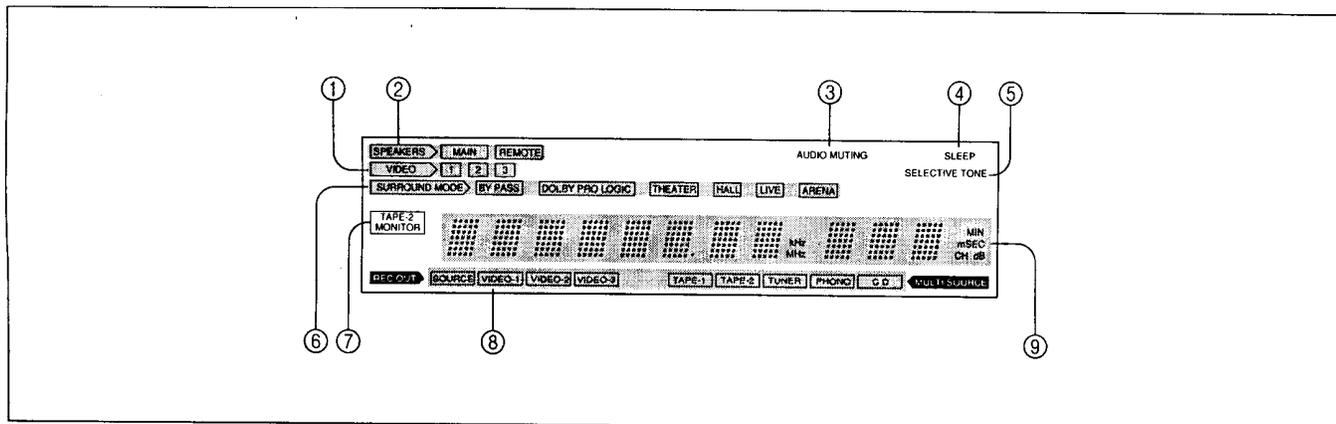

- ① Video input selector indicators
- ② Speaker selector indicators
- ③ Audio muting indicator
- ④ Sleep indicator
- ⑤ Selective tone control indicator
- ⑥ Surround mode indicators
- ⑦ Tape-2 monitor indicator
- ⑧ Recording out / multi-source indicators
- ⑨ Multi function display input selector / sleep timer / multi-source volume level / delay time / center, rear volume level

Remote control

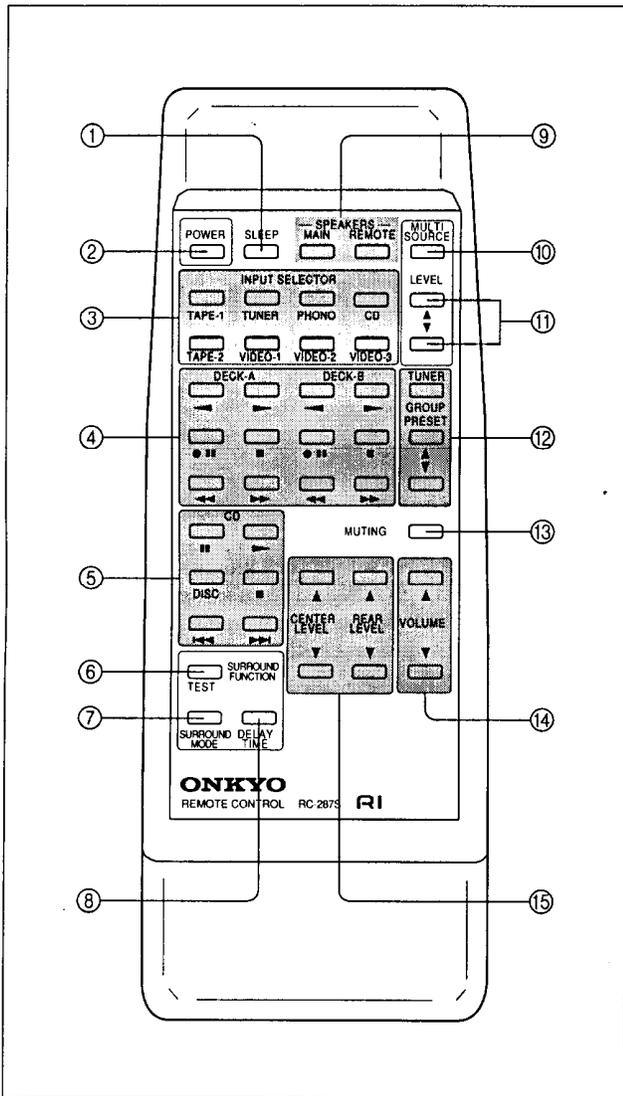

① Sleep button (SLEEP) (Remote control transmitter only)

Press to set the power off timer. The sleep timer is a function which turns off the power to the system from the time it is set. When this button is pressed, "90 MIN" is displayed for 5 seconds, and the power goes off 90 minutes later. Each time the button is pressed during 5 seconds, the timer setting changes, by 10 minute intervals, such as 80, 70, 60 While the sleep timer is operating, the **SLEEP** indicator is lit. If the sleep button is pressed during this time, the amount of time remaining on the sleep timer is displayed, and if the button is pressed during that display, 10 minutes will be subtracted from that time. If the button is pressed when the panel display shows 10 minutes or less, the sleep timer is cancelled, and the power is not turned off.

② Power button (POWER) [14, 15]

③ Input selector buttons [14, 22]

(TAPE-1, TUNER, PHONO, CD, TAPE-2, VIDEO-1, VIDEO-2, VIDEO-3)

When the TUNER button is pressed, the station which was received previously is recalled. Selection of AM or FM should be done on the main unit.

④ Tape operation buttons (DECK-A, DECK-B)

These buttons control ONKYO double cassette tape decks that can be remote controlled. Use the DECK-B buttons to control single cassette tape decks with the **RI** mark.

●/|| : When this is pressed, the recording stand-by mode is entered.

▶ : The tape plays, moving from right to left, or, in the recording stand-by mode, recording begins.

■ : Interrupts all operations.

▼ : The tape plays, moving from left to right, or, in the recording stand-by mode, recording begins.

◀◀ : Fast forward from right to left.

▶▶ : Fast forward from left to right.

⑤ CD operation buttons (CD)

These buttons are used to operate an ONKYO CD player with the **RI** mark.

▶ : Press this button to play the CD player.

|| : Press this button to pause the CD play back. To resume disc play, press the ▶ button.

DISC : Press to use for sequential selection of discs in the order they were loaded on the CD changer.

■ : Press this button to stop the CD player.

◀◀ : Press this button to go back to the beginning of the current track and again to skip back to the previous track.

▶▶ : Press this button to skip to the next track.

⑥ Test tone button (TEST) [18]

⑦ Surround mode button (SURROUND MODE) [17, 18]

⑧ Delay time button (DELAY TIME) [17, 18]

⑨ Speaker selector buttons

(SPEAKERS MAIN/REMOTE) [14, 15, 22]

⑩ Multi source button (MULTI SOURCE) [22]

⑪ Multi source level up/down buttons [22]

(LEVEL ▲/▼)

⑫ Tuner operation buttons (TUNER)

These buttons control ONKYO tuner with the **RI** mark.

GROUP: Group selector button

PRESET ▲/▼: Preset memory up/down buttons

⑬ Audio muting button (MUTING)

This button temporarily switches off the sound from the speakers or headphone by operating this unit audio muting circuits. The audio muting indicator "AUDIO MUTING" will flash. Pressing the button again or using the POWER button to turn the power on will turn off the audio muting.




● Pressing this button does not mute the sound of the multi source. Press the SPEAKERS REMOTE button to mute the sound of the multi source.

⑭ Volume buttons (VOLUME ▲/▼) [14, 15]

⑮ Center level up/down buttons (CENTER LEVEL ▲/▼)

Rear level up/down buttons (REAR LEVEL ▲/▼) [18]


Listening to your favourite source

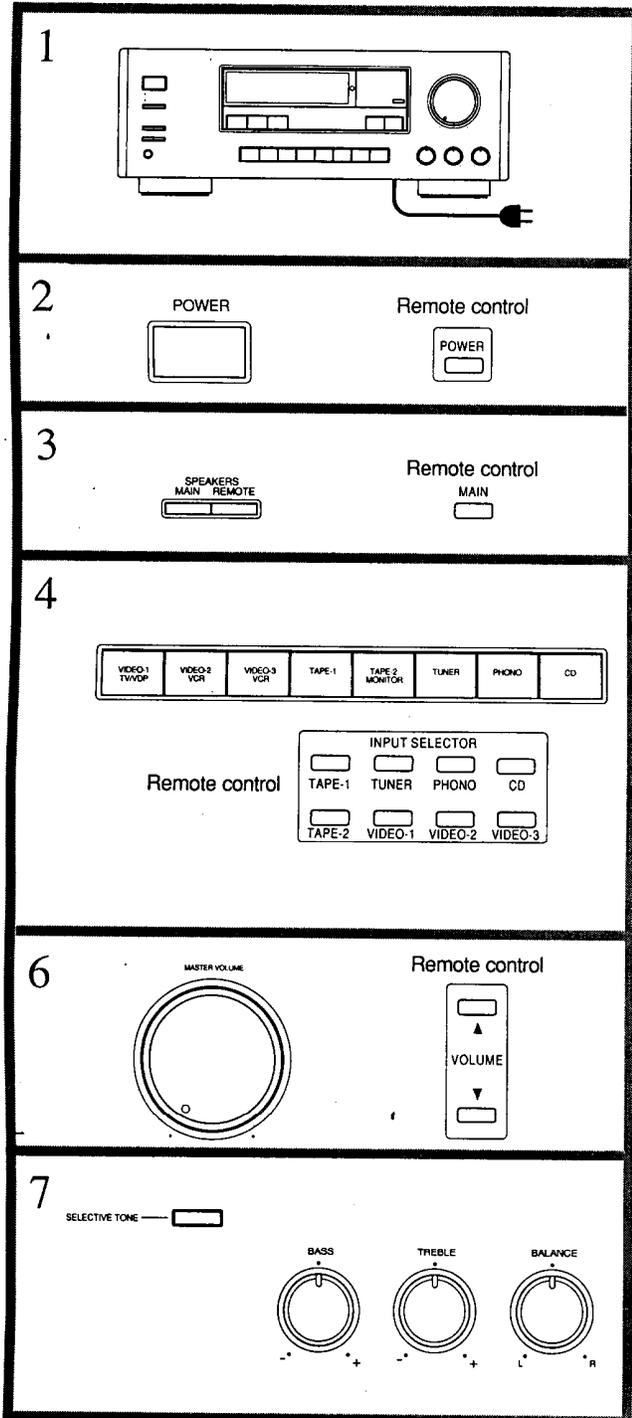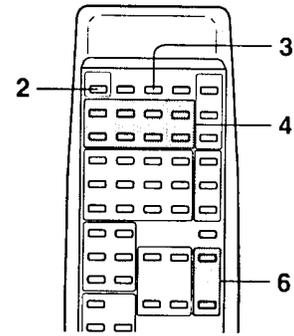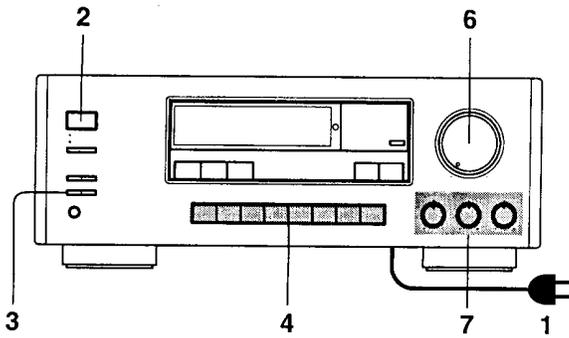

Basic operation

Before plugging in the unit, confirm that all connections have been made properly.


1. **Insert the AC power supply cord into the wall outlet.**
The STAND-BY/RECEIVED indicator comes on.
2. **Press the POWER button to turn on the power.**
3. **Press the MAIN speakers button.**
MAIN indicator lights up.
4. **Press the desired input selector button.**
Confirm that the TAPE-2 MONITOR indicator is off when a source other than the TAPE-2 MONITOR has been selected. Also check the audio muting is off.
5. **Start the selected input source playing.**
Follow the operating instructions of that unit.
6. **Adjust the volume to appropriate level using the MASTER VOLUME knob or VOLUME ▲/▼ buttons on the remote control.**
7. **Adjust the tone controls.**

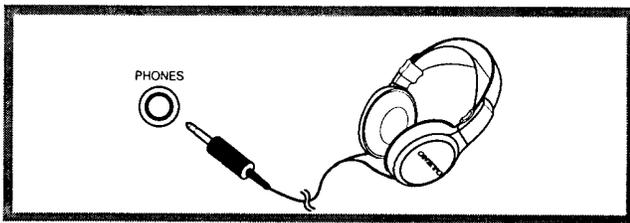

Using headphones

Stereo headphones with a standard stereo jack plug can be connected to the PHONES jack. The sound heard through the headphones is the same sound that can be heard from the Front speakers, although it may be slightly different from what is heard from the speakers when the Surround mode is used. (The sound from the headphones may sound a little distant.)

Explanation of the buttons

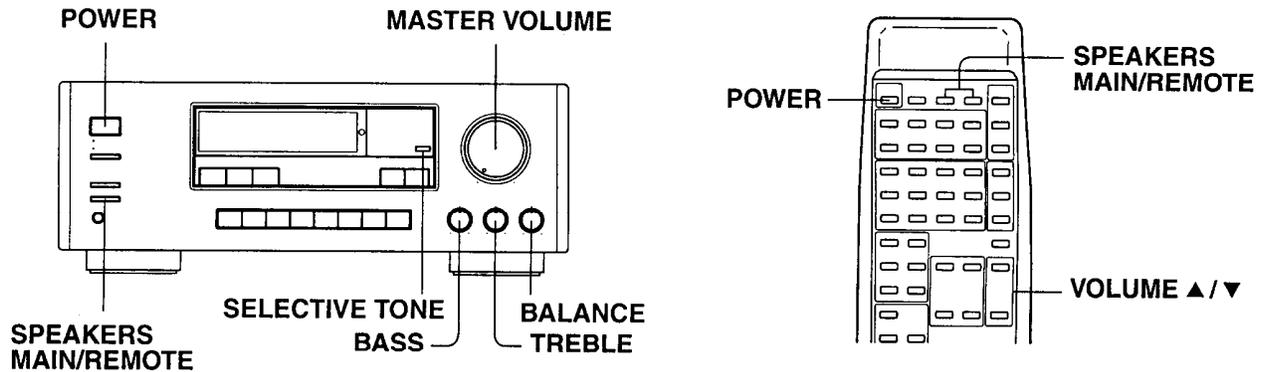

■ Power button (POWER) and STAND-BY/RECEIVED indicator

The STAND-BY/RECEIVED indicator comes on when the AC power cord for this unit has been inserted in an outlet. This indicates that this unit is standing by for operation. Press the power button will turn the main unit on, then this indicator goes off. The indicator also lights when a signal is received from the remote control.

■ Speaker selector buttons (SPEAKERS MAIN/REMOTE) and indicators

MAIN button This button turns on or off the speakers connected to the MAIN, CENTER and REAR terminals.
When the speakers are turned on, the MAIN indicator lights up.

REMOTE button This button turns on or off the speakers connected to the REMOTE terminals.
When the speakers are turned on, the REMOTE indicator lights up.
Turn on these speakers when using multi source. (See page 22.)

■ Master volume control knob (MASTER VOLUME)

Use this knob to adjust the volume of the Front, Main, Center, Rear (Surround) speakers.




■ Tone and balance controls

Treble, bass and selective tone are effectively only for the Front L and R speakers. The best results are obtained from DOLBY PRO LOGIC Surround when the center and front L and R speakers contain the same amounts of mid and high frequencies. As the treble and bass control do not affect the Center speaker, adjust the tone controls for the Front L and R speakers to match the sound given by the Center speaker. Because of this, we recommend the use of a good quality center speaker.

- **Bass control knob (BASS)**
Adjust to strengthen or weaken bass response.
- **Treble control knob (TREBLE)**
Adjust to strengthen or weaken treble response.
- **Selective tone control button (SELECTIVE TONE) and indicator**
The selective tone control is used to clearly reproduce ultra low and high frequencies, and only affects the Front speakers.
- **Balance control knob (BALANCE)**
Use the balance control knob to adjust the relative volume levels of the right and left front Main speaker systems. This adjusts the relative volume level of the Front Main speakers only.

Use of surround mode

Speaker placement

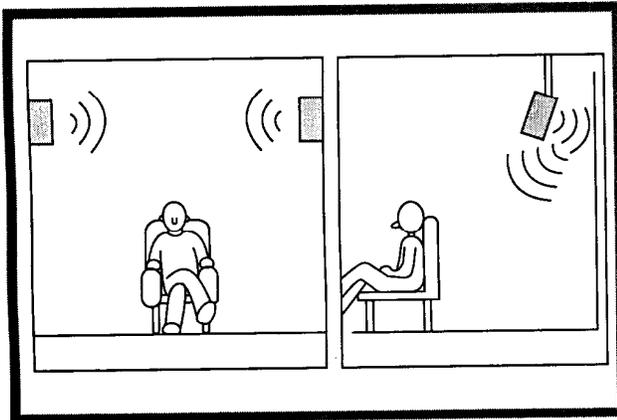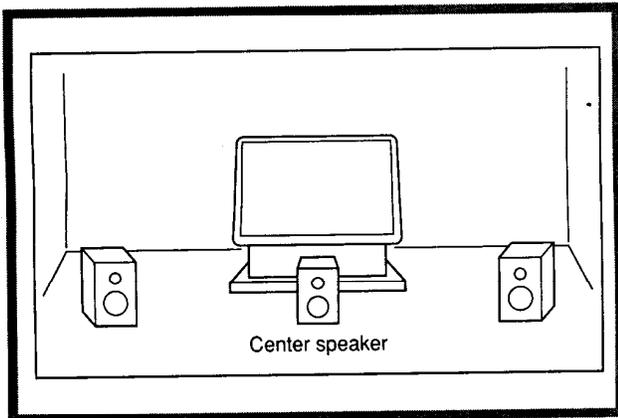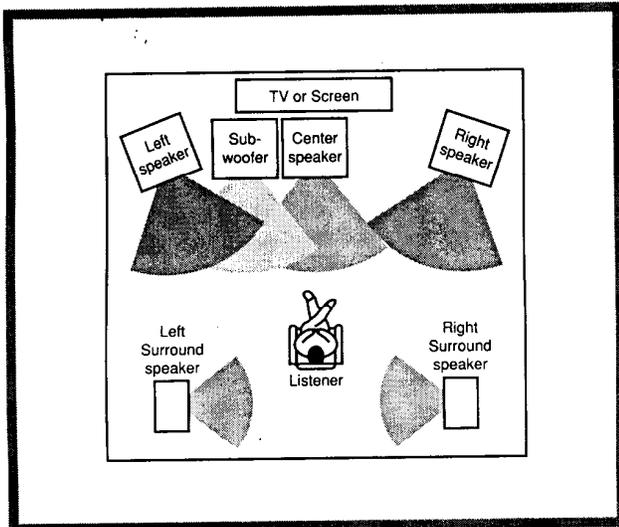

Placing the speakers for Surround effects

Speaker placement plays an important role in the reproduction of sound using Surround. The manner in which the speakers are placed varies depending on the size of the room and the wall coverings used in the room. The following shows an example of a layout for standard speaker placement. Refer to the example for placing the speakers appropriately in order to experience the best Surround sound.

In principle, for Surround sound reproduction, two Front speakers and two Surround (Rear) speakers are required. Refer to the illustration on the left.

Placing the front speakes

If the Front L and R speakers are placed too far away from each other, sound spreads out too much and is dispersed resulting in diminished sound quality.

Placing the center speaker

To enjoy Surround sound, a Center speaker is required in addition to the four basic speakers.

If a screen with a projector is used, place the Center speaker under the screen. If a Monitor TV is used, it is recommended that the Center speaker be placed on top of or under the Monitor.


Placing the rear speakers

To bring out the feeling of shifting sound, the rear speakers should not be placed on the floor, but would be most effective placed above ear position. They can also be placed facing the ceiling or walls to reflect the sound.

Placing a subwoofer speaker


To enjoy powerful bass sounds, install a subwoofer with a built-in power amplifier. The placement of the Subwoofer does not affect the final quality of the sound image too much, therefore as its exact placement is not critical, you can install it more with the room layout in mind. To especially enjoy A/V Surround, a Subwoofer can bring out the best features of Dolby Pro Logic Surround.

This unit is provided with 5 kinds of Surround modes. Select a mode by pressing the DOLBY PRO LOGIC button, DSP MODE button or BY-PASS button. (When using the remote control, press the SURROUND MODE button.) Make your choice of modes depending on the type of music you are listening to, the media used, and your personal preference. See page 18 for instructions about setting the speaker-volume levels for each mode.

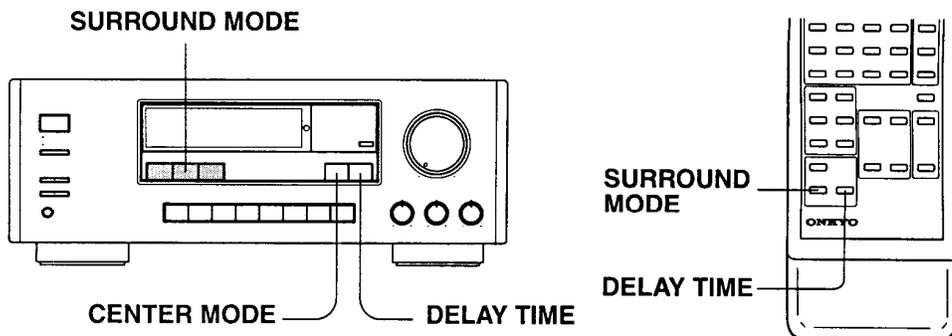

Explanation 1: Surround mode

Dolby Pro Logic

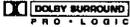By using video tape and laser discs with the  trade mark. You can decode four channel surround sound.

Theater

There are many surround speakers in an actual theater. Use this mode for creating a theater atmosphere. This mode is suitable for playback of media recorded with Dolby Surround.

Hall

Simulates the atmosphere of a concert hall. Intended for classical music.

Live

Reproduces the feeling of a live performance.

Arena

This mode recreates the feel of listening to a pop concert in a domed stadium.

By-Pass

This mode is used when you do not wish to use the Surround mode. All input sound is output from the front speakers directly.

NOTE:


In the surround mode, each selected source along with the input selector source is automatically stored, and consequently recalled when that input selector source is selected.

Explanation 2: Center mode


Because the center speaker plays such an important part in Dolby Pro Logic surround, three different modes are available for it, depending on its size.

Select a mode by pressing the CENTER MODE button.


NORMAL: Use this setting when a small enclosure center speaker is utilized.

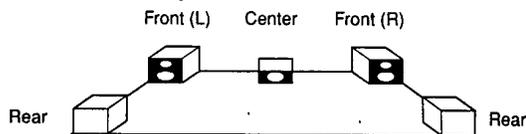

WIDEBAND: Use this setting when a speaker similar to the left and right stereo speakers is utilized.

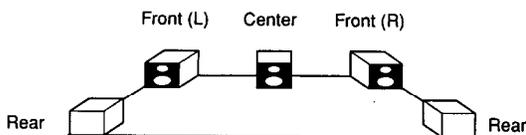

PHANTOM: When a center speaker is not present.

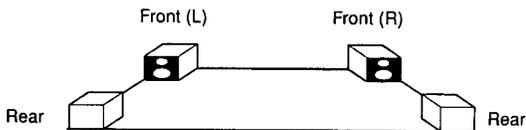

When you press the CENTER MODE button, the name of each mode will be shown on the display for 3 seconds in turn.



Explanation 3: Delay time

You can change the delay time for the sound from the rear (surround) speakers.

Pressing the DELAY TIME button changes the delay time every 1 msec during a period of 15 to 30 msec in Dolby Pro Logic and Theater, and every 5 msec during a period of 10 to 40 msec in Hall, Live and Arena. Dolby Surround delay time is specified at 20 msec. It is recommended that initial Dolby Surround delay time be set at 20 msec, and adjustment to either 15 or 30 msec possible via the control. By adjusting the delay time, and carefully adjusting Master Volume Level, Center Volume Level and Rear Volume Level, the apparent acoustic size of your listening room can be enlarged or deduced. Adjustable delay time allows you to tailor the acoustic size of your listening environment to match the sonic characteristic spaces, such as concert halls, cathedrals, etc. Use a shorter delay to simulate the size of a small club or cabaret. Respective delay time can be memorized for each surround mode. This operation can also be performed using the delay time button of the remote control.

- When you press the DELAY TIME button, DELAY and the delay time will be shown for 3 seconds on the display.
- For surround modes other than Dolby Pro Logic and Theater, a reverb effect is applied in conjunction with the delay time.

Use of surround mode

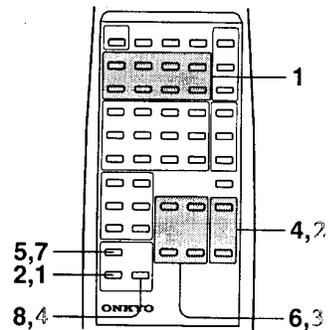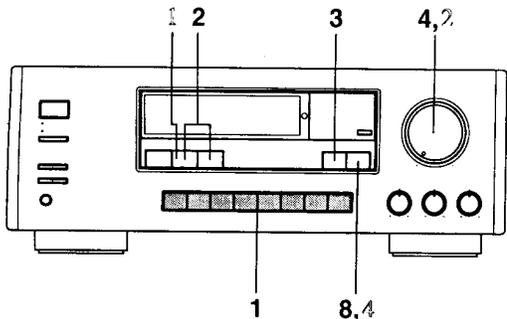

1

VIDEO-1 TV/VP VIDEO-2 VCR VIDEO-3 VCR TAPE-1 TAPE-2 MONITOR TUNER PHONO CD

Remote control

INPUT SELECTOR

TAPE-1 TUNER PHONO CD

TAPE-2 VIDEO-1 VIDEO-2 VIDEO-3

2, 1

DSP MODE DOLBY PRO LOGIC

Remote control

SURROUND MODE

3

CENTER MODE

4, 2

MASTER VOLUME

Remote control

VOLUME

5

Remote control

TEST

6, 3

Remote control

CENTER LEVEL REAR LEVEL

REAR LEVEL

7

Remote control

TEST

8, 4

DELAY TIME

Remote control

DELAY TIME

Setting the Dolby Pro Logic surround or Theater mode

When using video cassette tapes or video discs with the Dolby Surround trademark, you can achieve the same kind of sound in your room that can be experienced in a movie theater.

1. Select a source encoded with Dolby surround.
2. Press the **DOLBY PRO LOGIC** button to select Dolby Pro Logic surround mode, or press the **DSP MODE** button to select Theater mode.

If you are working from the remote control, press **SURROUND MODE** button to select either **PRO LOGIC** or **THEATER**.

3. Use the **CENTER MODE** button to select Center mode. (Explanation 2)
4. Use the **MASTER VOLUME** to set the volume to the desired listening position.
5. Press the **TEST** button to start test-tone cycling. The test tone (pink noise) cycles from speaker to speaker. The cycling sequence depends on the Center Mode settings, as follows.

If Center Mode is **NORMAL** or **WIDEBAND**:

→ left front → center → right front → rear

When the center mode is set to **PHANTOM**:

→ left front → right front → rear

6. Using the test tone as your reference, adjust the center and rear speaker levels with the **CENTER/REAR LEVEL ▲** and **▼** buttons on the remote control.

When one of these buttons is pressed, the level is shown on the display for three seconds. The level can be adjusted in each Surround mode and stored for that specific mode.

7. Press the **TEST** button again to turn off the test tone.
8. Adjust the delay time (Explanation 3).

Adjusting the Hall, Live and Arena Surround parameters



1. Use the **DSP MODE** button to select either **Hall**, **Live** or **Arena** (Explanation 1).
2. Use the **MASTER VOLUME** to set the volume to the desired listening position.
3. Adjust the center level, and rear level using the **CENTER LEVEL ▲/▼** and **REAR LEVEL ▲/▼** buttons on the remote control.
4. Adjust the delay time (Explanation 3).

Recording a source

Recording an audio source

Tape recording

With the A-SV620 you can perform recording while listening to the sound of another source through speakers or headphones. Make all connections between the tape deck and the unit as shown in the system connections diagram. When recording a tape while the multiple room remote control is connected, turn the MR off (the MR OFF indicator will light) to disable remote control operation from another rooms.

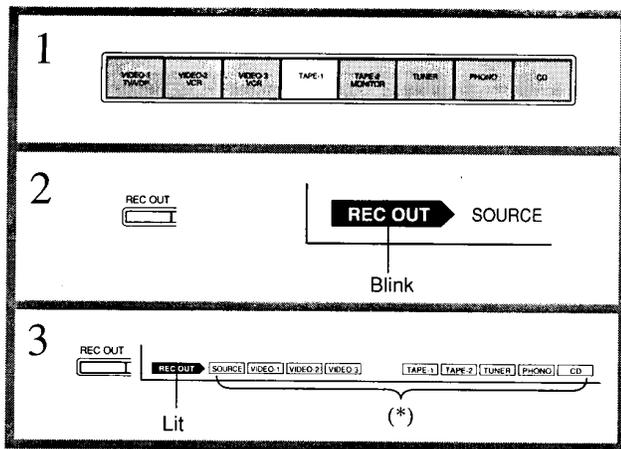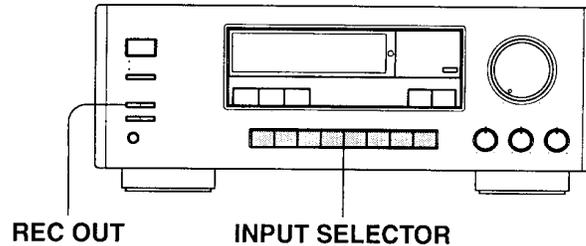


Recording and dubbing to a tape deck connected to TAPE-1

- When recording the same source you are listening to
 - Press the input selector button to select the source to be recorded. (other than TAPE-1)
 - Press the REC OUT button.
 - Press the REC OUT button again while the REC OUT indicator is flashing. The SOURCE indicator and the source you have chosen will be displayed in red boxes. (*)
 - Start the device selected in step 1 while setting the tape deck connected to TAPE-1 to recording mode.

NOTES:

- Never change the positions of any controls on this unit during recording and dubbing operations.
- Pressing the input selector button during recording will change the source being recorded.
- When the TAPE-2 MONITOR indicator is on, only TAPE-2 can be recorded and if the input selector is changed, the TAPE-2 MONITOR indicator will not change.

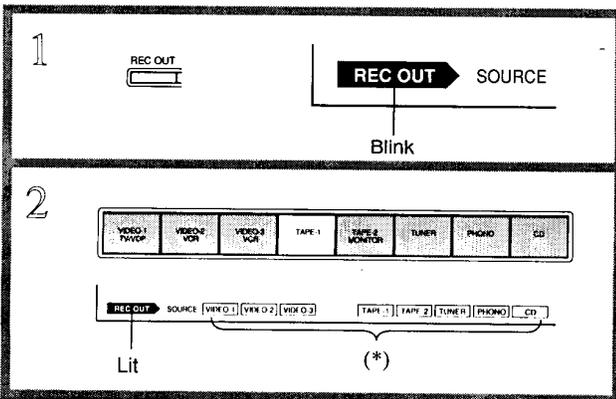

- When recording a source different from the one you are listening to

- Press the REC OUT button.
- Press the input selector button for the source to be recorded, (other than TAPE-1) while the REC OUT indicator is flashing. The chosen source will be displayed in a red box. (*)
- Start the device selected in step 2, and start recording on the tape deck connected to TAPE-1, or on any recording device connected to the VIDEO-2 or VIDEO-3 audio output jacks.

NOTE:



The source you selected to record will be output from the TAPE-1, VIDEO-2 and VIDEO-3 REC OUT jacks. The source you are listening to does not change.

Recording a source

Recording an audio source

Tape recording

With the A-SV620 you can perform recording while listening to the sound of another source through speakers or headphones. Make all connections between the tape deck and the unit as shown in the system connections diagram. When recording a tape while the multiple room remote control is connected, turn the MR off (the MR OFF indicator will light) to disable remote control operation from another rooms.

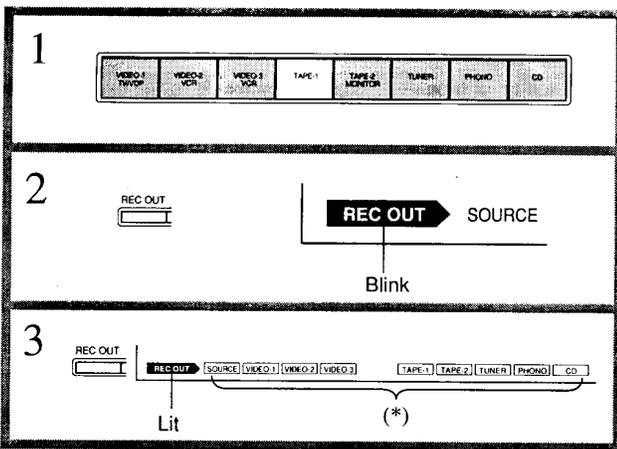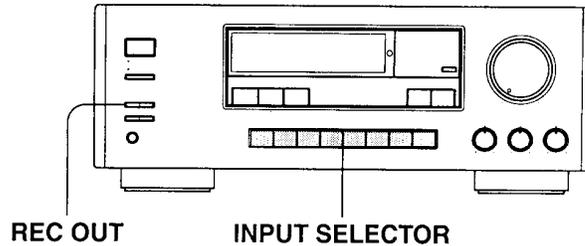


Recording and dubbing to a tape deck connected to TAPE-1

- When recording the same source you are listening to
 - Press the input selector button to select the source to be recorded. (other than TAPE-1)
 - Press the REC OUT button.
 - Press the REC OUT button again while the REC OUT indicator is flashing. The SOURCE indicator and the source you have chosen will be displayed in red boxes. (*)
 - Start the device selected in step 1 while setting the tape deck connected to TAPE-1 to recording mode.

NOTES:

- Never change the positions of any controls on this unit during recording and dubbing operations.
- Pressing the input selector button during recording will change the source being recorded.
- When the TAPE-2 MONITOR indicator is on, only TAPE-2 can be recorded and if the input selector is changed, the TAPE-2 MONITOR indicator will not change.


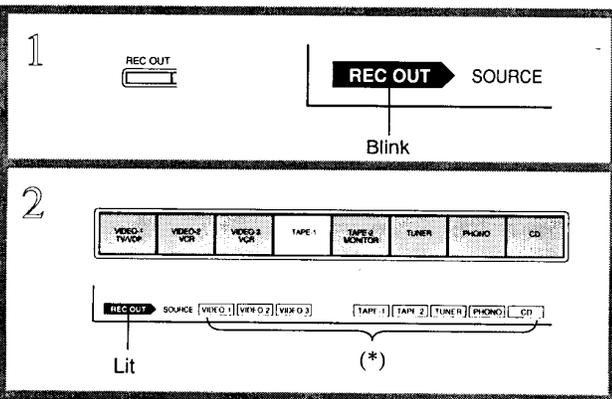


- When recording a source different from the one you are listening to
 - Press the REC OUT button.
 - Press the input selector button for the source to be recorded, (other than TAPE-1) while the REC OUT indicator is flashing. The chosen source will be displayed in a red box. (*)
 - Start the device selected in step 2, and start recording on the tape deck connected to TAPE-1, or on any recording device connected to the VIDEO-2 or VIDEO-3 audio output jacks.

NOTE:

The source you selected to record will be output from the TAPE-1, VIDEO-2 and VIDEO-3 REC OUT jacks. The source you are listening to does not change.



Recording a source

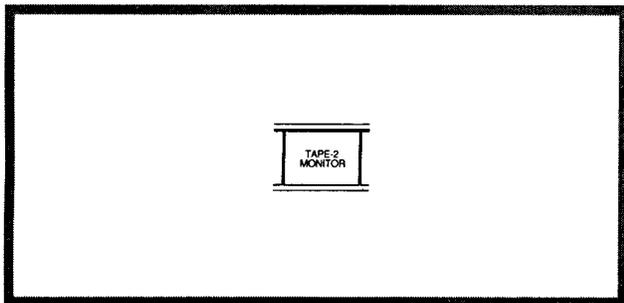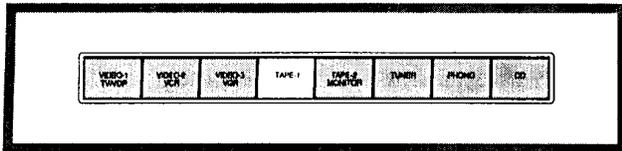

VCR recording

Data can be recorded from video-disc players, video cassette recorders connected to VIDEO-2 and 3. Connect the VCR to VIDEO-2 and/or VIDEO-3.

Refer to each instruction manual for information concerning video-disc players, video camcorders, video cassette recorders and monitor TV.

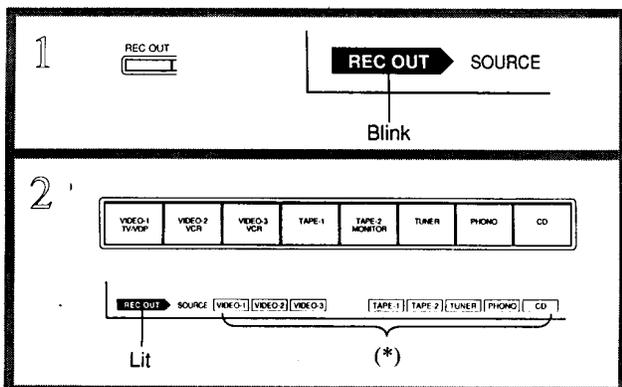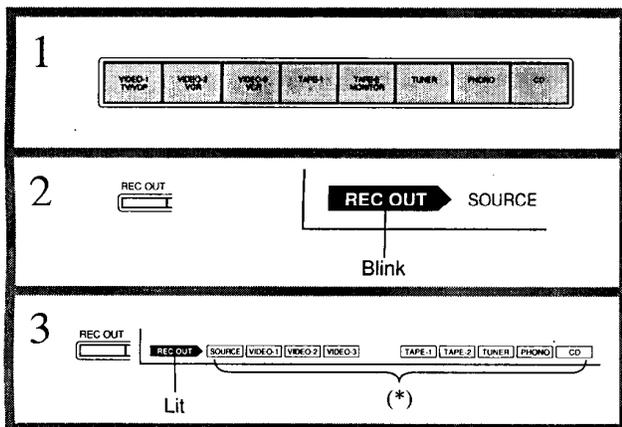

Recording and dubbing to a tape deck connected to TAPE-2

1. Press the input selector button of the source to be recorded. (other than TAPE-2)
2. Start playing back the device selected in step 1, and start recording on the tape deck connected to TAPE-2.

NOTES:

- When the TAPE-2 MONITOR is off, any source signals can be monitored through the speakers or the headphones (this is normal operation).
- If tape deck 2 is 3-head type however, you can monitor the recording directly of the tape by turning TAPE-2 MIONITOR on. Refer to the tape deck instruction manuals for more details. Set the recording level using the controls on the tape deck used for recording.

Using the graphic equalizer


1. Connect the graphic equalizer to the TAPE-2 jacks on the rear panel.
2. If a second tape deck is used, connect it to the tape jacks on the graphic equalizer.
3. Press the TAPE-2 MONITOR button to turn on the TAPE-2 MONITOR indicator.

Follow the graphic equalizer operation instructions.

To record an equalized signal, use the tape deck (connect to the equalizer) for recording.

Recording to VIDEO-2 and VIDEO-3

- a. Recording the source being played back.
 1. Select the source to be recorded with the input selector buttons.
 2. Press the REC OUT button.
 3. Press the REC OUT button again while the REC OUT indicator is flashing. The SOURCE and the source you have chosen will be displayed in red boxes. (*)
 4. Start the source selected in step 1, and start recording on the VCR connected to VIDEO-2 and/or VIDEO-3.
- b. Recording a source different from the one being played back
 1. Press the REC OUT button.
 2. Press the input selector button of the source to be recorded while the REC OUT indicator is flashing. The chosen source will be displayed in a red box. (*)
 3. Start the source selected in step 2, and start recording on the VCR connected to VIDEO-2 and/or VIDEO-3.

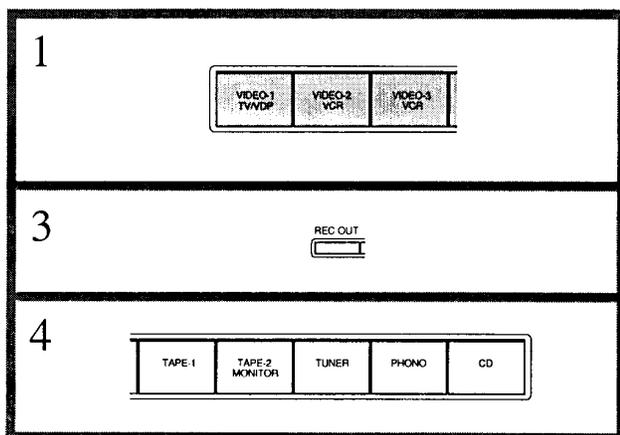

Mixing video and audio for VCR recording

1. Press the Input Selector button to select the VCR (VIDEO-1, 2 or 3) that will be used to play the video.
2. Press the REC/PAUSE button on the VCR (VIDEO-2 or 3) that will be doing the recording.
3. Press the REC OUT button.
4. Press the Input Selector button (CD, PHONO, TUNER, TAPE-1 or TAPE-2) that will provide the audio source.
5. Start operation of the equipment.
The picture will be left as is. Only the audio will be changed. The picture will be recorded from the video source, and the sound from the audio source.

Listening to devices connected to this unit in another room

The A-SV620 allows you to listen to the desired performance in another room (sub room) while listening to the playback of a device located in the main room. To do this, connect the speakers in another room to the Front SPEAKERS REMOTE terminals on the A-SV620.

Remote control from another room can be done by employing the Multiple Room Remote System (MRX). Refer to the connections for Multiple Room Remote Control. Be sure to operate the remote control pointing it at the Remote Sensor.

MR off button (MR OFF) and indicator

Use this button for tape recording or for the Surround sound modes. It is used to disable control of the MRX system via the remote control in another room. Pressing this button will illuminate the indicator, and control from another room will be disabled. Pressing the button again will turn the indicator off, and control from the another room will be enabled.

Using the remote control

You can use the remote control supplied with this Amplifier to operate the source devices selected for the multi-source if they are an ONKYO CD, tuner or cassette deck bearing the **RI** mark.

If you require a second remote control for the sub room, there is a remote control RC-MR 1H for the sub room, which is sold separately. Installation of the Remote Sensor and the Remote Emitter is required to control non-ONKYO devices from another room (sub room). Operate the remote control included with the device by directing the remote control toward the remote sensor installed in the sub room.

If a problem occurs, carry out the same operation on this unit's Front panel controls to verify that the problem is with the remote control.



If there is no problem when operating this unit directly, check the batteries in the remote control first before assuming that there is a controller malfunction.

NOTES:


- If remote control operations are done in another room, the source on the Input Selector may change, or any recording being done on this unit may be interrupted.
Press the MR OFF button to disable control from another room. (The MR OFF indicator will be illuminated.)
- Some non-ONKYO remote controls cannot be used.

Listening to devices connected to this unit in another room

Make sure that recording is not being carried out before performing the following operations.

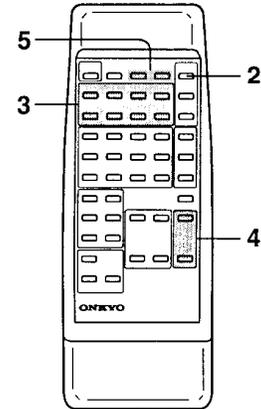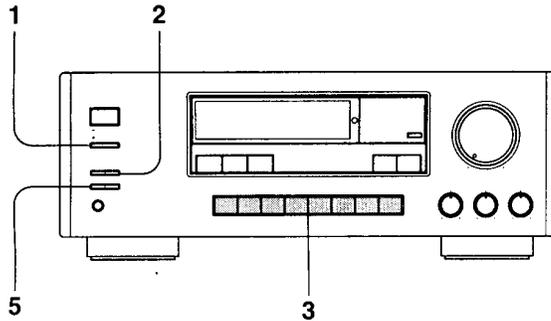

The following steps (except step 1) can be performed using the remote control. It is recommended that the adjustments described below be done in the main room in advance, since it is not possible to operate the remote control in another room while watching the display of the A-SV620.

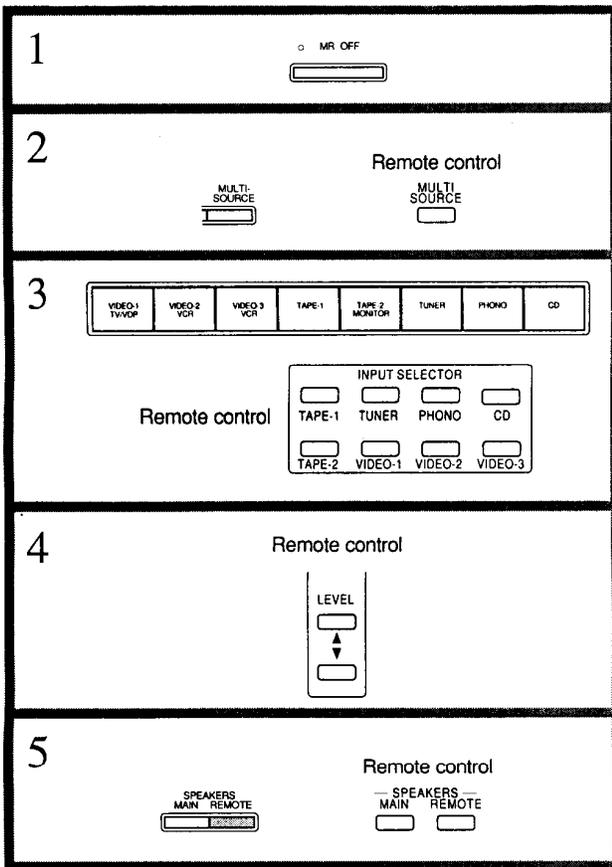

1. Turn the MR OFF button off.
MR OFF indicator is turned off.
2. Press the MULTI SOURCE button.
REC OUT indicator will be turned off and the MULTI SOURCE indicator will flash for 8 seconds.
3. While this is flashing, use the Input Selector button to select the desired source.
When changing the source, be sure to press the MULTI SOURCE button before pressing the Input Selector button. Pressing the Input Selector button without first pressing the MULTI SOURCE button will change the source in the main room.
4. Adjust the level using the MULTI SOURCE LEVEL ▲/▼ buttons on the remote control.
MULTI and the level will be indicated on the display for three seconds, the indication for the sub room output level ranges from the minimum of ($-\infty$ dB), -78, -77, ... -1, to the maximum of (0 dB). It is recommended that the level be set lower in advance in the main room (to about -66 dB).
5. Press the SPEAKERS REMOTE button to illuminate the REMOTE indicator.
Press the MAIN button to turn off the MAIN indicator if you are not listening to the sound in the main room.

NOTES:

- The Surround mode becomes Bypass when the multi-source is used.
- The source indicated by the Input Selector will be output from the TAPE-1 and 2 REC OUT, and VIDEO-2 and 3 OUT terminals.
- Pressing the REC OUT button will turn off the Remote speakers.
- If the multi source is selected, MR OFF will automatically be deactivated.
- If the multi source is selected for REC OUT, or the SURROUND MODE button is pressed, MR OFF will automatically be activated.

Trouble shooting guide

NOTE:

If a problem occurs while you are using the remote control, first operate the unit using the front panel controls to confirm that it is not due to a malfunction (or worn out batteries) of the remote control.

Trouble	Cause	Remedy
No power.	<ul style="list-style-type: none"> Power cord is disconnected. There is external noise in the computer circuits of the A-SV620. AC fuse blown. 	<ul style="list-style-type: none"> Connect power cord. Turn the power button off and then on again or remove the AC plug from the outlet and then plug it again. Contact your ONKYO service center.
Power but no sound.	<ul style="list-style-type: none"> Tape-2 monitor switch on. Audio muting switch on. Bad connections. Amplifier protection circuitry has been activated. ('PROTECT' will be displayed.) 	<ul style="list-style-type: none"> Switch to off. Switch to off by remote control transmitter Check connections, speaker leads, etc. Contact your ONKYO service center.
Hum, low-frequency noise.	<ul style="list-style-type: none"> Poor or no input ground. Poor or no phono motor ground. The placement of the audio connection cable on the rear panel is not correct. 	<ul style="list-style-type: none"> Check outer conductor of input plugs. Check for proper ground connection. Adjust the placement of the cables to reduce hum.
Howling when the volume is turned up.	<ul style="list-style-type: none"> Turntable and speakers are too close together. 	<ul style="list-style-type: none"> Move them farther apart.
Rough or scratchy sound. High range is not clear.	<ul style="list-style-type: none"> Stylus of pick-up is worn. Stylus tip is dirty. Treble control too high. 	<ul style="list-style-type: none"> Replace. Clean. Turn treble control down.
The multiple room remote system does not operate.	<ul style="list-style-type: none"> Connection is wrong. The MR OFF button on the A-SV620 is engaged. (The MR OFF indicator will light.) 	<ul style="list-style-type: none"> Check the connection again. Press the MR OFF button. (The MR OFF indicator will be turned OFF.)
Front panel controls function but remote control transmitter does not.	<ul style="list-style-type: none"> No batteries in remote control transmitter. Batteries have worn out. 	<ul style="list-style-type: none"> Insert batteries. Replace batteries.

Also refer to the respective instruction manuals of the video disc player, video cassette recorder, TV monitor, etc., being used.

Specifications

AMPLIFIER SECTION

Power Output:

Stereo mode

Front L/R channels

120 watts per channel min. RMS. at 8 ohms, both channels driven, from 20 Hz to 20,000 Hz, with no more than 0.08% total harmonic distortion.

Continuous power output:

2 x 140 watts at 8 ohms (DIN)

Surround mode and Multi source mode

Front L/R and center channels

75 W + 75 W + 75 W (1 kHz 0.08% 8 ohms)

Rear channels (Rear only driven)

25 W + 25 W (1 kHz 0.8% 8 ohms)

Remote channels

75 W + 75 W (1 kHz 0.1% 8 ohms)

IM Distortion:

0.08% at rated power (FRONT)

Damping Factor:

60 at 8 ohms (FRONT)

Input sensitivities and impedance:

Phono: 2.5 mV/50 kohms
 CD/Tuner/Tape play/Video in: 150 mV/50 kohms

Output level and impedance:

Tape rec/Video out: 150 mV/2.2 kohms
 Pre out (SUBWOOFER): 1 V/2.2 kohms

Phono Overload: 120 mV RMS. at 1,000 Hz, 0.5% THD.
 Frequency Response: 20 to 30,000 Hz, +/-1 dB
 RIAA Deviation: 20 to 20,000 Hz, +/-0.8 dB
 Tone Control:
 BASS: +/-10 dB at 100 Hz
 TREBLE: +/-10 dB at 10,000 Hz
 Signal to Noise Ratio: PHONO: 80 dB (IHF A, 5 mV input)
 CD/TAPE: 100 dB (IHF A)
 Muting: -∞ dB

VIDEO SECTION

Signal sensitivity and impedance:

Input, output: 1 Vp-p, 75 ohms

GENERAL

Power Supply:

USA & Canadian models
 AC120 V, 60 Hz
 European models
 AC230 V, 50 Hz
 Worldwide models
 120 and 220 V switchable, 50/60 Hz
 Dimensions (W x H x D): 455 x 170 x 389 mm
 17-15/16" x 6-11/16" x 15-5/16"
 Mass: 12.1 kg (26.7 lbs)

Specifications and features are subject to change without notice.

This device employs a microcomputer to perform various functions and operations. If interference generated by an external power supply, radio waves, or other electrical source results in an accident which causes the specified operations and functions to operate abnormally. To perform a reset, please follow the procedure below.

1. Press and hold down the VIDEO-1 button, then press the POWER button.
2. After "clear" is displayed, the preset memory and each mode stored in the memory, such as surround, are initialized and will return to the factory settings.

ONKYO CORPORATION

ONKYO CORPORATION

Sales & Product Planning Div.: 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572, JAPAN
Tel: 0720-31-8111 Fax: 0720-33-5222

ONKYO U.S.A CORPORATION

200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
Tel: 201-825-7950 Fax: 201-825-8150

ONKYO DEUTSCHLAND GMBH ELECTRONICS

Industriestrasse 18-20, 82110 Germering, GERMANY
Tel: 089 84 93 20 Fax: 089 84 93 226

ONKYO FRANCE

Immeuble Le Diamant, Domaine Technologique de Saclay, 4 Rue René Razel,
91892 SACLAY, FRANCE Tel: (1) 69 33 14 00 Fax: (1) 69 41 35 84