

Service  
Service  
**Service**



# Service Manual



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Contents	Page
1 Technical Specification and Connection Facilities .....	1-1 to 1-10
2 Laser Beam Safety Precautions.....	2-1
3 Important Safety Precautions .....	3-1 to 3-2
4 Safety Check After Servicing .....	4-1
5 Safety Information General Notes & Lead Free Requirements .....	5-1
6 Standard Notes For Servicing,Lead Free Requirements & Handling Flat Pack IC .....	6-1 to 6-4
7 Direction of Use .....	7-1 to 7-2
8 Cabinet Disassembly Instructions .....	8-1 to 8-2
9 Troubleshooting .....	9-1 to 9-2
10 Block Diagram .....	10-1
11 Wiring Diagram .....	11-1
12 AMP Board	
Circuit Diagram .....	12-1 to 12-2
Layout Diagram .....	12-3
13 Display Board	
Circuit Diagram .....	12-4
Layout Diagram .....	12-5
14 Power Board	
Circuit Diagram .....	12-6
Layout Diagram.....	12-7

Contents	Page
14 Decoder Board	
Circuit Diagram .....	12-8 to 12-13
Layout Diagram .....	12-14
15 Exploded View.....	13-1
16 Revision List .....	14-1

©Copyright 2012 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Feature Different	/51	/98
RDS		
Voltage Selector		
ECO Standby	✓	✓
DTS		





## 2. General Information and Requirement

### 2.1 Product Family Features

#### 2.1.1 Identity and Key Features

MCD1065 series are Micro DVD Audio System, DVD/CD/MP3 play, USB, Tuner FM(20presets),

Elements to include as generic requirements:

1. Detachable mains cord
2. Safety certification (cUL/FCC and CB/EMC/CE)

Following is a list of key features:

1. DVD disc player (MTK\_MT1389J)
2. USB true source
  - a) MSC/MTP device
  - b) USB High Speed
3. MP3 Link (via headphones jack from PC or MP3 player)
4. Headphone Out (in front of the set)
5. Tuner FM(Silicon Lab SI4705/w RDS)
6. Digital Amplifier
7. Rated output power @10%THD table 2

Set Type Number	Stroke Versions	Power(ROP)	Power(Volume Max)	Remark
MCD1065	All version	2x5W	2x12W	

#### 2.1.2 Styling, Forms and Functions

MCD20100/DCD2030 appearances are defined in their respective MUS. MUS is the leading document where product appearance is applicable..

Features	Products	MCD1065	
	Stroke versions	All	
	Design	Refer to MUS[3] for details	
Front	Optical Drive Loading	Tray	
	Tray Location	Middle	
	Tray Orientation	HORIZONTAL	
	LCD	UP	
Dimension	Height of feet	3mm	
	Apparatus tray closed W x D x H (mm)	140x143X210mm	
Weight	Main set	3.9kg	
	speaker	1.2kg	
Cosmetics	Color	Black	
	Buttons	Black	

#### 2.1.3 External I/O Connections

## Technical Specification and Connection Facilities

Model	MCD1065	
Stroke Version	All	
iPod dock with Authentication chip	NA	
USB	√	
MP3 Link (3.5mm audio jack)	√	
Composite CVBS (Yellow)	√	
Component Y Pb Pr	√	
Aux In (RCA cinch)	√	
Aux Out (RCA cinch)	√	
Tuner Socket (for FM)	√	
Headphone Out (3.5mm audio jack)	√	

### 2.1.4 Controls, Local Display and LED Indications(tbc)

Control keys on the set are:

1. Standby-On
2. Eject
3. Play/Pause
4. Next
5. Pre
6. FF
7. FB
8. Source (Disc, USB, Dock, FM, Aux, MP3)
9. Stop
10. Volume Knob

There is local display LCD(reuse DCD322 LCD).

### 2.1.5 . ACCESSORIES (tbc)

Model	MCD1065
Stroke Version	All Version
Region	
Power Cord	1.8M
Audio cable (3.5mm audio)	0.5M
AV cable(Video out only)	1.5M
Remote Control	40keys
Battery	AAAx2

## Technical Specification and Connection Facilities

Quickly guide	1
IFU	1

### 2.2 Mechanical General Information

The product appearances and functions are defined in their respective MUS. Product management approves the MUS and it is a leading document where product appearance is applicable.

Please refer to Sh560 for mechanical information.

### 2.3 Safety Standards

Where applicable:

For /12 (EU), /05 (UK), /51 (Russia)	EN/IEC 60065 7 <sup>th</sup> Edition
For /37 (US, Canada)	UL 60065
For /55 (LATAM), /78 (Brazil)	IEC 60065 7 <sup>th</sup> Edition
For /98 (AP), /69 (Singapore), /75 (Australia)	IEC 60065 7 <sup>th</sup> Edition
For /93 (China)	GB 8898 (IEC 60065 7 <sup>th</sup> Edition)
For /61 (Korea)	K 60065 6 <sup>th</sup> Edition
For /96 (Taiwan)	CNS 14408 (IEC 60065 7 <sup>th</sup> Edition)

### 2.4 EMC Requirements

Where applicable:

For /12 (EU), /05 (UK), /51 (Russia)	EN55013: 2001, EN55020: 2002
For /37 (US, Canada)	FCC15
For /55 (LATAM), /78 (Brazil)	CISPR13
For /98 (AP), /69 (Singapore), /75 (Australia)	CISPR13
For /61 (Korea)	CISPR13/20
For /93 (China)	GB 13837 (CISPR13)
For /96 (Taiwan)	CNS 13439 (CISPR13)

### 2.5 ESD Requirements

The product shall withstand electro static discharges on all user accessible parts of the product.  
Reference: IEC61000-4-2.

For contact discharges:

Level	General (kV)	USA (kV)	Requirement
1	0-2	0-3	No deviations allowed.
2	>2-4	>3-4	Short perceptible deviations allowed
3	-	>7-8	No loss of stored data allowed.

## Technical Specification and Connection Facilities

For air discharge:

Level	General (kV)	USA (kV)	Requirement
1	0-4	0-6	No deviations allowed.
2	>4-8	>6-8	Short perceptible deviations allowed.
3	-	>15-18	No loss of stored data allowed.

General requirement:

1. 10 arcs for positive and negative polarity for unit "on" and "off" for 1kV incremental steps.
2. Component or mechanical damage is not allowed. No loss of fixed stored data (stored in EEPROMs).
3. Hang-ups and malfunctions are allowed, as long as the customer can "recover" from the hang-up by pressing the Standby or ON/OFF button of the set.
4. Failures that disappear only by unplugging the AC mains cord and/or power sources are not acceptable.

### 2.6 Environmental Condition

The environmental condition requirements and test method is according to UAN-D1590.

Ambient temperature : max. 40 ° C - all climates  
Apparatus acc. to spec. : +5 to + 35 ° C

Vibration test (acc. IEC 60 068/2/6) : operational vibration test to be proceeded in operating position of the set.

### 2.7 Quality

PQR-class: class 2 according to BLC A&MA PQR handbook V2.1 (2006-10-02)

Lifetime: 7 years

Tested According to: General Test Instruction UAN-D 1591  
Measured According to: UAN\_L 1059 unless otherwise stated

### 3. Technical Specifications

#### 3.1 Power Supply

##### 3.1.1 Type and versions

Build-inSMPS will be used for all models and stroke versions.

All using figure built in power cord:

Versions	Region/Country	SMPS	Detachable mains cords
12 / 05	EUROPE / UK	1) 100 ~240Vac nom. (wide range from 90V~264Vac limit) used in all versions except India. Frequency: 47~63Hz.	EU (/12) round 2-pin & UK (/05) 3-pin
37	NAFTA		UL flat pin (non-polarized)
55	LATAM		INMETRO certified round 2-pin
98	APAC		EU round 2-pin
94	India	2) 100 ~310Vac limit (India compatible with up cost) used only for India. Frequency: 47~63Hz.	EU (/12) round 2-pin

All requirements per defined for each country should be met with sufficient testing.

##### 3.1.2 Surge Immunity (Lightning Test)

The product shall withstand mains interference's of:

###### Differential mode:

- 2kV/2 ohm criteria C for Europe.
  - 6kV/12 ohm criteria C for NAFTA.
- Parameters:
- Bi-wave
  - Open circuit voltage: 2/50us
  - Short circuit current: 8/20us
  - From +/-1kV to +/-2kV (for Europe) or +/-6kV (for Nafta) in steps of 1kV.
  - 10 shots per combination.
  - One shot per minute.
  - Serial impedance: 2 Ohm for Europe, 12Ohm for Nafta.
  - Polarity and phase: Positive (phase 90°) & Negative (phase 270°)

# Technical Specification and Connection Facilities

## Common mode:

- 6kV/2 ohm criteria C for Europe.
- 6kV/12 ohm criteria C for Nafta.

### Parameters:

- Ring-wave (100kHz)
- From +/3kV to +/-6kV in steps of 1 kV.
- 10 shots per combination.
- One shot per minute.
- Serial impedance: 2 Ohm for Europe, 12Ohm for Nafta
- Polarity and phase: Positive (phase 90°) & Negative (phase 270°)

Reference: IEC61000-4-5 and for USA: 3135 019 8029 Reliability evaluation.

## Requirements:

- Apparatus should fulfil the leakage current requirements of IEC60065 point 9.1.1 (UAN-D1631)
- Defects or permanent deviations are not allowed.

### **3.1.3 Mains Drop-out Immunity**

The product shall withstand mains failures of:

- Variation 0% (=100% dip) at T-event = 50 mSec. Performance criterion B
- Variation 40% (=60% dip) at T-event = 100 mSec. Performance criterion B
- Variation 0% (=100% dip) at T-event = 5 Sec. Performance criterion C

Additional for USA apparatus: See 3135 019 8029 Reliability evaluation.

- Variation 0% (=100% dip) at T-event = 100 mSec in standby mode. Performance criterion B

## Requirement:

No misoperation and no interference of user in order to guarantee continuation of performed function.

Reference: IEC61000-4-11 For measuring method refer to UAN-D1724, as far as applicable.

Performance criterions according to IEC61000-4-4 Amendment 1

Performance Requirement

Criterion A - No any degradation of specification.

Criterion B - Temporary degradation / self recoverable.

Criterion C - No damage, resolvable hang-up.

Criterion D - Not recoverable loss of function.

### **3.1.4 Power Consumption**

Power consumption at nominal AC input:

1. CD play mode at 1/8 P-rated output power  
MCD1065:  $\leq \frac{20}{\quad} \text{ W}$
2. Low Power Standby Mode:  $\leq \frac{0.5}{\quad} \text{ W}$

## Technical Specification and Connection Facilities

### 3.2 Technical Description

#### 3.2.1 Audio Performance

General Part				
Output Stage Protection:	NA	Temperature :	Yes	Short Circuit: Yes
Indicators				
Standby Mode Indicator:	Clock Display Active			
Power Standby Mode:	LED Turns Off			
Electrical Data				
			Normal	Limit
DSC:	Y	Channel Difference:	± 3dB	-
DBB:	Y	Hum (Vol <sub>min</sub> --- Vol <sub>max</sub> -20dB)	150nW	-
Bass:	NA	Residual Noise(Volume Minimum)	40nW	-
Treble:	NA	Channel Separation: 1kHz/10kHz	40dB/35dB	
Loudness:	NA	THD,Maximal	0.8%	1.0%
		Signal to Noise Ratio(A-weighted):	82dBA	77dBA
		Crosstalk:	60dB	55dB
		Amplification Reserve	3dB	2dB
Audio Inputs				
Audio Input Sensitivity(± 3dB) rated output power at 1kHz			Audio Output(*1)	
Tuner	FM 67.5kHz, Modulation (Limit:-6dB)		Line Out(Left/Right)	1000mV±200mV
CD/MP3	-3dB track (Audio Disc 1, Track 1)		Headphone	15mW ± 2 dB, RL = 32Ω
USB	-3dB 1KHz sinewave( 2.0ΩS)			
AUX1(back)	1V; Rin ≥ 22kΩ			
MP3_link(front)	500mV-1000mV; Rin ≥ 22kΩ			
IPOD Docking	750mV; Rin ≥ 22kΩ			
Output Power(*1)	At THD=10%, 1kHz sinewave	MCD1065(ROP)	MCD1065(Max Power,30%)(*2)	
Main Operation for / all version (rms)		5W± 1dB	2x12W -1dB	( At Cold Condition with 10% THD )
Tuner output power(rms)		5W± 1dB		( At Cold Condition with 10% THD )
Frequency Response(± 3dB)		60Hz-20kHz		
Loudspeaker(Boxes): Separable speaker box	Refer to package document of Speaker Box Assy			
Speaker driver Impedance:	Right/Left:	4Ω @ 40 Hz ~ 20kHz(-3db)		
	Subwoofer:			

#### REMARKS:

Electrical Parameters are to be measured at Speaker Terminals across rated impedance Load(6ohm) with Rated Input Signal in CD Mode setting in DBB/Loudness Off and Pre-eq at Flat unless specified otherwise.

(\*2)--- measure max volume power with 1V MP3-link input

## Technical Specification and Connection Facilities

### 3.2.2 Video Performance

#### 3.2.2.1 CVBS

Description	Test Signal	Specification	
		NTSC	PAL
Amplitude output	100% White	1Vpp ± 10%	1Vpp ± 10%
White bar	100% White	714mV ± 10%	700mV ± 10%
Sync. Amplitude	100% White	286mV ± 10%	300mV ± 10%
Burst Amplitude	75% Color bar	286mV, +1dB / -4dB	300mV, +1dB / -4dB
Burst / chroma ratio	100% Color bar	± 5%	± 5%
S/N luminance	100% White	≥60 dB	≥60 dB
S/N chroma	100% Red	AM	≥57 dB
		PM	≥57 dB
Video Bandwidth	Multi-burst	0.5MHz – 4MHz	+1dB/-1dB
		4.8MHz	-2dB
		5.8MHz	-5dB
Chroma Subcarrier Frequency	75% Color bar	3.579545 MHz ± 25ppm	4.433618MHz± 30ppm
Chroma / luminance delay	2T pulse	≤20ns	≤20ns
Subcarrier locked/unlocked	75% Color bar	locked	locked
DC Level	0% Black	≤1V	≤1V

#### 3.2.2.2 Component Video (Y/Pb/Pr)

Description	Test Signal	Specification	
		Interlace/Progressive	
		NTSC	PAL
Amplitude output	100% White	1000mV ± 10%	1000mV ± 10%
White bar	100% White	714mV ± 10%	700mV ± 10%
PbPr peak to peak	75% Color bar	525mV ± 10%	535mV ± 10%
PbPr Output unbalance	75% Color bar	≤3%	≤3%
Sync. Amplitude	100% White	286mV ± 40mV	300mV ± 10%
S/N on outputs	100% White 75% Color bar	Y	≥60 dB
		Pb / Pr	≥60 dB
Video Bandwidth	Multi-burst	4.2MHz	-1.5dB
		5.8MHz	-5dB
Video Bandwidth (Progressive)	Multi-burst	8.4MHz	-1.5dB
		9.6MHz	-5dB
DC Level	0% Black	≤1V	≤1V


## Technical Specification and Connection Facilities

### 3.3 TUNER

FM use Silicon Lab Si4704/4705(w/RDS)						
GENERAL PART						
WAVE RANGE	VERSION	TOLERANCE	TUNING GRID			
FM 87.5 – 108.00 MHz	/12	QUARTZ PRECISION	50kHz			
AERIAL						
FM : PIG TAIL ANT WIRE 75Ω						
ELECTRICAL DATA						
			FM	Nom	Limit	Unit
			- 3 dB Limiting Point	20	26	dBf
			Search Tuning Sensitivity(at stereo mode)	35	41	
			Search time digital tuning system.	-	60	S
			IF	10.7		MHz
			Stereo - 46 dB Quieting	48	51	dB
			Modulation Hum	50	45	
			S/N Ratio	50	45	
			Amplification Reverse	0	-4	dB
			Distortion ( RF 1mV, Frq Dev.75 kHz )	2	3	%
			Overall Frequency Response: 63Hz – 12.5KHz	-	±3	dB
			Channel separation:400 / 1000 / 5000 Hz. RF input: 68 dBf	26/30/20	20/26/18	dB
Frequency (MHz)		Noise Limited Sensitivity 26 dB	Image Rejection	IF Rejection	Large Signal Handling	Selectivity S9/300 kHz
FM	Nom.	18	30	64	116 dBf	22
88.0	Lim.	22	25	45	108 dBf	18 (*1)
FM	Nom.	18	30	64	116 dBf	22
98.0	Lim.	22	25	45	108 dBf	18 (*1)
FM	Nom.	18	30	60	116 dBf	45
107.0	Lim.	22	25	65	108 dBf	25
	Units	dBf	DB	dB	mV/m	dB
Susceptibility to unwanted signals(CPU,SMPS,AMP,DSP ...):			Limited(dB)	Normal (dB)	Remark	
			-15dB	-20dB	Refer to selfpollution curve	

## Laser Beam Safety Precautions


This Blu-Ray player uses a pickup that emits a laser beam.

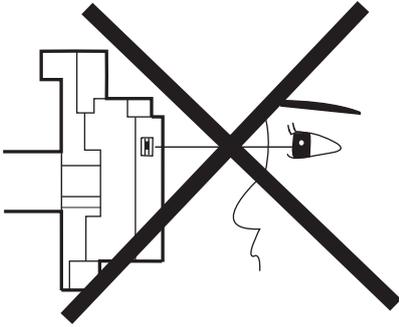

Do not look directly at the laser beam coming from the pickup or allow it to strike against your skin.

The laser beam is emitted from the location shown in the figure. When checking the laser diode, be sure to keep your eyes at least 30 cm away from the pickup lens when the diode is turned on. Do not look directly at the laser beam.

**CAUTION:** Use of controls and adjustments, or doing procedures other than those specified herein, may result in hazardous radiation exposure.

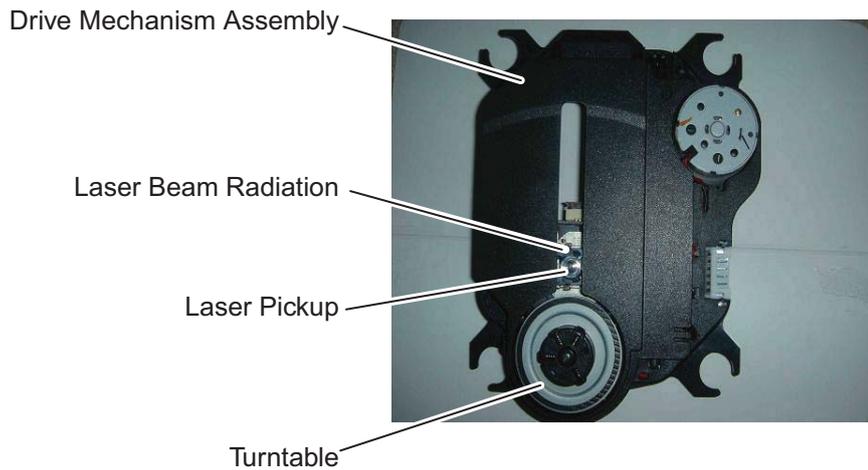

CAUTION-CLASS 2M LASER  
RADIATION WHEN OPEN  
DO NOT STARE INTO THE BEAM  
OR VIEW DIRECTLY WITH  
OPTICAL INSTRUMENTS



Location: Inside Top of Blu-Ray mechanism.

## Important Safety Precautions

**Caution:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

---

### Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.

- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

---

### Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

## Important Safety Precautions

---

### Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts, and wires have been returned to their original positions. Afterwards, do the following tests and confirm the specified values to verify compliance with safety standards.

### 1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1: Ratings for selected area

AC Line Voltage	Clearance Distance (d), (d')
110V~220V	≥ 3.2 mm (0.126 inches)

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

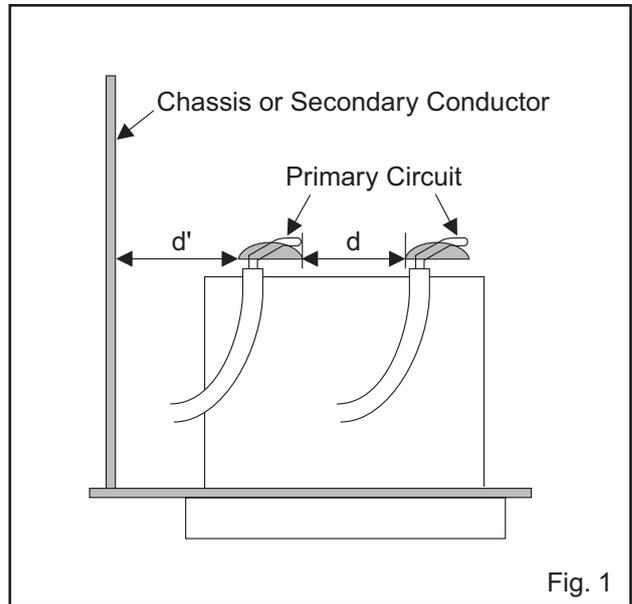


Fig. 1

### 2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

Measuring Method (Power ON):

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across the terminals of load Z. See Fig. 2 and the following table.

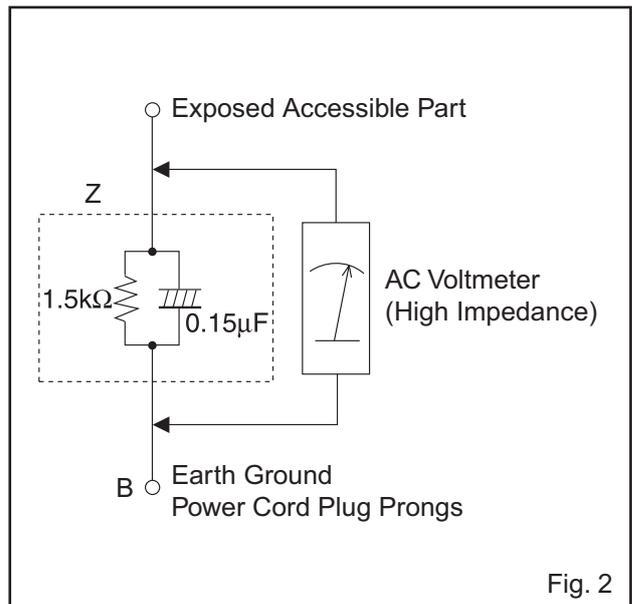


Fig. 2

Table 2: Leakage current ratings for selected areas

AC Line Voltage	Load Z	Leakage Current (i)	Earth Ground (B) to:
110V~220V	0.15 μF CAP. & 1.5 kΩ RES. Connected in parallel	$i \leq 0.5 \text{ mA Peak}$	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

# Safety Information, General Notes & Lead Free Requirements

## 1 Safety Instructions

### 1.1 General Safety

- Safety regulations require that during a repair:
- Connect the unit to the mains via an isolation transformer.
  - Replace safety components, indicated by the symbol  , only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.

Safety regulations require that after a repair, you must return the unit in its original condition. Pay, in particular, attention to the following points:

- Route the wires/cables correctly, and fix them with the mounted cable clamps.
- Check the insulation of the mains lead for external damage.
- Check the electrical DC resistance between the mains plug and the secondary side:
  1. Unplug the mains cord, and connect a wire between the two pins of the mains plug.
  2. Set the mains switch to the 'on' position (keep the mains cord unplugged!).
  3. Measure the resistance value between the mains plug and the front panel, controls, and chassis bottom.
  4. Repair or correct unit when the resistance measurement is less than 1 MΩ.
  5. Verify this, before you return the unit to the customer/user (ref. UL-standard no. 1492).
  6. Switch the unit 'off', and remove the wire between the two pins of the mains plug.

### 1.2 Laser Safety

This unit employs a laser. Only qualified service personnel may remove the cover, or attempt to service this device (due to possible eye injury).

#### Laser Device Unit

Type	: AlGaInN(BD) : AlGaInP(DVD) : AlGaInP(CD)
Wavelength	: 650 nm (DVD) : 780 nm (VCD/CD) : 405nm(BD)
Output Power	: 20 mW (DVD+RW writing) : 0.8 mW (DVD reading) : 0.3 mW (VCD/CD reading)
Beam divergence	: 60 degree



Figure 2-1

Note: Use of controls or adjustments or performance of procedure other than those specified herein, may result in hazardous radiation exposure. Avoid direct exposure to beam.

## 2 Warnings

### 2.1 General

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD, ). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are at the same potential as the mass of the set by a wristband with resistance. Keep components and tools at this same potential. Available ESD protection equipment:
  - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and earth cable) 4822 310 10671.
  - Wristband tester 4822 344 13999.
- Be careful during measurements in the live voltage section. The primary side of the power supply, including the heatsink, carries live mains voltage when you connect the player to the mains (even when the player is 'off!'). It is possible to touch copper tracks and/or components in this unshielded primary area, when you service the player. Service personnel must take precautions to prevent touching this area or components in this area. A 'lightning stroke' and a stripe-marked printing on the printed wiring board, indicate the primary side of the power supply.
- Never replace modules, or components, while the unit is 'on'.

### 2.2 Laser


- The use of optical instruments with this product, will increase eye hazard.
- Only qualified service personnel may remove the cover or attempt to service this device, due to possible eye injury.
- Repair handling should take place as much as possible with a disc loaded inside the player.
- Text below is placed inside the unit, on the laser cover shield:

CAUTION VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM  
 ADVARSEL SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING UNDGÅ UDSÆTTELSE FOR STRÅLING  
 ADVARSEL SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES UNNGÅ EKSPONERING FOR STRÅLEN  
 VARNING SYNLIG OCH OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÅR ÖPPNAD BETRÄKTA EJ STRÅLEN  
 VAROJ AVATTAESSA OLET ALTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLE LASER SÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN  
 VORSICHT SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETZEN  
 DANGER VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID DIRECT EXPOSURE TO BEAM  
 ATTENTION RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE EXPOSITION DANGEREUSE AU FAISCEAU


Figure 2-2

## Circuit Board Indications


1. The output pin of the 3 pin Regulator ICs is indicated as shown.

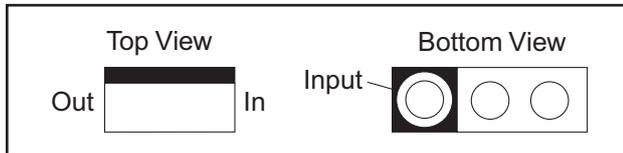

2. For other ICs, pin 1 and every fifth pin are indicated as shown.

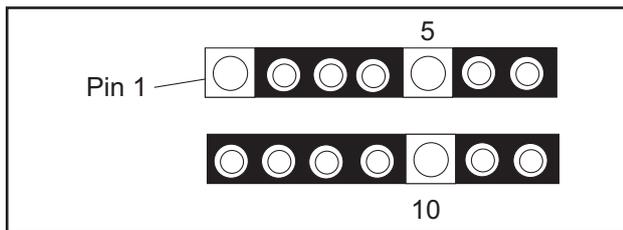


3. The 1st pin of every male connector is indicated as shown.

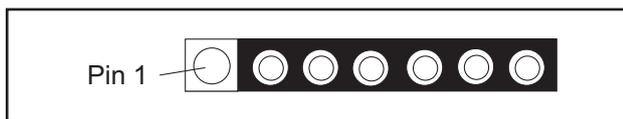

## Instructions for Connectors

1. When you connect or disconnect the FFC (Flexible Foil Connector) cable, be sure to first disconnect the AC cord.
2. FFC (Flexible Foil Connector) cable should be inserted parallel into the connector, not at an angle.

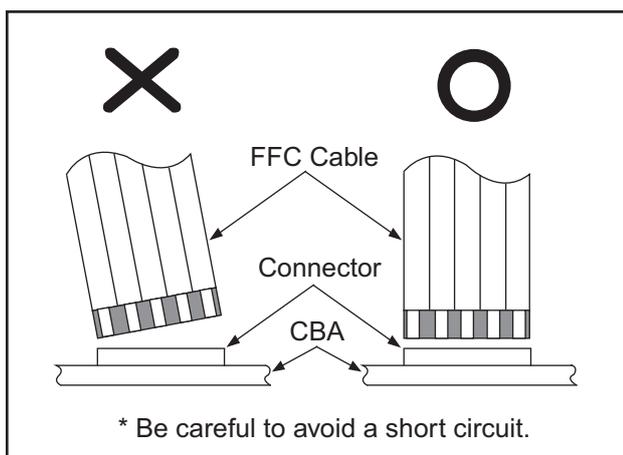

## Pb (Lead) Free Solder

When soldering, be sure to use the Pb free solder.

Information about lead-free soldering

Philips CE is producing lead-free sets from 1.1.2005 onwards.

### IDENTIFICATION

Regardless of special logo (not always indicated)



One must treat all sets from **1 Jan 2005**

onwards, according to the next rule:

Serial Number gives a 14-digit. Digit 5&6 shows the YEAR, and digit 7&8 shows the WEEK.

So from **0501** onwards=from 1 Jan 2005 onwards

*Important note* : In fact also products of year 2004 must be treated in this way as long as you avoid mixing solder-alloys (leaded/ lead-free). So best to always use SAC305 and the higher temperatures belong to this.

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free solder alloy Philips SAC305 with order code 0622 149 00106. If lead-free solder-paste is required, please contact the manufacturer of your solder-equipment. In general use of solder-paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free solder alloy. The solder tool must be able
  - To reach at least a solder-temperature of 400°C,
  - To stabilize the adjusted temperature at the solder-tip
  - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature around **360°C - 380°C** is reached and stabilized at the solder joint. Heating-time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C otherwise wear-out of tips will rise drastically and flux-fluid will be destroyed. To avoid wear-out of tips switch off un-used equipment, or reduce heat.
- Mix of lead-free solder alloy / parts with leaded solder alloy / parts is possible but PHILIPS recommends strongly to avoid mixed solder alloy types (leaded and lead-free).  
If one cannot avoid or does not know whether product is lead-free, clean carefully the solder-joint from old solder alloy and re-solder with new solder alloy (SAC305).
- Use only original spare-parts listed in the Service-Manuals. Not listed standard-material (commodities) has to be purchased at external companies.

## Standard Notes for Servicing, Lead Free Requirements & Handling Flat Pack IC

- Special information for BGA-ICs:

- always use the 12nc-recognizable soldering temperature profile of the specific BGA (for desoldering always use the lead-free temperature profile, in case of doubt)
- lead free BGA-ICs will be delivered in so-called 'dry-packaging' (sealed pack including a silica gel pack) to protect the IC against moisture. After opening, dependent of MSL-level seen on indicator-label in the bag, the BGA-IC possibly still has to be baked dry. (MSL=Moisture Sensitivity Level). This will be communicated via AYS-website. Do not re-use BGAs at all.

- For sets produced before 1.1.2005 (except products of 2004), containing leaded solder-alloy and components, all needed spare-parts will be available till the end of the service-period. For repair of such sets nothing changes.

- On our website [www.atyourservice.ce.Philips.com](http://www.atyourservice.ce.Philips.com) you find more information to:

- BGA-de-/soldering (+ baking instructions)
- Heating-profiles of BGAs and other ICs used in Philips-sets

You will find this and more technical information within the "magazine", chapter "workshop news".

For additional questions please contact your local repair-helpdesk.

## How to Remove / Install Flat Pack-IC

### 1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

1. Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

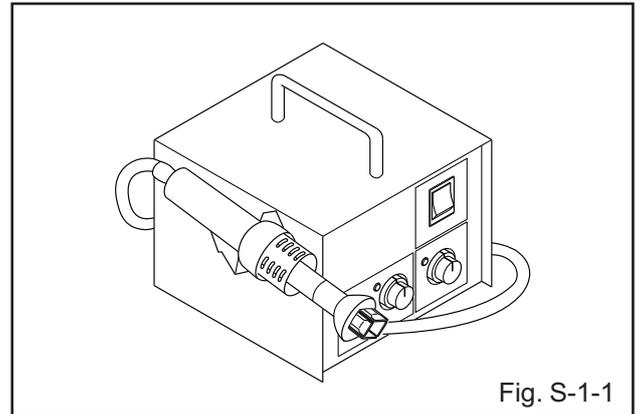


Fig. S-1-1


2. Remove the flat pack-IC with tweezers while applying the hot air.
3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

#### CAUTION:

1. The Flat Pack-IC shape may differ by models. Use an appropriate hot-air flat pack-IC desoldering machine, whose shape matches that of the Flat Pack-IC.
2. Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)


## Standard Notes for Servicing, Lead Free Requirements & Handling Flat Pack IC

- The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.

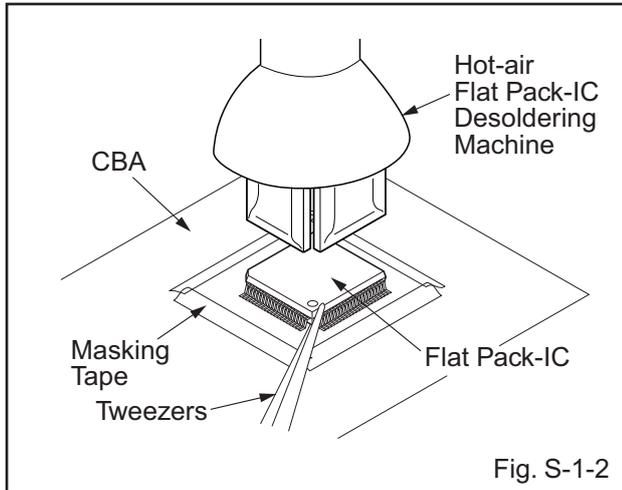


### With Soldering Iron:

- Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

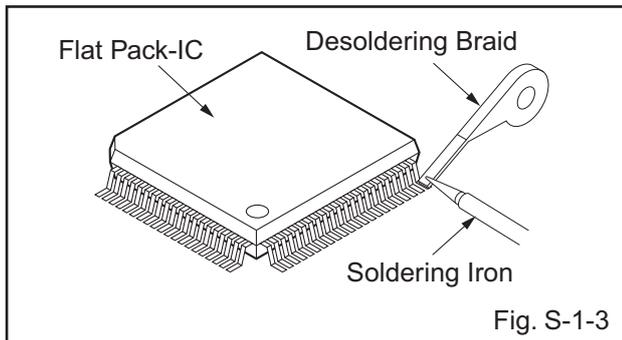

- Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)

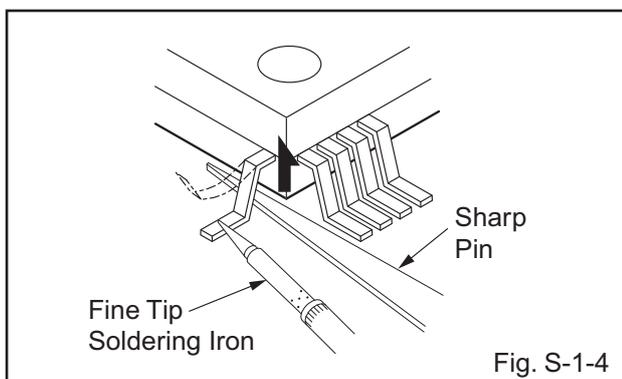



- Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)

- Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

### With Iron Wire:



- Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
- Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
- While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.
- Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
- Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

Note: When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

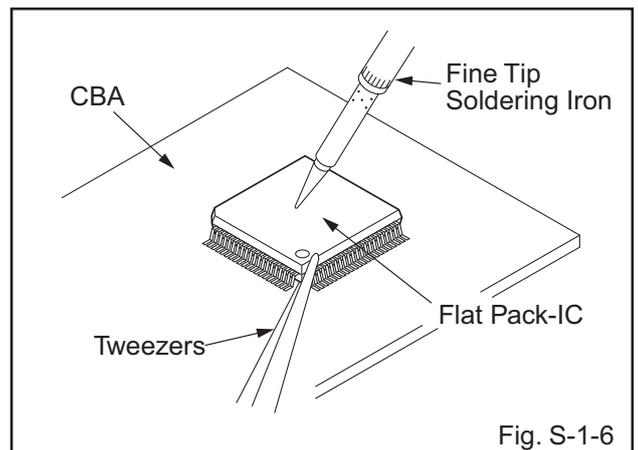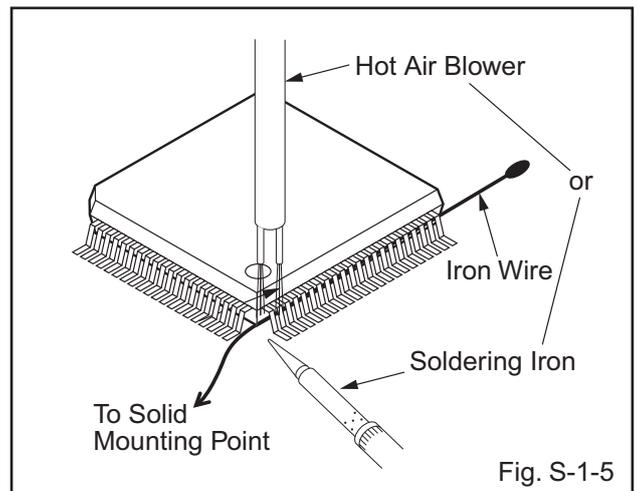

## 2. Installation

1. Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
2. The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the 1 on the PCB when positioning for installation. Then presolder the four corners of the flat pack-IC. (See Fig. S-1-8.)
3. Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

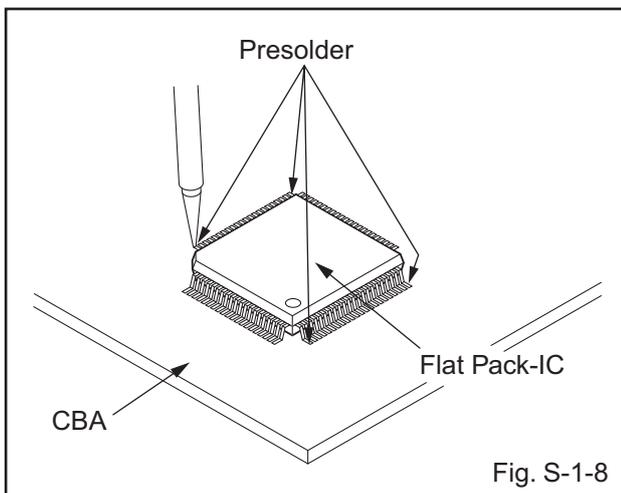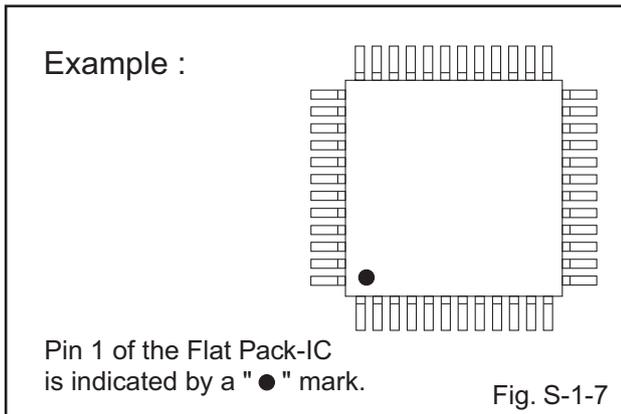

## Instructions for Handling Semi-conductors



Electrostatic breakdown of the semi-conductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

### 1. Ground for Human Body

Be sure to wear a grounding band (1 MΩ) that is properly grounded to remove any static electricity that may be charged on the body.


### 2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1 MΩ) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

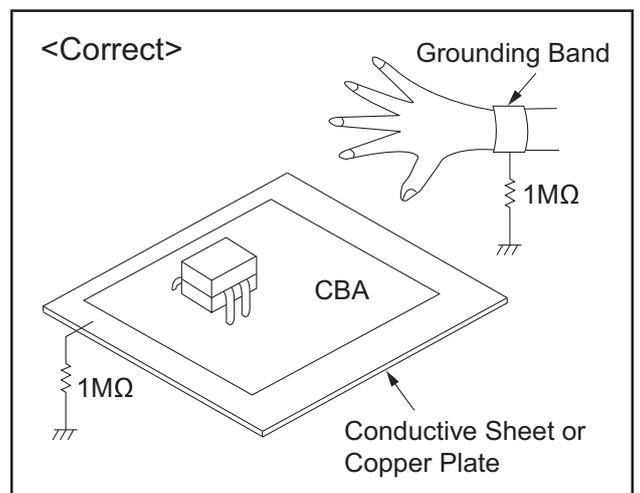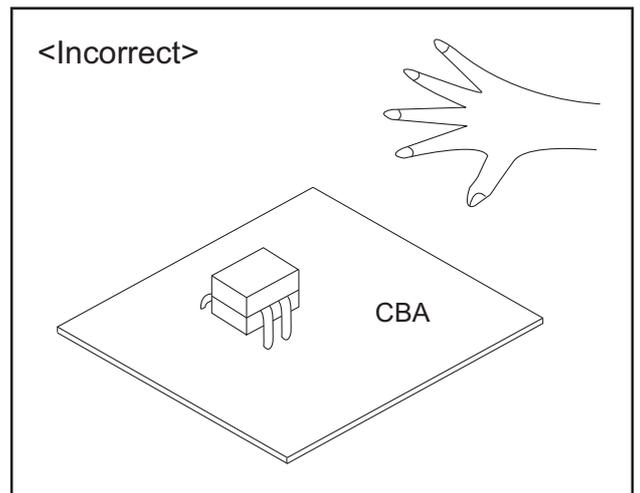


\*The following excerpt of the DFU/QSG serves as an introduction to the set. The Complete Direction for Use can be download in different languages from the internet site of Philips Customer care Center : [www.support.philips.com](http://www.support.philips.com)

## Overview of the main unit

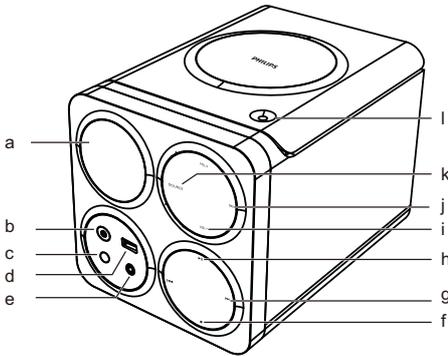

- a Display panel
  - Show current status.
- b
  - Turn on the unit, or switch to standby mode, or switch to Eco Power standby.
- c Remote sensor
- d
  - Connector for a USB device.
- e MP3 LINK
  - Connector (3.5mm) for an external audio device.
- f
  - Stop play or erase a program.
- g
  - Skip to the previous/next track.
  - Search within a track.
  - Tune to a radio station.
- h
  - Start or pause play.
- i VOL +/-
  - Adjust volume.
  - Adjust time.
- j DBB
  - Turn the dynamic bass enhancement on or off.
  - Select a preset sound effect.
- k SOURCE
  - Select a source: Disc, USB, tuner, or MP3 link.
- l
  - Open or close the disc compartment.

## Overview of remote control

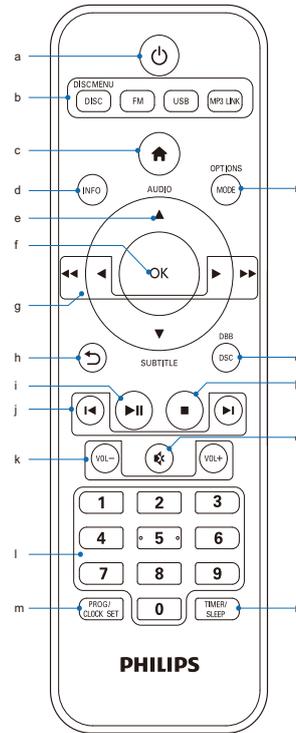

- a
  - Switch the micro system on/off.
  - Switch to standby mode or Eco Power standby.
- b DISC/DISC MENU/FM/USB/MP3 LINK
  - Select the source.
  - Access the main menu of the system.
- c
  - Access the home menu.
- d INFO
  - Show the disk information such as title, chapter, subtitle, time elapsed, total time etc.
- e AUDIO / SUBTITLE
  - For menus: navigate up/down.
  - Invert a picture.
  - AUDIO: Toggle between stereo and mono.
  - SUBTITLE Select a subtitle language for a video.
  - Select a programmed radio station.
- f OK
  - Confirm a selection.


- g **◀▶ / ◀▶▶▶**
- Search in a track or disc.
  - Fast backward or forward.
  - For menus, navigate left/right.
  - Rotate a picture.
  - Select a preset radio station.
- h **↶**
- Return to a previous display menu.
- i **▶▶**
- Start, pause or resume play.
- j **◀ / ▶**
- Skip to the previous/next track, title, or file.
  - Select a programmed radio station.
- k **VOL +/-**
- Adjust the volume.
- l **Numeric buttons**
- Select a title/chapter/track to play.
- m **PROG/CLOCK SET**
- Program radio stations.
  - Set clock.
- n **TIMER/SLEEP**
- Set sleep timer.
  - Set alarm timer.
- o **🔇**
- Mute.
- p **■**
- Stop play.
  - Erase a programed radio station.
  - Activate/deactivate the demonstration mode.
- q **DSC/DBB**
- Select a preset sound setting.
  - Turn on or off dynamic bass enhancement.
- r **MODE/OPTIONS**
- Select repeat play or random play.
  - Accesses options relating to the current activity or selection.

## Connect speakers

### Note

- For optimal sound, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the Specifications section of this manual.

Insert the speaker wires completely into the speaker input sockets on the back of the unit.

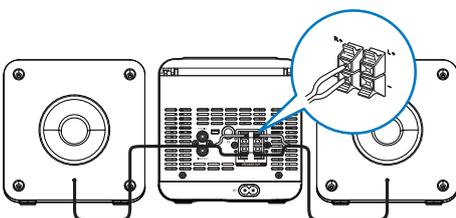


## Connect TV

Connect through composite video

Connect the supplied composite video cable to:

- the VIDEO OUT socket on this unit.
- the video input socket on the TV.

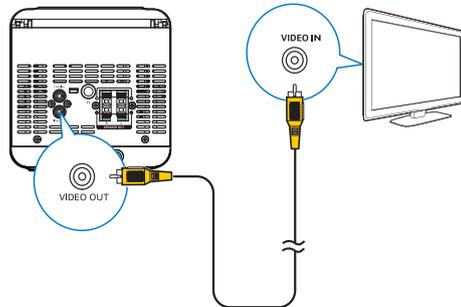


## Connect audio from TV or other devices

Connect audio through a digital coaxial cable

Connect a coaxial cable to:

- COAXIAL jack on this product.
- the COAXIAL/DIGITAL input jack on the TV or other device.

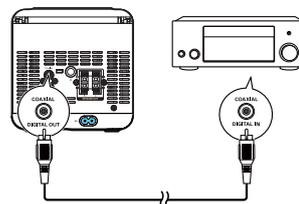

## Connect power


### ! Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the rear of the main unit.
- Before connecting the AC cord, make sure that you have completed all other connections.

### Note

- The type plate is located on the rear of the main unit.


- 1 Connect the power cord to the AC~ jack on the main unit.
- 2 Connect the power plug to the wall outlet.

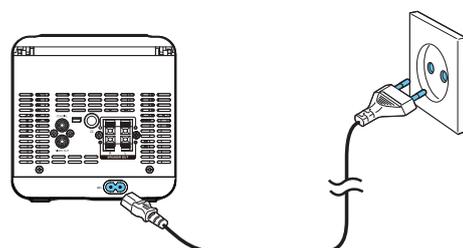

# Cabinet Disassembly Instructions

## 1. Disassembly Flowchart

This flowchart indicates the disassembly steps to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route, and dress the cables as they were originally.

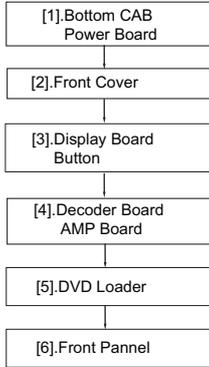

## 2. Disassembly Method

ID/Loc. NO.	Part	Removal		
		Fig.NO.	Remove/Unhook /Unlock/Release/ Unplug/Desolder	Note
[1]	Bottom CAB Power Board	D1	8(A01) D 3 X 10 BA	
[2]	Front Cover	D2		
[3]	Display Board Button	D3	1 0 (A02) D3 X 10 BA	
[4]	Decoder Board AMP Board	D4	8 (A03) D3 X 10 BA	
[5]	DVD Loader	D5	4(A04)D3 X 10 PWA	
[6]	Front Pannel	D6		

Note:

- (1) Identification (location) No. of parts in the figures
- (2) Name of the part
- (3) Figure Number for reference
- (4) Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.

Axx = Screw, CNxx/Jxx/CONxx = Connector  
D3.5X12BA is specification of screw.

\* = Unhook, Unlock, Release, Unplug, or Desolder  
e.g. 7(A01) = seven Screws

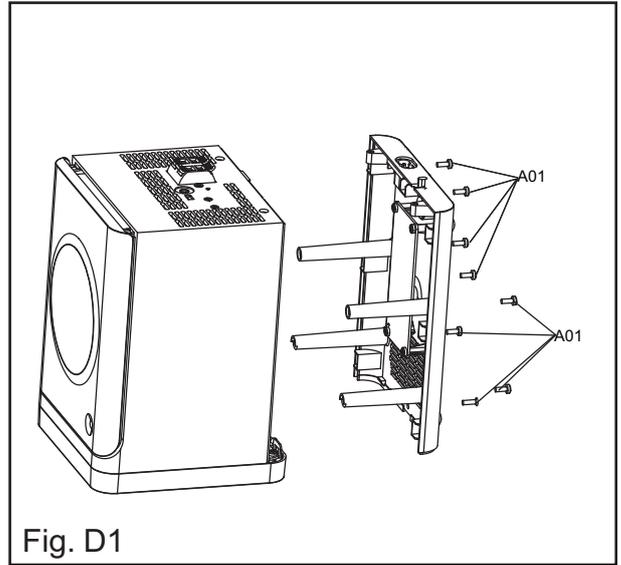


Fig. D1





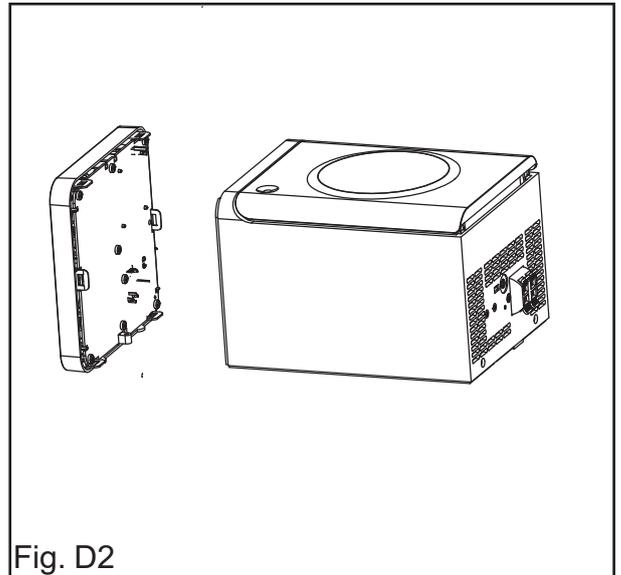



Fig. D2

# Cabinet Disassembly Instructions

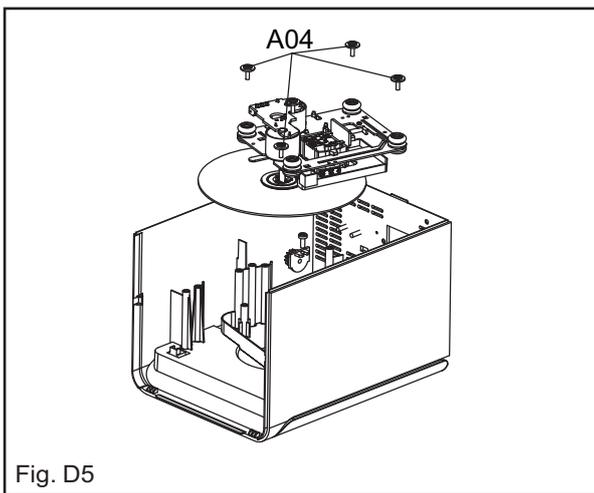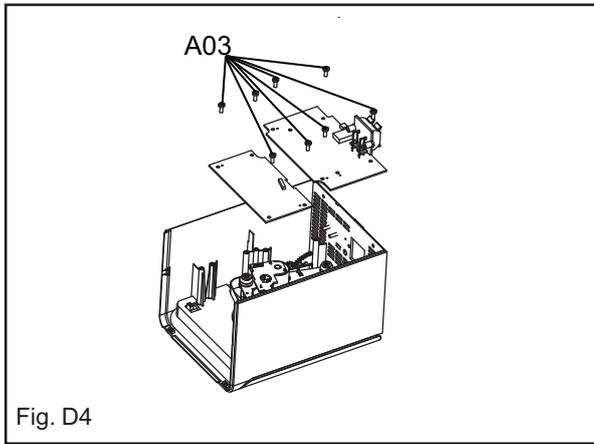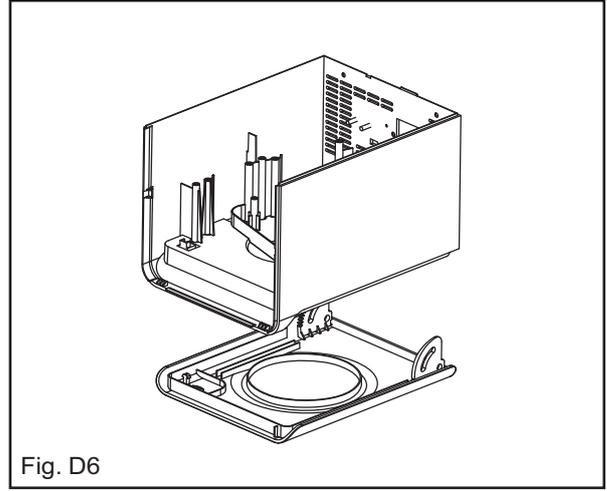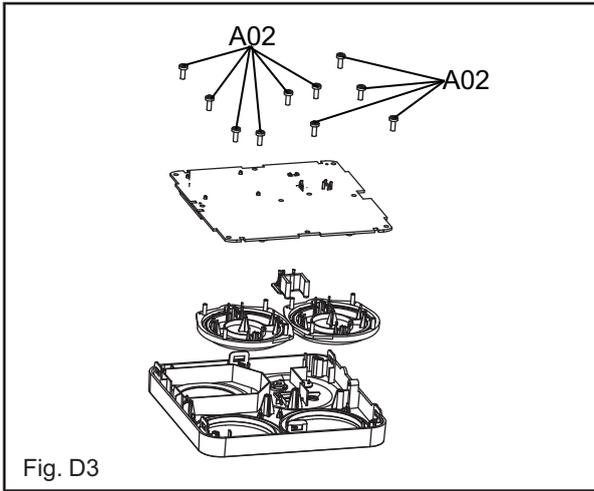


# Troubleshooting


FLOW CHART NO.1

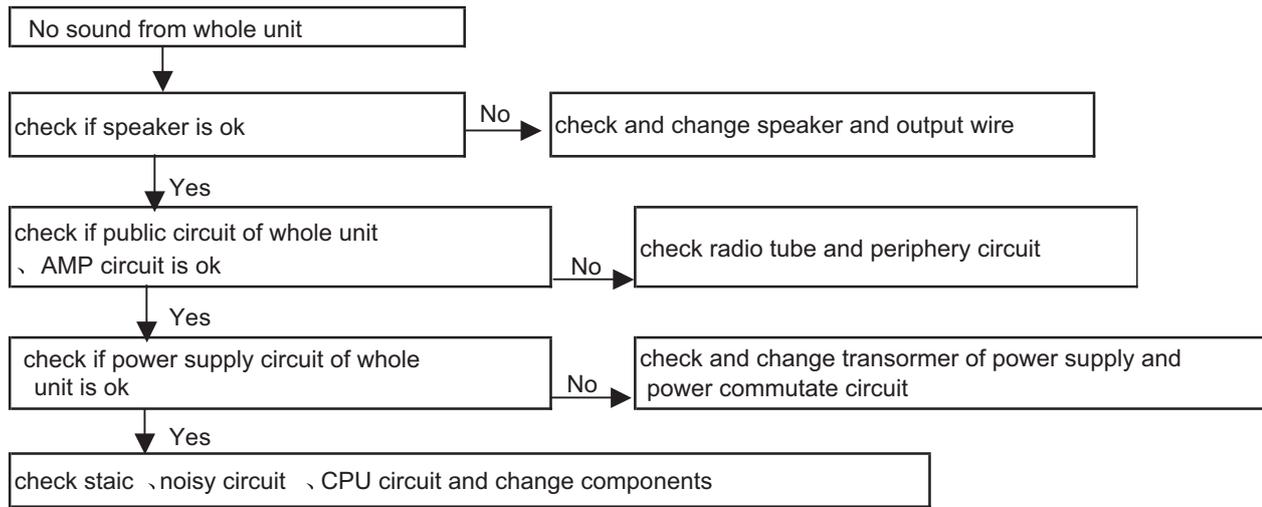


FLOW CHART NO.2

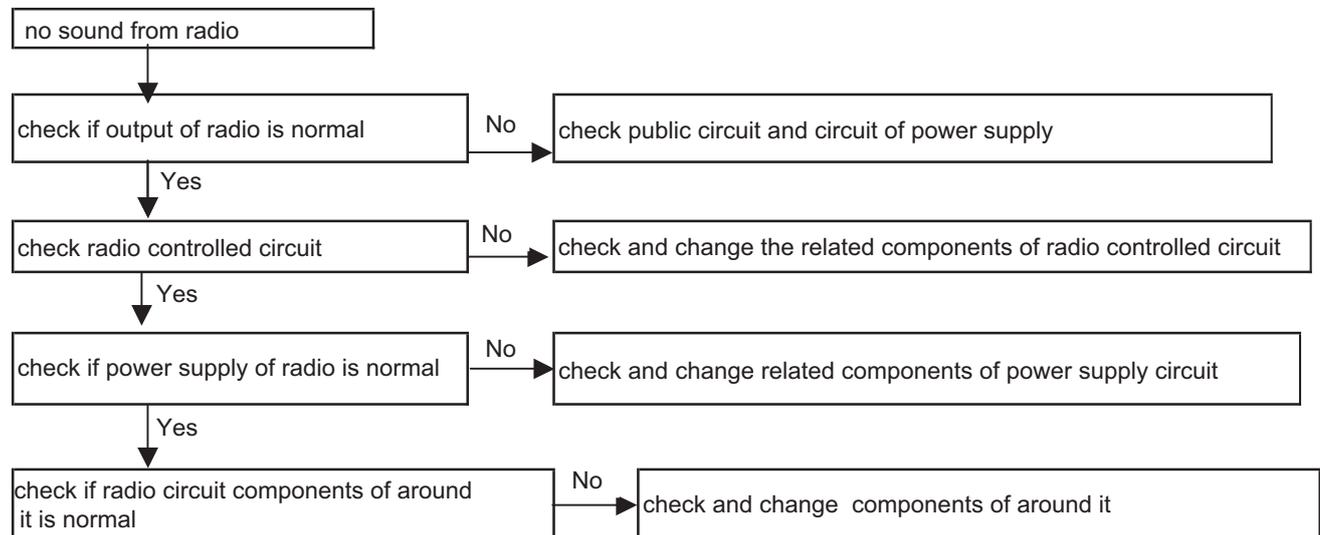


FLOW CHART NO.3

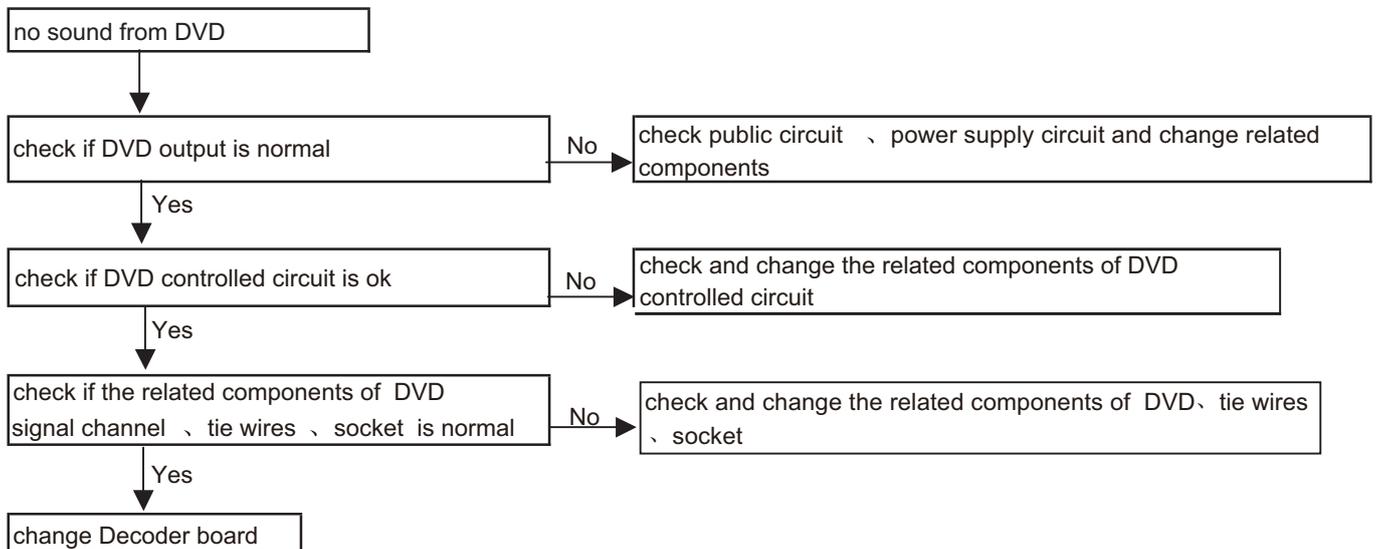


## Troubleshooting

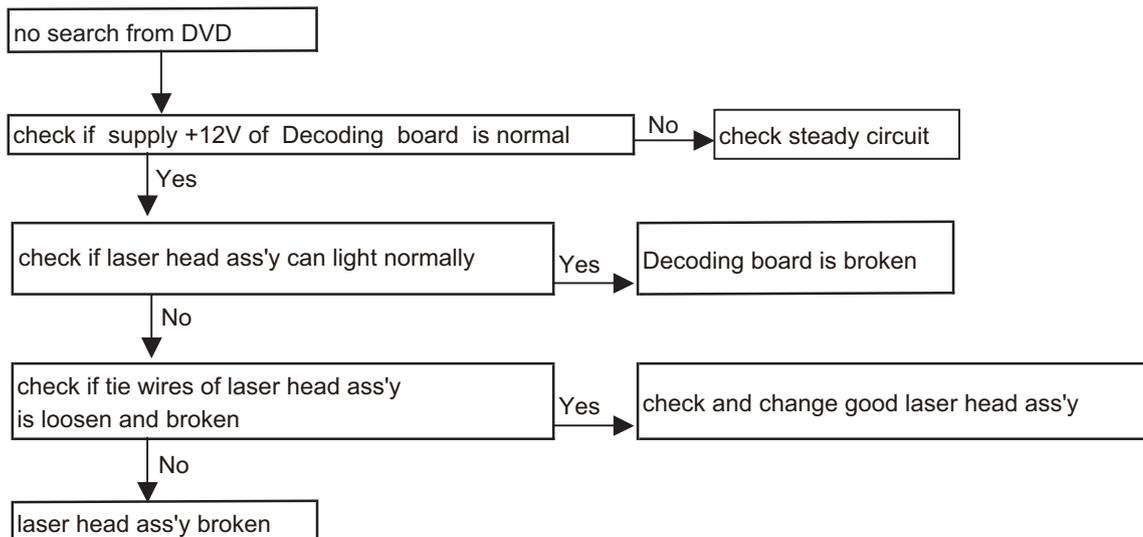


### FLOW CHART NO.4

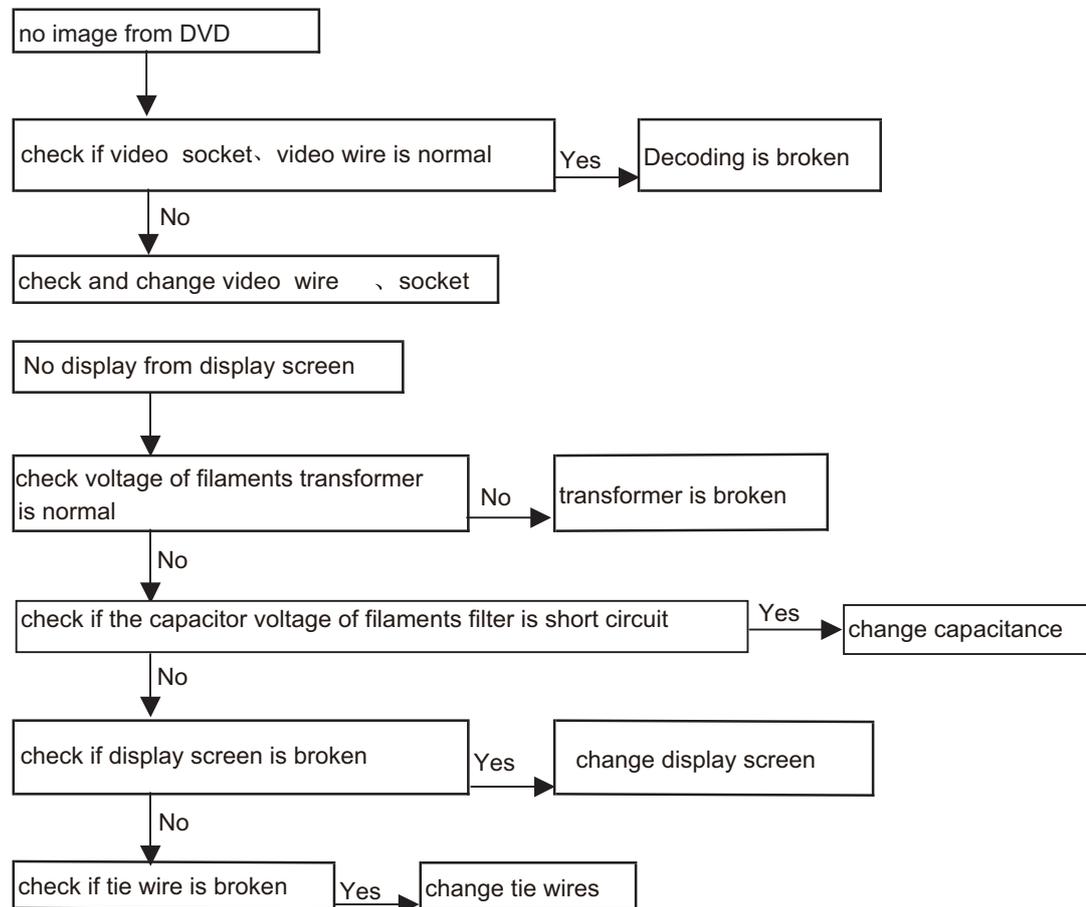

Block Diagram

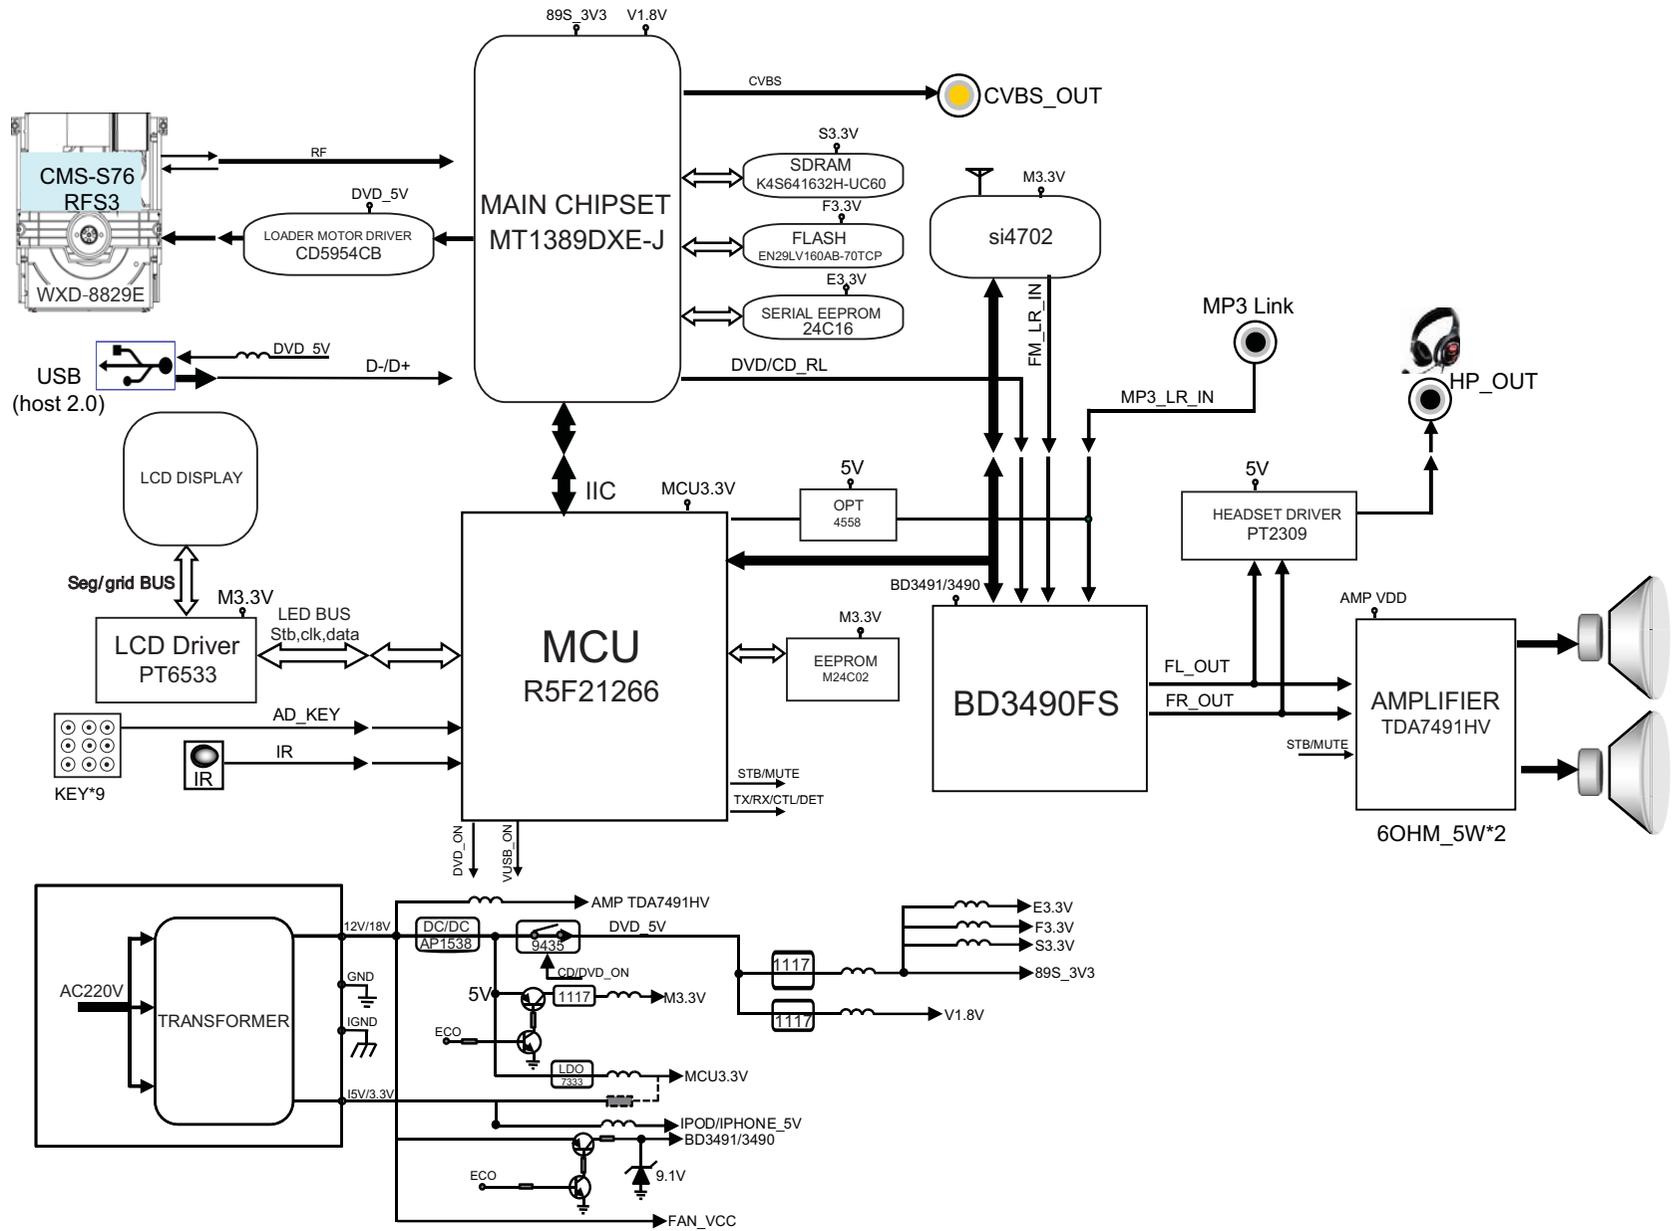


Wiring Diagram

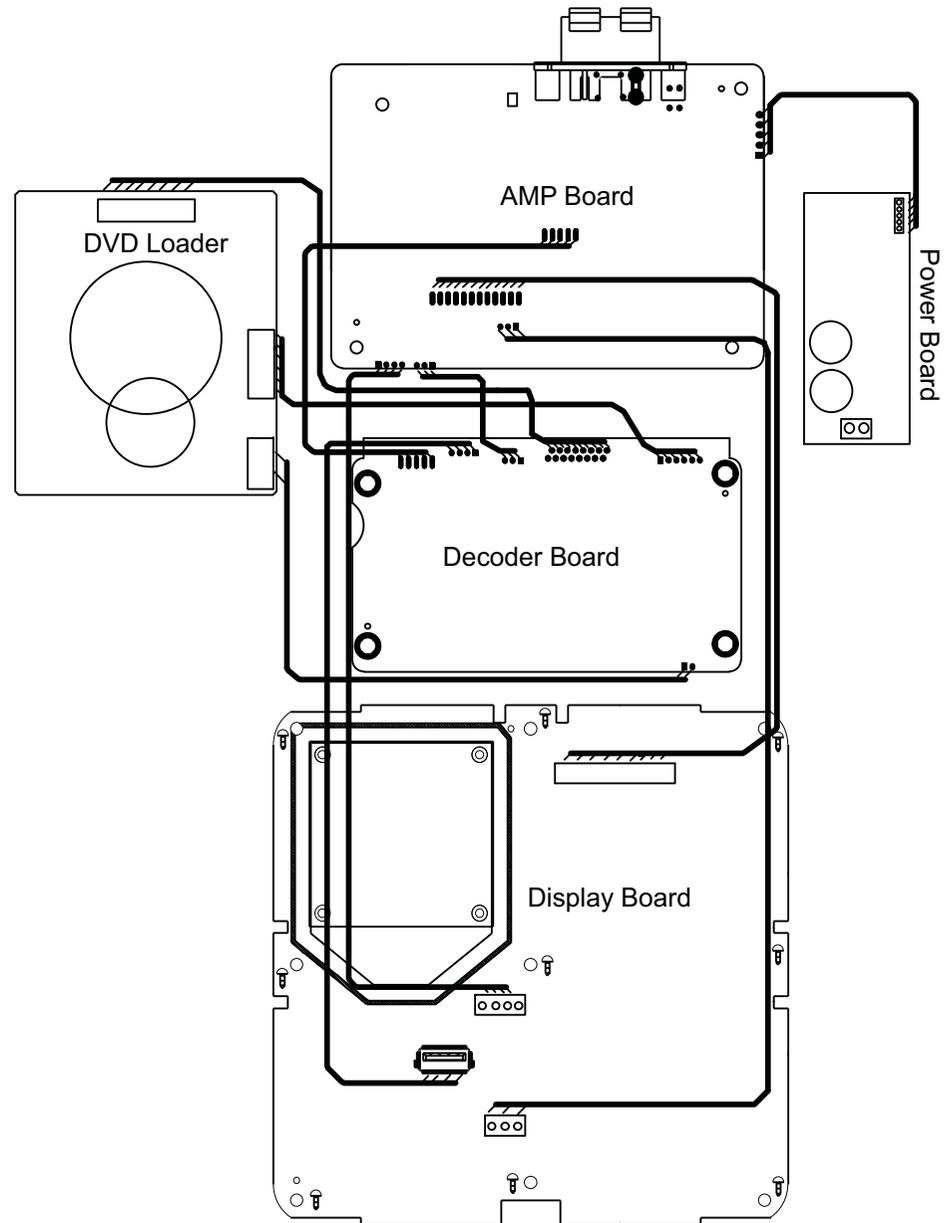





AMP Board -- Circuit Diagram 2









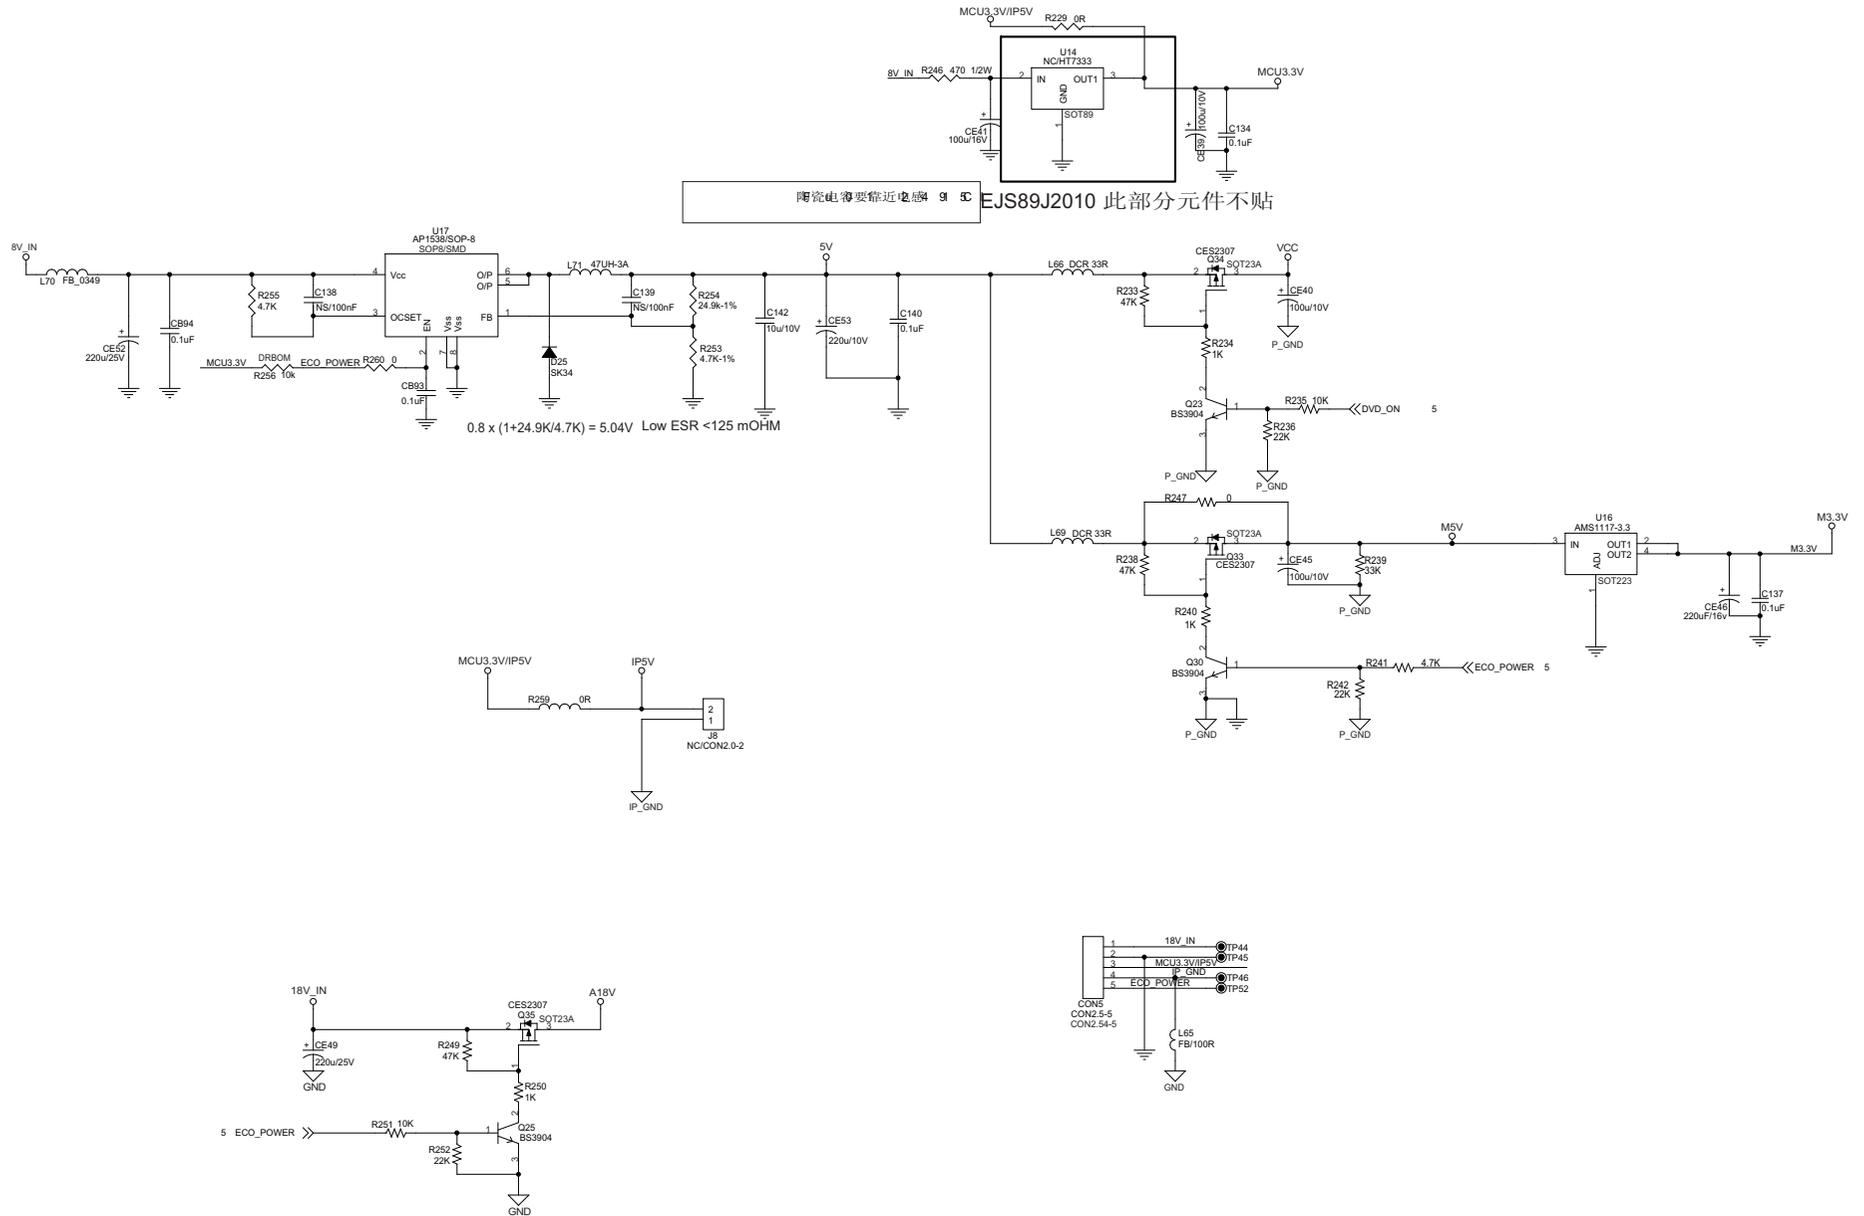


陶瓷电容要靠近电感 9 10 EJS89J2010 此部分元件不贴



AMP Board -- Layout Diagram

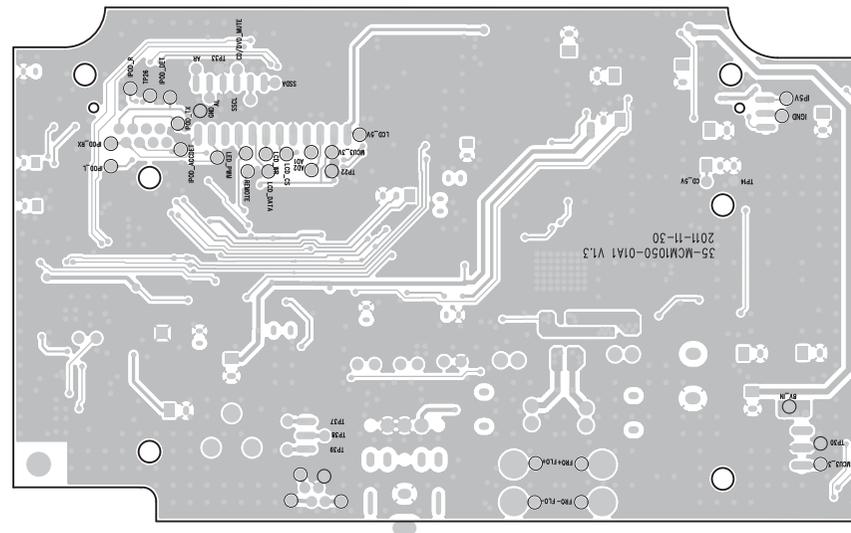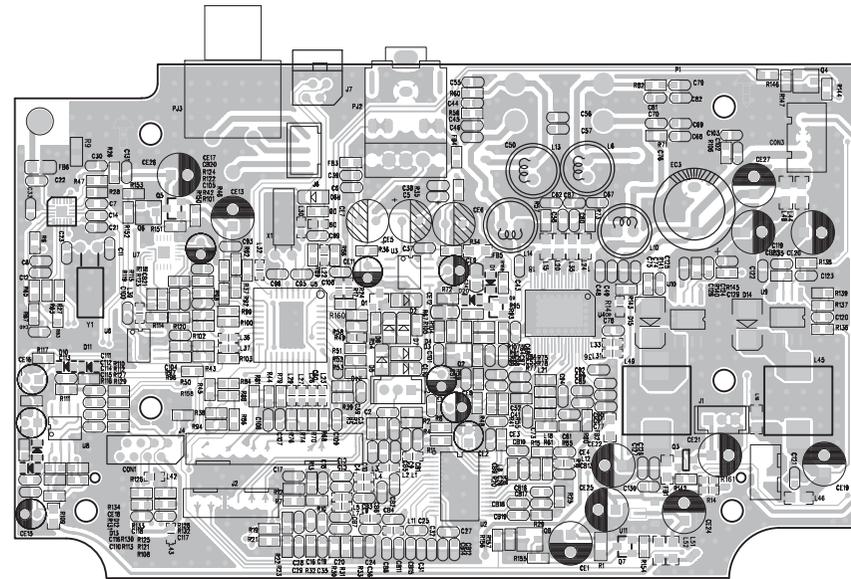


# Display Board -- Circuit Diagram

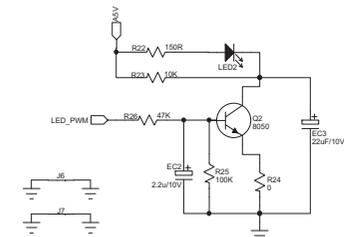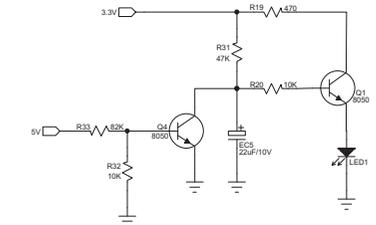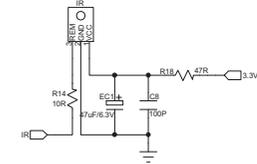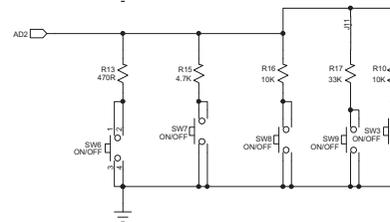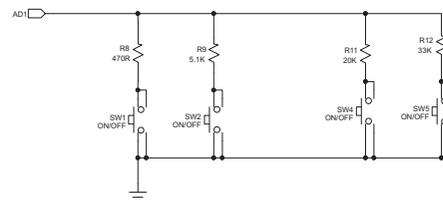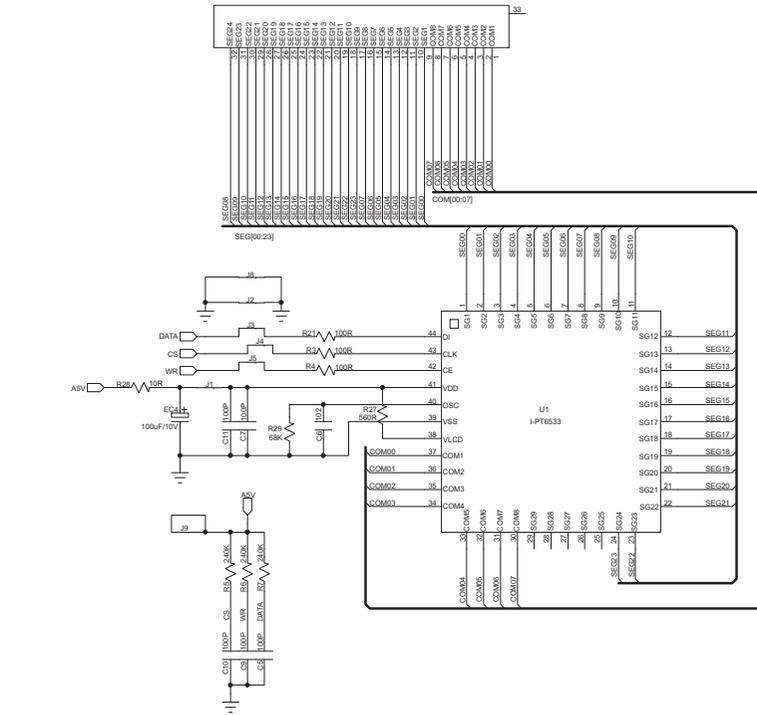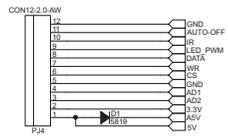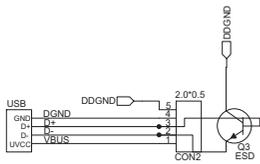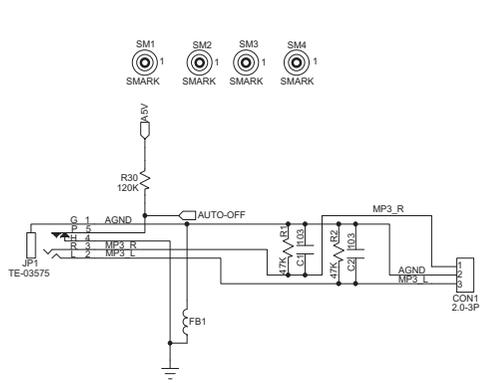

Display Board -- Layout Diagram

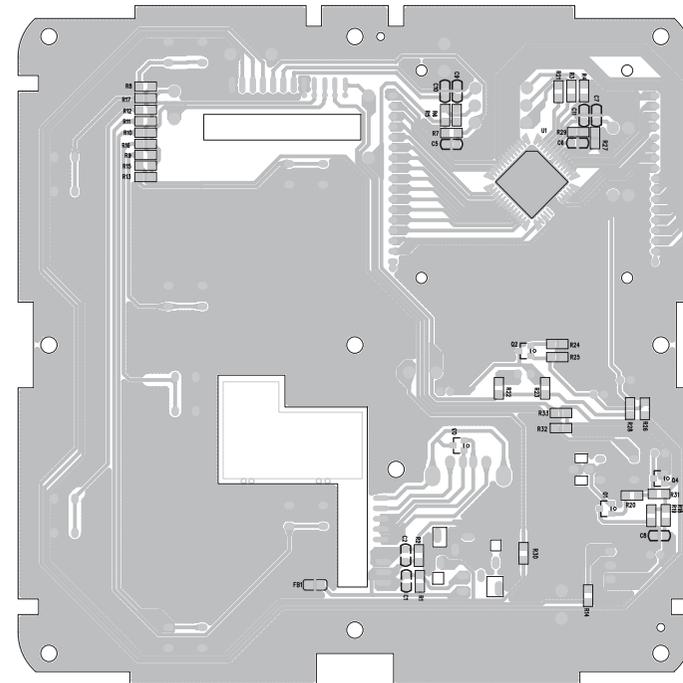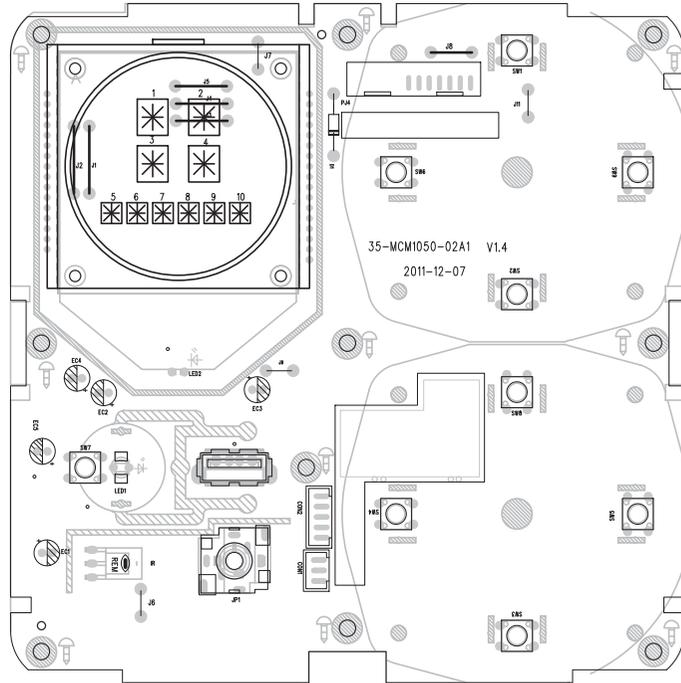

Power Board -- Circuit Diagram

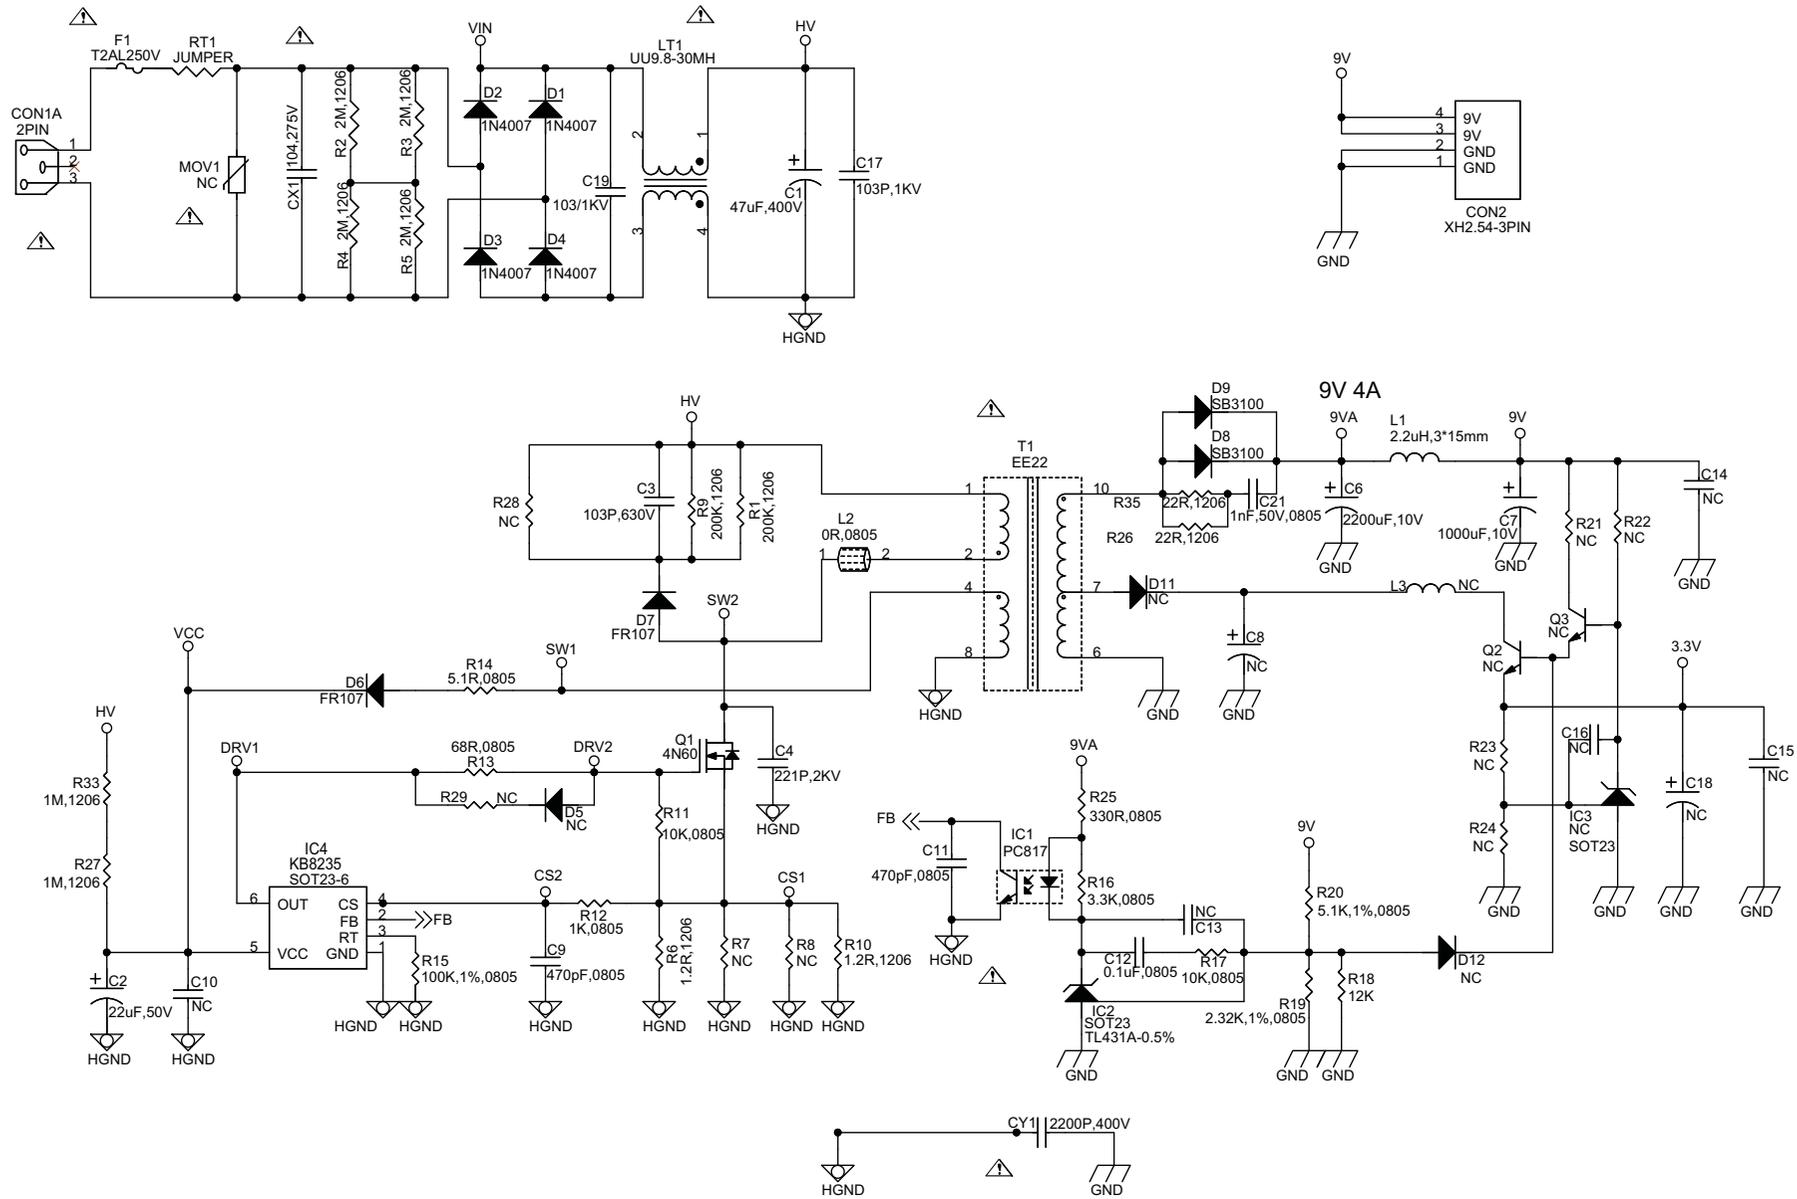










# Decoder Board -- Circuit Diagram 1

COMMON1389J\_HD850\_AM5888\_STBY  
 MT1389J DVD Board w/ Sanyo HD6x Series PUHs


- 1 INDEX & POWER / RESET
- 2 MT1389J LQFP128
- 3 SDRAM & FLASH & MOTOR
- 4 AUDIO & MIC I/F
- 5 Video I/F
- 6 MCR & USB & GXYZ I/F
- 7 Power Flow

## MT1389J General GPIO List

Name	PIN	Features
GPIO5	12	TRCLOSE
MDI1	13	VR_CD
GPIO_B	20	VR_DVD
GPIO2	23	TRIN
UP1_6	34	VSCK
UP1_7	35	VSDA
GPIO11	36	Power Key RXD
GPIO6	37	SD_D0 TXD
GPIO3	40	STBY
GPIO4	41	TRCPEN IOA
GPIO13	42	VSTB
GPIO9	43	MS_D0 SD_CMD
GPIO8	44	MS_BS SD_CLK
GPIO7	45	MS_CLK
GPIO29	46	Gxyz_LOAD
GPIO30	47	Gxyz_CLK
GPIO31	48	Gxyz_DA1
GPIO32	49	Gxyz_DA2
GPIO12	93	ASPDIF
GPIO10	94	SCART1 HSYNC
GPIO33	95	SCART2 VSYNC
GPIO14	97	AUDIO_MUTE
GPIO19	106	AKIN2
GPIO20	107	ADVCM
GPIO21	108	AKIN1
GPIO35	124	LIMIT TROUT

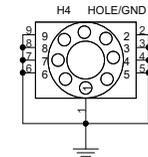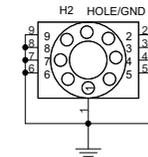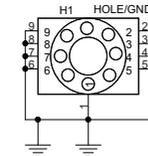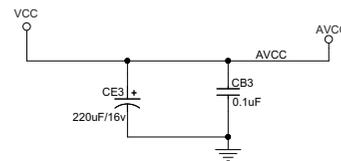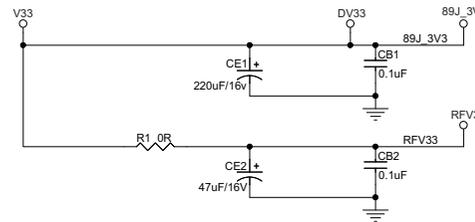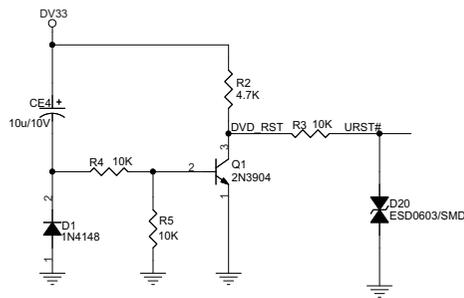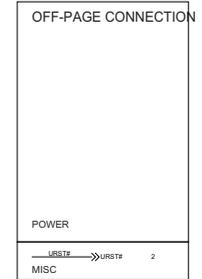

# Decoder Board -- Circuit Diagram 2

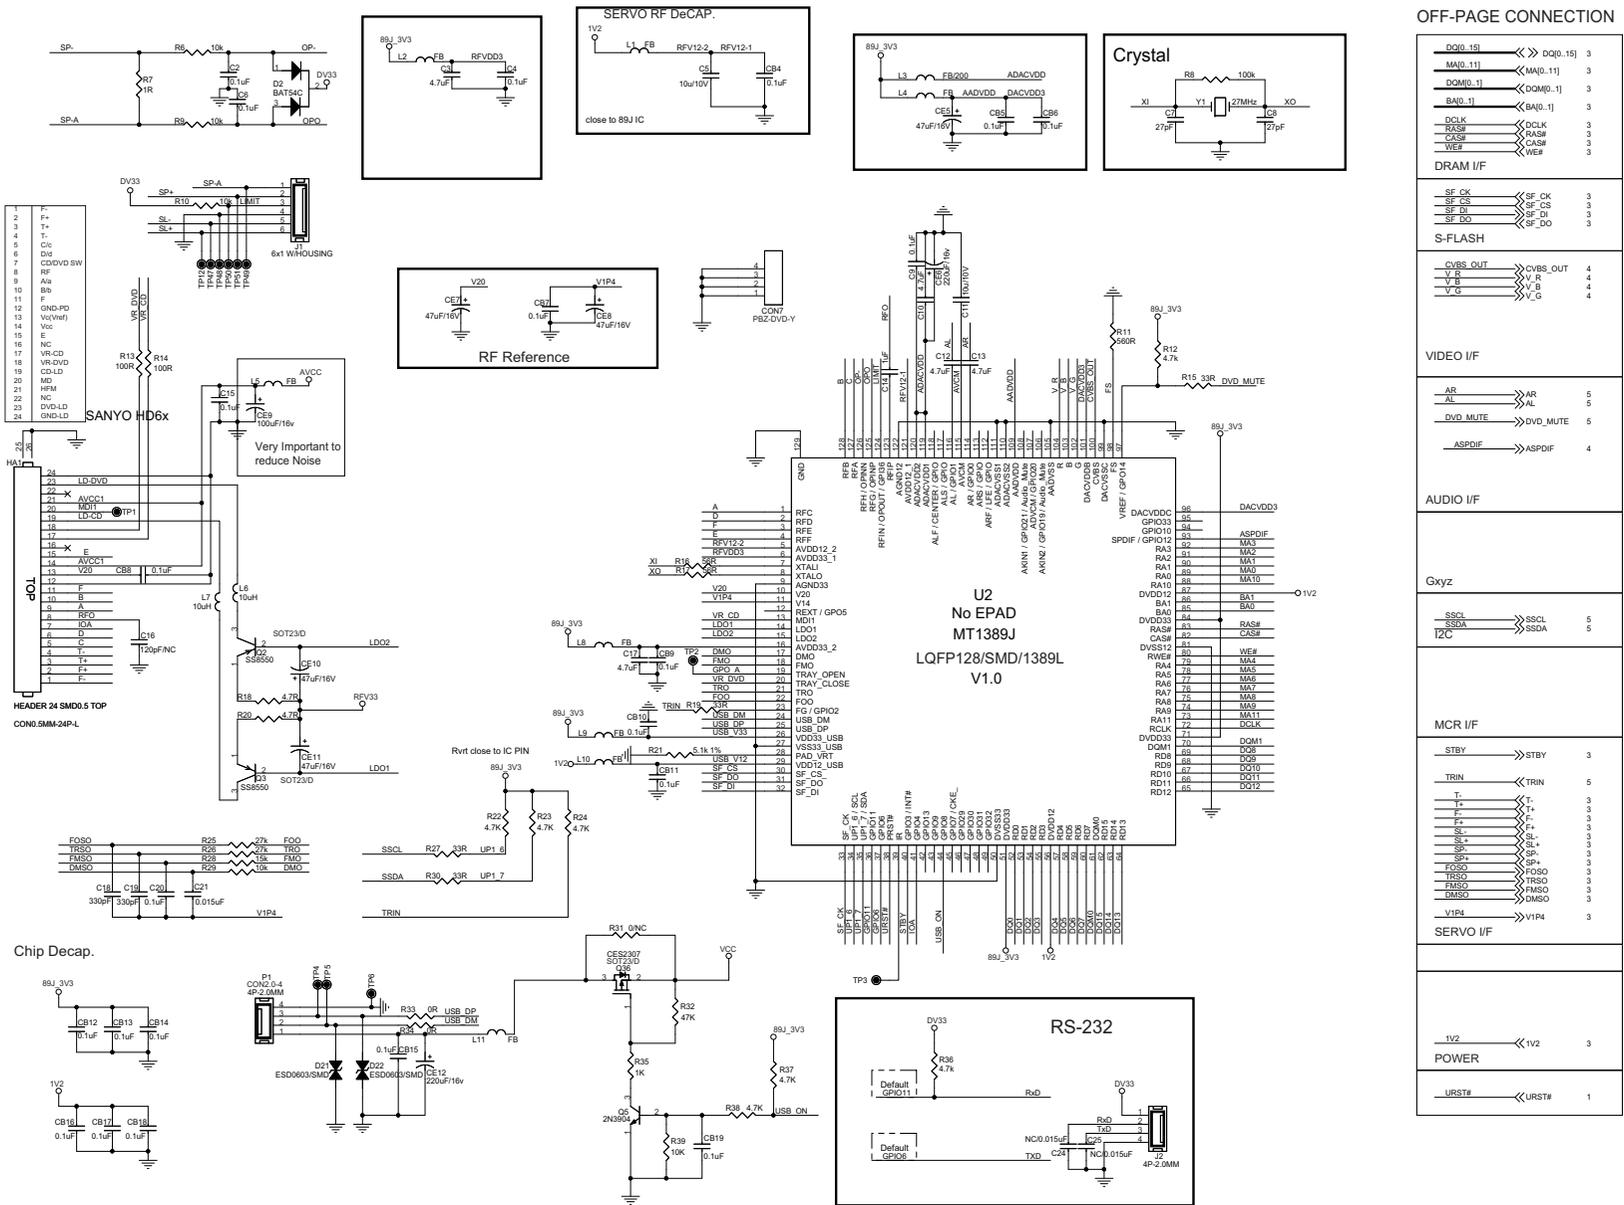



## OFF-PAGE CONNECTION

DDIO_1S1	↔	DDIO_1S1	3
MAIO_11	↔	MAIO_11	3
DDIO_11	↔	DDIO_11	3
BAIO_11	↔	BAIO_11	3
DCLK	↔	DCLK	3
RAS#	↔	RAS#	3
CAS#	↔	CAS#	3
WE#	↔	WE#	3
<b>DRAM I/F</b>			
SF_CK	↔	SF_CK	3
SF_DI	↔	SF_DI	3
SF_DO	↔	SF_DO	3
<b>S-FLASH</b>			
CVBS_OUT	↔	CVBS_OUT	4
V_B	↔	V_B	4
V_G	↔	V_G	4
<b>VIDEO I/F</b>			
AR	↔	AR	5
AL	↔	AL	5
DVD_MUTE	↔	DVD_MUTE	5
ASPDIF	↔	ASPDIF	4
<b>AUDIO I/F</b>			
<b>Gxyz</b>			
SSCL	↔	SSCL	5
SSDA	↔	SSDA	5
<b>I2C</b>			
<b>MCR I/F</b>			
STBY	↔	STBY	3
TRIN	↔	TRIN	5
T+	↔	T+	3
T-	↔	T-	3
F+	↔	F+	3
F-	↔	F-	3
SL+	↔	SL+	3
SL-	↔	SL-	3
SP+	↔	SP+	3
SP-	↔	SP-	3
TRSD	↔	TRSD	3
FMSO	↔	FMSO	3
DMSO	↔	DMSO	3
V1P4	↔	V1P4	3
<b>SERVO I/F</b>			
<b>POWER</b>			
1V2	↔	1V2	3
URST#	↔	URST#	1





# Decoder Board -- Circuit Diagram 4

default: Low Impedance Mode

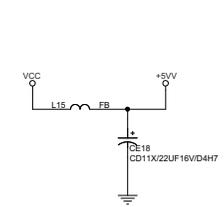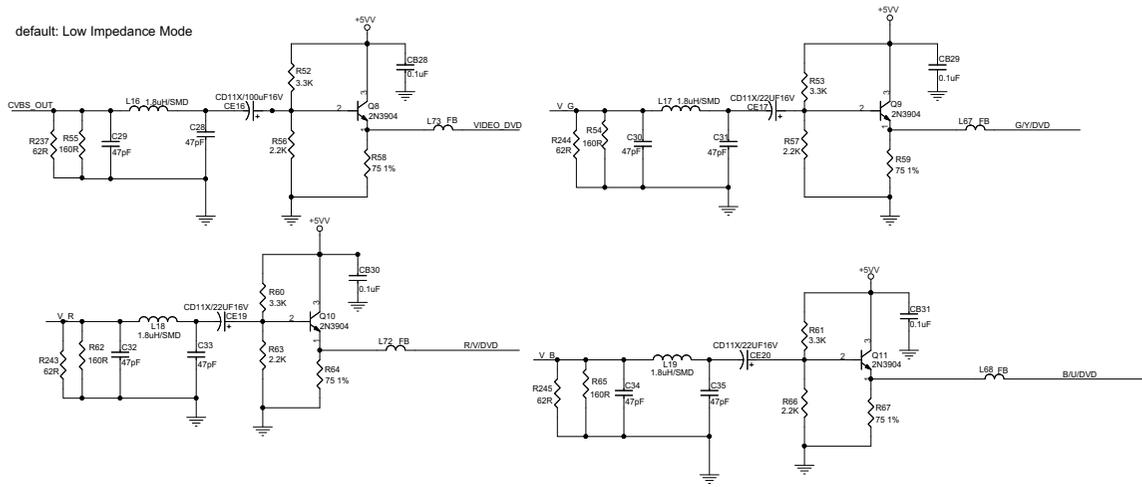

### OFF-PAGE CONNECTION


CVBS_OUT	CVBS_OUT	2
V_R	V_R	2
V_B	V_B	2
V_G	V_G	2

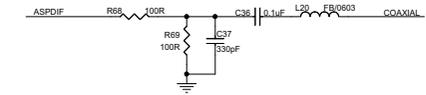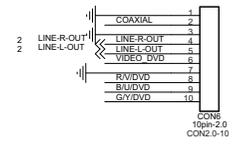

AL	AL	2.5
AR	AR	2.5
ASPDIF	ASPDIF	2




# Decoder Board -- Circuit Diagram 6

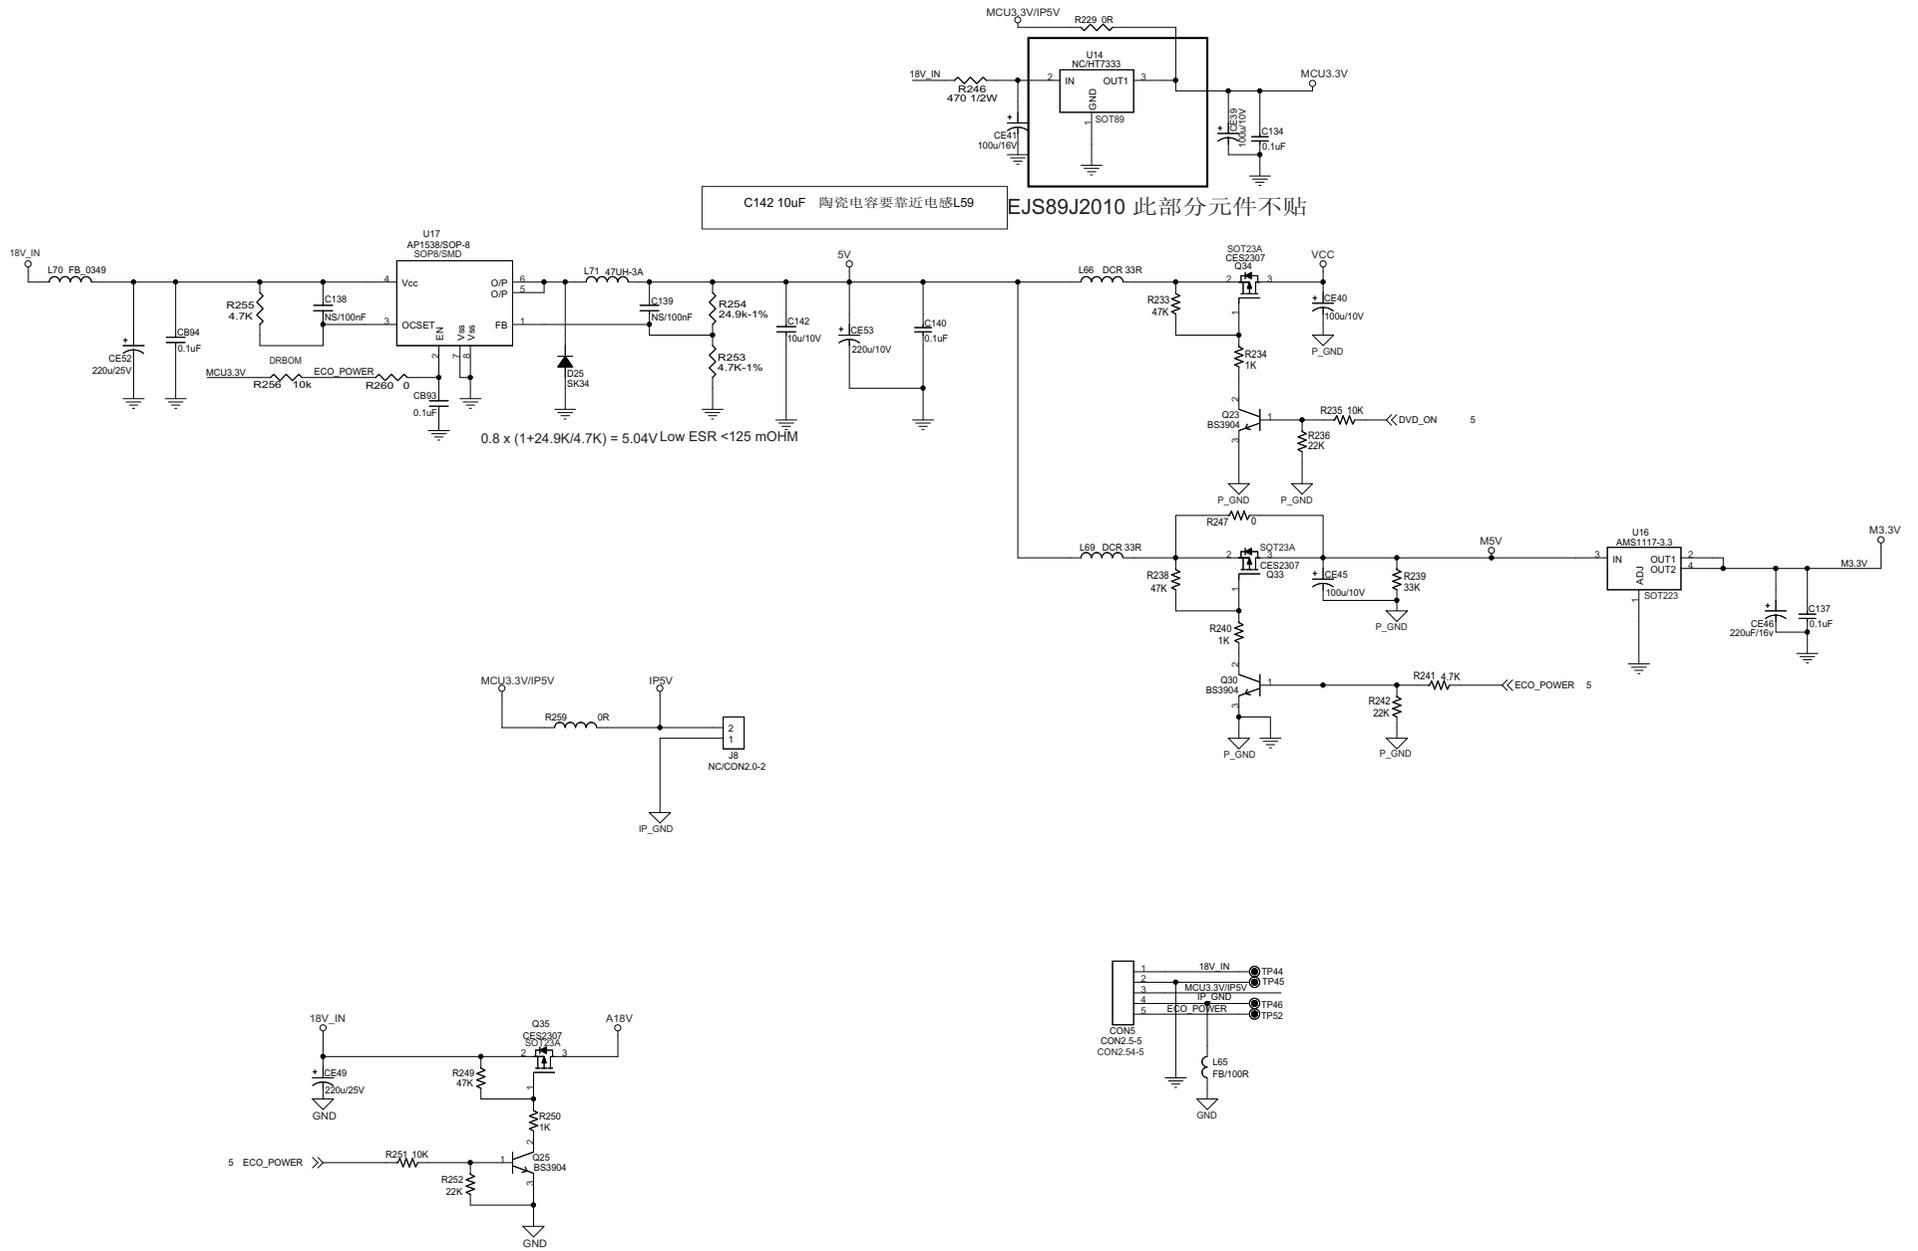



Exploded View

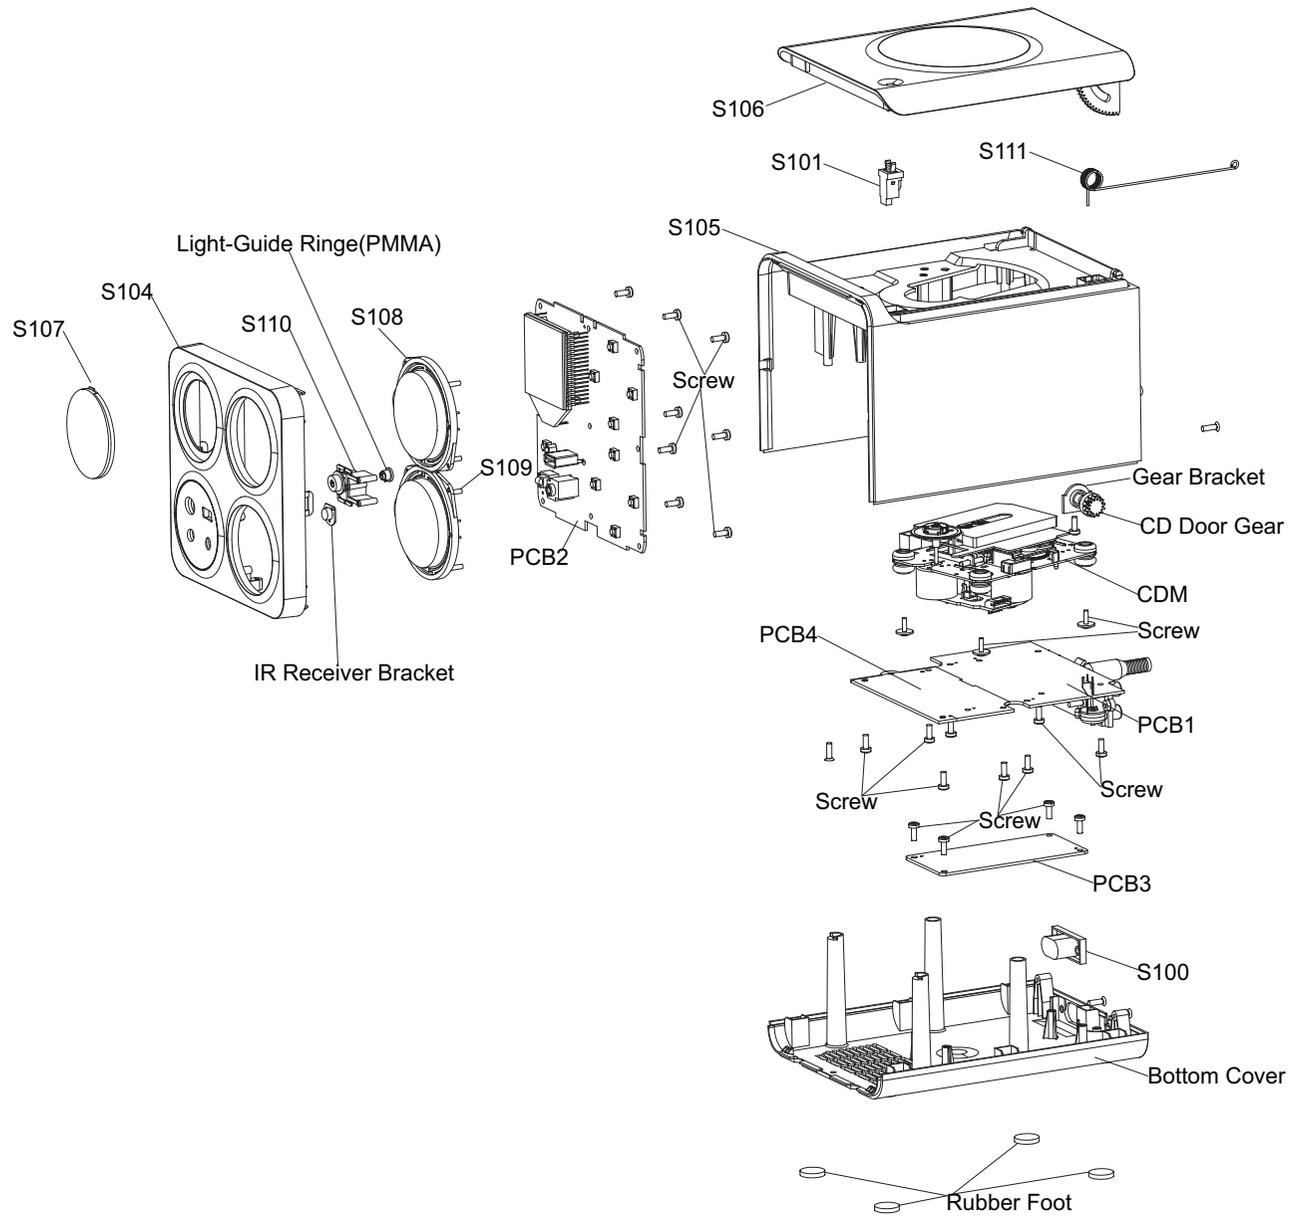

## Revision List

### Revision List

Version 1.0  
\* Initial Release