

Service  
Service  
**Service**



# Service Manual



## TABLE OF CONTENTS

	Chapter
Technical Specifications .....	1-2
Safety Instructions .....	1-3
Location of PCB Boards .....	2-1
Version Variation .....	2-2
Measurement Setup .....	2-3
Service Aids .....	2-4
Rescue Mode.....	2-5
Setting procedure & Repair Instructions.....	3
Disassembly Instructions & Service positions .....	4
Block & Wiring Diagram .....	5
DVD Main Board .....	6
NET Main Board .....	7
Key Board .....	8
AMP Board .....	9
Speak Board .....	10
Aux & Earphone Board .....	11
IR Board .....	12
OP/CL Board .....	13

©Copyright 2010 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by ML-SL 1048 BG AVM SERVICE Printed in the Netherlands

Subject to modification

3141 785 34953

Version 1.3



# PHILIPS

# 1. Technical Specifications, Directions for Use

## Index of this chapter:

[1.1 Technical Specifications](#)

[1.2 Directions for Use](#)

## Notes:

- Figures can deviate due to the different set executions.
- Specifications are indicative (subject to change).

## 1.1 Technical Specifications

For on-line product support please use the following website:

[http://www.p4c.philips.com/cgi-bin/dcbint/cpproduct\\_selector.pl](http://www.p4c.philips.com/cgi-bin/dcbint/cpproduct_selector.pl)

Here is product information available, as well as getting started, user manuals, frequently asked questions and software & drivers.

## 1.2 Directions for Use

You can download this information from the following websites:

<http://www.philips.com/support>

<http://www.p4c.philips.com>


## 2. Safety Instructions, Warnings, Notes, and Abbreviation List

### Index of this chapter:

- [2.1 Safety Instructions](#)
- [2.2 Warnings](#)
- [2.3 Notes](#)
- [2.4 Abbreviation List](#)

### 2.1 Safety Instructions


Safety regulations require the following **during** a repair:

- Connect the set to the Mains/AC Power via an isolation transformer (> 800 VA).
- Replace safety components, indicated by the symbol , only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.

Safety regulations require that **after** a repair, the set must be returned in its original condition. Pay in particular attention to the following points:



- Route the wire trees correctly and fix them with the mounted cable clamps.
- Check the insulation of the Mains/AC Power lead for external damage.
- Check the strain relief of the Mains/AC Power cord for proper function.
- Check the electrical DC resistance between the Mains/AC Power plug and the secondary side (only for sets that have a Mains/AC Power isolated power supply):
  1. Unplug the Mains/AC Power cord and connect a wire between the two pins of the Mains/AC Power plug.
  2. Set the Mains/AC Power switch to the "on" position (keep the Mains/AC Power cord unplugged!).
  3. Measure the resistance value between the pins of the Mains/AC Power plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 MΩ and 12 MΩ.
  4. Switch "off" the set, and remove the wire between the two pins of the Mains/AC Power plug.
- Check the cabinet for defects, to prevent touching of any inner parts by the customer.





### 2.2 Warnings

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD ) . Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.
- Be careful during measurements in the high voltage section.
- Never replace modules or other components while the unit is switched "on".
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

### 2.3 Notes

#### 2.3.1 General

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground () , or hot ground () , depending on the tested area of circuitry. The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz for PAL, or 61.25 MHz for NTSC (channel 3).

- Where necessary, measure the waveforms and voltages with () and without () aerial signal. Measure the voltages in the power supply section both in normal operation () and in stand-by () . These values are indicated by means of the appropriate symbols.

#### 2.3.2 Schematic Notes

- All resistor values are in ohms, and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kΩ).
- Resistor values with no multiplier may be indicated with either an "E" or an "R" (e.g. 220E or 220R indicates 220 Ω).
- All capacitor values are given in micro-farads ( $\mu = \times 10^{-6}$ ), nano-farads ( $n = \times 10^{-9}$ ), or pico-farads ( $p = \times 10^{-12}$ ).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An "asterisk" (\*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Spare Parts List. Therefore, always check this list when there is any doubt.

#### 2.3.3 BGA (Ball Grid Array) ICs

##### Introduction

For more information on how to handle BGA devices, visit this URL: [www.atyourservice.ce.philips.com](http://www.atyourservice.ce.philips.com) (needs subscription, not available for all regions). After login, select "Magazine", then go to "Repair downloads". Here you will find Information on how to deal with BGA-ICs.

##### BGA Temperature Profiles

For BGA-ICs, you **must** use the correct temperature-profile, which is coupled to the 12NC. For an overview of these profiles, visit the website [www.atyourservice.ce.philips.com](http://www.atyourservice.ce.philips.com) (needs subscription, but is not available for all regions) You will find this and more technical information within the "Magazine", chapter "Repair downloads". For additional questions please contact your local repair help desk.

#### 2.3.4 Lead-free Soldering

Due to lead-free technology some rules have to be respected by the workshop during a repair:

- Use only lead-free soldering tin Philips SAC305 with order code 0622 149 00106. If lead-free solder paste is required, please contact the manufacturer of your soldering equipment. In general, use of solder paste within workshops should be avoided because paste is not easy to store and to handle.
- Use only adequate solder tools applicable for lead-free soldering tin. The solder tool must be able:
  - To reach a solder-tip temperature of at least 400°C.
  - To stabilize the adjusted temperature at the solder-tip.
  - To exchange solder-tips for different applications.
- Adjust your solder tool so that a temperature of around 360°C - 380°C is reached and stabilized at the solder joint. Heating time of the solder-joint should not exceed ~ 4 sec. Avoid temperatures above 400°C, otherwise wear-out of tips will increase drastically and flux-fluid will be destroyed. To avoid wear-out of tips, switch "off" unused equipment or reduce heat.
- Mix of lead-free soldering tin/parts with leaded soldering tin/parts is possible but PHILIPS recommends strongly **to avoid** mixed regimes. If this cannot be avoided, carefully clear the solder-joint from old tin and re-solder with new tin.

## Safety Instructions, Warnings, Notes, and Abbreviation List

### 2.3.5 Alternative BOM identification

It should be noted that on the European Service website, "Alternative BOM" is referred to as "Design variant".

The **third digit** in the serial number (example: KX2B0835000001) indicates the number of the alternative B.O.M. (Bill Of Materials) that has been used for producing the specific AV set. In general, it is possible that the same AV model on the market is produced with e.g. two different types of display, coming from two different suppliers. This will then result in sets which have the same CTN (Commercial Type Number; e.g. MCM394/12) but which have a different B.O.M. number.

Also, it is possible that same model on the market is produced with two production centers, however their partslist is the same. In such case, no alternative B.O.M. will be created.

By looking at the third digit of the serial number, one can identify which B.O.M. is used for the set he is working with. If the third digit of the serial number contains the number "1" (example: KX1B033500001), then the set has been manufactured according to B.O.M. number 1. If the third digit is a "2" (example: KX2B033500001), then the set has been produced according to B.O.M. no. 2. This is important for ordering the correct spare parts! For the third digit, the numbers 1...9 and the characters A...Z can be used, so in total: 9 plus 26 = 35 different B.O.M.s can be indicated by the third digit of the serial number.

**Identification:** The bottom line of a type plate gives a 14-digit serial number. Digits 1 and 2 refer to the production centre (e.g. LM is Arts), digit 3 refers to the B.O.M. code, digit 4 refers to the Service version change code, digits 5 and 6 refer to the production year, and digits 7 and 8 refer to production week (in example below it is 2008 week 50). The 6 last digits contain the serial number.



Figure 2-1 Serial number (example)

### 2.3.6 Module Level Repair (MLR) or Component Level Repair (CLR)

If a board is defective, consult your repair procedure to decide if the board has to be exchanged or if it should be repaired on component level.

If your repair procedure says the board should be exchanged completely, do not solder on the defective board. Otherwise, it cannot be returned to the O.E.M. supplier for back charging!

### 2.3.7 Practical Service Precautions

- **It makes sense to avoid exposure to electrical shock.** While some sources are expected to have a possible dangerous impact, others of quite high potential are of limited current and are sometimes held in less regard.
- **Always respect voltages.** While some may not be dangerous in themselves, they can cause unexpected reactions that are best avoided. Before reaching into a powered TV set, it is best to test the high voltage insulation. It is easy to do, and is a good service precaution.

### 2.4 Abbreviation List

0/6/12	SCART switch control signal on A/V board. 0 = loop through (AUX to TV), 6 = play 16 : 9 format, 12 = play 4 : 3 format
2DNR	Spatial (2D) Noise Reduction
3DNR	Temporal (3D) Noise Reduction
AARA	Automatic Aspect Ratio Adaptation: algorithm that adapts aspect ratio to remove horizontal black bars; keeps the original aspect ratio
ACI	Automatic Channel Installation: algorithm that installs TV channels directly from a cable network by means of a predefined TXT page
ADC	Analogue to Digital Converter
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency
AGC	Automatic Gain Control: algorithm that controls the video input of the feature box
AM	Amplitude Modulation
ANR	Automatic Noise Reduction: one of the algorithms of Auto TV
AP	Asia Pacific
AR	Aspect Ratio: 4 by 3 or 16 by 9
ASF	Auto Screen Fit: algorithm that adapts aspect ratio to remove horizontal black bars without discarding video information
ATSC	Advanced Television Systems Committee, the digital TV standard in the USA
ATV	See Auto TV
Auto TV	A hardware and software control system that measures picture content, and adapts image parameters in a dynamic way
AV	External Audio Video
AVC	Audio Video Controller
AVIP	Audio Video Input Processor
B/G	Monochrome TV system. Sound carrier distance is 5.5 MHz
BLR	Board-Level Repair
BTSC	Broadcast Television Standard Committee. Multiplex FM stereo sound system, originating from the USA and used e.g. in LATAM and AP-NTSC countries
B-TXT	Blue TeleteXT
C	Centre channel (audio)
CEC	Consumer Electronics Control bus: remote control bus on HDMI connections
CL	Constant Level: audio output to connect with an external amplifier
CLR	Component Level Repair
COLUMBUS	COlor LUMinance Baseband Universal Sub-system
ComPair	Computer aided rePair
CP	Connected Planet / Copy Protection
CSM	Customer Service Mode
CTI	Color Transient Improvement: manipulates steepness of chroma transients
CVBS	Composite Video Blanking and Synchronization
DAC	Digital to Analogue Converter
DBE	Dynamic Bass Enhancement: extra low frequency amplification
DDC	See "E-DDC"




## Safety Instructions, Warnings, Notes, and Abbreviation List

D/K	Monochrome TV system. Sound carrier distance is 6.5 MHz		lines. The fields are written in "pairs", causing line flicker.
DFI	Dynamic Frame Insertion	IR	Infra Red
DFU	Directions For Use: owner's manual	IRQ	Interrupt Request
DMR	Digital Media Reader: card reader	ITU-656	The ITU Radio communication Sector (ITU-R) is a standards body subcommittee of the International Telecommunication Union relating to radio communication. ITU-656 (a.k.a. SDI), is a digitized video format used for broadcast grade video.
DMSD	Digital Multi Standard Decoding		Uncompressed digital component or digital composite signals can be used.
DNM	Digital Natural Motion		The SDI signal is self-synchronizing, uses 8 bit or 10 bit data words, and has a maximum data rate of 270 Mbit/s, with a minimum bandwidth of 135 MHz.
DNR	Digital Noise Reduction: noise reduction feature of the set		
DRAM	Dynamic RAM		
DRM	Digital Rights Management		
DSP	Digital Signal Processing		
DST	Dealer Service Tool: special remote control designed for service technicians		
DTCP	Digital Transmission Content Protection; A protocol for protecting digital audio/video content that is traversing a high speed serial bus, such as IEEE-1394	ITV	Institutional TeleVision; TV sets for hotels, hospitals etc.
DVB-C	Digital Video Broadcast - Cable	JOP	Jaguar Output Processor
DVB-T	Digital Video Broadcast - Terrestrial	LS	Last Status; The settings last chosen by the customer and read and stored in RAM or in the NVM. They are called at start-up of the set to configure it according to the customer's preferences
DVD	Digital Versatile Disc		
DVI(-d)	Digital Visual Interface (d= digital only)		
E-DDC	Enhanced Display Data Channel (VESA standard for communication channel and display). Using E-DDC, the video source can read the EDID information from the display.	LATAM	Latin America
EDID	Extended Display Identification Data (VESA standard)	LCD	Liquid Crystal Display
EEPROM	Electrically Erasable and Programmable Read Only Memory	LED	Light Emitting Diode
EMI	Electro Magnetic Interference	L/L'	Monochrome TV system. Sound carrier distance is 6.5 MHz. L' is Band I, L is all bands except for Band I
EPLD	Erasable Programmable Logic Device	LORE	Local REGression approximation
EU	Europe	LPL	LG.Philips LCD (supplier)
EXT	EXTERNAL (source), entering the set by SCART or by cinches (jacks)	LS	Loudspeaker
FBL	Fast BLanking: DC signal accompanying RGB signals	LVDS	Low Voltage Differential Signalling
FDS	Full Dual Screen (same as FDW)	Mbps	Mega bits per second
FDW	Full Dual Window (same as FDS)	M/N	Monochrome TV system. Sound carrier distance is 4.5 MHz
FLASH	FLASH memory	MIPS	Microprocessor without Interlocked Pipeline-Stages; A RISC-based microprocessor
FM	Field Memory or Frequency Modulation	MOP	Matrix Output Processor
FPGA	Field-Programmable Gate Array	MOSFET	Metal Oxide Silicon Field Effect Transistor, switching device
FTV	Flat TeleVision		
Gb/s	Giga bits per second	MPEG	Motion Pictures Experts Group
G-TXT	Green TeleteXT	MPIF	Multi Platform InterFace
H	H_sync to the module	MUTE	MUTE Line
HD	High Definition	NC	Not Connected
HDD	Hard Disk Drive	NICAM	Near Instantaneous Compounded Audio Multiplexing. This is a digital sound system, mainly used in Europe.
HDCP	High-bandwidth Digital Content Protection: A "key" encoded into the HDMI/DVI signal that prevents video data piracy. If a source is HDCP coded and connected via HDMI/DVI without the proper HDCP decoding, the picture is put into a "snow vision" mode or changed to a low resolution. For normal content distribution the source and the display device must be enabled for HDCP "software key" decoding.	NTC	Negative Temperature Coefficient, non-linear resistor
HDMI	High Definition Multimedia Interface	NTSC	National Television Standard Committee. Color system mainly used in North America and Japan. Color carrier NTSC M/N= 3.579545 MHz, NTSC 4.43= 4.433619 MHz (this is a VCR norm, it is not transmitted off-air)
HP	HeadPhone		
I	Monochrome TV system. Sound carrier distance is 6.0 MHz	NVM	Non-Volatile Memory: IC containing TV related data such as alignments
I <sup>2</sup> C	Inter IC bus	O/C	Open Circuit
I <sup>2</sup> D	Inter IC Data bus	OSD	On Screen Display
I <sup>2</sup> S	Inter IC Sound bus	OTC	On screen display Teletext and Control; also called Artistic (SAA5800)
IF	Intermediate Frequency	P50	Project 50: communication protocol between TV and peripherals
Interlaced	Scan mode where two fields are used to form one frame. Each field contains half the number of the total amount of	PAL	Phase Alternating Line. Color system mainly used in West Europe (color carrier= 4.433619 MHz) and South America (color carrier PAL M=


## Safety Instructions, Warnings, Notes, and Abbreviation List

	3.575612 MHz and PAL N= 3.582056 MHz)	V	V-sync to the module
PCB	Printed Circuit Board (same as "PWB")	VCR	Video Cassette Recorder
PCM	Pulse Code Modulation	VESA	Video Electronics Standards Association
PDP	Plasma Display Panel	VGA	640x480 (4:3)
PFC	Power Factor Corrector (or Pre-conditioner)	VL	Variable Level out: processed audio output toward external amplifier
PIP	Picture In Picture	VSB	Vestigial Side Band; modulation method
PLL	Phase Locked Loop. Used for e.g. FST tuning systems. The customer can give directly the desired frequency	WYSIWYR	What You See Is What You Record: record selection that follows main picture and sound
POR	Power On Reset, signal to reset the uP		
Progressive Scan	Scan mode where all scan lines are displayed in one frame at the same time, creating a double vertical resolution.	WXGA	1280x768 (15:9)
		XTAL	Quartz crystal
		XGA	1024x768 (4:3)
		Y	Luminance signal
PTC	Positive Temperature Coefficient, non-linear resistor	Y/C	Luminance (Y) and Chrominance (C) signal
PWB	Printed Wiring Board (same as "PCB")	YPbPr	Component video. Luminance and scaled color difference signals (B-Y and R-Y)
PWM	Pulse Width Modulation		
QRC	Quasi Resonant Converter	YUV	Component video
QTNR	Quality Temporal Noise Reduction		
QVCP	Quality Video Composition Processor		
RAM	Random Access Memory		
RGB	Red, Green, and Blue. The primary color signals for TV. By mixing levels of R, G, and B, all colors (Y/C) are reproduced.		
RC	Remote Control		
RC5 / RC6	Signal protocol from the remote control receiver		
RESET	RESET signal		
ROM	Read Only Memory		
R-TXT	Red TeleteXT		
SAM	Service Alignment Mode		
S/C	Short Circuit		
SCART	Syndicat des Constructeurs d'Appareils Radiorécepteurs et Téléviseurs		
SCL	Serial Clock I <sup>2</sup> C		
SCL-F	CLock Signal on Fast I <sup>2</sup> C bus		
SD	Standard Definition		
SDA	Serial Data I <sup>2</sup> C		
SDA-F	DAta Signal on Fast I <sup>2</sup> C bus		
SDI	Serial Digital Interface, see "ITU-656"		
SDRAM	Synchronous DRAM		
SECAM	SEquence Couleur Avec Mémoire. Color system mainly used in France and East Europe. Color carriers= 4.406250 MHz and 4.250000 MHz		
SIF	Sound Intermediate Frequency		
SMPS	Switched Mode Power Supply		
SoC	System on Chip		
SOG	Sync On Green		
SOPS	Self Oscillating Power Supply		
S/PDIF	Sony Philips Digital InterFace		
SRAM	Static RAM		
SRP	Service Reference Protocol		
SSB	Small Signal Board		
STBY	STand-BY		
SVGA	800x600 (4:3)		
SVHS	Super Video Home System		
SW	Software		
SWAN	Spatial temporal Weighted Averaging Noise reduction		
SXGA	1280x1024		
TFT	Thin Film Transistor		
THD	Total Harmonic Distortion		
TMDS	Transmission Minimized Differential Signalling		
TXT	TeleteXT		
TXT-DW	Dual Window with TeleteXT		
UI	User Interface		
uP	Microprocessor		
UXGA	1600x1200 (4:3)		

## DVD SET LOCATION OF PCB BOARDS

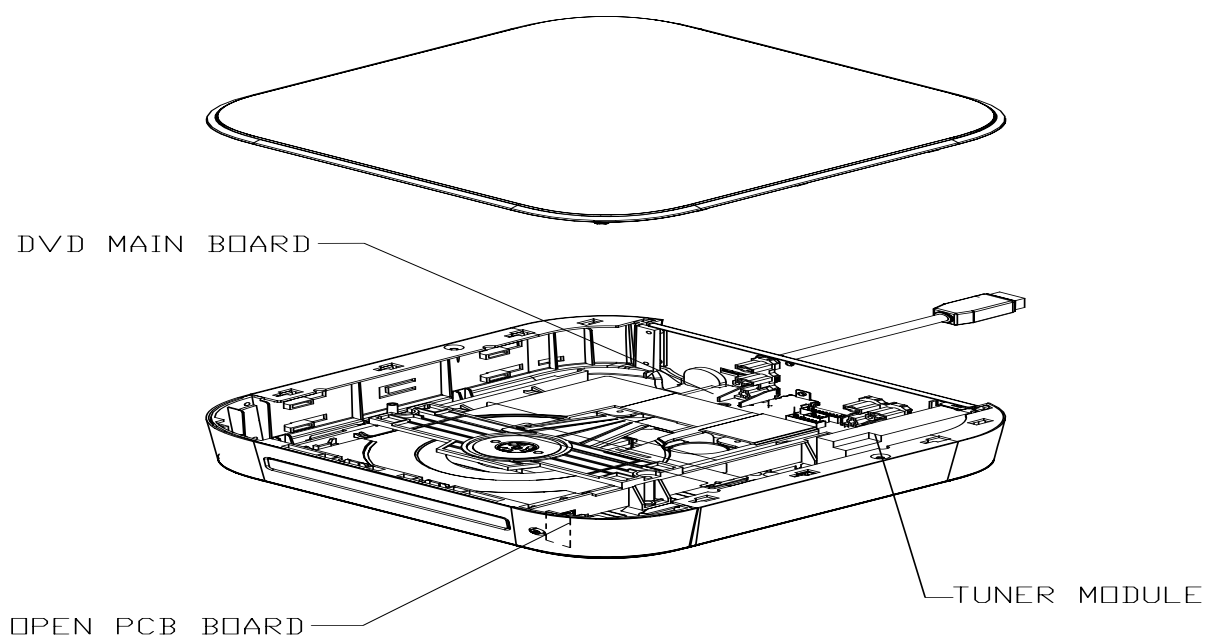

## NET SET LOCATION OF PCB BOARDS

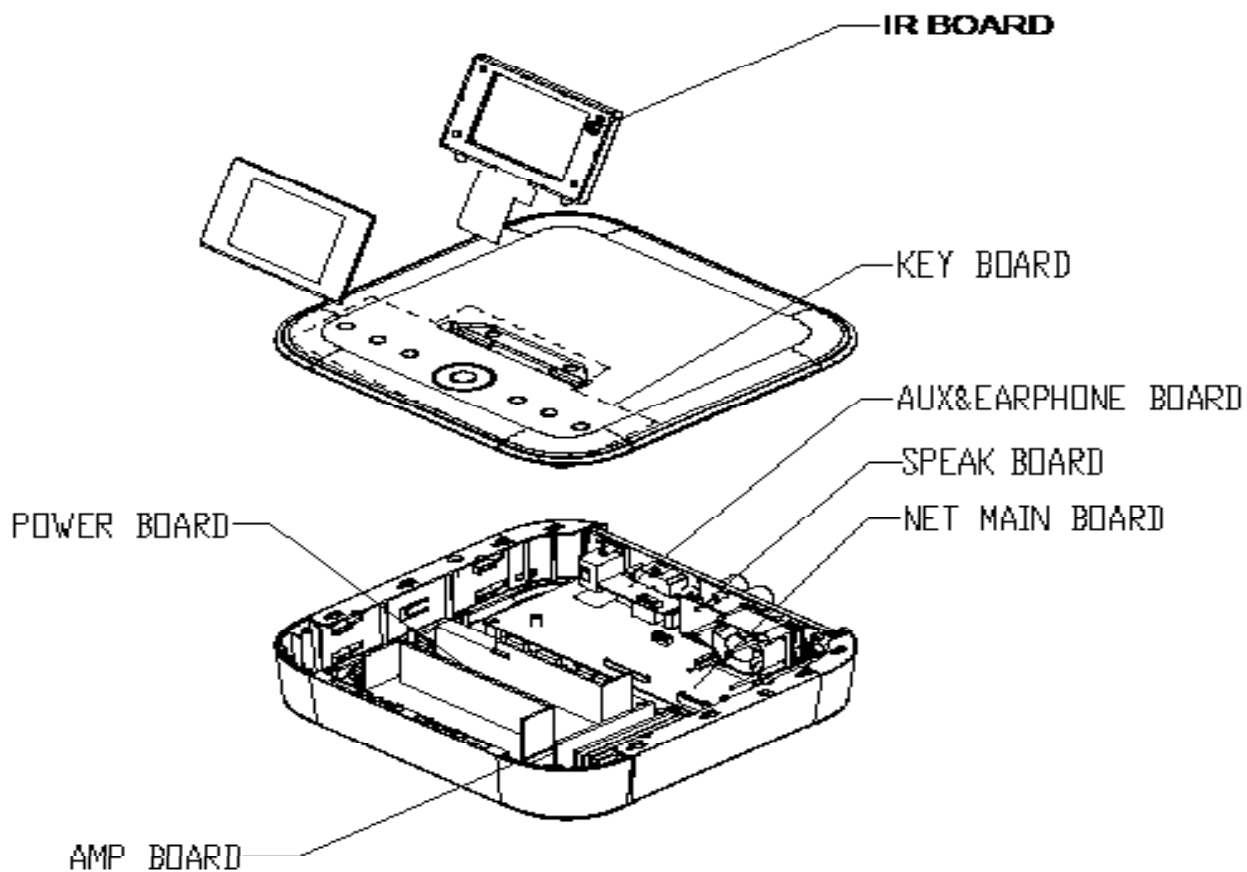

**VERSION VARIATION:**

Type/Version Features	MCD900	
	/12	/93
Output Power - 100W	X	X
Voltage (220V~240V)	X	X

**SERVICE SCENARIO MATRIX:**

Type/Version Board in used	MCD900	
	/12	/93
DVD Main Board	MLR	MLR/CLR
OP/CL PCB	MLR	CLR
NET Main Board	MLR	MLR/CLR
AMP Board	MLR	CLR
Key Board	MLR	CLR
IR Board	MLR	CLR
Speaker Jack PCB	MLR	CLR
Aux&Earphone Board	MLR	CLR
Power Board	MLR	CLR


Remark: 1) MLR=Module Level Repair

2) CLR=Component Level Repair

3) Due to Pos. No. U504 or U505 IC are BGA IC, if both is defective, Net Main Board should be repaired/replaced on Module Level.


## Measurement Setup

### Tuner FM

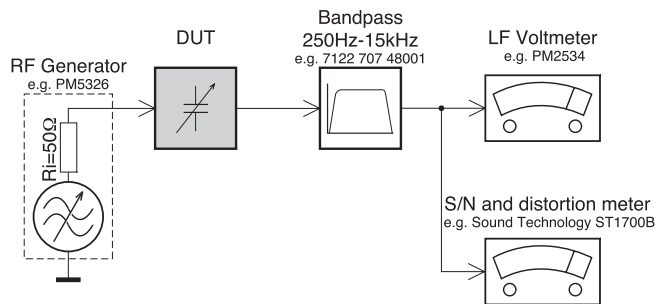

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


### Tuner AM (MW,LW)

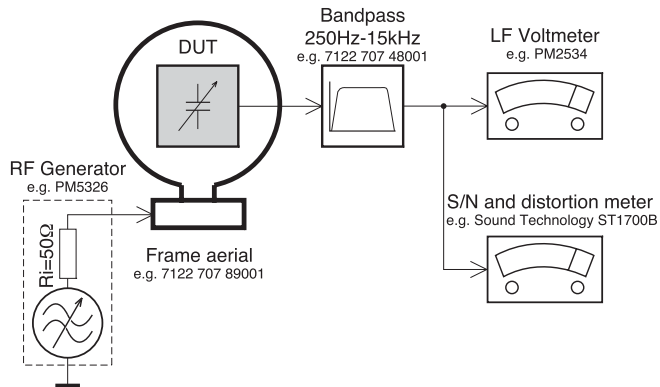

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.  
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


### CD

Use Audio Signal Disc SBC429 4822 397 30184  
(replaces test disc 3)

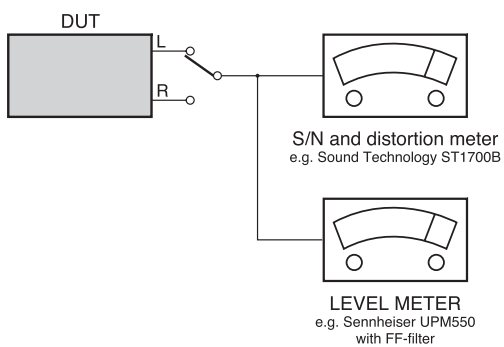

### Recorder

Use Universal Test Cassette **Cr02** SBC419 4822 397 30069  
or Universal Test Cassette **Fe** SBC420 4822 397 30071

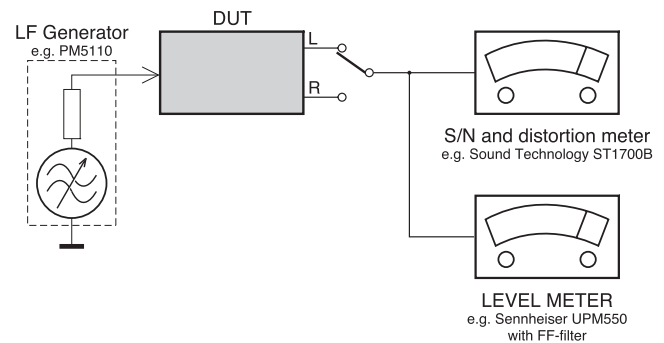

## SERVICE AIDS






### Service Tools:

Universal Torx driver holder .....	4822 395 91019
Torx bit T10 150mm .....	4822 395 50456
Torx driver set T6-T20 .....	4822 395 50145
Torx driver T10 extended .....	4822 395 50423

### Compact Disc:


SBC426/426A Test disc 5 + 5A .....	4822 397 30096
SBC442 Audio Burn-in test disc 1kHz .....	4822 397 30155
SBC429 Audio Signals disc .....	4822 397 30184
Dolby Pro-logic Test Disc .....	4822 395 10216

## HANDLING CHIP COMPONENTS

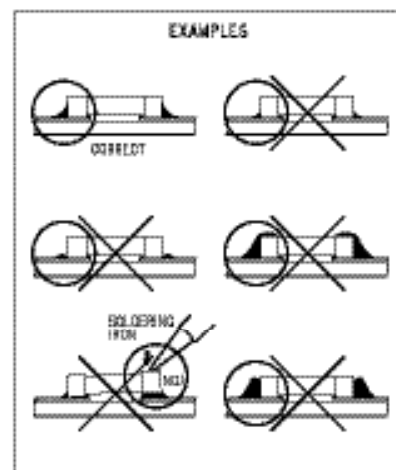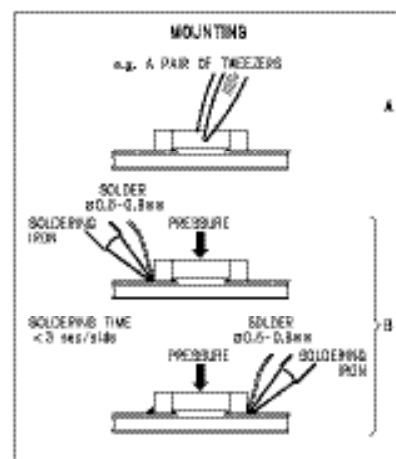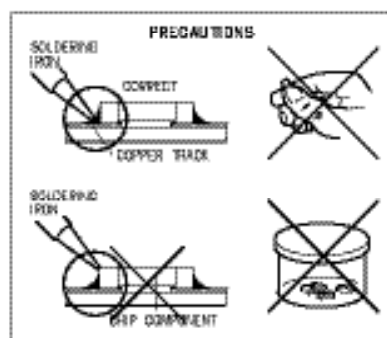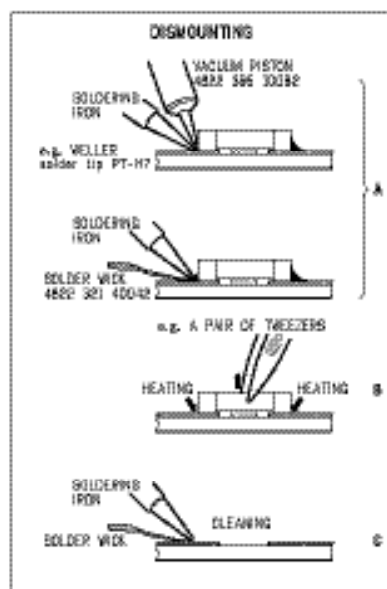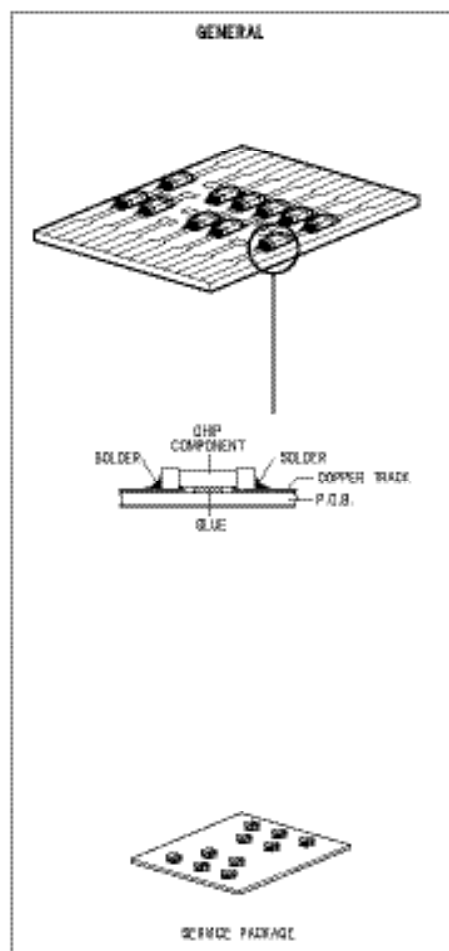

## Rescue Mode

The MCI900/MCD900 will enter the rescue mode in case the user has unplugged the power during programming of the FLASH.  
To get the unit back to working, one has to connect the MCI900/MCD900 unit via a LAN-cable (CAT5) to the internet.  
To get best results, connect the LAN-cable directly to the one of the HUB-outputs of an access point (which has a DHCP enabled).  
The following screens will be seen during recovery ...

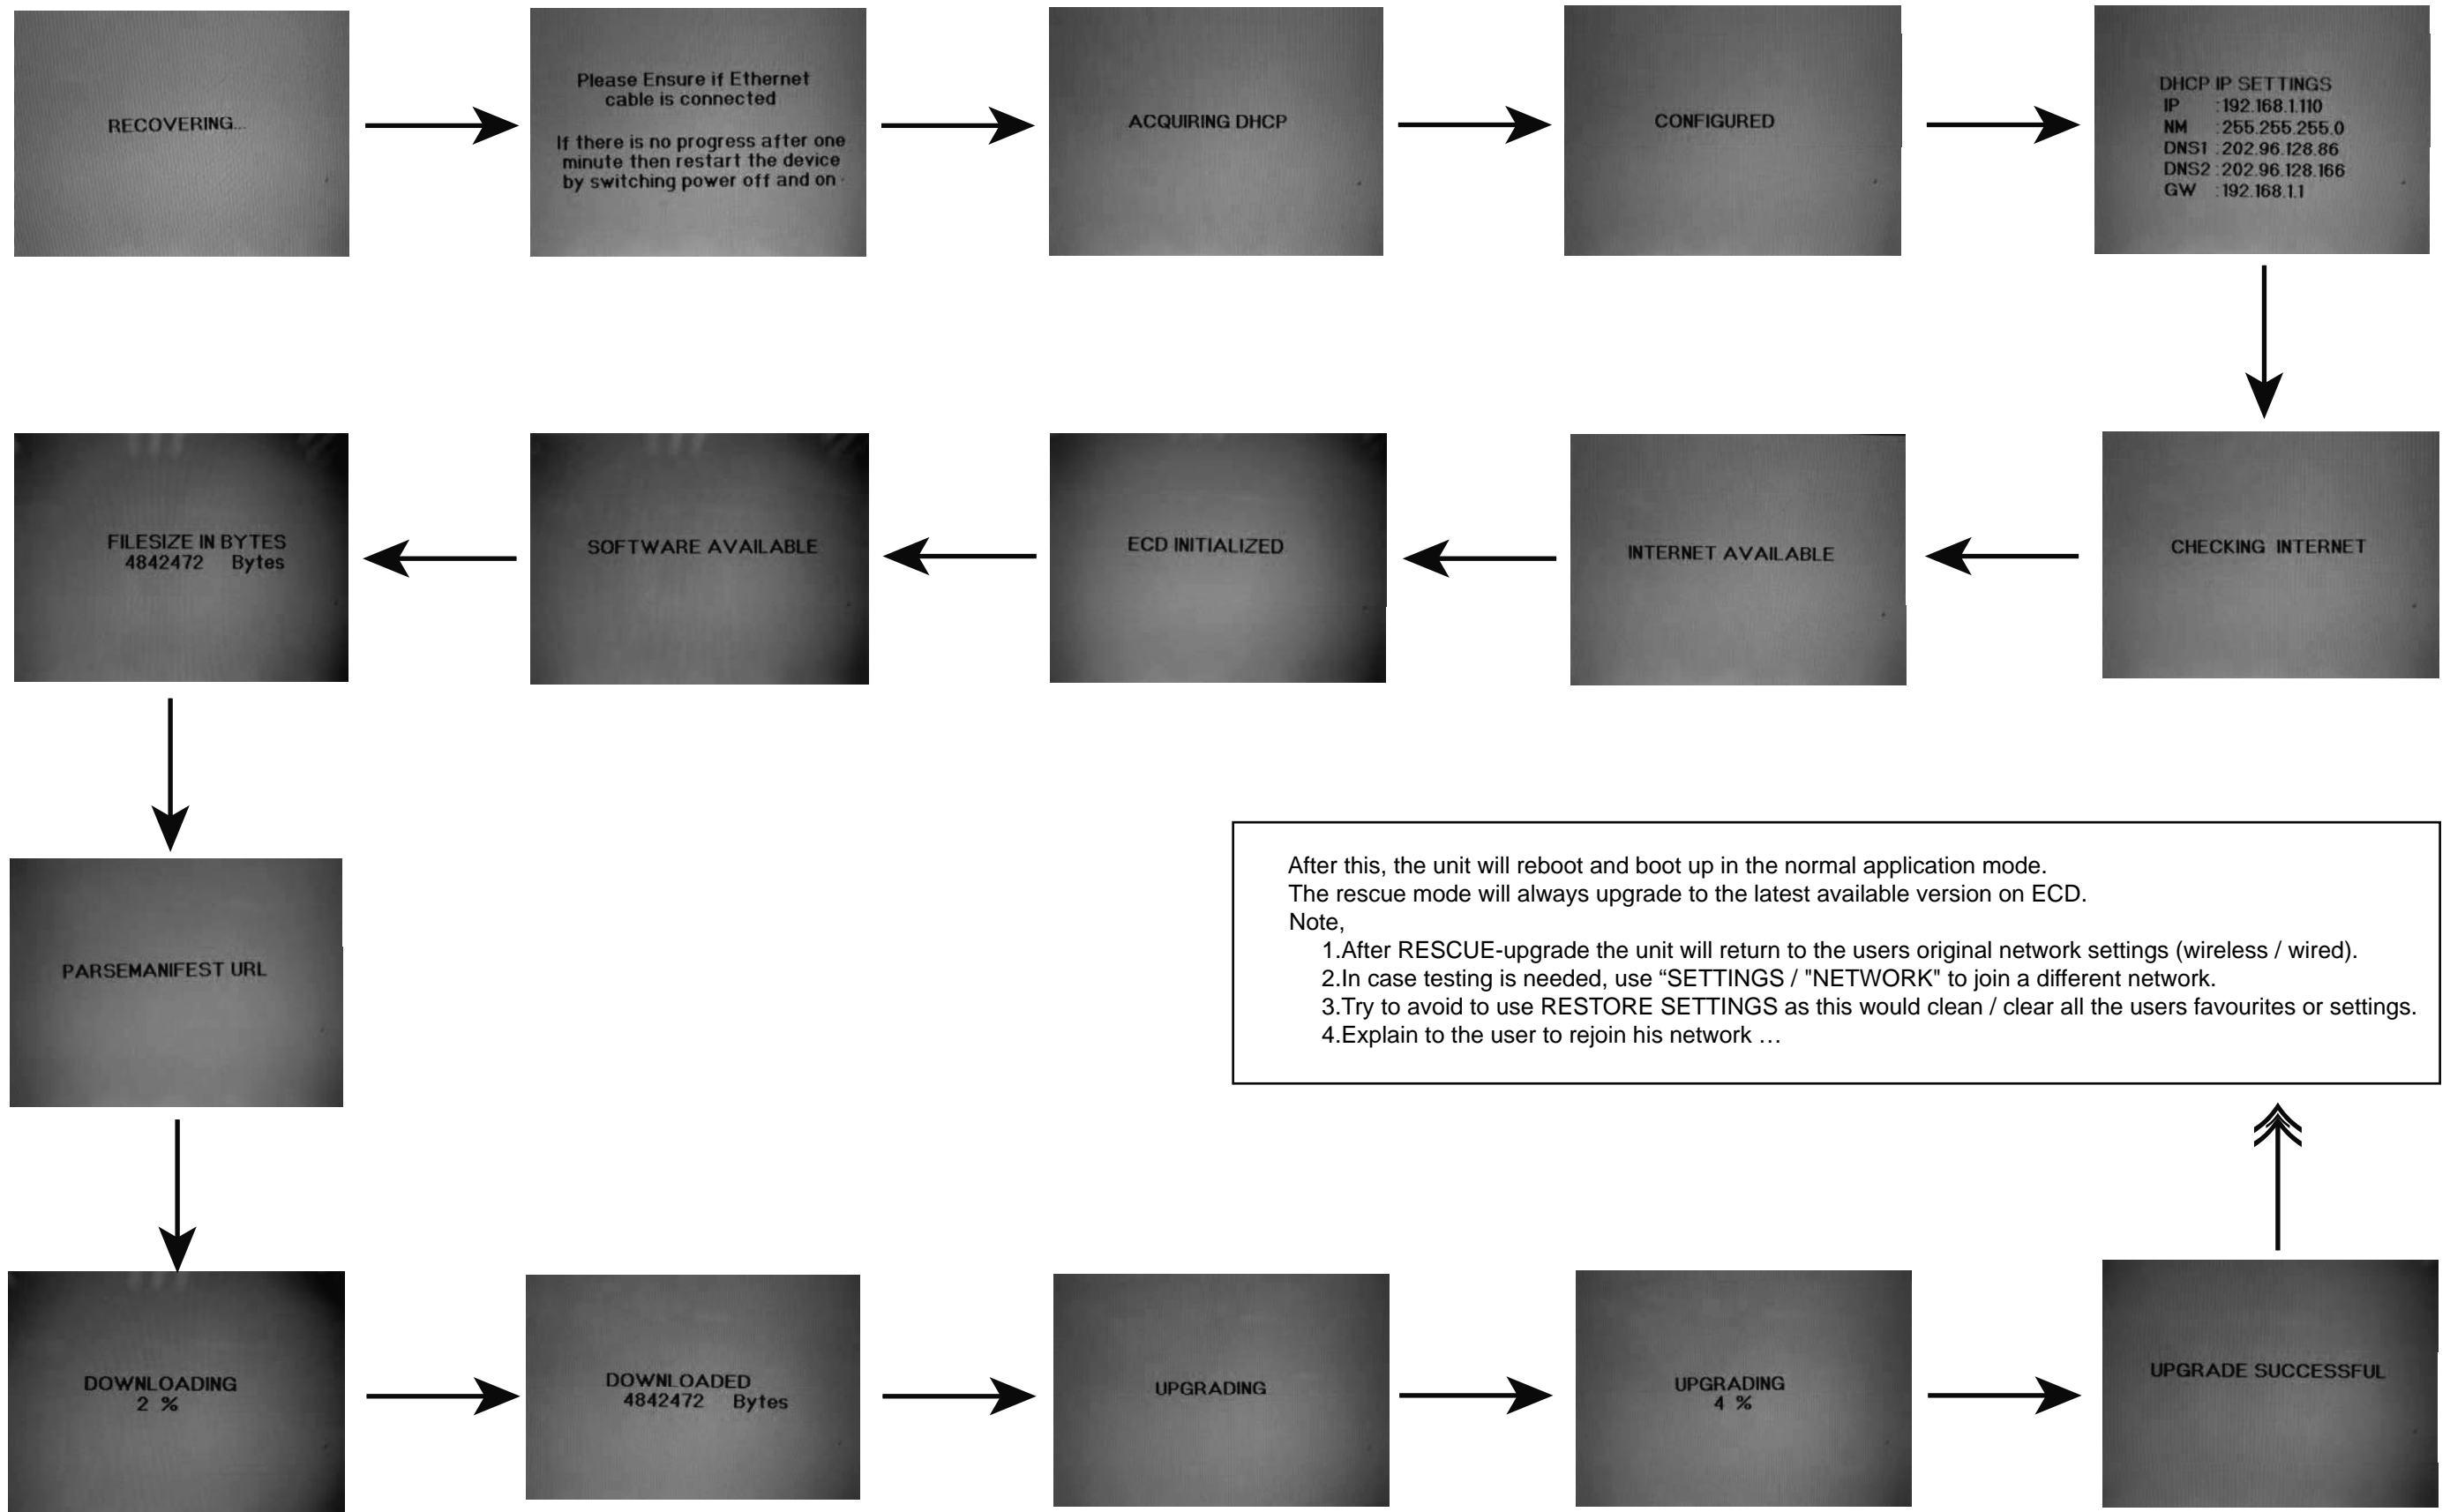



System , Region Code , etc. Setting Prochure

1)System Reset

- a) In stop mode, press "settings" button on R/C, TV will show setup menu.
- b) Select the menu using the Vand Bon on R/C.
- c) Go Preference Setup page, then "default"→ "reset".

2)Region Code Change

- a) In open mode, press "9" "9" "9" "9" on R/C, then input desired number to change region code:

1	USA
2	EU
3	AP
4	Australia, NZ, Latam
5	Russia, India
6	China

3)Version Control Change

- a) In open/full stop model, press "x" "1" "5" "9" on R/C.
- b) press "ok" button to confirm.
- c) TV will show message as below:

Model	MCD900 TR
File Name	MCD900 BIN
Version	01.10.01.09
RISC	09.36.01.20
Servo	62.06.00.00
Region Code	2
HDCP	Pass
OK	

4)Password Change

- a) In open/full stop model, press "settings" button on R/C, TV show setup menu.
- b) Select the menu using the V and B on R/C.
- c) Go Preference Setup page select "password" to change "136900" is default password supplied.

5)Check on the Sofeware Version


- a) In open mode, press "settings" button on R/C, TV will show setup menu.
- b) Select the menu using the Vand Bon on R/C.
- c) Go Preference Setup page, then " Version Info".
- d) TV will show the version on screen.

6)Upgrading new sofeware

- a) Copy "software files" into CD.
- b) Insert CD.
- c) Press "DISC" button on R/C.
- d) LCD will show:  
"LOADING"
- e) TV will show:




- f) Press "PLAY", TV will show:

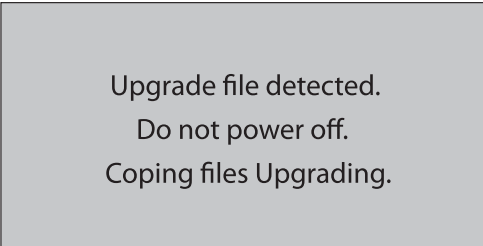


CAUTION !

This information is confidential and may not be distributed. Only a qualified service person should reprogram the Region Code.



## MAIN UNIT REPAIR CHART 1/3

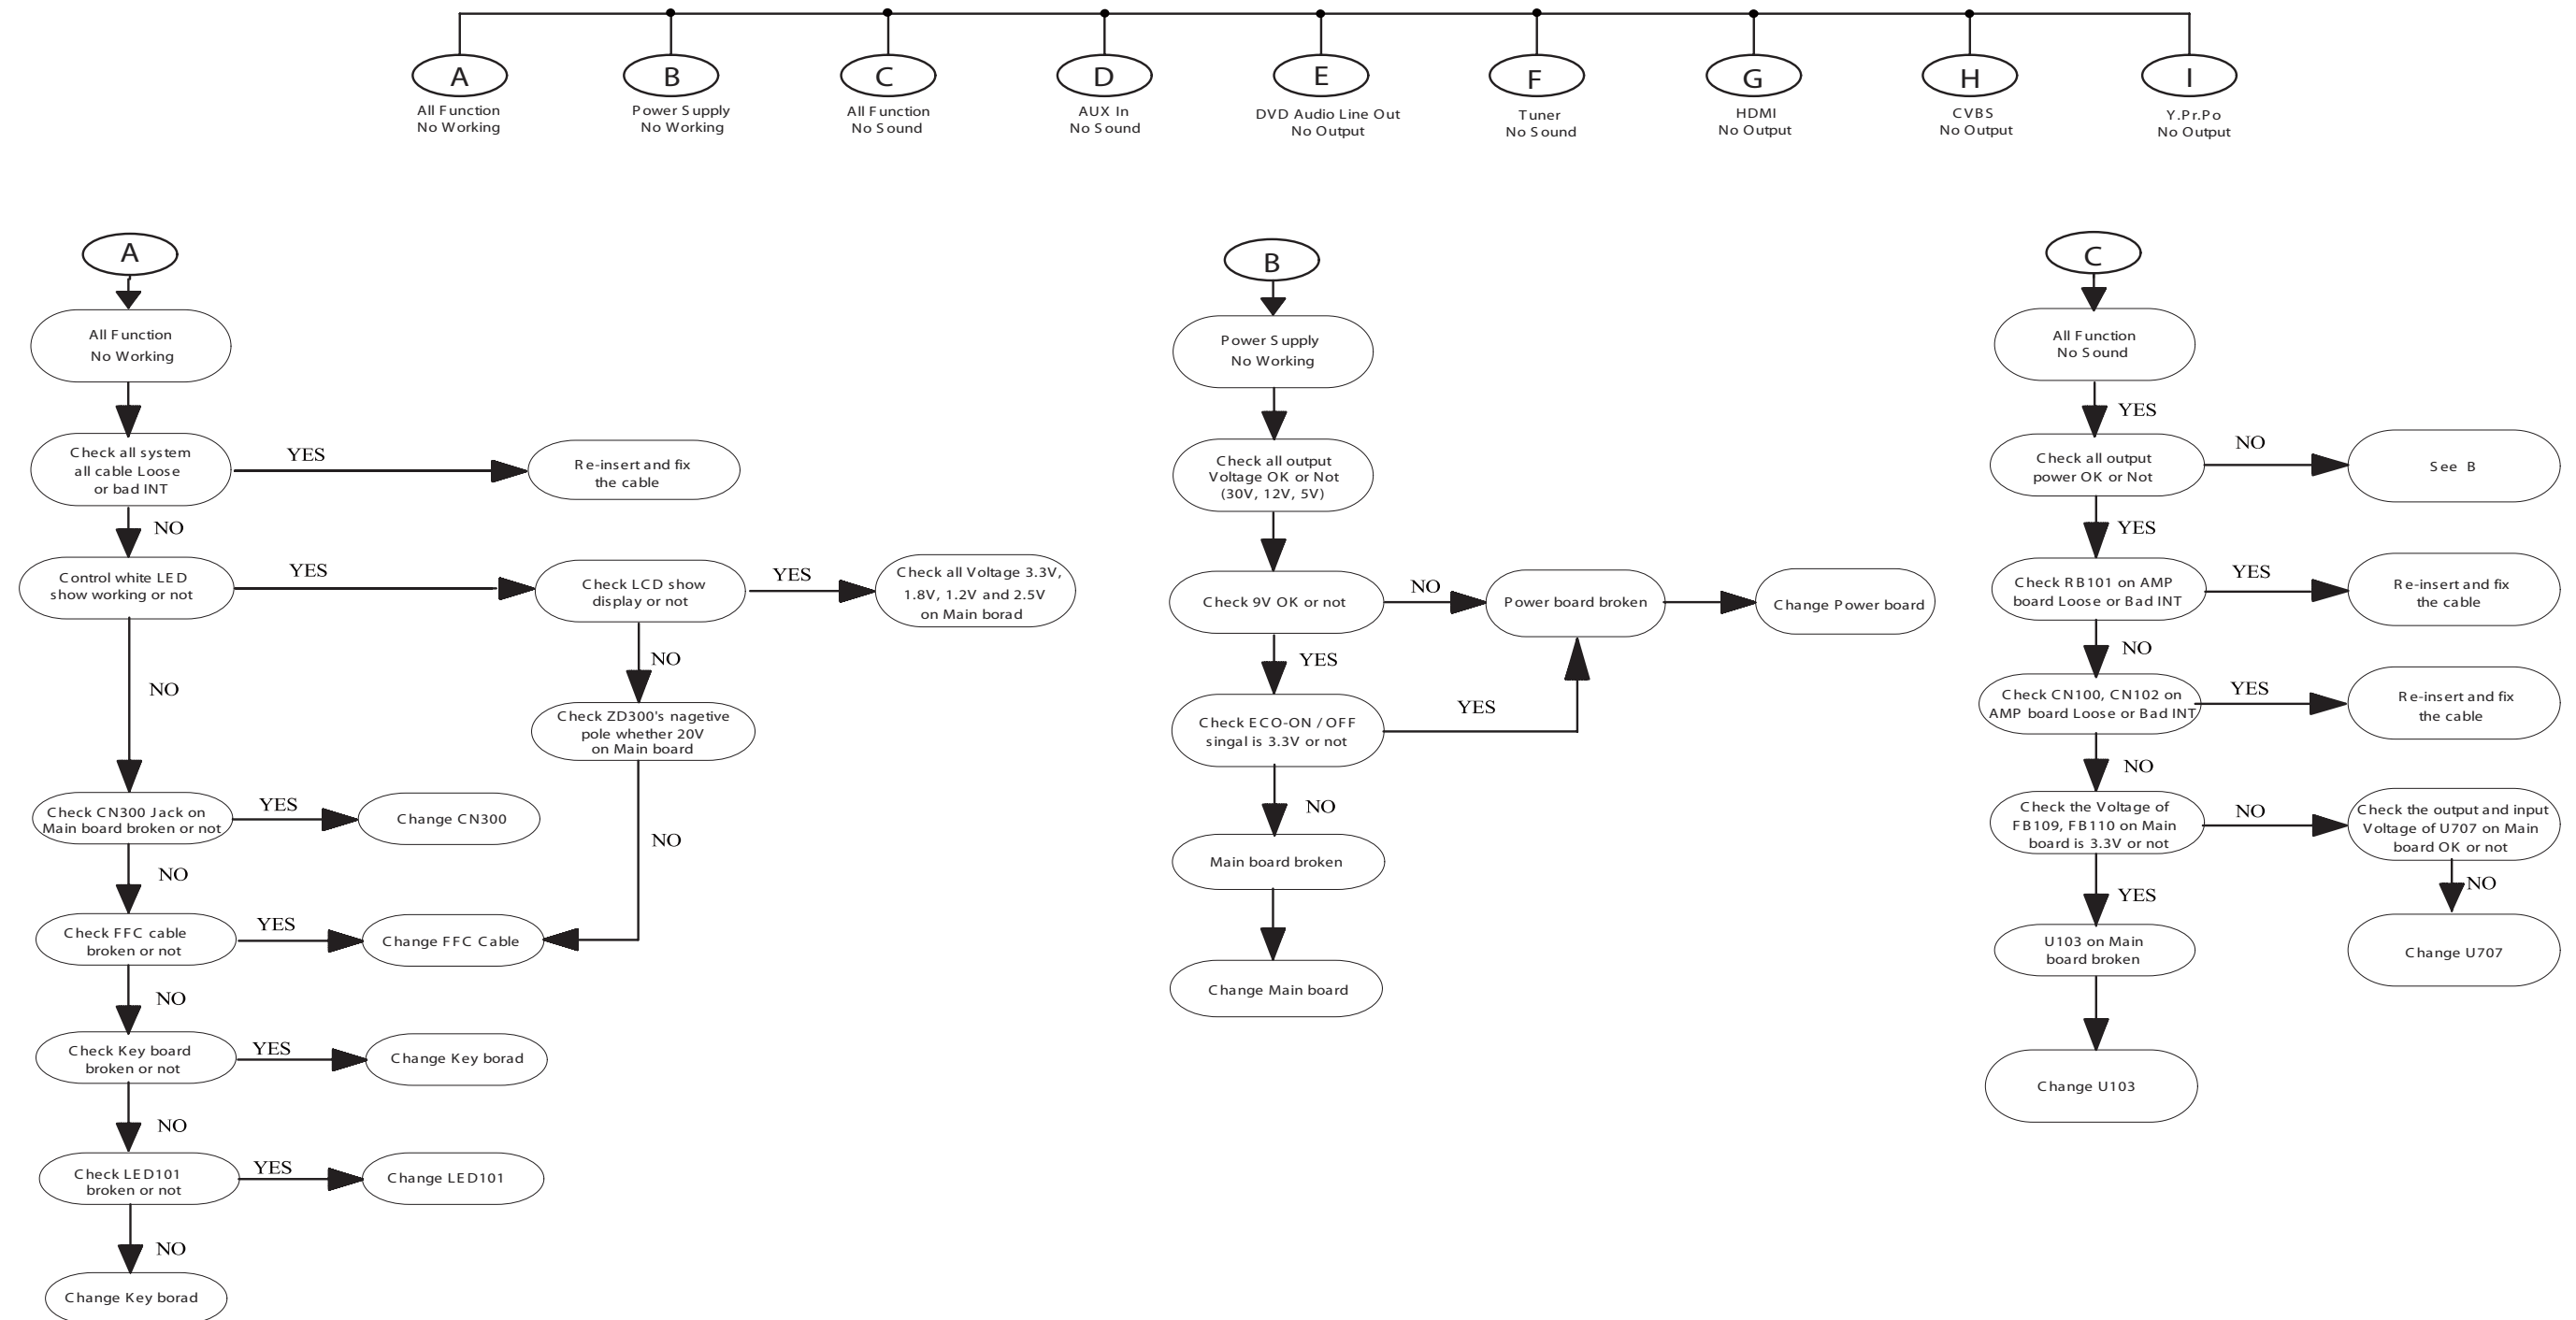

MAIN UNIT REPAIR CHART 2/3

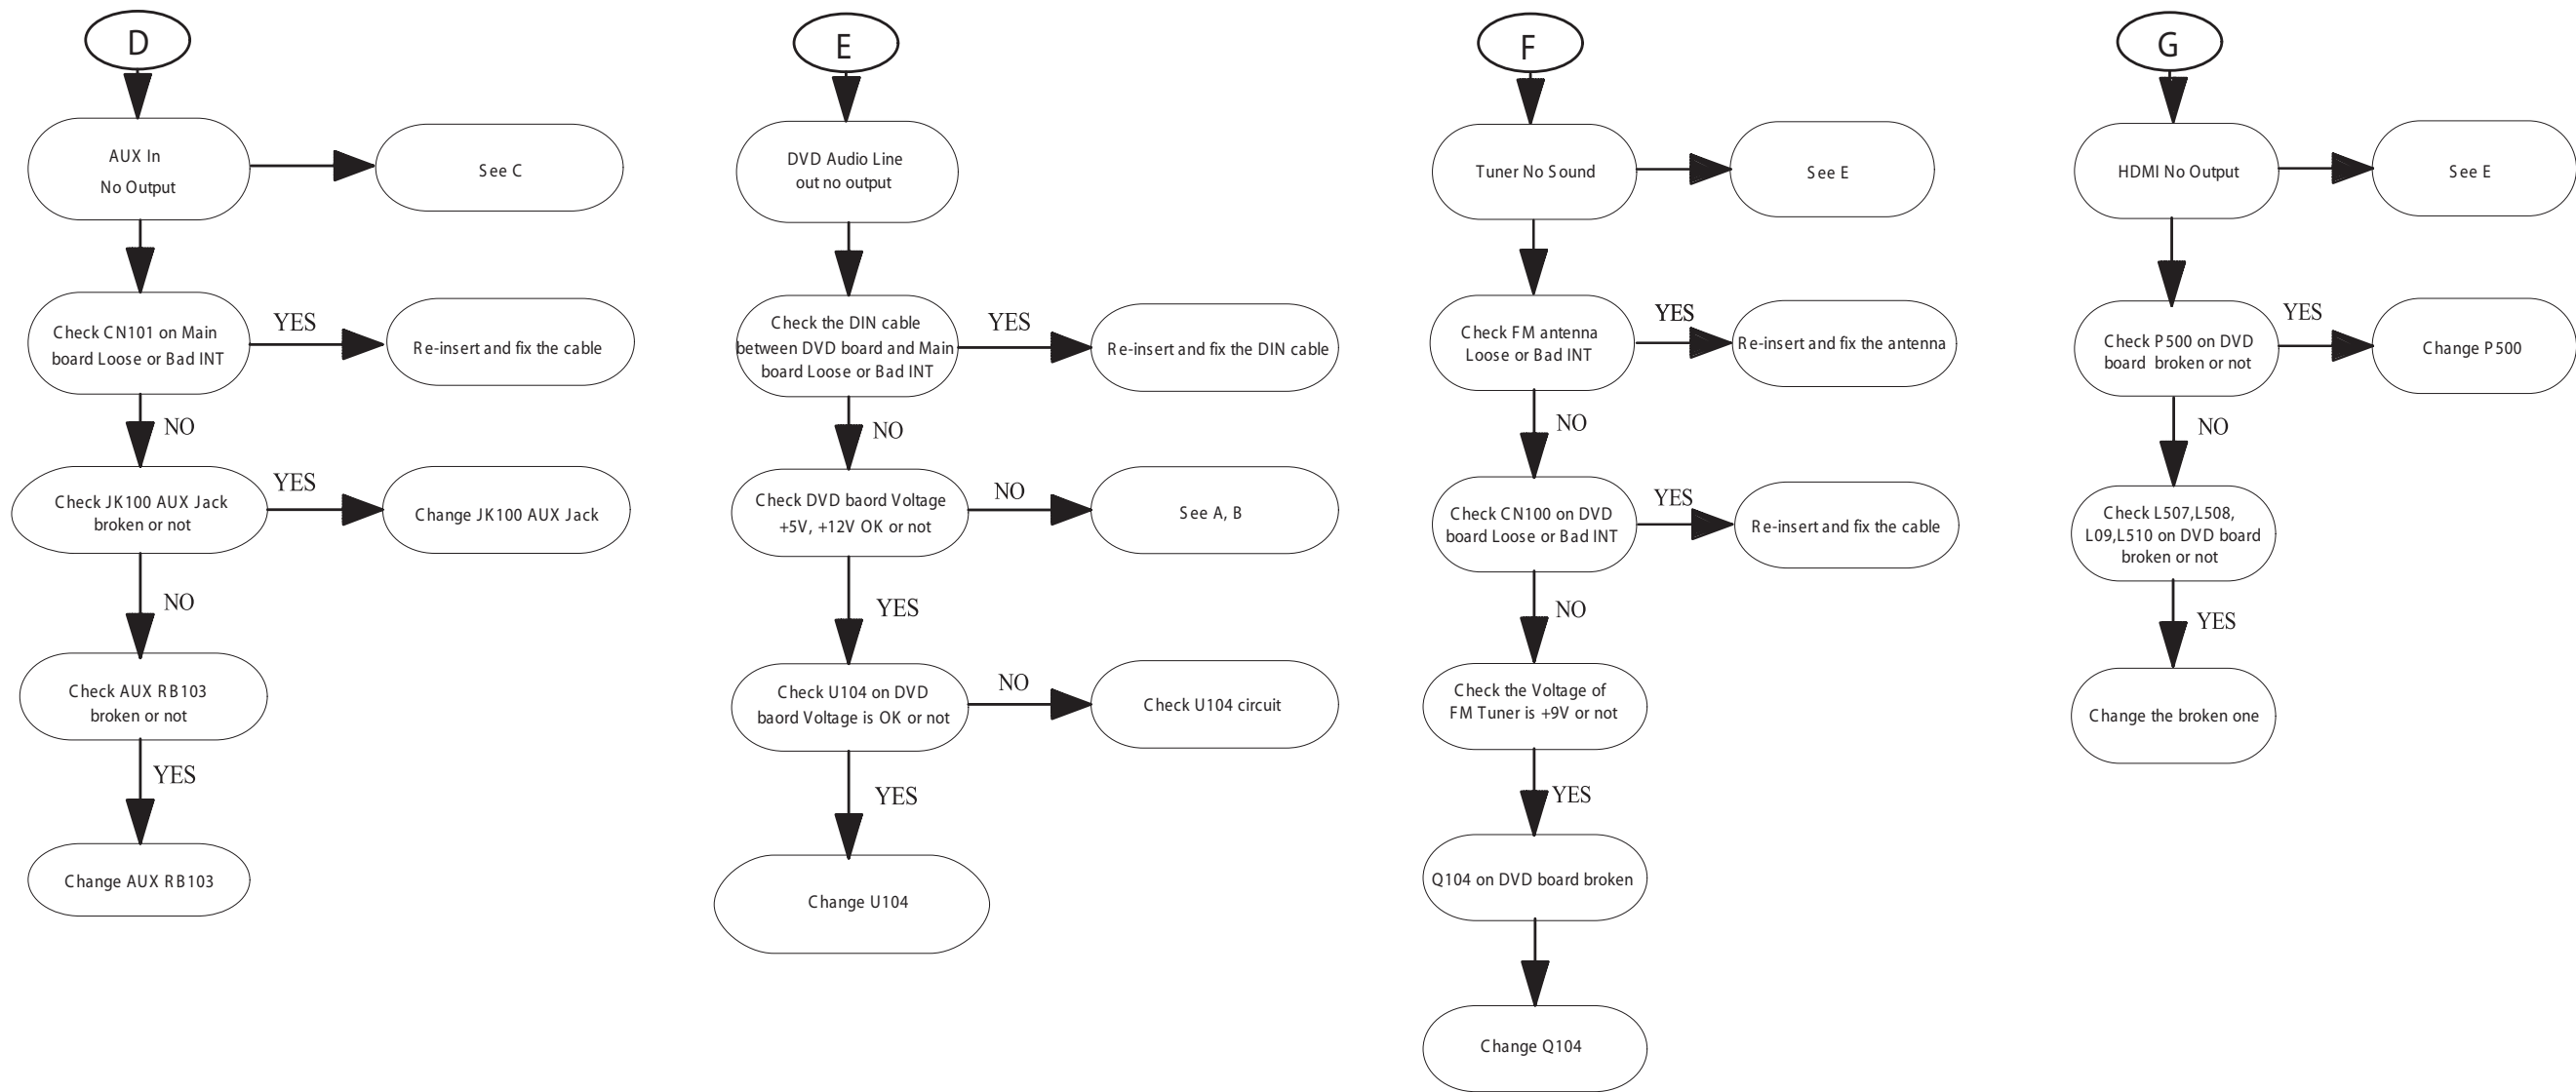

## MAIN UNIT REPAIR CHART 3/3

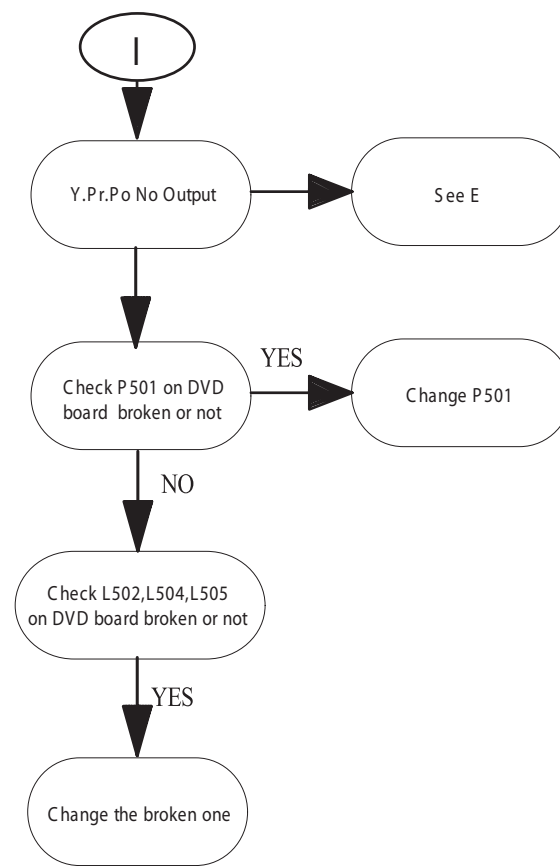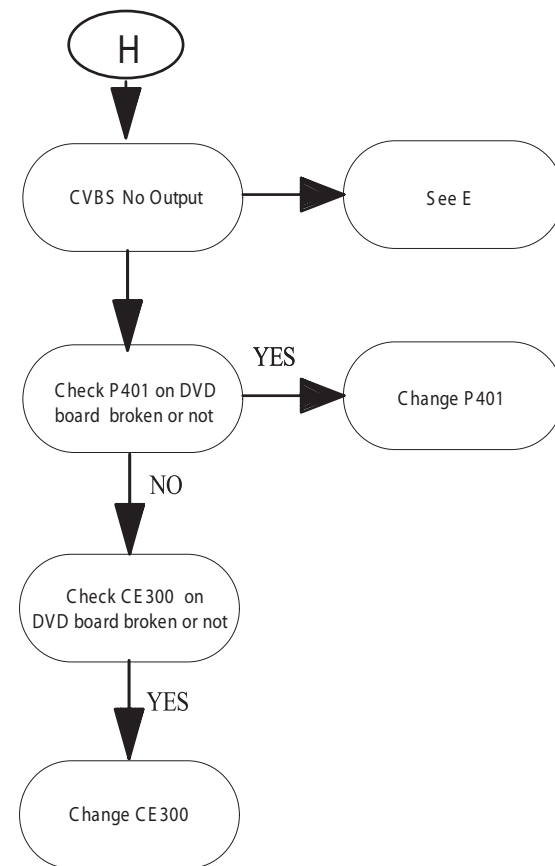

## DISASSEMBLY INSTRUCTIONS

### 3.1 Dismantling of Main Unit

Before dismantling Main Unit, press Button "B1" to pull Din Cable out as shown in figure 1.



Figure 1

### Dismantling of Key Board

- 1) Loosen 3 screws "A" (S4 x 2, S7 x 1) as shown in figure 2, and push the top cover of Main Unit out as shown in figure 3.
- 2) Loosen 8 screws "B" (S3 x 8) on the top cover of Main Unit to detach Key Board as shown in figure 4.



Figure 2

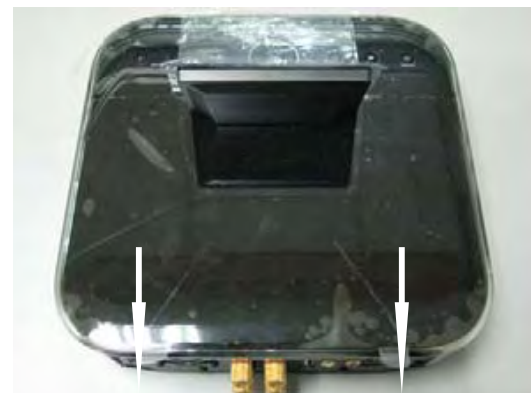


Figure 3

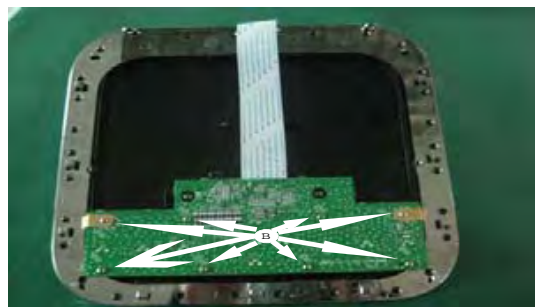


Figure 4

### Dismantling of Sensor Board

- 1) Loosen 4 screw "C" (S1 x 4) on the top cover as shown in figure 5.



Figure 5

### Dismantling of SPK and AUX Board

- 1) Loosen 4 screw "D" (S5 x 1, S6 x 3) to detach the back panel as shown in figure 6.
- 2) Loosen 2 screw "E" (S6 x 2) to detach SPK Board as shown in figure 7.
- 3) Loosen 2 screw "F" (S6 x 2) to detach AUX Board as shown in figure 8.



Figure 6



Figure 7



Figure 8



Dismantling of Net Main Board

- 1) Loosen 2 screws "G" (S1 x 2) to detach Net Main Board shown in figure 9.

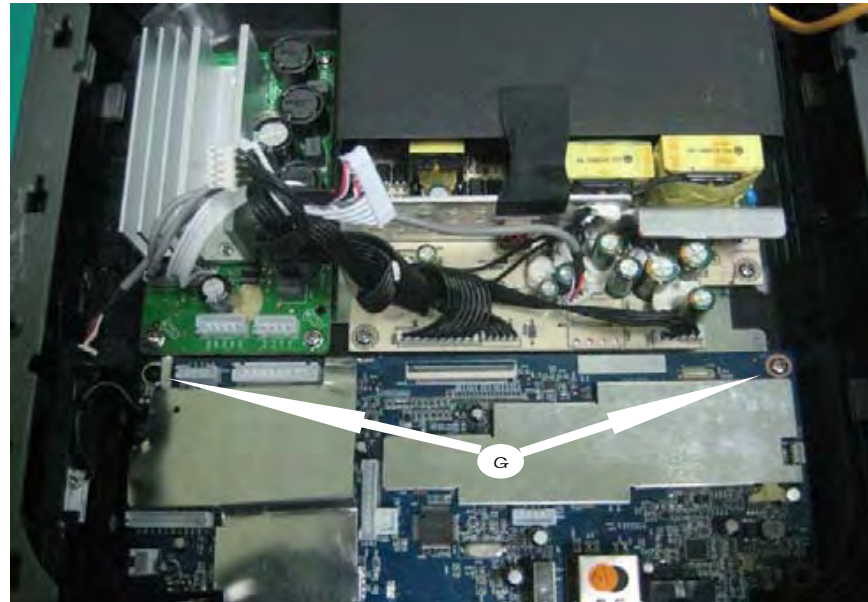


Figure 9

Dismantling of AMP Board

- 1) Loosen 4 screws "H" (S1 x 4) to detach AMP Board as shown in figure 10.

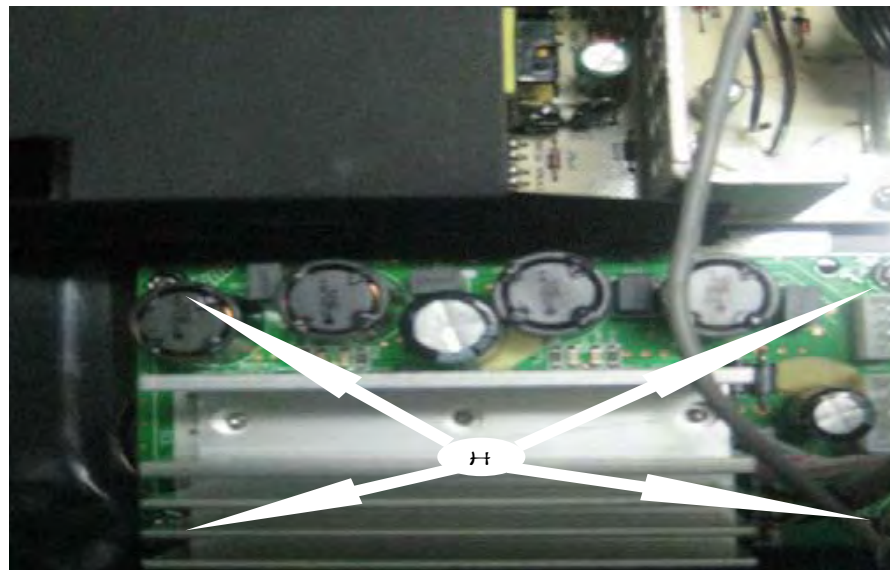


Figure 10

Dismantling of Power Board

- 1) Loosen 4 screws "I" (S1 x 4) to detach Power Board as shown in figure 11.

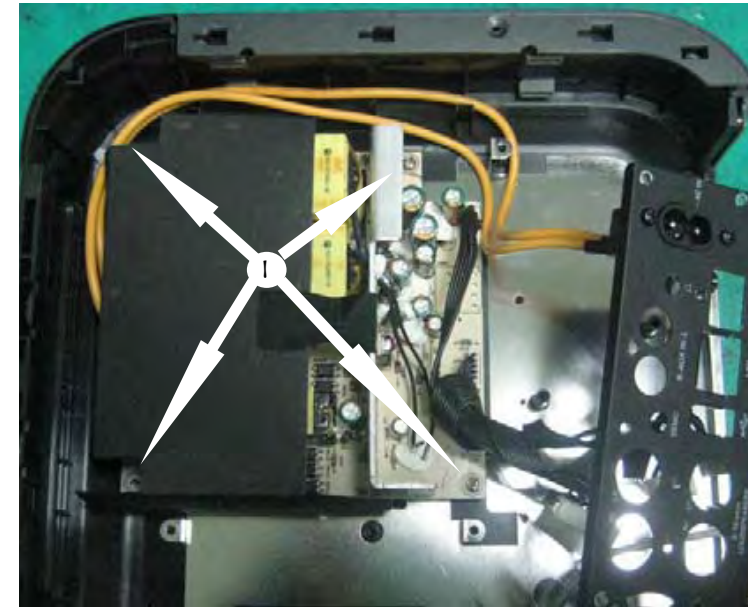


Figure 11

### 3.2 Dismantling of DVD Unit

#### Dismantling of DVD Main Board

- 1) Loosen 3 screws "K" (S4 x 1, S5 x 2) as shown in figure 12, and push the top cover of DVD Unit out as shown in figure 13.
- 2) Loosen 4 screws "L" (S1 x 2, S2 x 2) to detach DVD loader as shown in figure 14.
- 3) Loosen 7 screws "M" (S6 x 1, S7 x 5, S8 x 1) to detach the back panel of DVD Unit as shown in figure 15.
- 4) Loosen 2 screws "N" (S2 x 2) to detach DVD Main Board as shown in figure 16.

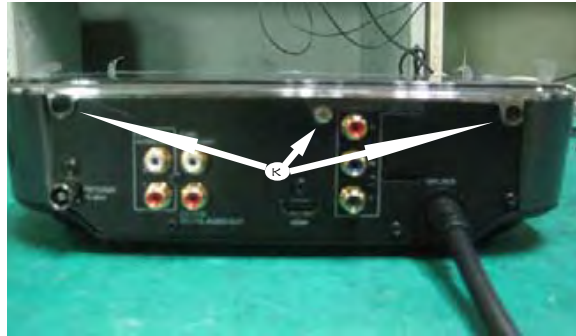


Figure 12



Figure 13

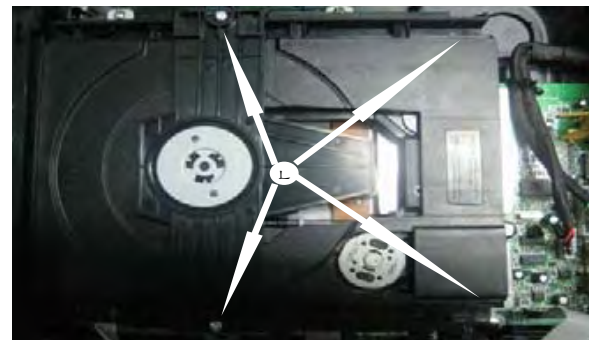


Figure 14



Figure 15



Figure 16

#### Dismantling of Open Board

- 1) Push button "B2" in to detach Open Board as shown in figure 21.


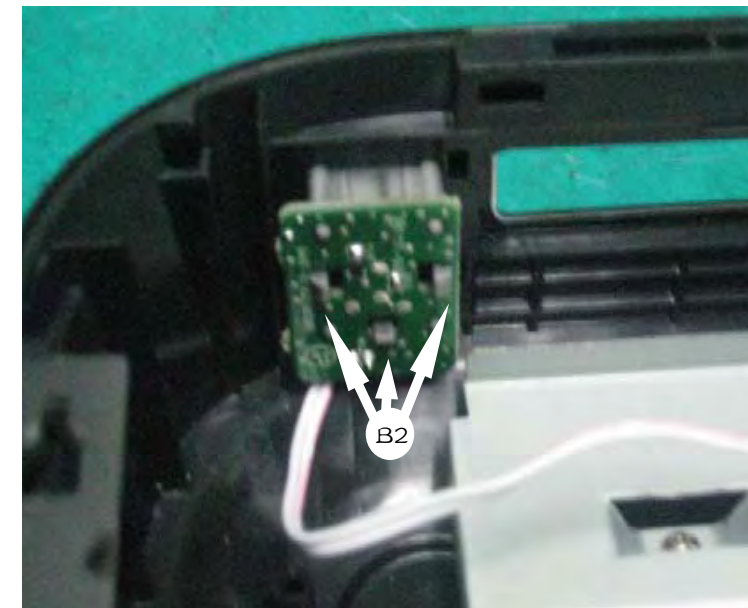


Figure 21




Note: Refer to the Wiring Diagram for the correct cable connection between boards.

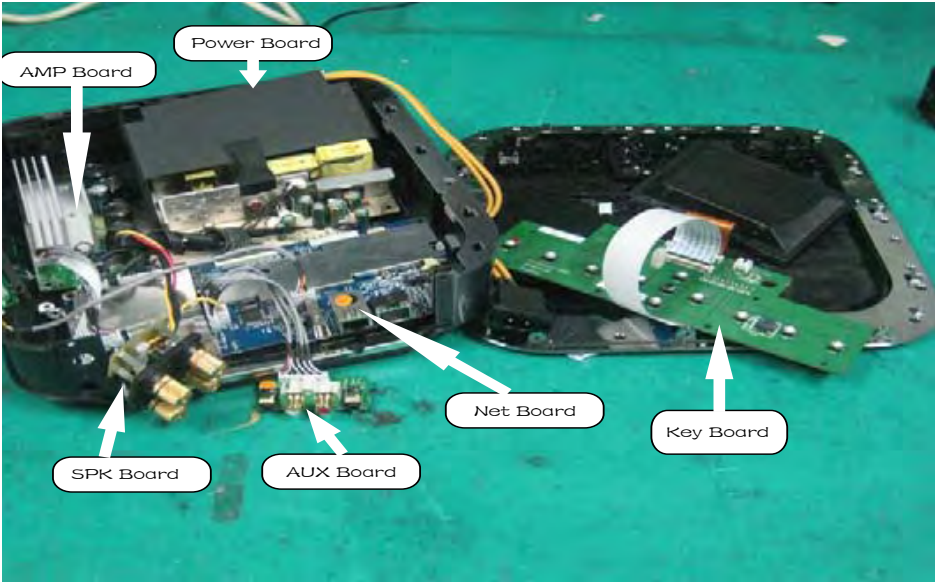

Service A

Service Position 1  
AMP Board, Power Board, SPK Board, AUX Board, Net Board, Key Board

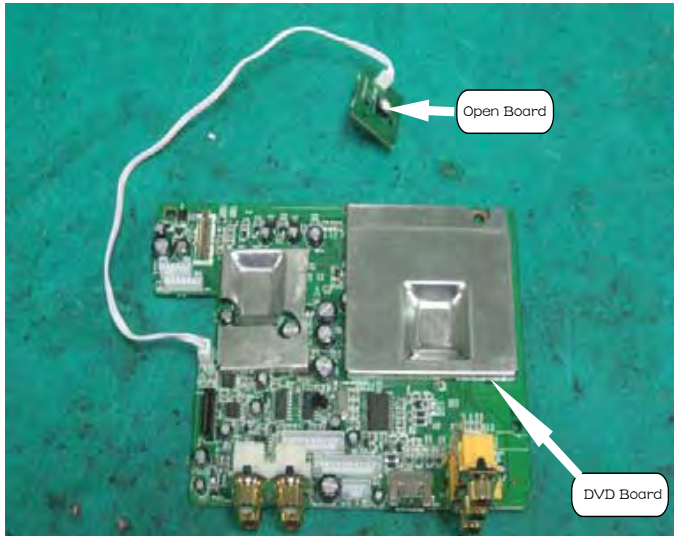

Service B


Service Position 2  
DVD Board, Open Board

Note: In some service positions the components or copper patterns of one board may risk touching its neighbouring pc boards or metallic parts. To prevent such short-circuit use a piece of hard paper or other insulating material between them.

5 - 1




SET WIRING DIAGRAM

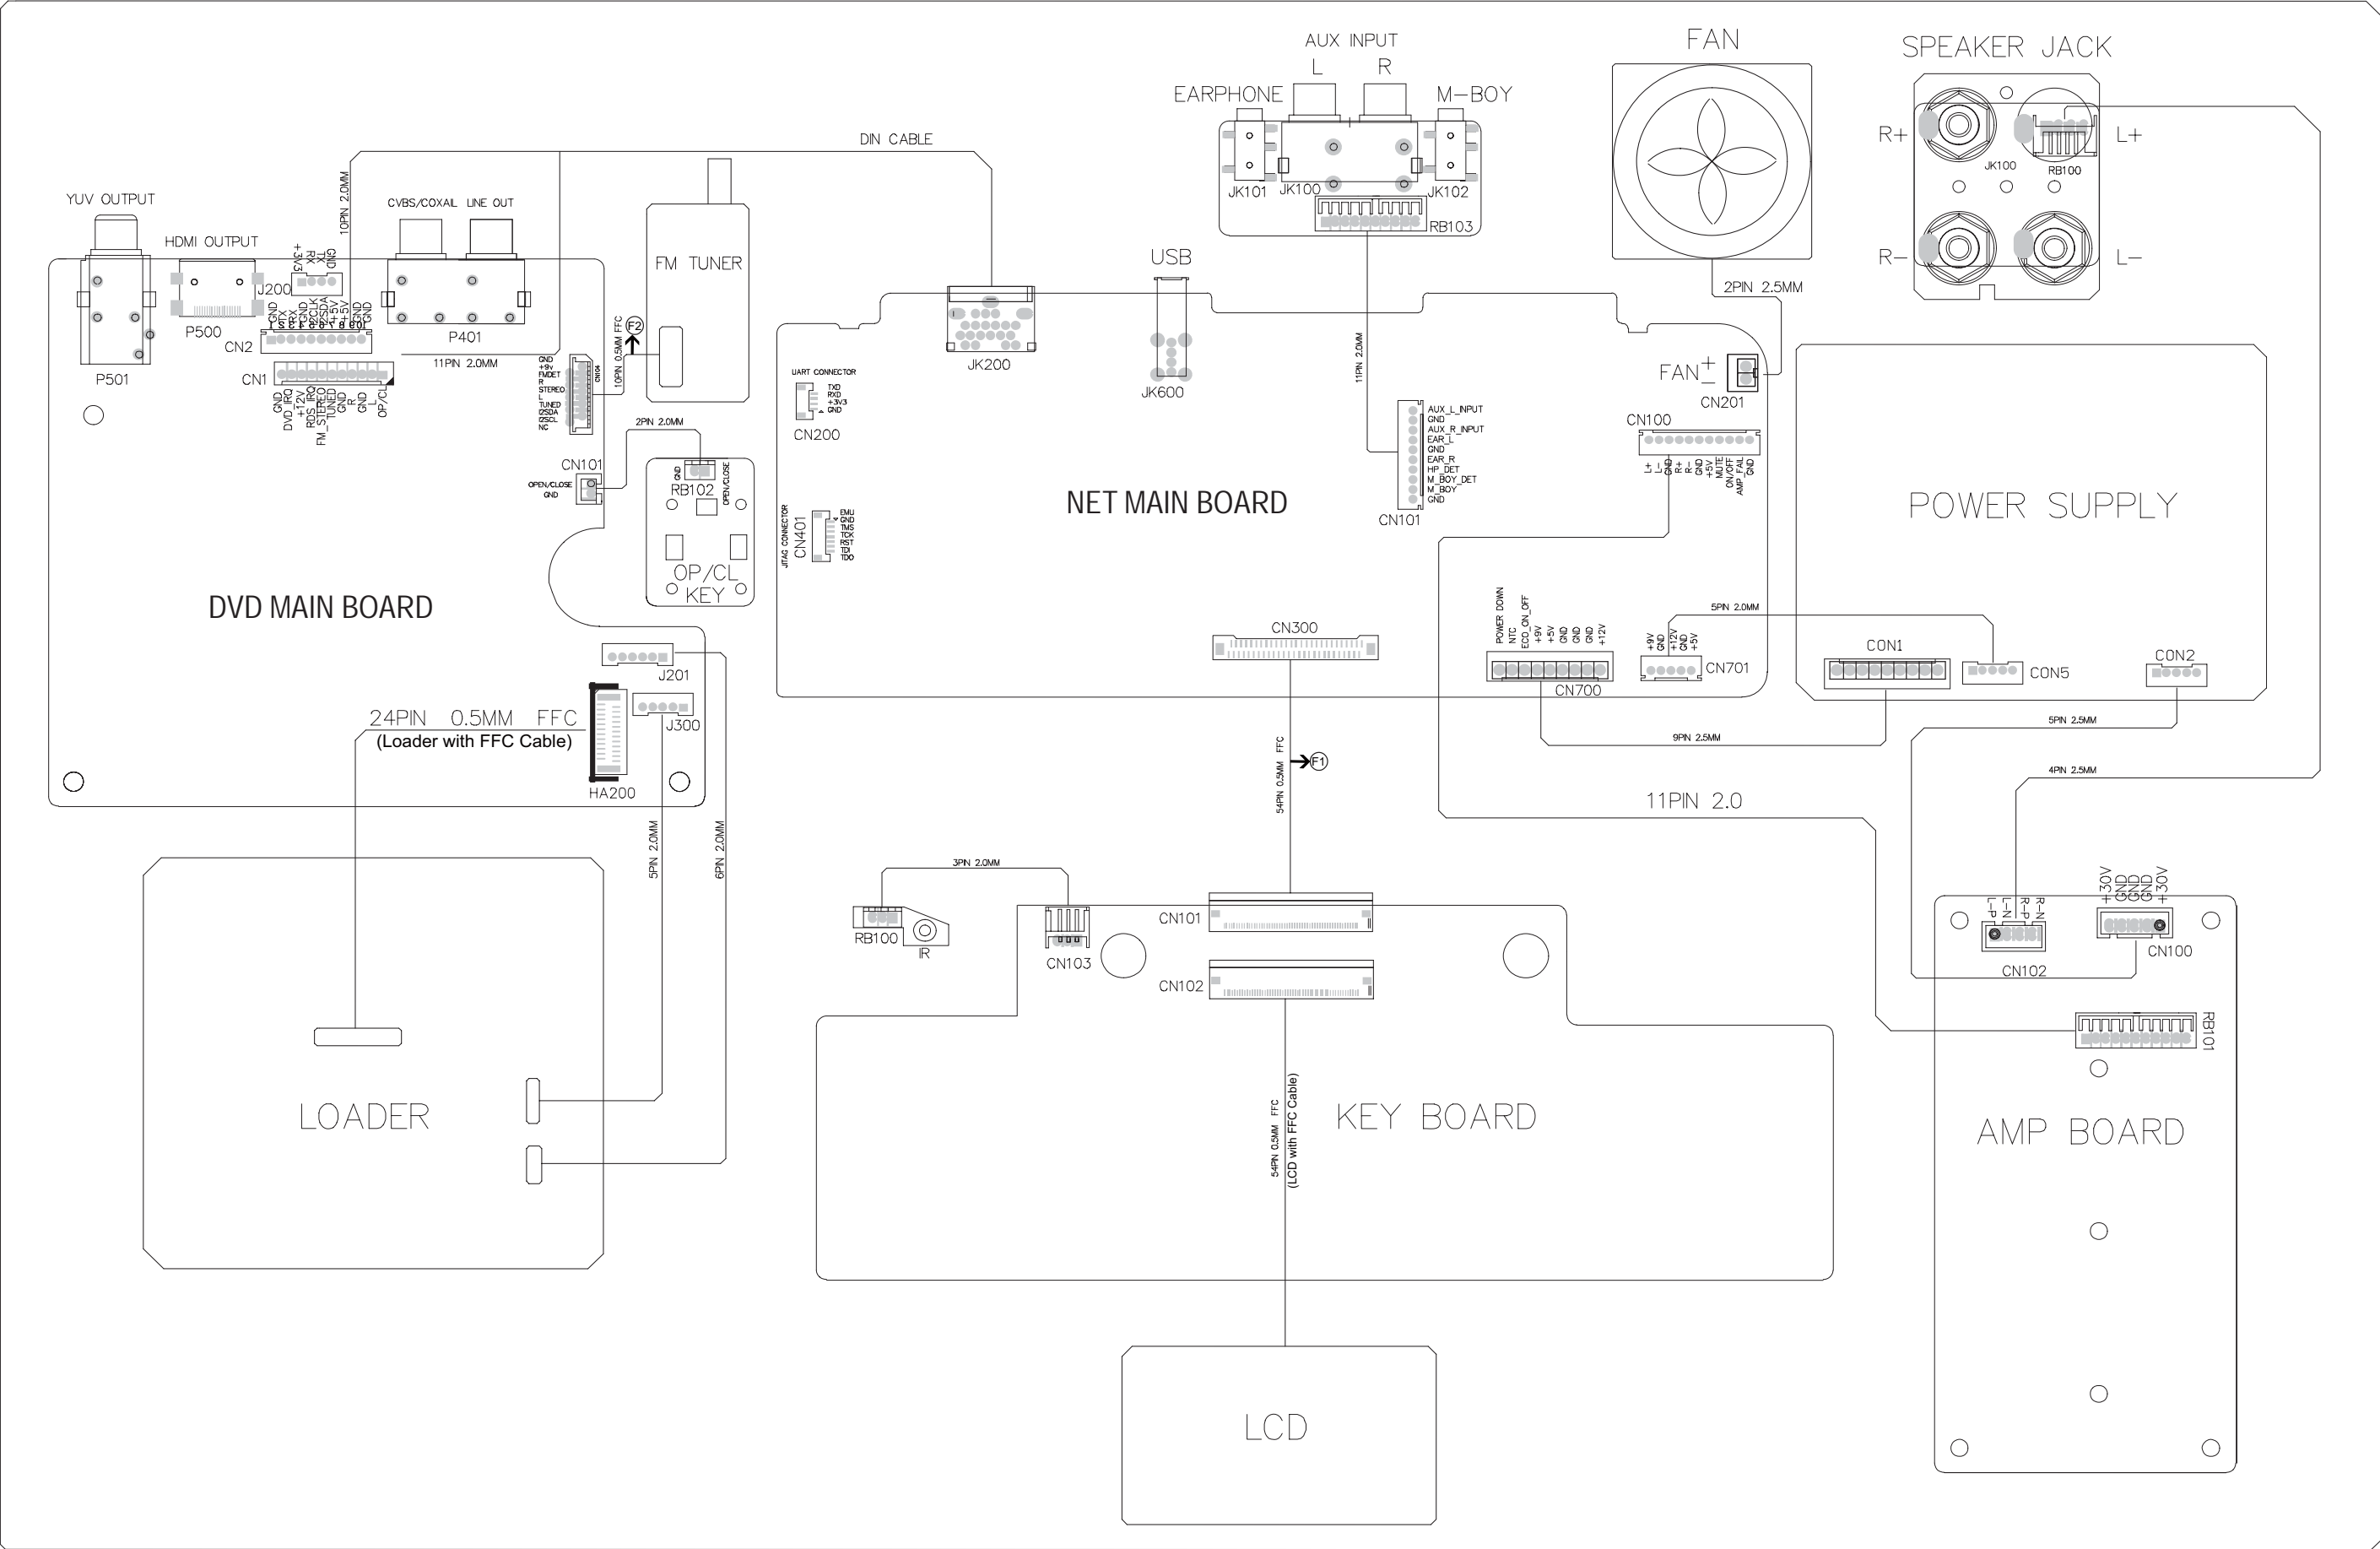

INTERNAL IC DIAGRAM -MT1389M


DVD Main Board

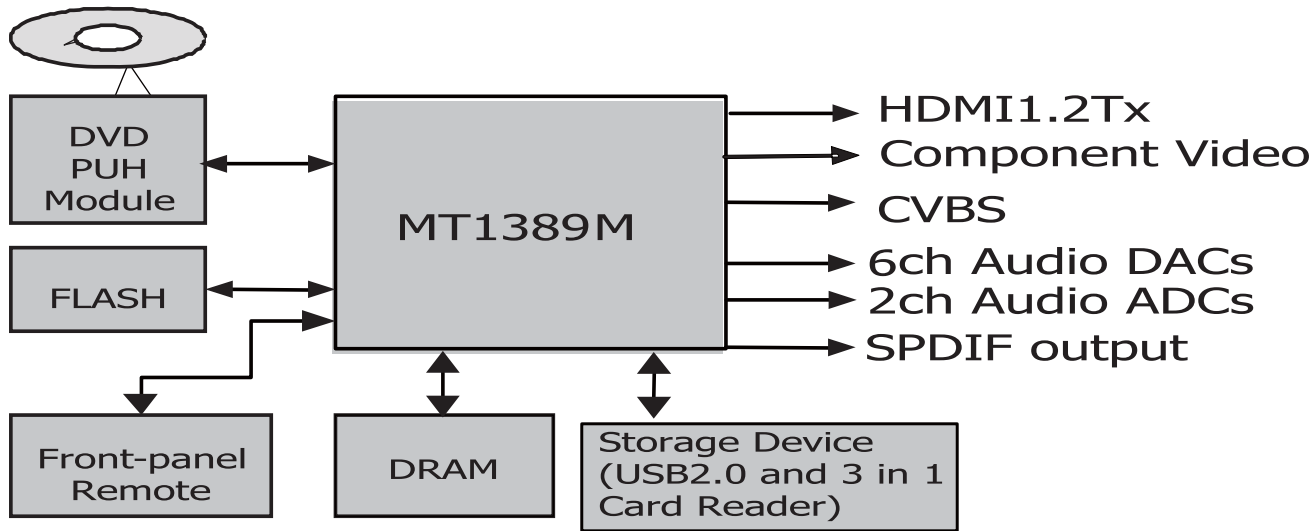

DVD Player System Diagram


TABLE OF CONTENTS

Internal IC Diagram .....	6-1
Circuit Diagram.....	6-2
PCB Layout Top View .....	6-3
PCB Layout Bottom View.....	6-4

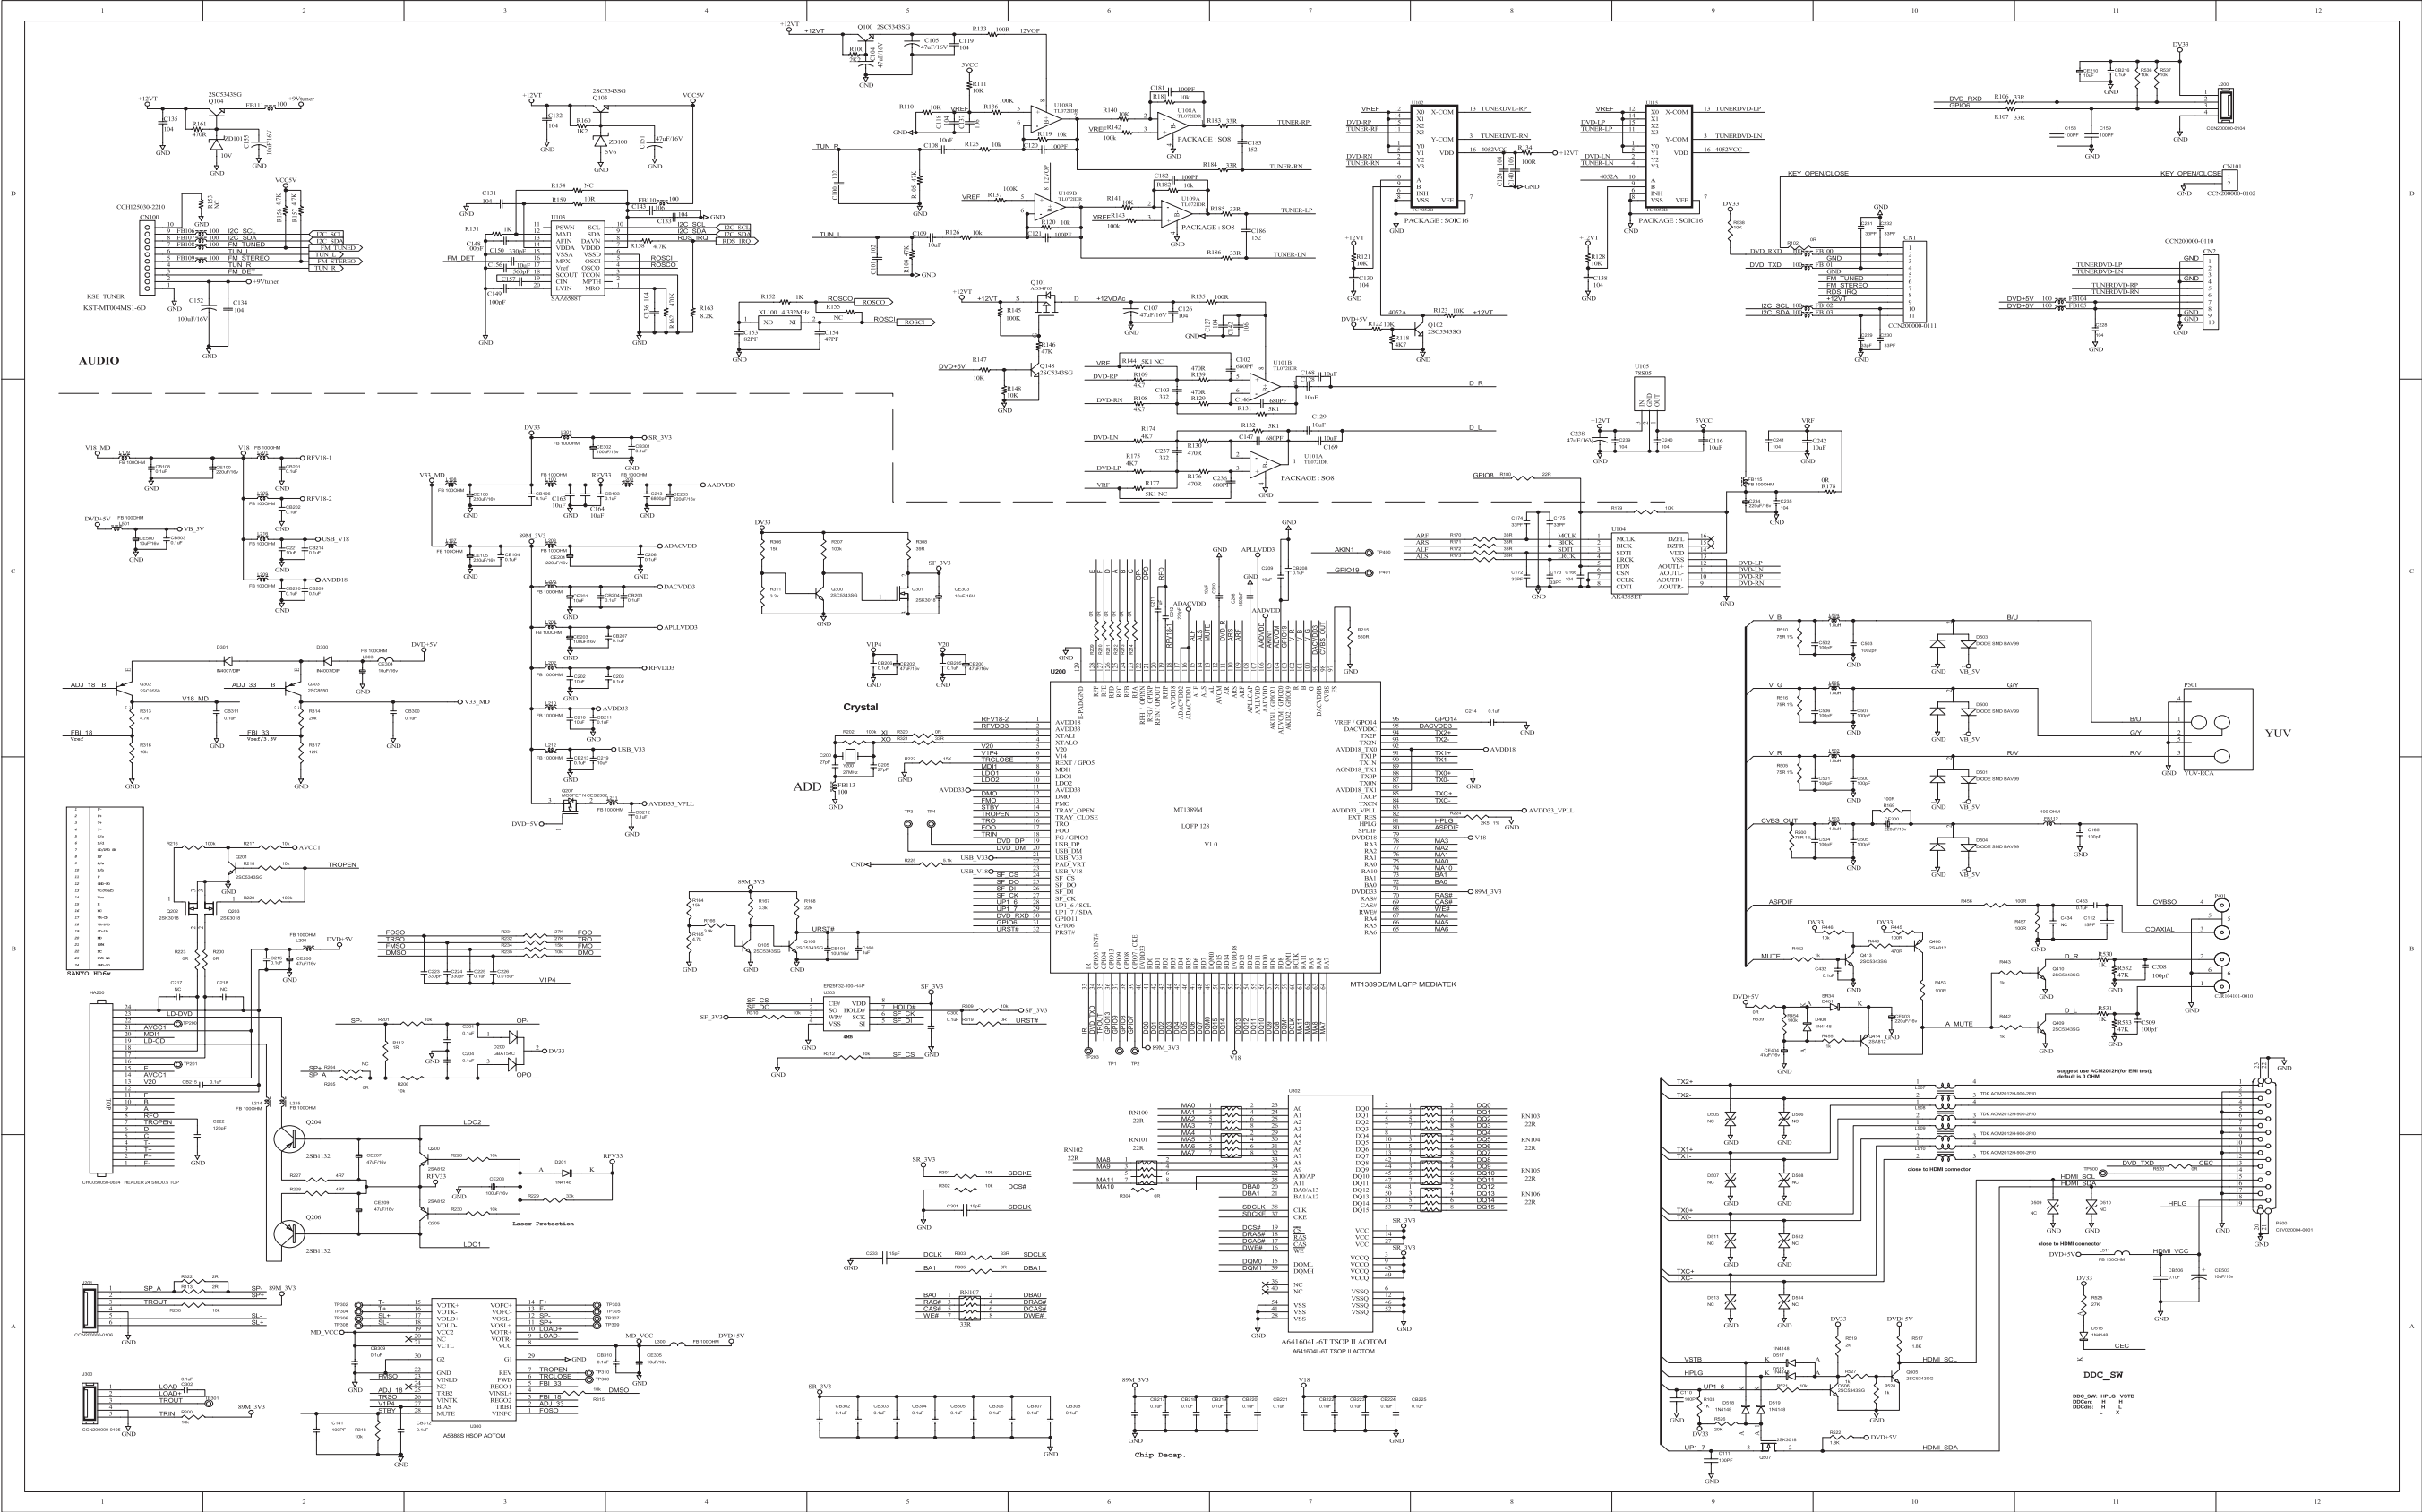





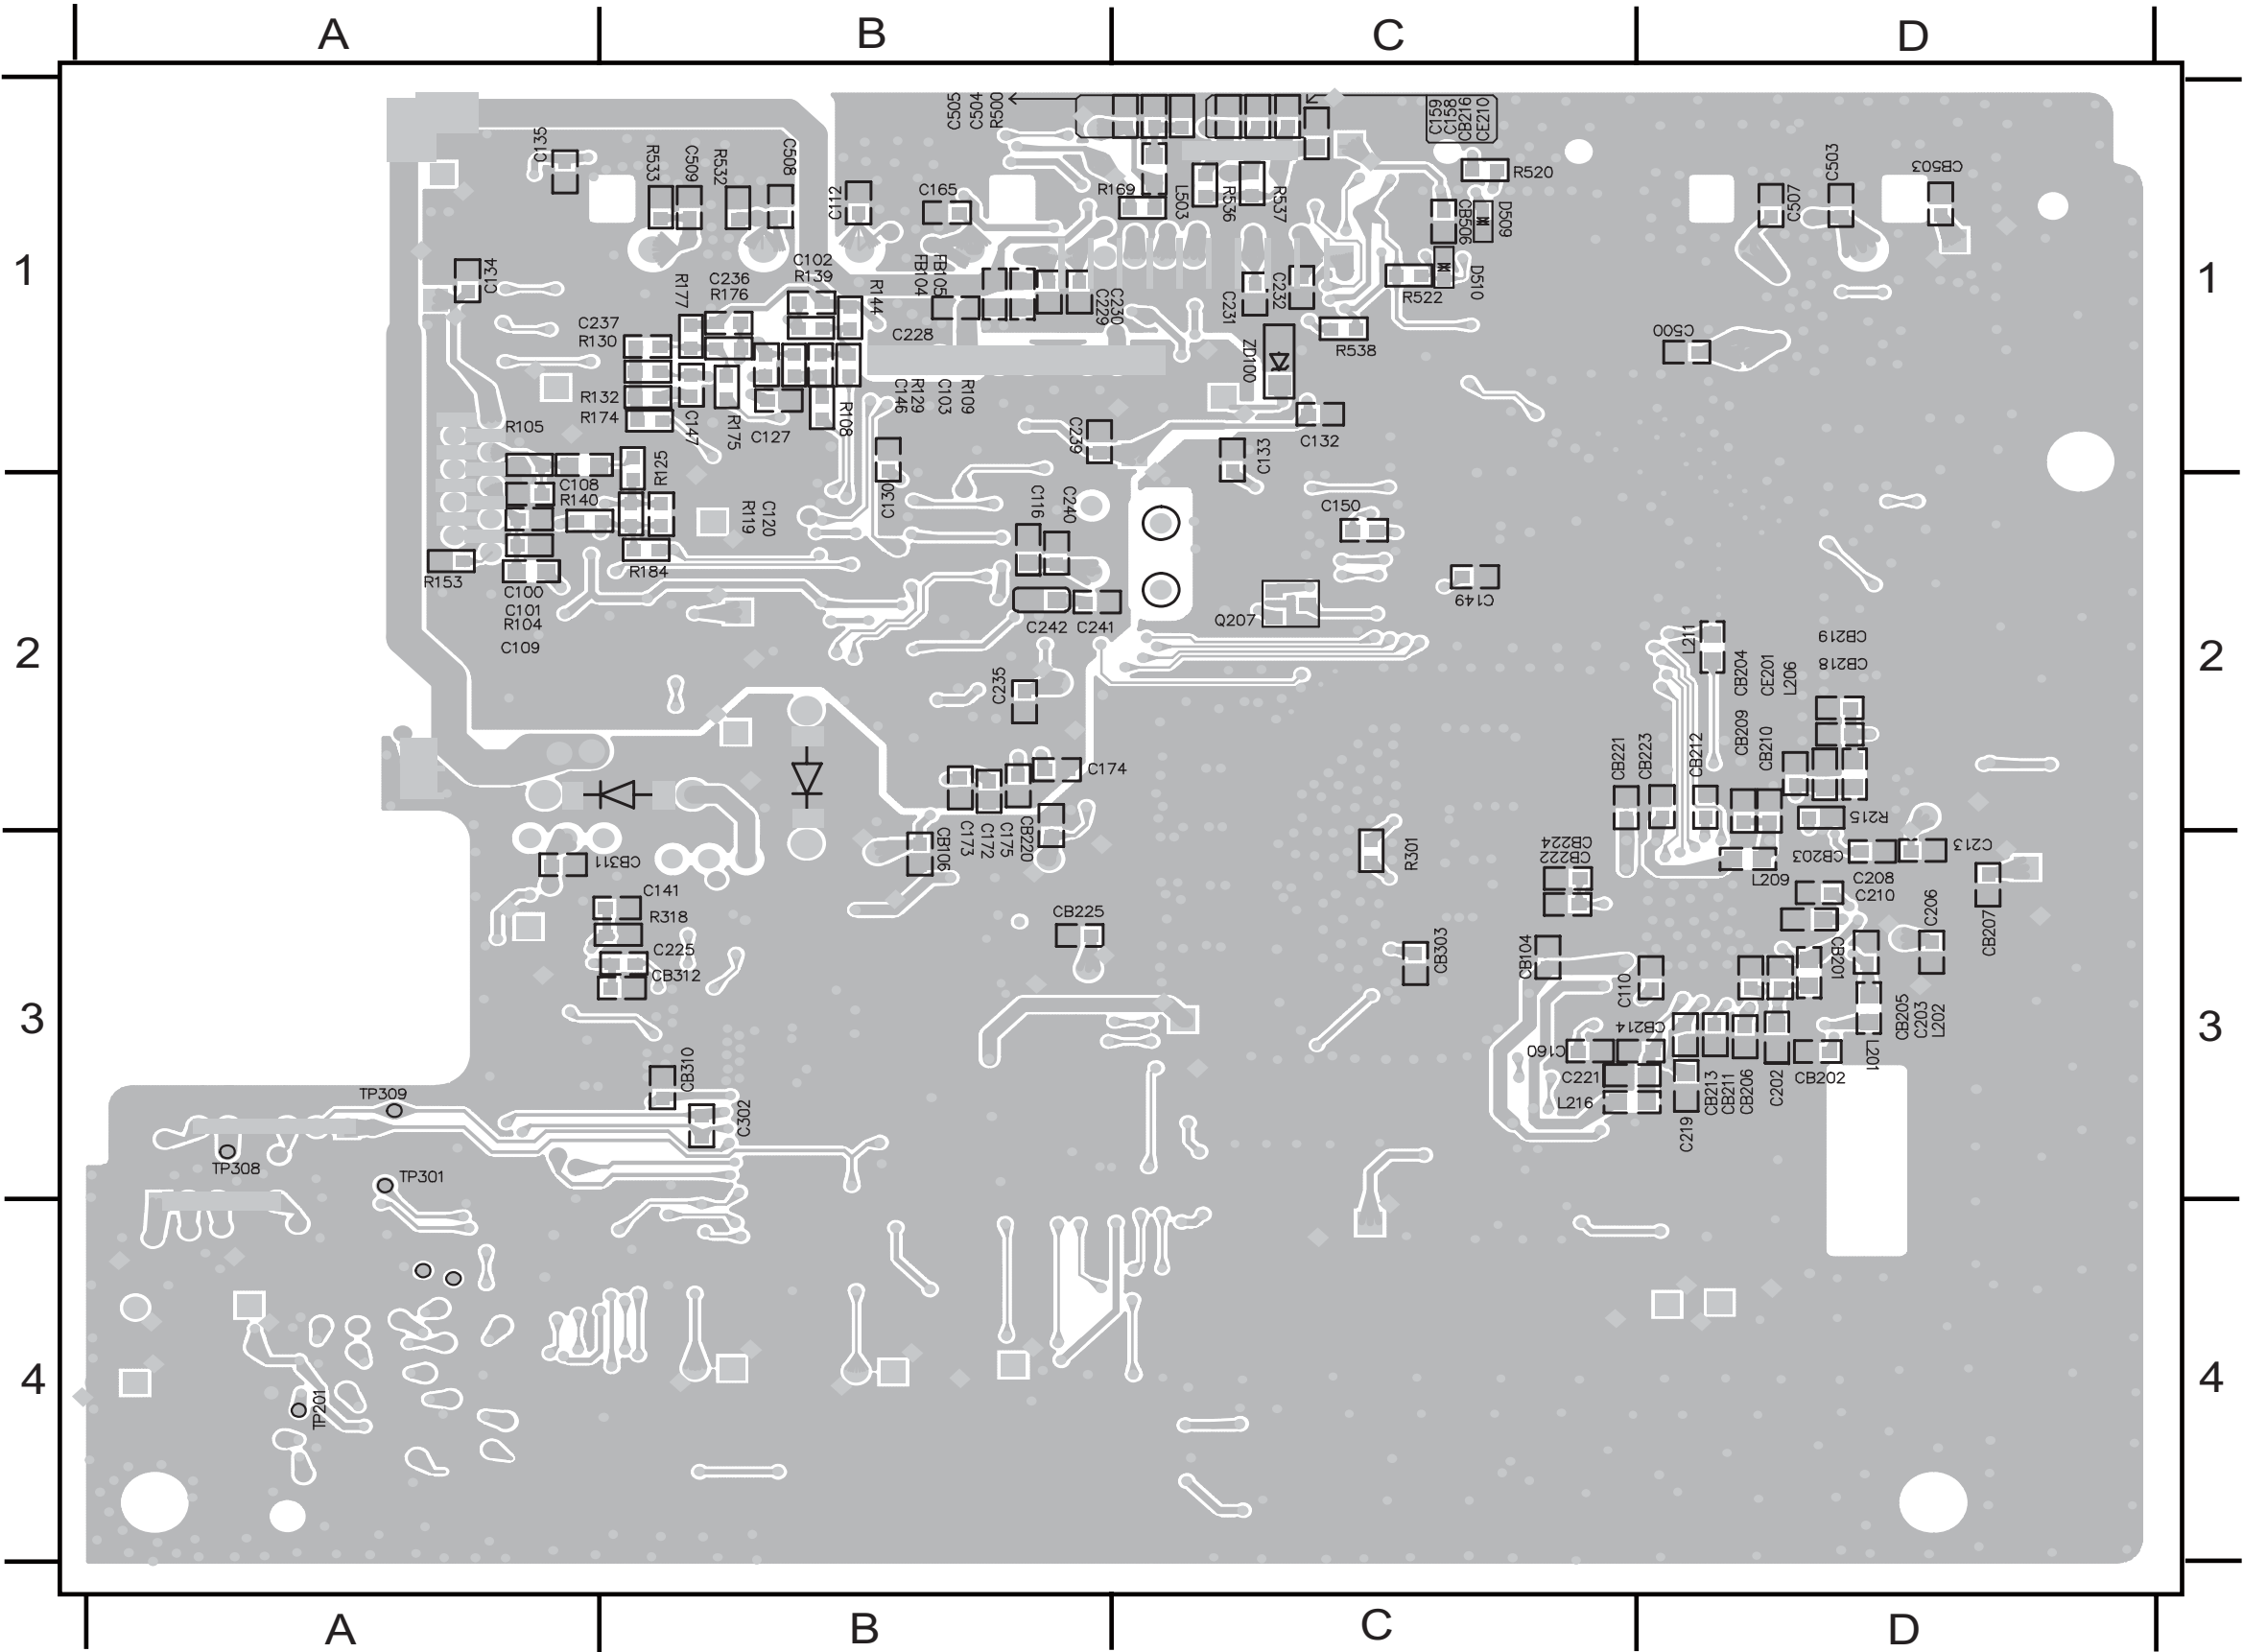



NET Main Board

TABLE OF CONTENTS

IC Diagram .....

7-1

Circuit Diagram.....

7-2


PCB Layout Top View .....


7-10

PCB Layout Bottom View.....


7-11

INTERNAL IC DIAGRAM -BF527

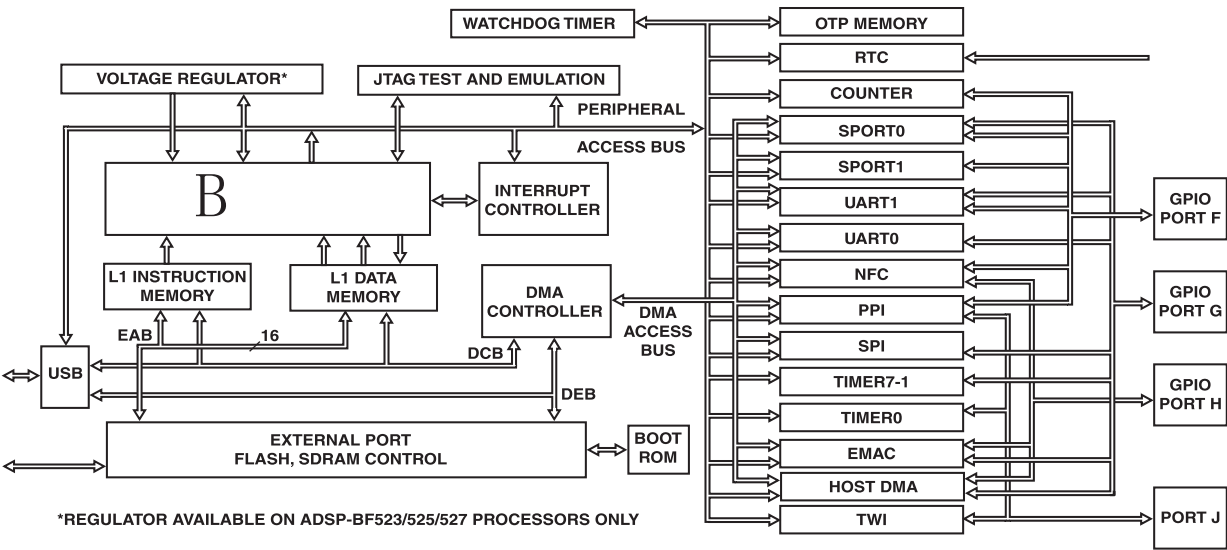

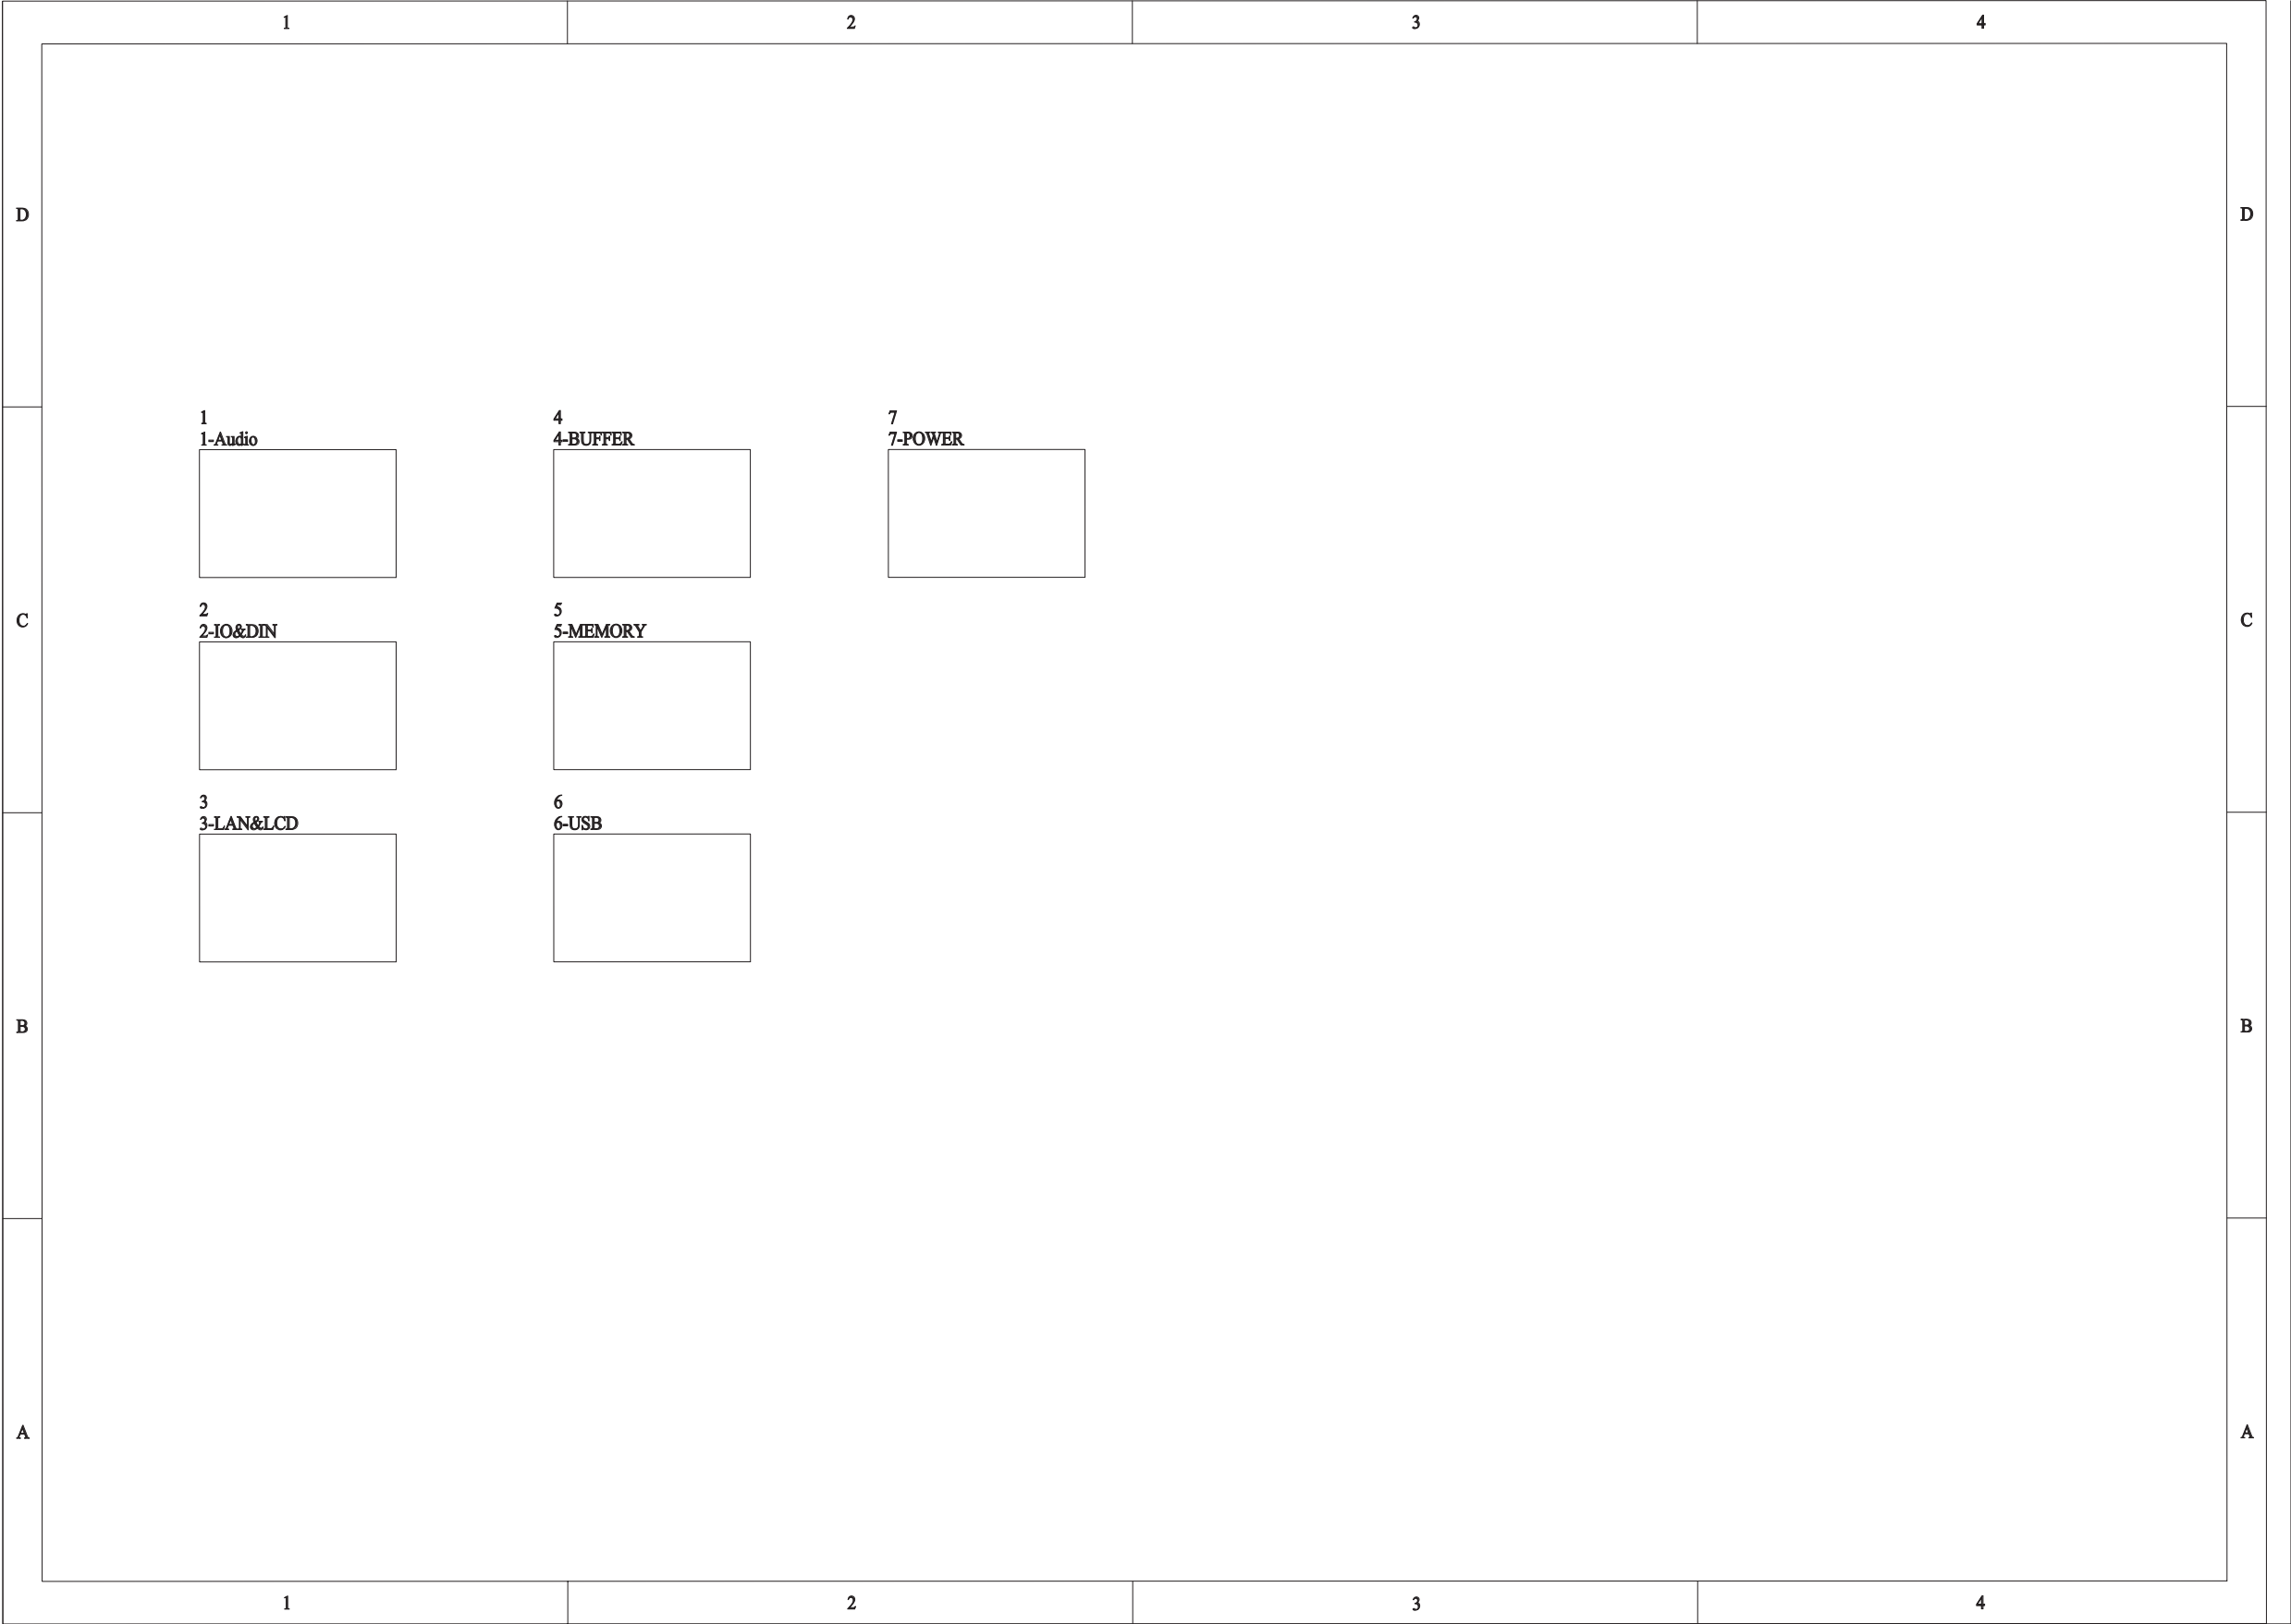

## CIRCUIT DIAGRAM—AUDIO PART

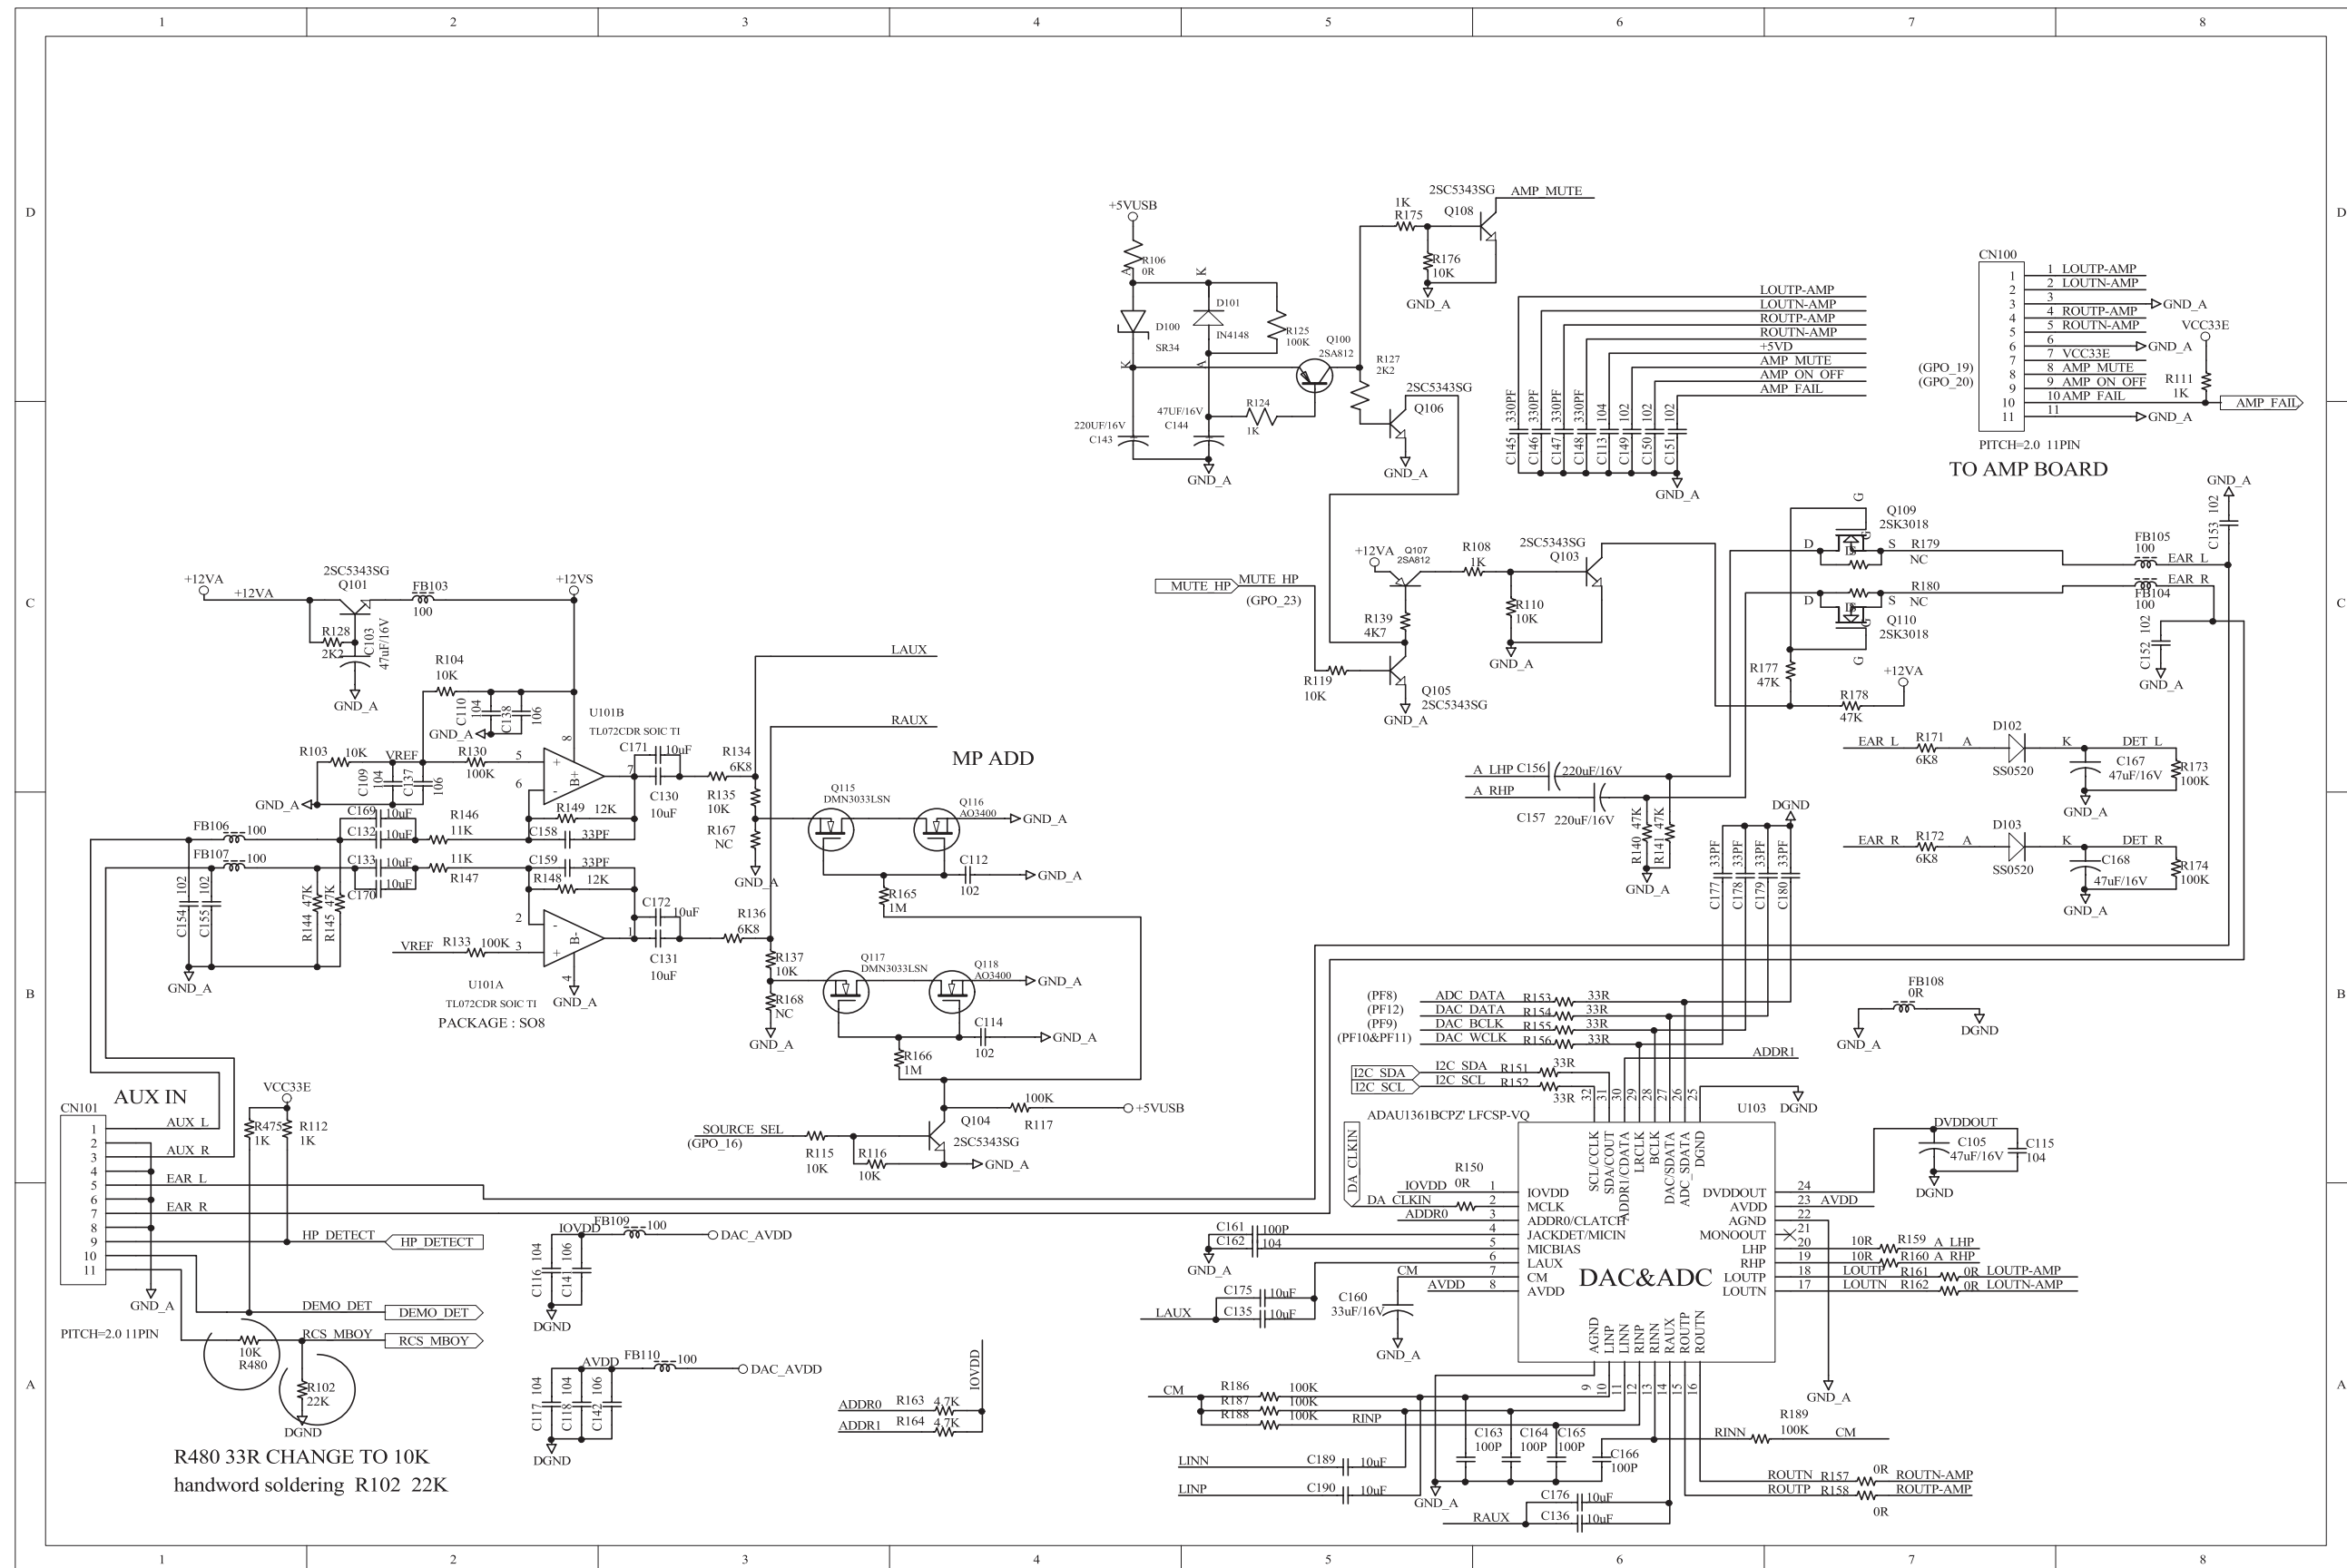


[illegible]


CIRCUIT DIAGRAM — LAN & LCD PART

7-5

7-5

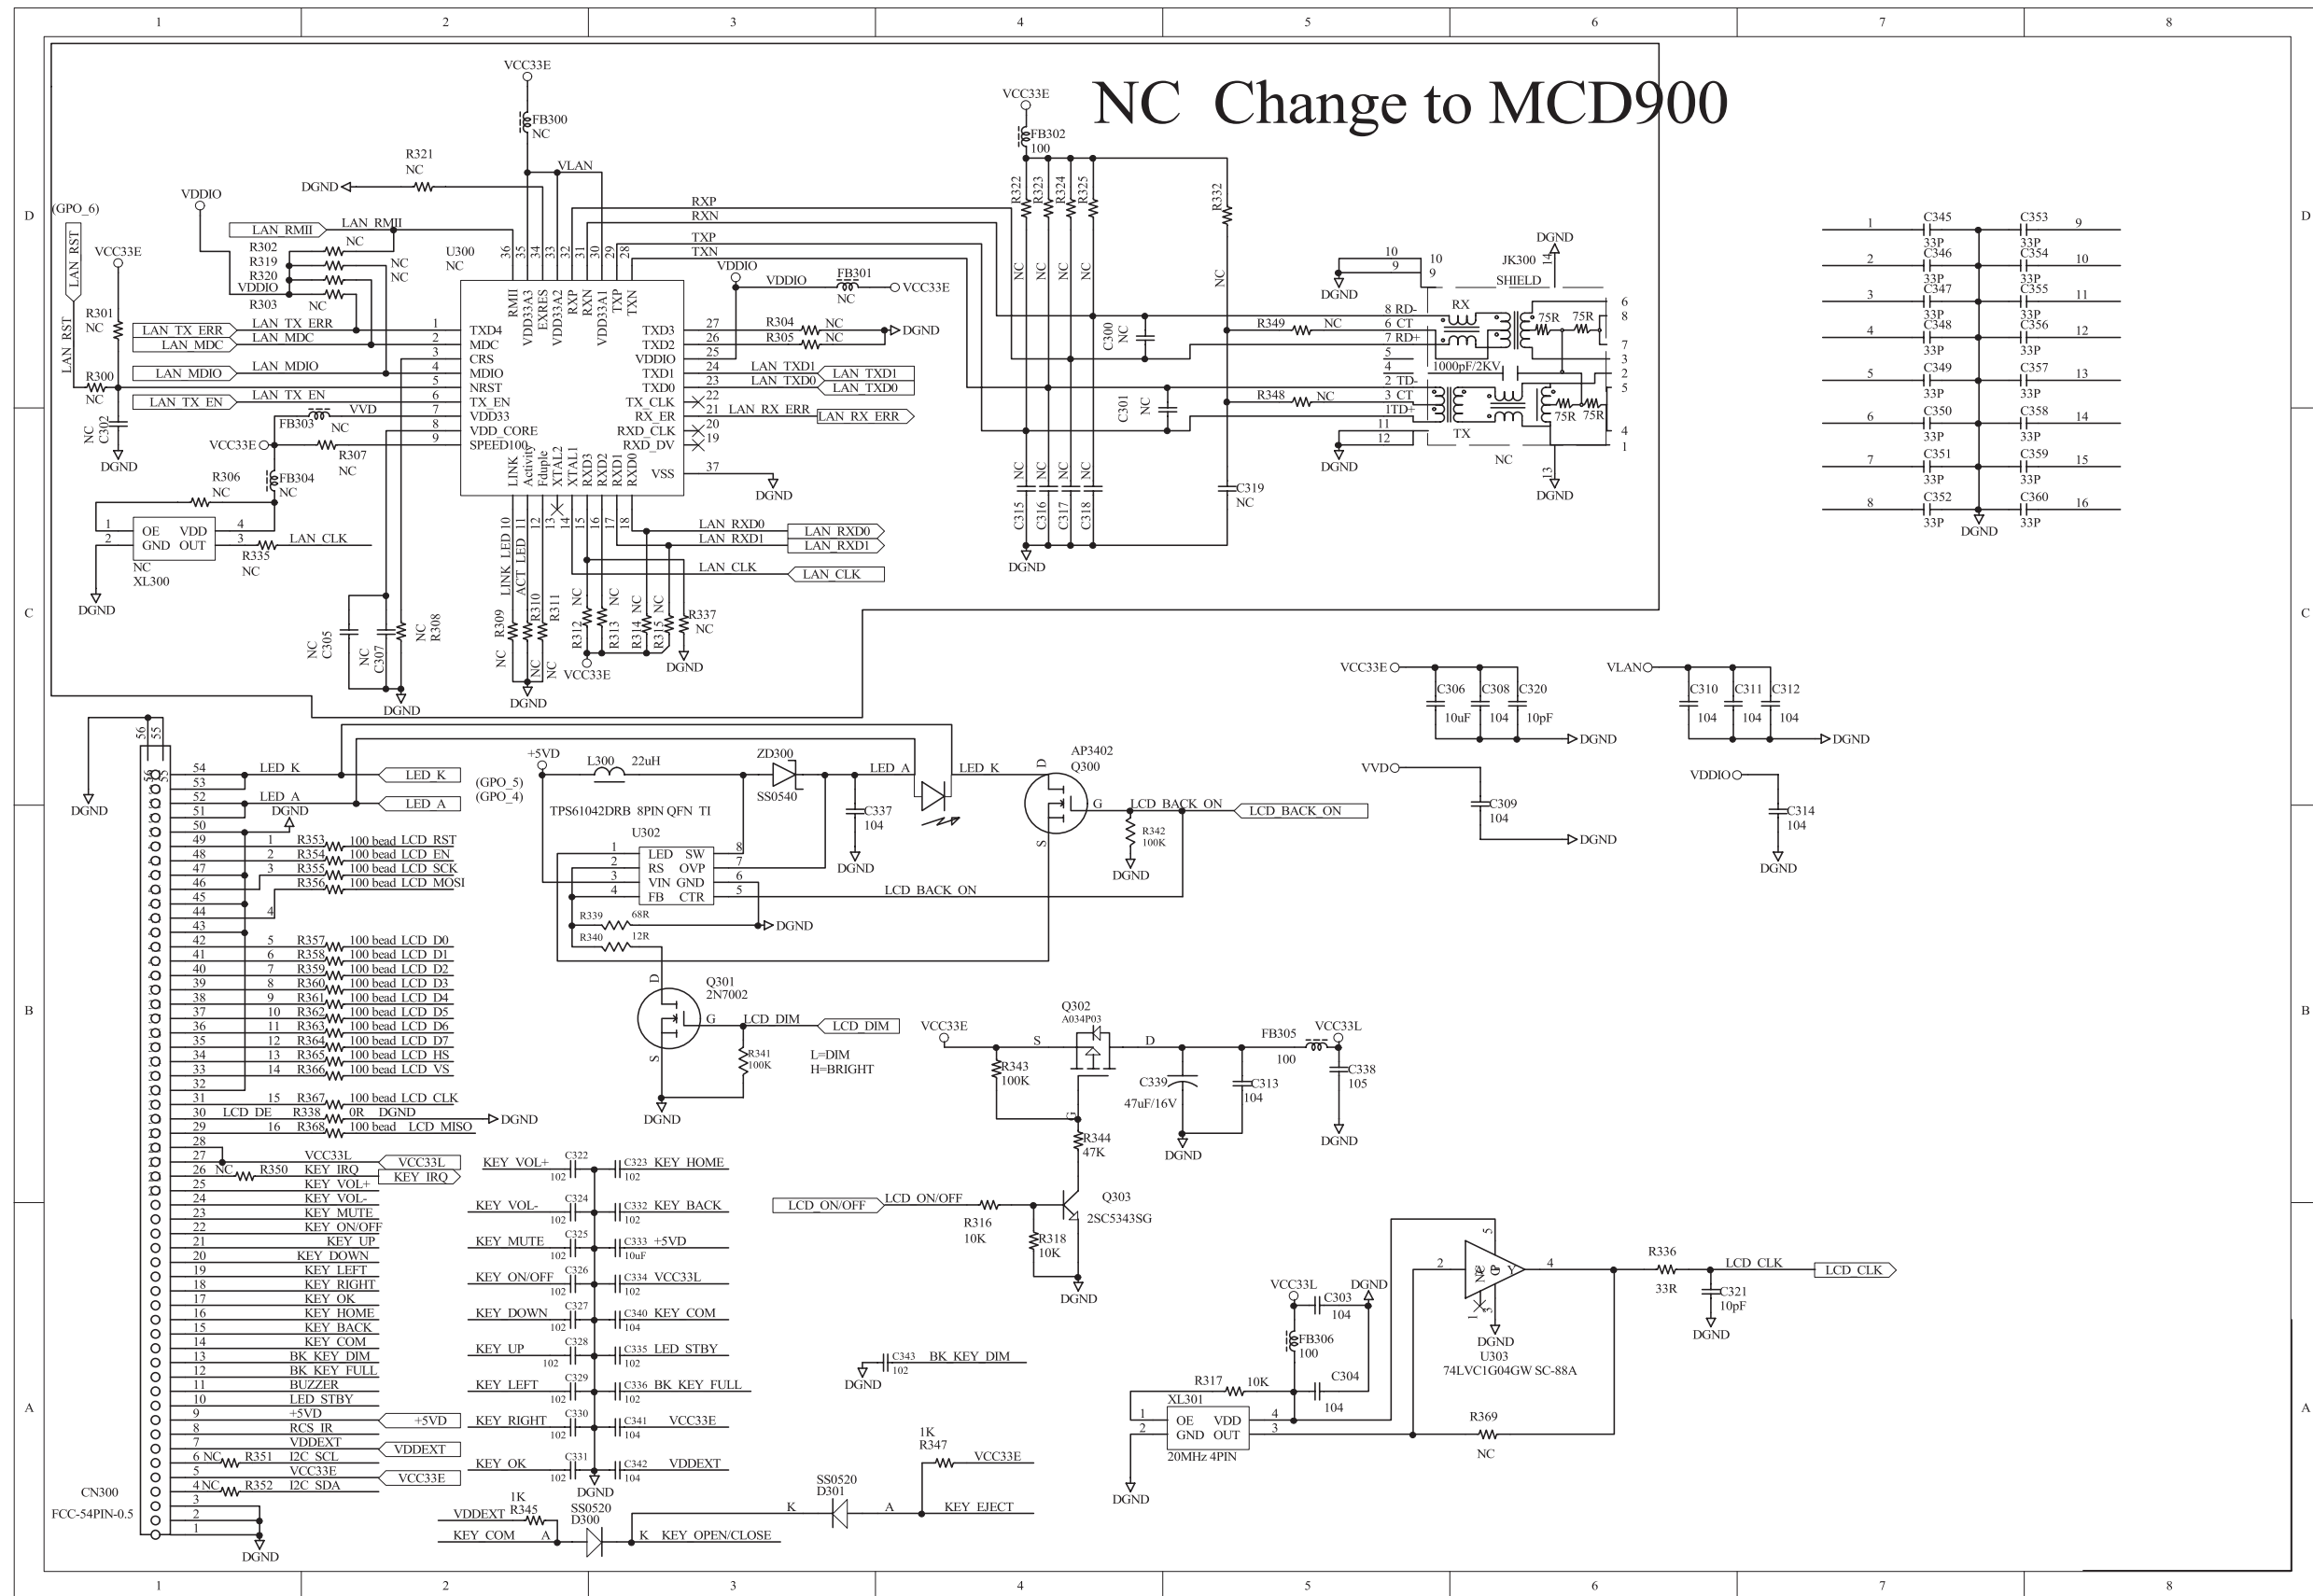


## NC Change to MCD900

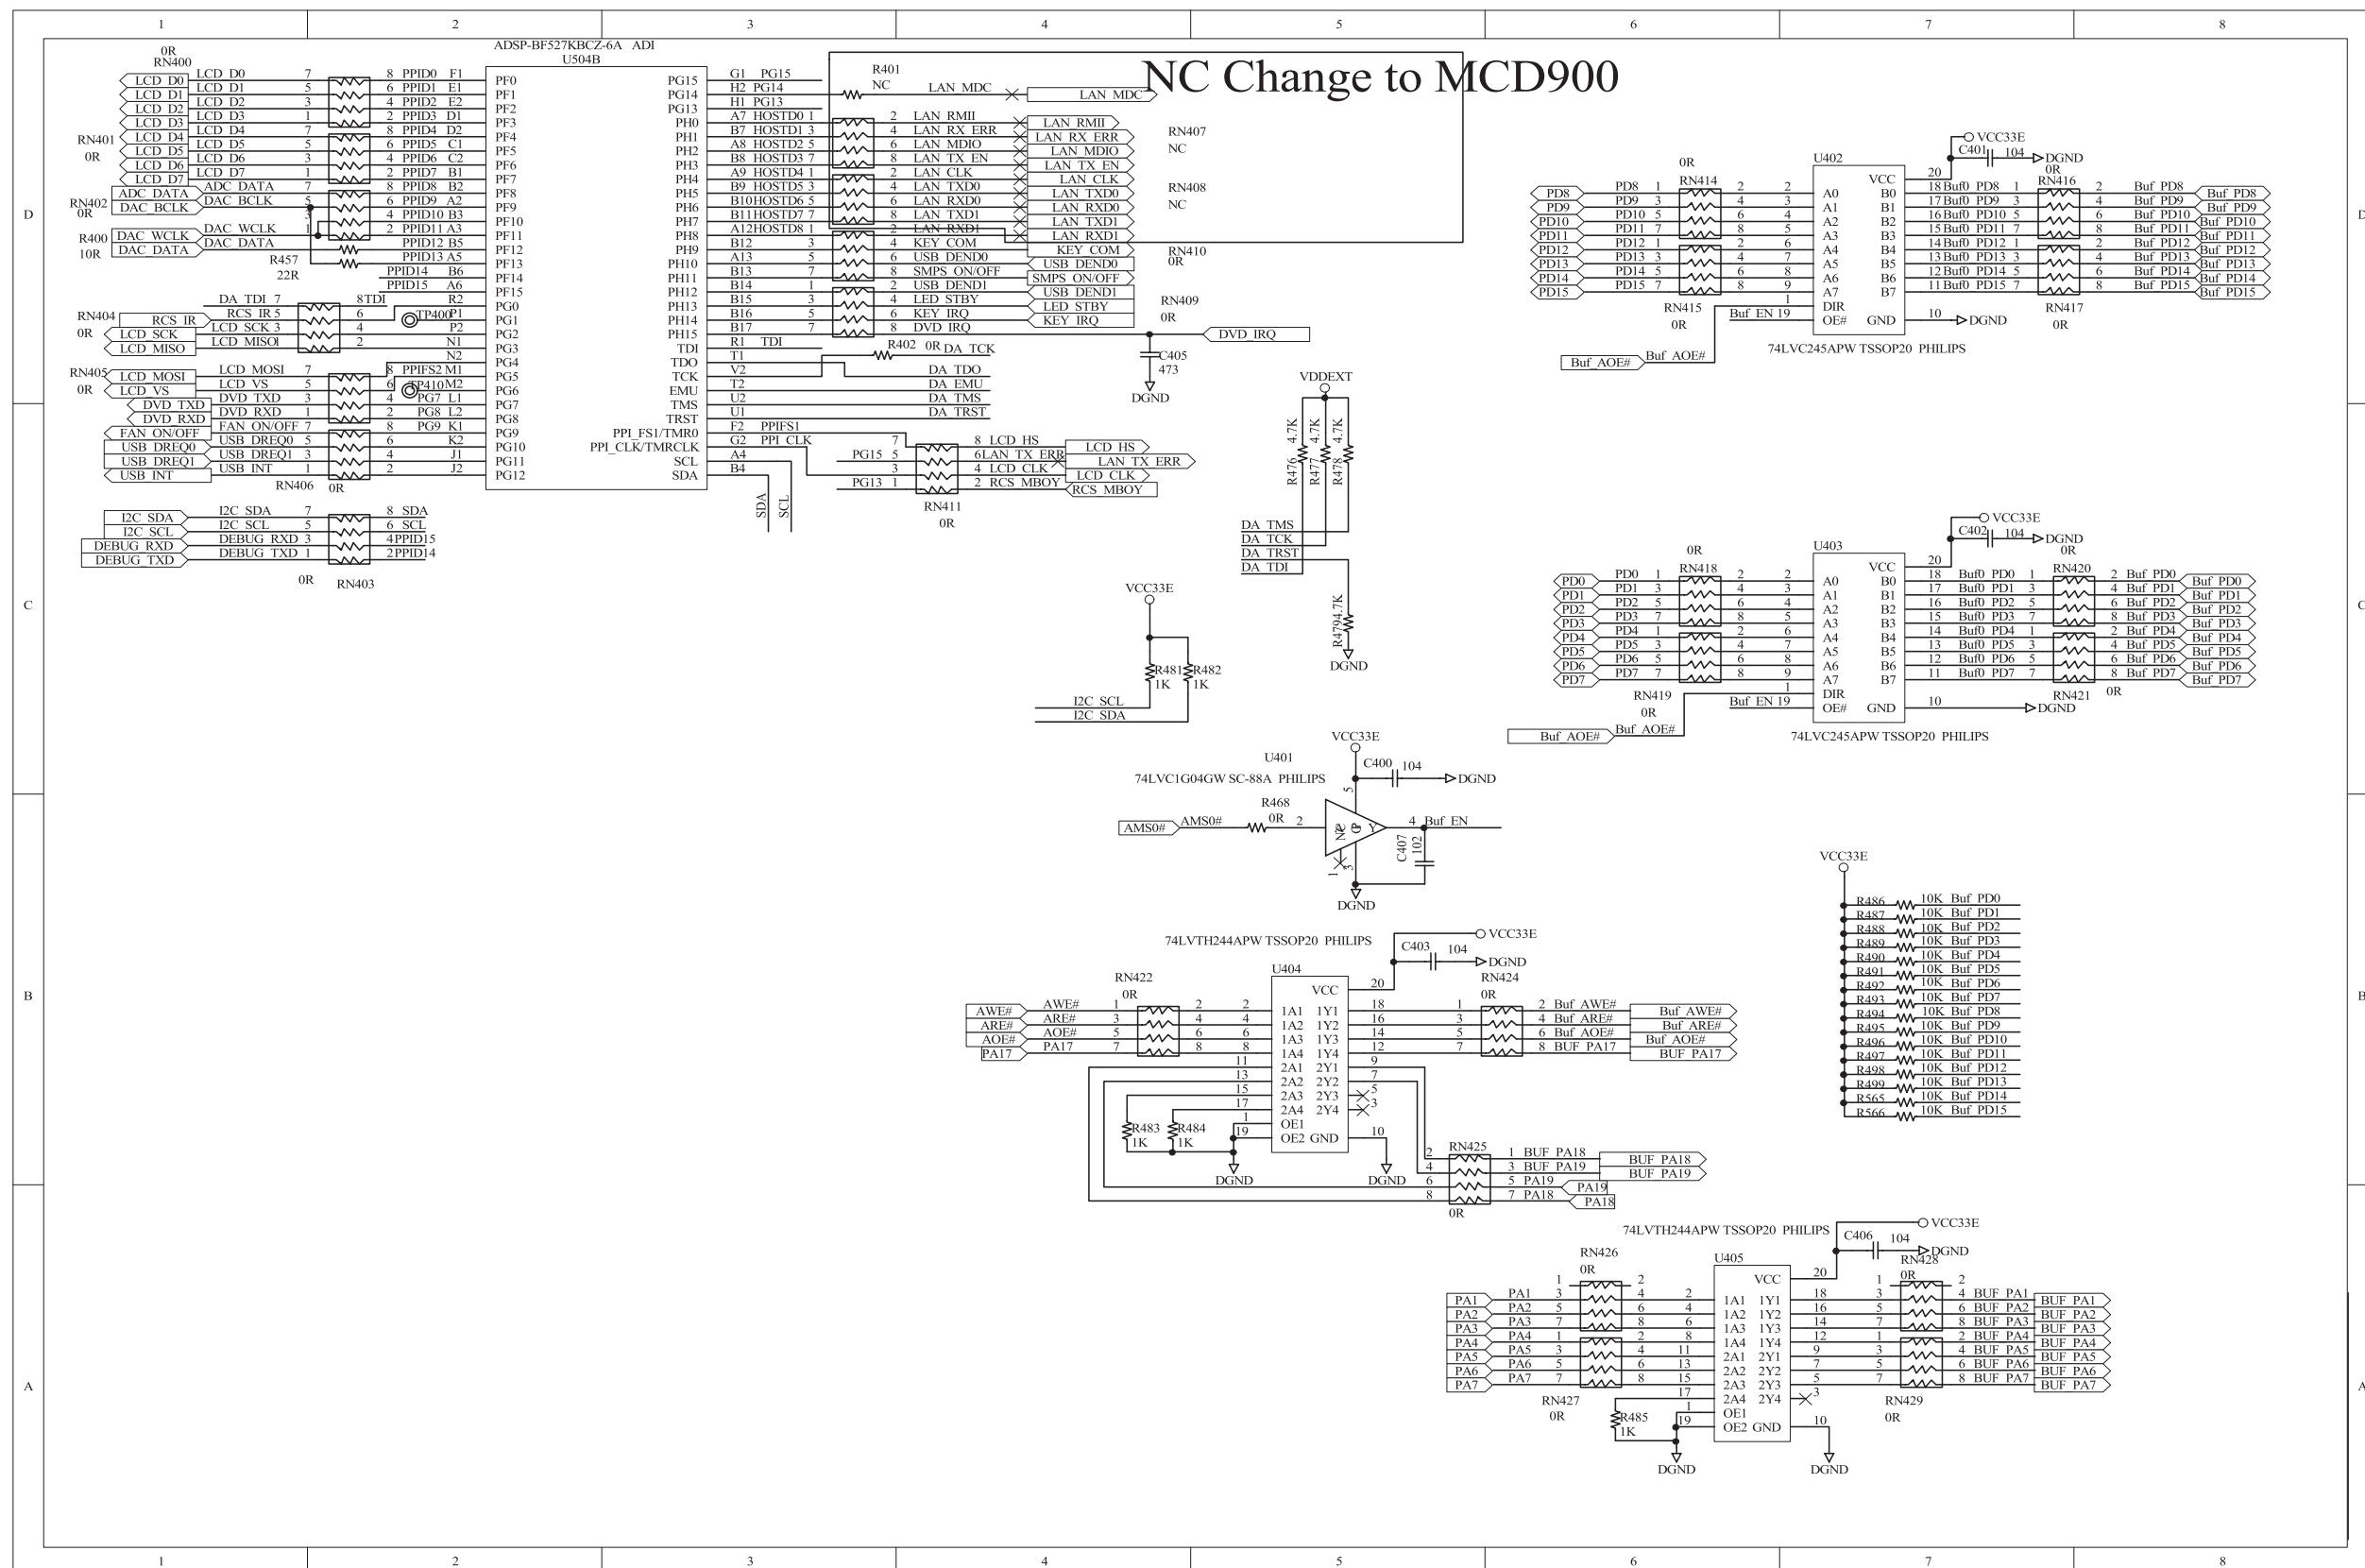




CIRCUIT DIAGRAM—MEMORY PART

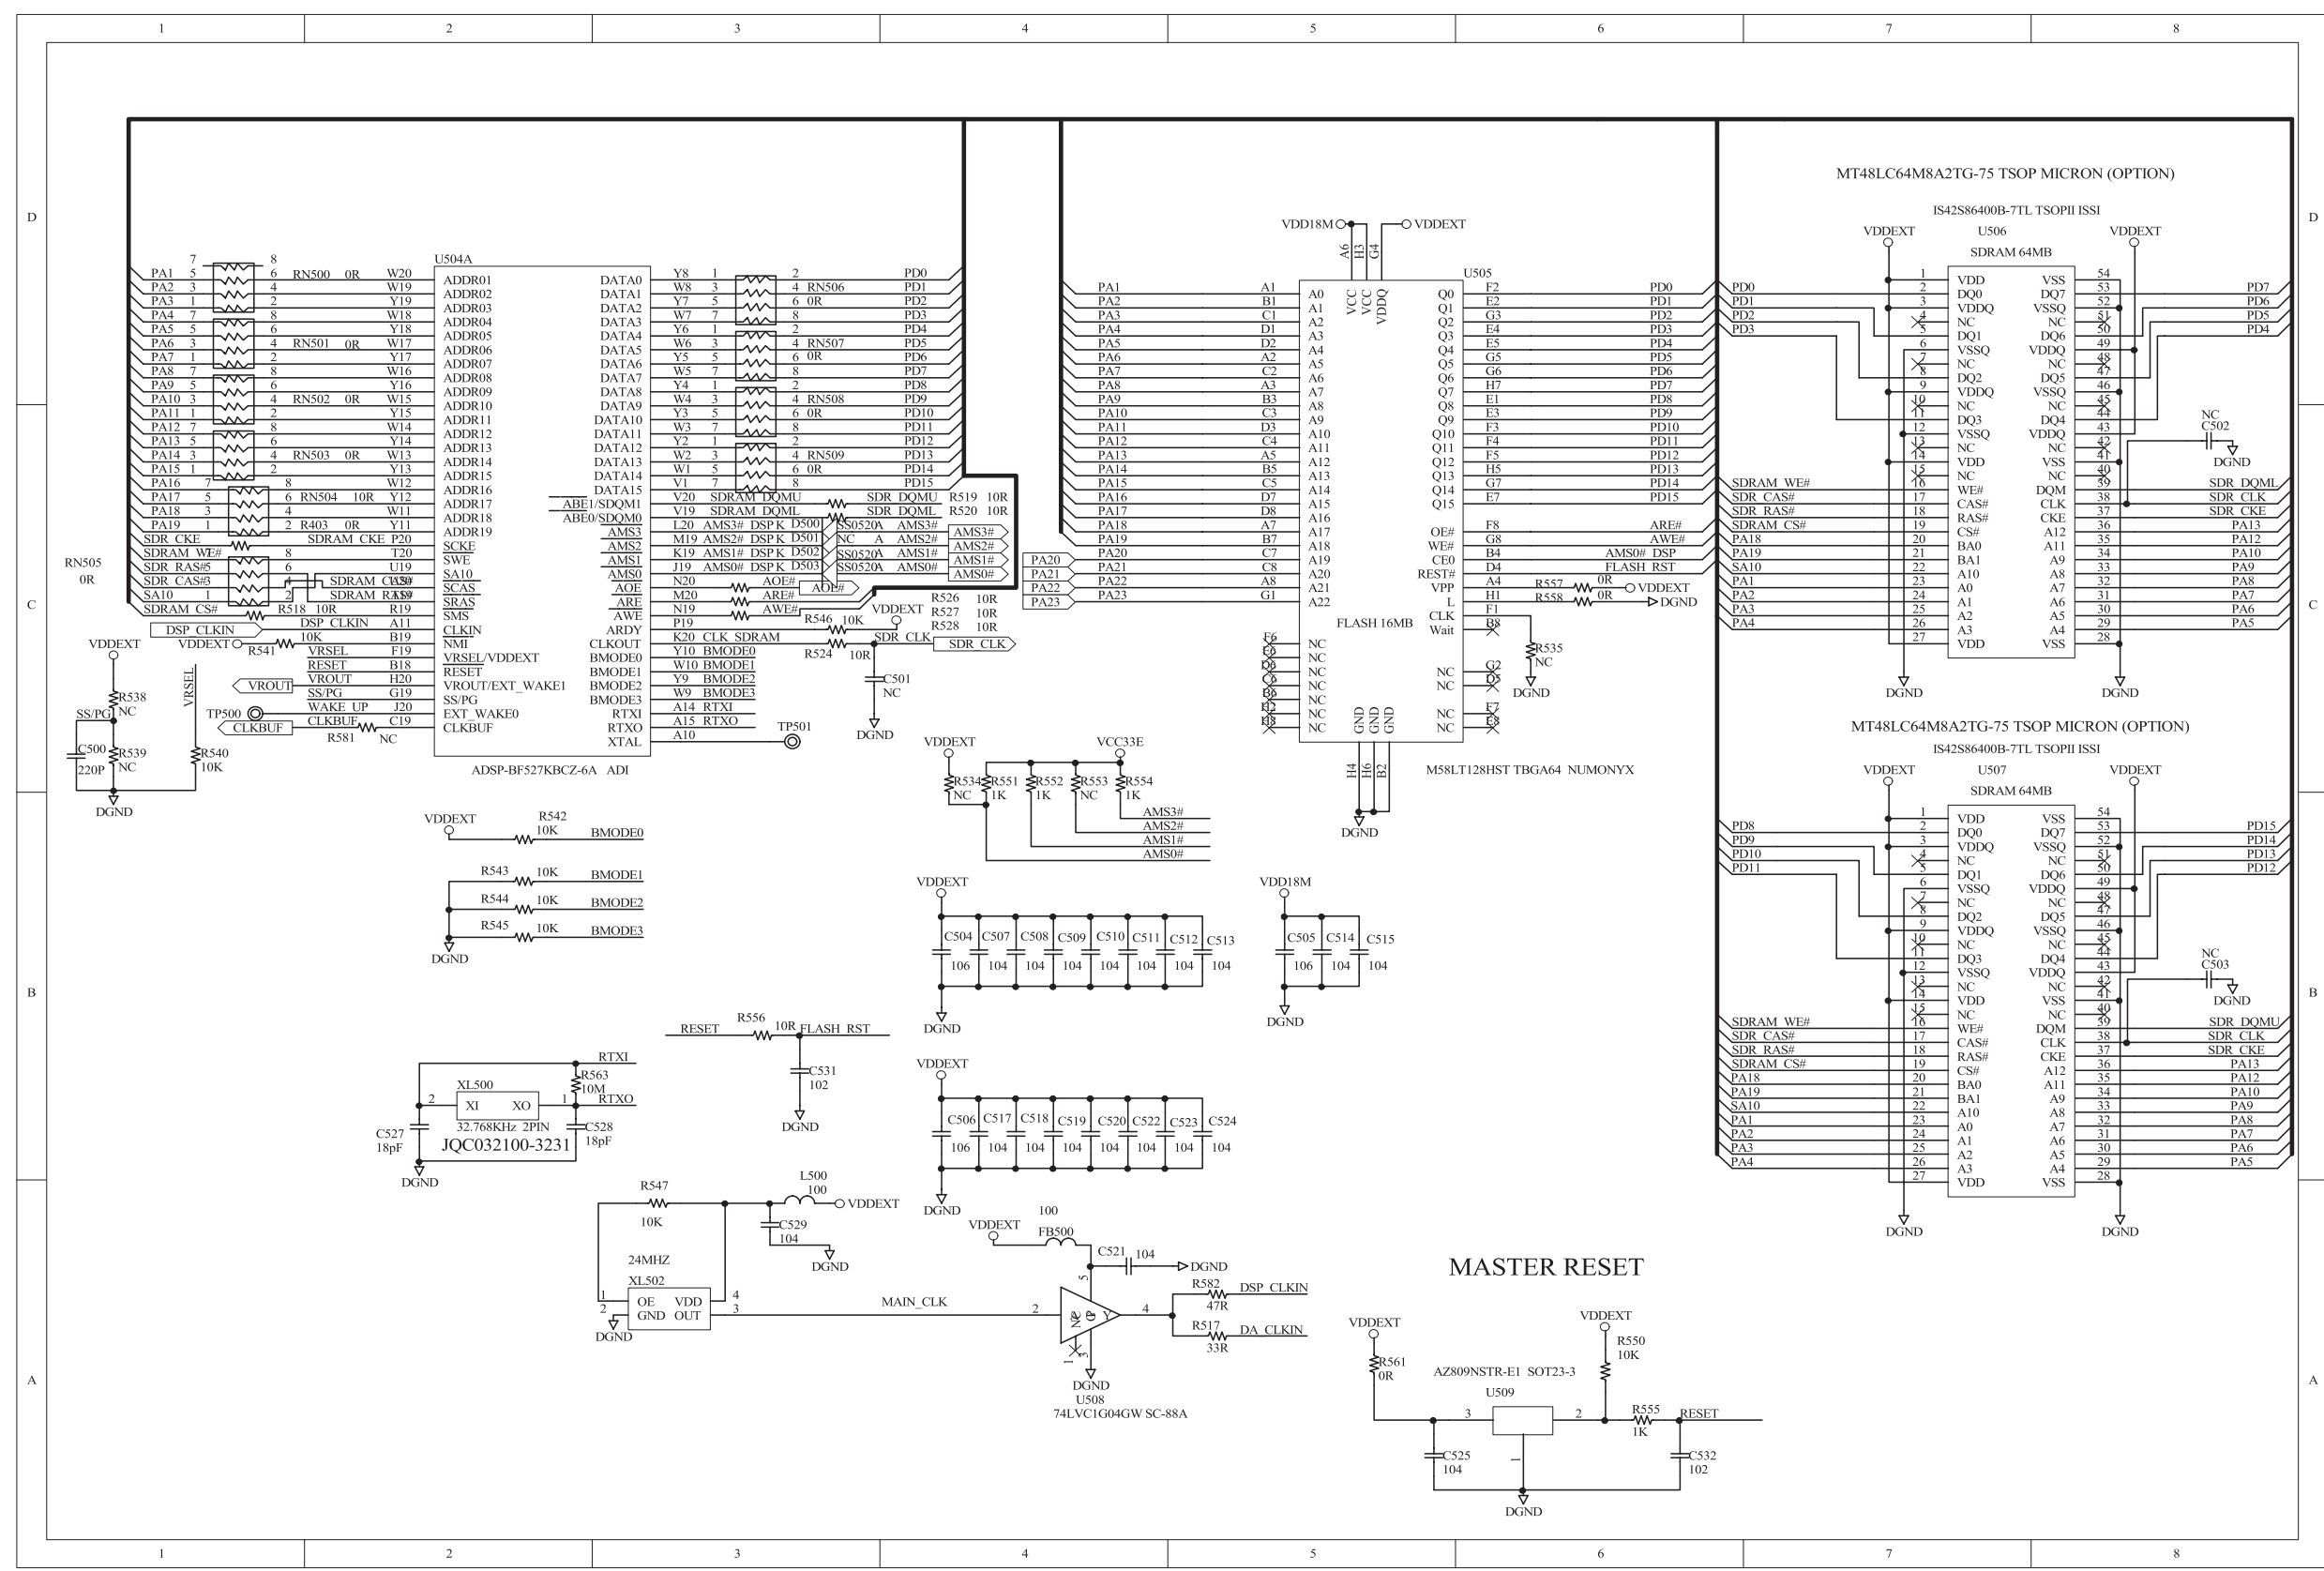





CIRCUIT DIAGRAM — USB PART

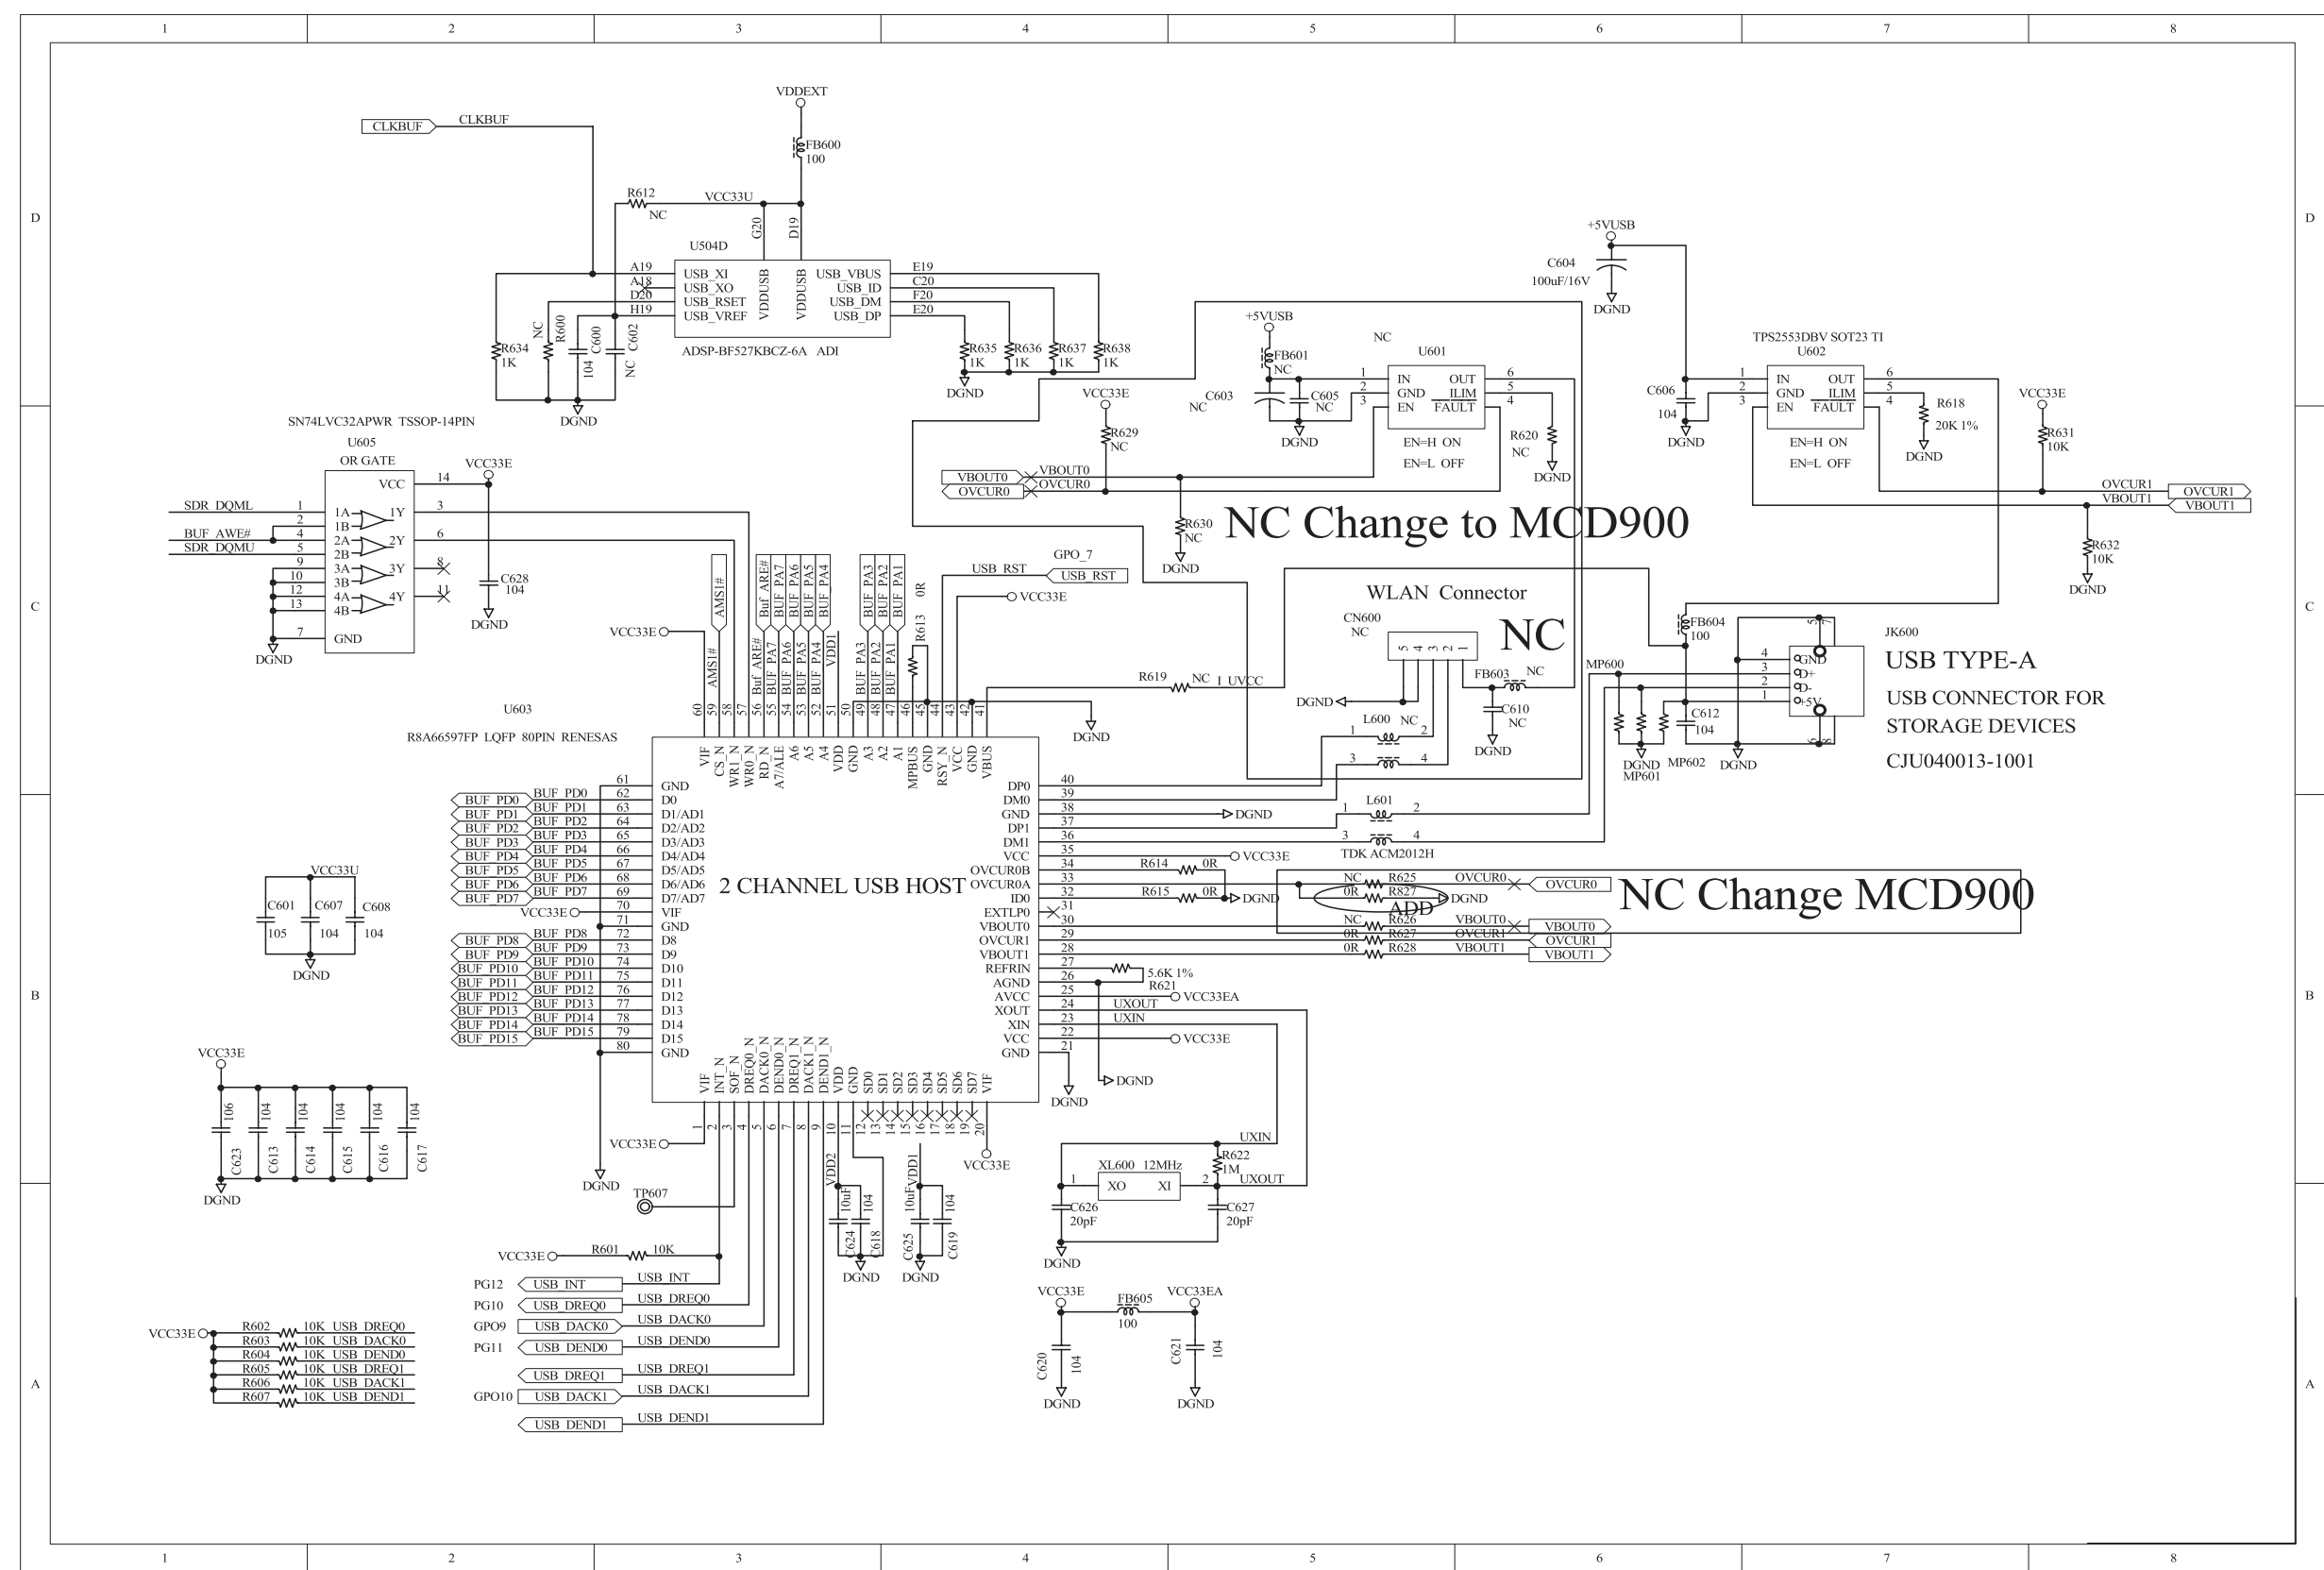



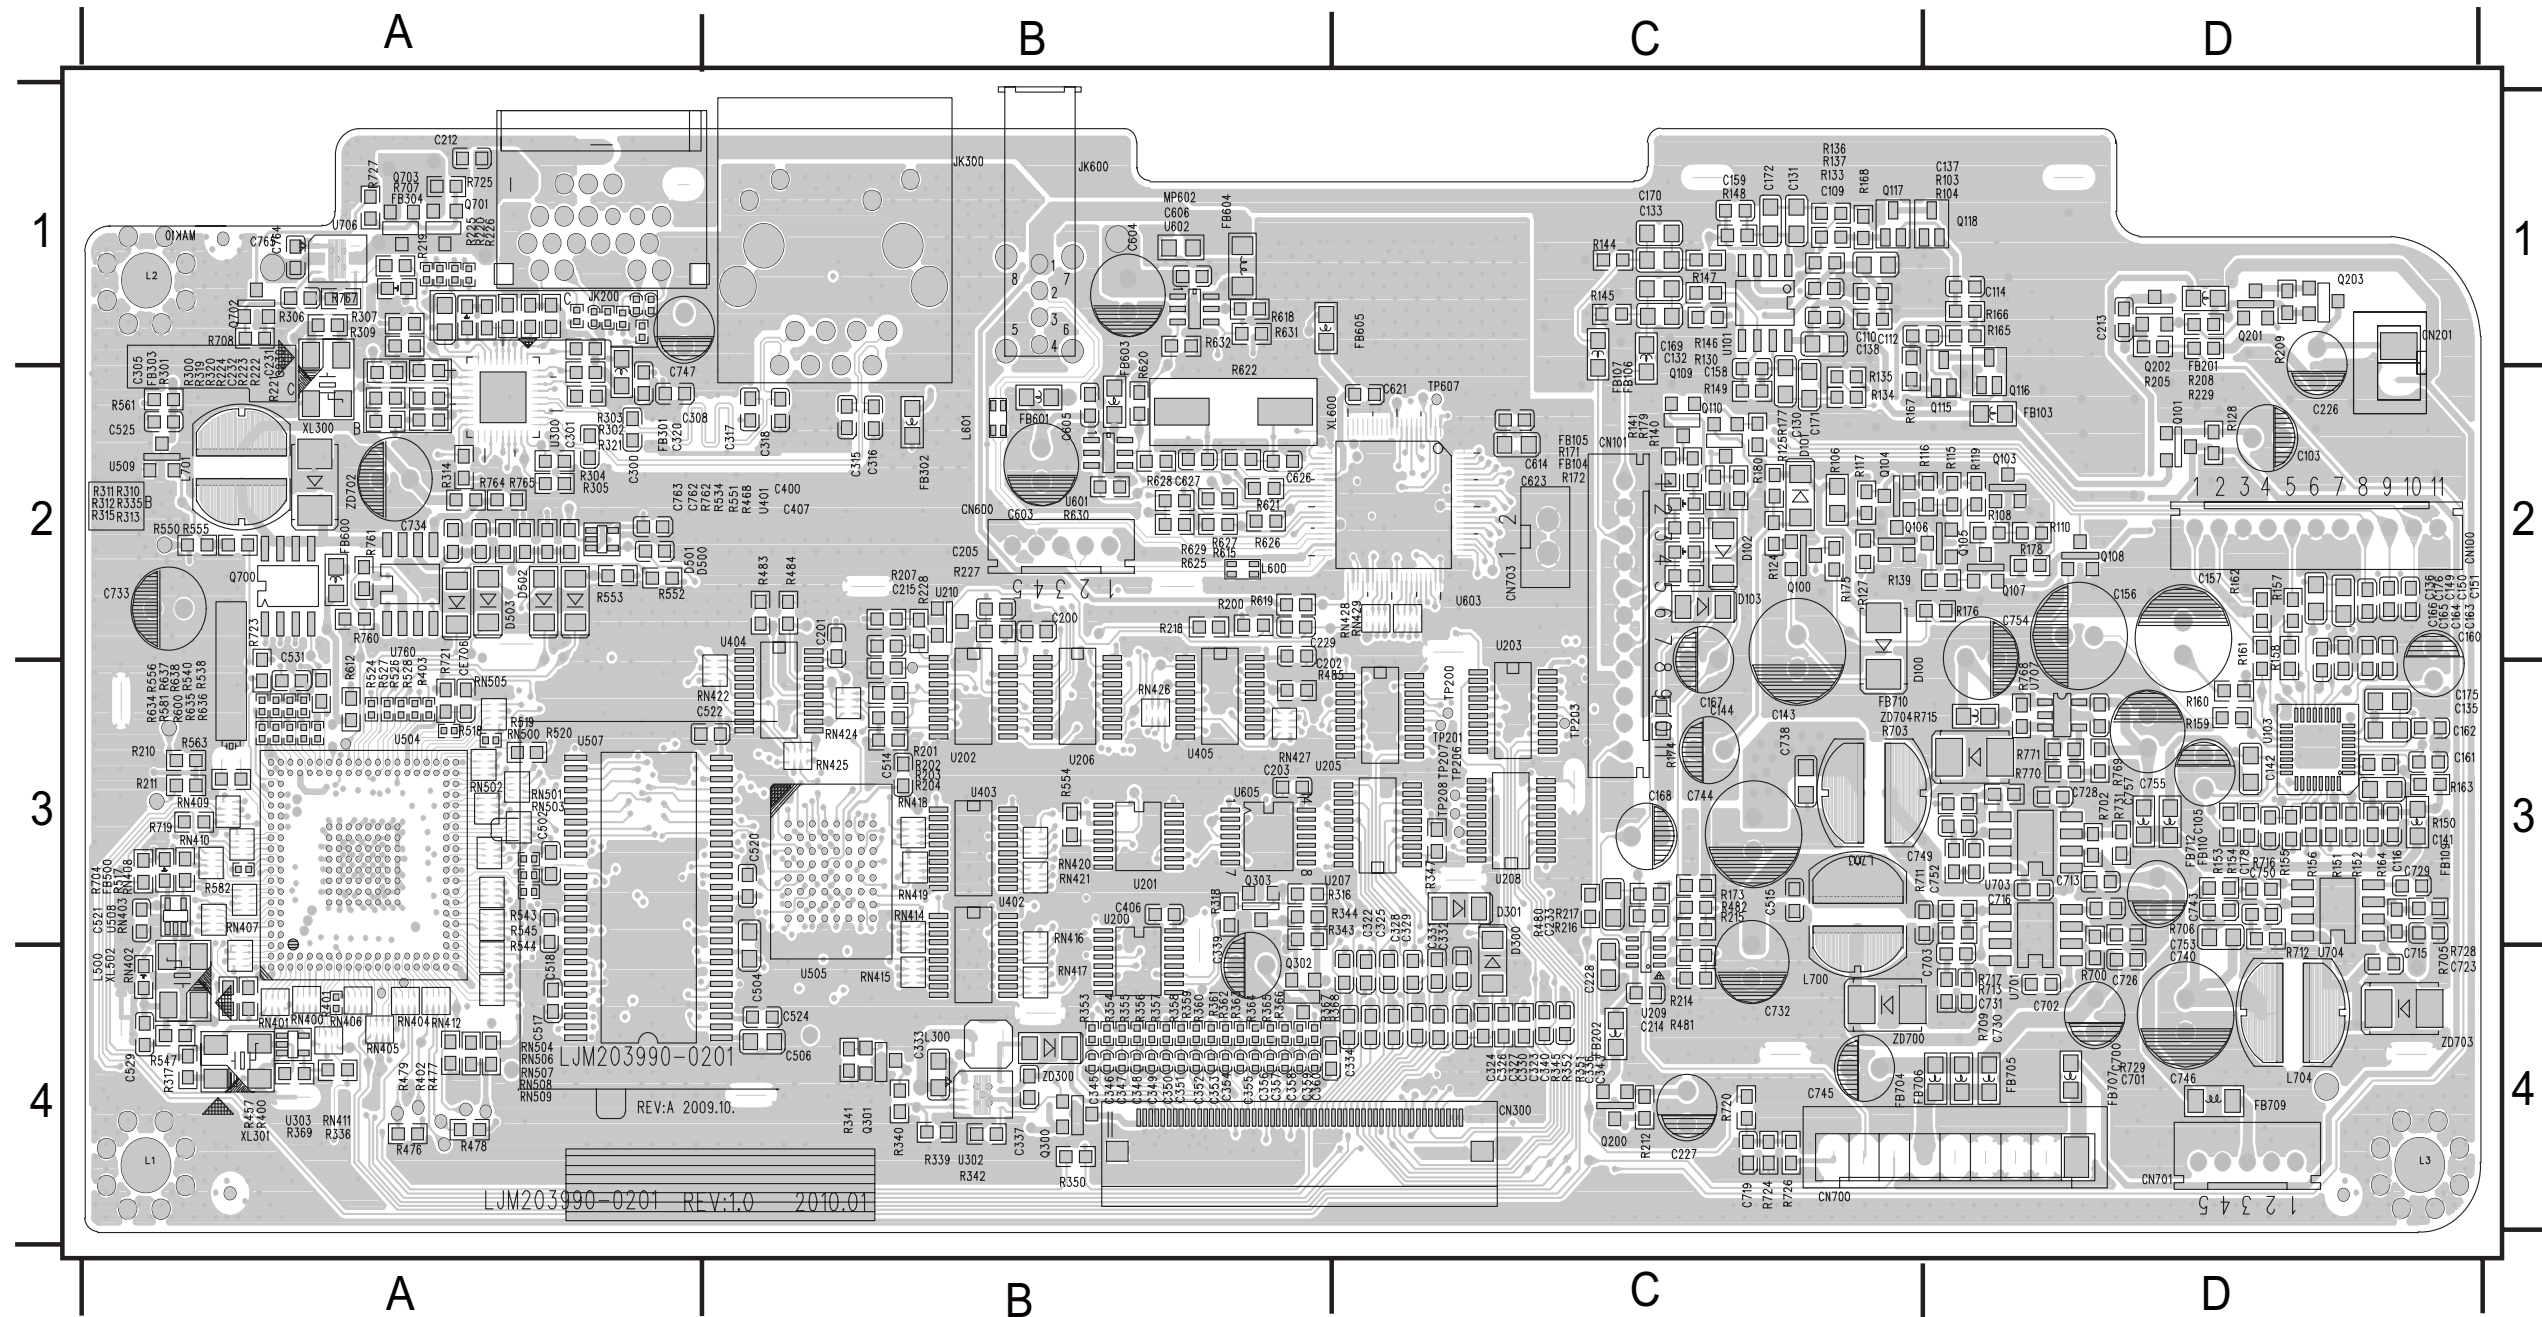



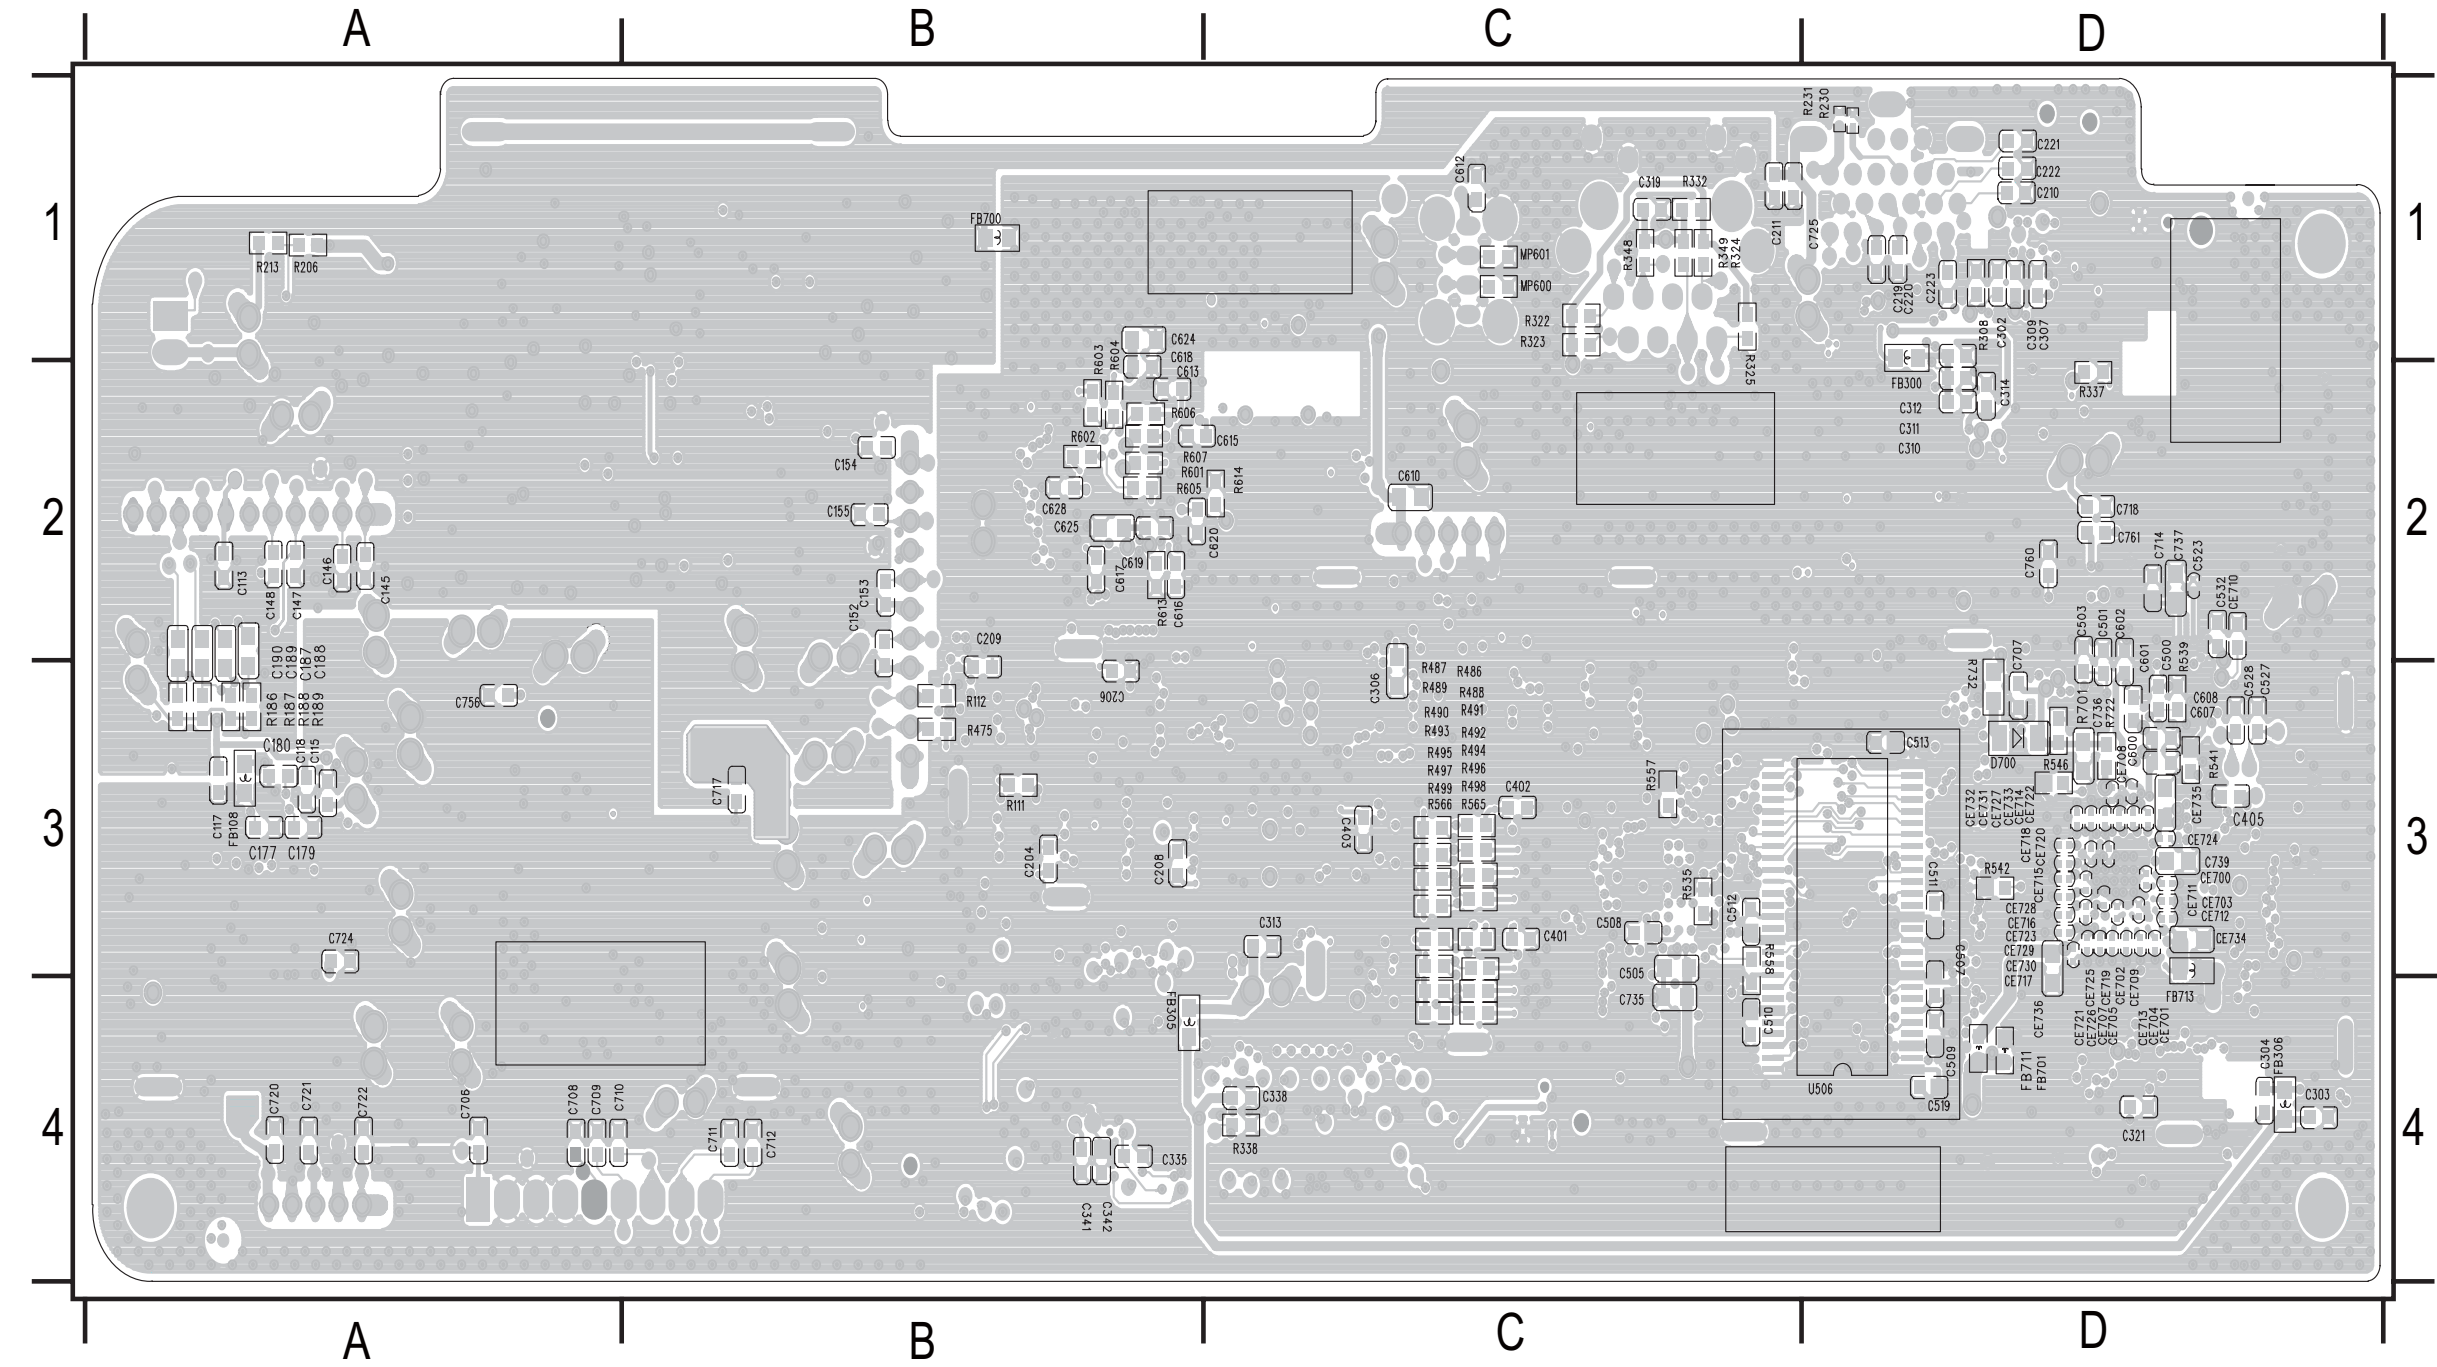


---


# Key Board


---

## TABLE OF CONTENTS

Circuit Diagram .....	8-2
PCB Layout Top View .....	8-3
PCB Layout Bottom View .....	8-4

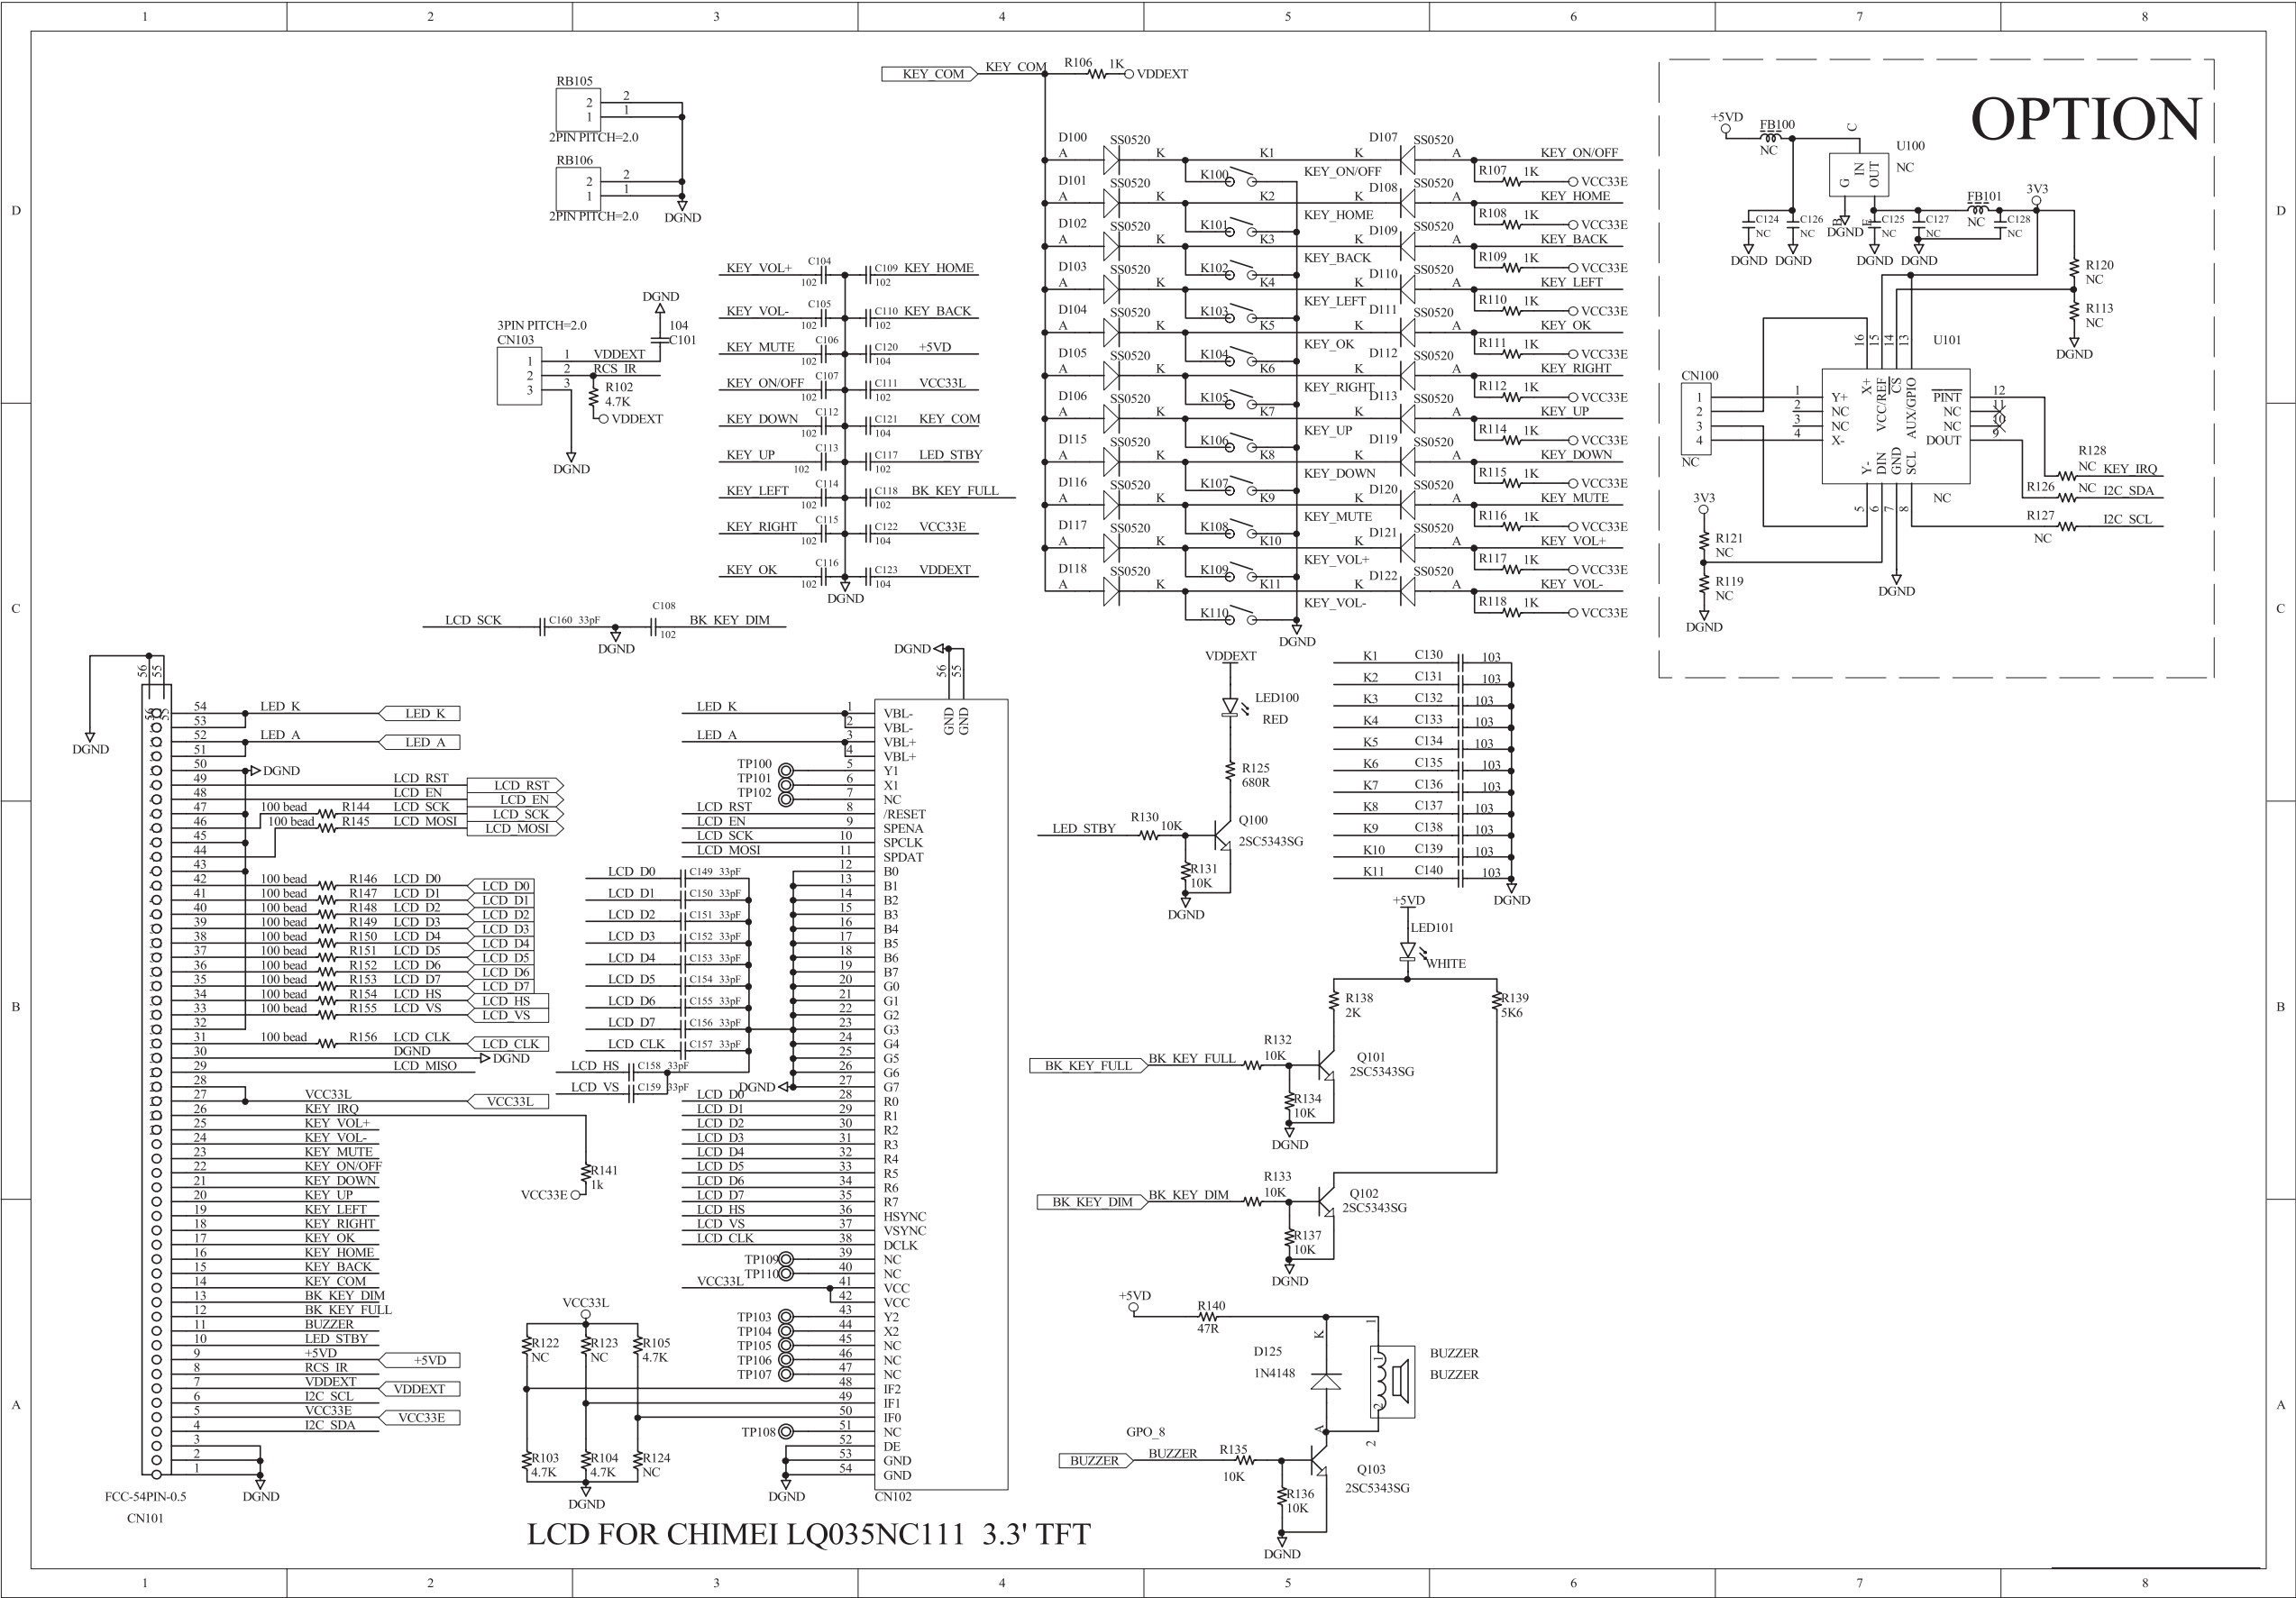

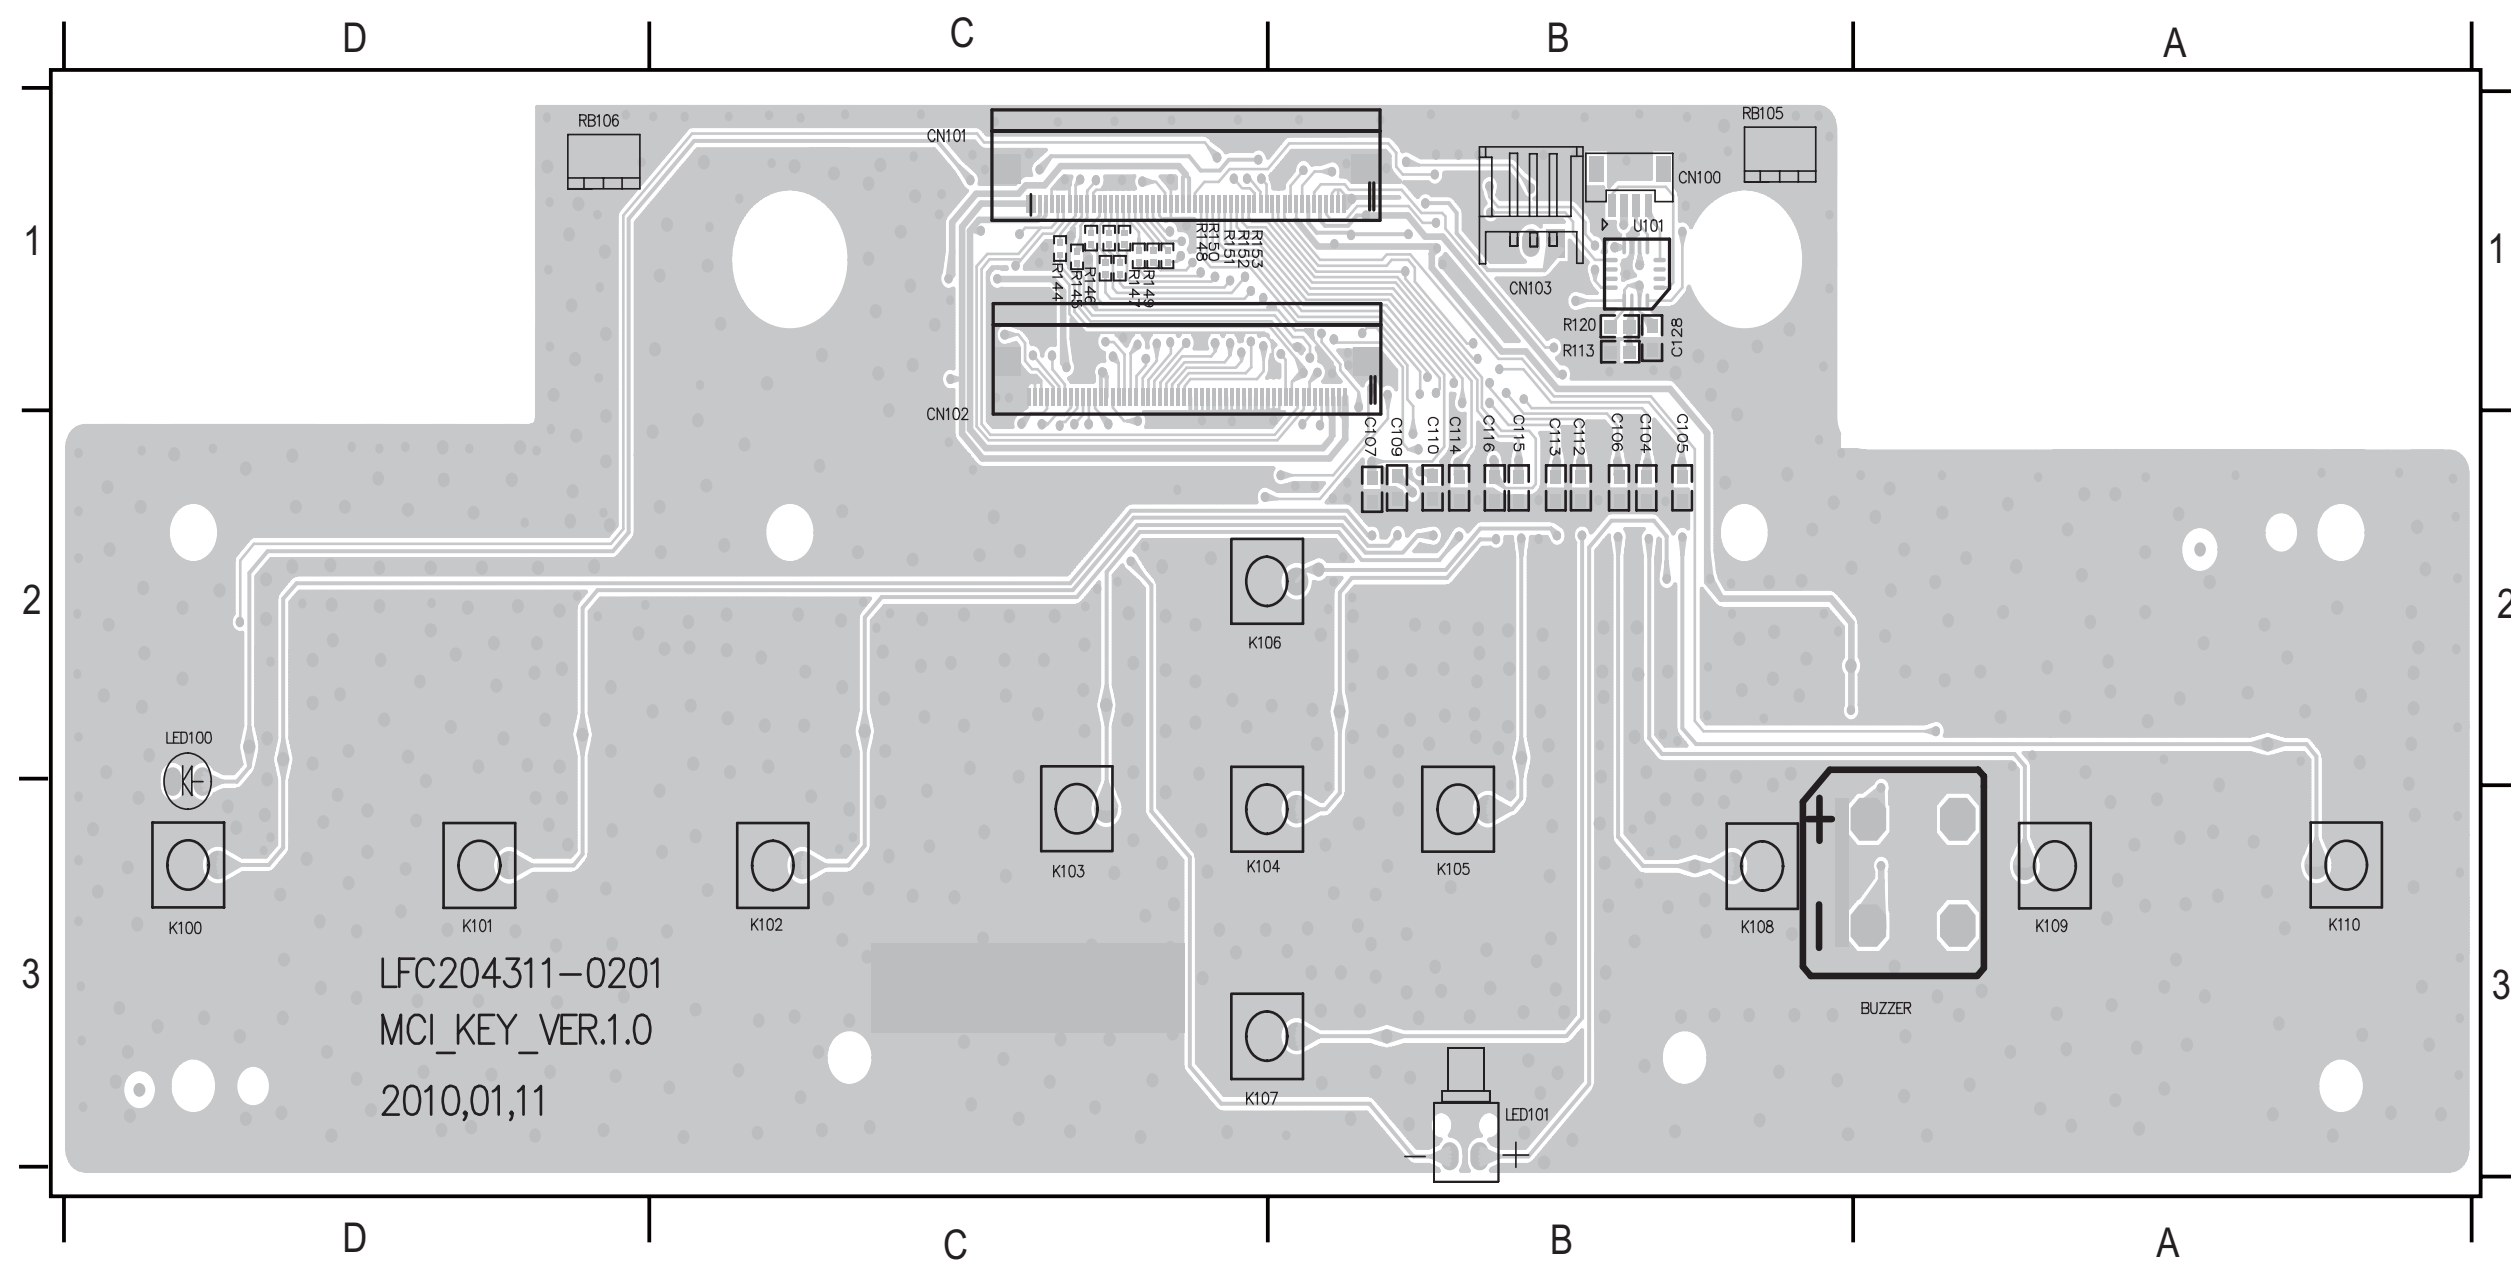

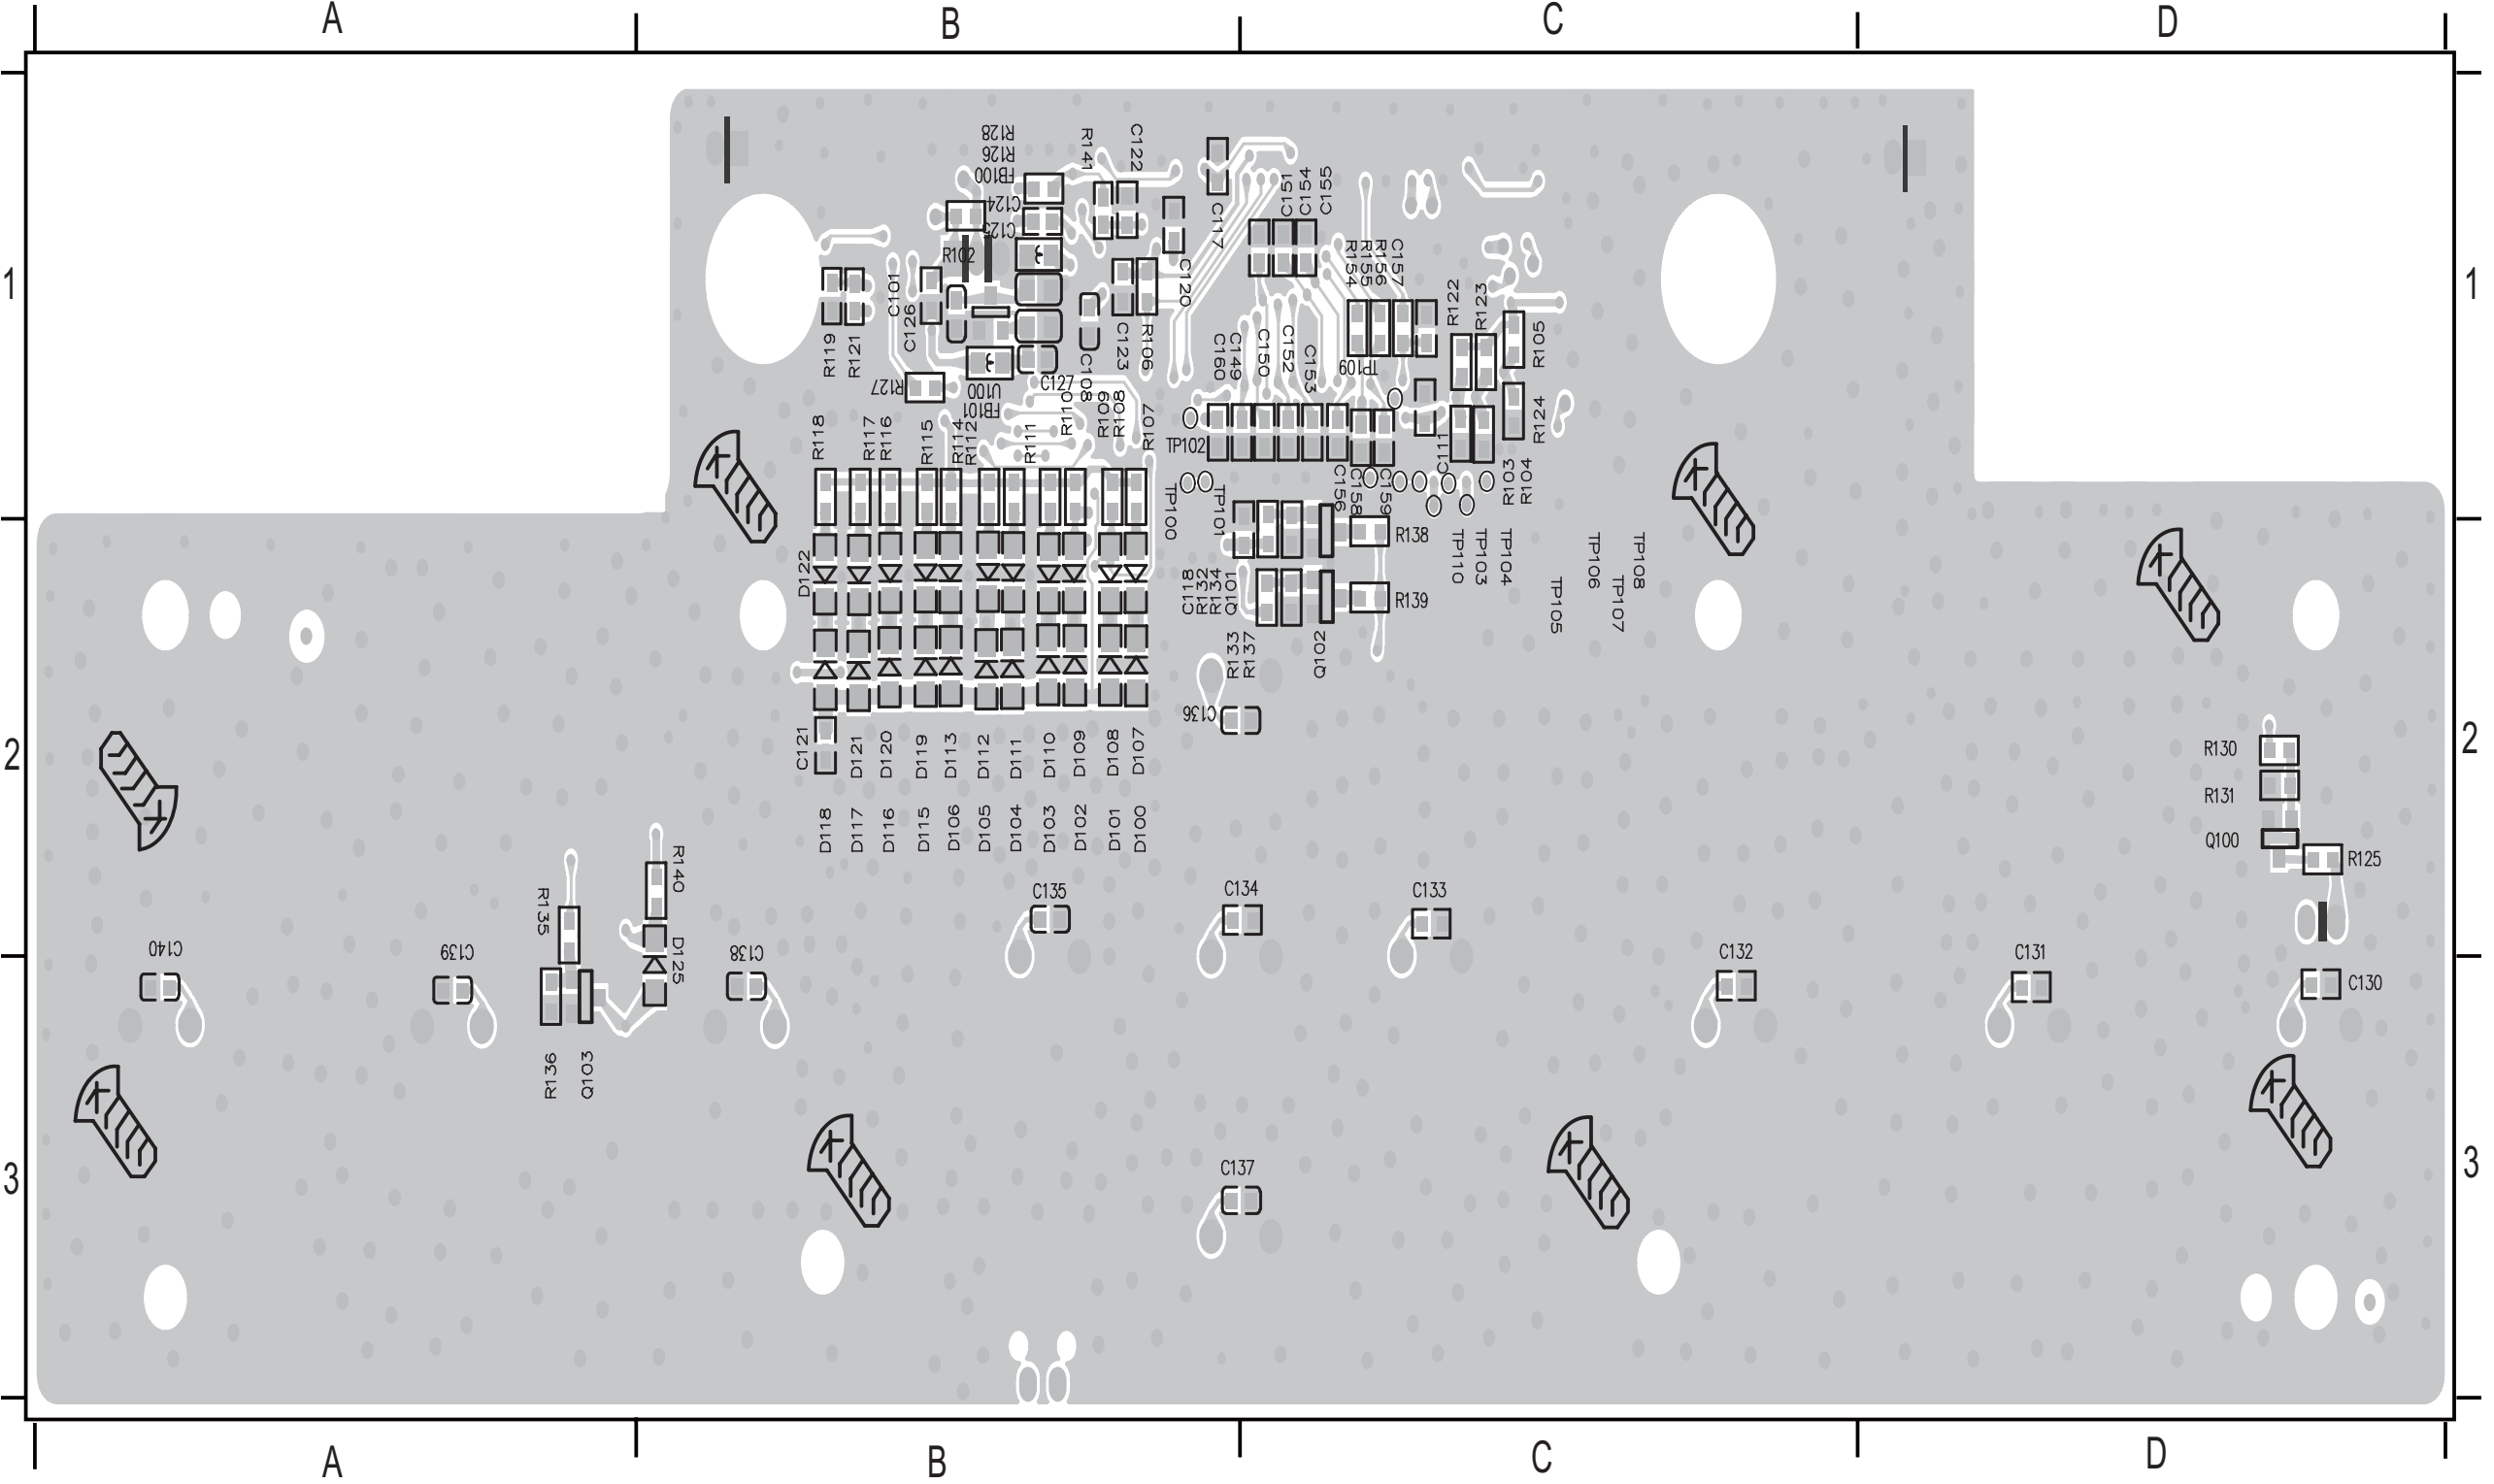



---


# AMP Board


---

TABLE OF CONTENTS

Circuit Diagram .....	9-2
PCB Layout Top View .....	9-3
PCB Layout Bottom View .....	9-4



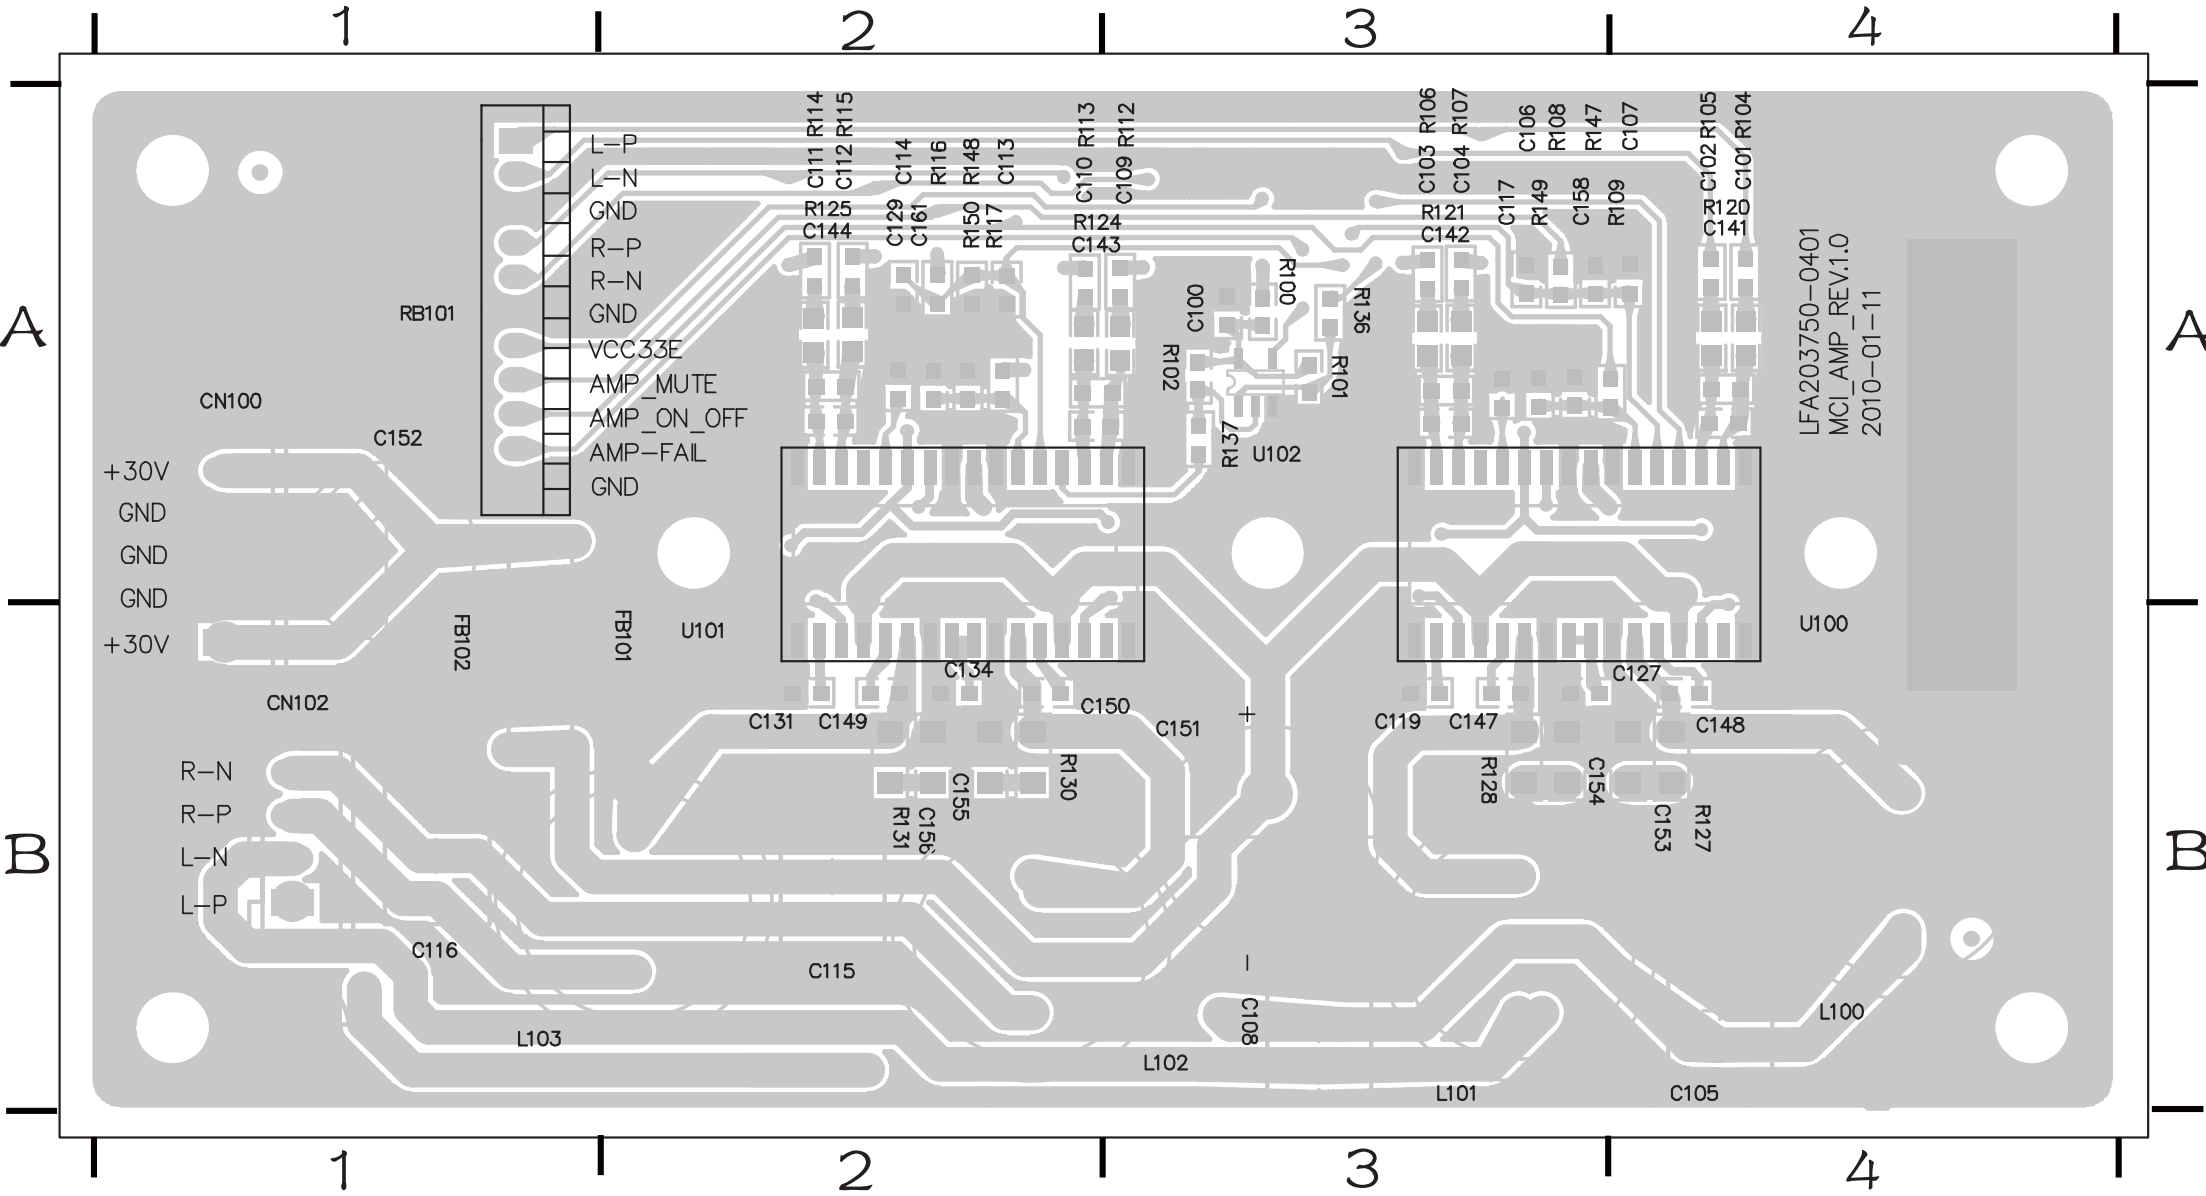

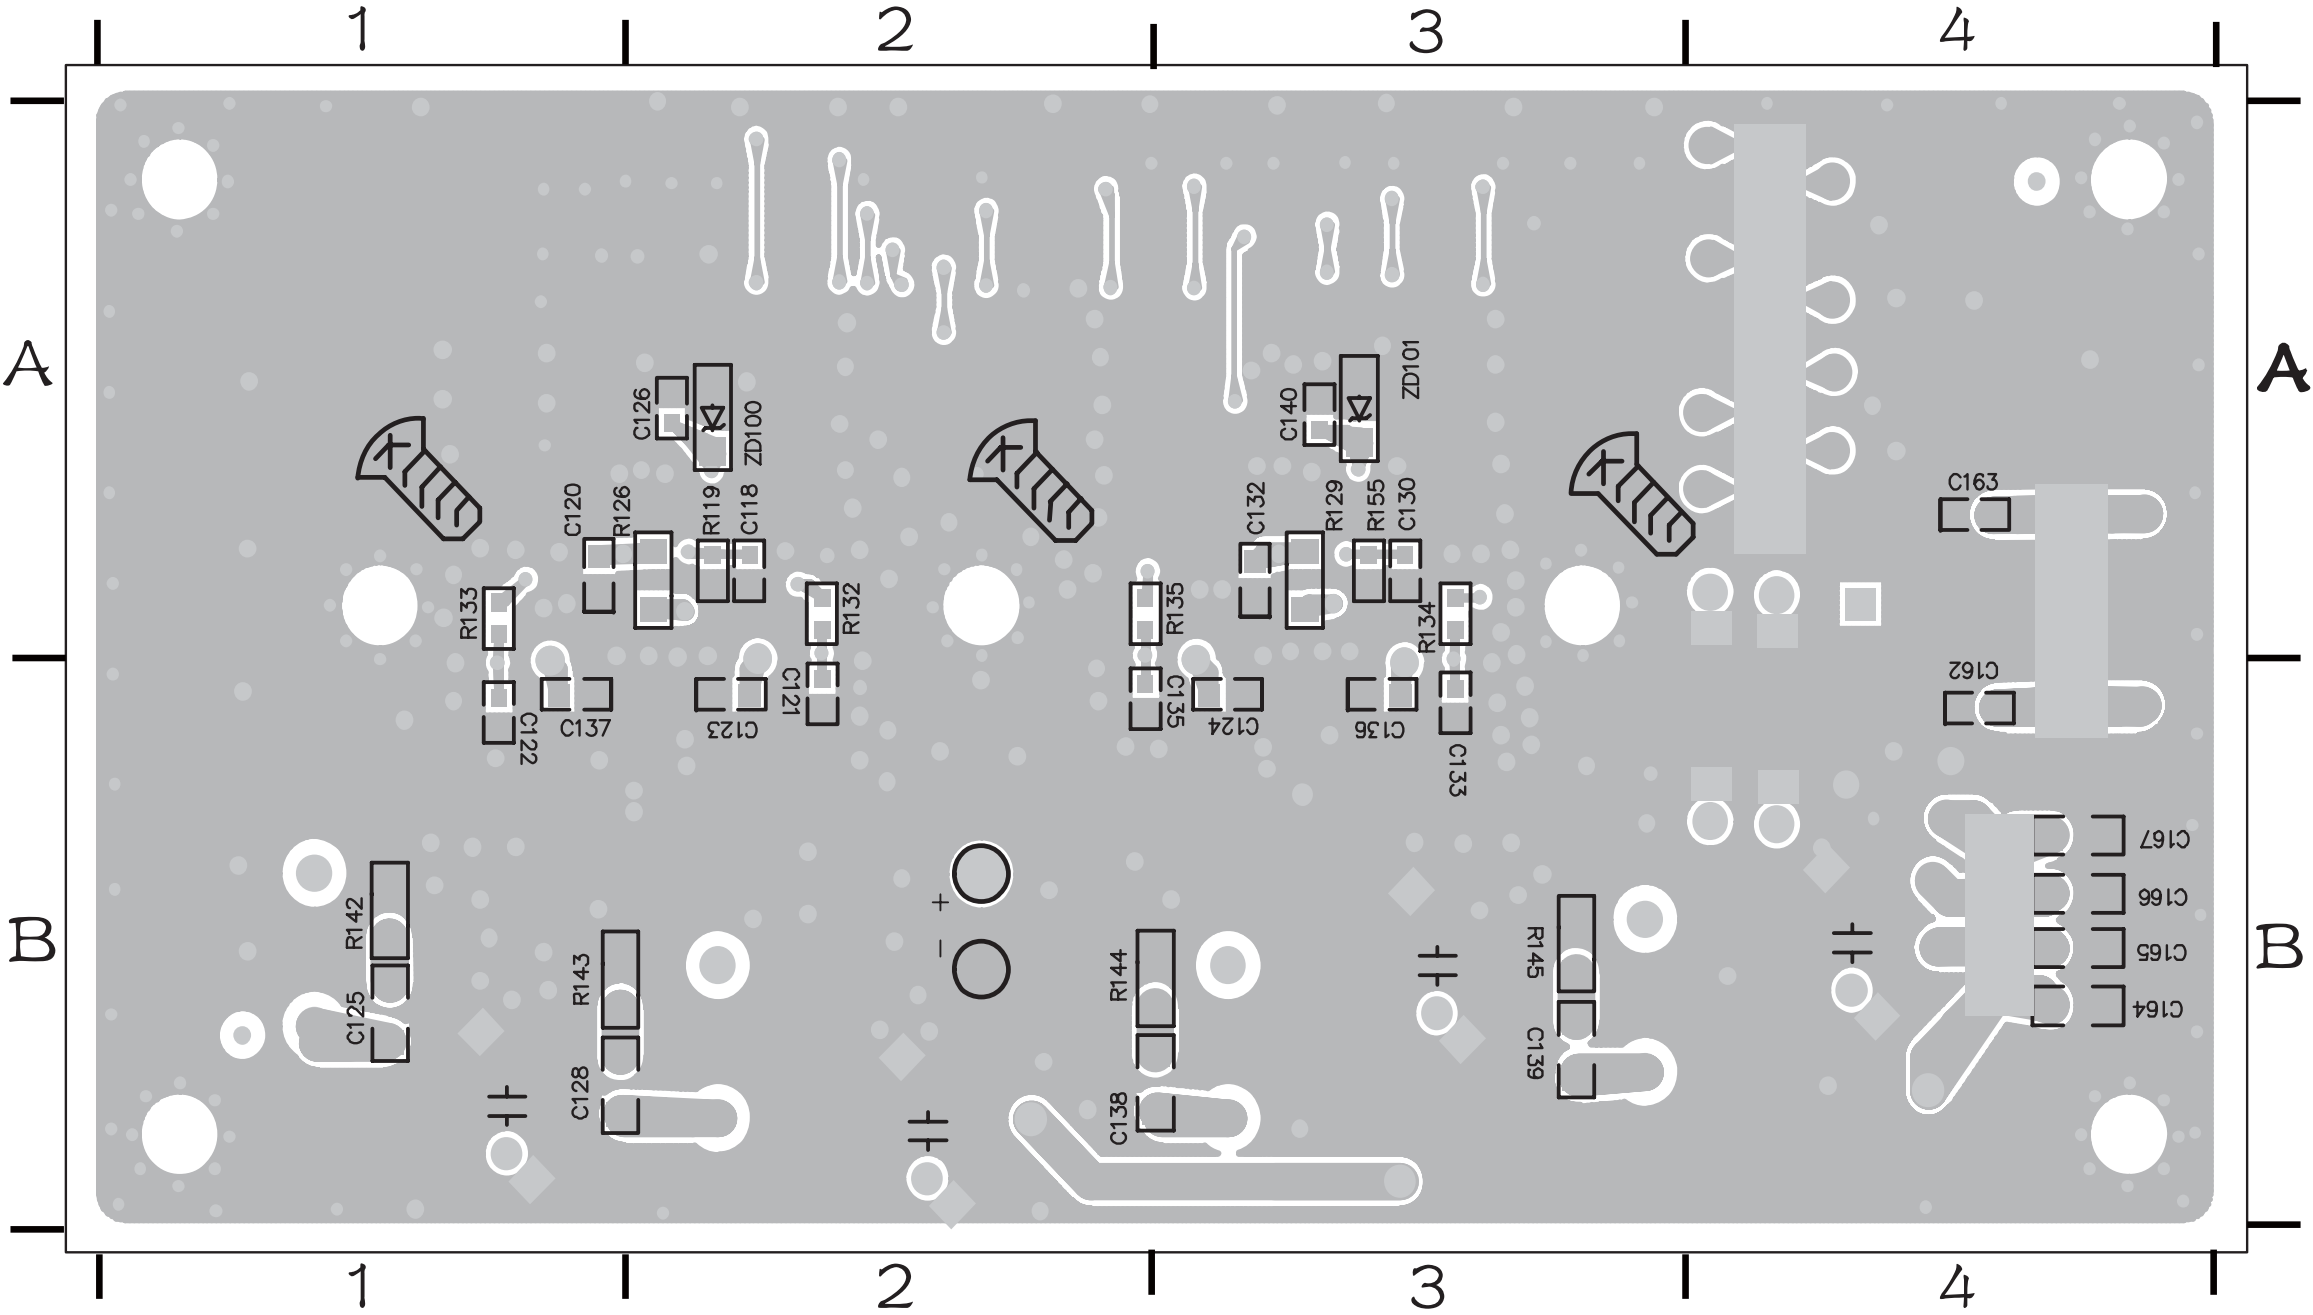


---

# Speaker Jack Board


---


TABLE OF CONTENTS

Circuit Diagram .....	10-2
PCB Layout Top View .....	10-3
PCB Layout Bottom View .....	10-4

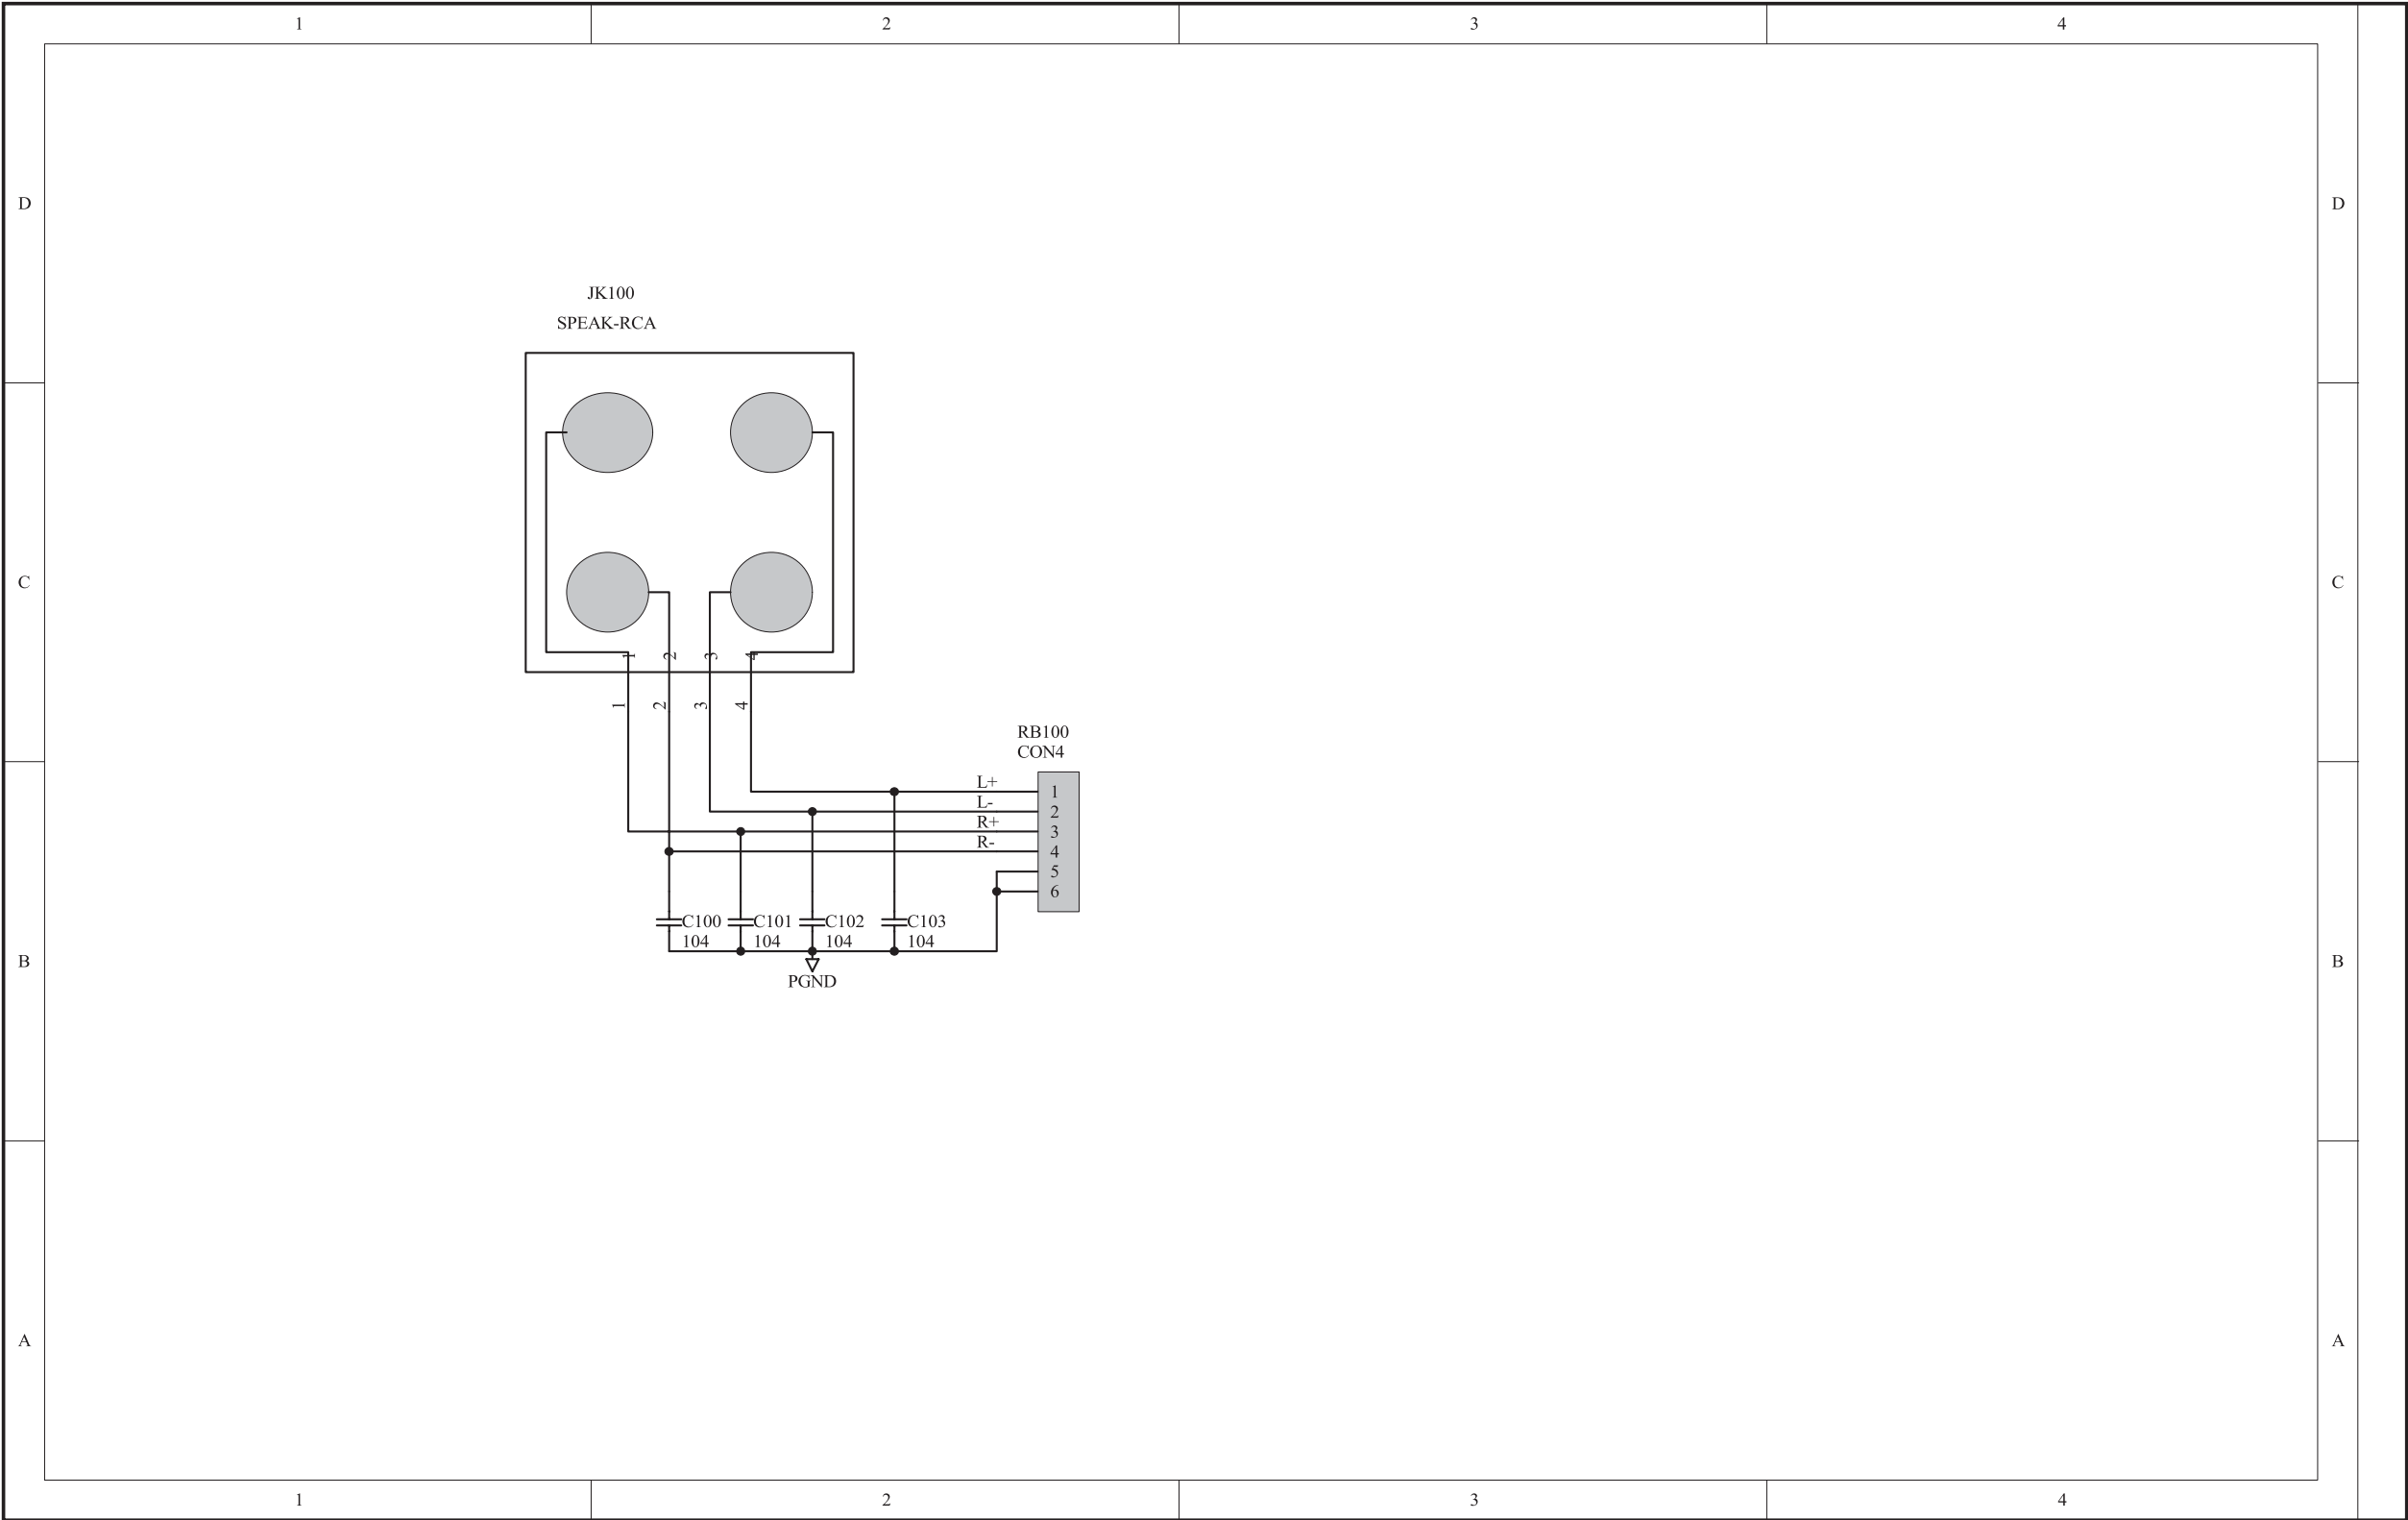



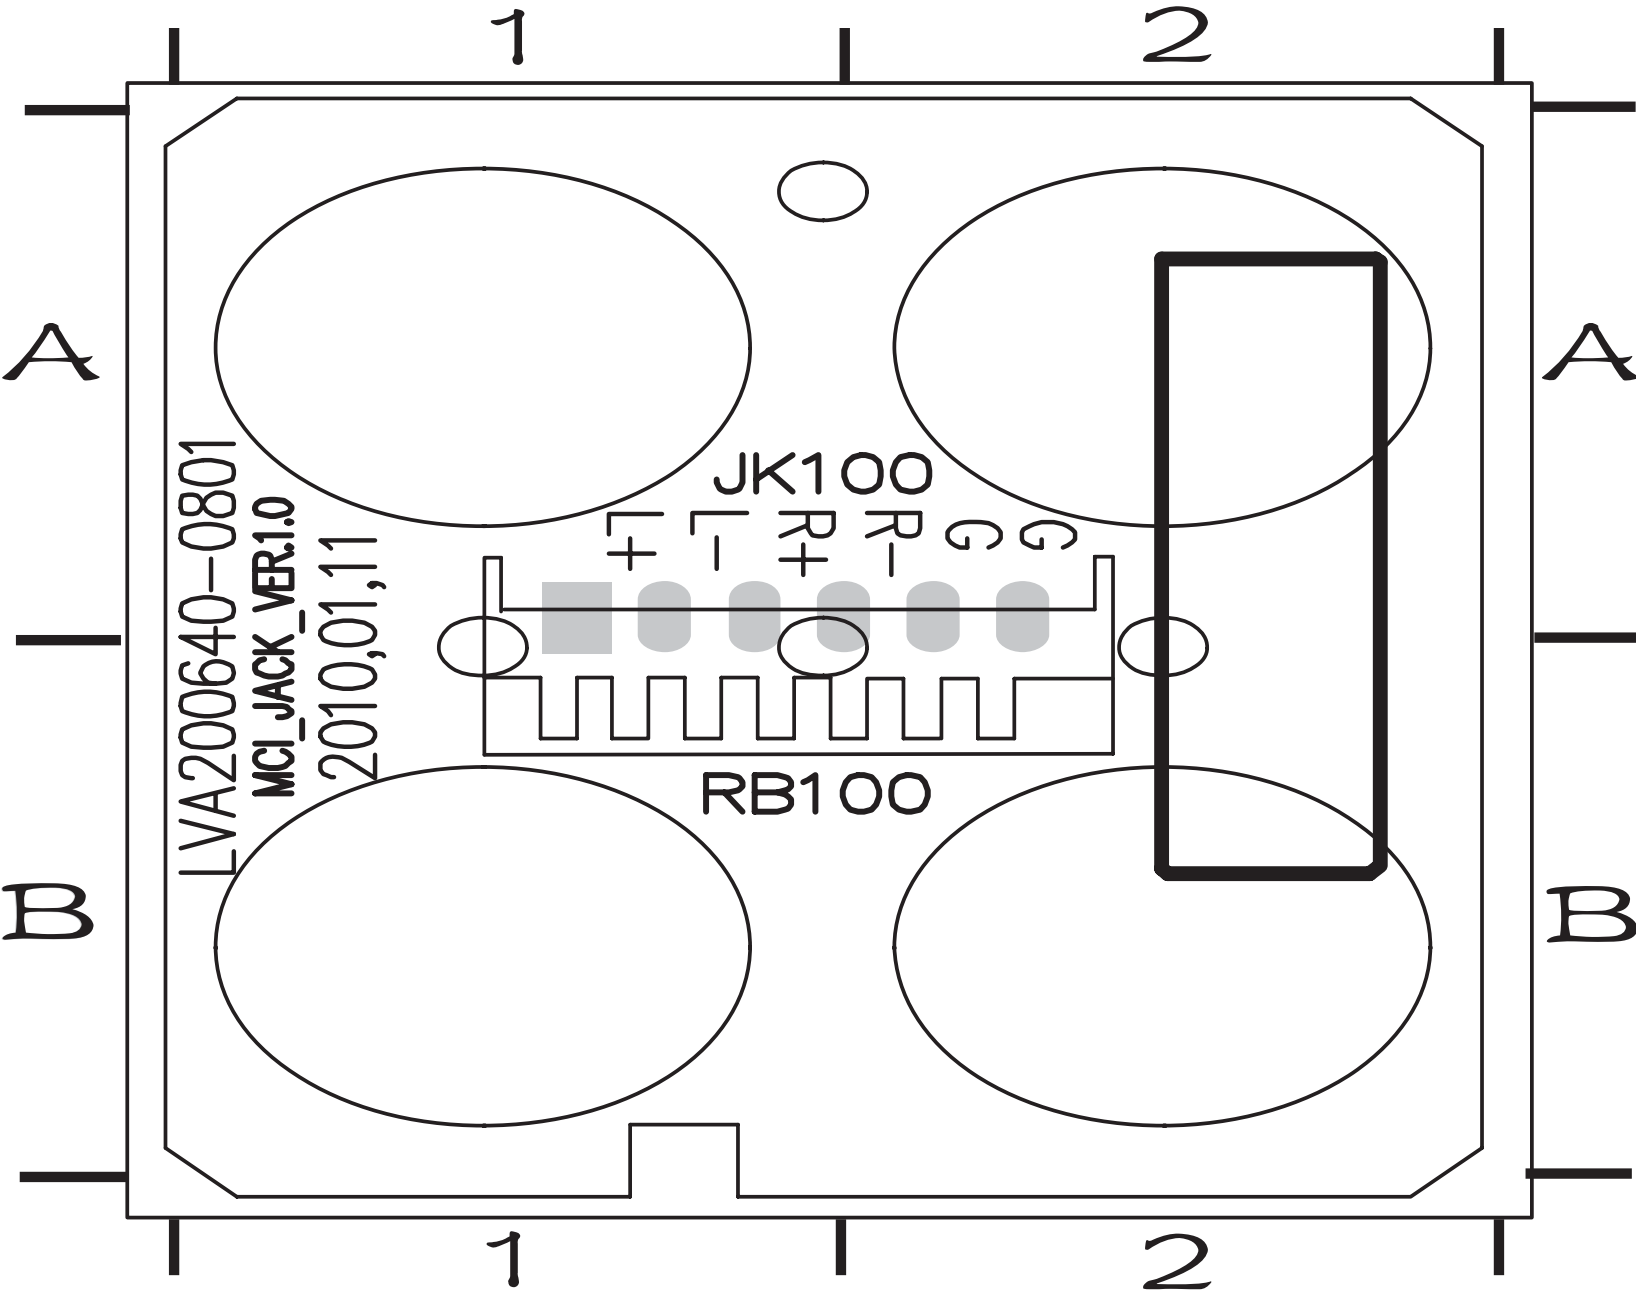

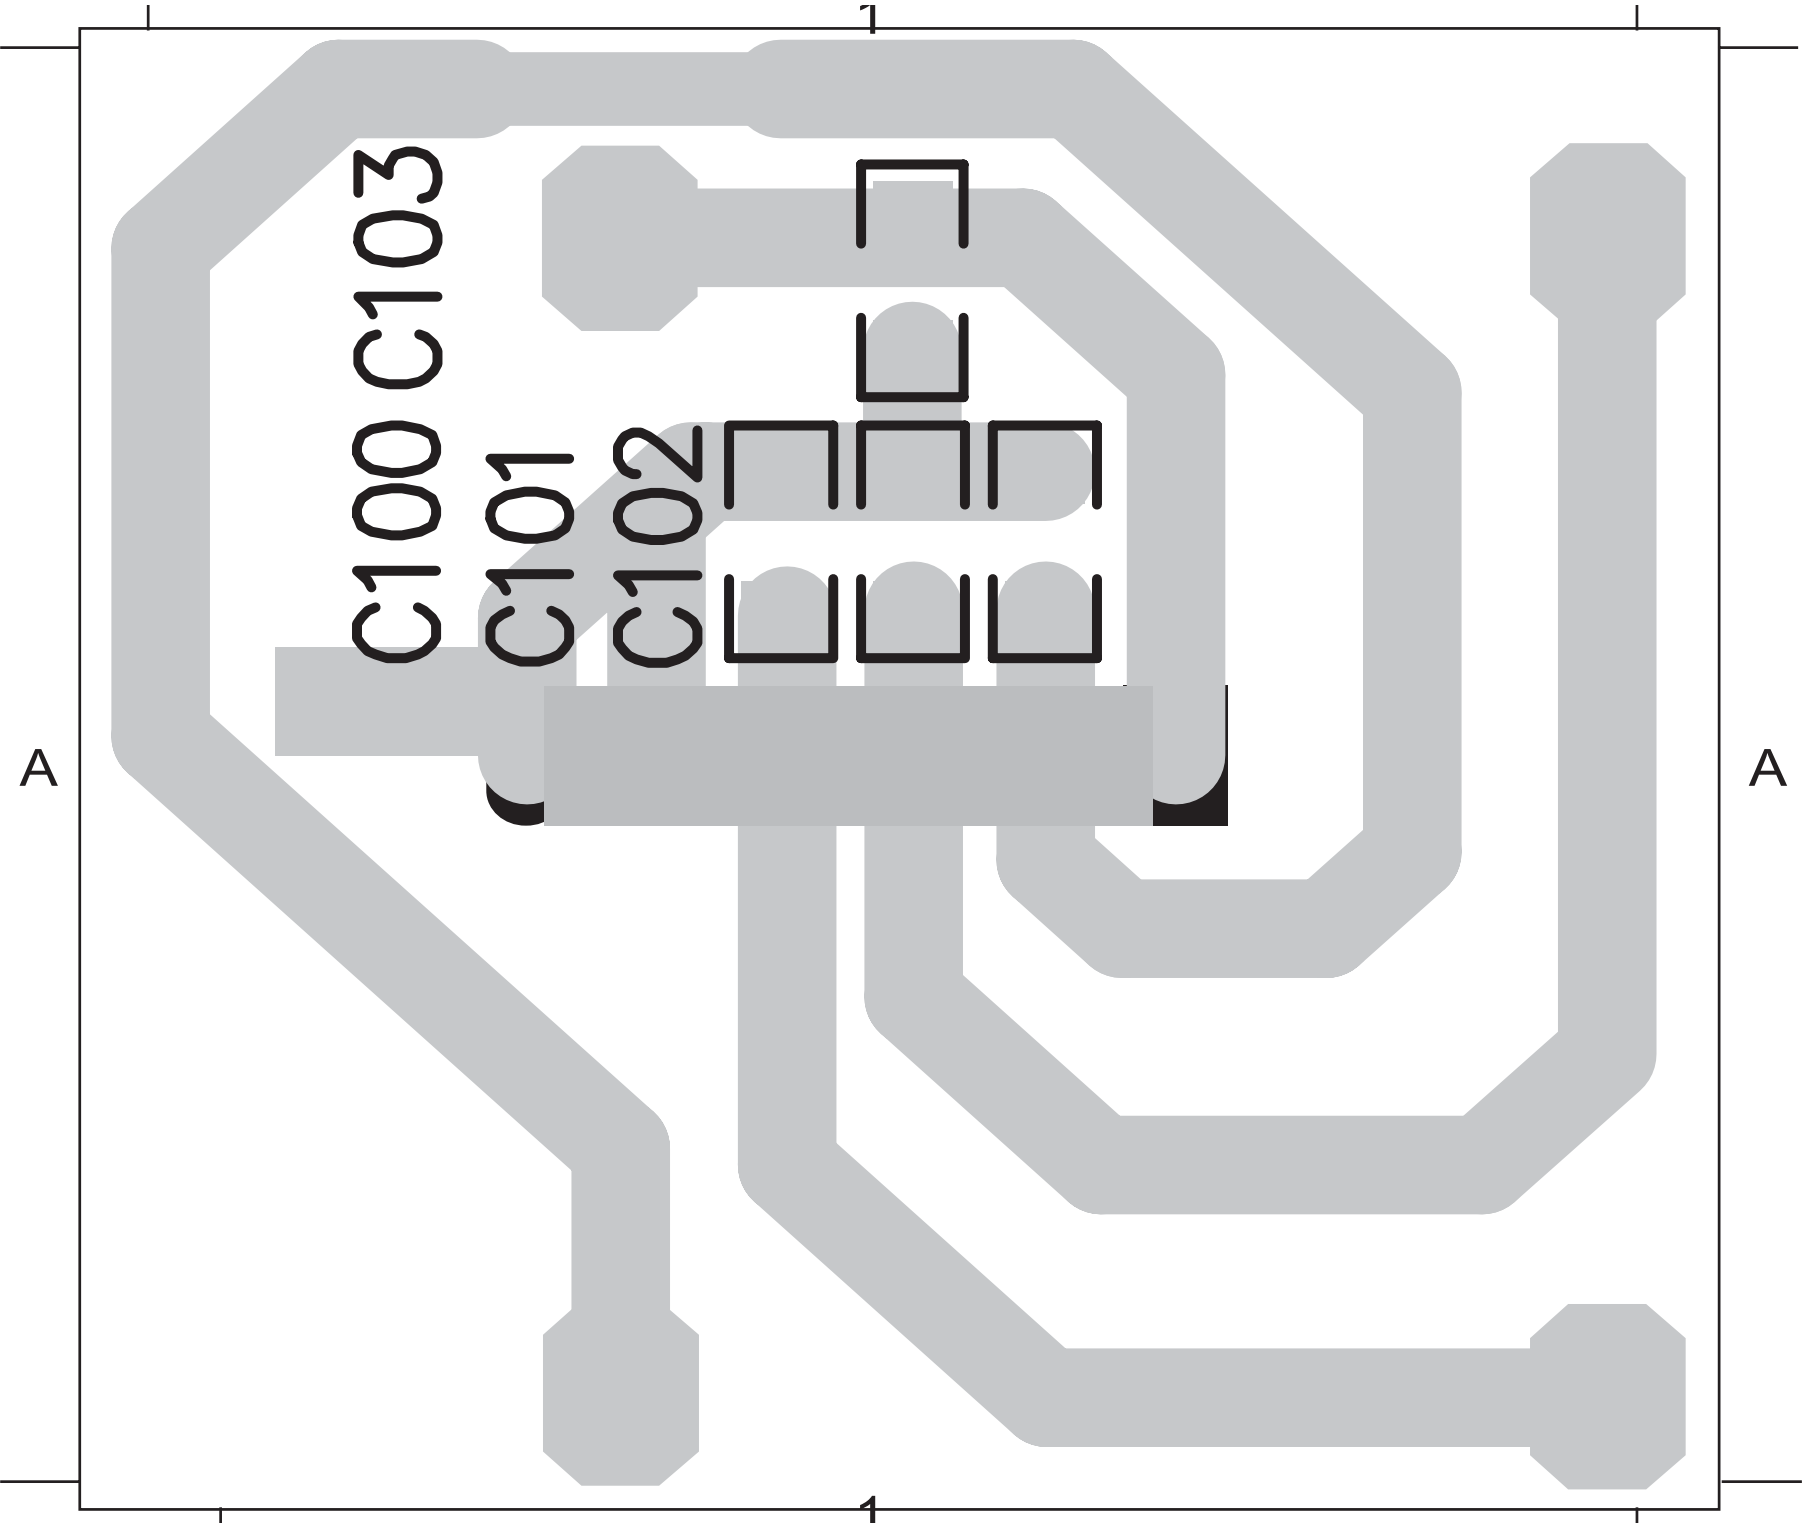


---


# Aux & Earphone Board


---

TABLE OF CONTENTS

Circuit Diagram .....	10-2
PCB Layout Top View .....	10-3
PCB Layout Bottom View .....	10-4

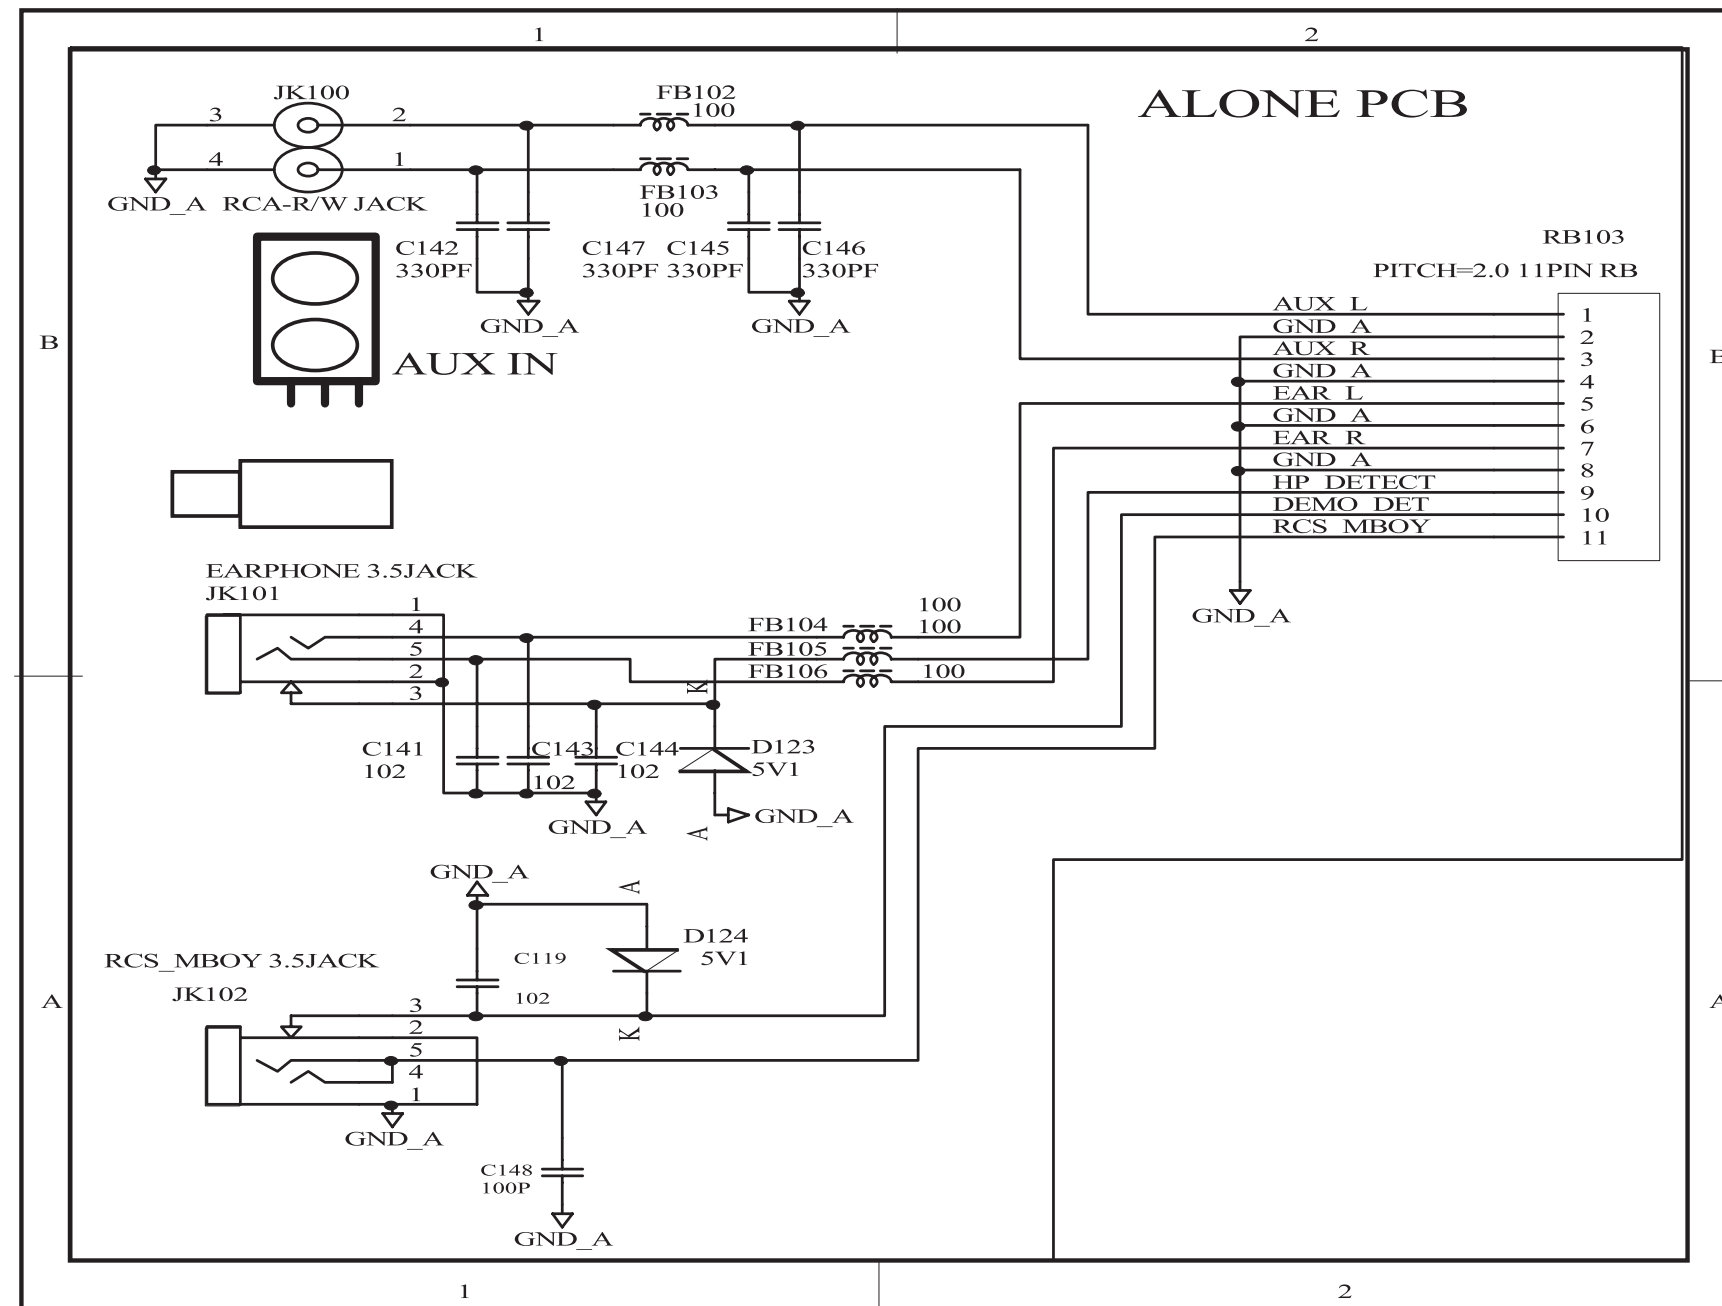

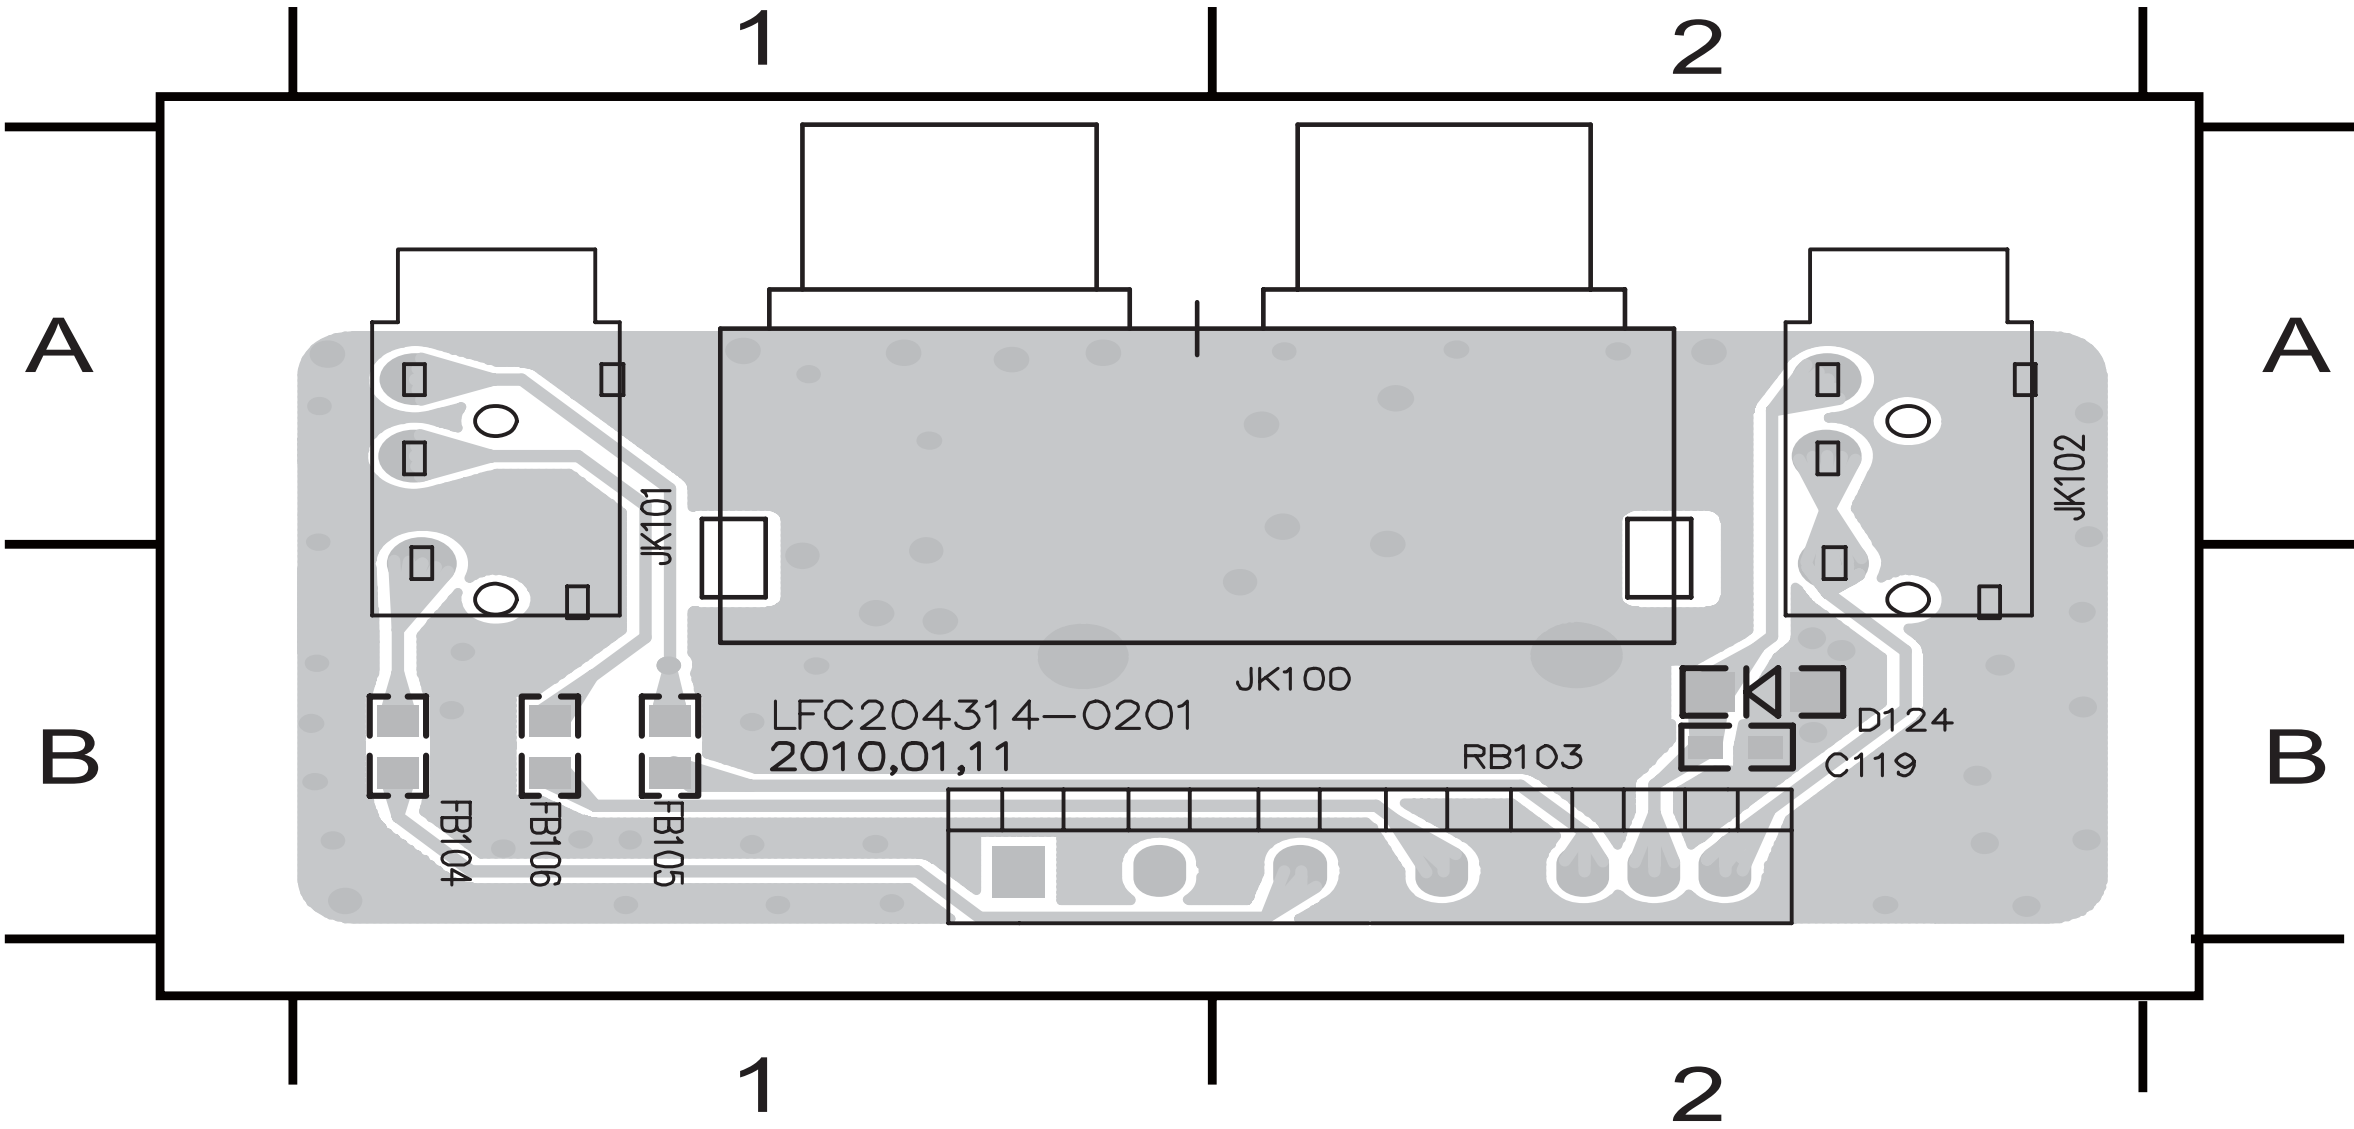

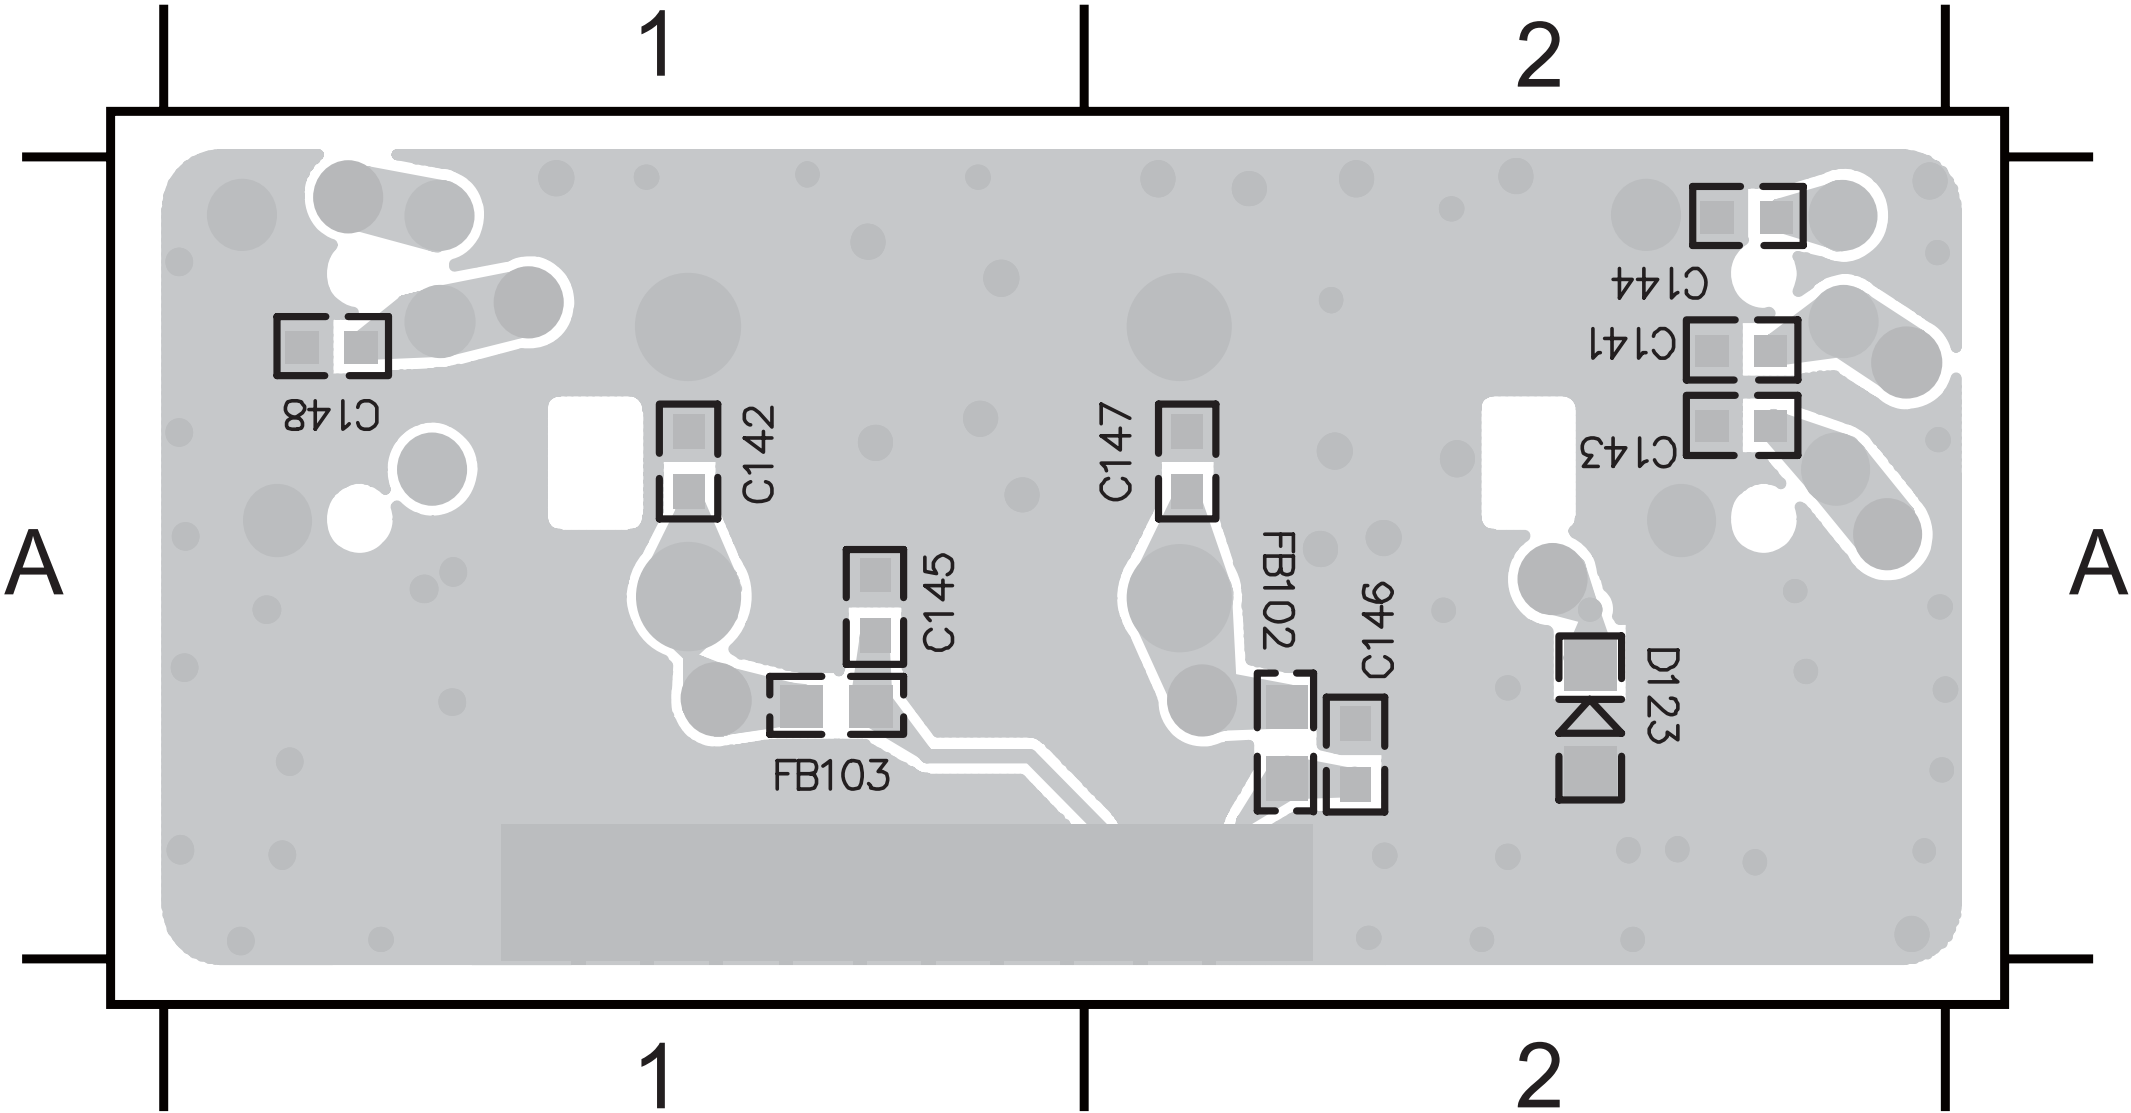




---


# IR Board


---

TABLE OF CONTENTS

Circuit Diagram .....	12-2
PCB Layout Top View .....	12-3
PCB Layout Bottom View .....	12-4

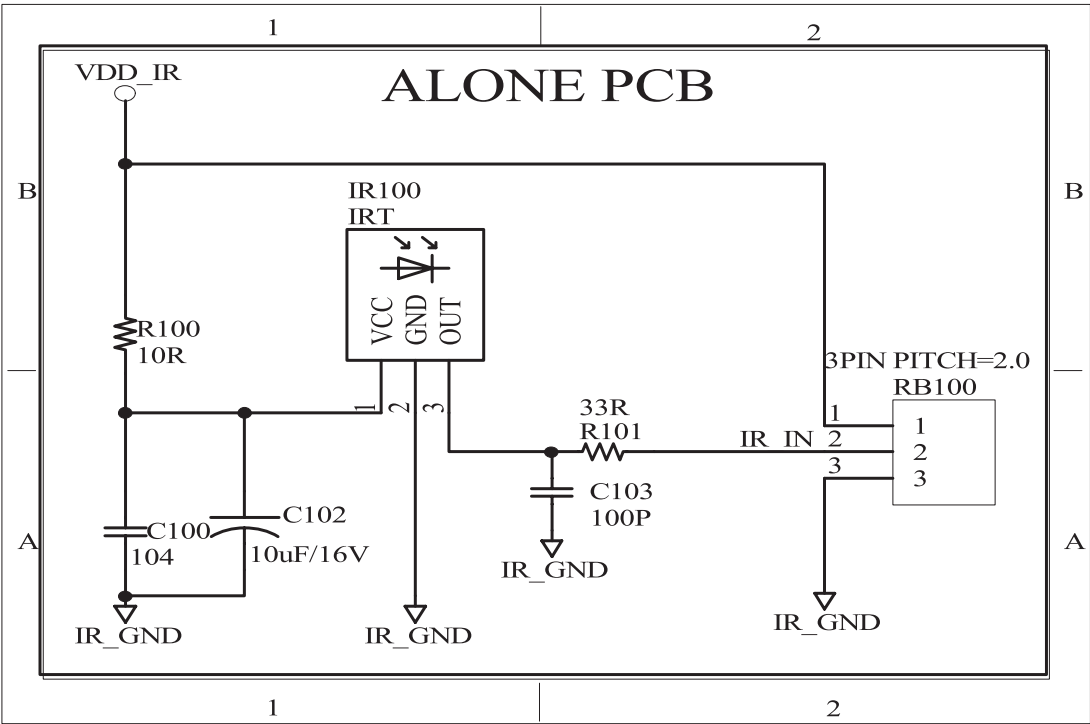

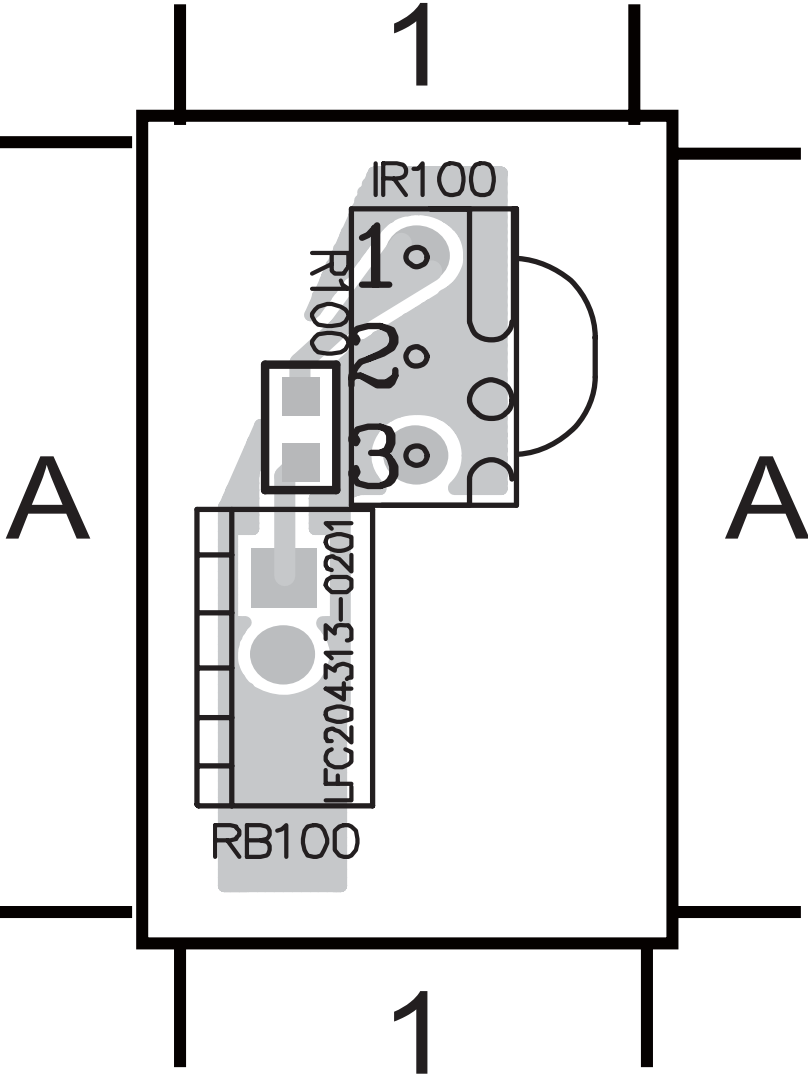

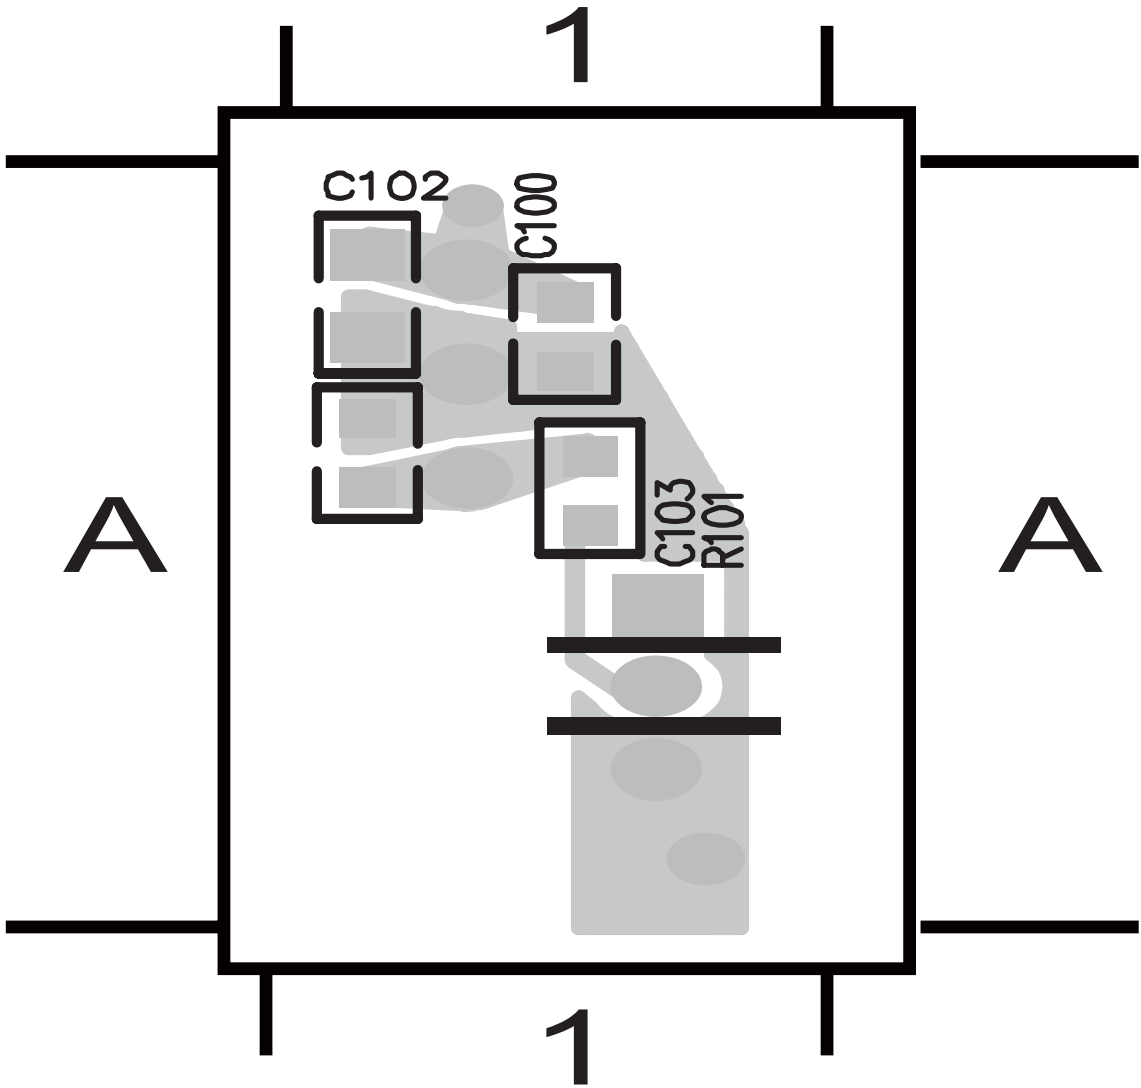


---

# OP/CL Board


---


TABLE OF CONTENTS

Circuit Diagram .....	13-2
PCB Layout Top View .....	13-3
PCB Layout Bottom View .....	13-4

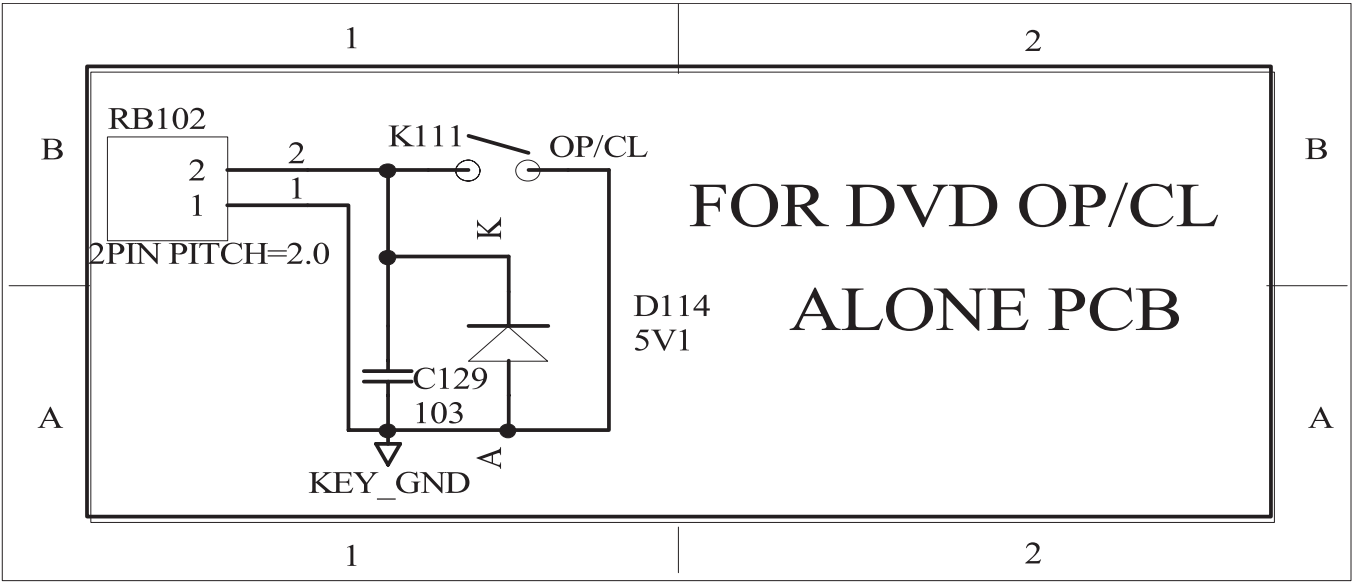



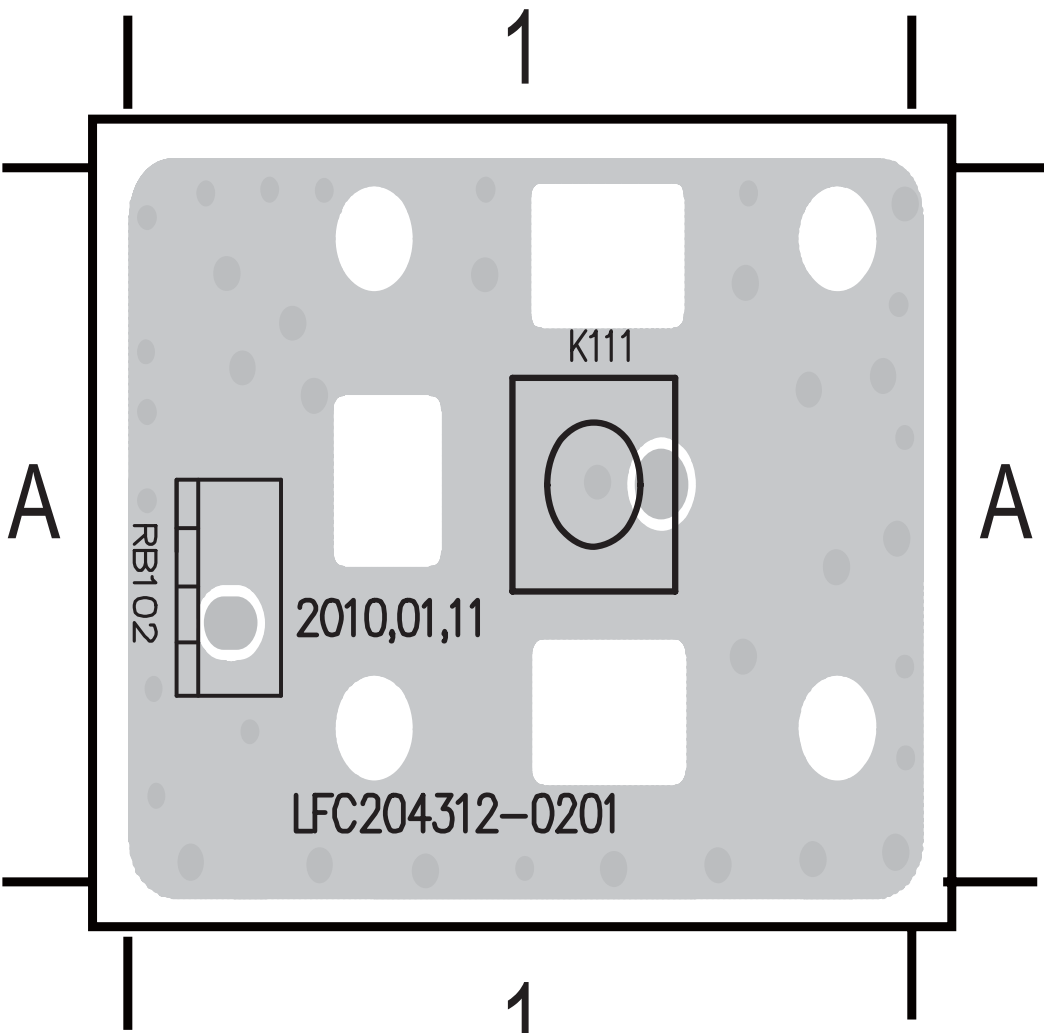

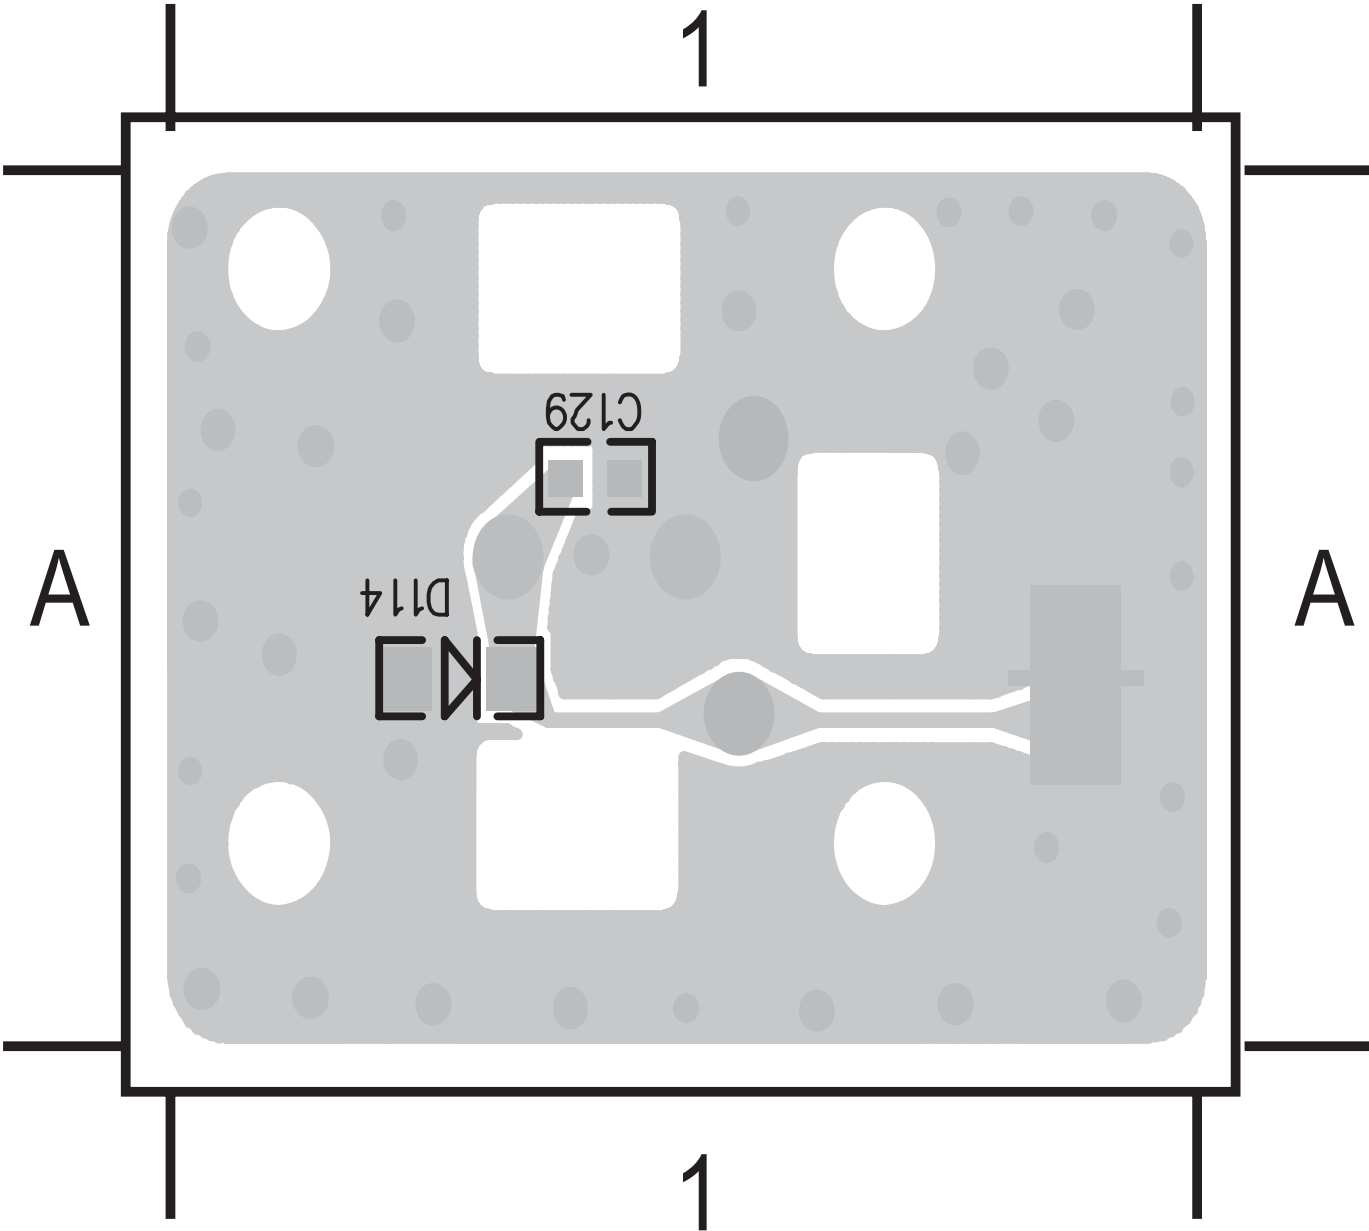

## REVISION LIST

### **1.0 Manual 3141 785 34950**

Initial Service Manual released.

### **1.1 Manual 3141 785 34951**

In this version, service policy changed from CLR to MLR.

### **1.2 Manual 3141 785 34952**

In this version, Page 2-5 Rescue Mode added.

### **1.3 Manual 3141 785 34953**

In this version, version /93 added.