

TEAC[®]

899

SERVICE MANUAL

X-1000R

Stereo Tape Deck

1 SPECIFICATIONS AND SERVICE DATA

SPECIFICATIONS

Track System 1/4-track, 2-channel stereo**Head System**6 heads: forward erase, forward record, reverse playback,
forward playback, reverse record, reverse erase.**Reel Size** 10-1/2 and 7"**Tape Speed** 19cm/s (7-1/2 ips) and 9.5cm/s (3-3/4 ips)**Inputs (level and impedance)**

MIC: Specified input level: -60dB (0.775mV)/10kohms
 Min. input level: -70dB (245μV)

LINE IN: Specified input level: -12dB (195mV)/50kohms
 Min. input level: -22dB (61.5mV)

Outputs (level and impedance)

OUTPUT: Specified output level: -5dB (436mV)/10kohms
 Max. output level: +1dB (0.869V)

PHONES: Specified output level: -24dB (48.9mV)/8ohms

Playback equalization

"LH" tape: 19cm/s: 3,180μs + 50μs (NAB)
 9.5cm/s: 3,180μs + 90μs (NAB)

"EE" tape: 19cm/s: 3,180μs + 35μs
 9.5cm/s: 3,180μs + 50μs


Motors

Capstan motor: FG servo DC motor
Reel motor: 2 DC slotless motors

Bias Frequency 100kHz**Power Requirements**

100/120/220/240V, AC 50/60Hz 90W (General export model)
 220V AC 50Hz, 100W (Europe model)
 240V AC 50Hz, 100W (U.K./Australia model)
 120V AC 60Hz, 90W (U.S.A./Canada model)

Weight 22.0kg (48.8/16 lbs) net
 26kg (57.5/16 lbs) (with wooden case)

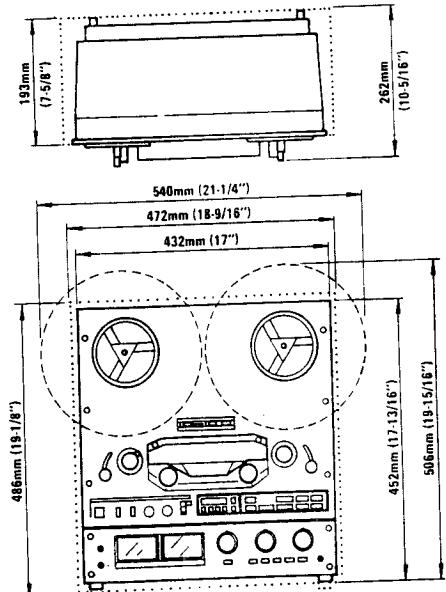

Broken line indicates General Export Models for Limited Areas.

Fig. 1-1 Dimensions

SERVICE DATA

MECHANICAL

Tape Speed Deviation 3,000Hz ± 30Hz**Tape Speed Drift** 15Hz**FWD/REV Tape Speed Differential** 30Hz**Wow and Flutter**

Playback: 0.05% (WRMS), 0.10% (RMS) at 19cm/s
 0.07% (WRMS), 0.12% (RMS) at 9.5cm/s

Record/Playback: 0.12% (RMS) at 19cm/s
 0.15% (RMS) at 9.5cm/s

Pinch Roller Pressure 1.35kg ~ 1.9kg (3.0 lbs ~ 4.2 lbs)**Tape Tension**

Play mode:
Take-up: 50g ±10g (1.4oz ~ 2.1oz)
Supply: 50g ±10g (1.4oz ~ 2.1oz)

Fast winding mode

Take-up: 110g ±10g (3.5oz ~ 4.2oz)
Supply: —

Brake Torque**Forward direction:** 1.2 ~ 1.7kg-cm (17 ~ 24oz-inch)**Reverse direction:** 0.6kg-cm (8.3oz-inch) or less**Left/right deviation:** 0.2kg-cm (2.8oz-inch) or less**Fast Winding Time** 80 seconds or less for 550m (1800 feet)**Pitch Control** Standard tape speed ±6% or more**FWD/REV Change Time** 3.5 sec. ±0.5 sec.**TIMER Activate Time** 4 sec. ±2 sec.

ELECTRICAL

Frequency Response

See Fig. 3-5 to 3-10

Signal to Noise Ratio

Playback: 50dB min. (19cm/s, LH)
 52dB min. (19cm/s, EE)
 49dB min. (9.5cm/s, LH)
 52dB min. (9.5cm/s, EE)

Overall: 48dB min. (19cm/s, LH)
 50dB min. (19cm/s, EE)
 46dB min. (9.5cm/s, LH)
 50dB min. (9.5cm/s, EE)

Overall (dbx): 65dB min. (Both speeds, various tapes)

Erase Efficiency 68dB min. at 1kHz (measured with input 10dB higher than the specified input level)

Channel Separation 50dB min. at 1kHz**Adjacent Track Crosstalk** 40dB min. at 125Hz**Total Harmonic Distortion** At 1kHz, and at 19cm/s

0.8% or less

0.8% or less (dbx IN)

3% or less (dbx IN + 20VU)

- Improvements may result in SPECIFICATIONS AND DATA changes.
- Value of "dB" in the data refers to 0dB (0.775V), except specified.

2 MECHANICAL ADJUSTMENTS AND CHECKS

2-1 ROTATING PART THRUST CLEARANCE CHECKS

Reference values

Capstan shaft:	0.1mm to 0.25mm (magnefloat type)
Inertia roller:	0.05mm to 0.3mm
Tension arm guide roller:	0.05mm to 0.3mm
Reel motor:	0 (spring type)
Tension arm:	0 (spring type)

NOTE: Since the capstan shaft is a magnefloat type, check that it is forced towards the rear of the deck while rotating.

2-2 CAPSTAN MOTOR REPLACEMENT

- When the capstan motor is replaced, install it with its lead wires and washers as shown.
- Check that, when the deck is operated by repeating the forward and reverse play modes, the capstan drive belt changes position on the flywheels smoothly.

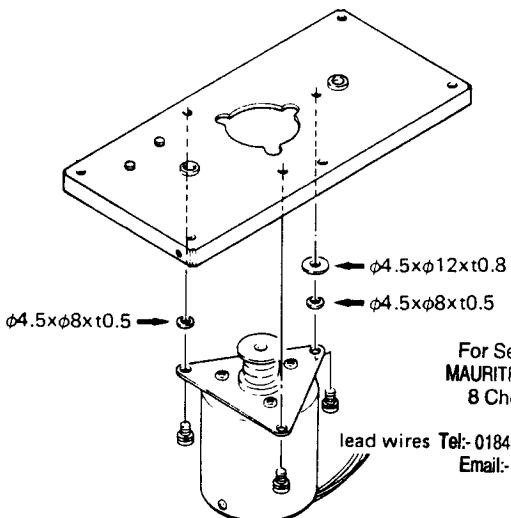


Fig. 2-1

2-3 BRAKE ADJUSTMENT

NOTE: The explanation and figure in this paragraph are for the left side brake, similar checks and adjustments are applicable for the right side one.

- Adjust by moving the brake band bracket in either direction (arrow (A)) so that the reel motor chassis is in parallel with the brake arm, and so that the brake band makes proper clearance equally all around the reel table base.
- Adjust by moving the brake solenoid in either direction (arrow (D)) so that the stroke of the solenoid plunger is about 2mm.
- Adjust by moving the band ass'y retaining plate as shown in (B, C, E) so that, when the plunger is pushed in the direction of the solenoid housing, the reel table base is not rubbed by the brake band and is properly spaced.

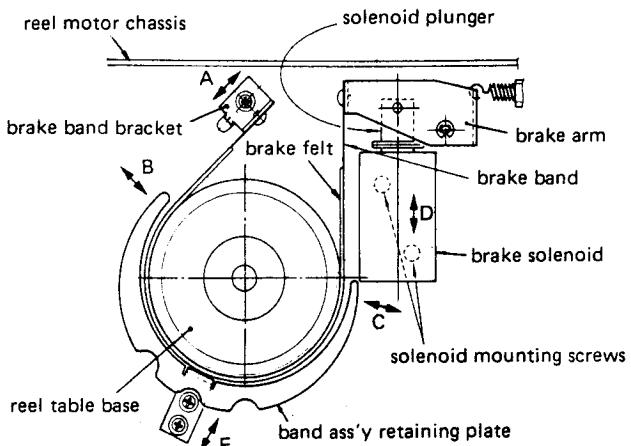


Fig. 2-2

2-4 BRAKE TORQUE MEASUREMENT

- Place an empty 7" reel, connected to a spring scale by a string, on the reel table.
- Pull the scale away from the reel and read the scale indication only when the reel table is steady motion.
- Do steps 1 and 2 for each measuring condition, (A) through (D) in Fig. 2-3.
- The values are as chart in Fig. 2-3.

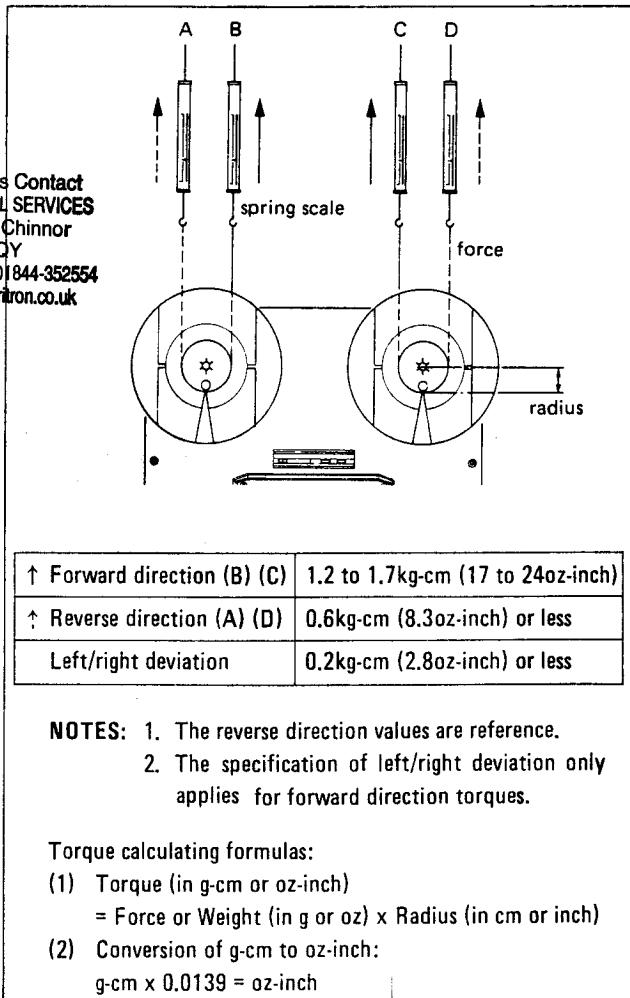


Fig. 2-3

2-5 PAUSE POSITION ADJUSTMENT

1. Place the deck in the pause mode.
2. Adjust by turning the pause positioning nut so that the clearance between the capstan shaft and the tape is 0.5mm to 1.0mm.
3. Of the two capstan shaft/pinch rollers, adjustment is allowable only for the side having the narrower clearance.
4. Check that, by repetition of play mode to pause mode and stop mode to pause mode, there is clearance at both sides.

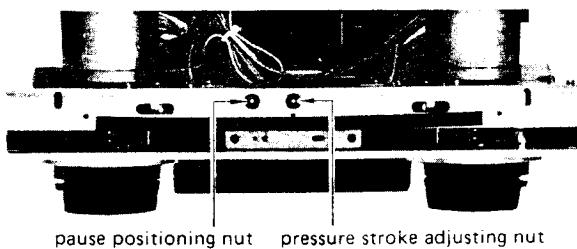


Fig. 2-4 Pause position and pinch roller pressure stroke adjustments


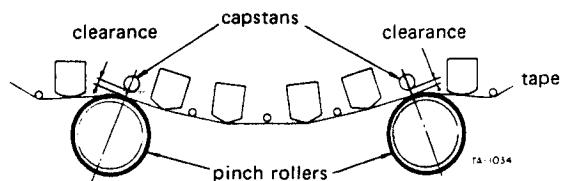


Fig. 2-5 Pause position adjustment

2-6 PINCH ROLLER PRESSURE STROKE ADJUSTMENT

1. Set the deck in the forward or reverse play mode.
2. Adjust by turning the pressure stroke adj. nut (Fig. 2-4) so that the clearance between the pin and the stopper cushion is about 1.0mm.
3. Since the clearance is produced at one side (left or right), adjustment for this side only is permissible.

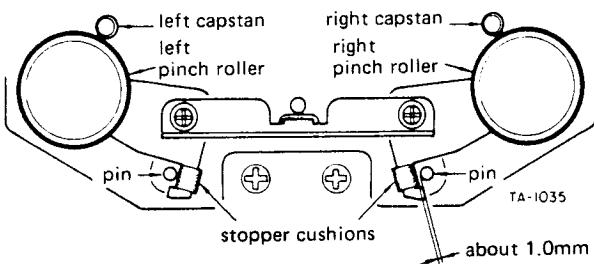

Either the left or right should have a clearance of about 1.0mm.

Fig. 2-6

2-7 PINCH ROLLER PRESSURE MEASUREMENT

- NOTES:** 1. The explanation below applies to both the left and right pinch rollers.
2. Both pinch roller pressures are automatically set with equal value.

1. Hold both the left and right tension arms in the upper positions using rubber bands, string etc.
2. Set the deck in either play mode with no tape loaded.
3. Attach the spring scale to the pinch roller as shown in the figure.
4. Draw the pinch roller away from the capstan shaft (in the direction of a line intersecting the centers of the capstan shaft and the pinch roller) until the capstan shaft and the pinch roller are separated.
5. Return the scale back until the pinch roller just begins to turn. The scale should then be reading as follow.
Reference value: 1.35kg to 1.9kg (3.0 lbs to 4.2 lbs)
6. If the reading is out of specification, replace defective part(s). There are no adjustable parts.


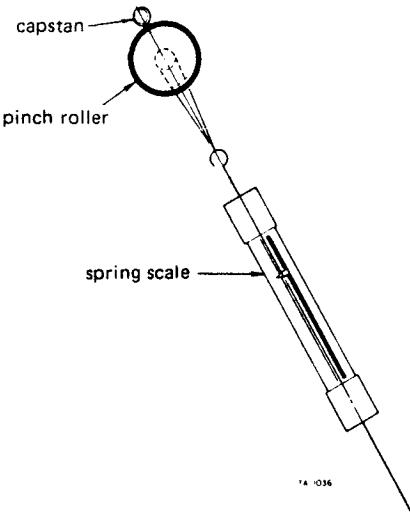


Fig. 2-7

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

2-8 TAPE TENSION

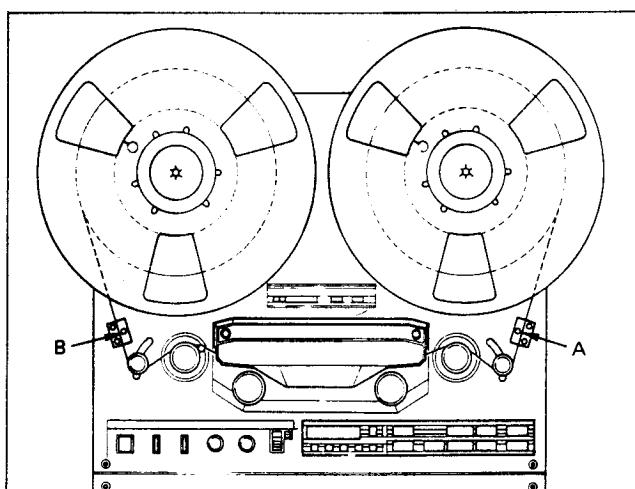

Tape tension value

NOTE: Alphabet letters in parentheses indicates measuring point shown in figure.

Play mode

Take-up:	(A) in FWD (B) in REV	50g ± 10g (1.4oz ~ 2.1oz)
Supply:	(B) in FWD (A) in REV	50g ± 10g (1.4oz ~ 2.1oz)

Fast winding mode

Take-up:	(A) in F.F. (B) in REV	110g ± 10g (3.5oz ~ 4.2oz)
Supply:	(B) in F.F. (A) in REV	This value is automatically set when doing "2-9 FAST WINDING SPEED" adjustment.

Fig. 2-8

- NOTES:**
1. Since these settings are precisely factory adjusted, in general, they should not be re-adjusted. If it is specifically required, a special meter is needed.
 2. To facilitate adjustment, the deck should be placed in a vertical position.
 3. For the reels mounted on both left and right reel tables, use the same size ones.
 4. Before all the following adjustments (2-8-1 ~ 2-8-4), perform next instructions in order to activate the relevant circuit.
 - a. Thread the tape to lift up both tension/shut-off arms.
 - b. Set the POWER switch to ON.
 - c. Leave the deck as it is for 5 to 10 minutes.
 5. There should be almost equal values between tape tension at point A during fast forward mode and at point B during rewind mode.

2-8-1 IN FORWARD PLAY

1. Place a reel loading TEAC YTT-8013 test tape on the left reel table and an empty reel on the right reel table, then thread the tape.
2. Let the tape run in fast forward mode until both reels have nearly the same tape winding diameter.
3. During forward play with a tape speed of 3-3/4ips (9.5cm/s), measure tape tension at point A.
4. Adjust R120 so that the specified tape tension of 50g ± 10g (1.4oz ~ 2.1oz) is obtained.

2-8-2 IN REVERSE PLAY

(Continued from step 4 above)

5. Let both reels have the same amount of tape wounded on them.
6. During reverse play with a tape speed of 3-3/4ips, adjust R220 to get a specified tape tension of 50g ± 10g (1.4oz ~ 2.1oz) at point B.

2-8-3 IN FAST FORWARD

1. Load a TEAC YTT-8013 test tape on the left reel table and an empty reel on the right reel table, then thread the tape.
2. Stop the left reel by hand and set the deck in fast forward mode.
3. Adjust R237 to obtain a 100g to 120g (3.5oz ~ 4.2oz) value at point A (Obtain a 100g or 3.0oz value as far as possible).

2-8-4 IN REWIND

1. Load a TEAC YTT-8013 test tape on the right reel table and the empty reel on the left reel table, then thread the tape.
2. Stop the right reel by hand and set the deck in the rewind mode.
3. Adjust R238 to obtain a 100g to 120g (3.0oz ~ 3.6oz) value at point B (Obtain a 100g or 3.5oz as far as possible).

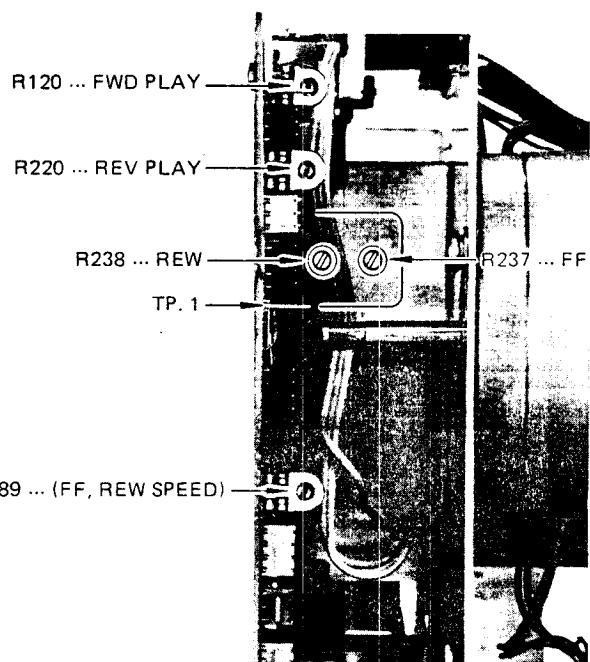


Fig. 2-9 Tape tension adjuster location

2-9 FAST WINDING SPEED

1. Set the deck in vertical position.
2. Connect oscilloscope between TP1 test point on the POWER SERVO PCB and ground.
3. Thread a TEA YTT-8013 test tape. In this case, either use of 7 inch reels or 10 inch are permitted provided both left and right reels are the same size.
4. During fast forward or rewind mode, adjust R289 so that wavelength displayed on the oscilloscope becomes 7msec. Adjustment should be satisfied at any tape winding position.
5. Check that almost equal value of fast winding speed is obtained between fast forward and rewind modes.

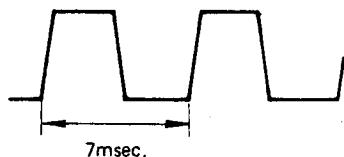


Fig. 2-10 Waveform at TP1

Figure shows left side tension arm.

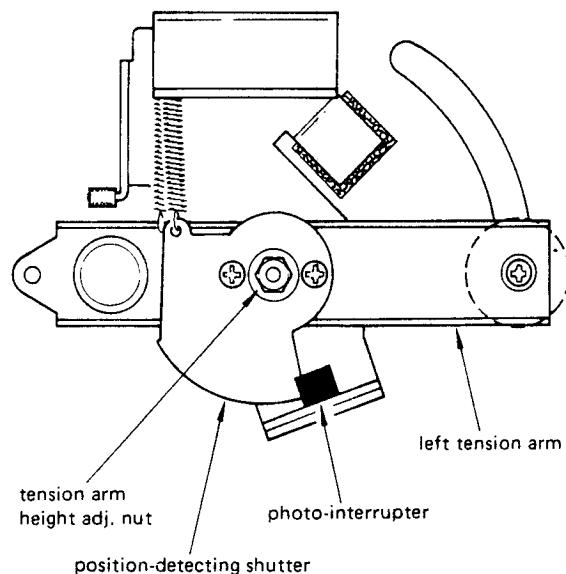


Fig. 2-11

2-10 TENSION ARM HEIGHT ADJUSTMENT

1. Thread any standard tape on the deck using a standard empty reels such as TEAC RE-1002.
2. Set the deck in the forward or reverse play mode.
3. Stop left (right) inertia roller's rotation by hand.
Adjust by turning the left (right) tension arm height adjusting nut (refer to Fig. 2-11) so that the tape moves in the center of the inertia roller.
4. NOTE: When adjusting, pay special attention to the relationship between position-detecting shutter and the opening of photo-interrupter to prevent, for example, the shutter from being caught.
5. Release the inertia roller. Fine-adjust the adjusting nut again until there is no tape curling on the tape guide pin between the erase head and the left (right) inertia roller.
6. After Adjusting the height of both left and right tension arms, check that the tape running condition is good by switching between fast forward and rewind modes.
7. If the tape running position is different when the inertia roller stops and when it turns, the condition when the inertia roller is rotating has priority.

2-11 REEL TABLE HEIGHT ADJUSTMENT

1. Adjust the tension arm height beforehand (See 2-10).
2. Check each reel table height using a TEAC RE-1002 empty reel and letting the tape run in each tape operating mode.
3. If the tape rubs against the reel flanges, adjust the reel table height by means of the two reel table mounting screws.

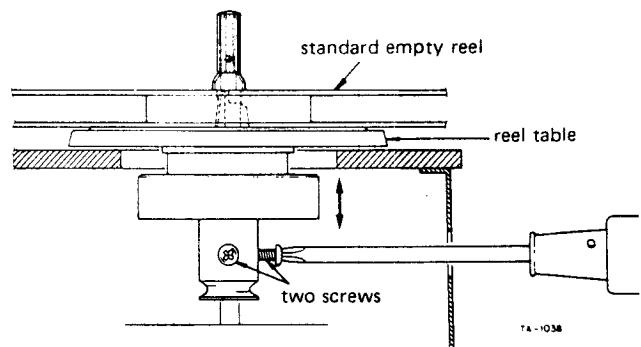


Fig. 2-12

2-12 HEAD AND TAPE PATH ALIGNMENTS

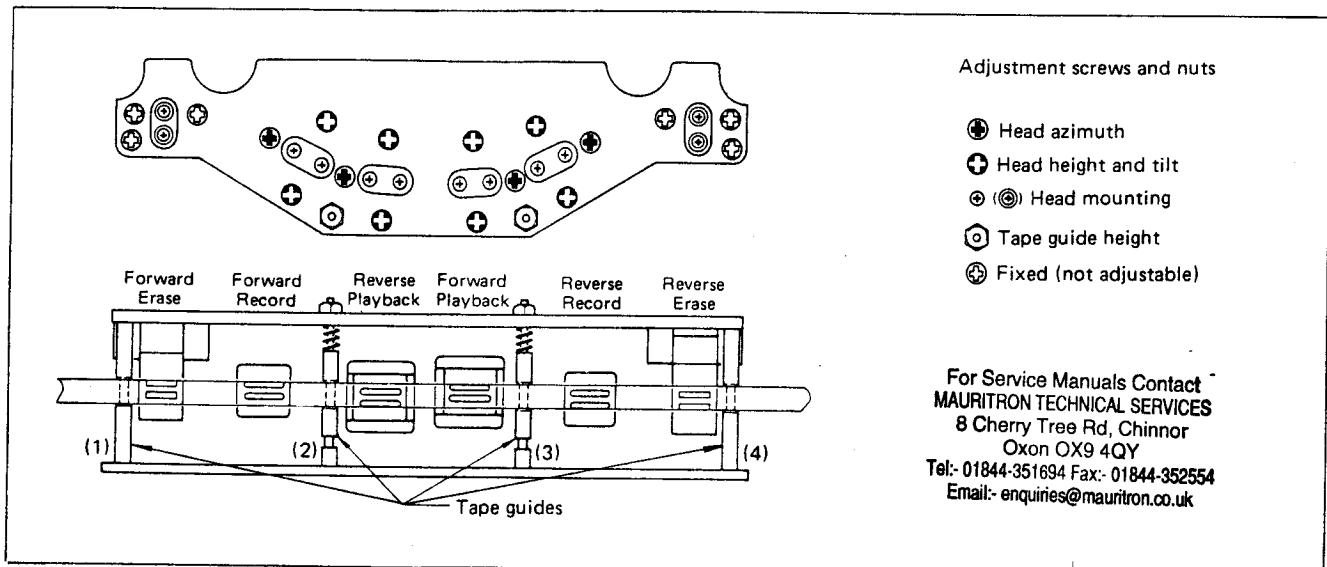


Fig. 2-13 Tape guide and head arrangement

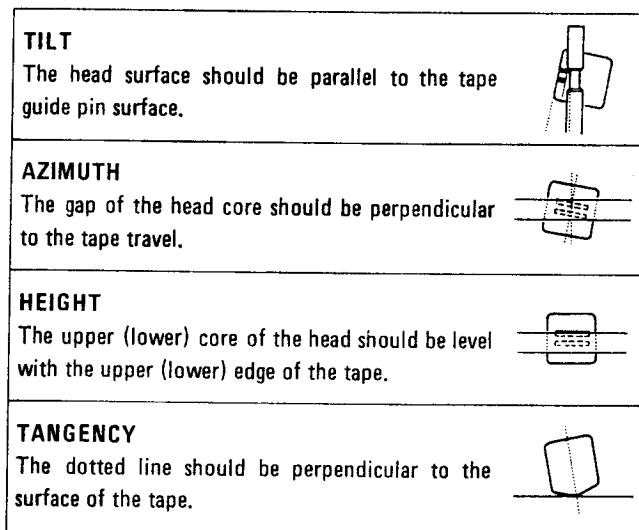


Fig. 2-14 Head regulation elements

2-12-1 COARSE ADJUSTMENT OF PINCH ROLLER PARALLELISM

The following procedure is for parallelism adjustment of left pinch roller. A similar procedure is also applied for the right pinch roller.

1. Let pinch roller draw near toward capstan shaft by manually lifting up tape lifter shown in Fig. 2-15.
2. Check pinch roller/capstan shaft parallelism viewed from direction of arrow A shown in Fig. 2-15. Refer to Fig. 2-16.

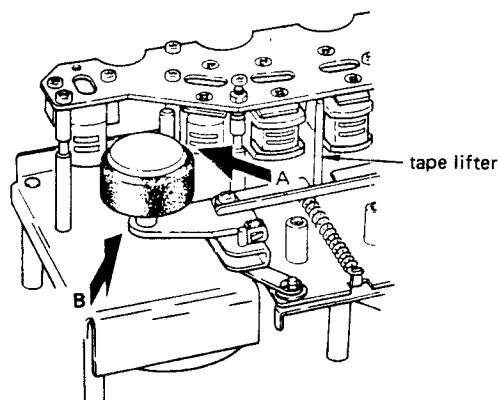


Fig. 2-15 Directions for pinch roller parallelism check

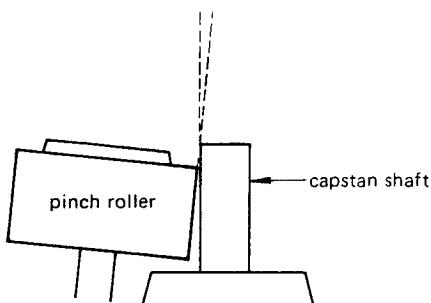


Fig. 2-16 View in direction A (example of non-parallelism)

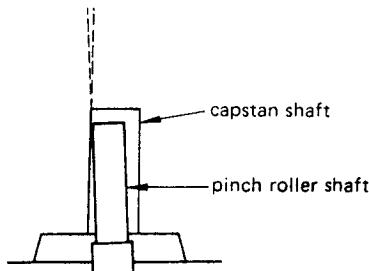


Fig. 2-17 View in direction B (example of non-parallelism)

correction jig (TEAC P/N 5736000100)

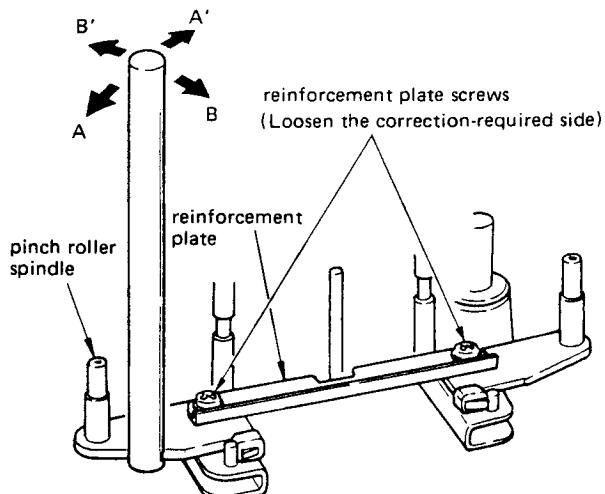


Fig. 2-18 Pinch roller/capstan alignment

2-12-2 HEAD TILT AND AZIMUTH ADJUSTMENT

1. Visually adjust the tilt of each playback head so that the head surface is parallel to the nearest tape guide.
2. Visually adjust the tilt of each record head so that the head surface is parallel to the nearest capstan shaft.
3. Make coarse azimuth adjustments for the record and playback head, viewing each head from front (without tape).

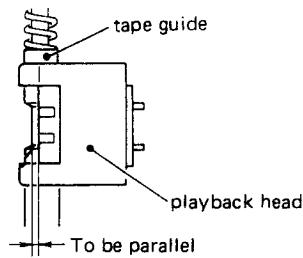


Fig. 2-19 Playback head tilt adjustment

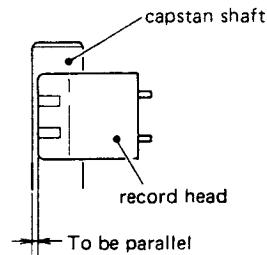


Fig. 2-20 Record head tilt adjustment

2-12-3 TAPE GUIDE HEIGHT ADJUSTMENT

1. Running a TEAC YTT-8013 test tape (thickness = $35\mu\text{m}$) in the forward direction, adjust the height of the left tension arm so that the lower edge of the tape is just touching the lower edge of the tape guide (1). See Fig. 2-21. Also refer to 2-10 TENSION ARM HEIGHT ADJUSTMENT".
2. Adjust the height of the tape guide (2) so that the upper edge of the tape is in contact with the upper edge of the tape guide.
3. Confirm that the adjustments do not cause the tape to curl.
4. Apply locking paint to the height adjusting nut of the tape guide (2).
5. During reverse play, adjust height of tape guides (3) and (4) in the same way as steps 1 ~ 4. For tape guide (4), adjust right tension arm height.
6. Check to see there is no tape curling at all the tape guides in both forward and reverse play modes.

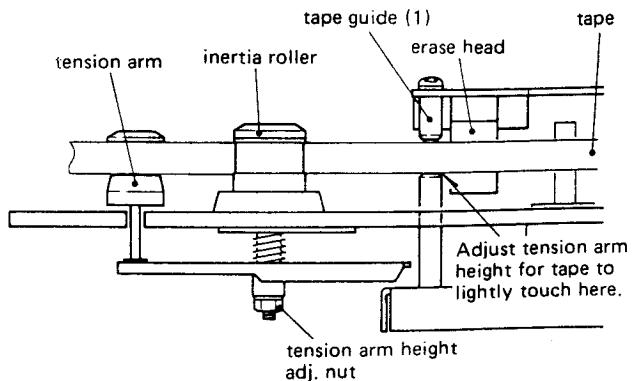


Fig. 2-21 Tension arm height adjustment

2.13 TAPE SPEED ADJUSTMENT

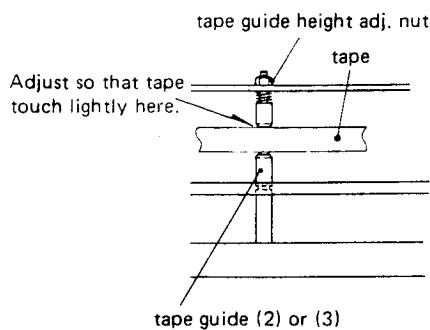


Fig. 2-22 Tape guide height adjustment

2.12-4 FINE ADJUSTMENT OF PINCH ROLLER PARALLELISM

During both forward and reverse with HIGH tape speed, each pinch roller should satisfy the following requirement.

1. Remove pinch roller cap.
2. Manually move pinch roller upward by 1 ~ 2mm from the stop portion of the pinch roller spindle, then play a test tape.
3. During play mode, observe whether the pinch roller position changes in the spindle direction.
4. If a change is found, re-adjust accurately tilt of pinch roller spindle by method illustrated in Fig. 2-18.

2.12-5 HEAD HEIGHT ADJUSTMENT

The following explanation is for the forward play heads. For the reverse play heads, replace bare words by the parentheses-closed words.

1. Confirm that, during forward (reverse) play, the forward (reverse) erase head core protrudes 0.1mm above (below) the moving tape. If not, replace the head with another one and recheck.
2. Fine-adjust each record and playback head height so that the brass-colored spacer of forward (reverse) direction head will show above (below) the moving tape. (About as thick as a thin pencil line).

Fig. shows the forward erase head.

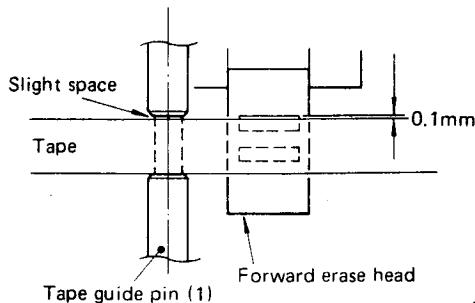


Fig. 2-23 Erase head height

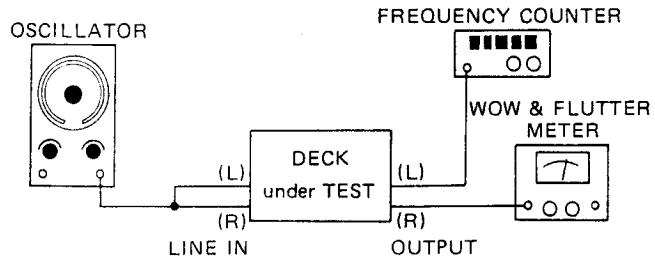


Fig. 2-24

- NOTES:**
1. Conduct all the following in both forward and reverse play modes.
 2. When ordering test tapes, allow for the longer delivery time that is required for them.

1. Connect a frequency counter to either OUTPUT terminal.
 2. Load a TEAC YTT-2003 test tape. Set the SPEED switch-HIGH, and PITCH CONT knob-OFF.
 3. Play the tape. Adjust HIGH SPEED control (see Fig. 2-25) for a reading of $3,000\text{Hz} \pm 5\text{Hz}$.
 4. Check the following at the beginning and the end of the tape.
- Specifications:
- | | |
|---|----------------------------------|
| Tape Speed deviation | $3,000\text{Hz} \pm 30\text{Hz}$ |
| Tape speed drift | 15Hz |
| FWD/REV tape speed differential | 30Hz |
5. Change the test tape to a TEAC YTT-2002, and SPEED switch setting to LOW.
 6. Repeat steps 3 through 4. Adjust LOW SPEED control if necessary.
 7. Pull the PITCH CONT knob out. Set SPEED switch HIGH. Play a YTT-2003 tape.
 8. Check if the speed variation of at least $3,000\text{Hz} \pm 180\text{Hz}$ is obtained when the PITCH CONT knob is rotated fully in both directions.
 9. Change the test tape to YTT-2002, SPEED switch setting to LOW. Repeat step 8.

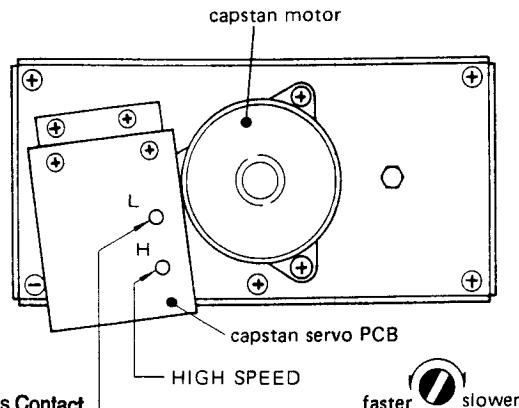


Fig. 2-25

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email: enquiries@mauritron.co.uk

2-14 WOW AND FLUTTER CHECKS

- NOTES:**
1. All the following apply to both forward and reverse play modes.
 2. The following measurements should be made at the beginning and the end of the tape.
 3. When ordering test tapes, allow for the longer delivery time that is required for them.

Playback

1. Connect the test equipment to the deck as shown in Fig. 2-24.
2. Load and play a TEAC YTT-2003 test tape for HIGH speed (19cm/s or 7-1/2ips), or a TEAC YTT-2002 test tape for LOW speed (9.5cm/s or 3-3/4ips).
3. Read the indication on the wow and flutter meter.

Specifications:

HIGH speed:	0.05% WRMS 0.10% RMS
LOW speed:	0.07% WRMS 0.12% RMS

Overall

4. Load a TEAC YTT-8013 test tape (blank). Apply and record a 3,000Hz signal.
5. During simultaneous tape monitoring (playing) the recorded signal, read the wow and flutter meter display.

Specifications:

HIGH speed:	0.12% RMS
LOW speed:	0.15% RMS

2-15 REVERSE SOLENOID ADJUSTMENT

1. When the reverse solenoid releases, if the slide plate hits the stopper screw/s noisily, the solenoid stopper plate may be adjusted in the direction of the solenoid housing. See illustration.

Parts below are accessible from the rear of the amplifier chassis.

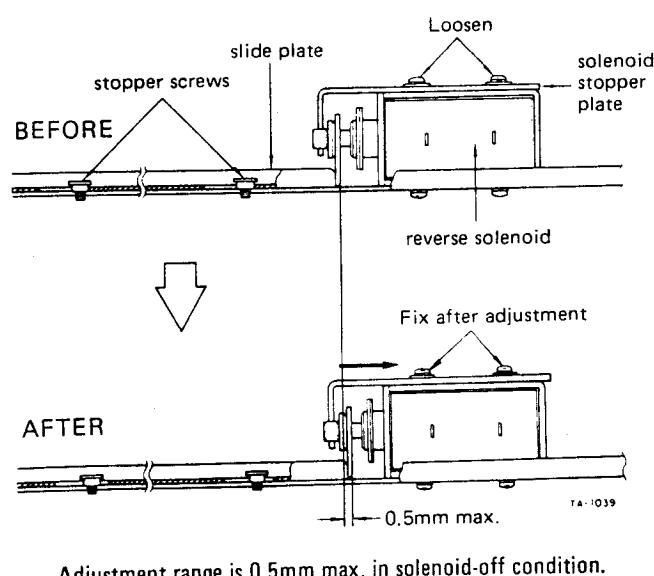


Fig. 2-26

2-16 LUBRICATION

Oiling is needed after every 1,000 hours of operation or once a year if the deck is infrequently used. For this purpose, TEAC spindle oil (from TEAC TZ-255 oil kit), Mobil D.T.E. Oil Light, etc. are recommended. Lubrication is normally not necessary except at the points shown.

1. Place the deck in the horizontal position.
2. Apply a few drops of oil to the respective spindles shown, excluding capstans, then spread the oil evenly on the spindle surfaces using a cotton cloth, etc.
3. For capstans, apply a few drops to the indicated position.
4. After oiling all the points, leave the deck for 1 to 2 hours until the oil is thoroughly absorbed.

Figure shows left side. Do also for right side.

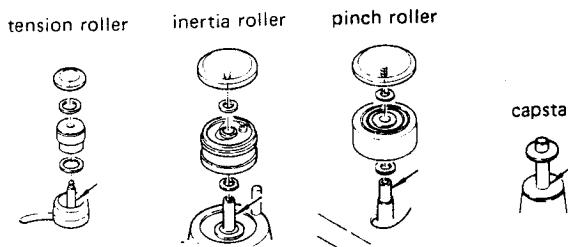


Fig. 2-27

2-17 VOLTAGE CONVERSION (FOR GENERAL EXPORT MODELS)

Always disconnect the power line cord before making these adjustments.

Frequency Conversion

Since the X series uses DC motors, frequency conversion is not necessary.

Voltage Conversion.

1. First remove the two feet by removing the screws in each one.
2. Unscrew the left and right sides of the cabinet.
3. Locate the voltage selector above the power transformer as seen from the rear of the deck.
4. Remove the plug by pulling it out, then re-insert it so that the arrow on the plug is parallel with the white line indicating the proper voltage.
5. Replace the cabinet and feet.

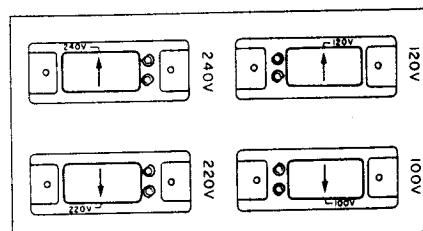


Fig. 2-28

3 ELECTRICAL ADJUSTMENTS AND CHECKS

NOTES:

1. Before performing adjustments and checks, clean and demagnetize the entire tape path.
2. Check that the deck is properly set for the voltage in your locality.
3. In general, adjustments and checks are done in the order of L-ch then R-ch. Double REF. Nos. indicate L-ch/R-ch.
- (Example: R371/R372)
4. The value of "dB" refers to 0dB (0.775V). If an AC voltmeter calibrated to 0dB (1V) is to be used, appropriate compensation should be made.
5. The AC voltmeter used in the procedures must have an input impedance of 1M-ohms or more.

3-1 MONITOR PERFORMANCE

ITEM		CONNECTION	MODE/ INSTRUCTION	SIGNAL SOURCE	ADJUST (or CHECK)	RESULT	REMARKS
1. Monitor level	1-1	OSC → ATT to LINE IN (L) AC voltmeter to REC AND PLAY AMPL. PCB term. #14.	DBX sw.—OUT (Leave OUT up to step 25, "DBX PERFORMANCE" section). MONITOR sw.—SOURCE OUTPUT cont.—CAL LINE cont.—MAX MIC cont.—MIN	400Hz/-22dB (61.5mV)	R369	-8dB (308mV)	Line min. input level (L)
	1-2	"	"	400Hz/-12dB (195mV)	LINE cont. (L/R)	"	LINE spec. input level (L)
	1-3	" but LINE IN (L) → LINE IN (R) #14 → #17	LINE spec. input level condition	"	R370	"	LINE spec. input level (R)
2. Output level	2-1	Fig. 3-1	LINE spec. input level condition	400Hz/-12dB (195mV)	R403/R404	-5dB (436mV)	
3. VU meter	3-1	Fig. 3-1	LINE spec. input level condition	400Hz/-12dB (195mV)	R371/R372	0VU on VU meter	
4. MIC input level	4-1	Fig. 3-1, but LINE IN → MIC	LINE cont.—MIN MIC cont.—MAX	400Hz/-70dB ±2dB (195µV ~ 308µV)	Check	-5dB (436mV)	MIC min. input level
	4-2	"	"	400Hz/-60dB (0.775mV)	MIC cont. (L/R)	"	MIC spec. input level
	4-3	Fig. 3-1	LINE cont.—spec. position (Item 1-2) MIC cont.—MIN	—	—	—	IMPORTANT: Do not disturb these cont's during later checks.

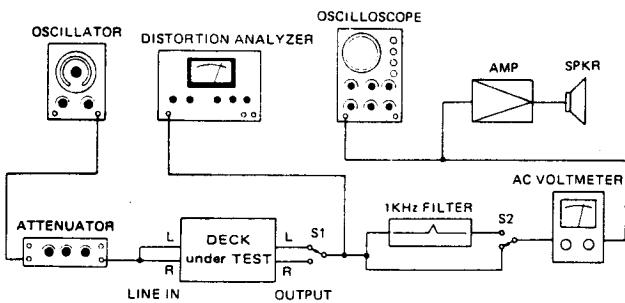


Fig. 3-1 Basic connection

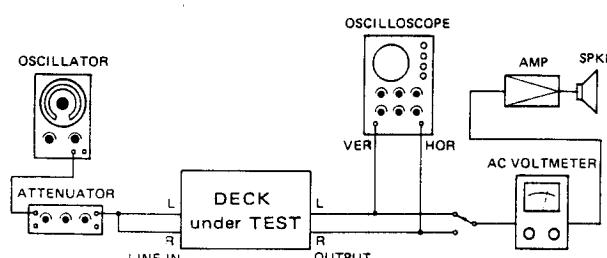


Fig. 3-2 Connection for phase check

TEAC test tapes: For playback alignment
 YTT-1002: For 9.5cm/s or 3-3/4ips, LH II
 YTT-1003: For 19cm/s or 7-1/2ips, LHII
 YTT-1052: For 9.5cm/s or 3-3/4ips, EE
 YTT-1053: For 19cm/s or 7-1/2ips, EE
 For recording alignment (blank)
 YTT-8013: For LH II
 YTT-8053: For EE

3-2 PLAYBACK PERFORMANCE

ITEM		CONNECTION	MODE/ INSTRUCTION		SIGNAL SOURCE	ADJUST (or CHECK)	RESULT	REMARKS
5. Playback head azimuth	5-1	Fig. 3-2	Do for both FWD & REV heads MONITOR sw.— TAPE SPEED sw.—HIGH TAPE SELECT.— LH-II	YTT-1003 (16kHz/-10dB)	Azimuth adj. screw/s of head (Fig. 2-13)	Phase: within 45° on oscilloscope (Fig. 3-3)		
6. Playback level	6-1	Fig. 3-1	FWD & REV OUTPUT cont.—CAL SPEED sw.—HIGH	YTT-1003 (400Hz/0dB)	R313/R314 (FWD) R315/R316 (REV)	-5dB (436mV)	Spec. PB condition	
	6-2	"	OUTPUT cont.—MAX.	"	Check	+1dB ±2dB (690mV ~ 1.09V)	Max. output level	
	6-3	"	OUTPUT cont.—CAL	"	"	-5dB (436mV)	Spec. PB condition IMPORTANT: Do not disturb OUTPUT cont. during later checks.	
7. VU meter	7-1	Fig. 3-1	FWD Spec. PB condition	YTT-1003 (400Hz/0dB)	Check	0VU ±1VU on VU meter		
8. Frequency response	8-1	Fig. 3-1	FWD & REV SPEED—HIGH TAPE SELECT.—LH II	YTT-1003	R327/R328 (FWD) R329/R330 (REV)	Fig. 3-5		
	8-2	"	" SPEED—LOW	YTT-1002	R333/R334 (FWD) R335/R336 (REV)	Fig. 3-6		
	8-3	"	FWD & REV SPEED—HIGH	YTT-1053	Check	Fig. 3-5		
	8-4	"	TAPE SELECT.—EE SPEED—LOW	YTT-1052	"	Fig. 3-6		
9. Phase shift	9-1	Fig. 3-2	FWD & REV SPEED—HIGH	YTT-1003	Check	Phase: within 45° on oscilloscope (50Hz ~ 18kHz) (Fig. 3-3)		
	9-2	"	" SPEED—LOW	YTT-1002	"	" (50Hz ~ 10kHz)		
10. PHONES output level	10-1	Fig. 3-4	Spec. PB condition	YTT-1003 (400Hz/0dB)	Check	-24dB ±2dB (38.8mV ~ 61.5mV) (at PHONES jack)	When OUTPUT terminal is at -5dB	
11. Signal to noise ratio	11-1	Fig. 3-1	FWD & REV LH and EE Spec. PB condition Use fully erased tape (Use bulk tape eraser)	YTT-8013 and YTT-8053	Check	LH-I, -II HIGH: 50dB LOW: 49dB EE HIGH: 52dB LOW: 52dB	-Ratio of spec. -5dB to noise -Change-over the polarity of the AC Line plug. The worse reading should be within spec.	

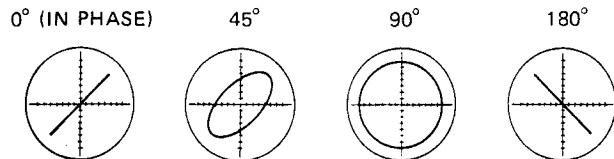


Fig. 3-3 Confirming phase relationship

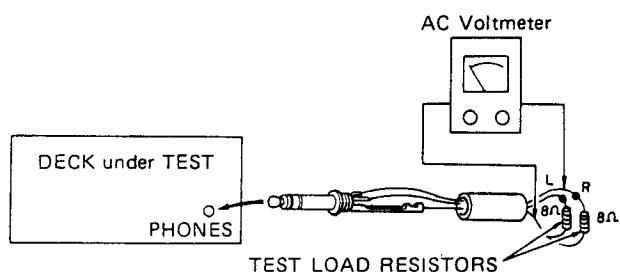


Fig. 3-4 Connection for PHONES level check

3-3 RECORDING PERFORMANCE

TEAC test tape: YTT-8013: For recording alignment (blank) for LHII
YTT-8053: For recording alignment (blank) for EE

ITEM	CONNECTION	MODE/ INSTRUCTION		SIGNAL SOURCE	ADJUST (or CHECK)	RESULT	REMARKS
12. Bias trap	12-1 AC voltmeter between BIAS TRAP TP (TP1/TP2) & GND	Rec-pause mode		—	L303/L304	Min. reading	Bias freq.: 100kHz ±5kHz
	12-2 Fig. 3-1	Rec-pause mode MONITOR sw.— TAPE OUTPUT con.— CAL		—	Check	Min. reading (-45dB or more (4.36mV or less))	
	12-3 "	"		—	Check	VU: no deflection	For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquiries@mauritron.co.uk
13. Record head azimuth	13-1 Fig. 3-2	Do for both FWD & REV heads MONITOR sw.— TAPE		10kHz/-32dB (19.5mV)	Azimuth adj. screw/s of head (Fig. 2-13)	Phase: within 45° on oscilloscope (Fig. 3-3)	
14. Record bias	14-1 Fig. 3-1	FWD & REV SPEED sw.—LOW MONITOR sw.—TAPE	Test tape— YTT-8053 TAPE SELECTOR—EE	7kHz/-22dB (61.5mV)	R515/R516 (FWD) R517/R518 (REV)	Over-bias value 3dB ±1dB (from peak)	-Simultaneous monitoring -First set adjustor fully CCW (), then adjust.
	14-2 "		Test tape— YTT-8013 TAPE SELECTOR—LHII	"	R519/R520 (FWD) R521/R522 (REV)	Over-bias value 4dB ±1dB (from peak)	
15. Record level	15-1 Fig. 3-1	Same as 14-2 SPEED sw.—HIGH		400Hz/-12dB (195mV)	R429/R430 (FWD) R431/R432 (REV)	-5dB (436mV)	Spec. REC condition
16. Distortion	16-1 Fig. 3-1	Same as 14-1 and 14-2, but SPEED sw.—HIGH		1kHz/-12dB (195mV)	Check	0.8% or less (w/LHII, EE)	
17. Signal to noise ratio	17-1 Fig. 3-1	FWD & REV MONITOR sw.— TAPE HIGH & LOW { LHII { YTT-8013 { EE { YTT-8053		1kHz/-12dB (195mV) then No signal recording	Check	LHII { HIGH: 48dB. { LOW: 46dB EE { HIGH: 50dB { LOW: 50dB	Ratio of spec. -5dB to noise
18. Erase efficiency	18-1 Fig. 3-1 switch on 1kHz filter	FWD & REV TAPE SELECT. —EE MONITOR sw.— TAPE { EE { YTT-8053 SPEED sw.—HIGH		1kHz/-2dB (615mV) (+10VU) then erasing	Check	OUTPUT: -63dB or more (548μV or less (68dB min. ratio))	-Reference output level : +5dB -The worst value should be within spec.

ITEM		CONNECTION		MODE/ INSTRUCTION	SIGNAL SOURCE	ADJUST (or CHECK)	RESULT	REMARKS
19. REC MUTE function	19-1	Fig. 3-1 switch on 1kHz filter		FWD & REV Spec. REC condition rec-mute mode	1kHz/-2dB (615mV) (+10VU) then record muting	Check	OUTPUT: -60dB or more (775μV or less) (65dB min. ratio)	-Reference output level: +5dB -The worst value should be within spec.
20. Frequency response	20-1	Fig. 3-1	FWD & REV MONITOR sw.—TAPE TAPE SELECTOR—EE Test tape—YTT-8053		SPEED sw.—LOW	Required signal/ -32dB (19.5mV)	L305/L306 (FWD) L307/L308 (REV)	Fig. 3-8
	20-2	"	" " SPEED sw.—HIGH		"	"	Check	Fig. 3-7
	20-3	"	TAPE SELECTOR—LHII Test tape—YTT-8013		SPEED sw.—LOW	"	"	Fig. 3-8
	20-4	"	" " SPEED sw.—HIGH		"	"	"	Fig. 3-7
21. Phase shift	21-1	Fig. 3-2		FWD & REV Spec. REC condition SPEED sw.—HIGH	40Hz ~ 16kHz/ -32dB (19.5mV)	Check	Phase: within 45° on oscilloscope (40Hz ~ 16kHz) (Fig. 3-3)	
22. LH I position check	22-1	Fig. 3-1		FWD Spec. REC condition Test tape—YTT-8013 SPEED sw.—HIGH	20kHz/-32dB (19.5mV)	Check	When TAPE SELECTOR sw is changed LHII → LHI, output level should raise +3dB ±1dB	
23. Adjacent track crosstalk	23-1	Fig. 3-1		FWD record. Spec. REC condition SPEED sw.—HIGH TAPE SELECTOR sw.—LHII	125Hz/-12dB (195mV)	—	—	For FWD record.
	23-2	"		REV playback the portion recorded above	—	Check	At both L-and R-ch 125Hz: -45dB or more (4.36mV or less) (40dB min. ratio)	
	23-3	"		Interchange R & L reels then do FWD playback	—	"	"	
	23-4	Repeat 23-1 through 23-3, but interchange FWD and REV.						For REV record.
24. Channel separation	24-1	Fig. 3-1 switch on 1kHz filter		Same as 23-1	L: 1kHz/-12dB (195mV) R: No signal record.	Check	R, -55dB or more (1.38mV or less) (50dB min. ratio)	For FWD record.
	24-2	"		"	L: No signal record. R: 1kHz/-12dB	"	L, "	
	24-3	Repeat 24-1 and 24-2 with REV recording.						For REV record.

3-4 DBX PERFORMANCE

NOTE:
Test this performance only after you are sure that the "3-6 DBX PCB ADJUSTMENT is correct.

ITEM		CONNECTION	MODE/ INSTRUCTION	SIGNAL SOURCE	ADJUST (or CHECK)	RESULT	REMARKS
25. Encoder level	25-1	OSC → ATT to LINE IN (both L- & R-ch's) AC voltmeter to REC AND PLAY AMPL. PCB term. #46	DBX sw.—OUT MONITOR sw.— SOURCE OUTPUT cont.— CAL LINE cont.—Spec. position (item 1-2) MIC cont.—MIN	1kHz/-12dB (195mV)	Check	-8dB (308mV)	
	25-2	"	Same as above, but DBX sw.—IN	"	R737/R738	-8dB ±0.5dB (291mV ~ 327mV)	
	25-3	Repeat 25-1 ~ 25-2 by changing to REC AND PLAY AMPL. PCB term. #47. IMPORTANT: Do not disturb all MIC, LINE and OUTPUT controls during later checks.					
26. Decoder level	26-1	Fig. 3-1	FWD only Test tape— YTT-8013 DBX sw.—OUT SPEED sw.—HIGH REC MODE—ON TAPE SELECT. sw.—LHII MONITOR sw.—TAPE	1kHz/-12dB (195mV)	Check	Note the measured output as reference.	
	26-2	"	Same as above but DBX sw.—IN	"	R637/R638	±0.5dB deviation from ref.	
27. Frequency response	27-1	Fig. 3-1	Same as 20-1 ~ 20-4, but DBX sw.—IN	Required signal, -32dB (19.5mV)	Check	Figs. 3-9 to 3-10.	
28. Signal to noise ratio	28-1	Fig. 3-1	FWD & REV DBX sw.—IN REC MODE sw.—ON MONITOR sw.—TAPE SPEED sw.—HIGH & LOW { LHII { YTT-8013 { EE { YTT-8053	1kHz/-12dB (195mV) then No signal recording	Check	LHII HIGH: 65dB LOW: 65dB EE HIGH: 65dB LOW: 65dB	Ratio of spec. —5dB to noise
29. Distortion	29-1	Fig. 3-1	Same as 28-1 but SPEED sw.—HIGH only	1kHz/-12dB (195mV)	Check	0.8% or less (w/LHII, EE)	0VU input level
	29-2	"	"	1kHz/+8dB (1.95V)	"	3% or less (w/LHII, EE)	20VU input level

3-5 FREQUENCY RESPONSE

3-5-1 PLAYBACK

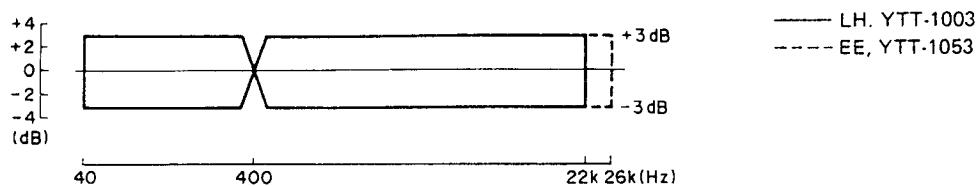


Fig. 3-5 Playback frequency response (19cm/s)

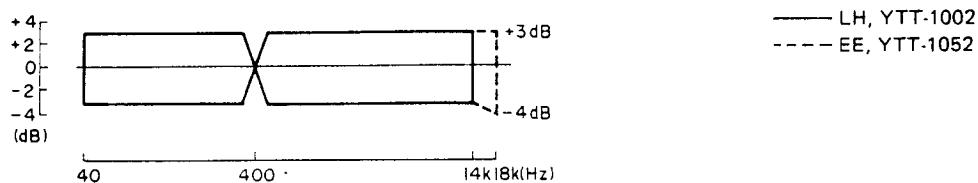


Fig. 3-6 Playback frequency response (9.5cm/s)

3-5-2 OVERALL

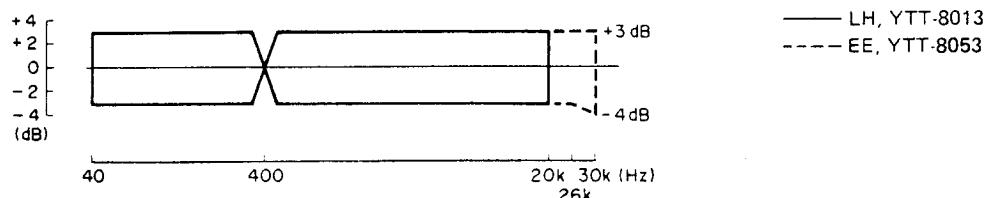


Fig. 3-7 Overall frequency response (19cm/s)

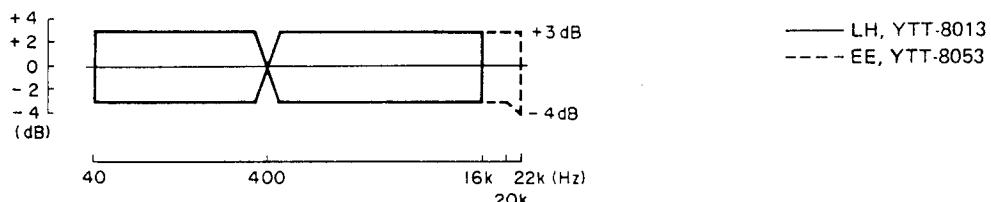


Fig. 3-8 Overall frequency response (9.5cm/s)

3-5-3 OVERALL WITH DBX IN

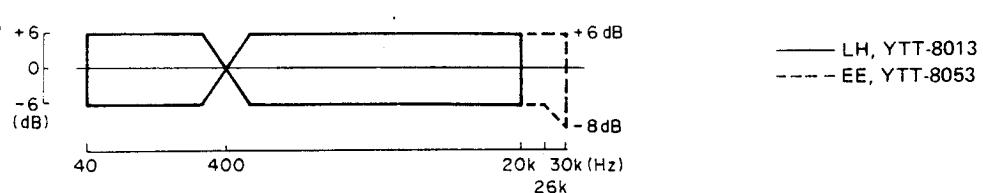


Fig. 3-9 Overall frequency response with DBX IN (19cm/s)

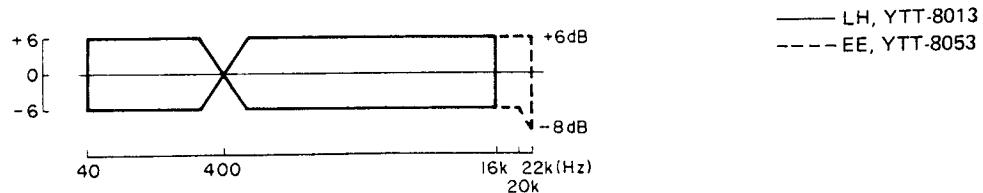


Fig. 3-10 Overall frequency response with DBX IN (9.5cm/s)

3-6 DBX PCB ADJUSTMENT

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

NOTES:

1. This section adjustment is not usually needed unless an adjustor(s) have been changed or a component(s) on the PC board have sustained damage, since the PC board has been precisely adjusted in the factory.
2. Turn the deck OFF to prevent accidental damage when removing or replacing PC board.

3-6-1 ENCODER ADJUSTMENT

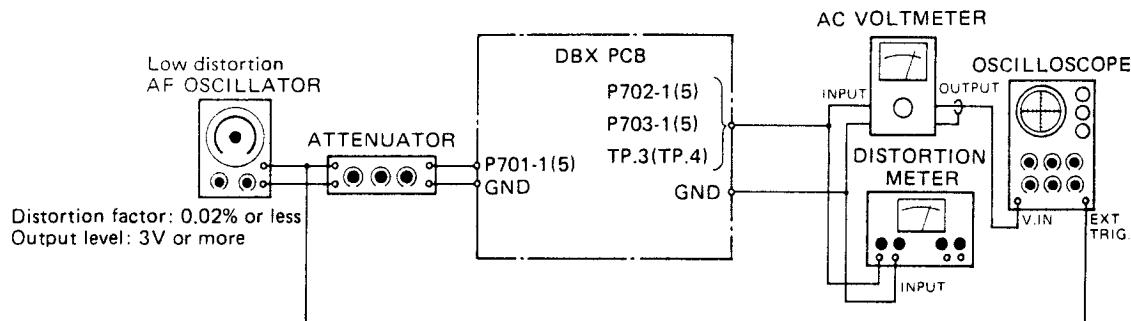


Fig. 3-11 Connection for encoder adjustment

- (1) Preparation
 1. Disconnect wires (with connector) from connectors P701 ~ P703, then make connections as shown on Fig. 3-11. (Each connector's pin 1 and pin 5 correspond L-ch and R-ch respectively.)
 2. Preset R737/R738, R747/R748, R757/R758 and R763/R764 approximately to the center position.
- (2) Input setting
 3. Apply a 100Hz input signal to P701-1(5), then adjust input level so that output from P702-1(5) becomes 300mV (-8.24dB).
- (3) RMS SYM adjustment
 4. Adjust R765/R766 so that output waveform at TP3/TP4 becomes a clear 200Hz sine-wave on the oscilloscope.
- (4) RMS time constant adjustment
 5. Adjust R747/R748 so that output from TP3/TP4 becomes 385 μ V (-66.1dB).
- (5) Encoder nominal level adjustment
 6. Apply a 1kHz input signal to P701-1(5), then adjust input level so that output from P702-1(5) becomes 300mV (-8.24dB).
 7. Adjust R737/R738 so that output from P703-1(5) becomes 300mV (-8.24dB).
- (6) VCA SYM adjustment
 8. After adjustments above are effected, adjust R757/R758 so that the distortion meter indicates minimum value (0.2% or less).
- (7) Frequency response check
 9. Check that when input signal is 100Hz, then switched to 10kHz, the output from P703-1(5) becomes 212mV ~ 238mV (-11.3dB ~ -10.3dB), then 165mV ~ 185mV (-13.4dB ~ -12.4dB) respectively.
- (8) Encoder effect check - 1
 10. Check that when input signal is changed to 1kHz at 300 μ V (-68.2dB) from condition in paragraph (5), output from P703-1(5) becomes 8.95mV ~ 10.1mV (-38.7dB ~ -37.7dB). (In this case, measurement should be done using the 1kHz band-pass filter).
- (9) Encoder effect check - 2
 11. Check that when input signal is changed to 1kHz at 3V (11.8dB) from condition in paragraph (5), output from P703-1(5) becomes 895mV ~ 1.01V (1.25dB ~ 2.30dB).
 12. At this time, the distortion factor should be 0.3% or less.

3-6-2 DECODER ADJUSTMENT

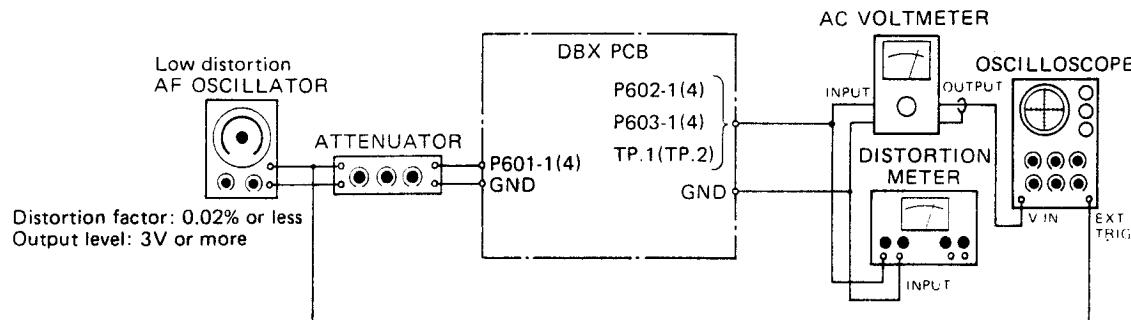


Fig. 3-12 Connection for decoder adjustment

(1) Preparation

1. Disconnect wires (with connector) from connectors P601 ~ P603, then make connections shown on Fig. 3-12. (Each connector's pin 1 and pin 4 correspond L-ch and R-ch respectively.)
2. Preset R637/R638, R647/R648, R657/R658 and R663/R664 approximately to the center position.

(2) Input setting

3. Apply a 100Hz input signal to P601-1(4), then adjust input level so that output from P602-1(4) becomes 300mV (-8.24dB).

(3) RMS SYM adjustment

4. Adjust R665/R666 so that output waveform at TP1/TP2 becomes a clear 200Hz sine-wave on the oscilloscope.

(4) RMS time constant adjustment

5. Adjust R647/R648 so that output from TP1/TP2 becomes 385μV (-66.1dB).

(5) Decoder nominal level adjustment

6. Apply a 1kHz input signal to P601-1(4), then adjust input level so that output from P602-1(4) becomes 300mV (-8.24dB).

7. Adjust R637/R638 so that output from P603-1(4) becomes 300mV (-8.24dB).

(6) VCA SYM adjustment

8. After the paragraph adjustments above are effected, adjust R657/R658 so that the distortion meter indicates minimum value (0.2% or less).

(7) Frequency response check

9. Check that when input signal is 100Hz, then switched to 10kHz, the output from P603-1(4) becomes 475mV ~ 599mV (-4.25dB ~ -2.24dB), then 789mV ~ 993mV (1.56dB ~ 2.15dB) respectively.

(8) Decoder effect check - 1

10. Check that when input signal is changed to 1kHz at 9.48mV (-38.2dB) from condition in paragraph (5), output from P603-1(4) becomes 267μV ~ 336μV (-69.3dB ~ -67.3dB). (In this place, measurement should be done using the 1kHz band-pass filter).

(9) Decoder effect check - 2

11. Check that when input signal is changed to 1kHz at 948mV (1.75dB) from condition in paragraph (5), output from P603-1(4) becomes 2.67V ~ 3.37V (10.7dB ~ 12.8dB).

3-7 ADJUSTMENT AND TEST POINT LOCATIONS

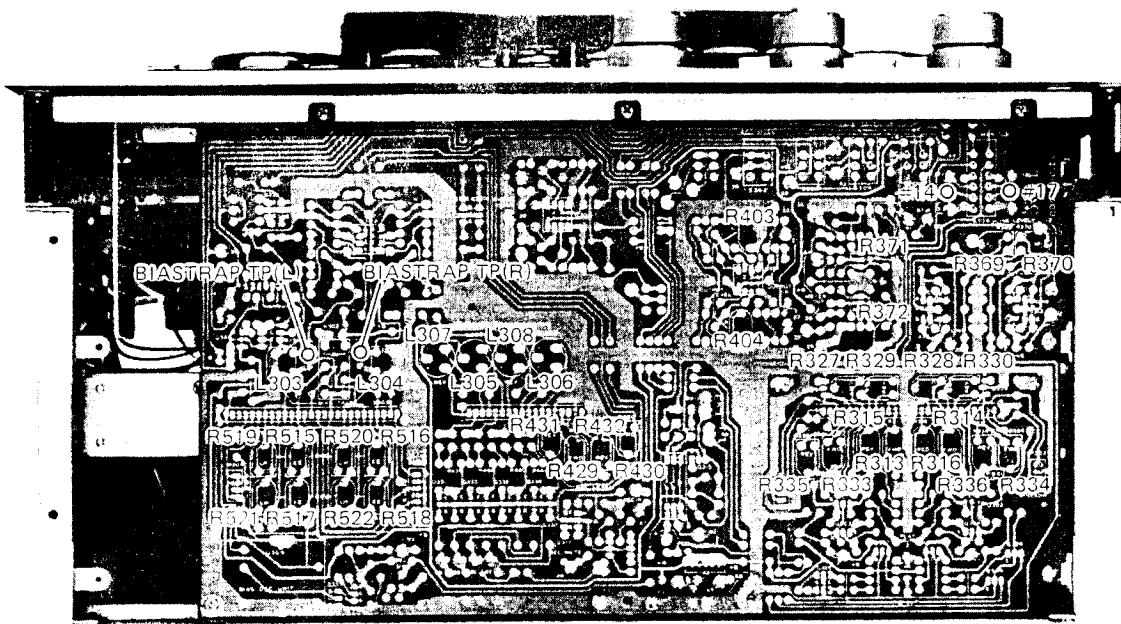


Fig. 3-13 REC AND PLAY AMP PCB

L303/L304	Bias trap (record)
L305/L306	Record EQ (FWD)
L307/L308	Record EQ (REV)
R313/R314	Playback level (FWD)
R315/R316	Playback level (REV)
R327/R328	Playback EQ (HIGH, FWD)
R329/R330	Playback EQ (HIGH, REV)
R333/R334	Playback EQ (LOW, FWD)
R335/R336	Playback EQ (LOW, REV)

R369/R370	Monitor level
R371/R372	VU meter
R403/R404	Output level
R429/R430	Record level (FWD)
R431/R432	Record level (REV)
R515/R516	Record bias for EE (FWD)
R517/R518	Record bias for EE (REV)
R519/R520	Record bias for LH II (FWD)
R521/R522	Record bias for LH II (REV)

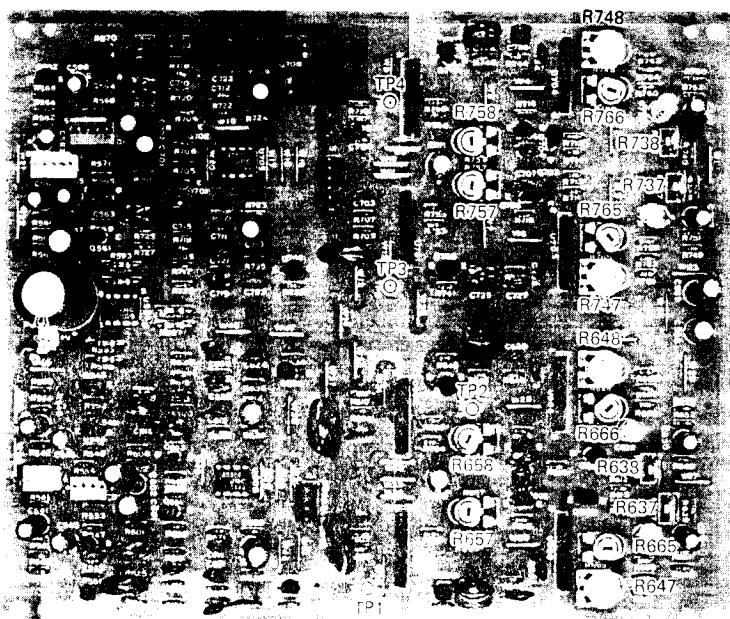




Fig. 3-14 DBX PCB

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk


R637/R638	Nominal level (DECODER)
R647/R648	RMS time constant (DECODER)
R657/R658	VCA SYM (DECODER)
R665/R666	RMS SYM (DECODER)
R737/R738	Nominal level (ENCODER)
R747/R748	RMS time constant (ENCODER)
R757/R758	VCA SYM (ENCODER)
R765/R766	RMS SYM (ENCODER)

4 EXPLODED VIEWS AND PARTS LIST

EXPLODED VIEW-1

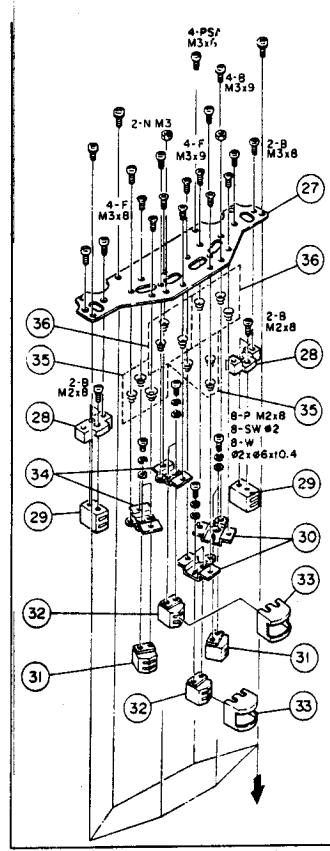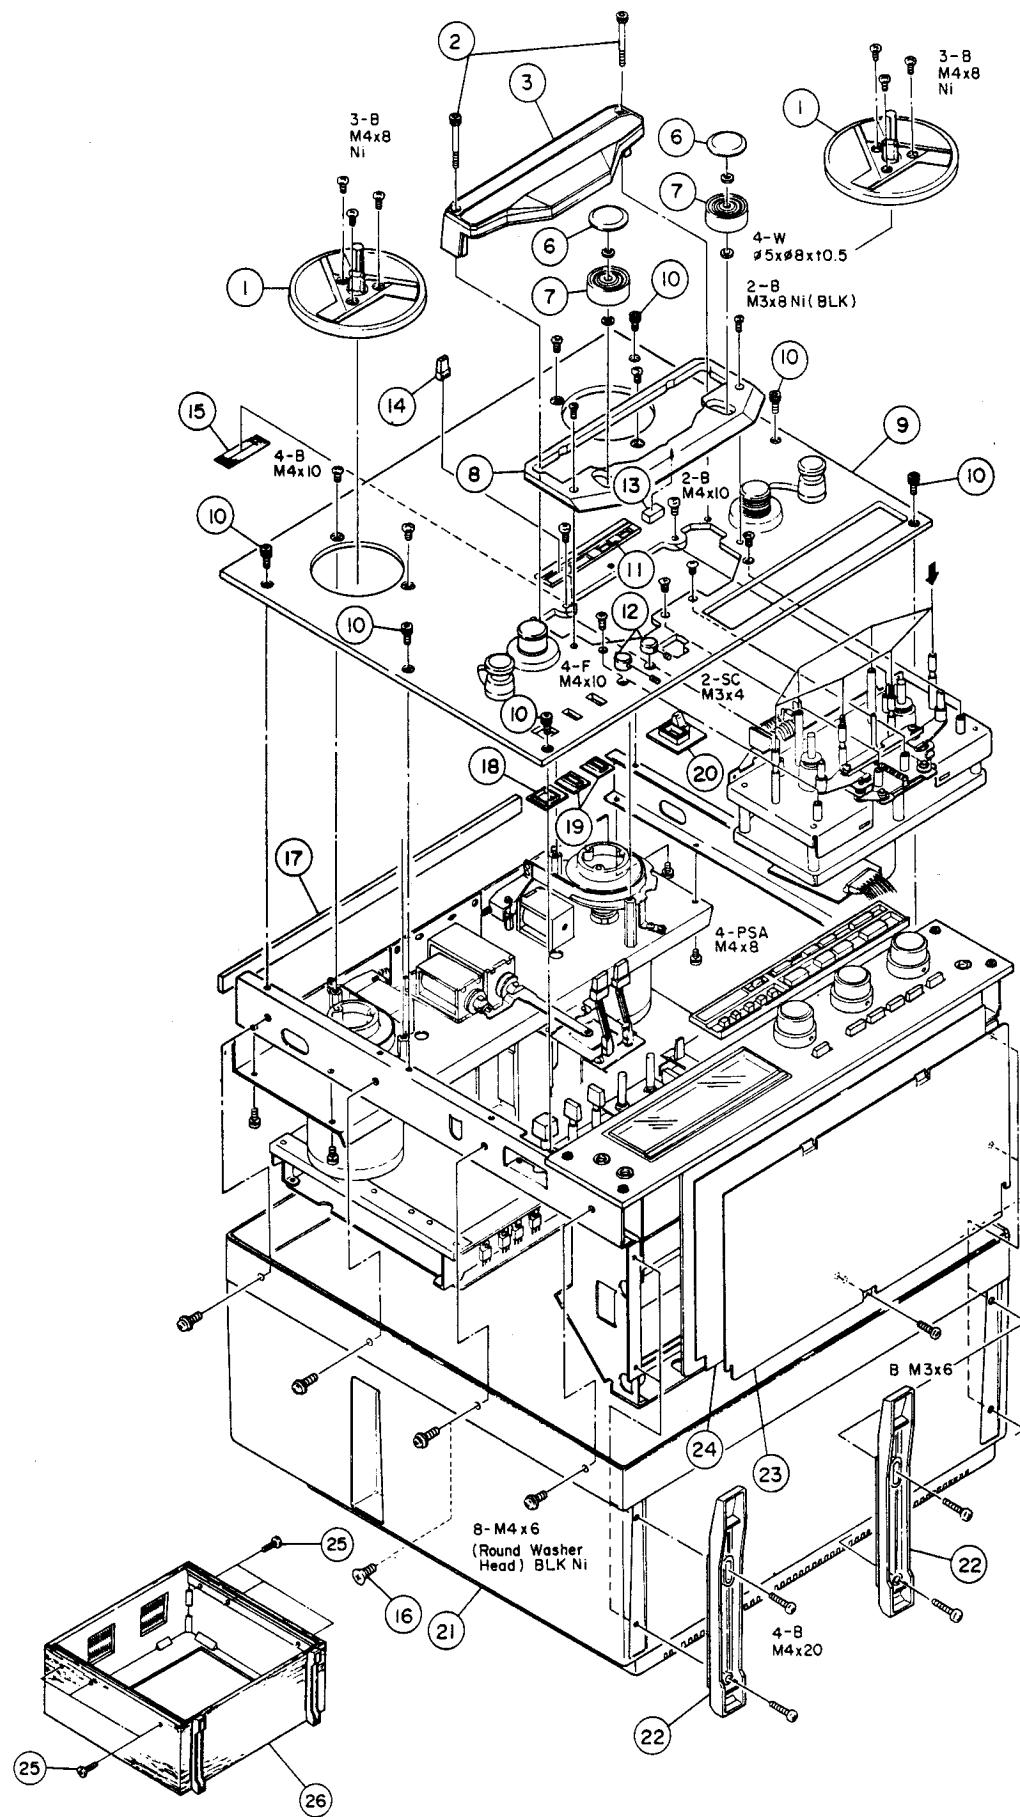

Serial No. lower than 160000

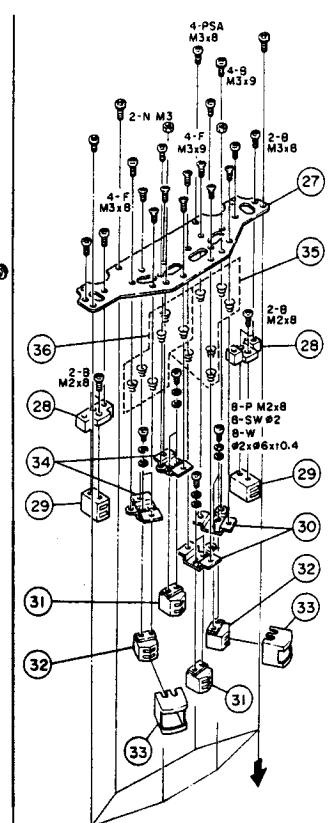
Serial No.
between 160001 and 410000

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
1 - 1	5504744000	Reel Table Assy	
1 - 2	*5800285000	Screw, Head Housing; X-1000R	X-10R
	*5800323400	Screw, Head Housing; X-1000RBL	
1 - 3	*5800451800	Housing Assy, Head; X-1000R	
	*5800451900	Housing Assy, Head; X-1000RBL	
1 - 4		Not Used	
1 - 5		Not Used	
1 - 6	5800283900	Cap, Pinch Roller; H, X-1000R	
	5800320901	Cap, Pinch Roller; X-1000RBL	
1 - 7	5014175100	Pinch Roller	A-2300
1 - 8	*5800261900	Cover, Head Base Plate	
1 - 9	*5800269200	Panel, Top, X-1000R	
	*5800320301	Panel, Top, X-1000RBL	
1 - 10	*5581067000	Screw, Top Panel; B, X-1000R	X-10R
	*5581073000	Screw, Top Panel; C, X-1000RBL	X-10M
1 - 11	*5800262401	Escutcheon, Timer	
1 - 12	5800262700	Knob, L; X-1000R	
	5800319601	Knob, L; X-1000RBL	
1 - 13	*5800002700	Cushion, Head Housing	X-10R
1 - 14	5800262500	Knob, VR; X-1000R	
	5800319400	Knob, VR; X-1000RBL	
1 - 15	*5800315900	Mask	
1 - 16	*5780204010	Screw, F; M4X10, X-1000R [L]	
	*5780204010	Screw, F; M4X10, X-1000RBL	
1 - 17	*5555887001	Cushion, Case	X-10R
1 - 18	*5800268900	Escutcheon, Power Switch	
1 - 19	*5800268800	Escutcheon, Button	
1 - 20	*5800269101	Escutcheon, Cue; X-1000R	
	*5534708001	Escutcheon, Cue; X-1000RBL	X-10R
1 - 21	*5531024102	Case, Deck; L	X-10R
1 - 22	*5533190000	Foot, X-1000R	X-10R
1 - 23	*5553306000	Plate, Ampl. Shield	X-7
1 - 24	*5553308001	Paper, Ampl. Insulating	X-10R
1 - 25	*5504499000	Screw, Case [L]	A-480
1 - 26	*5800321602	Case Assy, [L]	
1 - 27	*5553289100	Plate, Head Base	X-10R
1 - 28	*5800285300	Spacer, Head; E	X-10R
1 - 29	5378300800	Head, Erase	X-20R
1 - 30	*5555673000	Bracket, Head; R	X-10R
1 - 31	5378300600	Head, Record	X-20R
1 - 32	5378300700	Head, Playback	X-20R
1 - 33	*5800384500	Head Shield	
1 - 34	*5555672000	Bracket, Head; L	X-10R
1 - 35	*5520182000	Spring; D	A-5300
1 - 36	*5022050000	Spring, B	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

EXPLODED VIEW-2

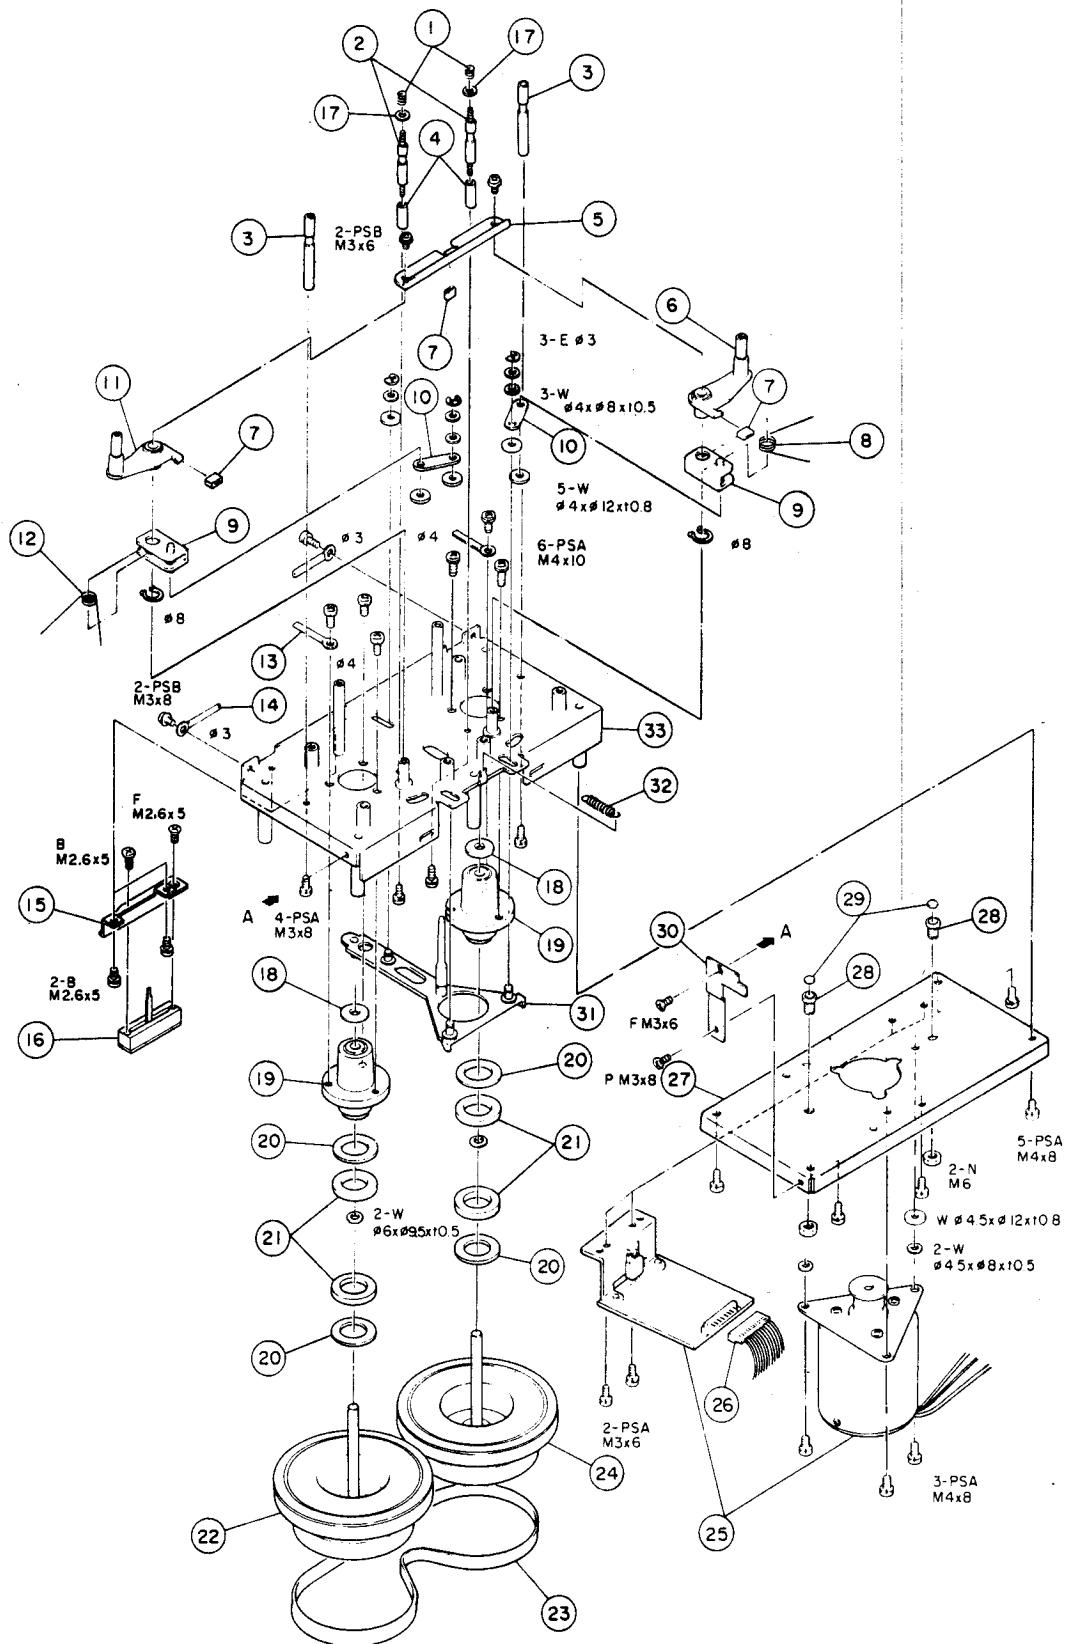

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
2 - 1	*5800285600	Spring, Guide	
2 - 2	*5800285400	Tape Guide	X-10R
2 - 3	*5545023000	Pin, Tape Guide	
2 - 4	*5800285500	Support, Guide	X-10R
2 - 5	*5555666000	Plate, Hold	X-10R
2 - 6	*5504729000	Arm Assy, Pinch Roller; R	X-10R
2 - 7	*5534694000	Cushion, Stopper	X-10R
2 - 8	*5524216000	Spring, Pinch Roller; R	X-10R
2 - 9	*5504731000	Bracket Assy, Pinch Roller Arm	X-10R
2 - 10	*5555667000	Plate, Joint	X-10R
2 - 11	*5504730000	Arm Assy, Pinch Roller; L	X-10R
2 - 12	*5524217000	Spring, Pinch Roller; L	X-10R
2 - 13	*5786714000	Clamper, Cord, $\phi 4$	
2 - 14	*5786713000	Clamper, Cord, $\phi 3$	
2 - 15	*5800270201	Bracket, VR	
2 - 16	5284005500	Slide VR, 100K Ω (B)	
2 - 17	*5800286100	Washer	
2 - 18	*5534695000	Washer, Oil Retaining	X-10R
2 - 19	5504726100	Housing Assy, Capstan Flywheel	X-10R
2 - 20	*5555704000	Tape, Adhesive	X-10R
2 - 21	*5534715000	Ring, Magnet; Thrust	X-10R
2 - 22	5504728000	Flywheel Assy, Capstan; L	X-10R
2 - 23	5534692000	Belt, Capstan Drive	X-10R
2 - 24	5504727000	Flywheel Assy, Capstan; R	X-10R
2 - 25	7105018003	DC Motor Assy, Capstan	X-7R
2 - 26	*5122172000	Connector Socket, 10P (WHT)	
2 - 27	*5800138000	Plate, Bearing; F	X-20R
2 - 28	*5544003000	Screw, Bearing	A-7300
2 - 29	*5555703000	Bearing	X-10R
2 - 30	*5555914100	Plate, Bearing	X-10R
2 - 31	*5504733001	Plate Assy, Slide	X-10R
2 - 32	*5524219000	Spring, Slide Plate	X-10R
2 - 33	*5503196000	Chassis Assy, Capstan	X-10R
For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquiries@mauritron.co.uk			

INCLUDED ACCESSORIES

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
	5350008500	Cord, Input-Output Connection	
	5062962000	Splicing Tape	
	5027288000	Sensing Foil	
	5598054001	Reel Adapter, Clamp (TZ-612A)	
	5101337100	Open Reel Supplement [U]	
	5101708000	Open Reel Supplement [All except U, J]	
	5700030801	X-1000R, X-1000RBL Owner's Manual[All except J]	
	5700030601	X-1000R, X-1000RBL Owner's Manual[J]	

[U]: U.S.A.

[A]: AUSTRALIA

[L]: LIMITED AREA

[C]: CANADA


[E]: EUROPE

[J]: JAPAN

[GE]: GENERAL EXPORT

[UK]: U.K.

EXPLODED VIEW-3

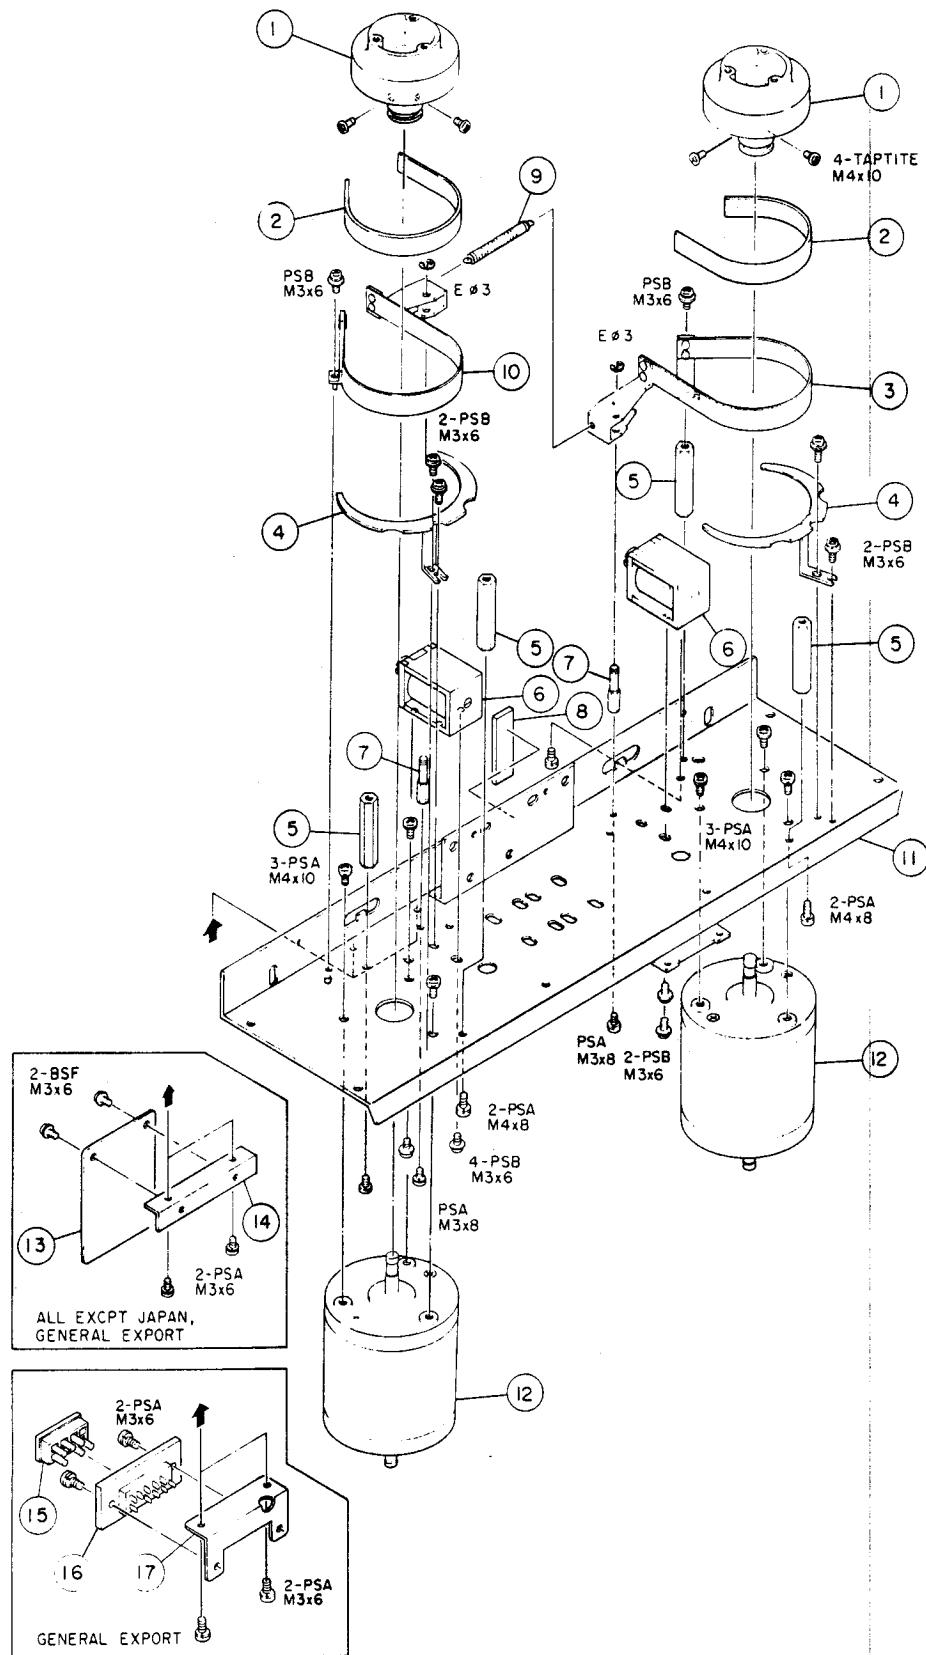

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
3 - 1	*5800346200	Base, Reel Table; B	
3 - 2	*5555274000	Shoe, Brake	A-3300SX
3 - 3	5504736000	Band Assy, Brake; R	X-10R
3 - 4	*5555685000	Plate, Band Assy Retaining	X-10R
3 - 5	*5544916000	Stay, Top Panel; A	A-6100MKII
3 - 6	5163044000	Solenoid, Brake	
3 - 7	*5545033000	Shaft, Brake Band	X-10R
3 - 8	*5555570000	Cushion	
3 - 9	*5524294000	Spring, Brake	X-10R
3 - 10	5504735000	Band Assy, Brake; L	X-10R
3 - 11	*5503194002	Chassis Assy, Reel Motor	
3 - 12	5370003300	DC Motor, Reel	
3 - 13	*5168997000	PCB Assy, FUSE [U, C]	
	*5158105000	PCB Assy, FUSE [E, A, UK]	
3 - 14	*5555789000	Bracket, FUSE PCB Assy [All except GE, L]	
3 - 15	△*5133014000	Plug, Voltage Selector [GE, L]	
3 - 16	△*5133015000	Socket [GE, L]	
3 - 17	*5800351800	Bracket, Switch [GE, L]	
For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinnor Oxon OX9 4QY Tel:- 01844-351694 Fax:- 01844-352554 Email:- enquiries@mauritron.co.uk			

(Continued from page 29)


REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 - 48	*5200072300	PCB Assy, PITCH CONT	
5 - 49	*5534713000	Rod, C	X-10R
5 - 50	*5552392001	Chassis, Control	X-10R
5 - 51	5800271001	Button Assy, Control; X-1000R	
	*5800320501	Button Assy, Control; X-1000RBL	
5 - 52	*5800349001	Tension Roller Assy (A)	
5 - 53	*5783083012	Screw, M3X12	
5 - 54	*5800348501	Collar	

[U]: U.S.A.
[A]: AUSTRALIA
[L]: LIMITED AREA

[C]: CANADA
[E]: EUROPE
[J]: JAPAN

[GE]: GENERAL EXPORT
[UK]: U.K.

EXPLODED VIEW 4

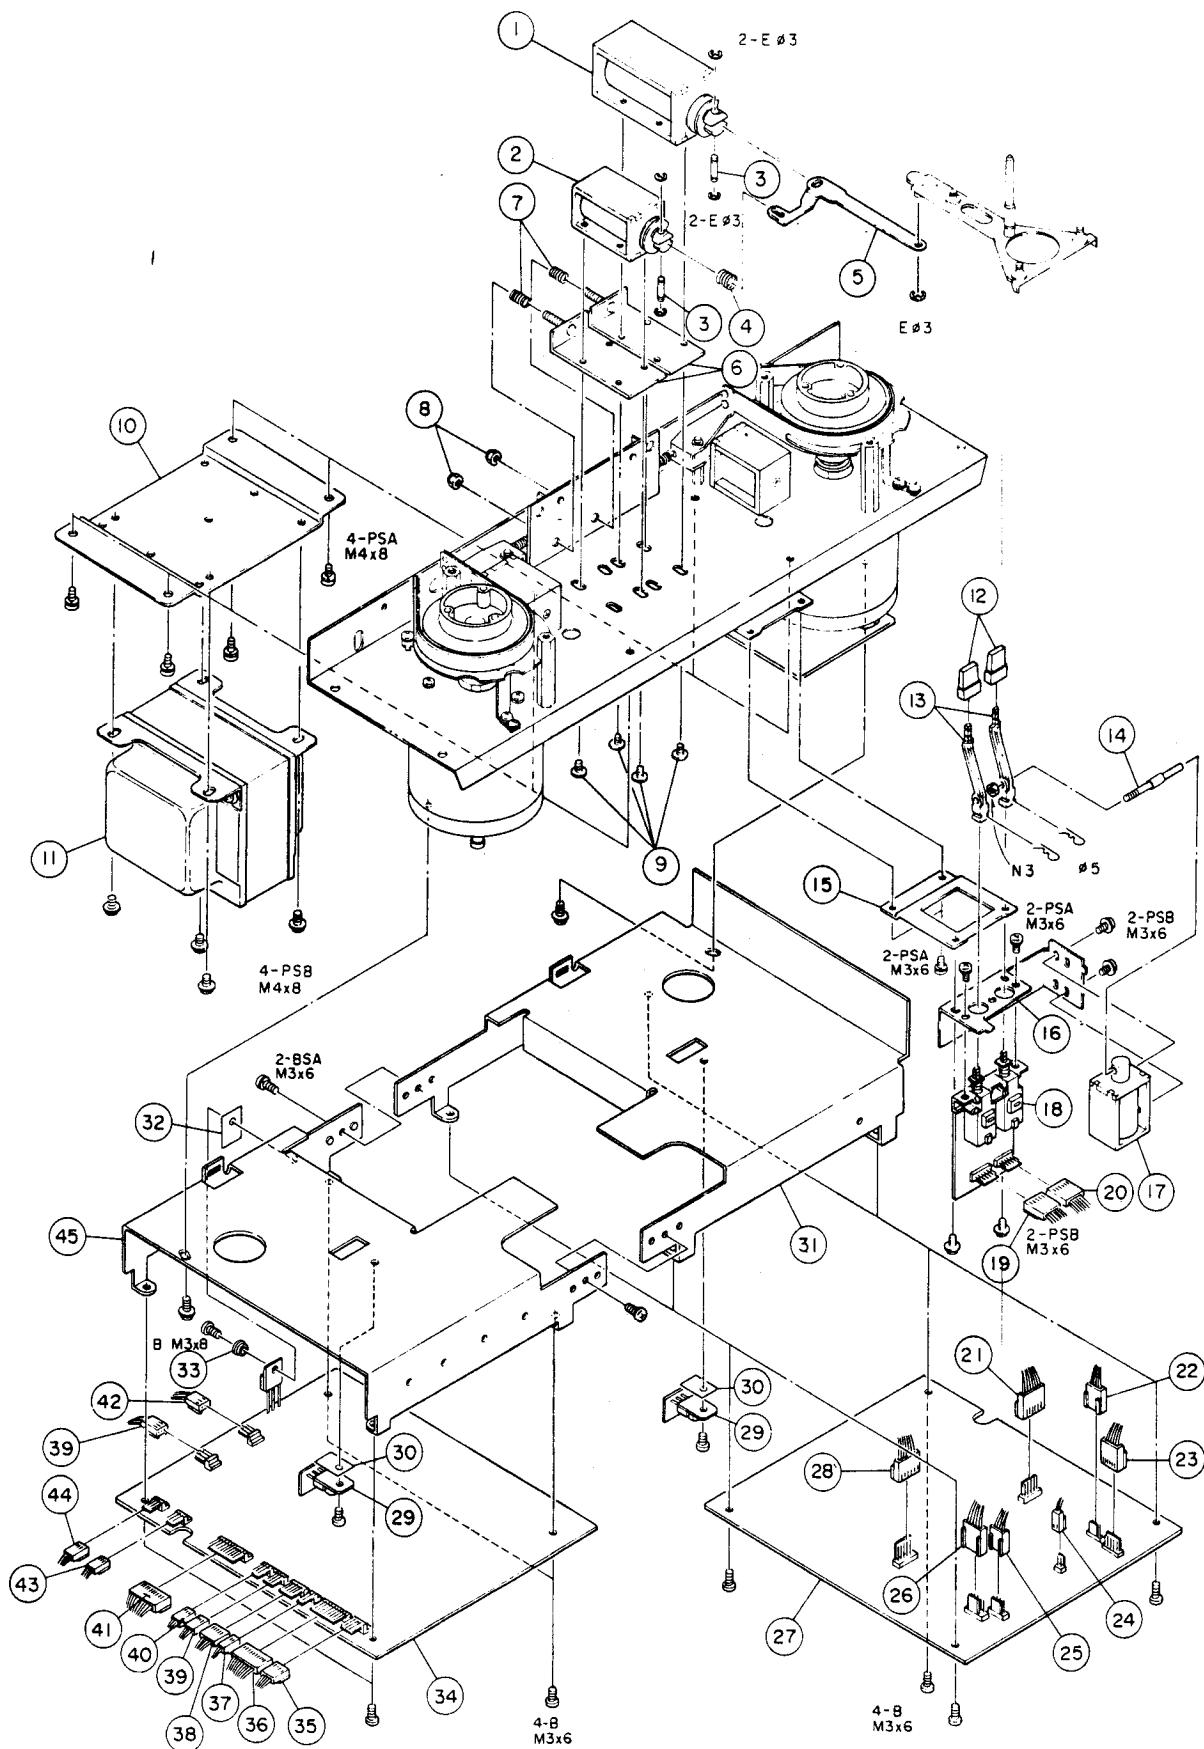

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
4 - 1	5163041001	Solenoid, Pinch Roller	
4 - 2	5163042000	Solenoid, Pause	
4 - 3	*5545022000	Pin, Solenoid	X-10R
4 - 4	*5524071000	Spring, Solenoid	AL-700
4 - 5	*5555668000	Plate; C	X-10R
4 - 6	*5504732000	Plate Assy, Solenoid	X-10R
4 - 7	*5524218000	Spring, Pinch Roller Pressure	X-10R
4 - 8	*5581066000	Nut, Nylon; M4	
4 - 9	*5800022600	Screw, Shoulder; G	X-10R
4 - 10	*5555681100	Bracket, Power Transformer	X-10R
4 - 11	△*5320014200	Transformer, Power [U]	
	△*5320017300	Transformer, Power [C]	
	△*5320014301	Transformer, Power [GE, L]	
	△*5320014400	Transformer, Power [E, UK, A]	
	△*5320014100	Transformer, Power [J]	
4 - 12	*5800262601	Button, Timer; X-1000R	
	*5800319501	Button, Timer; X-1000RBL	X-10R
4 - 13	*5534685000	Rod, Switch	X-10R
4 - 14	*5545024001	Shaft, Timer Solenoid	X-10R
4 - 15	*5555664000	Plate, Joint	X-10R
4 - 16	*5555671100	Bracket, Timer Switch	
4 - 17	5163045000	Solenoid, Timer	
4 - 18	*5200067300	PCB Assy, TIMER	
4 - 19	*5122166000	Connector Socket, 4P (WHT)	
4 - 20	*5122167000	Connector Socket, 5P (WHT)	
4 - 21	*5122223000	Connector Socket, 4P (BLK)	
4 - 22	*5122228000	Connector Socket, 4P (RED)	
4 - 23	*5122166000	Connector Socket, 4P (WHT)	
4 - 24	*5122164000	Connector Socket, 2P (WHT)	
4 - 25	*5122167000	Connector Socket, 5P (WHT)	
4 - 26	*51222283000	Connector Socket, 5P (RED)	
4 - 27	*5200067600	PCB Assy, DBX [All except U, C]	
4 - 28	*5200067610	PCB Assy, DBX [U, C]	
4 - 29	*5122224000	Connector Socket, 5P (BLK)	
4 - 30	*5200073100	PCB Assy, TRANSISTOR	
4 - 31	*5800328700	Plate, Insulating	
	*5800269701	Bracket, PCB; Ampl	
4 - 32	*5033291000	Plate, Insulating	
4 - 33	*5033295000	Tube, Insulating	
4 - 34	*5200067700	PCB Assy, POWER/SERVO	
4 - 35	*51222282000	Connector Socket, 4P (RED)	
4 - 36	*5122170000	Connector Socket, 8P (WHT)	
4 - 37	*5122164000	Connector Socket, 2P (WHT)	
4 - 38	*5122167000	Connector Socket, 5P (WHT)	
4 - 39	*5122281000	Connector Socket, 3P (RED)	
4 - 40	*5122166000	Connector Socket, 4P (WHT)	
4 - 41	*5122227000	Connector Socket, 8P (BLK)	
4 - 42	*5122223000	Connector Socket, 4P (BLK)	
4 - 43	*5122165000	Connector Socket, 3P (WHT)	
4 - 44	*5122222000	Connector Socket, 3P (BLK)	
4 - 45	*5800269601	Bracket, PCB, SERBO	
4 - 46	*5200083800	PCB Assy, VR	


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

[U]: U.S.A.
[A]: AUSTRALIA
[L]: LIMITED AREA

[C]: CANADA
[E]: EUROPE
[J]: JAPAN

[GE]: GENERAL EXPORT
[UK]: U.K.

EXPLODED VIEW-5

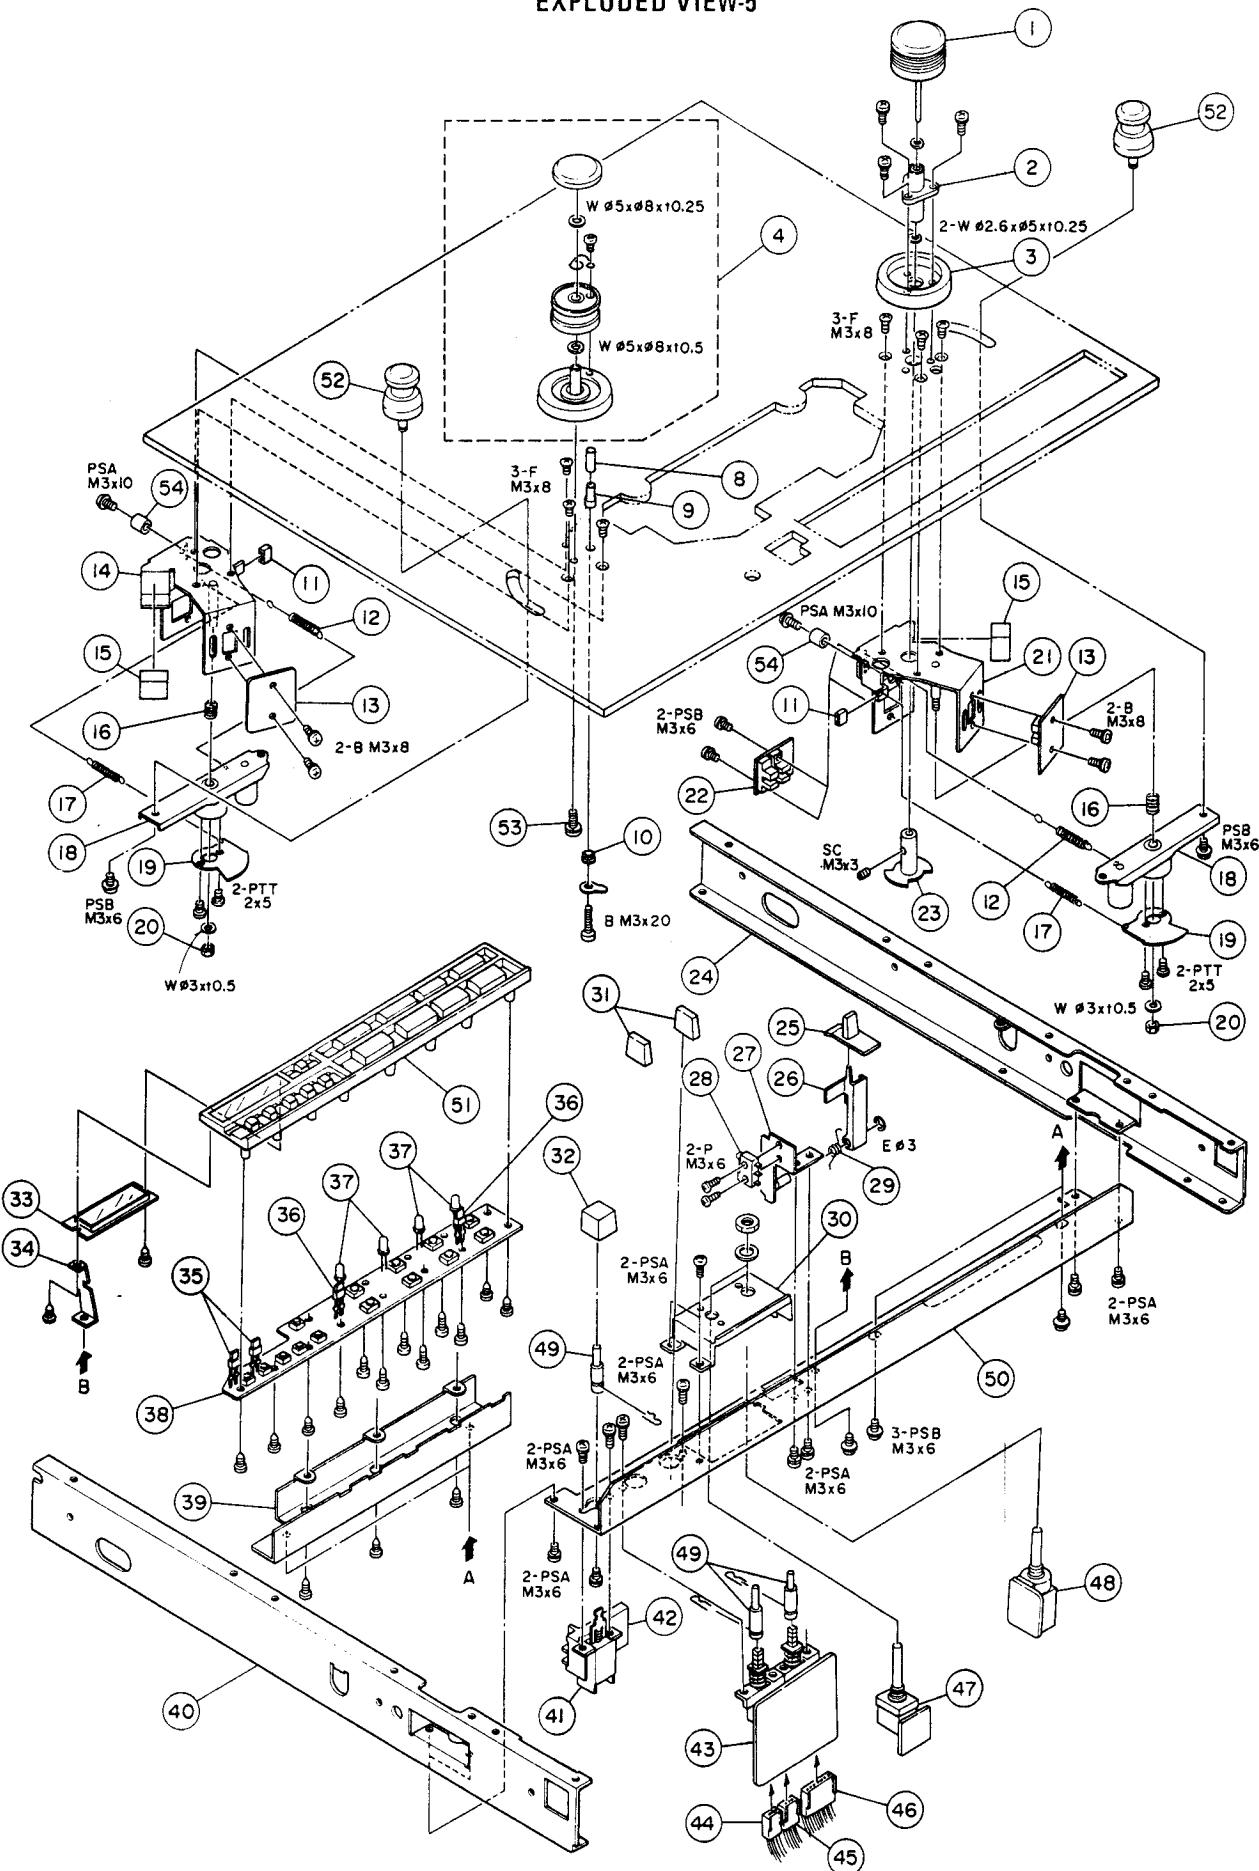

Parts marked with * require longer delivery time.

REF. NO.	PARTS NO.	DESCRIPTION	REMARKS
5 - 1	5800270500	Roller Assy, X-1000R	
	5800321300	Roller Assy, X-1000RBL	
5 - 2	*5504516000	Metal Holder Assy	
5 - 3	*5800270400	Base, Roller; X-1000R	
	*5800321500	Base, Roller; X-1000RBL	
5 - 4	*5800314203	Roller Assy	
5 - 5		Not Used	
5 - 6		Not Used	
5 - 7		Not Used	
5 - 8	*5545042000	Post, Sensing	X-10R
5 - 9	*5534716000	Post, Insulating	X-10R
5 - 10	*5534368100	Washer, Insulating	A-6600
5 - 11	*5027699000	Collar, Rubber	
5 - 12	*5800270900	Spring, Tension	
5 - 13	*5200067402	PCB Assy, Tension Sensor	
5 - 14	*5800269801	Base Assy, Shut off; L	
5 - 15	*5534686001	Cusion	X-10R
5 - 16	*5524069000	Spring, Roller Arm	AL-700
5 - 17	*5800270801	Spring, Return	
5 - 18	5800271602	Arm Assy, Tension	
5 - 19	*5800270700	Shutter	
5 - 20	*5581045000	Nut, Nylon	
5 - 21	*5800269901	Base Assy, Shut off; R	
5 - 22	*5200067201	PCB Assy, Roller Sensor	
5 - 23	*5800271302	Refrector	
5 - 24	*5552393102	Angle, Side; R	X-10R
5 - 25	*5800263000	Knob, Cue; X-1000R	
	*5800319900	Knob, Cue; X-1000RBL	
5 - 26	*5800401000	Lever, Cue; B	
5 - 27	*5504737000	Bracket Assy, Cue	X-10R
5 - 28	*5301455500	Switch, Miclo; SS5GL13-F	
5 - 29	*5524223001	Spring, Cue	X-10R
5 - 30	*5555699000	Bracket, Speed Switch	X-10R
5 - 31	5800263100	Button, Switch; X-1000R	
	5800320000	Button, Switch; X-1000RBL	
5 - 32	5800268600	Button, Power Switch; X-1000R	
	5800320100	Button, Power Switch; X-1000RBL	
5 - 33	5225009600	Indicator, LED; SL-2585	
5 - 34	*5800283500	Plate, Reinforcement	
5 - 35	5225005900	LED (RED), SLP-151B	
5 - 36	5225005800	LED (GREEN), SLP-251B	
5 - 37	5225010500	LED (RED), GL-5HD22	
5 - 38	*5200067001	PCB Assy, Keyboard	
5 - 39	*5800271200	Bracket, Button; Control	
5 - 40	*5552394101	Angle, Side; L	
5 - 41	△ 53000030800	Switch, Power [J, GE, L]	
	△ 5134037000	Switch, Power [U]	
	△ 5134018000	Switch, Power [C]	
5 - 42	△ 5134011000	Swicth, Power [E, UK, A]	
	△ *5052907000	Spark Killer, 0.01μF +300/300V [J, GE, L]	
	△ *5052910000	Spark Killer, 0.033μF +120/125V [U]	
	△ *5052911000	Spark Killer, 0.033μF +120/250V [C]	
	△ *5267702500	Spark Killer, 0.0047μF 250V [E, UK, A]	
5 - 43	*5200067100	PCB Assy, SPEED SW	
5 - 44	*5122165000	Connector Socket, 3P (WET)	
5 - 45	*5122240000	Connector Socket, 3P (RED)	
5 - 46	*5122168000	Connector Socket, 6P (WET)	
5 - 47	*5200067500	PCB Assy, AUTO REVERSE	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

(Continued on page 25)

[U] : U.S.A.

[A] : AUSTRALIA

[L] : LIMITED AREA

[C] : CANADA


[E] : EUROPE

[J] : JAPAN

[GE] : GENERAL EXPORT

[UK] : U.K.


EXPLODED VIEW-6

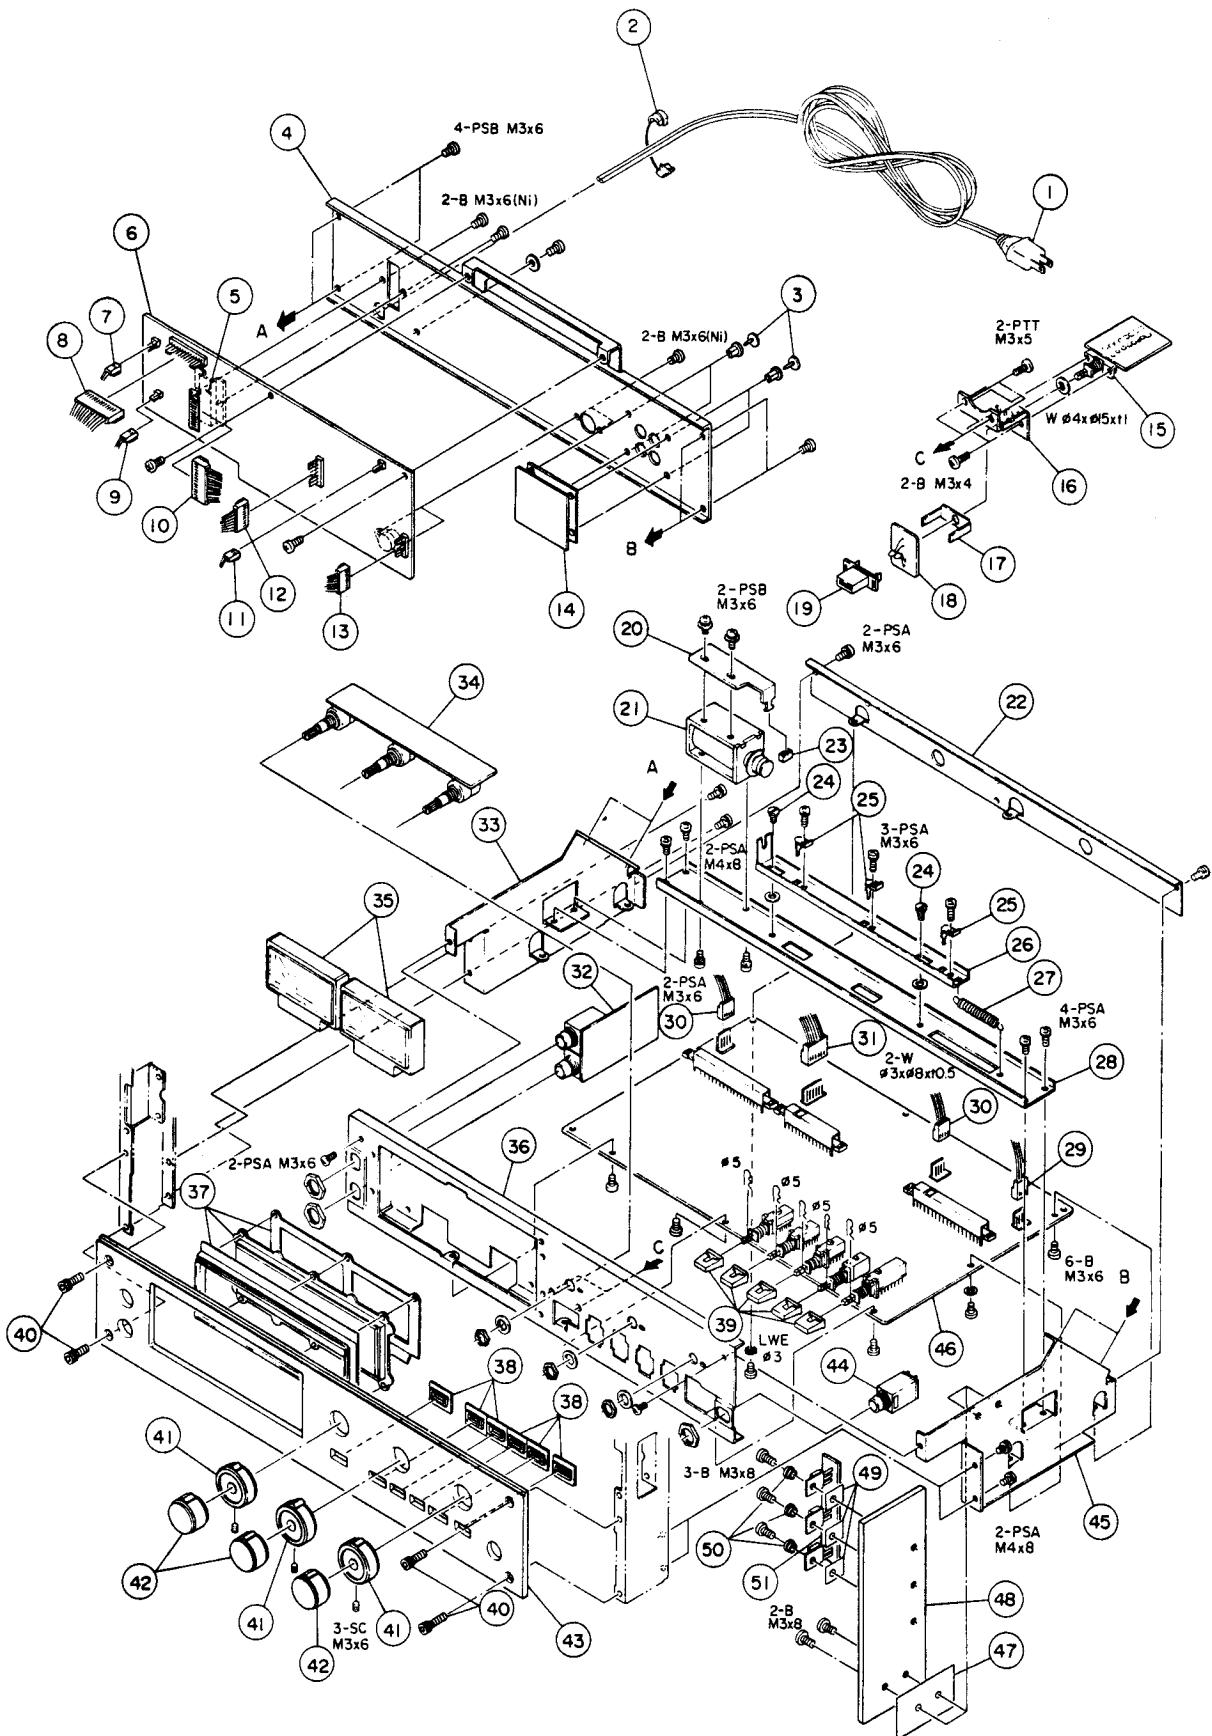


X-1000R

5 PC BOARD AND PARTS LIST


PC Boards shown viewed from foil side.
REC/PLAY AMPL. PCB ASSY

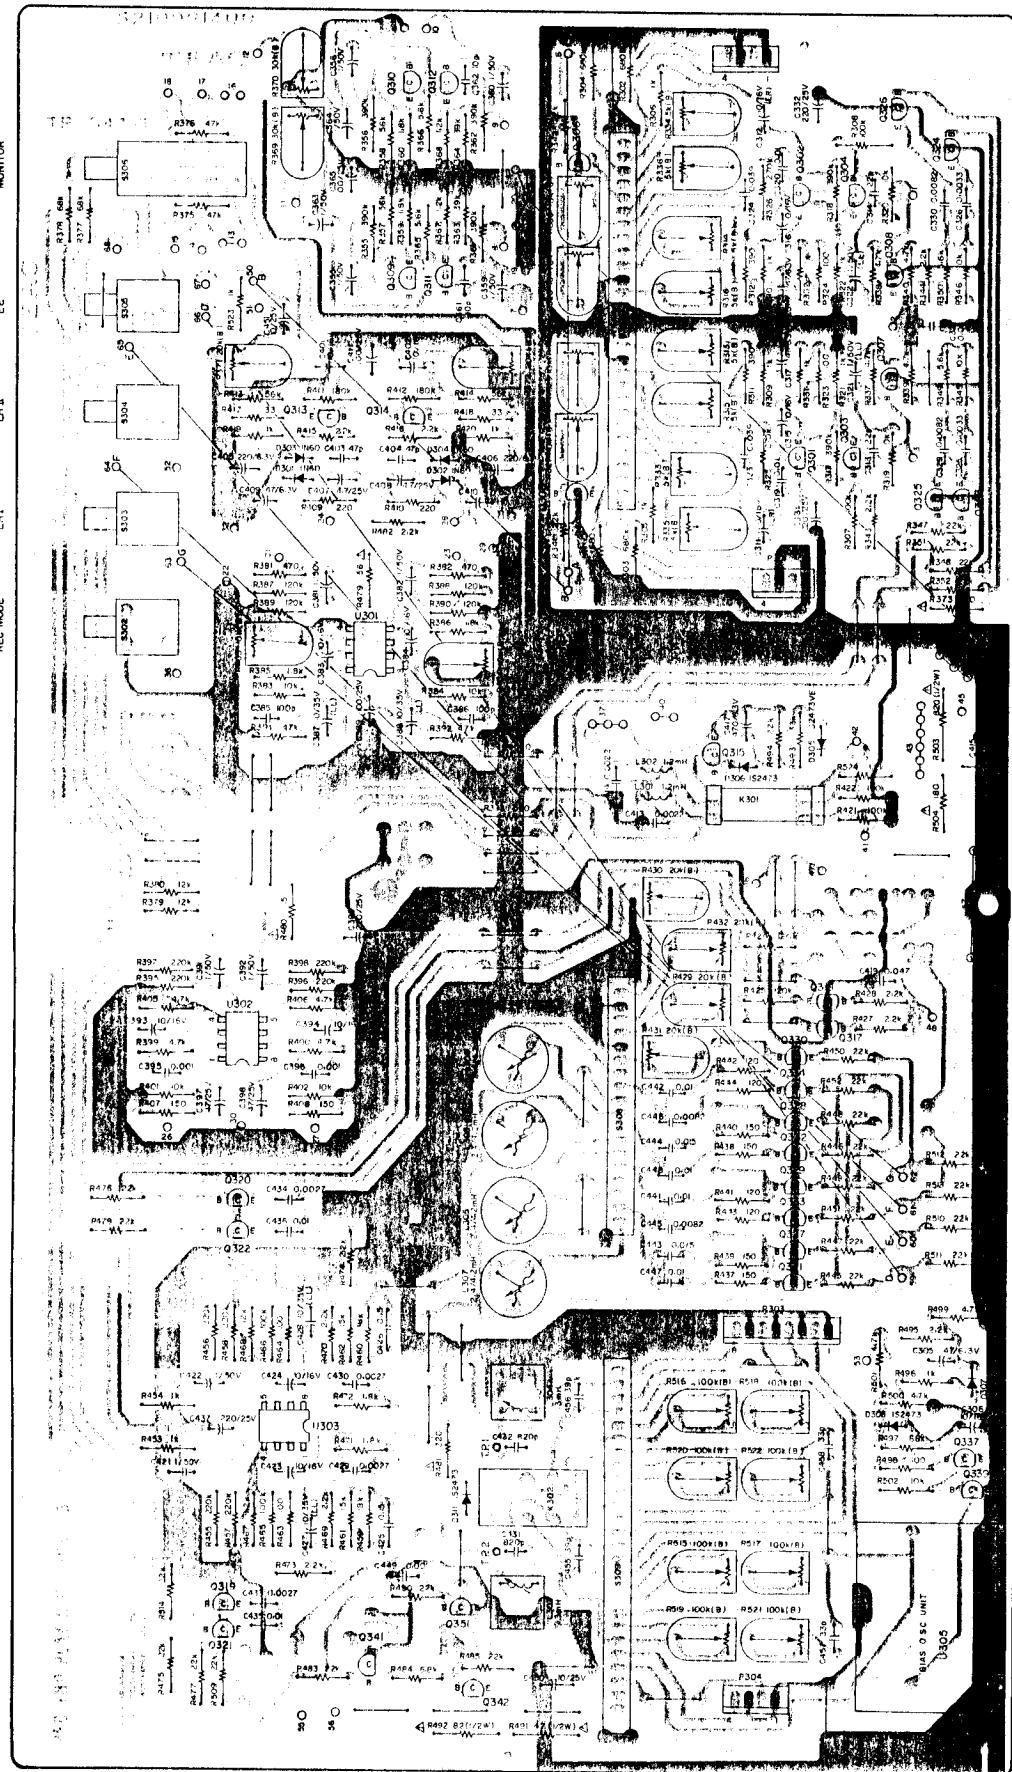

CONTROL PCB ASSY

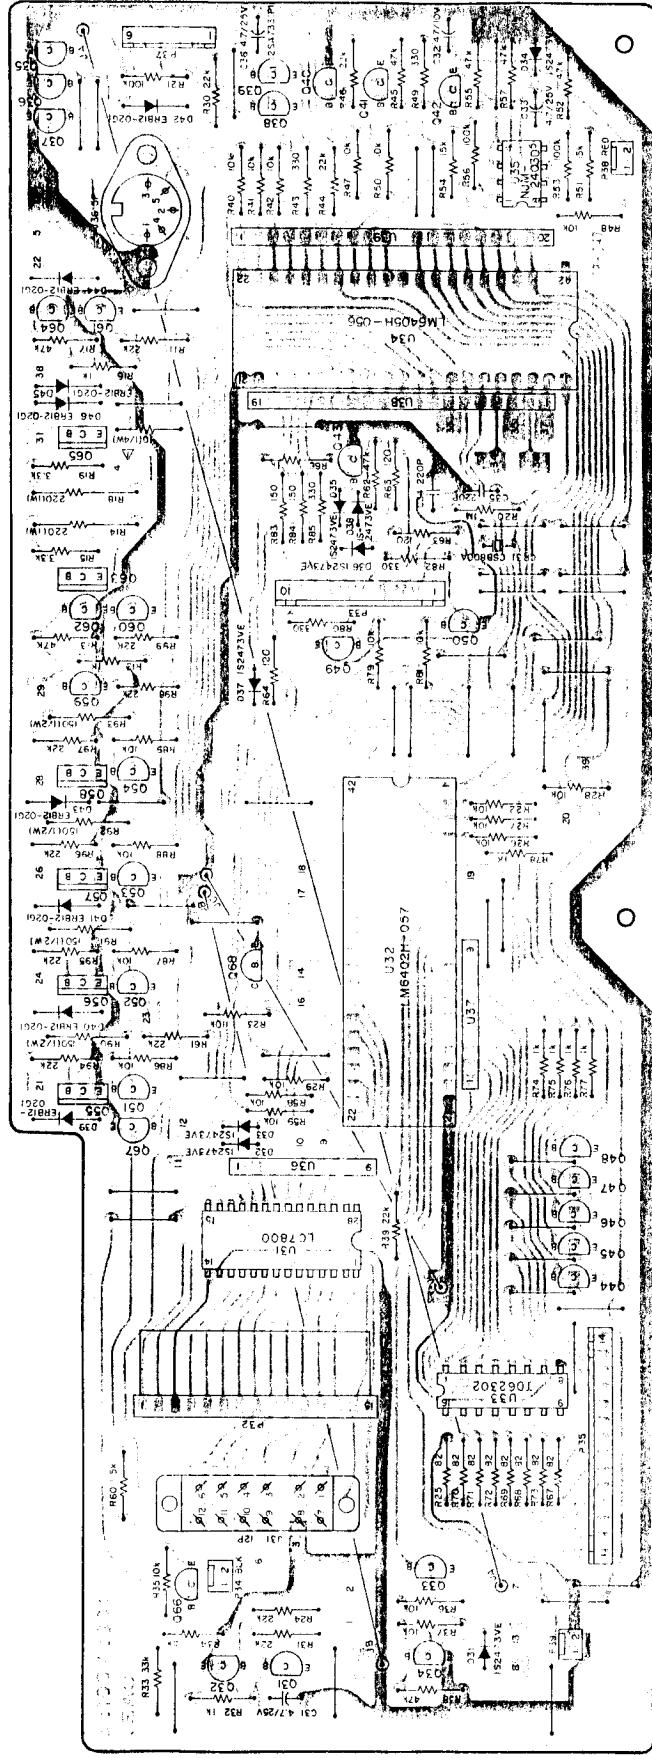


VOLUME PCB ASSY

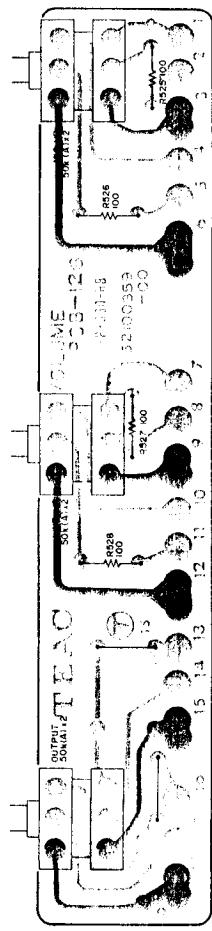


**For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk**


MIC AMPL. PCB ASSY

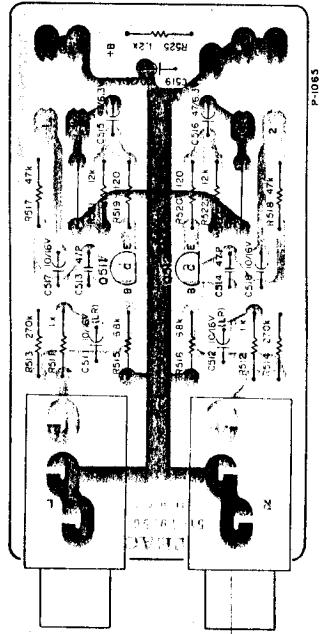


POWER/SERVO PCB ASSY

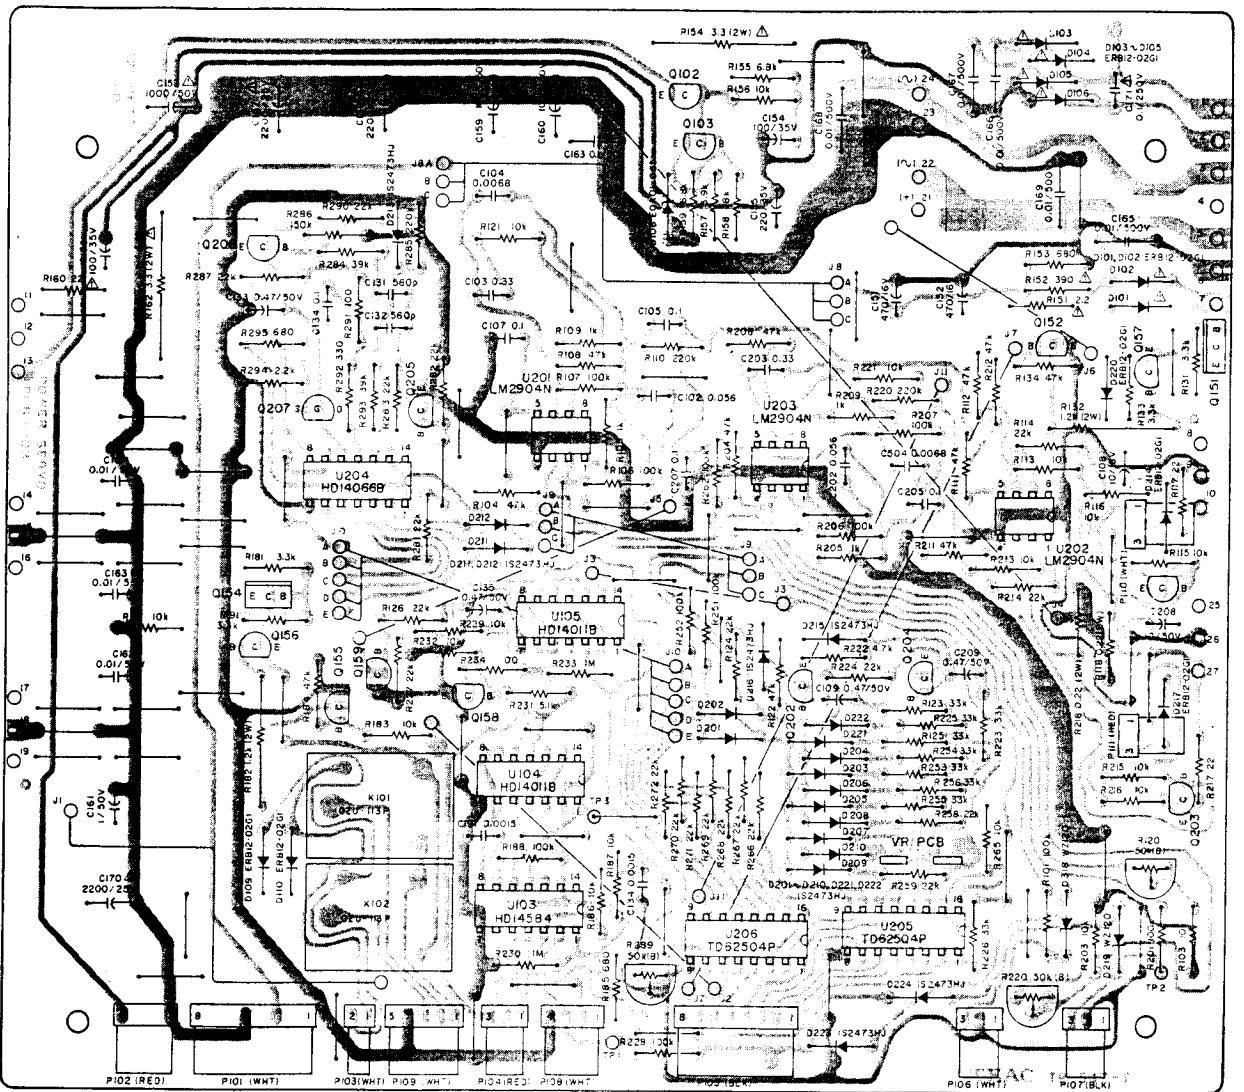

VR PCB ASSY (POWER/SERVO)

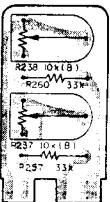

DBX PCB ASSY

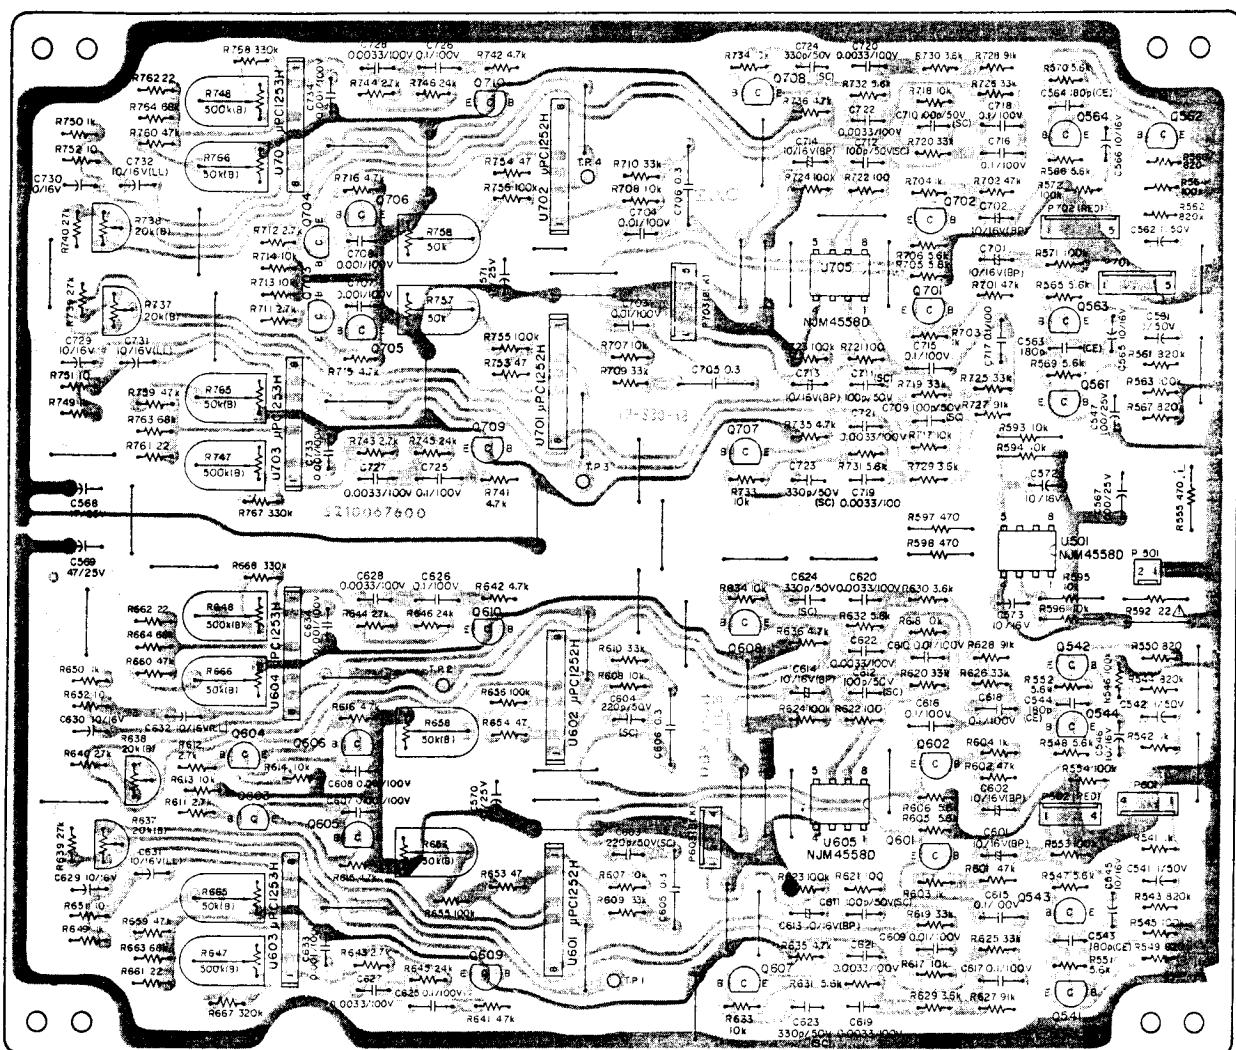






















For Service Manuals Contact
MAURITRON TECHNICAL SERVICES

8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk


NOTES

1. PC Board shown viewed from foil side.
2. The colors used on the PCB illustrations have the following significance:
■ : GND
■ : Other
3. Resistor values are in ohms ($k = 1,000$ ohms).
4. All capacitor values are in microfarads ($p = \mu\text{F}$).




SEMICONDUCTOR ELECTRODES

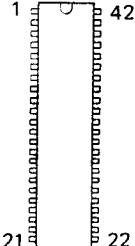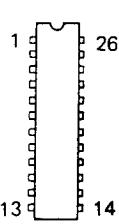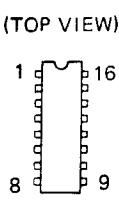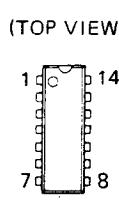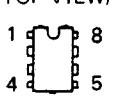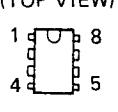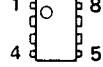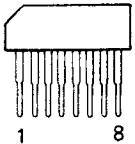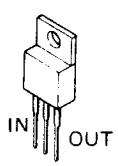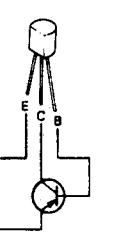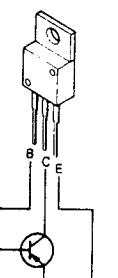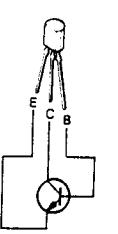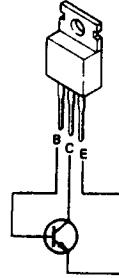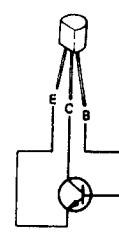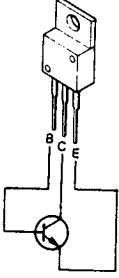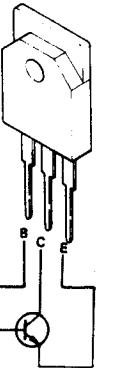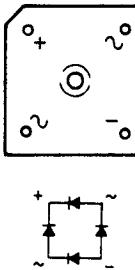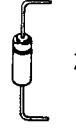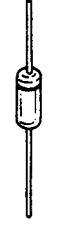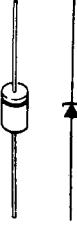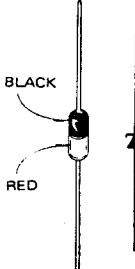
LM6402A LM6405A (TOP VIEW) 	LC7800 (TOP VIEW) 	TD62302A TD62504P (TOP VIEW) 	HD14011BP HD14066BP HD14584B (TOP VIEW) 	TA75558P (TOP VIEW) 	LM2904N (TOP VIEW) 
NJM2403D NJM4558D (TOP VIEW) 	μ PC1252H μ PC1253H (SIDE VIEW) 	NJM78M05A NJM78M15A 	2SA733(P) 2SA933LN(S) 2SA950(Y) 2SA1015(GR) 	2SB507(E) 	2SC536(F) 
2SC1061(C) 	2SC945L(K) 2SC1318(S) 2SC1327(T) 2SC1740LN(S) 2SC1815G(R) 2SD655E 	2SD313(E) 	2SD718(O) 	DBA60C (BOTTOM VIEW) 	
1S2473HJ 1S2473VE 	1N60 	EQA01-06S 	ERB12-02G1 	WZ-090 	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

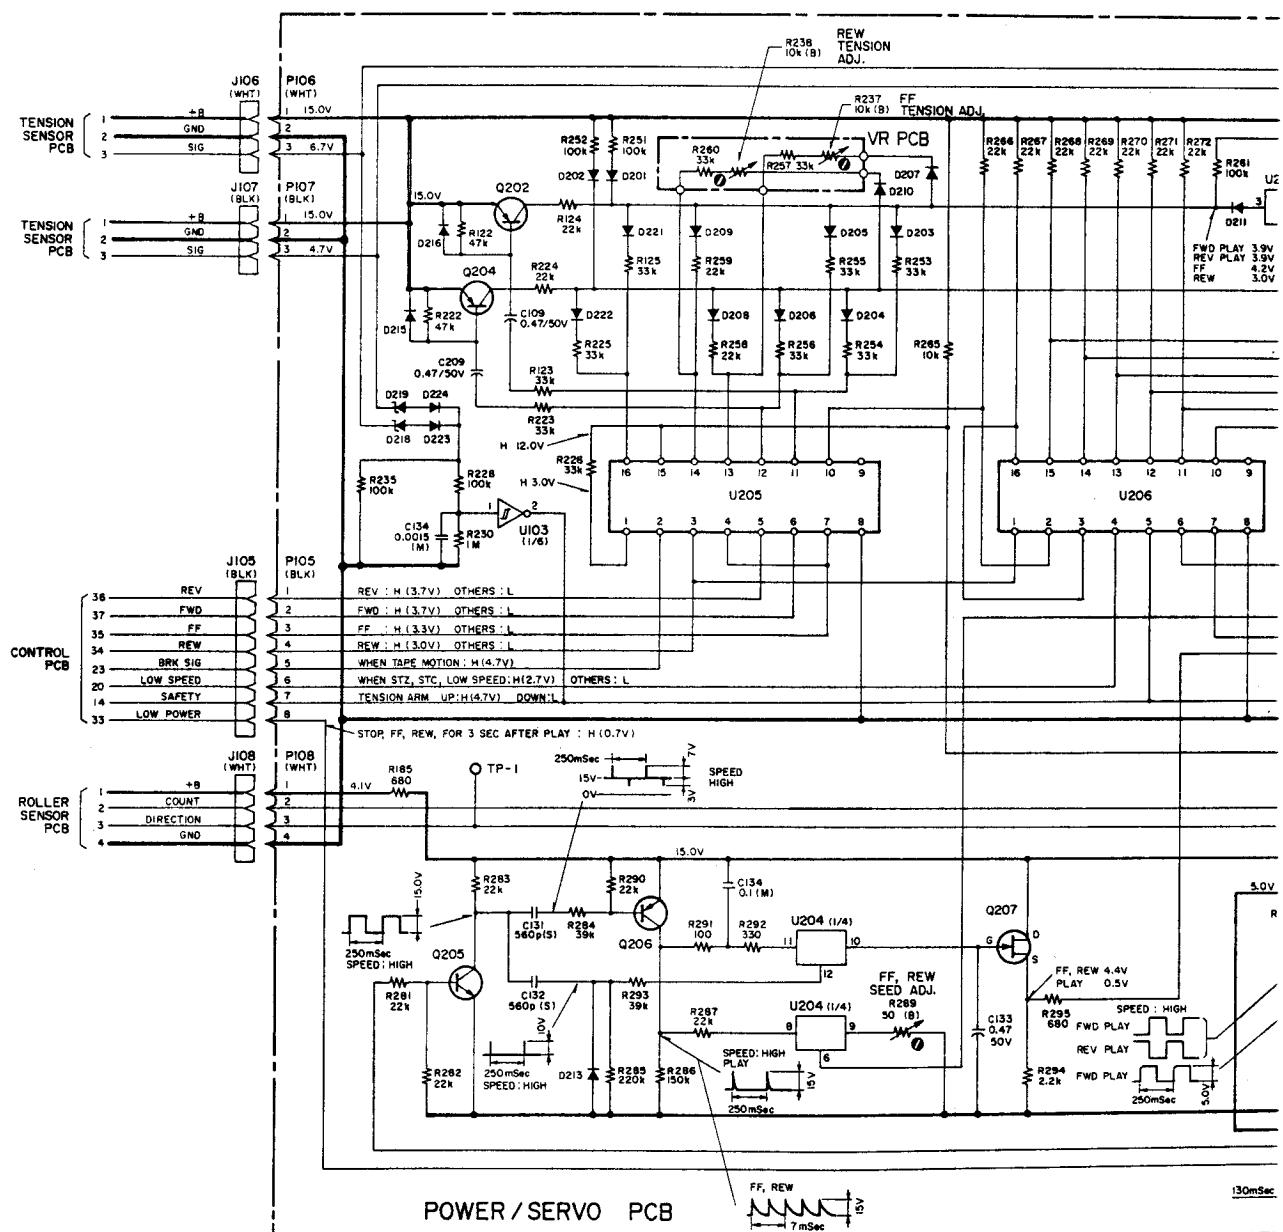



UI03	HDI4584B	Q102	2SC1318(S)	Q201	2SC1815(GR)	D101 ~ D106	ERBI2-026I	D201 ~ D213	IS2473F
UI04 , UI05	HDI4011B	Q103	2SC536(F)	Q202	2SA1015(GR)	D108	EQA01-06S	D214	ERBI2-(
		Q151	2SB507(E)	Q203	2SC1815(GR)	D109 , D110	ERBI2-026I	D215 , D216	IS2473I
		Q152	2SC1318(S)	Q204	2SA1015(GR)			D217	ERBI2-(
U201 ~ U203	LM2904N	Q154	2SB507(E)	Q205	2SC1815(GR)			D218 , D219	WZ90
U204	HD14066B	Q155	2SC1318(S)	Q206	2SA1015(GR)			D220	ERBI2-(
U205 , U206	TD62504P	Q156 , Q157	2SA1015(GR)	Q207	2SK68(A)			D221 ~ D224	IS2473I
		Q158 , Q159	2SC1815(GR)						

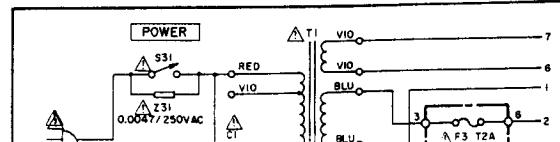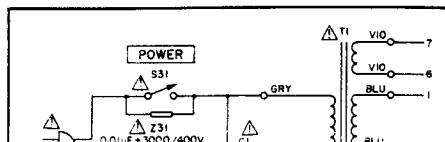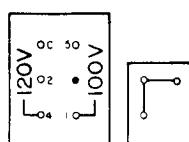

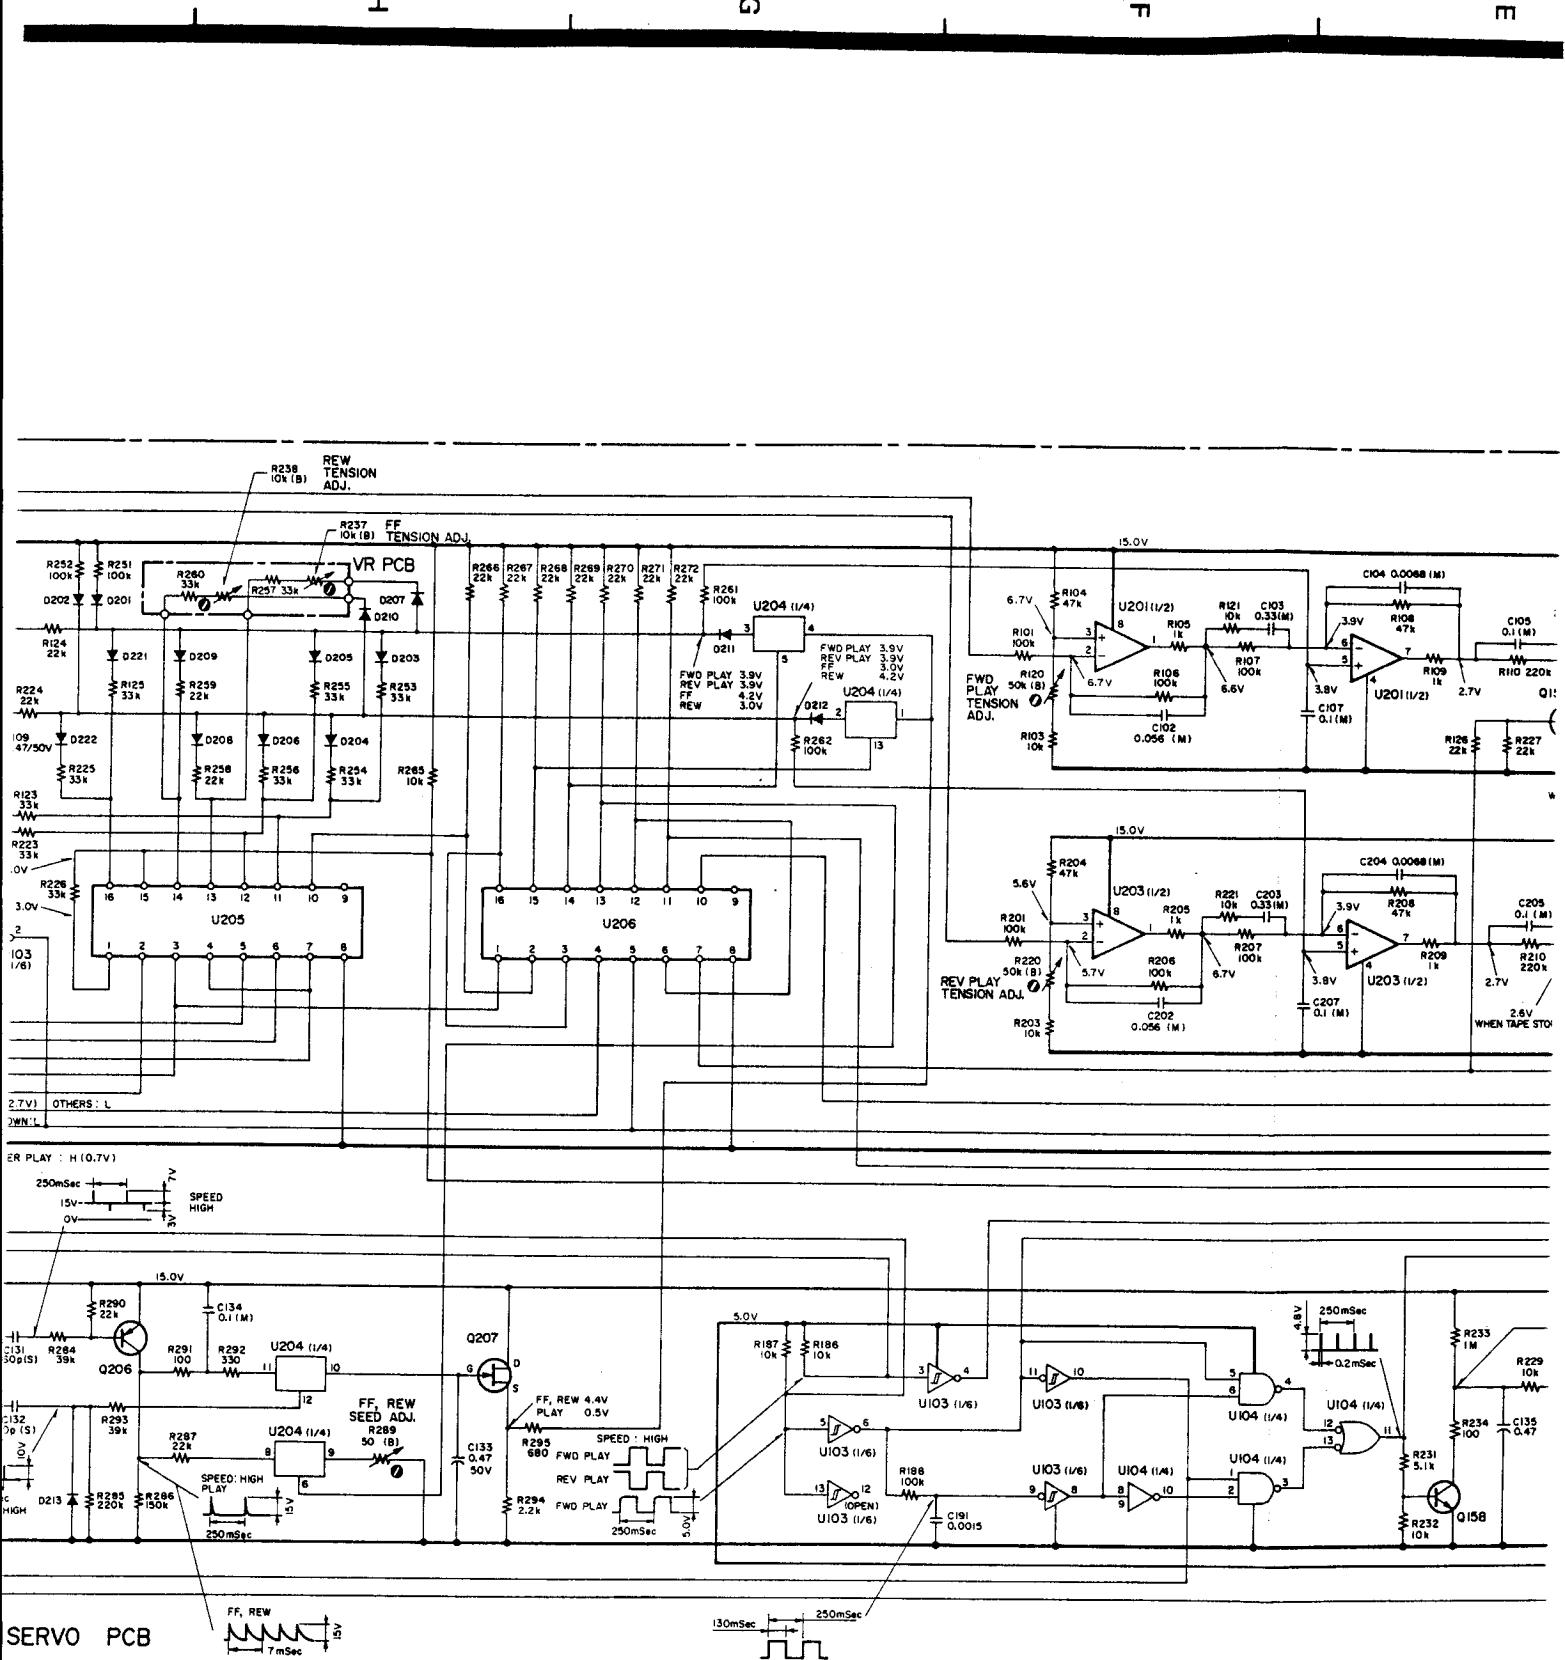


2SC1318(S)	Q201 2SC1815(GR)	D101 ~ D106 ERB12-02G1	D201 ~ D213 IS2473HJ
2SC536(F)	Q202 2SA1015(GR)	D108 EQA01-06S	D214 ERB12-02G1
2SB507(E)	Q203 2SC1815(GR)	D109, D110 ERB12-02G1	D215, D216 IS2473HJ
2SC1318(S)	Q204 2SA1015(GR)	D217	ERB12-02G1
2SB507(E)	Q205 2SC1815(GR)	D218, D219 WZ90	
2SC1318(S)	Q206 2SA1015(GR)	D220	ERB12-02G1
Q157 2SA1015(GR)	Q207 2SK68(A)	D221 ~ D224	IS2473HJ
Q159 2SC1815(GR)			

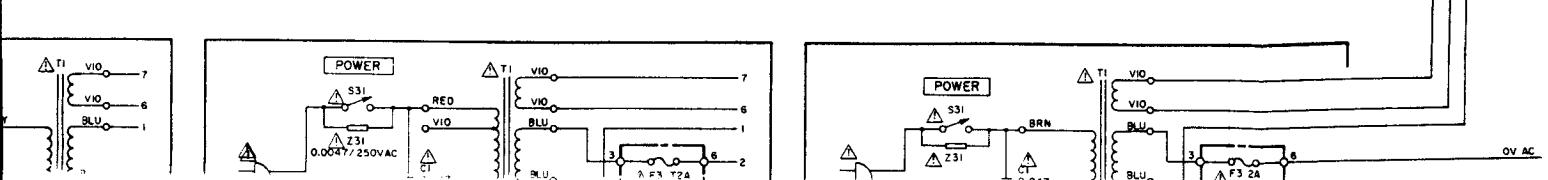


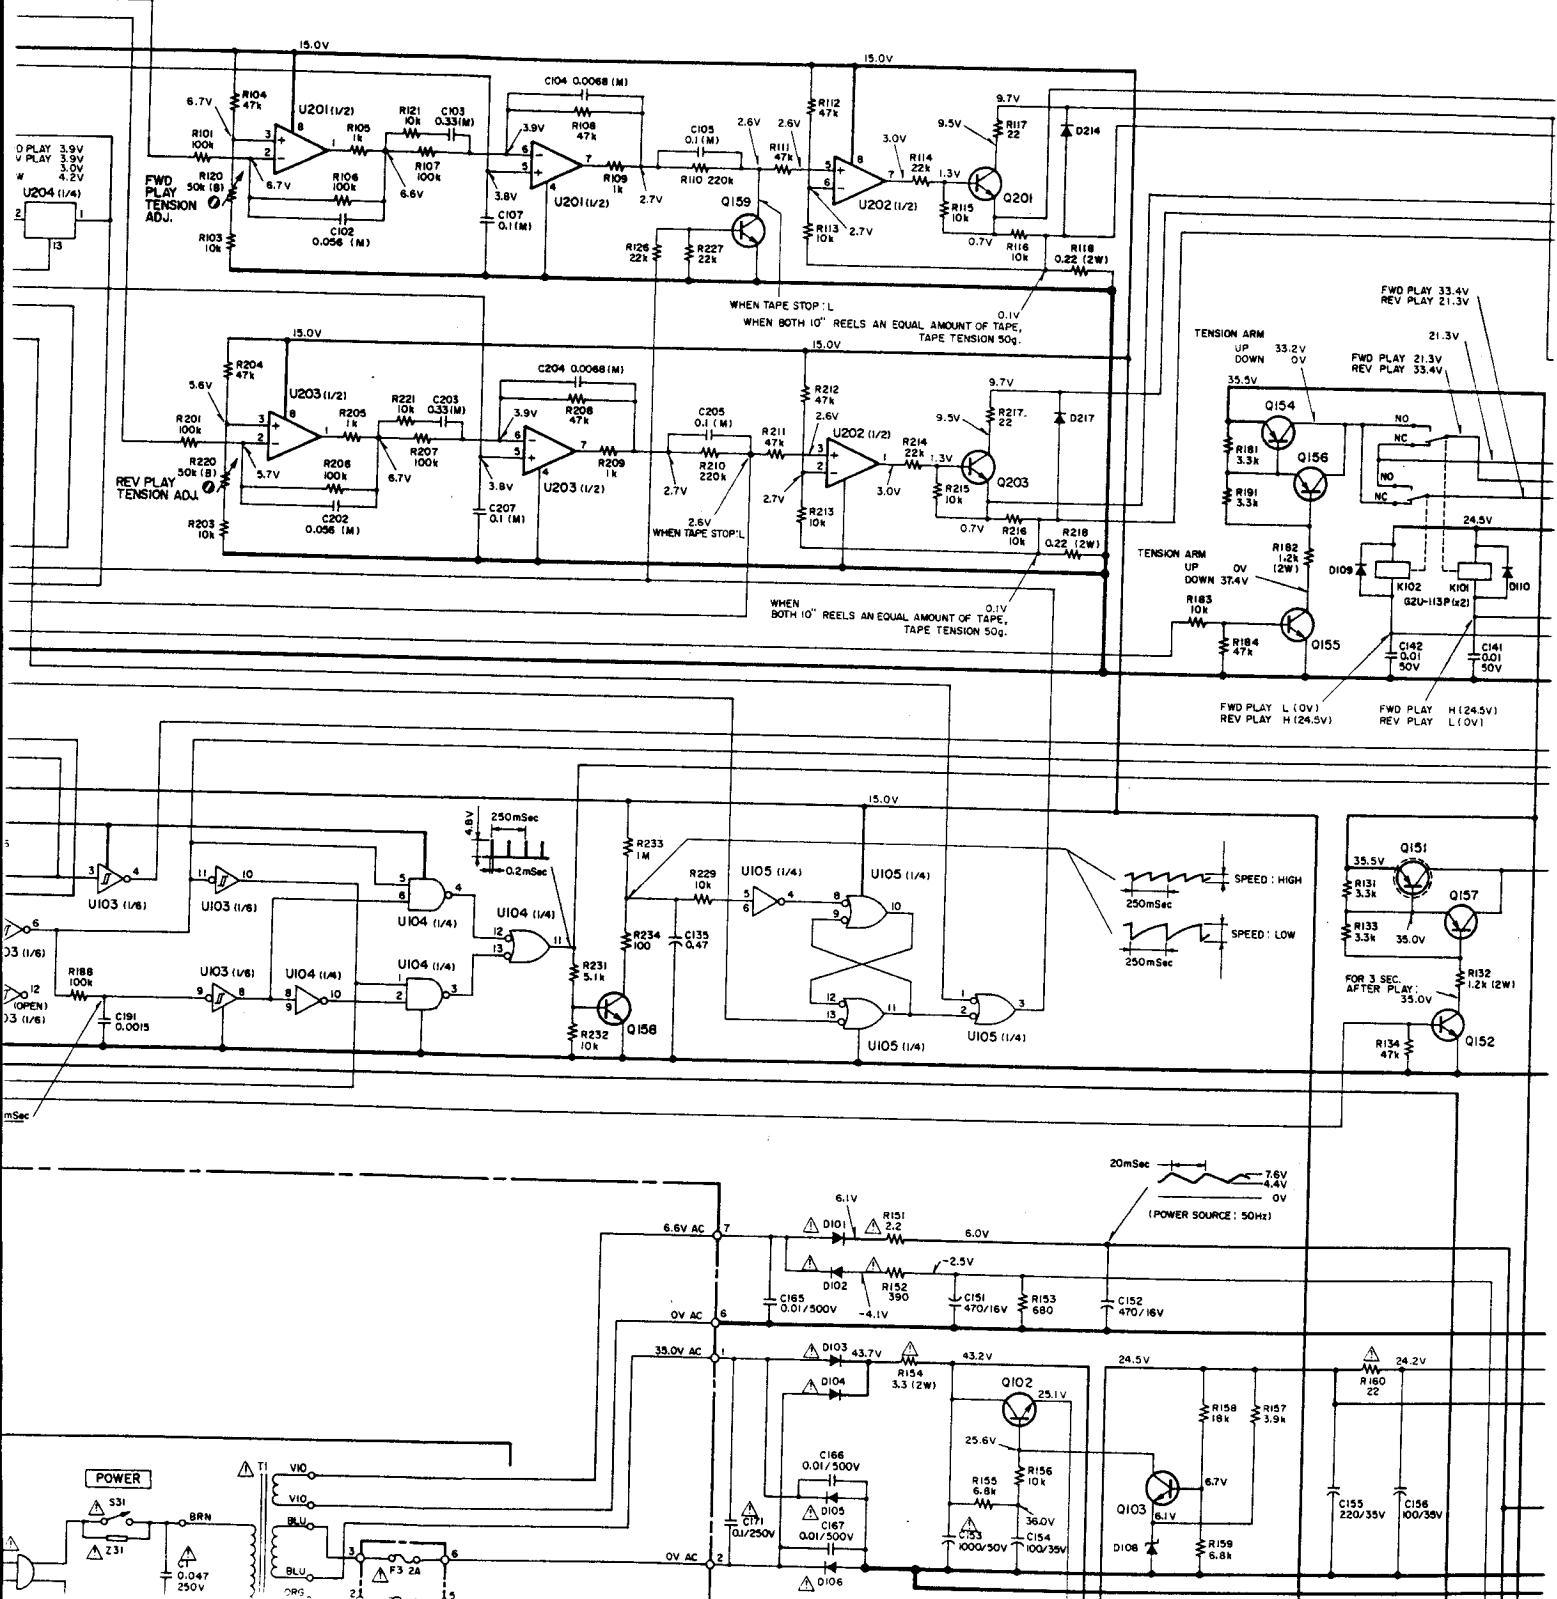


TEAC SCHEMATIC DIAGRAM X-1000R


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

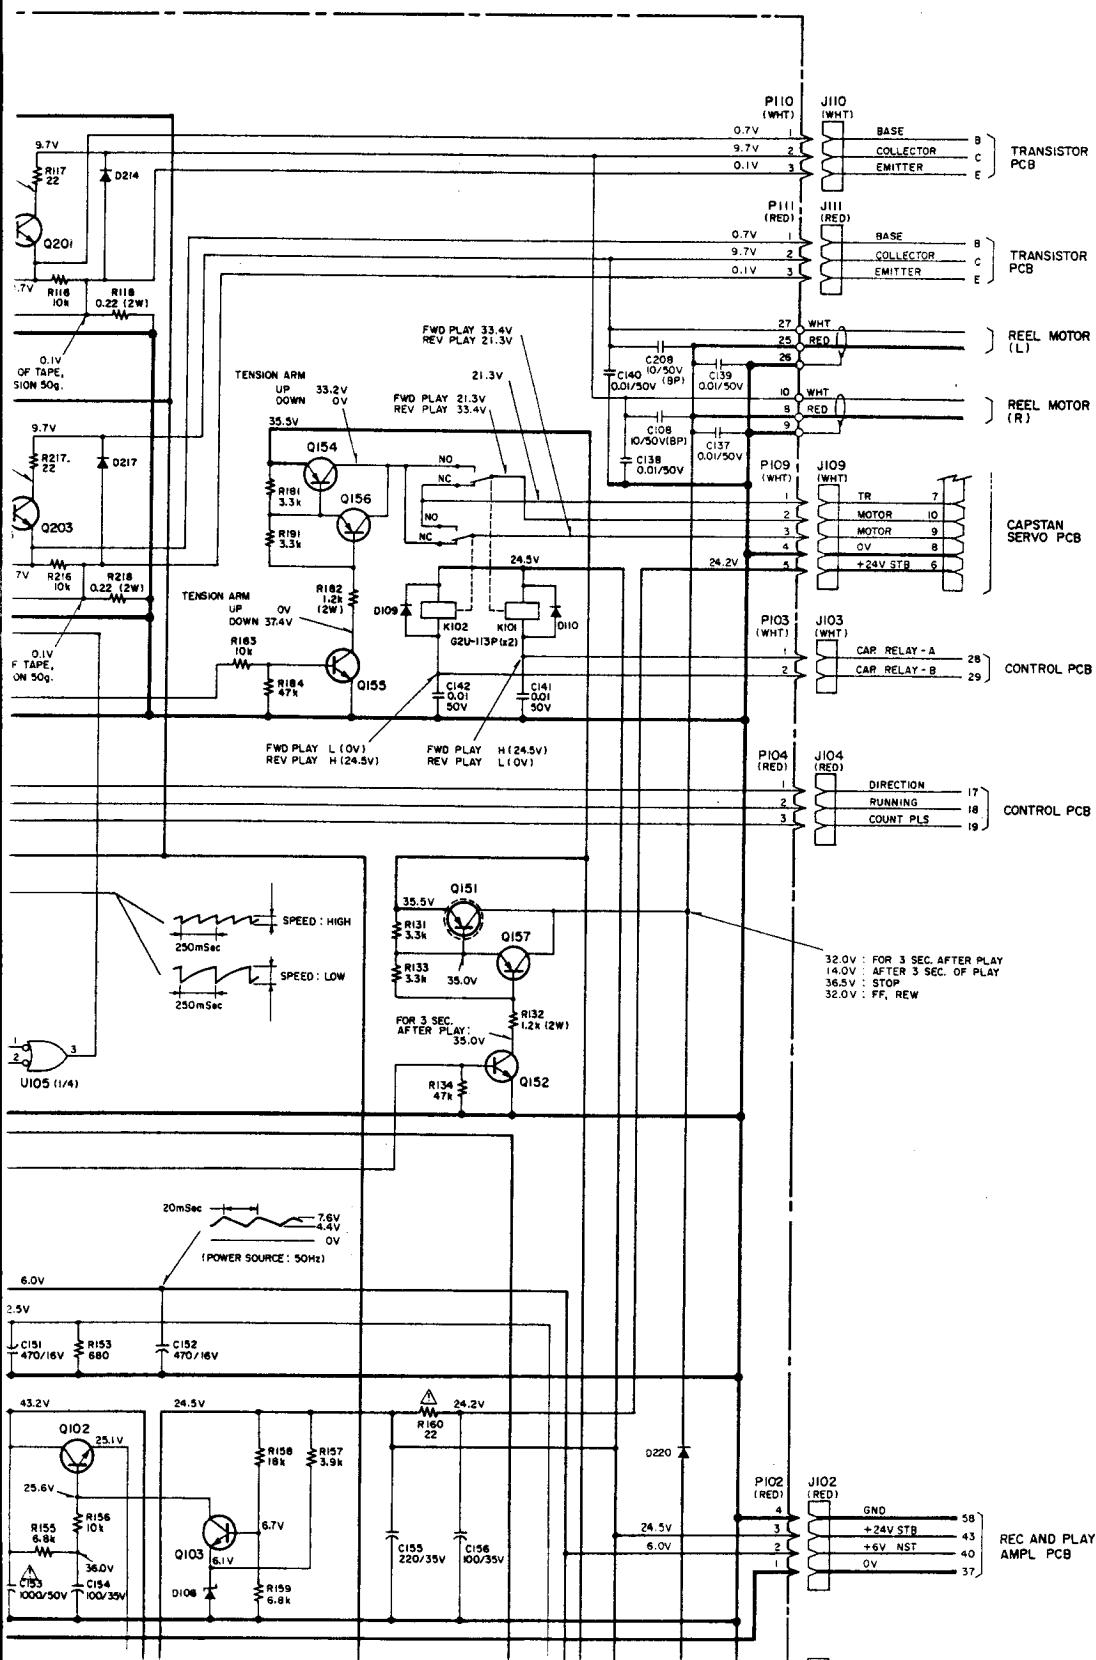




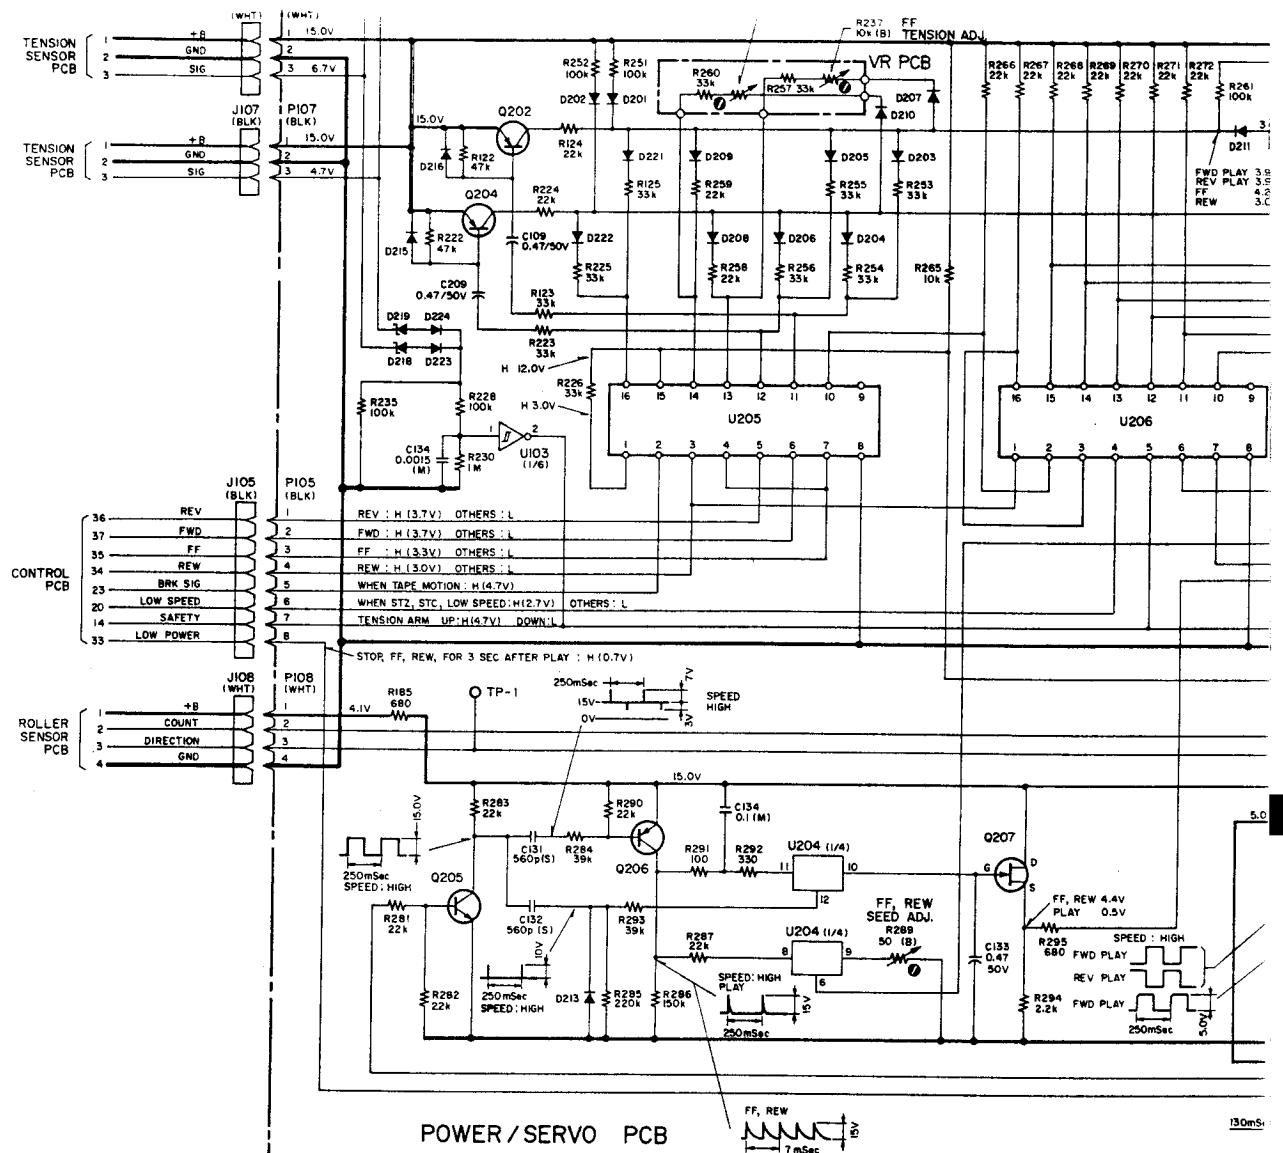



UI03	HD14584B	Q102	2SC1318(S)	Q201	2SC1815(GR)	D101 ~ D106	ERB12-02G1	D201 ~ D213	IS247
UI04 , UI05	HD14011B	Q103	2SC536(F)	Q202	2SA1015(GR)	D108	EQAO1-06S	D214	ERB12
		Q151	2SB507(E)	Q203	2SC1815(GR)	D109 , D110	ERB12-02G1	D215 , D216	IS247
		Q152	2SC1318(S)	Q204	2SA1015(GR)			D217	ERB12
U201 ~ U203	LM2904N	Q154	2SB507(E)	Q205	2SC1815(GR)			D218 , D219	W290
U204	HD14066B	Q155	2SC1318(S)	Q206	2SA1015(GR)			D220	ERB12
U205 , U206	TD62504P	Q156 , Q157	2SA1015(GR)	Q207	2SK68(A)			D221 ~ D224	IS247
		Q158 , Q159	2SC1815(GR)						

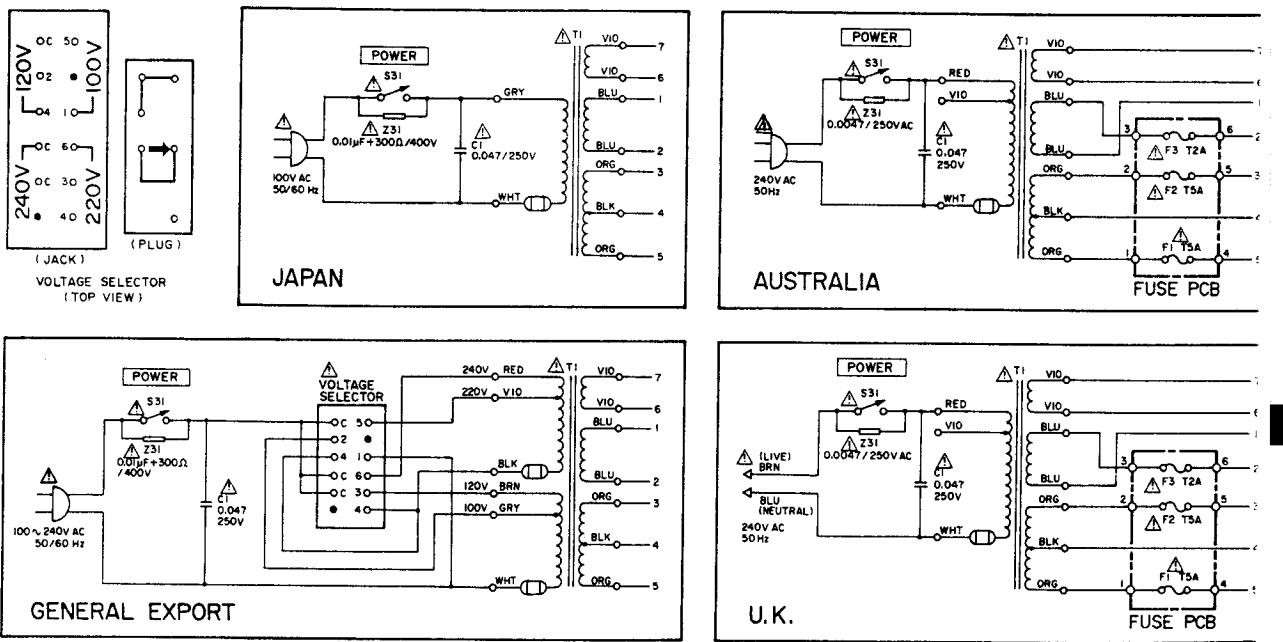


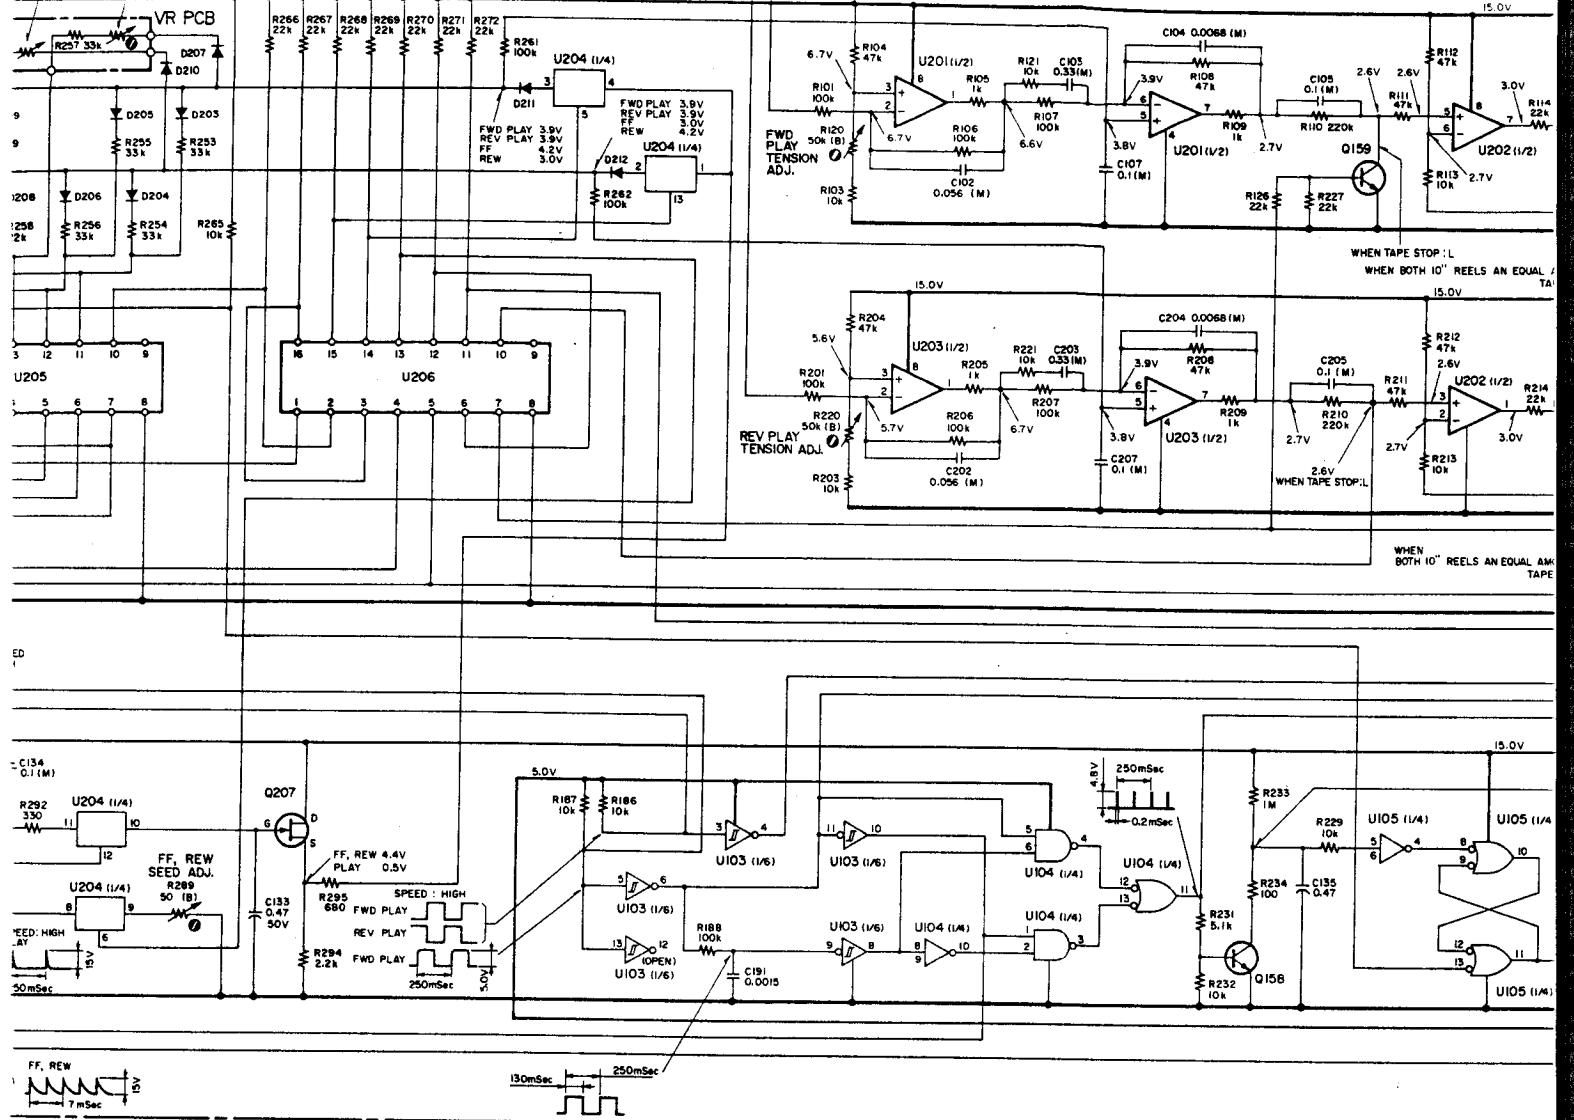

01 2SC1815 (GR)	D101 ~ D106	ERB12-02G1	D201 ~ D213	IS2473HJ
02 2SA1015 (GR)	D108	EQAO1-065	D214	ERB12-02G1
03 2SC1815 (GR)	D109, D110	ERB12-02G1	D215, D216	IS2473HJ
04 2SA1015 (GR)			D217	ERB12-02G1
05 2SC1815 (GR)			D218, D219	WZ90
06 2SA1015 (GR)			D220	ERB12-02G1
07 2SK68 (A)			D221 ~ D224	IS2473HJ

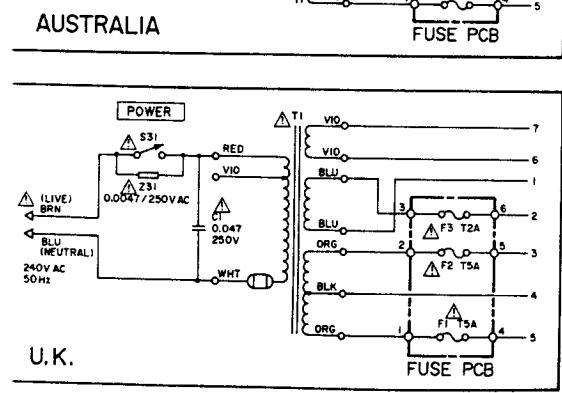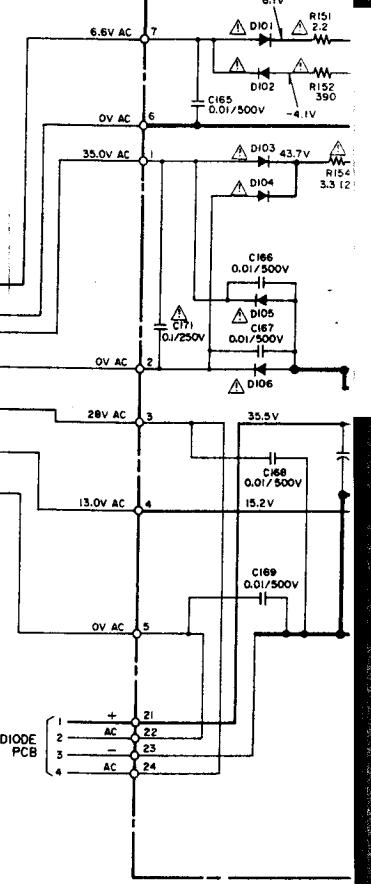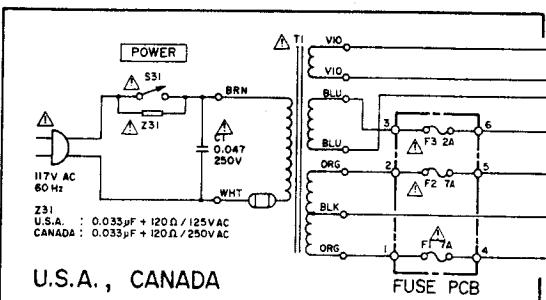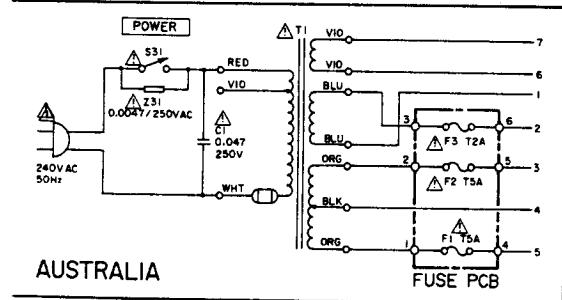

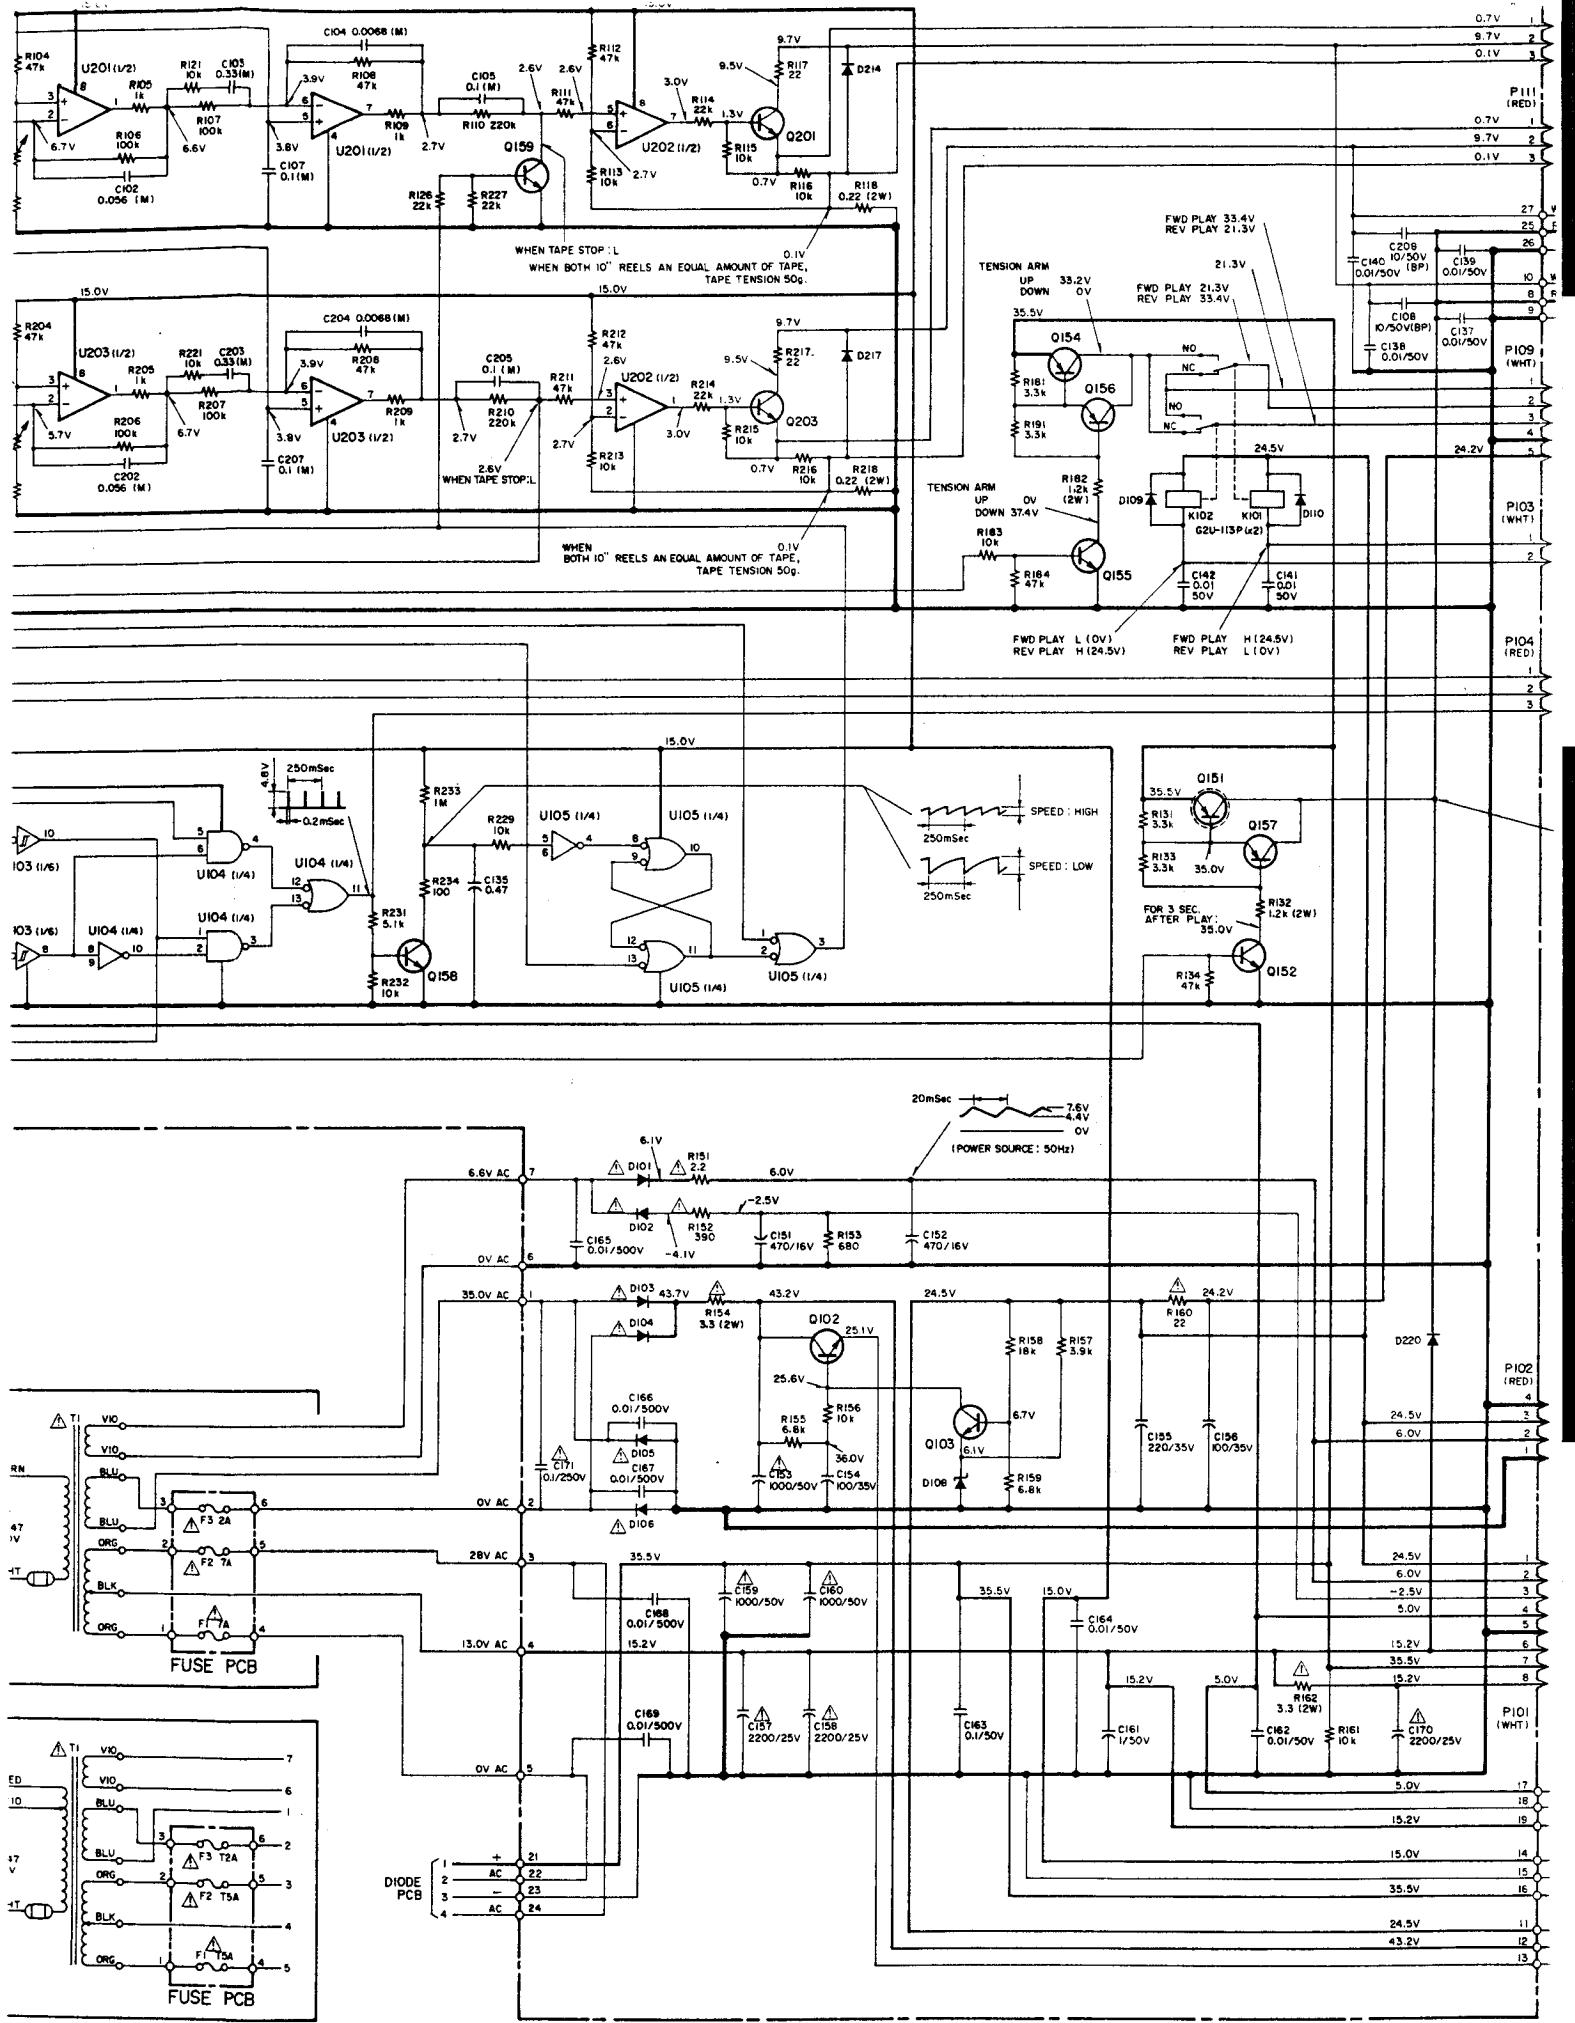

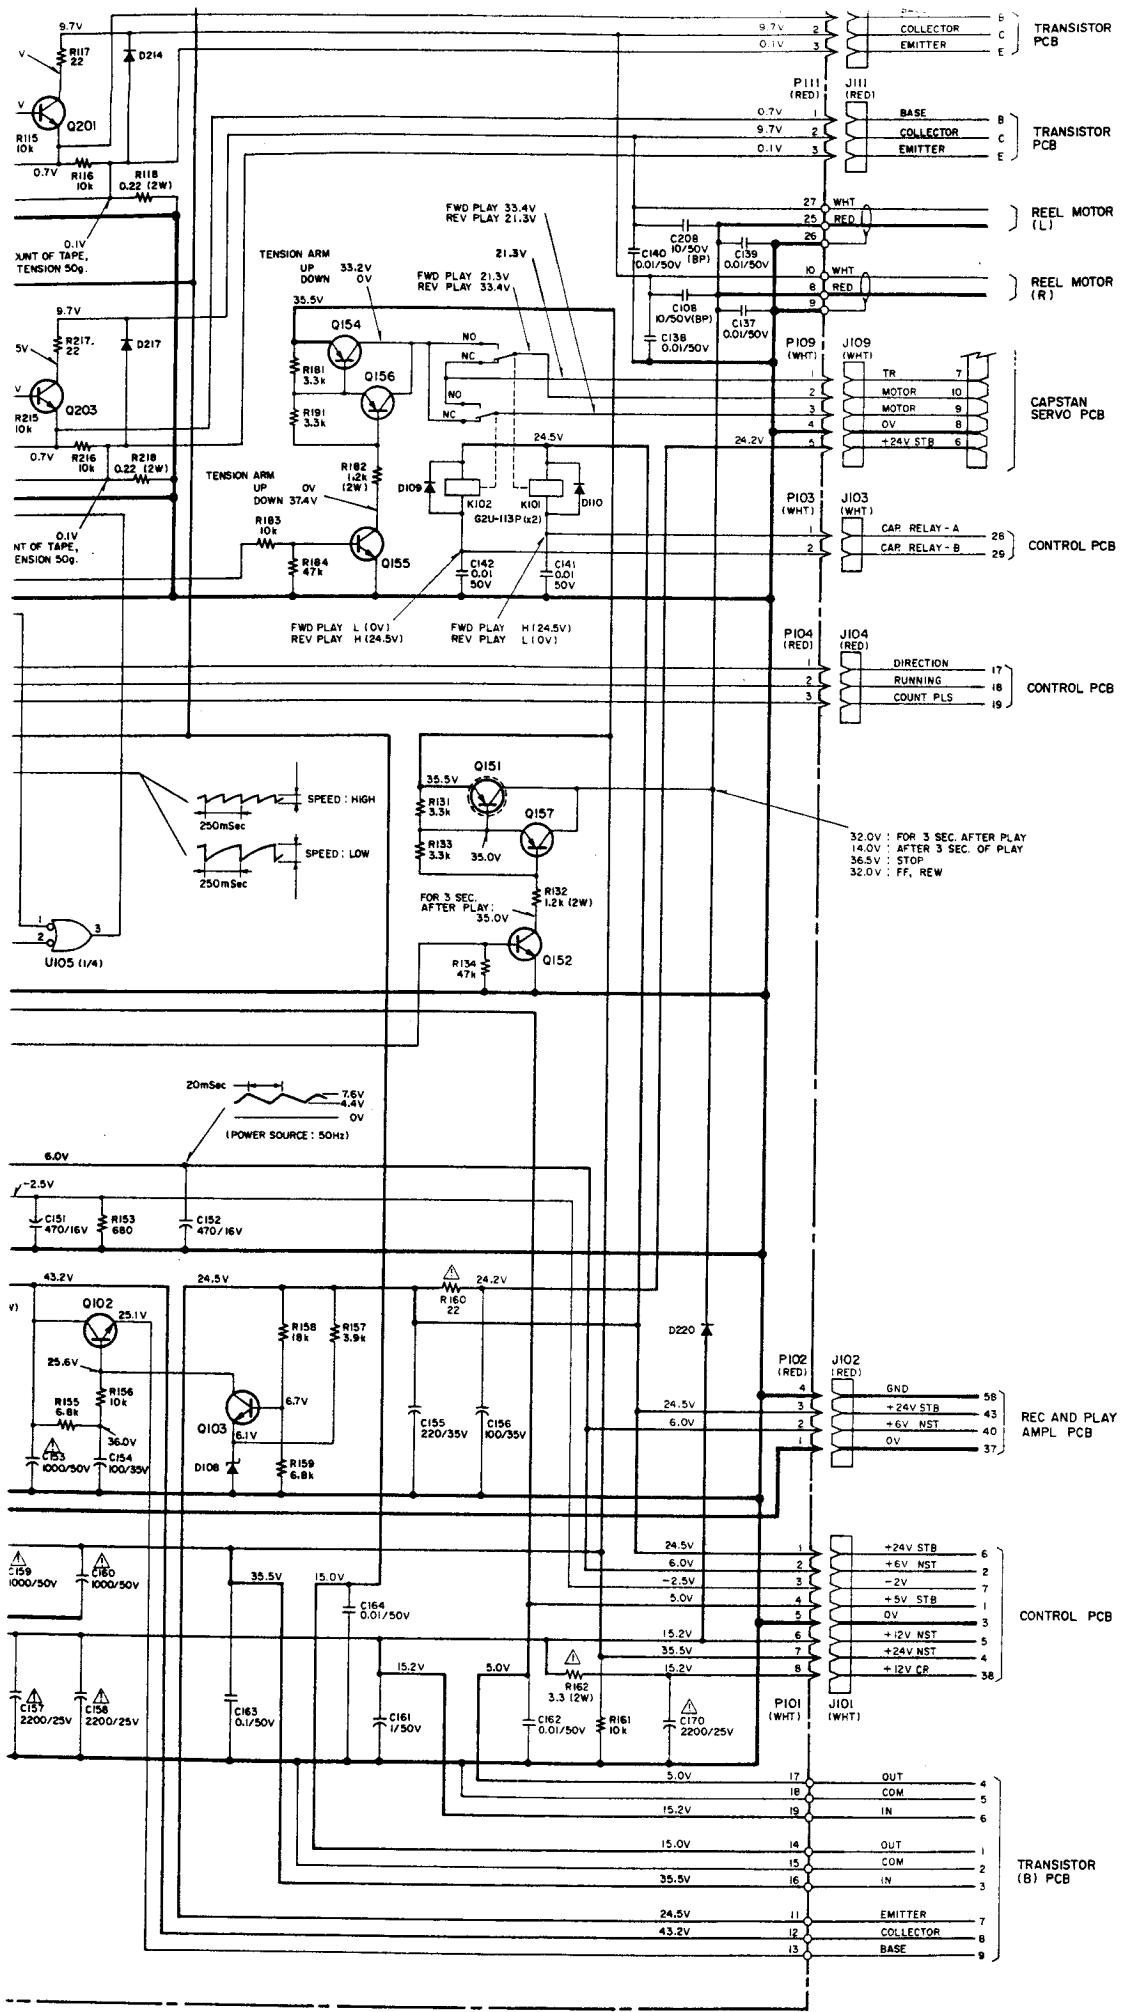

10


11


12


13

14


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

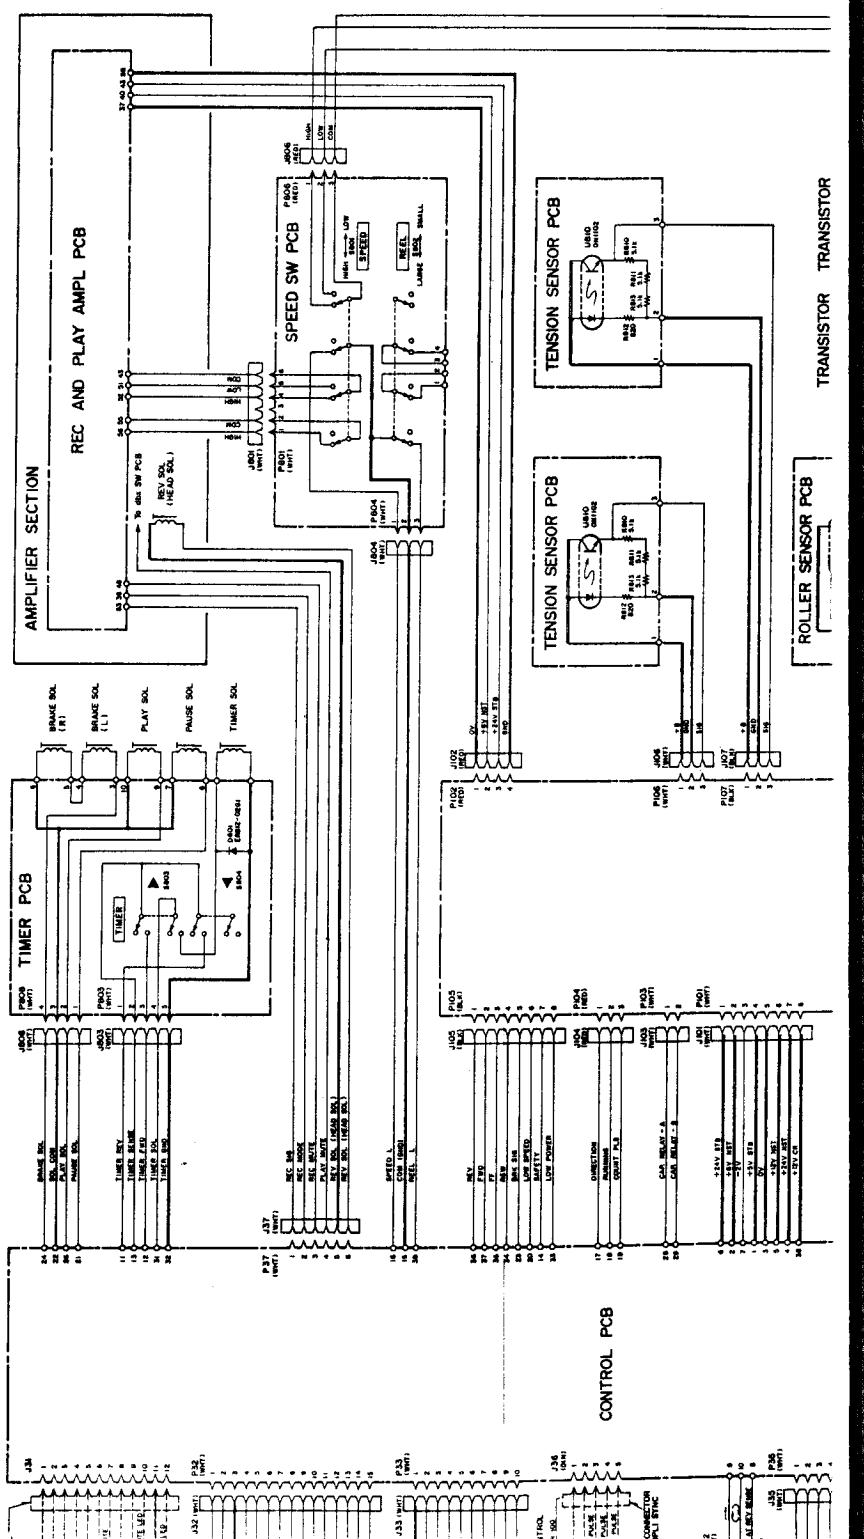

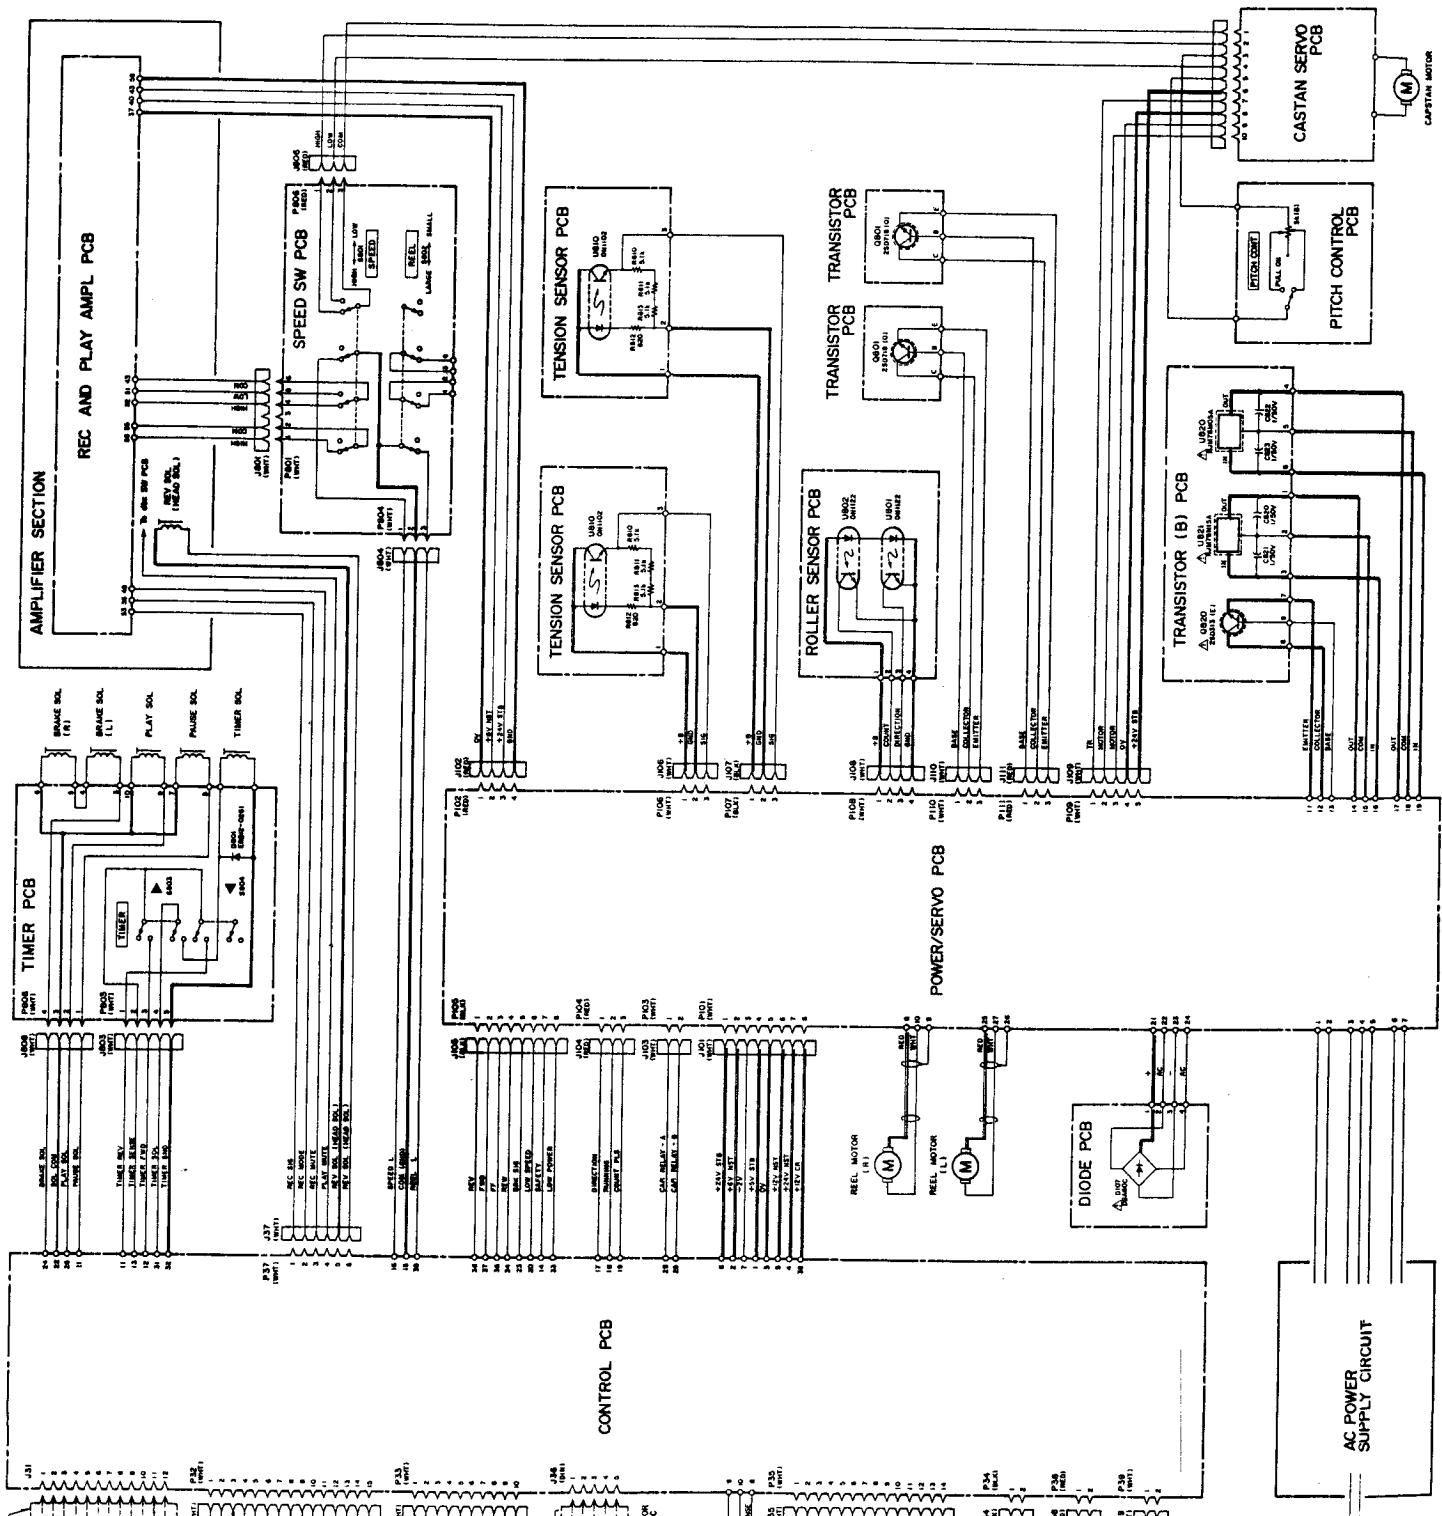

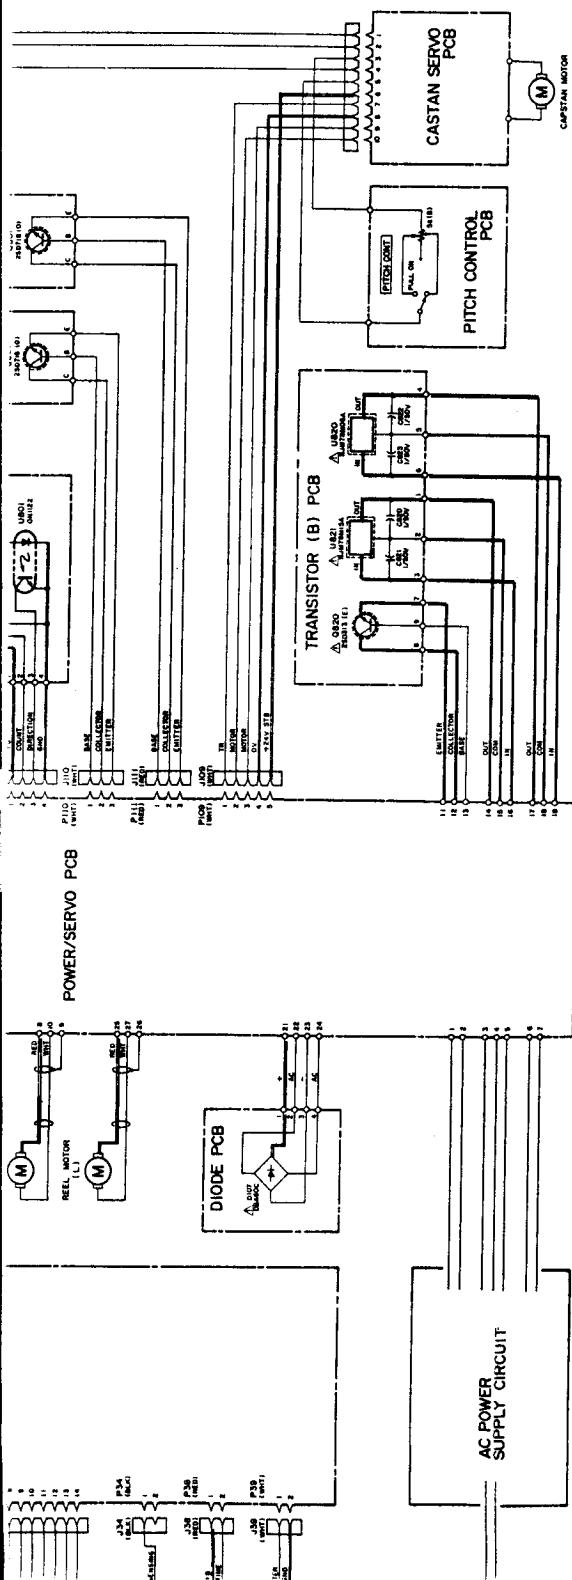


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

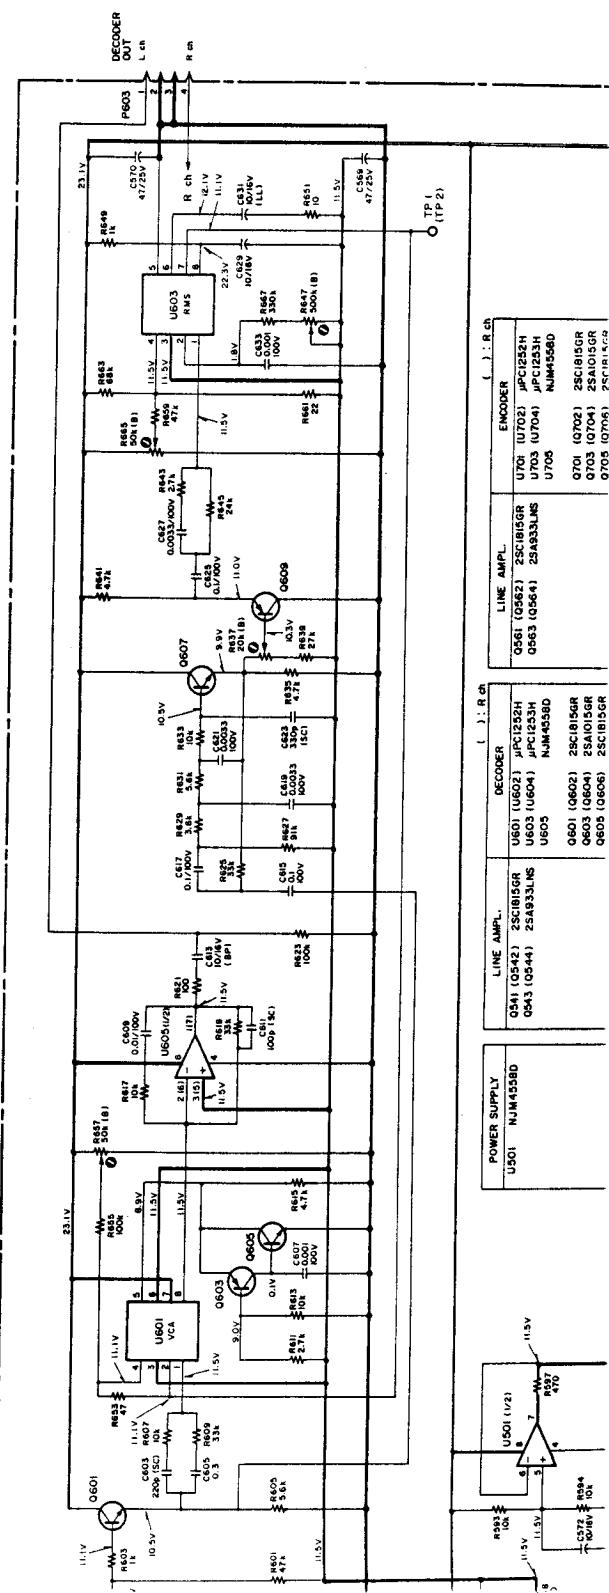


Stereo Tape Deck


X-1000R


- NOTES**
1. Servo-Amp voltage values are reference values measured in PLAY mode at 19 cm/sec ($7\frac{1}{2}$ ips) and are subject to variation according to setting of sensor output.
 2. Voltage values, depending on circuit section, may not always conform to indicated values during F.F./REW modes.
 3. All resistors are $\frac{1}{2}$ watt, $\pm 5\%$, unless marked otherwise.
 4. All capacitor values are in microfarads (μF = picofarads).
 5. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components-refer to the TEAC parts list and ensure exact replacement.
 6. : front panel indication
 7. : rear panel indication
 8. +B power supply circuit.

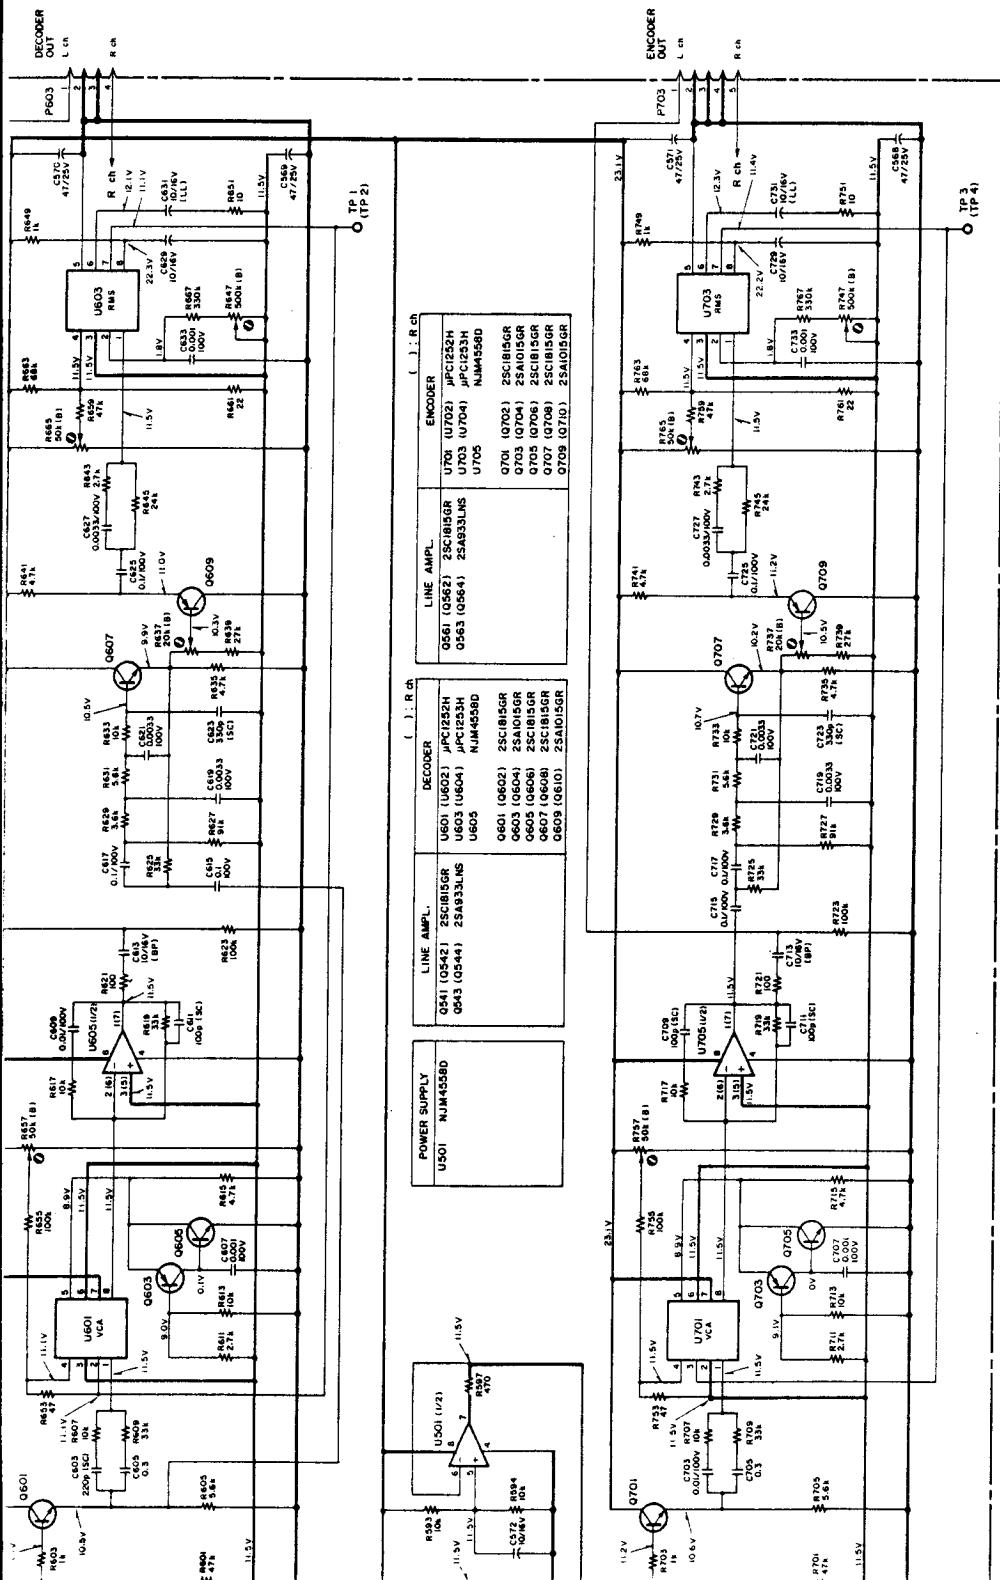


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

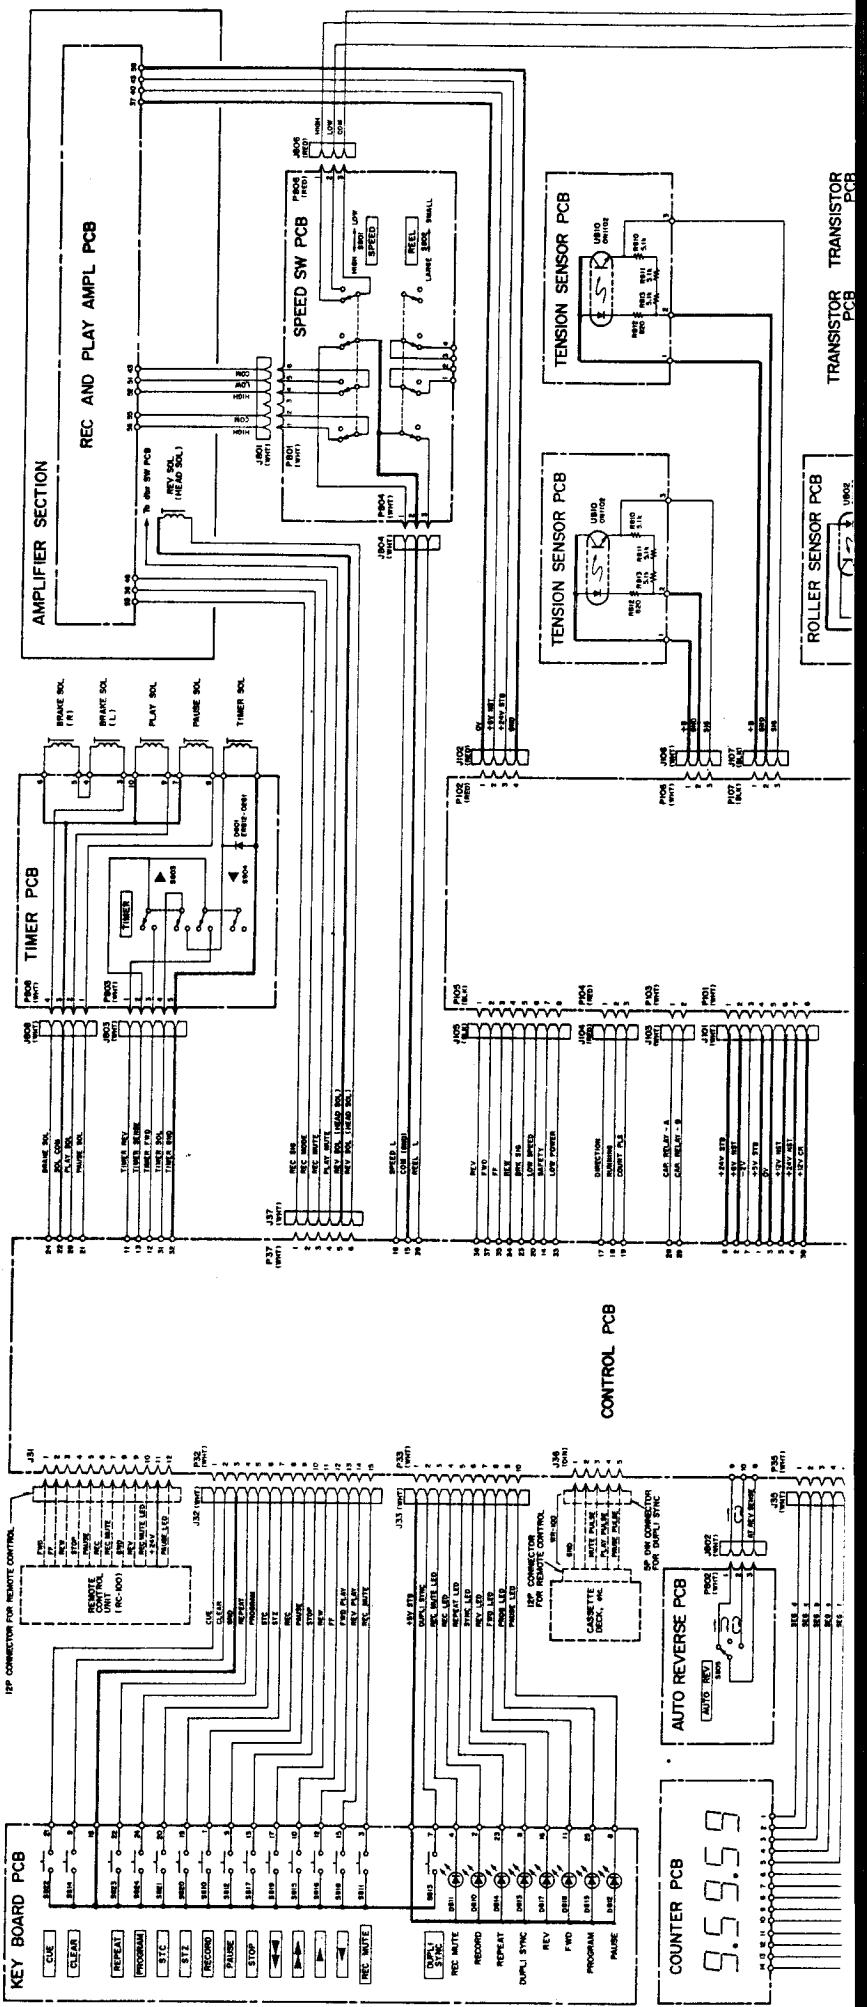


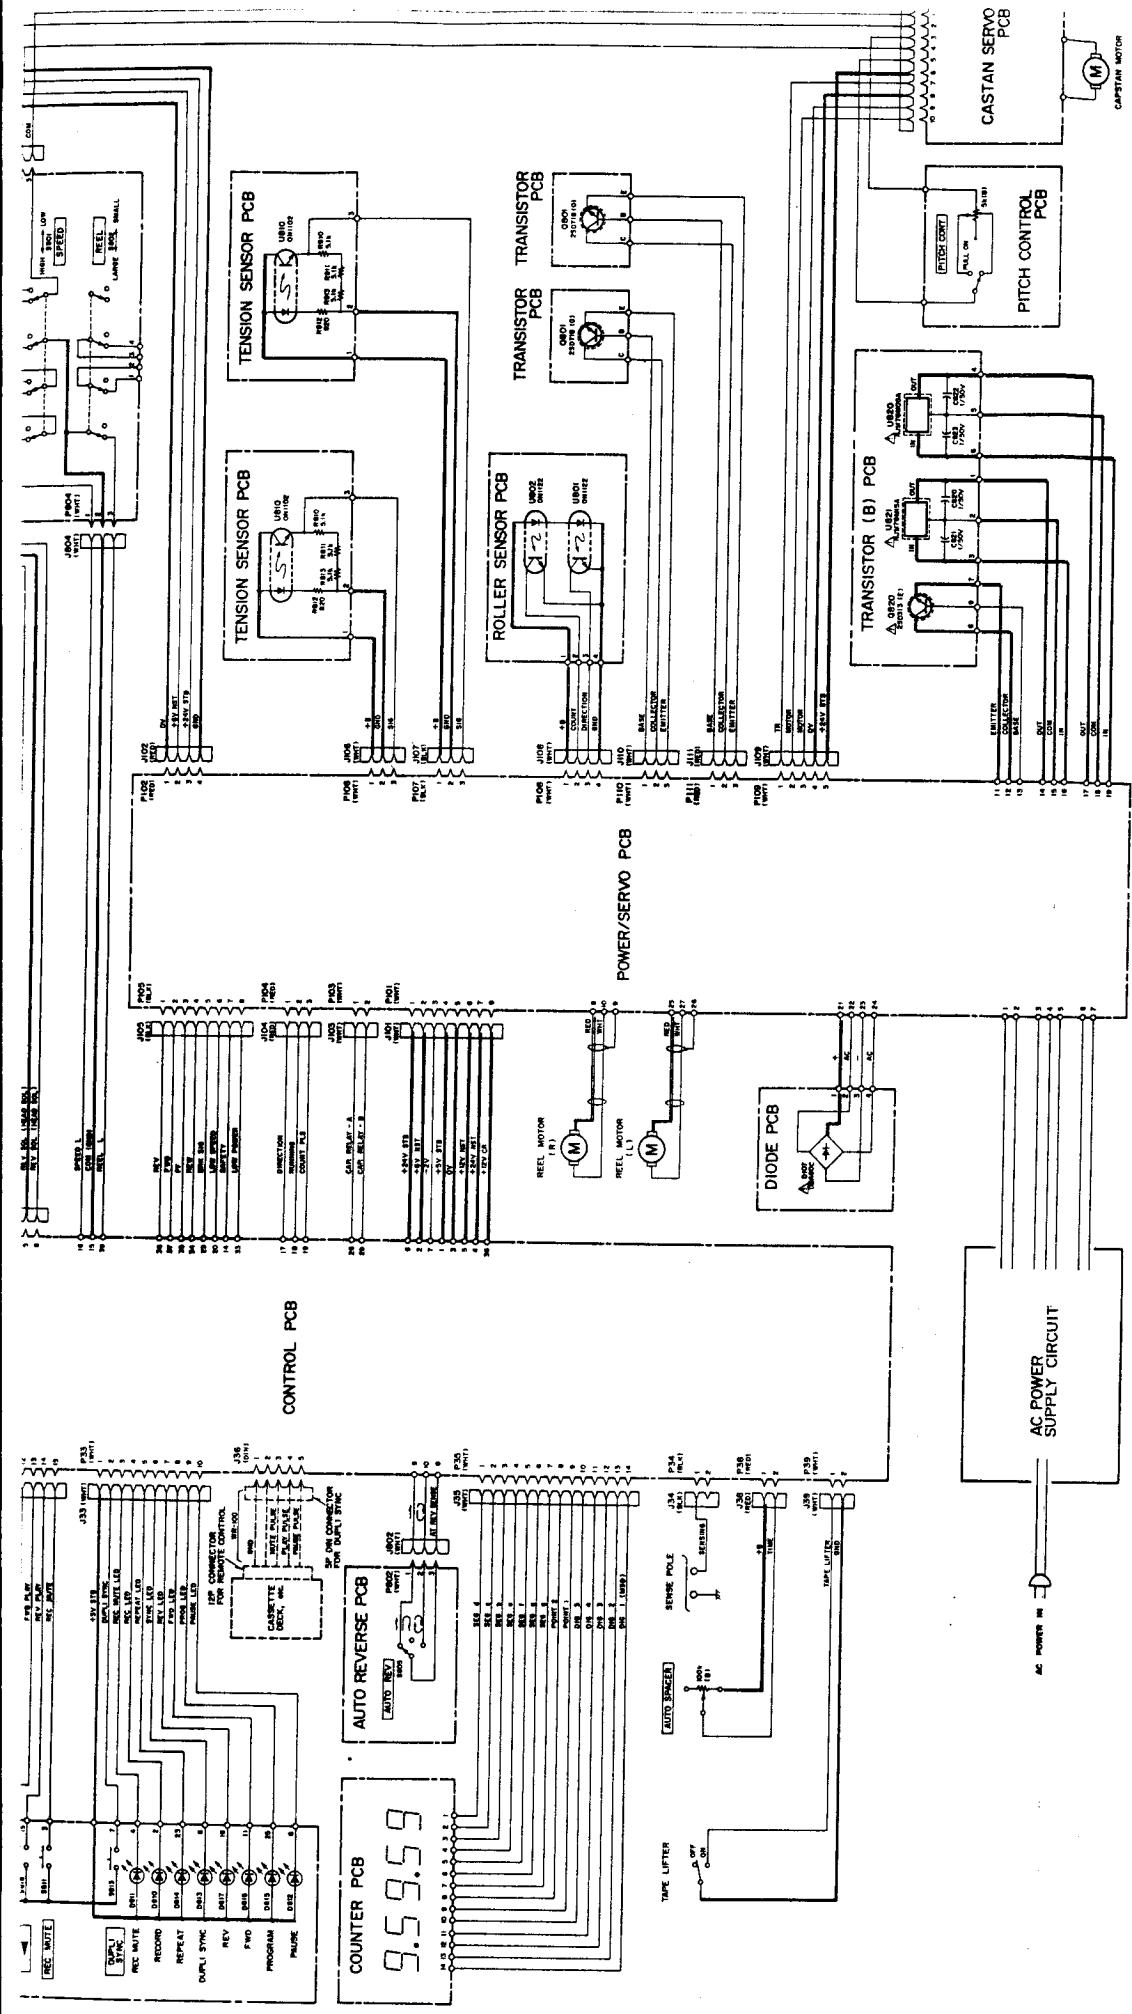

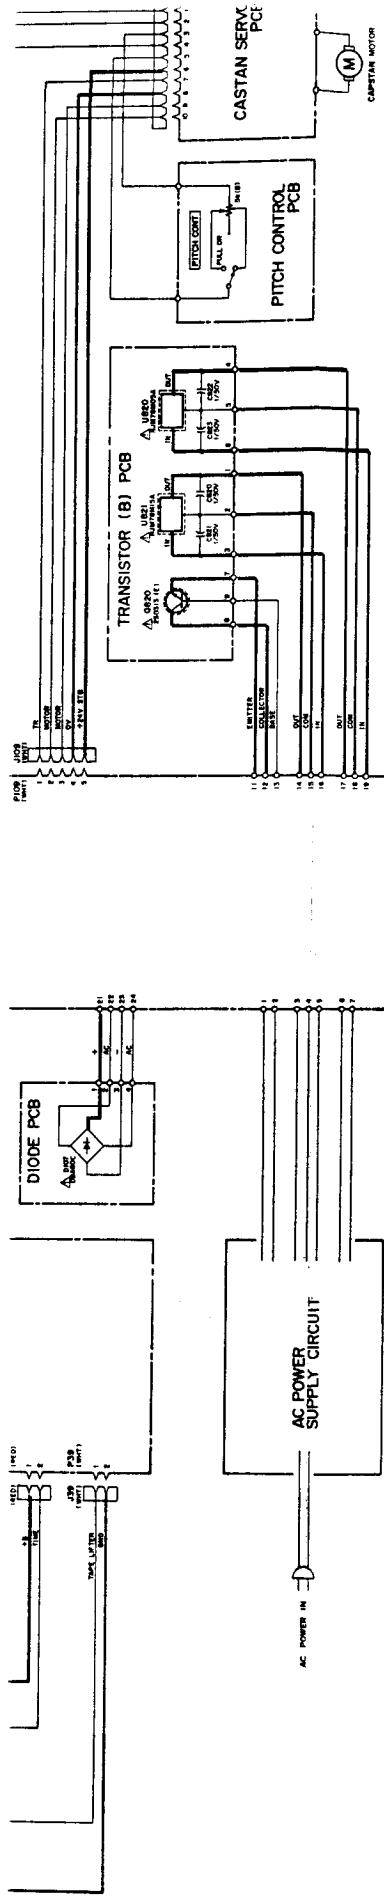


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351894 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

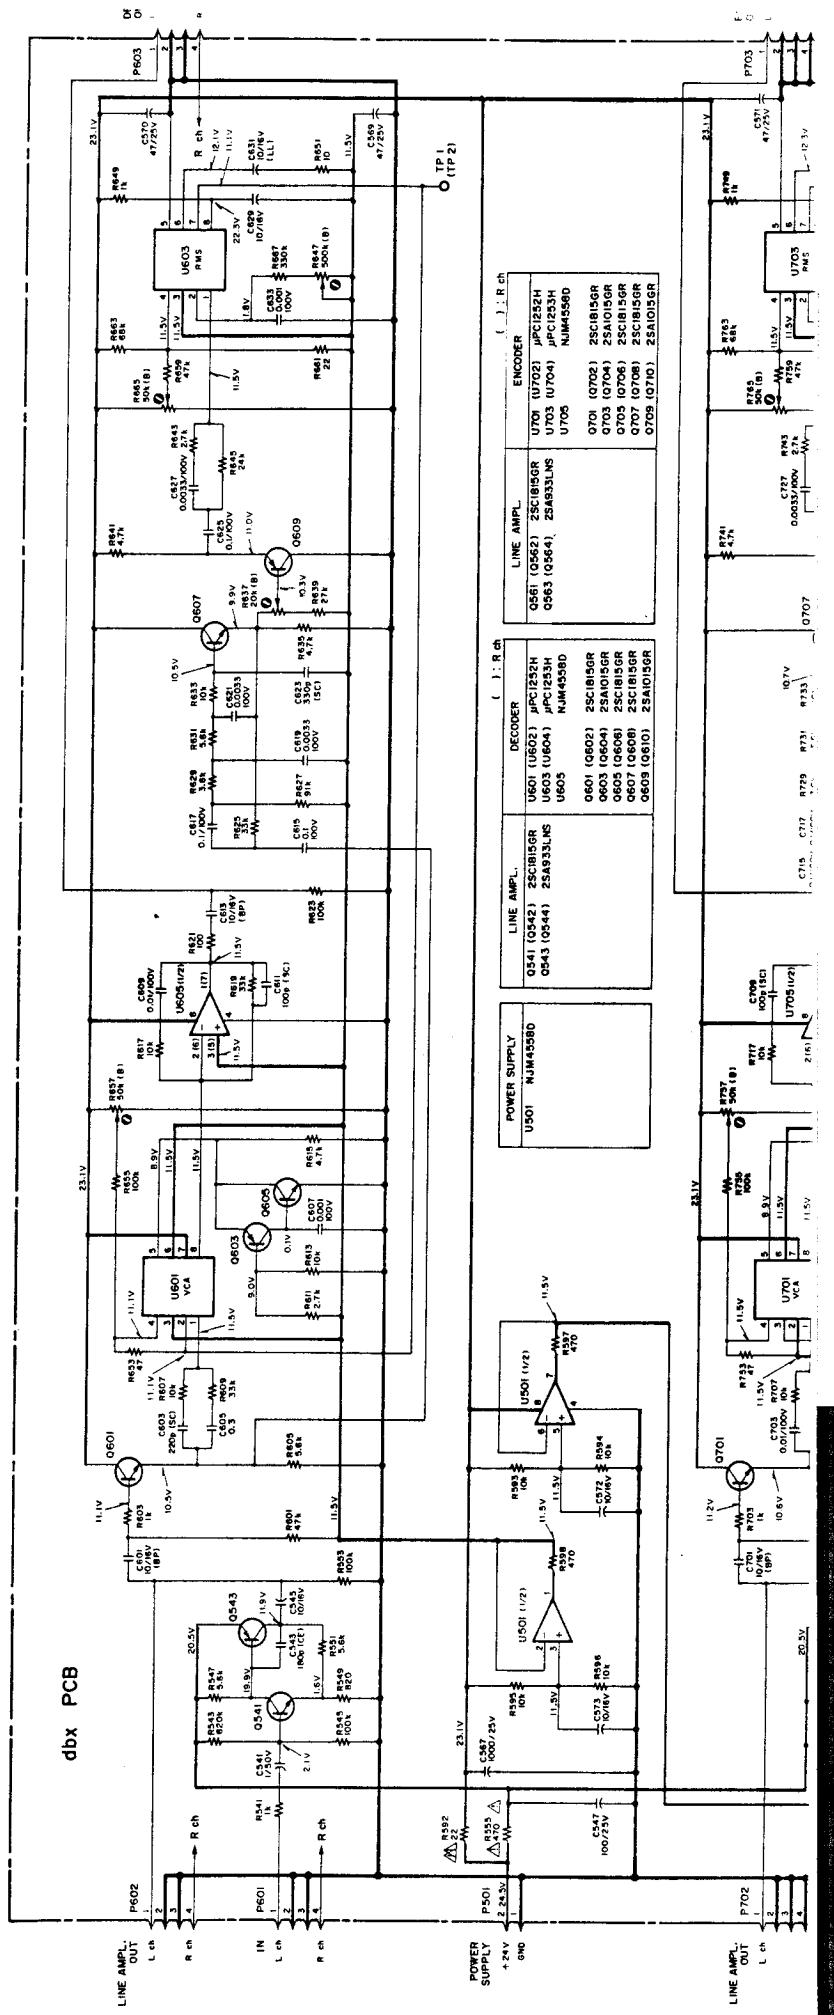


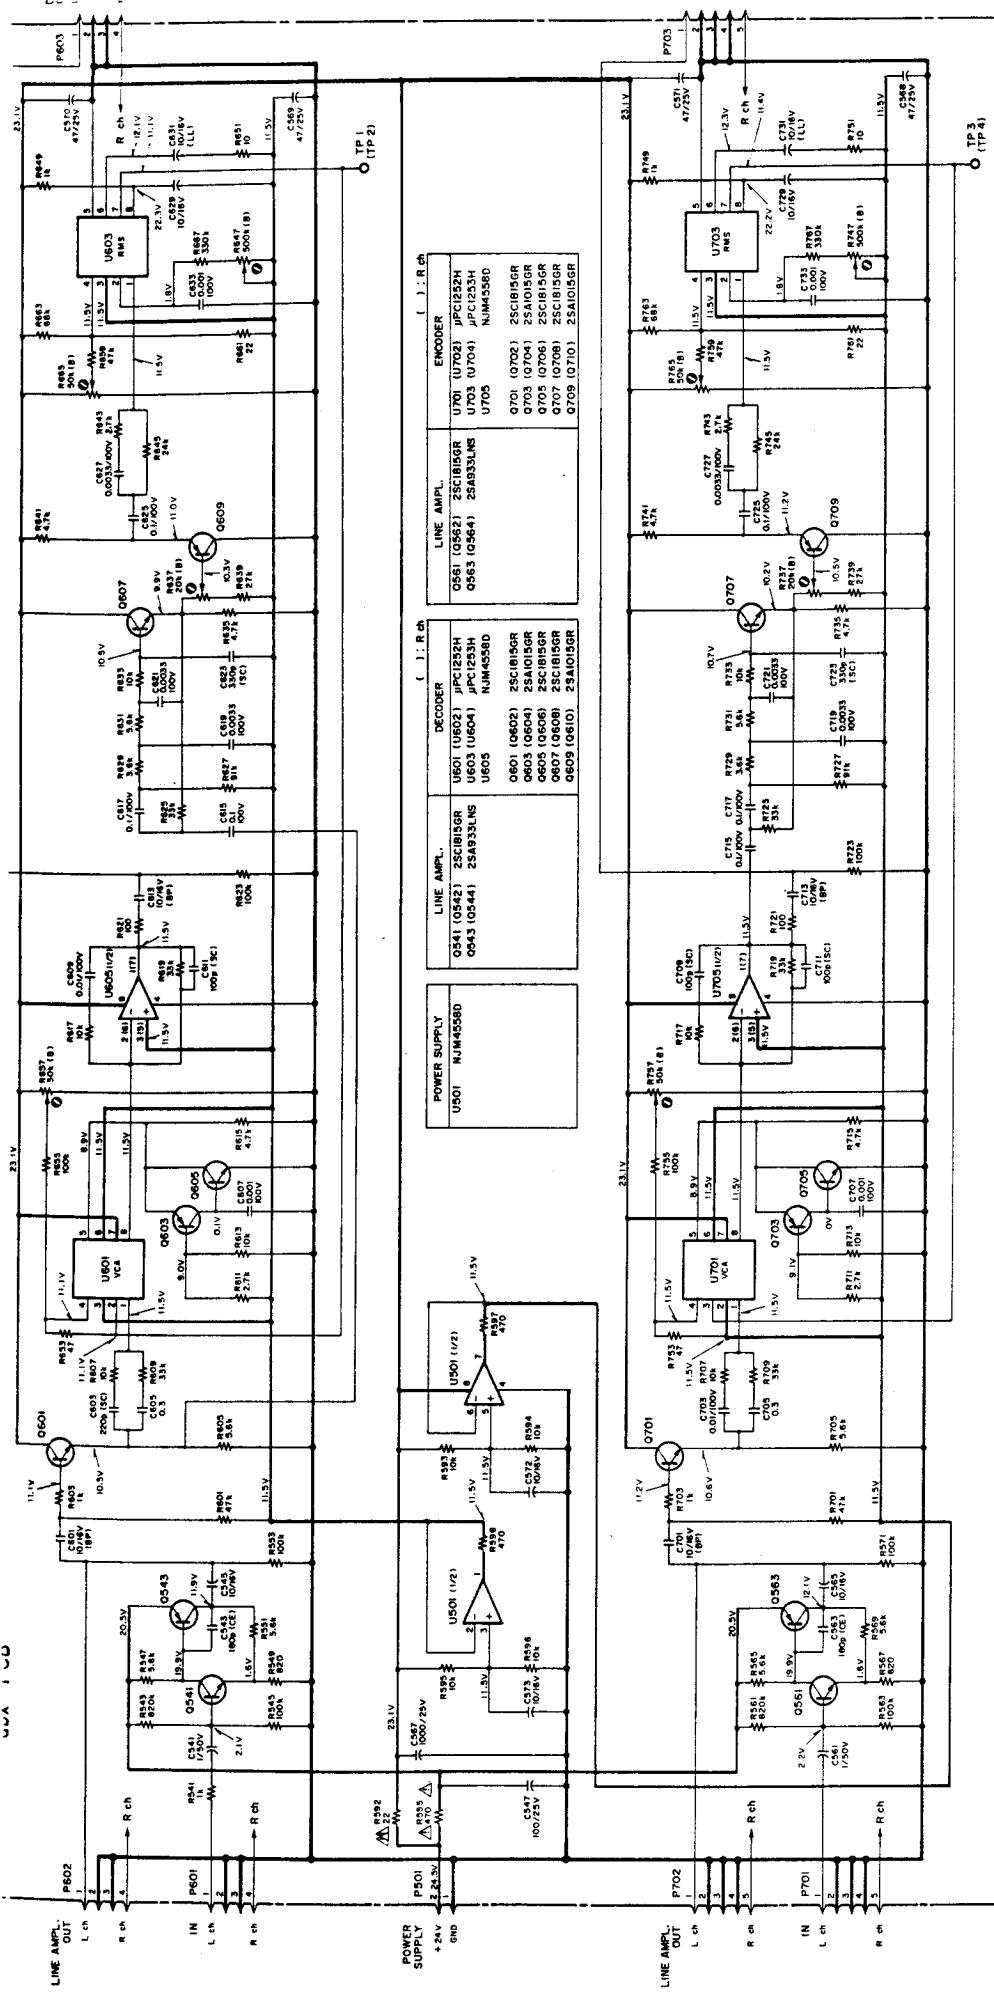


NOTES


1. Servo-Amp voltage values are reference values measured in PLAY mode at 19 cm/sec (7½ ips) and are subject to variation according to setting of sensor output.
 2. Voltage values, depending on circuit section, may not always conform to indicated values during F.F./REW modes.
 3. All resistors are ½ watt, ±5%, unless marked otherwise.
 4. Resistor values are in ohms ($k = 1,000$ ohms).
 5. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components-refer to the TEAC parts list and ensure exact replacement.
6. : front panel indication
 7. : rear panel indication
 8. +B power supply circuit.

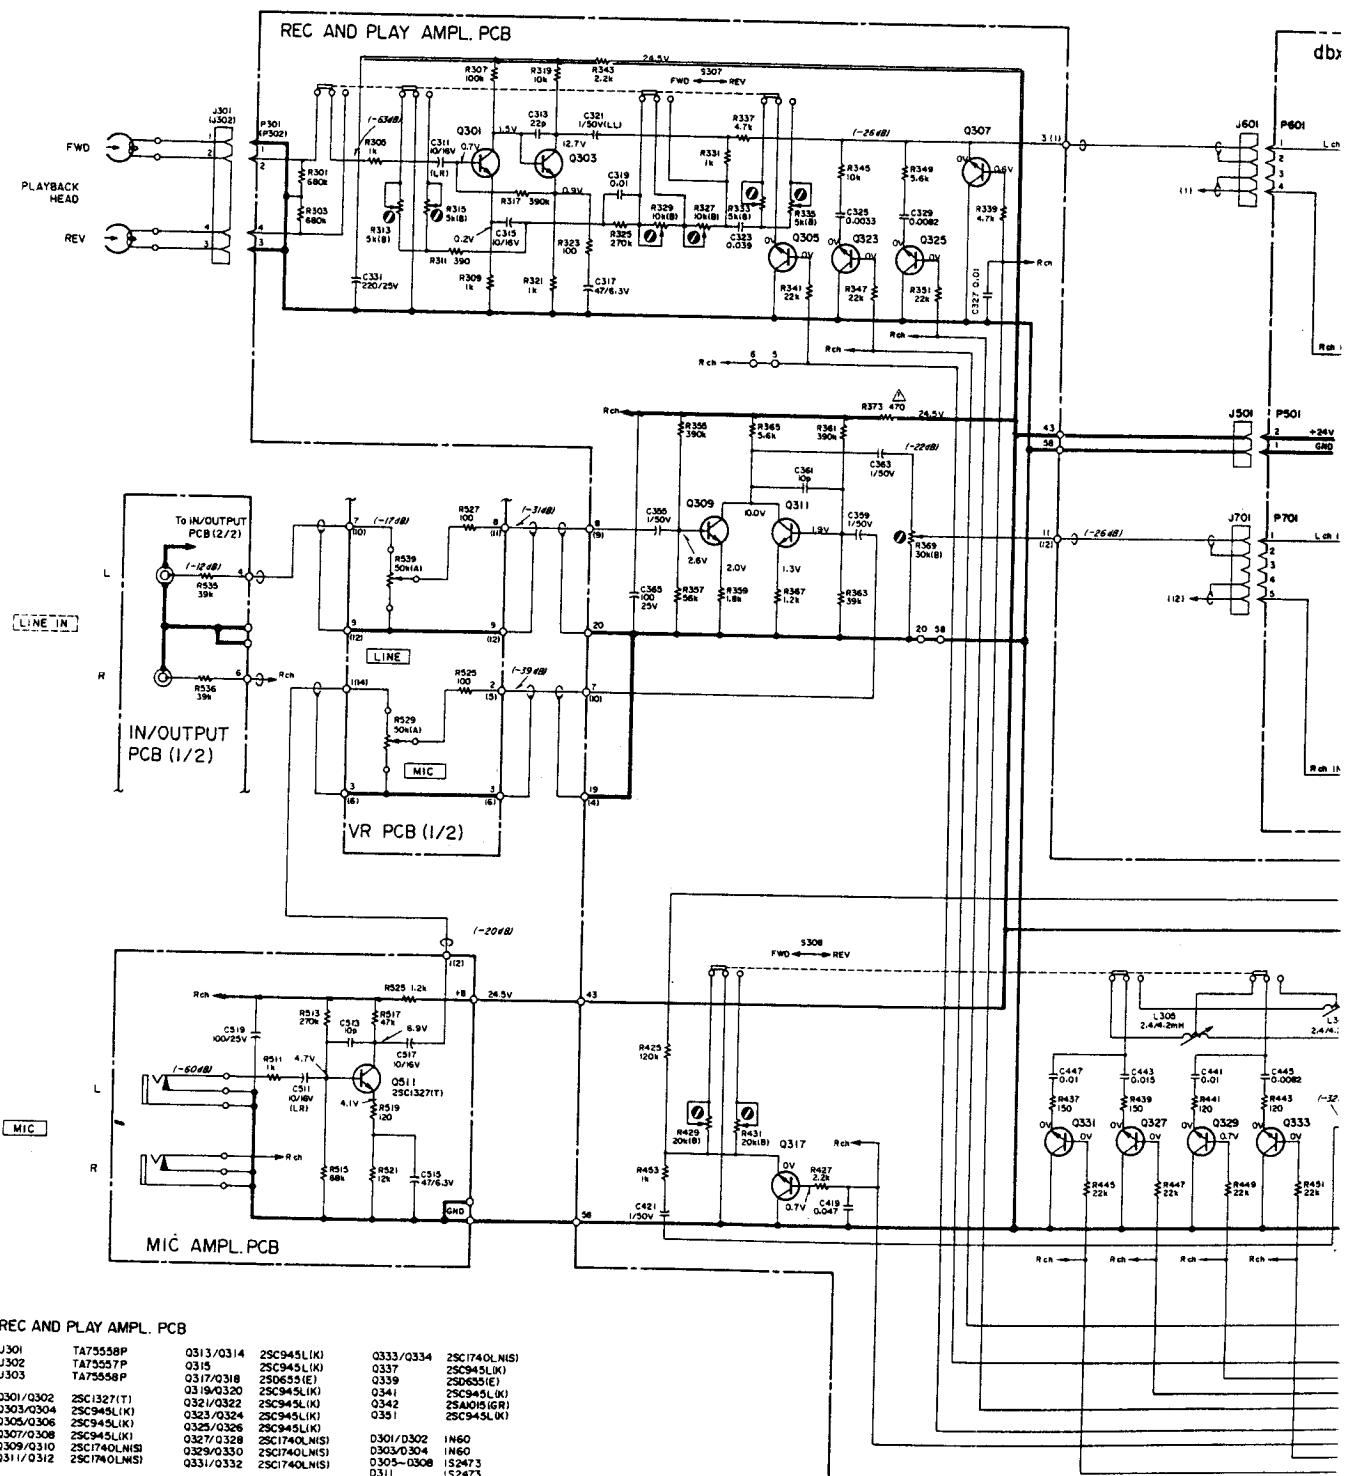


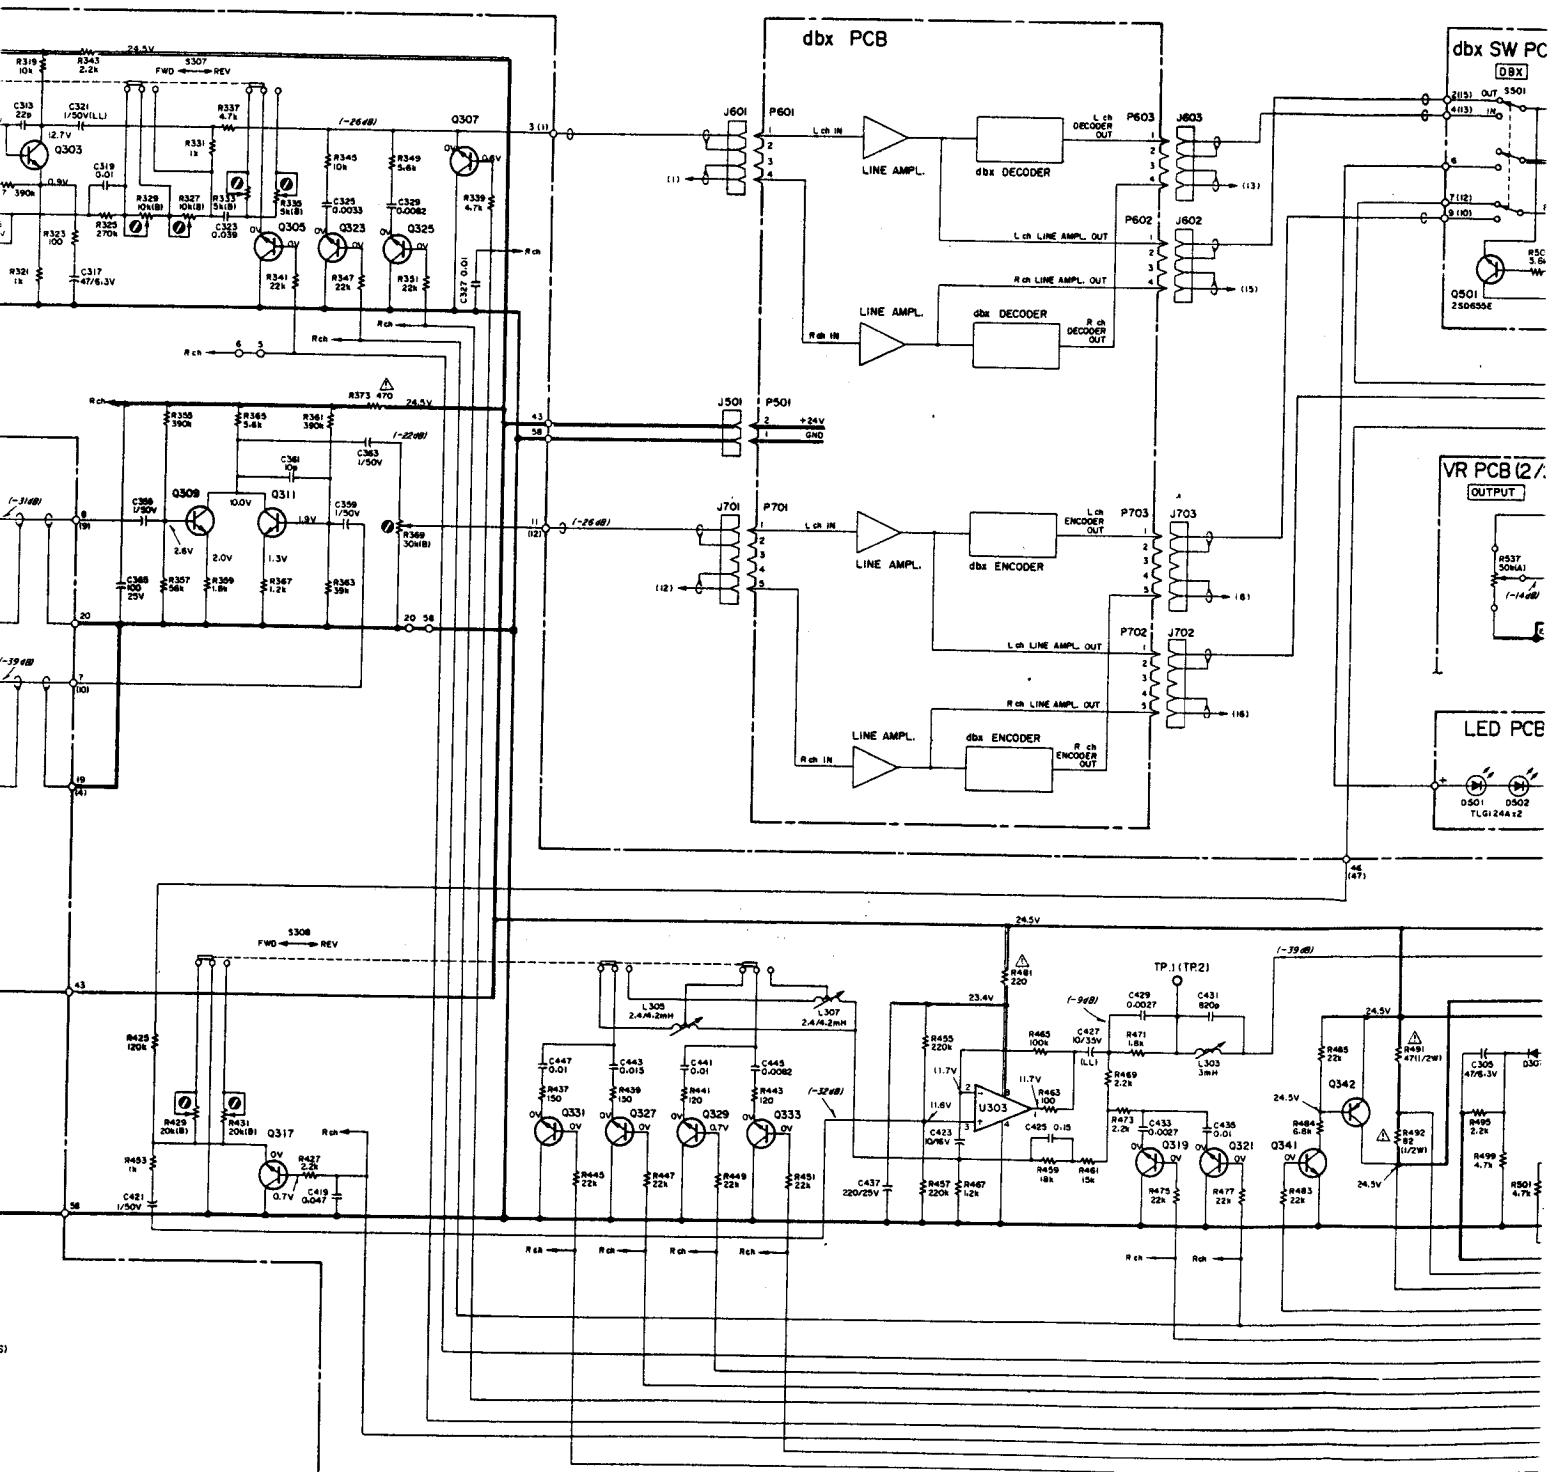


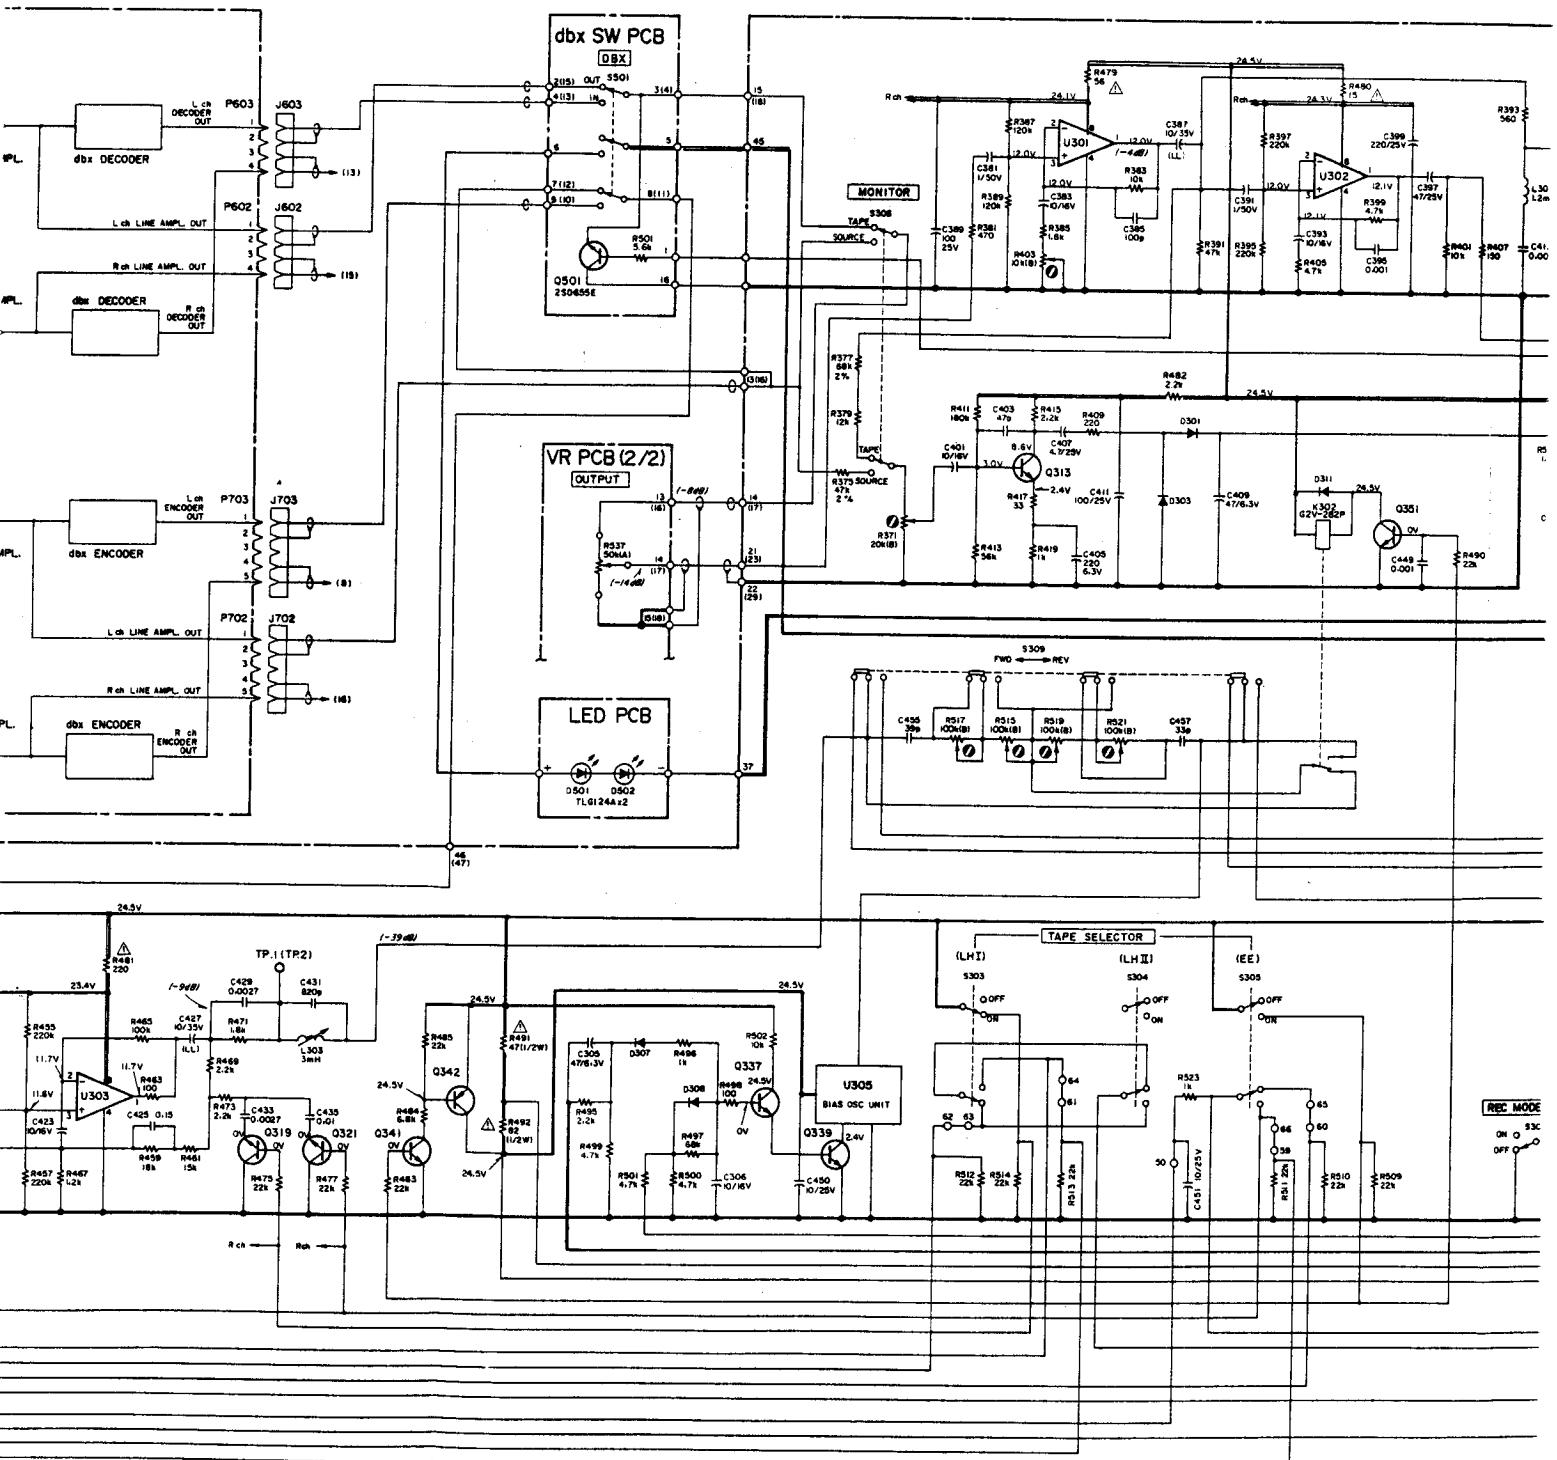

TEAC SCHEMATIC DIAGRAM X-1000R

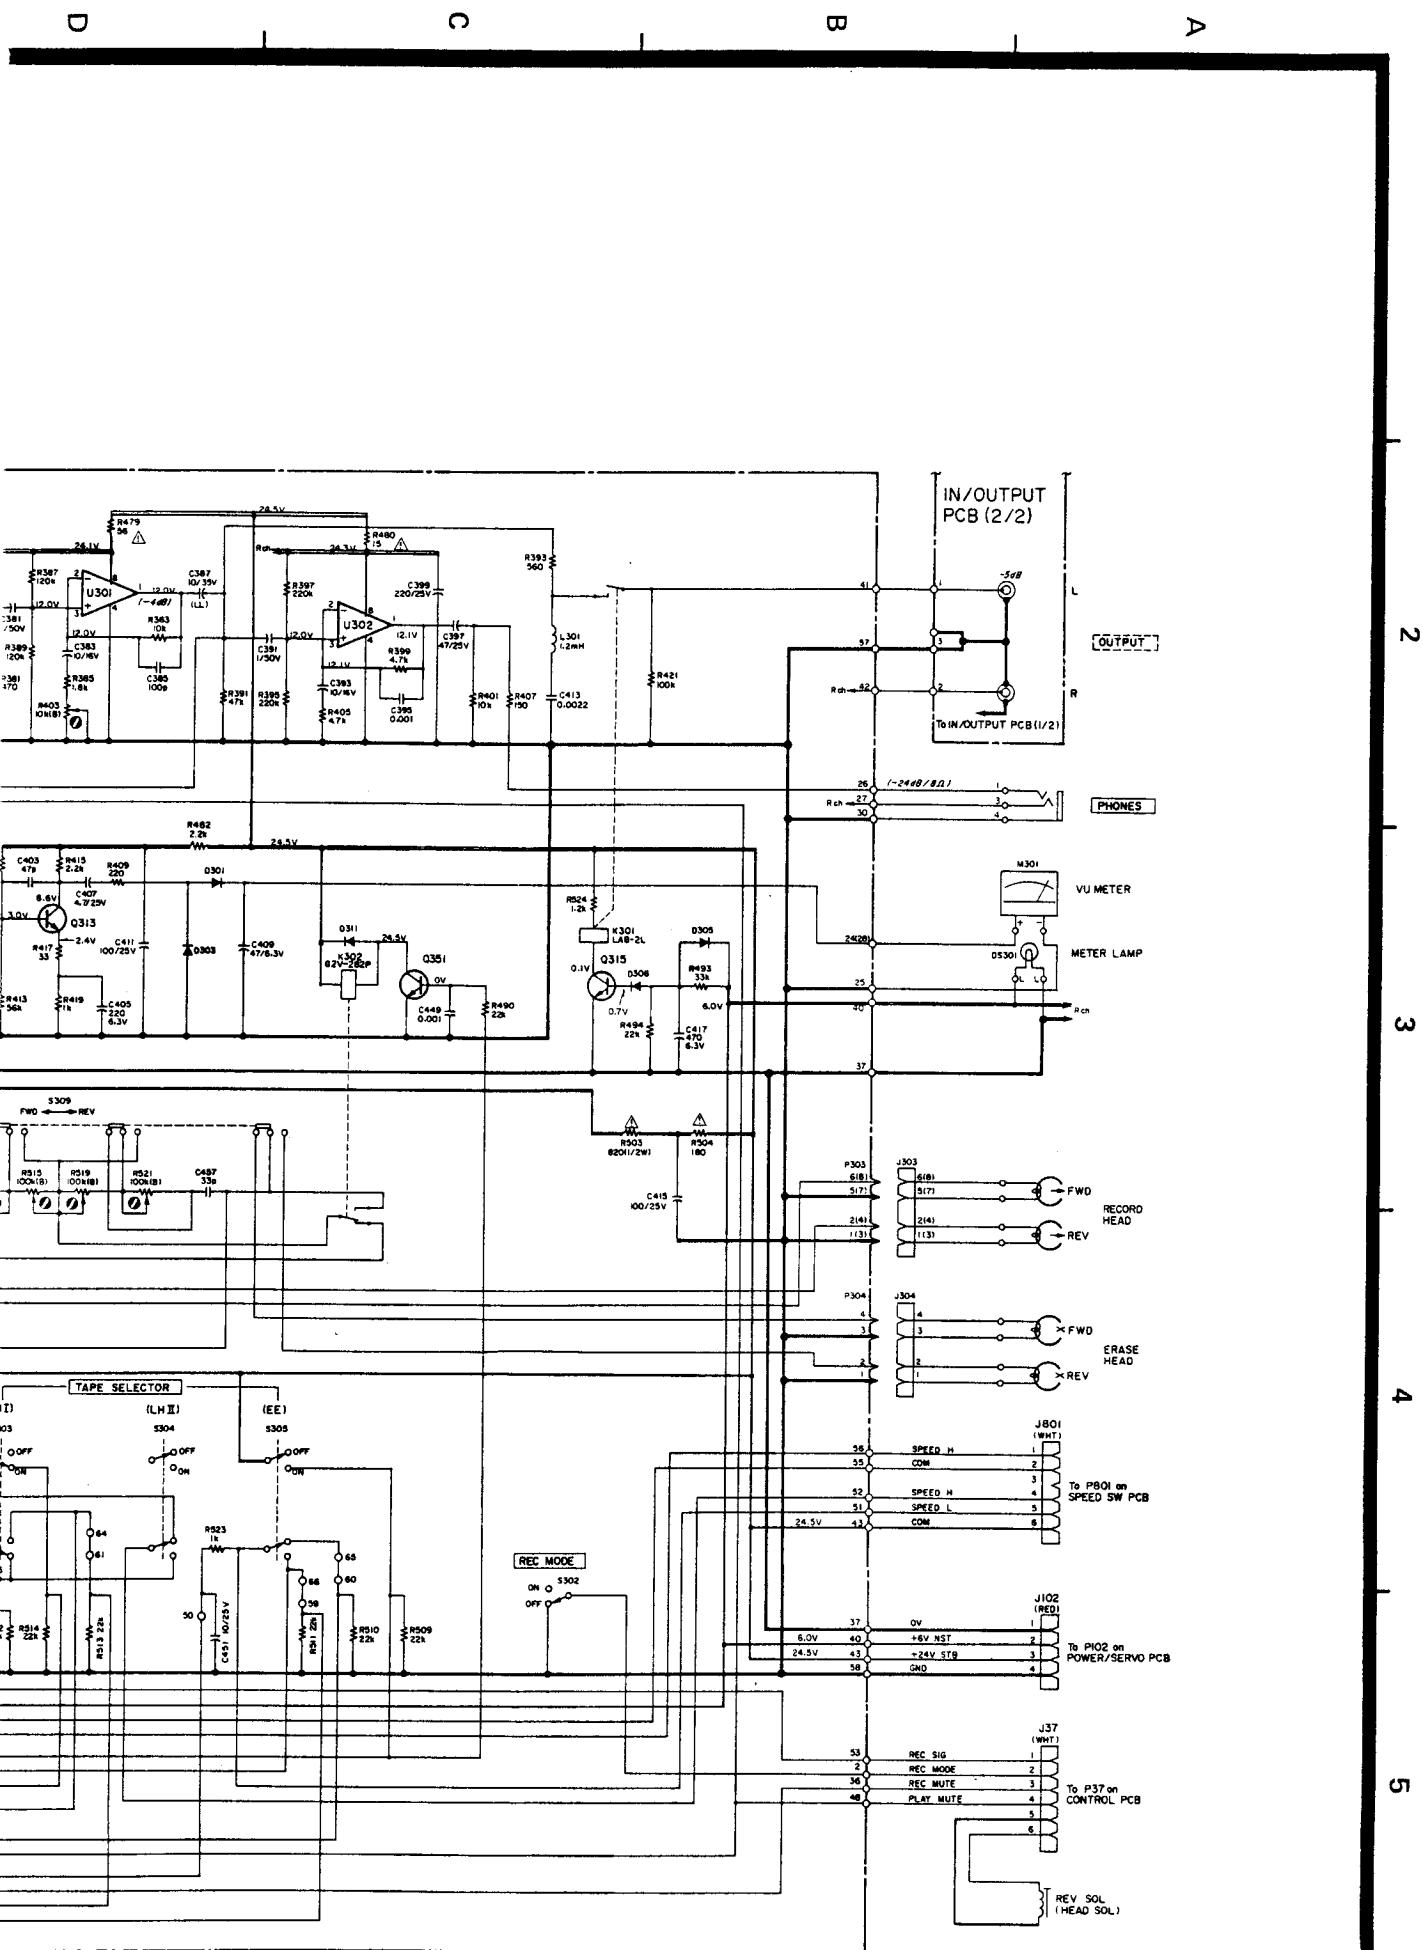

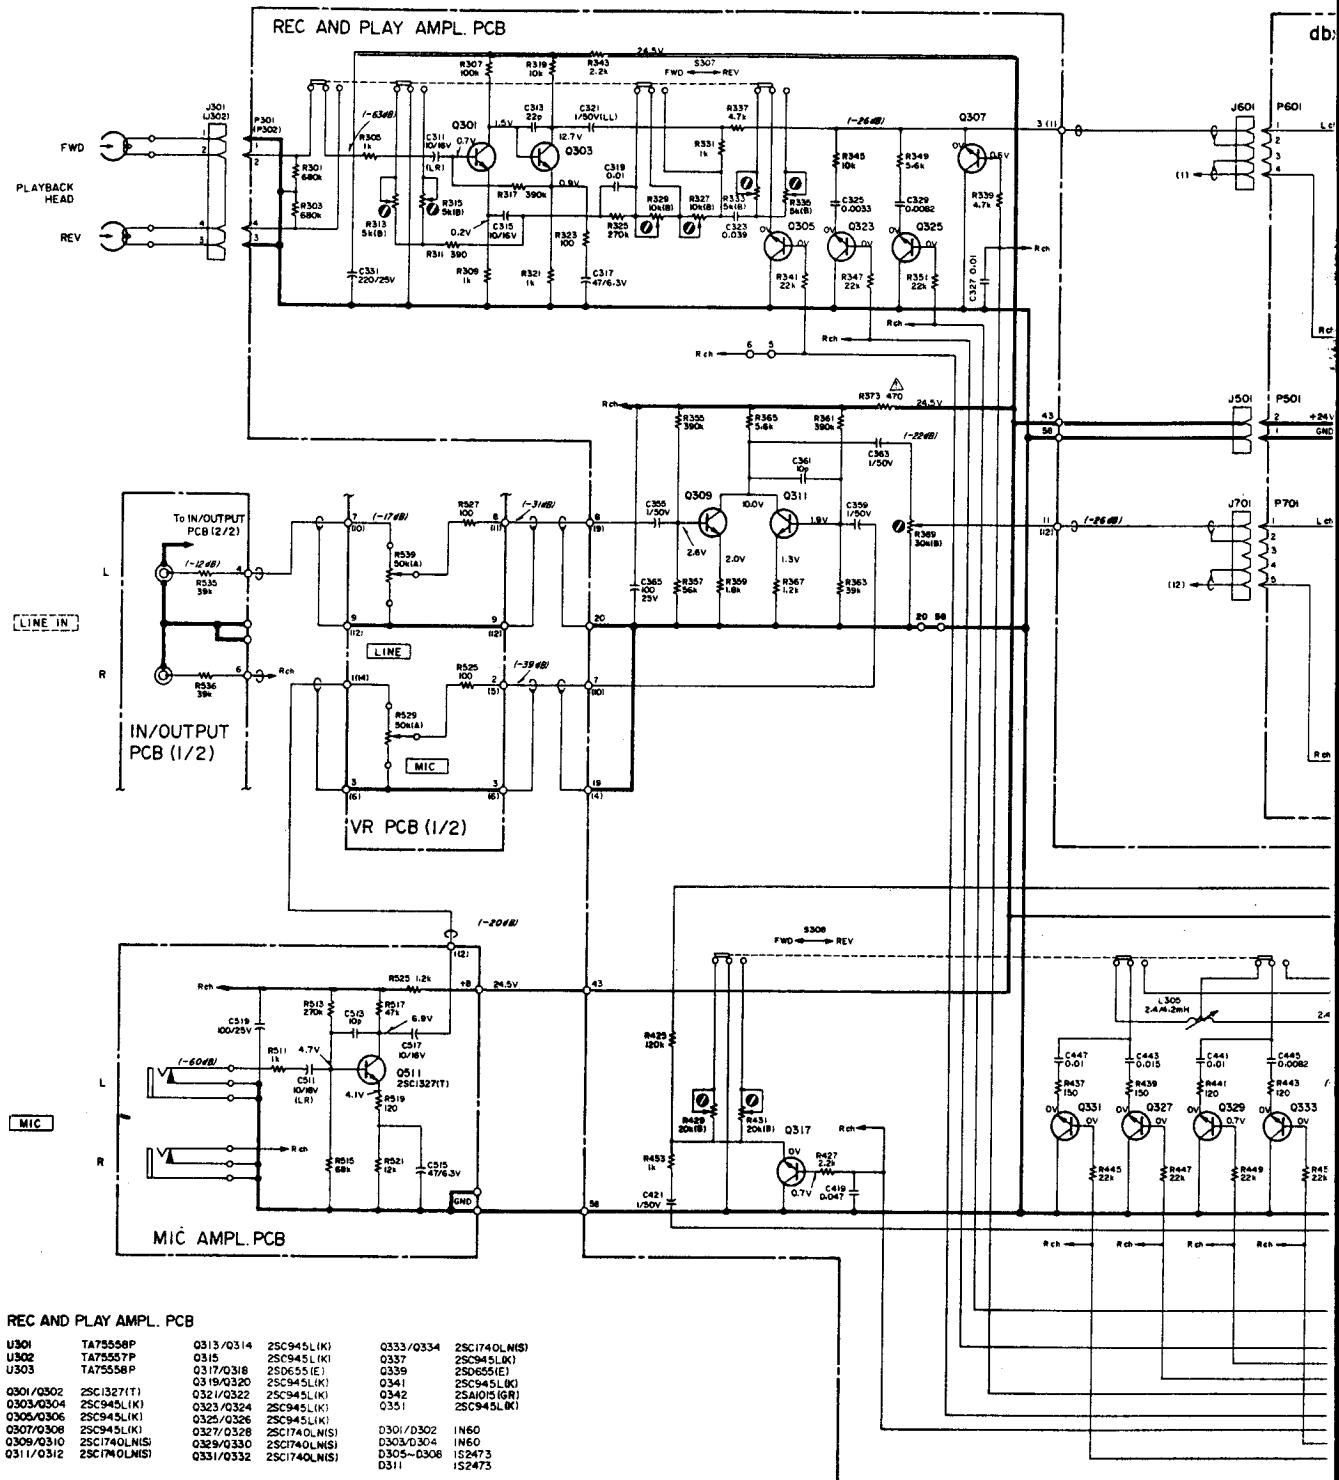


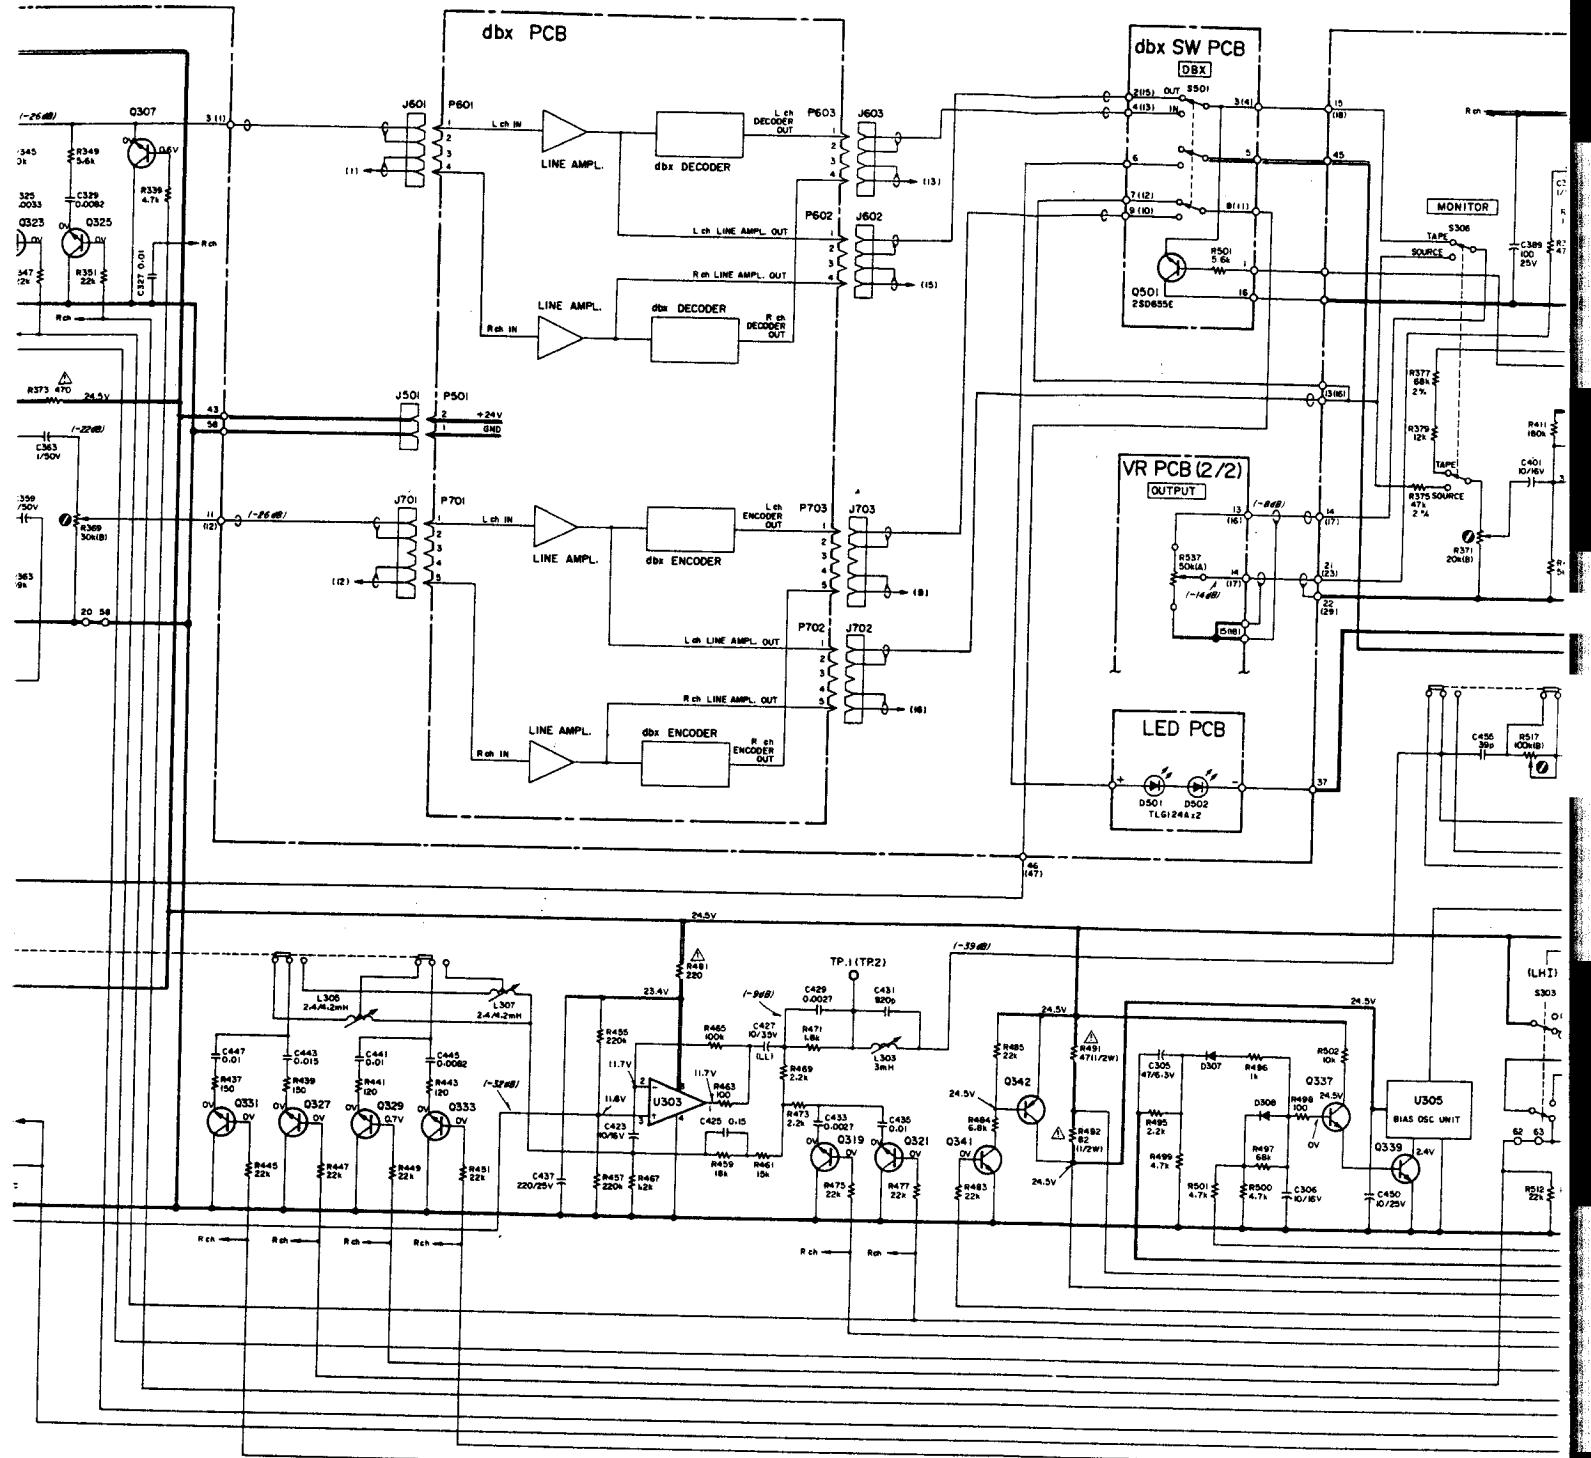

IN/OU
PCB (2)

dbx SW PCB

DBX

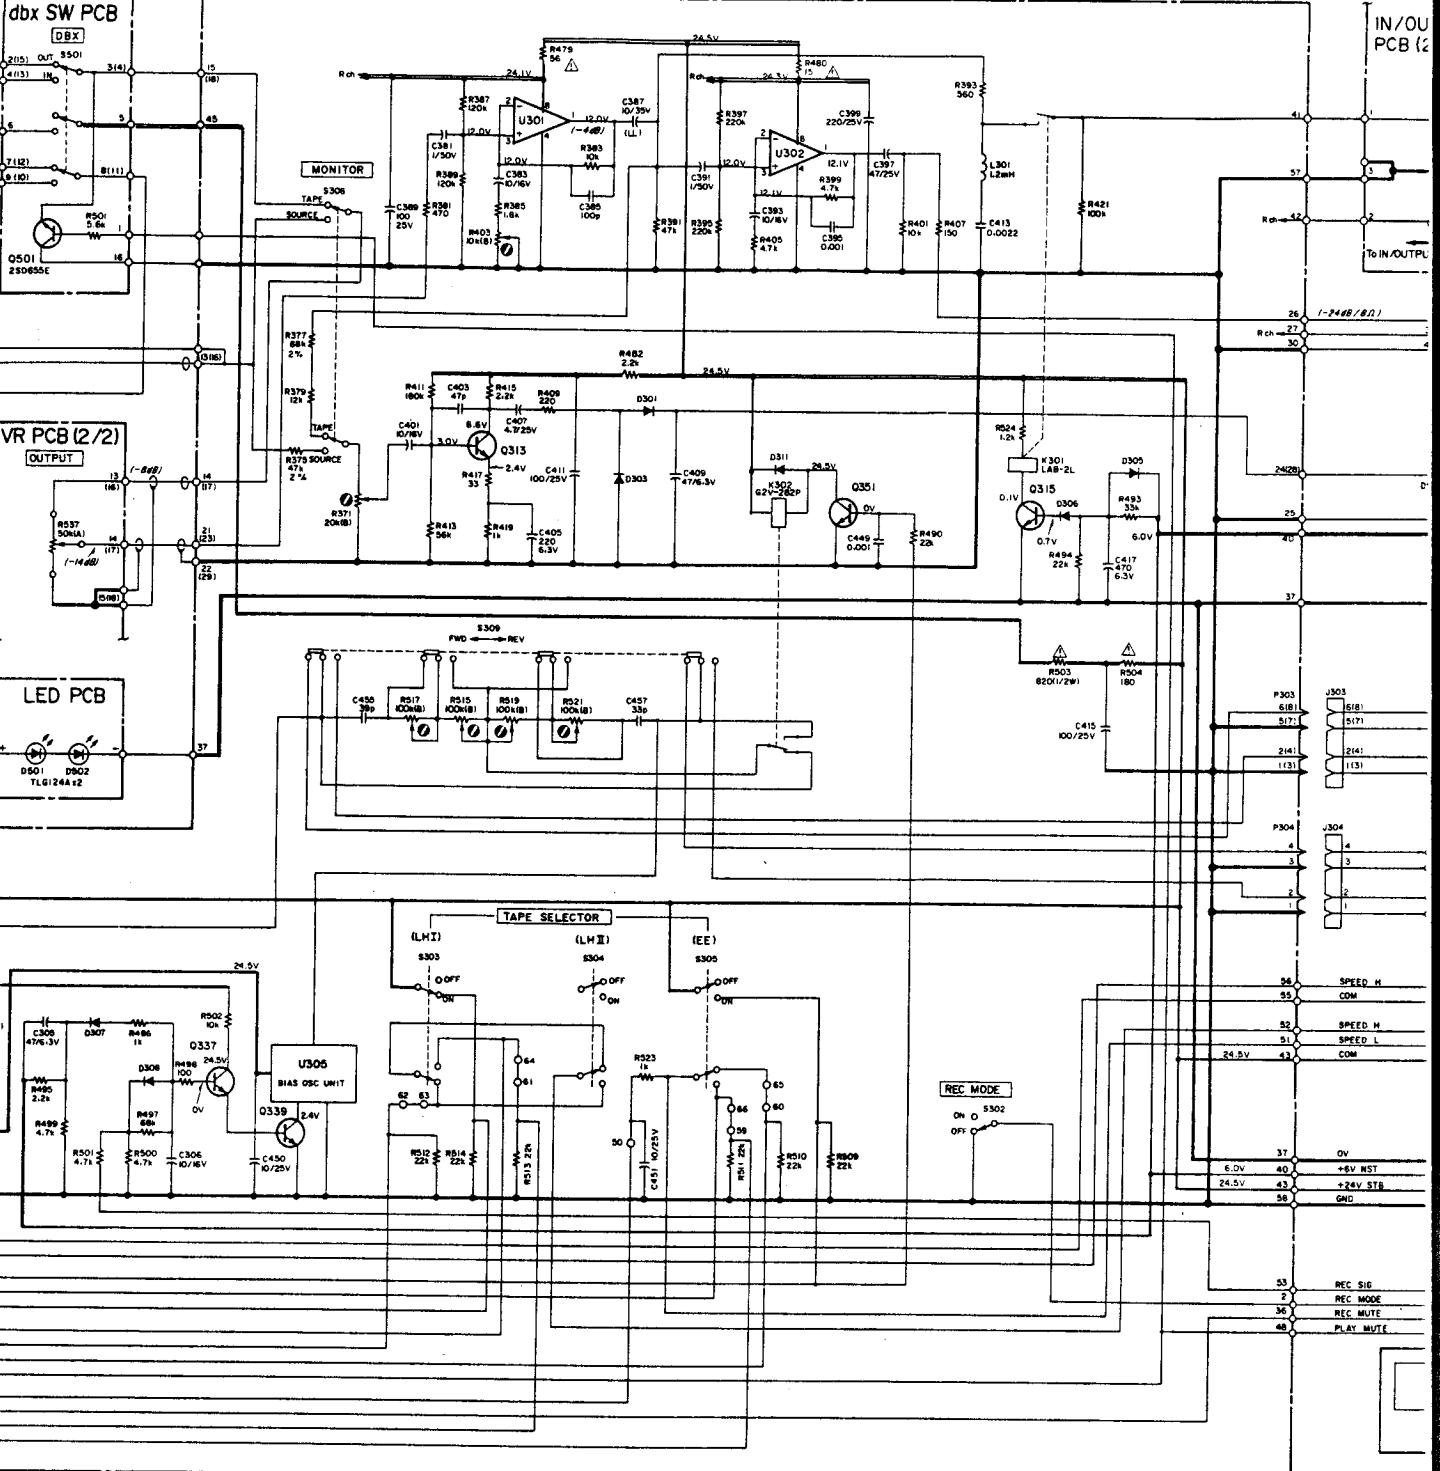

TIC DIAGRAM X-1000R

2


3

4

5


6


7

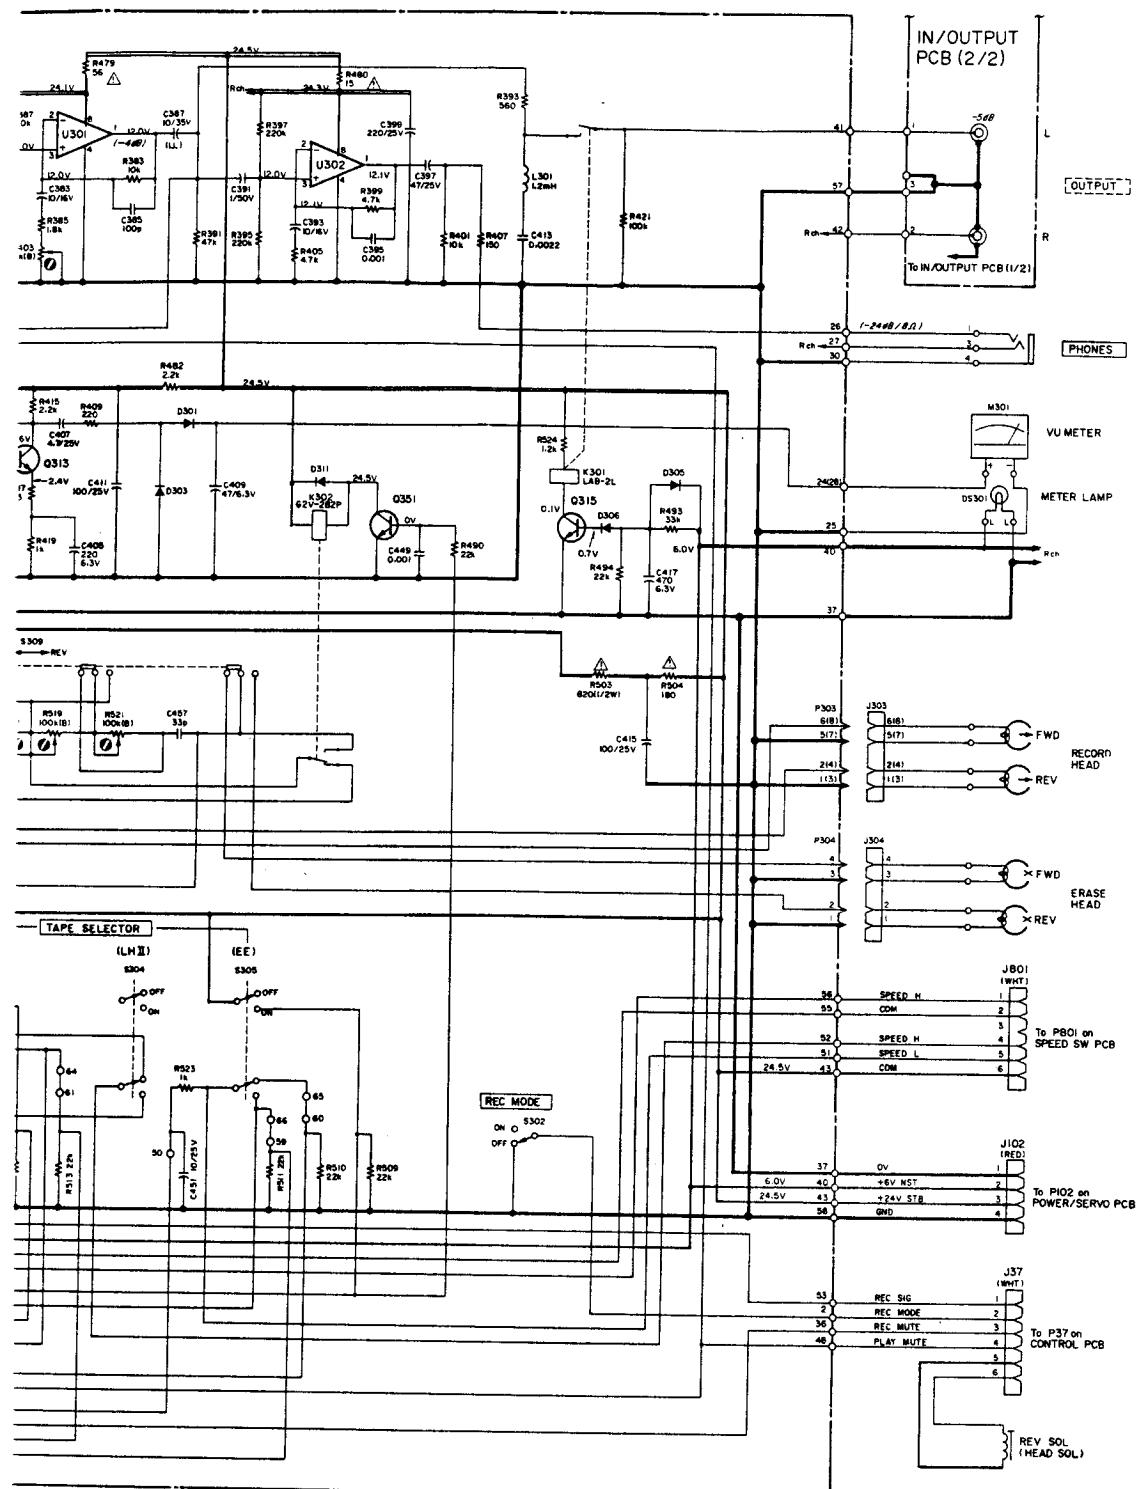


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

- NOTES**
1. Schematic diagram shown for left channel except for some of
 2. All resistors are $\frac{1}{2}$ watt, $\pm 5\%$, unless marked otherwise.
Resistor values are in ohms ($k = 1,000$ ohms).
 3. All capacitor values are in microfarads ($p = \text{picofarads}$).
 4. Δ Parts marked with this sign are safety critical components. They must be replaced with identical components - refer to the TEAC parts list for exact replacement.
 5. Voltage and level values are for reference only.
 $0dB = 0.775V$
 6. : front panel indication
 7. : rear panel indication
 8. +B power supply circuit.
- Indicated values are those existing when the meter indicates 0VU.

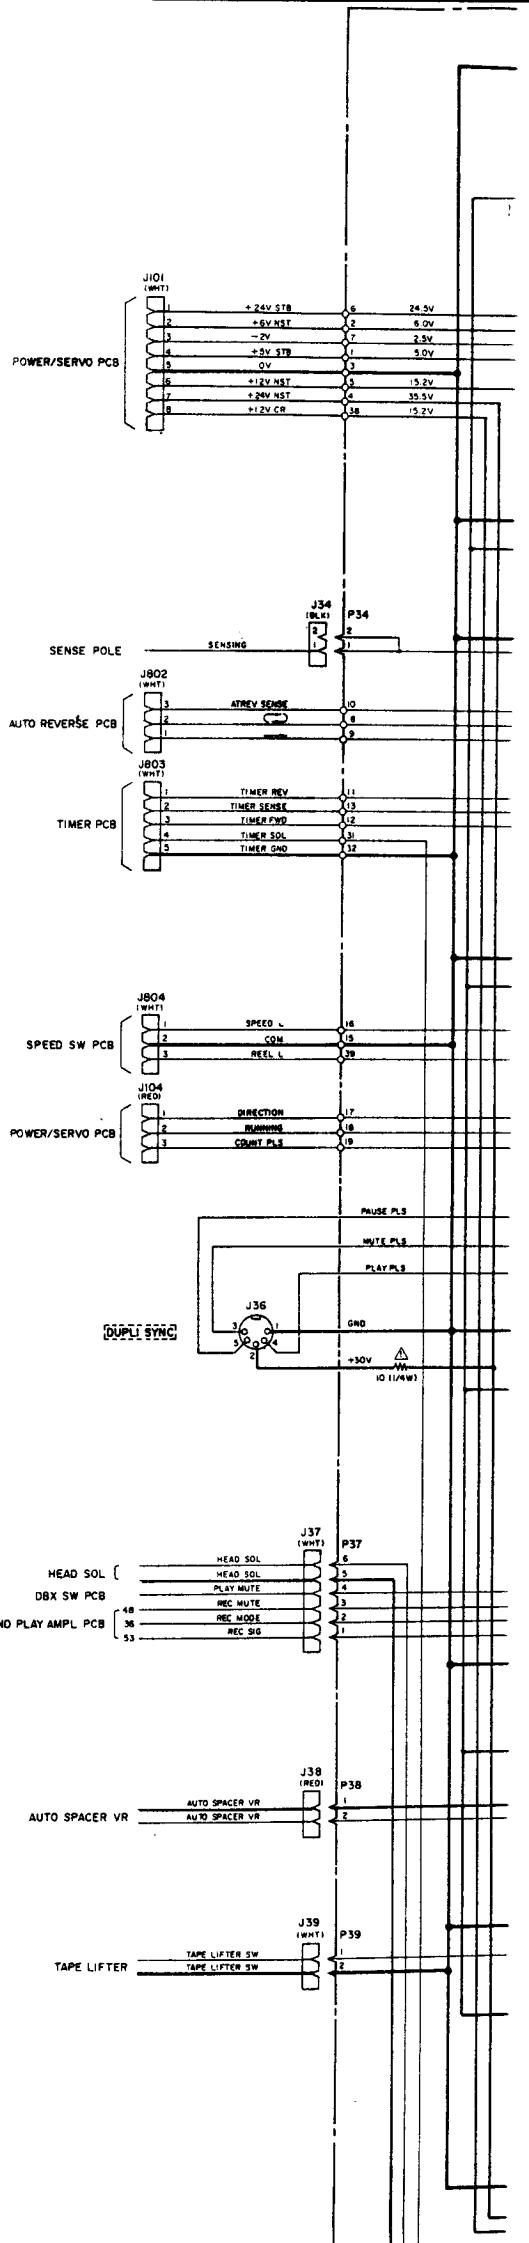


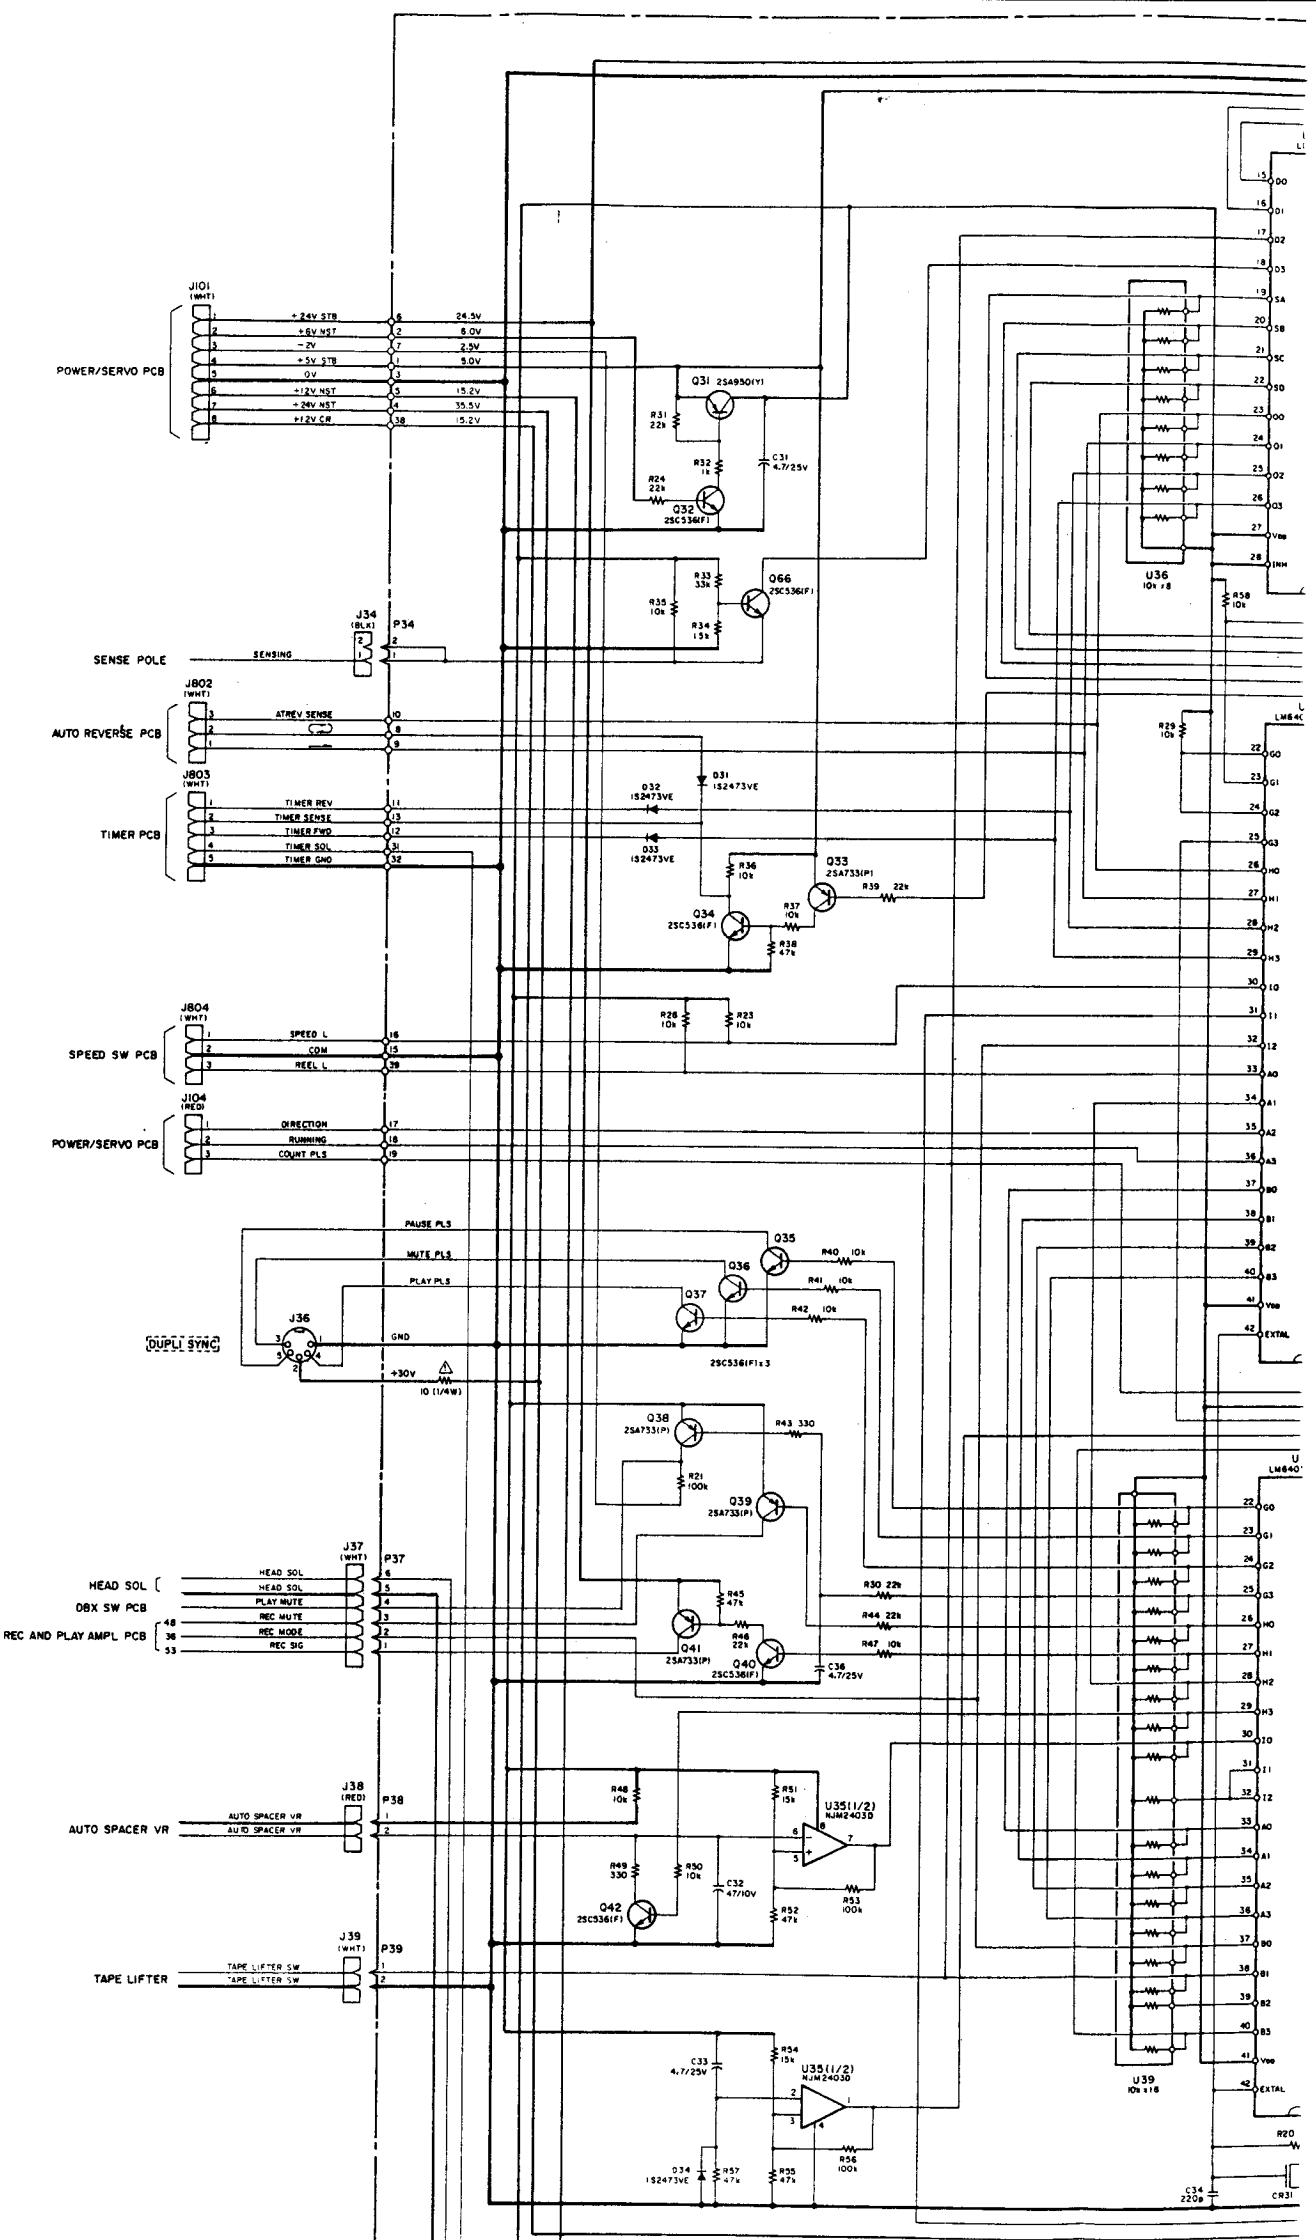

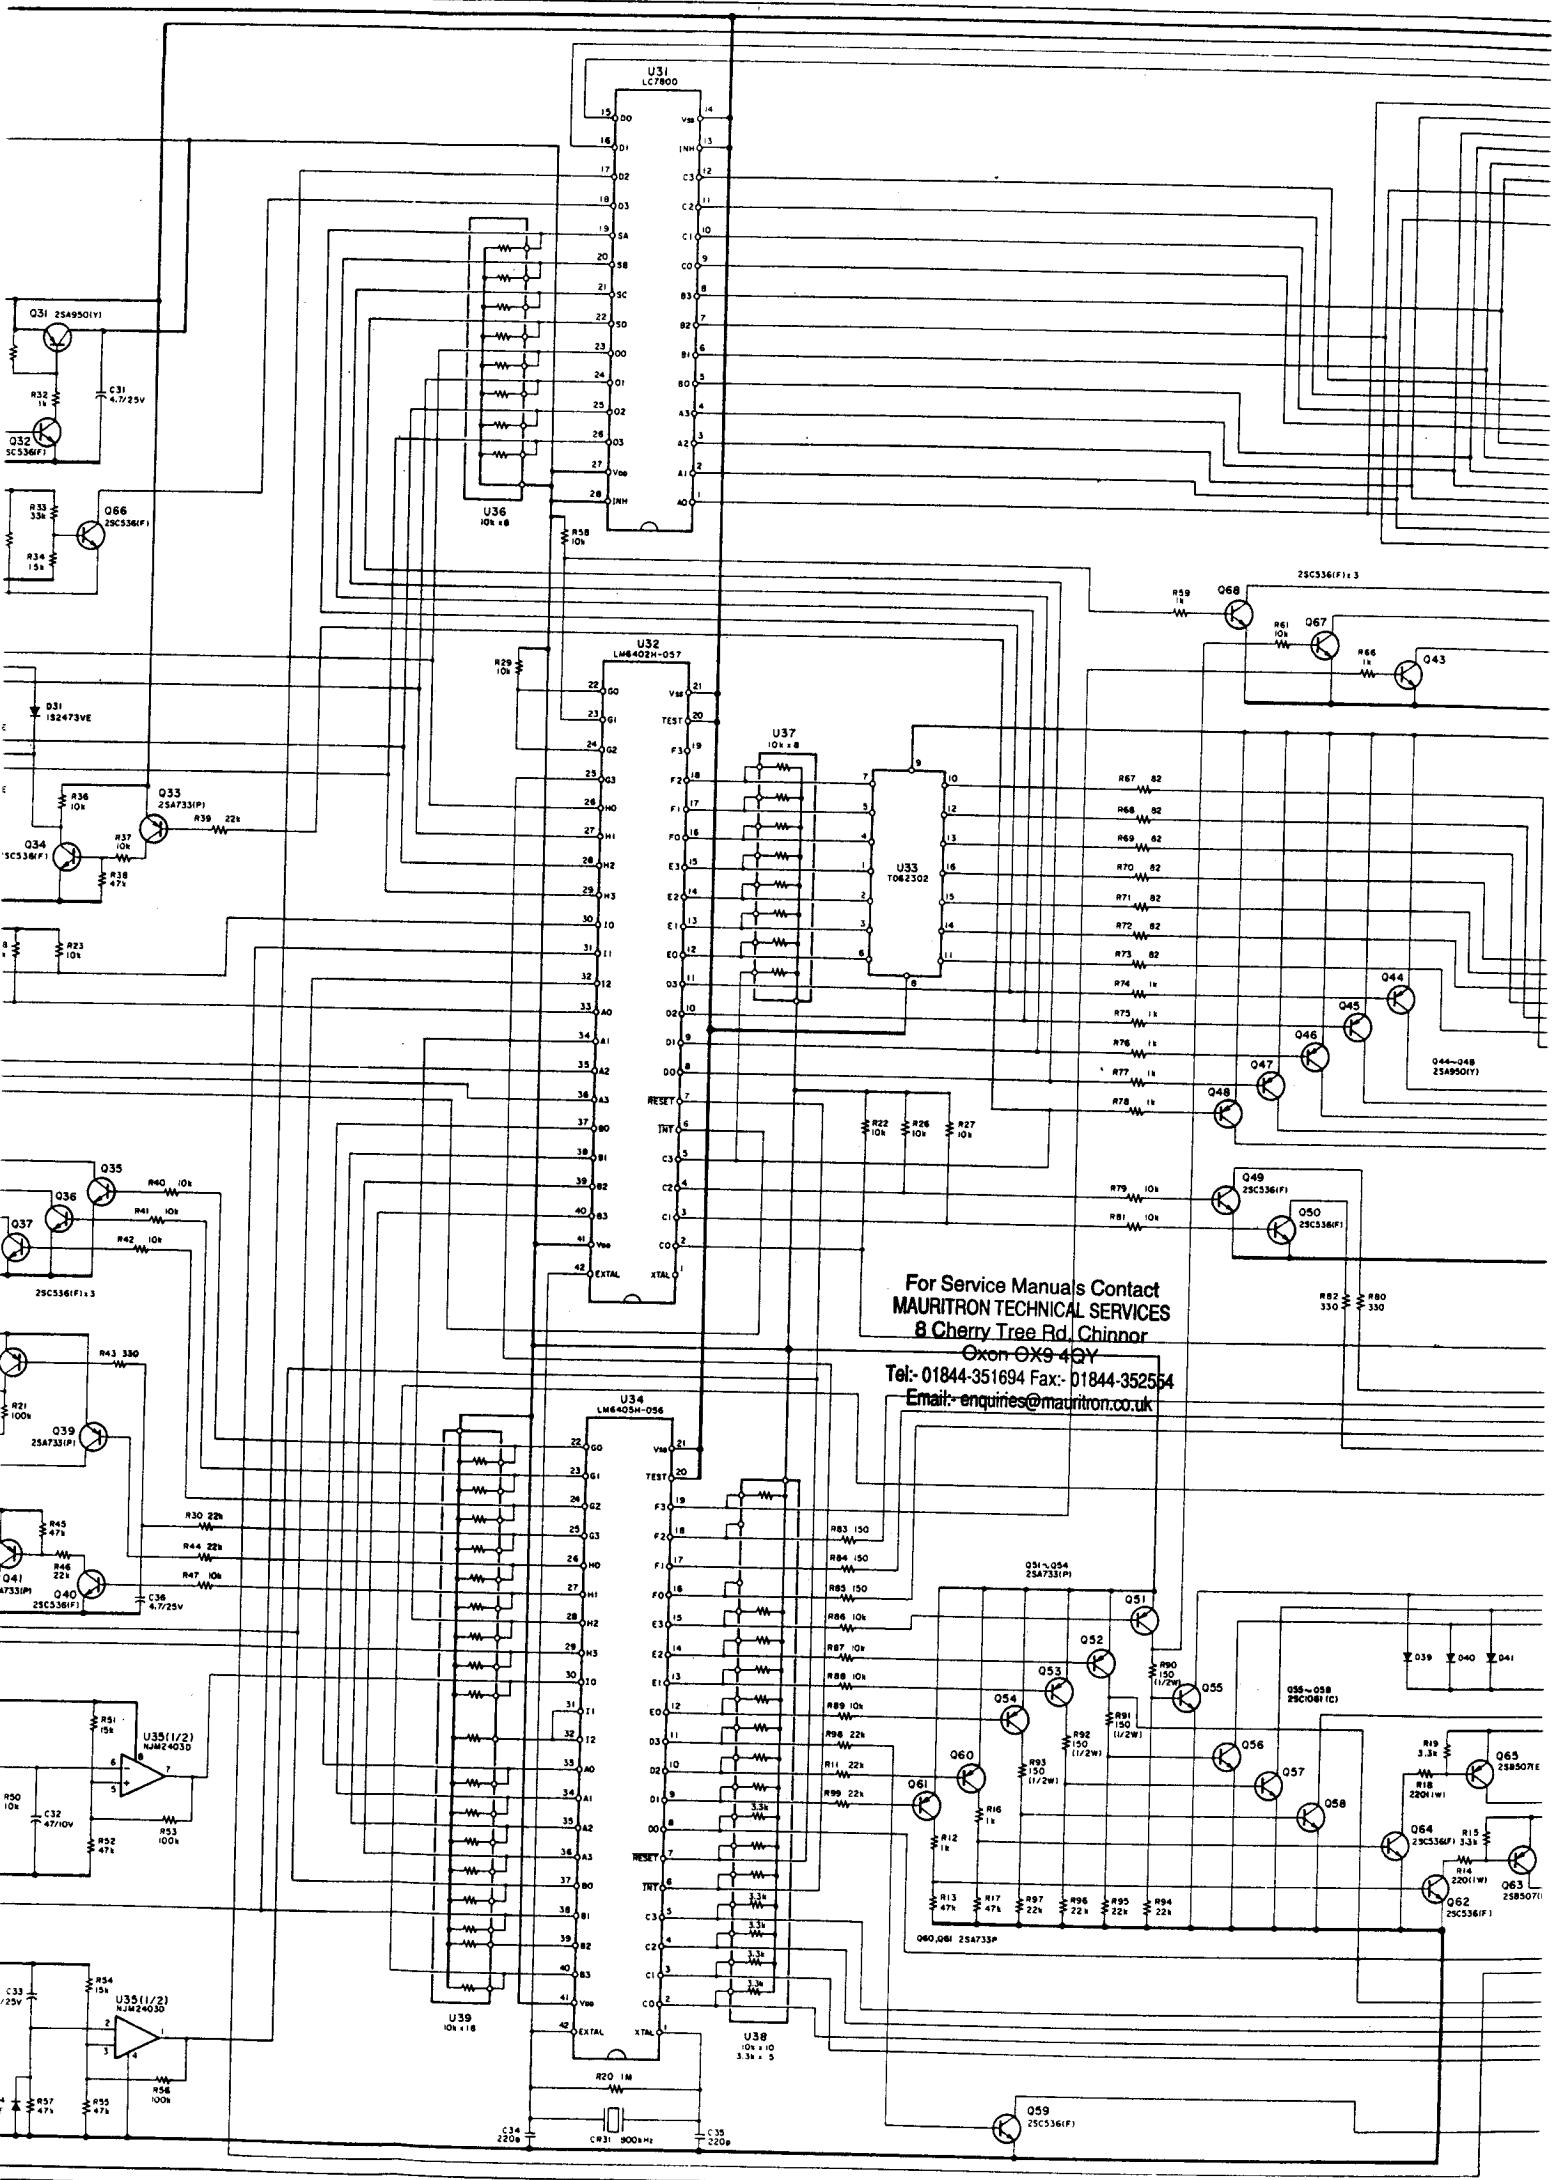


8

[REMOTE CONTROL]

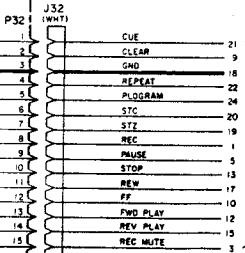


KEY BOARD PCB

9

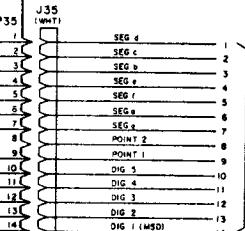


COUNTER PCB

10

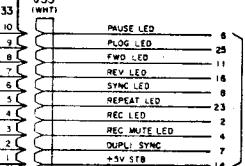


KEY BOARD PCB

11

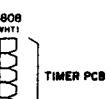


TIMER PCB


12

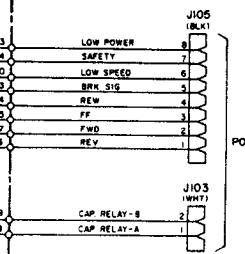

POWER/SERVO PCB

13

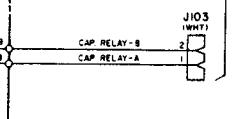

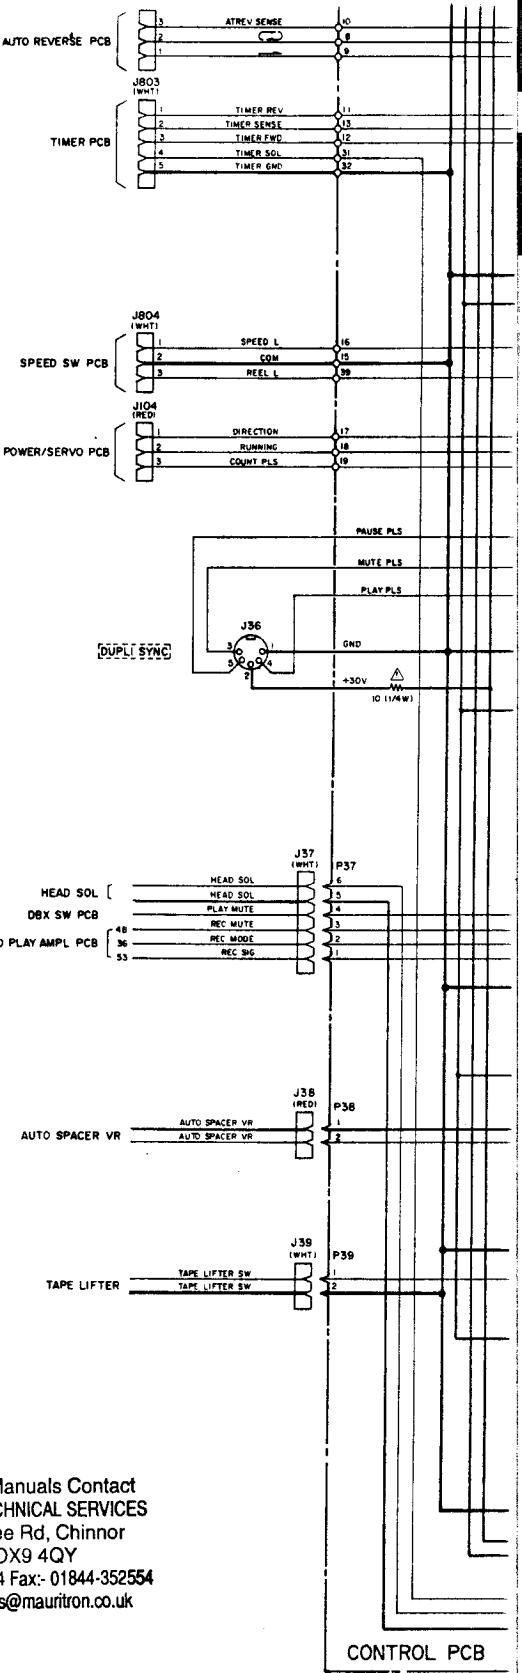



NOTES

1. Schematic diagram shown for left channel except for some of the components.
2. All resistors are $\frac{1}{4}$ watt, $\pm 5\%$, unless marked otherwise. Resistor values are in ohms ($k = 1,000$ ohms).
3. All capacitor values are in microfarads (μF = picofarads).
4. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components-refer to the TEAC parts list and ensure exact replacement.
5. Voltage and level values are for reference only.
0dB = 0.775V
Indicated values are those existing when the meter indicates 0VU.
6. : front panel indication
7. rear panel indication
8. +B power supply circuit.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

X-1000R
 Stereo Tape Deck

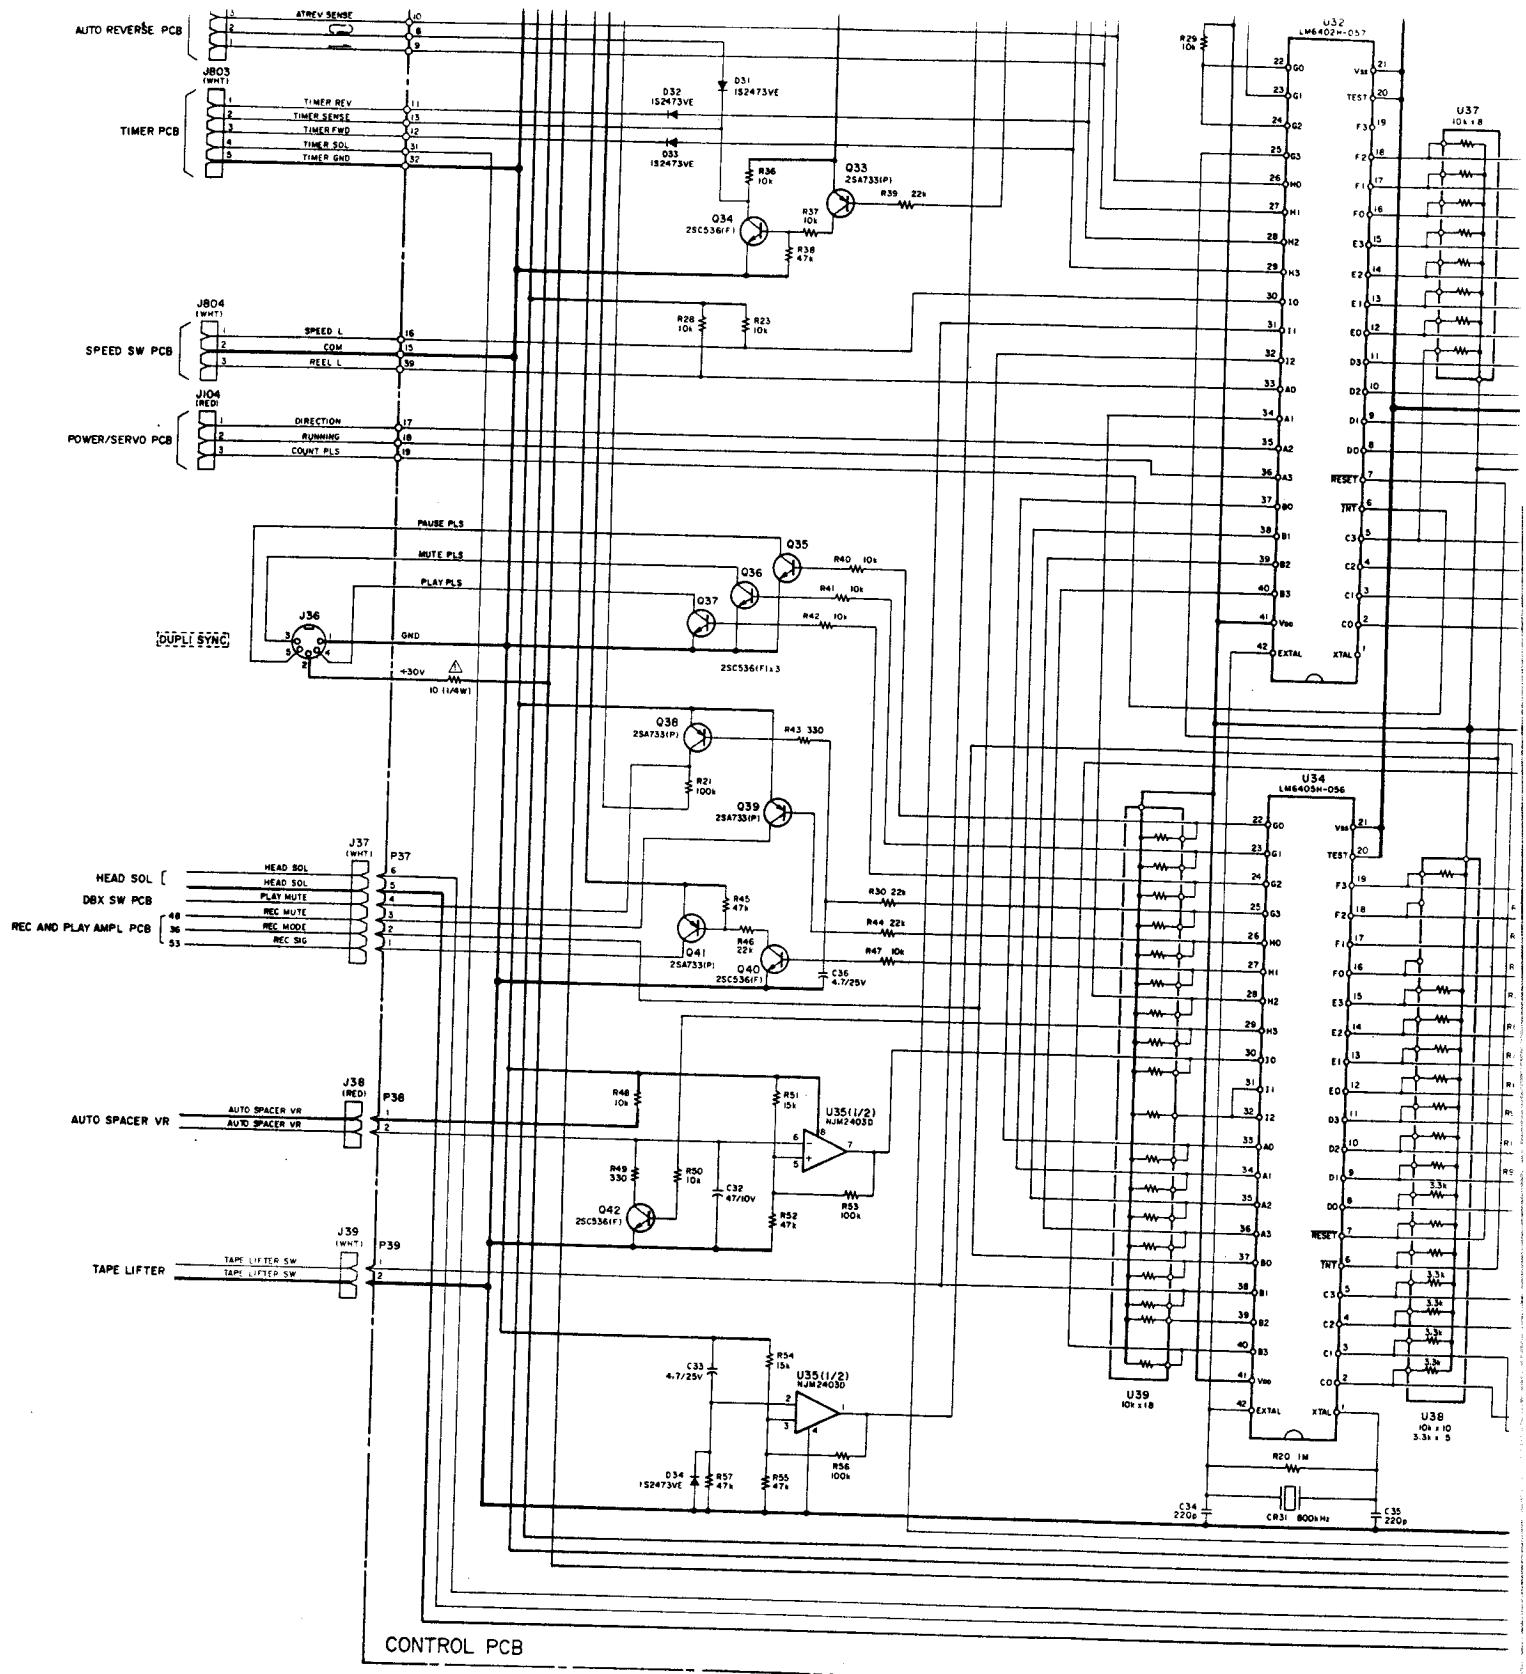

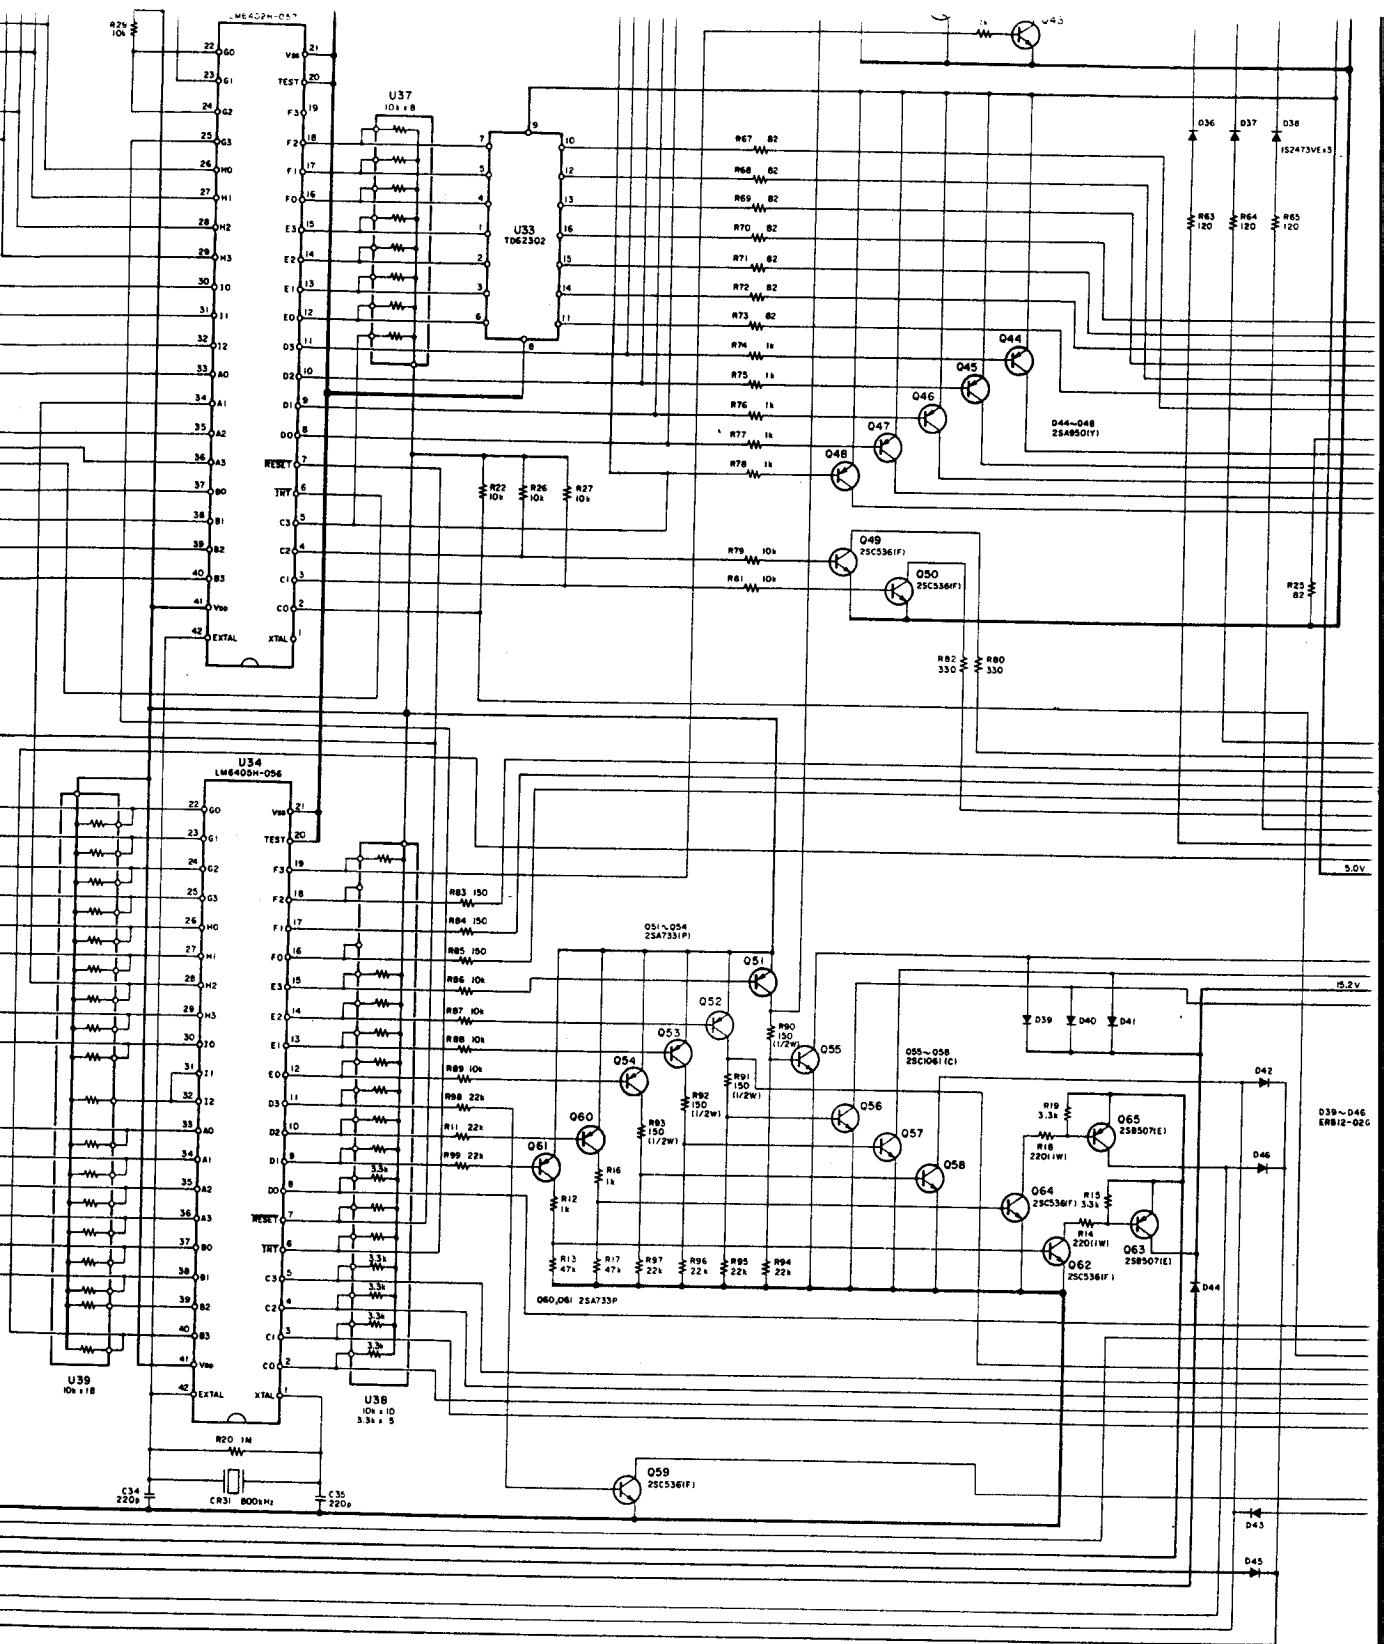

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk


10

11

12

13

14

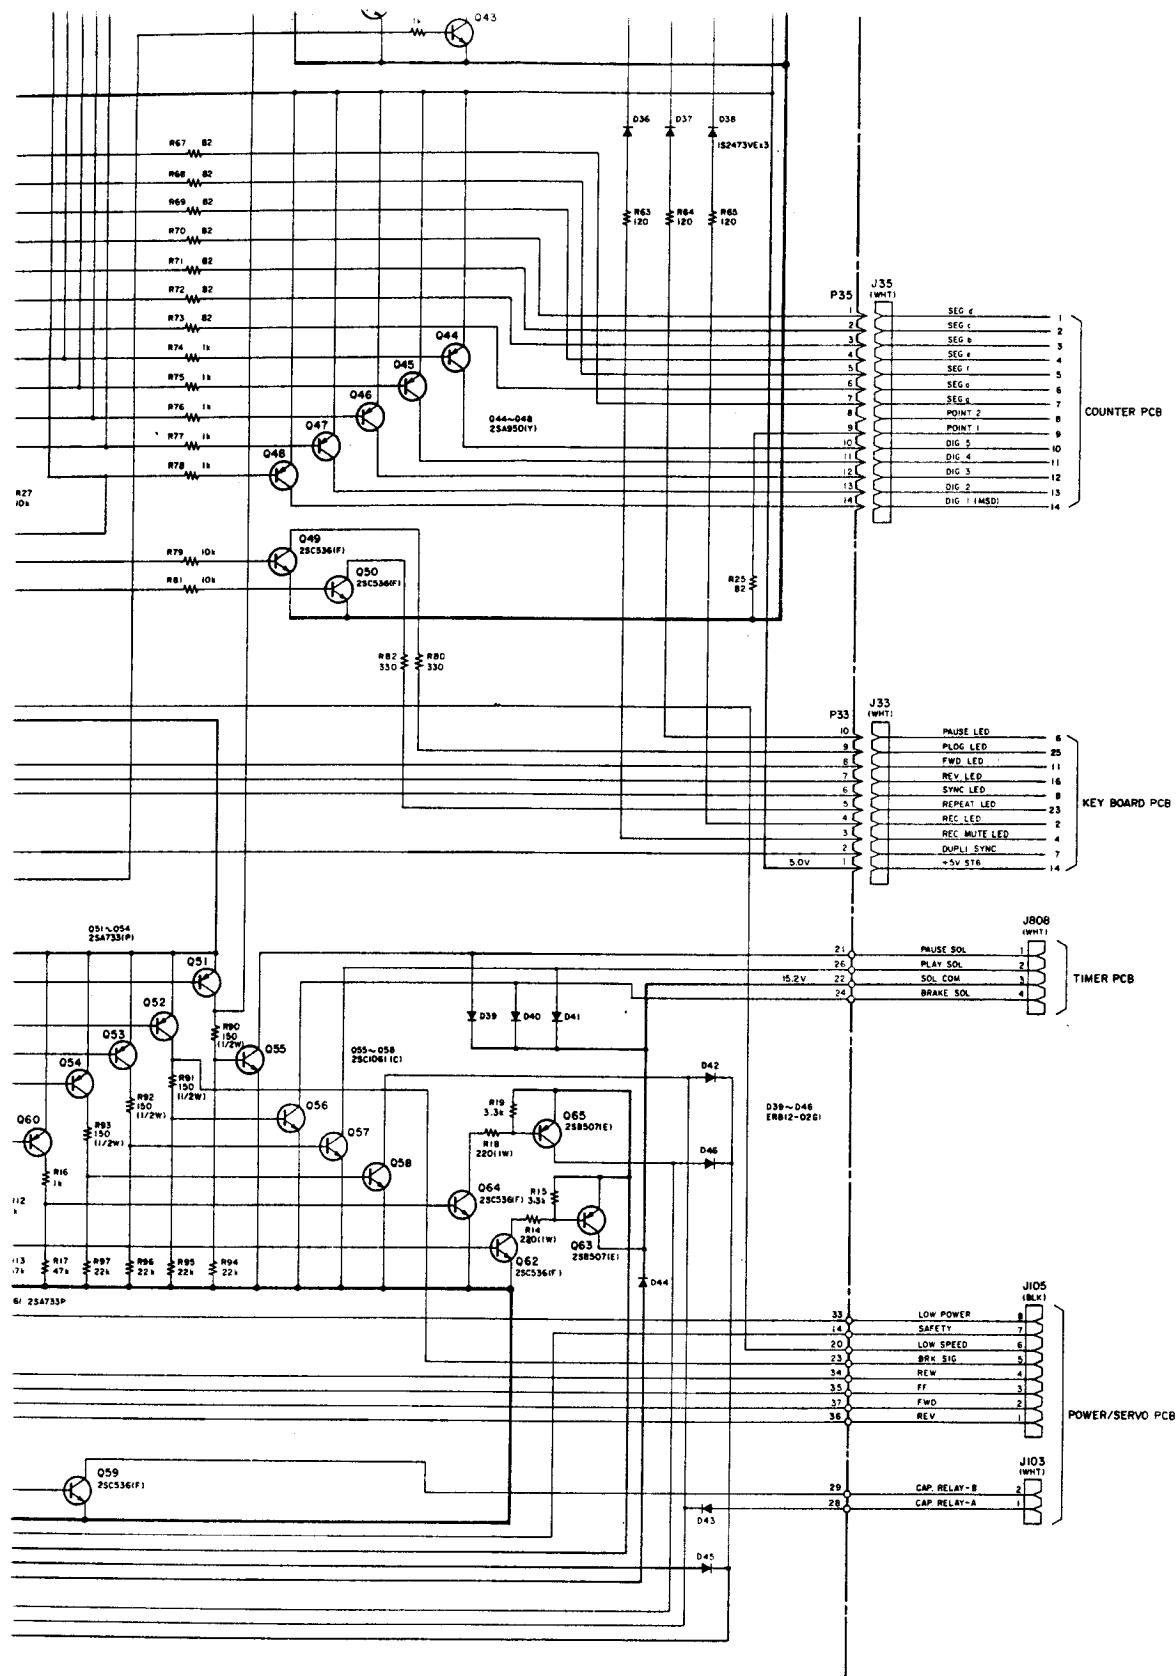

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk